
# Foam insert: drilling template, full size (mm)

Print at 100 % (Actual size, not Fit to page); both bars must measure 100 mm.
Tape it on the foam, centred across the insert's width, INTAKE on top (it works from either face).
Mark each centre with an awl and drill a pilot hole right through.
Cut with a 3-1/4 in (83 mm) hole saw, halfway from each face, centred on the pilot hole.

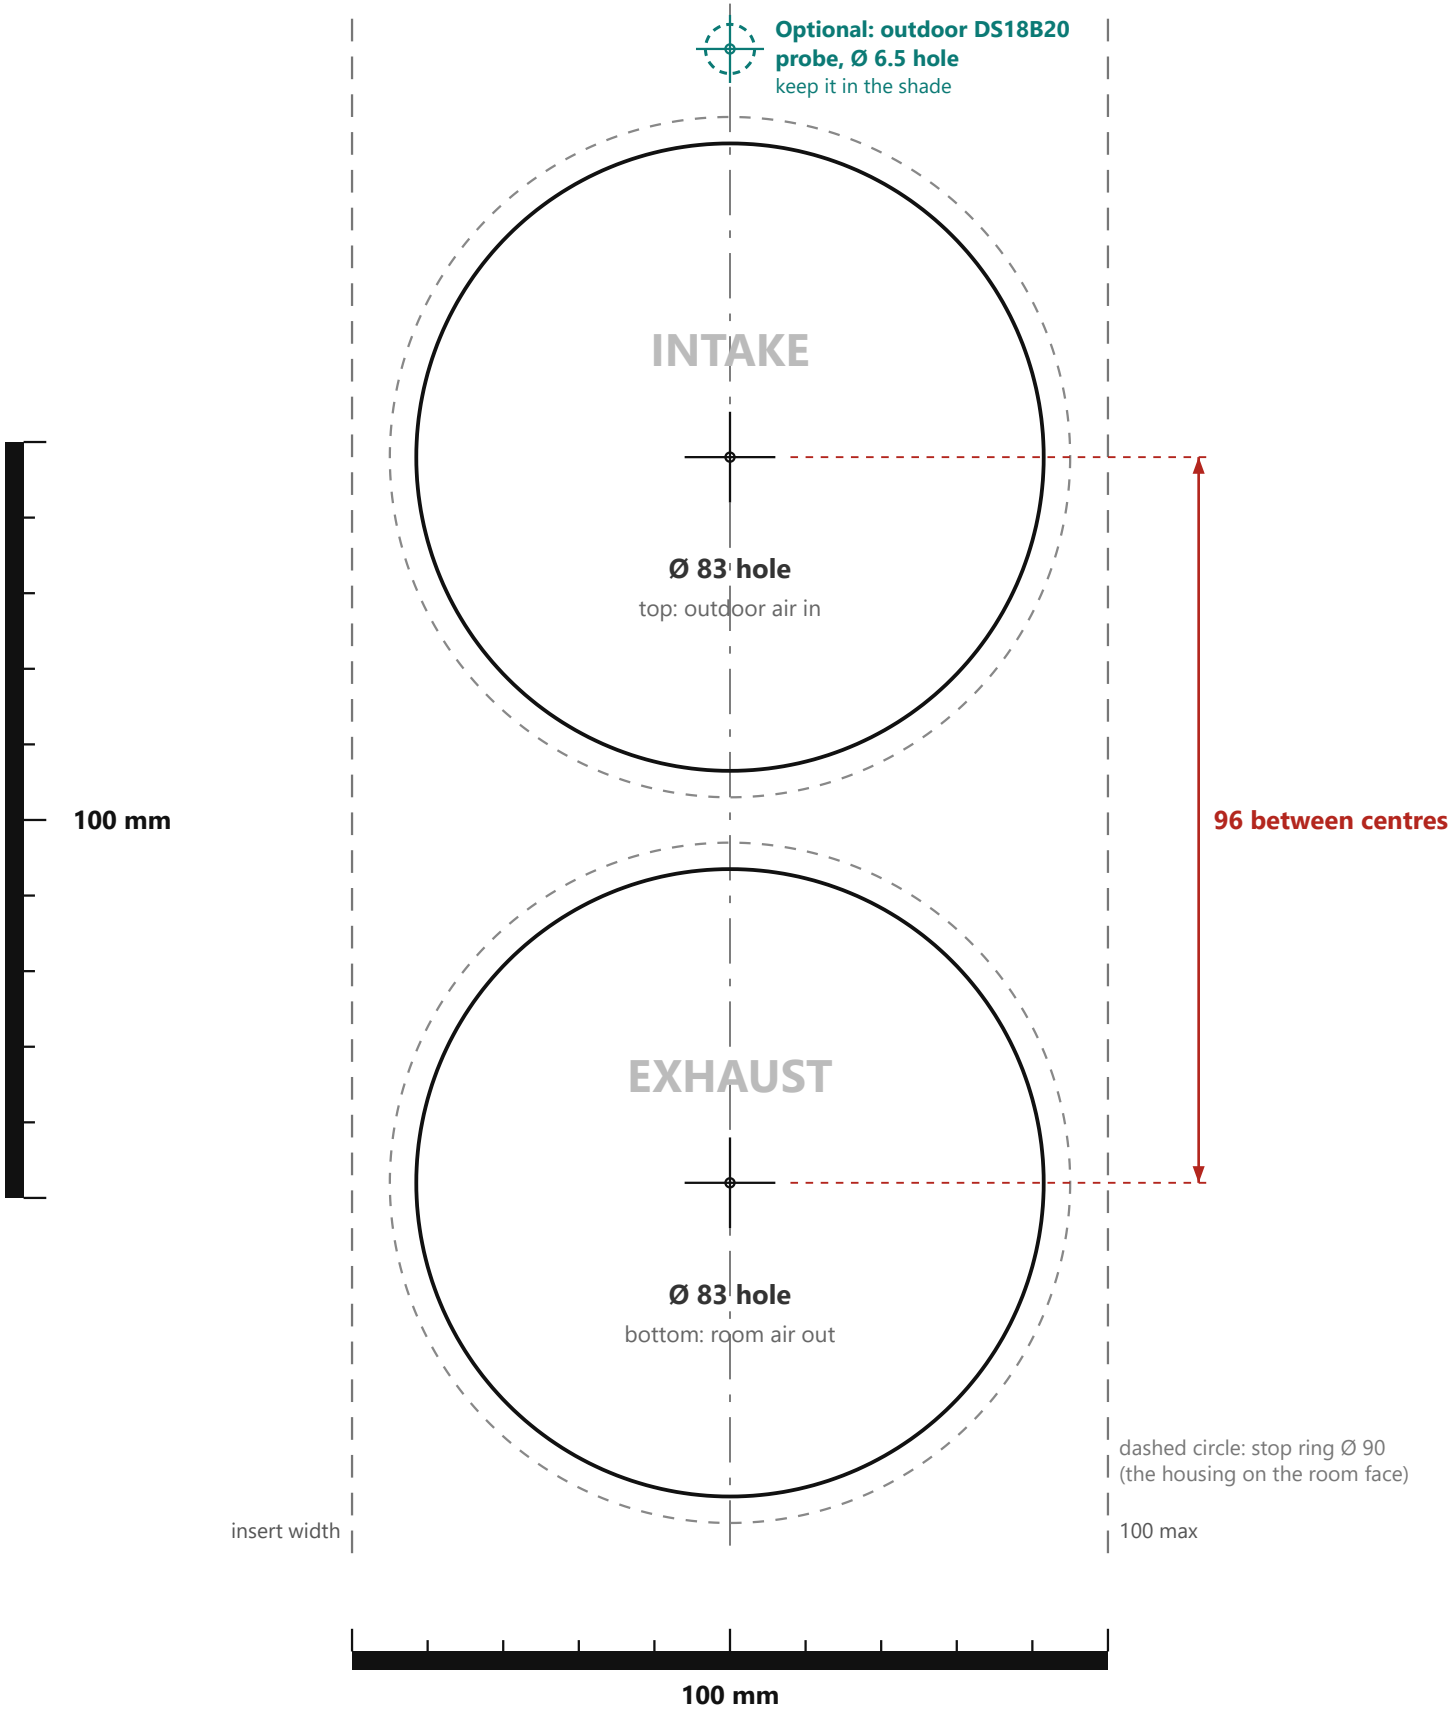


tools/foam_template_svg.py (hole 83, pitch 96, stop_od 90)