MBDyn Theory and Developer's Manual Version develop

Pierangelo Masarati

Dipartimento di Ingegneria Aerospaziale
Politecnico di Milano

November 8, 2026

Contents

1 Introduction **8**

2 Parsing **9**
2.1 HighParser . . . 9
2.1.1 Traditional Usage . . . 9
2.1.2 Table-Driven Usage . . . 10
2.2 LowParser . . . 12
2.3 MathParser . . . 12

3 Solvers **13**
3.1 Matrix classes . . . 13
3.2 Sparse matrices . . . 13
3.3 Linear solvers . . . 13
3.3.1 The naive linear solver . . . 13
3.4 Non linear solvers . . . 20
3.5 Parallel solver . . . 20
3.5.1 Partitioning . . . 20
3.6 Convergence check . . . 20

4 Orientation Handling **22**
4.1 Euler Angles . . . 22
4.2 Orientation Vector . . . 23

5 Integration **25**
5.1 Nodal rotation . . . 25
5.2 Integrators . . . 25

6 Solution Phases **26**
6.1 Initial Assembly . . . 26
6.2 Initial Value Problem . . . 29
6.2.1 Initial Derivatives . . . 29
6.2.2 Dummy Steps . . . 30
6.2.3 Regular Steps . . . 30
6.3 Inverse Dynamics Problem . . . 30
6.3.1 Nomenclature . . . 31
6.3.2 Fully Actuated, Collocated Problem . . . 31
6.3.3 Fully Actuated, Non-Collocated Problem . . . 32
6.3.4 Underdetermined, Underactuated but Collocated Problem . . . 32

6.3.5 Underdetermined, Overcontrolled Problem . . . 34

7 Data Structure **37**
7.1 Constitutive Laws . . . 37
7.2 ExpandableRowVector . . . 37

8 Nodes **40**
8.1 Structural Nodes . . . 40
8.1.1 Dynamic Structural Nodes . . . 40
8.1.2 Static Structural Nodes . . . 43
8.1.3 Dummy Nodes . . . 44
8.1.4 Relative Motion . . . 44
8.1.5 Motion Expressed in a Relative Reference Frame . . . 46
8.1.6 Dynamics in a Relative Reference Frame . . . 47
8.1.7 Airstream Velocity . . . 48
8.1.8 Implementation Notes . . . 49
8.1.9 Pseudo-Velocities Approach . . . 50

9 Constraints (aka Joints) **54**
9.1 Algebraic Constraints . . . 54
9.1.1 Beam Slider Joint . . . 55
9.1.2 Clamp Joint . . . 57
9.1.3 Distance Joint . . . 58
9.1.4 Distance Joint With Offsets . . . 59
9.1.5 Spherical hinge . . . 60
9.1.6 Revolute hinge . . . 61
9.1.7 Inline . . . 64
9.1.8 Drive Hinge . . . 66
9.1.9 Drive Displacement . . . 67
9.1.10 Drive Displacement Pin . . . 69
9.1.11 Imposed Displacement . . . 70
9.1.12 Imposed Displacement Pin . . . 71
9.1.13 Total Joint . . . 72
9.1.14 Total Pin Joint . . . 78
9.1.15 Gimbal . . . 81
9.1.16 Screw Joint . . . 83
9.1.17 Strapdown Sensor . . . 88
9.1.18 Rigid body displacement joint . . . 89
9.2 Deformable Constraints . . . 93
9.2.1 Rod With Offsets . . . 93
9.2.2 Deformable Hinge . . . 95
9.2.3 Deformable Displacement Joint . . . 106
9.2.4 Deformable Joint . . . 112
9.2.5 Deformable Axial Joint . . . 118
9.3 Viscous Body . . . 119
9.4 Modal Element . . . 120
9.4.1 Kinematics . . . 120
9.4.2 Physics: Orthogonality . . . 123
9.4.3 Simplifications . . . 124
9.4.4 Invariants . . . 125

9.4.5 Interfacing . . . 127
9.4.6 Virtual strain energy . . . 128

10 Beam Element **130**
10.1 Generalized strains, strain rates and their linearization . . . 130
10.2 Fully coupled piezoelectric beam . . . 134

11 Shell Element **135**
11.1 Variational principle . . . 135
11.1.1 Strain Rate . . . 136
11.2 Finite element discretization and notation . . . 137
11.3 Linearization . . . 138
11.4 Structural Damping . . . 139
11.5 Implementation . . . 139
11.5.1 Orientation interpolation . . . 139
11.5.2 Position interpolation . . . 140
11.5.3 Enhancing strains interpolation . . . 141
11.5.4 Compatible strains interpolation . . . 142
11.5.5 ANS . . . 143
11.5.6 Forces . . . 144
11.5.7 Jacobian matrix . . . 145
11.5.8 Residual . . . 146

12 Solid Element **147**
12.0.1 Kinematics . . . 147
12.0.2 The principle of virtual displacements . . . 151
12.0.3 Virtual strain energy . . . 151
12.0.4 Displacement/Pressure (u/p-c) formulation . . . 152
12.0.5 Virtual work of inertia terms and body loads . . . 155
12.0.6 Reformulation of inertia terms required for a first order DAE solver . . . 156
12.0.7 Elements for surface loads . . . 157
12.0.8 Implementation notes . . . 160

13 Aerodynamic Elements **161**
13.1 Linearization of 2D Aerodynamic Forces and Moments . . . 161
13.2 Numerical Linearization of Sectional Forces . . . 163
13.3 Aerodynamic Forces with Internal States . . . 164
13.4 Aerodynamic body . . . 164
13.5 Aerodynamic Beam (3 Nodes) . . . 165
13.6 Aerodynamic Beam (2 Nodes) . . . 169
13.7 Unsteady aerodynamics model . . . 172
13.7.1 Perturbation of the Equations . . . 175
13.7.2 Perturbation of the aerodynamic forces . . . 178
13.7.3 Perturbation of the aerodynamic moments . . . 179
13.7.4 Finite difference version . . . 179
13.7.5 Perturbation of the equations . . . 181
13.7.6 Perturbation of the aerodynamic forces . . . 182
13.7.7 Perturbation of the aerodynamic moments . . . 183
13.8 Rotor . . . 183
13.8.1 Uniform Inflow Model . . . 185

13.8.2 Glauert Model . . . 185
13.8.3 Mangler-Squire Model . . . 186
13.8.4 Dynamic Inflow Model . . . 187
13.9 Aero Modal . . . 189
13.9.1 Clamped . . . 189
13.9.2 Free . . . 190

14 Forces **191**
14.1 Abstract Force . . . 191
14.1.1 Abstract . . . 191
14.1.2 Abstract Internal . . . 191
14.2 Structural Forces . . . 191
14.2.1 Force . . . 191
14.2.2 Couple . . . 193
14.3 Modal . . . 193
14.4 External . . . 193
14.4.1 External Structural . . . 193
14.4.2 External Structural Mapping . . . 195
14.4.3 External Modal . . . 196
14.4.4 External Modal Mapping . . . 196
14.4.5 Client Library . . . 196

15 Hydraulic Library **197**
15.1 Hydraulic Fluids . . . 197
15.2 Hydraulic Nodes . . . 197
15.3 Hydraulic Elements . . . 197
15.3.1 Accumulator . . . 197
15.3.2 Actuator . . . 197
15.3.3 Dynamic Pipe . . . 198
15.3.4 Pressure Flow Control Valve . . . 201

16 Hydrodynamic Plain Bearing Element **202**
16.1 Introduction . . . 202
16.2 The compressible Reynolds differential equation . . . 203
16.2.1 Determination of the coordinate system for the cylindrical journal bearing . . . 203
16.2.2 Derivation of the Reynolds equation from the compressible Navier Stokes equation 204
16.3 Cavitation models . . . 208
16.3.1 Non-mass conserving cavitation . . . 208
16.3.2 Mass conserving cavitation . . . 209
16.4 Discretization of the Reynolds differential equation using finite differences . . . 211
16.4.1 The orthogonal finite difference mesh of a cylindrical journal bearing . . . 211
16.4.2 The compressible Reynolds differential equation . . . 213
16.5 Hydraulic boundary conditions . . . 213
16.5.1 Dirichlet boundary condition . . . 213
16.5.2 Periodic boundary conditions . . . 215
16.5.3 Coupling of a plain bearing with a hydraulic network . . . 215
16.6 Kinematic boundary conditions . . . 216
16.6.1 The cylindrical plain bearing in which the mesh moves with the bearing journal . . . 216
16.6.2 The cylindrical plain bearing in which the mesh moves with the bearing shell . . . 220
16.7 Solid body contact and dry friction . . . 222

16.7.1 The contact model of Greenwood and Tripp . . . 222
16.7.2 The two-dimensional LuGre solid friction model . . . 223
16.8 Reaction forces . . . 226
16.8.1 Frictional forces due to fluid friction . . . 226
16.8.2 The mesh moves with the bearing shell . . . 227
16.8.3 The mesh moves with the bearing journal . . . 229
16.8.4 Determination of frictional losses . . . 230
16.9 Alternative solution of the incompressible Reynolds differential equation using the finite element method . . . 230
16.9.1 The weak formulation of the Reynolds differential equation . . . 230
16.9.2 Discretization using isoparametric finite elements . . . 231
16.9.3 Structure of the system of linear equations . . . 235
16.9.4 Implementation of Dirichlet boundary conditions . . . 236
16.9.5 Solution of the linear system of equations . . . 236
16.9.6 The pressure distribution in the cylindrical plain bearing . . . 236
16.10 Fluid structure interactions . . . 236
16.10.1 Reduced order models . . . 237
16.10.2 Fluid structure interaction coupling matrices . . . 240
16.10.3 Interpolation from the bearing journal to the bearing shell and vice versa . . . 242

17 Module MFtire **245**
17.1 Introduction . . . 245
17.2 Model capabilities . . . 245
17.3 TODO . . . 246
17.4 I/O and module interface . . . 246
17.5 Notation . . . 246
17.6 Residual assembly . . . 247
17.7 Ground . . . 247
17.8 Hub carrier and rim kinematics . . . 247
17.9 Reference frame . . . 247
17.10 Loaded radius . . . 248
17.11 Slip Quantities . . . 248
17.12 Tire forces . . . 249
17.13 Jacobian Assembly . . . 250
17.14 Vectors Perturbations . . . 250
17.15 Vector derivatives perturbation . . . 251
17.16 Loaded radius perturbation . . . 251
17.17 Velocities Perturbations . . . 251
17.18 Slip Quantities Perturbations . . . 252
17.19 Tire Forces and Moments Perturbation . . . 253
17.20 Updated-updated approximation . . . 253
17.21 Addendum: χ and μ derivatives . . . 254
17.22 Jacobian Validation . . . 254

A On the optimization of n-sub-step composite time integration methods **258**

B Performance of implicit A-stable time integration methods for multibody system dynamics **260**

List of Figures

9.1 3D screw thread sketch. 86
9.2 2D screw thread sketch 87

11.1 Shell finite element 137

16.1 Coordinate systems for cylindrical plain bearings 203
16.2 Differences between Reynolds boundary condition and Gümbel boundary condition 209
16.3 orthogonal finite difference mesh of a cylindrical journal bearing 212
16.4 assumptions for partially flooded boundaries of the bearing 214
16.5 Kinematics of the rigid cylindrical plain bearing with mesh on the bearing journal 216
16.6 Interpolation of Δy for a rectangular pocket 219
16.7 Orientation of the tangential coordinate system 220
16.8 Kinematics of the cylindrical plain bearing with mesh on the bearing shell 221
16.9 Shear stress distribution as a function of deformation in the one-dimensional LuGre model 225
16.10Reaction forces with a mesh on the bearing shell 228
16.11Pressure distribution in the bearing with overpressure lubrication through a hole 237
16.12Typical mode shape of a sleeve 240
16.13Typical mode shape of a sleeve 240

17.1 χ and $\frac{\partial \chi}{\partial v_x}$ 250
17.2 Validation of each component of the unit vectors 255

List of Tables

13.1 Coefficients of the Wagner indicial response approximation of Theodorsen's function ([1, 2]) 173
13.2 Glauert inflow model (source: Leishman [2]) 186
13.3 Glauert inflow model as implemented in MBDyn 186

16.1 Coefficients for the calculation of the pressure flow factors ϕ_x and ϕ_z[3] 207
16.2 Coefficients for the calculation of the shear flow factors Φ_s[3] 208
16.3 Coefficients for the calculation of the shear stress factors ϕ_{fs}[4] 227
16.4 Coefficients for the calculation of the shear stress factors ϕ_{fp}[4] 227

Chapter 1

Introduction

This document describes the formulation MBDyn, the free general-purpose multibody dynamics software, relies on. It also describes implementation-related aspects.

The document is far from complete; in fact, its preparation started at a late stage of the project, when many parts of the software were already completed and in use. From that time on, many modifications and improvements have been steadily documented and, occasionally, the theory manual anticipated the development (as should always happen, I know).

The Developers committed themselves to keeping it at least up to date with new developments; undocumented stuff should be documented as soon as it needs modifications or refactoring.

Alessandro Fumagalli, Marco Morandini and Mattia Mattaboni contributed significantly to this document.

Chapter 2

Parsing

In MBDyn there are different levels of parsing. Input file parsing suffers from a scattered and occasionally outdated design. The need to preserve backwards compatibility with existing models restrained so far from entirely redesign it, although selected improvements occur over time.

MBDyn provides support for the implementation of new functionalities, and to parse their input. Parsing is delegated to a dedicated object, the MBDynParser, which inherits from the HighParser, a higher-level parsing object with bits of MBDyn's syntax built-in in a somewhat modular way. It exploits the functionalities of the LowParser, a lower-level parsing object that deals with tokenizing an input stream based on the expected tokens. Whenever appropriate (e.g. whenever a number is expected), control is delegated to the MathParser, which allows to parse and evaluate sequences of mathematical expressions, including variable declaration and definition. Variables are saved in a table as soon as they appear, and can be used by subsequent expressions when the mathematical parser is called again.

The traditional approach to data parsing consists in defining a table of keywords that are looked up and, based on the corresponding key code, by executing the appropriate code in a switch-case block.

The code is being gradually moved to a newer approach based on sets of associative arrays that map keywords to the functional objects that are used to parse the related items.

Although no significant improvement results in parsing of existing data types, this approach allows to register new data types run-time, e.g. from a run-time loaded module, thus easing the extension and the customization of the code.

2.1 HighParser

2.1.1 Traditional Usage

The `HighParser` class and its descendants use a `KeyTable` object containing a list of legal keywords to return a valid keyword index when `HighParser::GetWord()`, and significantly `HighParser::GetDescription()` are invoked. The `KeyTable` can be changed during parsing. `KeyTable` is a class. Its constructor takes a pointer to an array of strings and a reference to the `HighParser` object. The last string in the array must be null. The `KeyTable` class constructor keeps track of previous `KeyTable` objects in the `HighParser`, and restores them upon destruction.

The suggested usage inside a stacked call sequence of parsing functions is

```
Part *
read_part(HighParser& HP)
{
    // prepare names
```

```
    enum KeyWord { KEYWORD1, KEYWORD2, KEYWORD_LAST };
    char *key_table_array[] = { "keyword1", "keyword2", 0 };
    // build KeyTable class
    KeyTable k(HP, key_table_array);
    Part *returned_object = 0;
    // parse input
    do {
        switch (KeyWord(HP.GetWord())) {
        default:
            // do something...
            break;
        case KEYWORD1:
            // ...and build returned_object
            return returned_object;
        }
    } while (true);
}

void
read_all(HighParser& HP)
{
    // prepare names
    enum KeyWord { KEY1, KEY2, PART, KEY_LAST };
    char *keytable[] = { "key1", "key2", "part", 0 };
    // build KeyTable class
    KeyTable k(HP, keytable);
    // do something
    Part *part = 0;
    do {
        switch (KeyWord(HP.GetWord())) {
        default:
            // do something...
            break;
        case PART:
            // read part
            Part *part = read_part(HP);
            break;
        }
    } while (true);
}
```

Here the `KeyTable` set by function `read_all()` is automatically restored after the call to `read_part()`; `read_part()` temporarily changes the `KeyTable` used by the parser.

2.1.2 Table-Driven Usage

The table-driven usage is based on defining a functional object that is able to parse a data type:

```
    class Datum {
    public:
```

```
    virtual ~Datum(void) {};
};

struct DatumRead {
    virtual ~DatumRead(void) {};
    virtual Datum *Read(MBDynParser &HP) const = 0;
};
```

and a container for its descendants:

```
typedef std::string KeyType;
typedef std::map<KeyType, DatumRead *> DatumMapType;
DatumMapType DatumMap;
```

Then, a functional object for each specific datum type is derived from `DatumRead` ...

```
class MyDatum : public Datum {
    // ...
public:
    Datum(int);
    // ...
}

struct MyDatumRead : public DatumRead {
    Datum *Read(MBDynParser &HP) const {
        return new MyDatum(HP.GetInt());
    };
};
```

... and stored exactly once into the associative container by means of a dedicated helper:

```
bool
SetDatumRead(KeyType key, DatumRead *rf)
{
    return DatumMap.insert(DatumMapType::value_type(key, rf)).second;
}

// somewhere early in the code ...
SetDatumRead("mydatum", new MyDatumRead);

// note: somewhere else later, in the code, place
for (DatumMapType::iterator i = DatumMap.begin();
    i != DatumMap.end();
    i++)
{
    delete i->second;
}
DatumMap.clear();
```

The parsing function is something like

```
Datum *
ReadDatum(MBDynParser &HP)
```

```
{
    KeyType key(HP.GetStringWithDelims());
    if (key.c_str() == 0) {
        // error ...
        return 0;
    }
    DatumMapType::iterator i = DatumMap.find(key);
    if (i == DatumMap.end()) {
        // error ...
        return 0;
    }
    return i->second->Read(HP);
}
```

Only the `MyDatum` portions need be added for each new datum type; they can be declared, defined and registered anywhere in the code, including in run-time loaded modules.

Currently, drives, constitutive laws and scalar functions are handled according to this scheme; examples are provided in `modules/module-drive/`, `modules/module-constlaw/` and `modules/module-scalarfunc/`. More types will be reworked accordingly.

2.2 LowParser

...

2.3 MathParser

...

Chapter 3

Solvers

...

3.1 Matrix classes

3.2 Sparse matrices

3.3 Linear solvers

LinearSolver classes wraps linear solvers
SolutionManagers classes deals with the solution of linear systems. They own a pointer to a LinearSolver, where they allocate the underlying linear solver. SolutionManager::MatrInitialize() is called when the structure of the underlying spares matrix changes. SolutionManager::MatrReset(), is called to delete a factorization. It usually calls LinearSolver::Reset(). The matrix has to be explicitly zeroed before a Jacobian matrix assembly.

3.3.1 The naive linear solver

The naive solver solves a sparse system $Ax = b$ by Gaussian elimination. Its main idea is unchanged from Morandini and Mantegazza's paper [5]: reserve space for a full matrix, but use lists of stored entries to avoid doing arithmetic on absent entries. This trades memory for quick access to coefficients, and is intended for relatively small systems. Reserving dense storage does not mean performing a dense factorization.

The current scalar implementation improves reuse of the pivot row. The multithreaded implementation also changes the handling of fill-in and synchronization, and offers two optional ways to group pivots. This section describes these implementations, rather than the historical kernel used for the timings in the paper. References below are to the published article: Section 2, "Data structure and solver", pp. 2–5, covers storage, the `naivfct` and `FindPiv` routines, and the original parallel kernel.

Storage, fill-in, and pivoting

The storage is the same in principle as Section 2 and Figure 1 of the paper. The following names are also used in the source code:

`a[r][c]`	Value in original row r, column c.
`nz[r][c]`	Whether this location belongs to the stored pattern.
`ci[r]`, `nzc[r]`	Unsorted list of stored column indices in row r, and its length.
`ri[c]`, `nzr[c]`	Unsorted list of stored row indices in column c, and its length.
`piv[i]`	Original row selected as the pivot at elimination step i.
`todo[r]`	Whether row r has not yet been selected as a pivot.

The count names can be surprising: `nzc[r]` counts columns in a row, whereas `nzr[c]` counts rows in a column. Indices in the pseudocode start at zero, as in the kernels; input-file matrix indices start at one.

Elimination may create an entry where none was assembled. This is *fill-in*. Its value fits in the already allocated matrix, but its indices must be added to both lists and its presence flag must be set. A stored entry remains in the pattern even if its numerical value becomes zero by cancellation. Thus "stored" is more precise here than "numerically nonzero". On matrix reassembly the pattern can be cleared by visiting its stored entries, as in the paper's `CleanMatrix` listing; clearing every dense matrix value is unnecessary.

At step i, the pivot is chosen among the remaining rows listed in `ri[i]`. If m_i is the largest absolute coefficient among these rows, a candidate r must satisfy

$$|a_{ri}| \geq \tau m_i, \qquad 0 < \tau \leq 1. \tag{3.1}$$

Among eligible rows the solver selects one with the smallest `nzc[r]`; this is the whole stored row count, including entries in previously eliminated columns. Equal counts keep the first eligible row in column-list order. This is the criterion in the paper's `FindPiv` listing (Section 2, pp. 4–5). It balances pivot size against likely fill-in. A structurally empty column or the absence of a usable pivot is reported as a factorization error.

The input keyword `pivot factor` sets τ. The current default for the naive solver is 10^{-5}. The paper's example listing uses 10^{-8}; its Table I uses $\tau = 1$, and Table II uses $\tau = 10^{-8}$. These are different numerical choices. A timing comparison must use the same threshold, because pivot choices change both fill-in and work. The scheduling threshold introduced below is a separate quantity and does not relax this pivot criterion.

Rows are not physically exchanged during elimination. The vector `piv` records their order. In pivot row $r =$ `piv[i]`, the entries in columns $c < i$ store lower-triangular multipliers, those with $c > i$ store the upper-triangular coefficients, and `a[r][i]` stores the reciprocal pivot. A column ordering such as COLAMD permutes the unknowns before this factorization; numerical row pivoting is still performed.

Scalar factorization: pack the pivot row once

In the paper's `naivfct` listing (Section 2, p. 4), each target row walks the entire pivot row's index list and skips columns already eliminated. The current scalar kernel first copies the active upper entries into two contiguous arrays: their column indices and their values. Every target row then reuses these arrays. "Packing" here means making this compact copy; it does not change the matrix ordering.

```
mark all rows as remaining
for column i = 0, ..., n-1:
    r = choose pivot using the threshold and stored row counts
    record piv[i] = r; mark row r as selected
    d = 1 / a[r][i]; store a[r][i] = d
    U = pack (c, a[r][c]) from ci[r] for c > i
    for each remaining row s in ri[i], in list order:
        multiplier = a[s][i] * d
        store a[s][i] = multiplier
        count = nzc[s]
        for each (c, value) in U, in packed order:
            if entry (s,c) is already stored:
                a[s][c] -= multiplier * value
            else:
                a[s][c] = -multiplier * value
                mark entry (s,c) as stored
                append c to ci[s], using local count
                append s to ri[c]
        publish nzc[s] = count
```

This avoids repeatedly loading the pivot row through indirect column indices and testing whether each pivot entry is above the diagonal. The packed arrays are read sequentially and reused while updating many rows. A new entry is initialized directly to its first contribution, rather than initialized to zero and then updated through the paper's `GetElementAddress` routine. Keeping the row count in a local variable also avoids writing it for every new entry. The pivot criterion and the order of fill insertion are retained.

The MBDyn scalar wrapper retains the packing arrays between factorizations; their extra storage is $O(n)$. The low-level `naivfct` compatibility entry point provides its own temporary packing arrays. An optional statistics entry point also measures update sizes for the parallel wrapper's scheduling decisions; the ordinary scalar entry points do not request these statistics.

Default parallel factorization: give each row one writer

There are p factorization threads, including thread zero, the *coordinator*. As in the paper's multithreading discussion (Section 2, p. 5), a parallel row update assigns original row r to thread $r \bmod p$. This is a logical ownership rule; it does not by itself bind an operating-system thread to a physical processor. The coordinator selects pivots and packs their upper entries, and also updates its share of rows.

The important difference concerns fill-in. Two different rows may both create an entry in the same column. The paper protects the column list and count with a column spinlock. The current kernel lets a worker update only its own matrix row, presence flags, and row index list. The worker remembers where that row list ended before the update. The new entries are exactly the suffix appended after that position. After the workers finish, the coordinator reads these suffixes and adds their row indices to the column lists. No column lock is needed.

For example, if rows 2 and 5 both acquire an entry in column 9, their owners append 9 to their separate row lists. Once both owners finish, the coordinator appends 2 and 5 to column 9's list in the original target row traversal order. No two threads write that column list together. Preserving traversal order also preserves the ordering used to break future pivot ties. The deferred lists are temporarily incomplete only while no new pivot is being selected.

For a pivot with R_i remaining target rows and U_i packed upper entries, the implementation estimates the update work as

$$W_i = R_i(U_i + 1). \tag{3.2}$$

The extra one accounts for forming the multiplier even when $U_i = 0$. This is a scheduling estimate, not an exact operation count or a time prediction. With the current internal threshold $W_{\min} = 4096$, smaller updates run entirely on the coordinator. They update both index lists directly, without waking the waiting workers for that pivot. Pivots with no target rows need no row update.

```
coordinator, for each pivot column i:
    select pivot, record its reciprocal, and pack its upper entries
    if estimated update work < 4096:
        update all target rows and both index lists directly
    else:
        publish a new job number and the prepared pivot
        each thread updates only its owned target rows:
            remember old end of ci[row]
            update values, flags, and ci[row]; leave ri unchanged
            write nzc[row] once
        each other thread publishes its own completion number
        coordinator waits for every completion
        coordinator merges new row-list suffixes into ri
    only now may the next pivot be selected
publish end-of-factorization, on success or error
```

The job number is an *epoch*: a monotonically increasing label for a released job. It can skip pivots executed solely by the coordinator. Each worker writes a separate completion epoch, aligned on a 64-byte boundary to reduce competition for the same cache line. The coordinator alone waits for all completions. Workers wait for the next publication, rather than repeatedly incrementing or polling a shared arrival counter. Once a worker acknowledges a job, it must stop accessing that job's data; the coordinator may immediately reuse the packing arrays or perform several small pivots on its own.

Publication and completion use standard C++ atomics with release/acquire ordering. In practical terms, a worker sees the prepared pivot before using it, and the coordinator sees completed row updates before merging their fill-in. The column metadata itself needs no atomic increments because it has one writer. An end marker is published even for errors, an entirely serial factorization, or a serial tail, so waiting workers can always leave the operation. The wrapper reports a numerical failure after the whole team has returned.

Spin waits use processor hints where supported (x86 PAUSE, ARM YIELD, or the RISC-V PAUSE encoding), and yield to the scheduler after 1024 unsuccessful polls. These waits still cost time. Avoiding unnecessary jobs is often more useful than changing the waiting primitive. Packing, suffix boundaries, readiness flags, and completion epochs need $O(n+p)$ extra storage in this default implementation; there is no additional dense matrix of fill-in indices.

The fixed row ownership is useful during large parallel updates, but small coordinator-only updates can touch rows owned by other workers. This deliberately trades some row locality for fewer synchronization operations. Similarly, writing a row count once reduces writes to nearby metadata but does not eliminate all cache-line sharing.

Adaptive scalar execution between factorizations

The default parallel wrapper remembers the largest W_i from a successful factorization. If every pivot was below $W_{\min}$, it uses scalar substitution immediately and runs the next factorization on the calling thread, leaving the worker team asleep. This scalar run measures update sizes again. If a changed matrix or ordering produces a sufficiently large update, the following factorization uses the team again. The switch therefore follows the observed work, rather than only the matrix dimension, and it is reconsidered on every factorization. Failed factorizations do not establish a scalar execution preference.

This history-based scalar factorization shortcut is disabled for either explicit batching mode. Several individually small updates may form a useful batch, which cannot be predicted from the largest single-pivot estimate alone. Both batching modes still perform small batches on the coordinator and use scalar substitution if the completed factorization released no parallel batch.

Independent-pivot batching

The input option `batching` selects `pnaivfct_batching`. It groups up to eight consecutive pivots whose active row sets are disjoint. An active row set includes the pivot candidate rows, not just the rows eventually updated. Already selected pivot rows in the current batch also participate in the conflict check: their upper entries could otherwise create new candidates for a later column. The batch ends at the first conflict; columns are not searched out of order to find another independent pivot.

For example, two independent blocks whose columns are interleaved may provide consecutive independent pivots. If those blocks are placed one after the other, consecutive columns may instead belong to the same block and offer little opportunity for this batching rule.

```
while pivot columns remain:
    prepare up to 8 consecutive pivots:
        stop before a candidate row set conflicts with this batch
        select the pivot and pack its upper entries
        remember all of its active candidate rows
    add the estimated work of the prepared pivots
    execute the batch on the coordinator or release it as one job
    for a parallel job, wait once for all worker completions
    merge deferred fill in original pivot order, then row order
```

Disjointness allows pivot preparation before executing the preceding updates in that batch: those updates cannot change the next candidate rows or their stored counts. The fill mechanism is the same suffix mechanism as in the default parallel kernel. A row belongs to at most one pivot's active row set in a batch, so one suffix boundary per row is sufficient. The batch uses the sum of the W_i estimates to decide whether to use the team. Its fixed limit makes extra packing and row marks $O(n)$ in size. This optimization extends the paper's one-pivot schedule; it does not change its pivot criterion.

Coupled-pivot batching

The input option `coupled batching` selects `pnaivfct_coupled`. Consecutive pivots may now update the same rows. A batch is also called a *panel*. The maximum panel width is four by default; for example, `coupled batching, pivots, 8` requests up to eight. The effective maximum is capped at the matrix dimension.

Allowing overlapping rows makes it unsafe simply to select several pivots and postpone all their updates. Before selecting the next pivot, the coordinator must know its updated column values and the current stored row counts. The kernel therefore separates two kinds of work: *symbolic* work records where entries exist, while *numerical* work computes their values. Within a panel, symbolic fill is recorded immediately, but most numerical updates are postponed.

```
build a symbolic bitset from the assembled matrix pattern
while pivot columns remain:
    start an empty panel and an empty target-row list
    for up to the requested number of consecutive columns i:
        advance column i using earlier pivots in this panel
        select a pivot using updated values and stored row counts
        finish that pivot row's pending upper updates
        store its reciprocal pivot and pack its upper entries
        for every remaining target row:
            compute and store its multiplier for this pivot
            add the row to the panel target list if not there yet
            record symbolic fill in nz, ci, ri and row counts
            initialize newly stored values to zero
    remove already advanced panel columns from the packed data
    execute trailing updates on the coordinator or as one job:
        for each owned target row still remaining:
            apply the panel's pivots in their original order
    wait for any parallel job before preparing the next panel
```

For a two-pivot example, column $i+1$ is updated with pivot i before choosing its own pivot. If its selected row was also a target of pivot i, that row's upper values are finished before they are packed. All other rows can wait until the panel is ready. A worker then visits one such row and applies both pivots while that row is likely still in cache. Columns already advanced during panel preparation are omitted from the packed trailing data, so they are not updated twice. Rows selected as pivots during preparation are likewise excluded from the trailing target updates.

The coordinator uses a bitset—one presence bit for each matrix location—to detect whether a symbolic row union creates any fill. If it does, the new entries are enumerated in the original packed pivot-entry order, preserving the row and column list insertion order. Row counts are therefore ready for the next pivot's fill criterion. Unlike the default and independent kernels, column lists are updated during this serial preparation, rather than merged after the numerical job. Workers then write numerical row values only. There are still no column locks.

The extra bitset occupies $8n\lceil n/64\rceil$ bytes, approximately $n^2/8$ bytes. Packed pivot indices and values occupy $O(bn)$ space for maximum panel width b; target rows, masks, and marks add $O(n)$ space. These are additional to the solver's original dense storage. Workspace is allocated before the team is launched and reused on later factorizations; the workers do not allocate scratch memory during a job.

As in independent batching, the sum of the pivot work estimates selects coordinator or team execution. Larger panels can reduce handshakes and reuse target rows better, but also increase serial preparation, packing, and workspace. They can be slower even if they release fewer jobs. The symbolic pattern, pivot criterion, and intended elimination order are retained; floating-point rounding can differ because the arithmetic is scheduled differently. Exact bitwise agreement is not promised. If pivot preparation fails, any prepared prefix is drained before the team leaves; a failed candidate column already advanced during preparation must not be updated a second time.

Forward and backward substitution

Once factors exist, a new right-hand side needs only triangular substitution. Let $r_i = \texttt{piv[i]}$ and let f_i denote the forward result. With the reciprocal pivots stored as described above,

$$f_i = b_{r_i} - \sum_{c<i} a_{r_i c} f_c, \tag{3.3}$$

$$x_i = \left(f_i - \sum_{c>i} a_{r_i c} x_c \right) a_{r_i i}. \tag{3.4}$$

Each sum visits stored entries only. Scalar substitution computes all f_i in increasing order and then all x_i in decreasing order.

Parallel substitution assigns *pivot position* i to thread $i \bmod p$; this differs from the original-row ownership used during factorization. An atomic state for each position is initially zero, becomes one when f_i is ready, and becomes two when x_i is ready. A forward sum waits only for its actual lower dependencies to reach at least state one. A backward sum waits for its upper dependencies to reach state two. Publishing a readiness state also makes the corresponding value visible to the waiting thread.

With separate RHS and solution buffers, a thread may begin its backward rows before other threads finish their forward rows. The forward values remain in separate scratch storage and readiness state two still means the forward value is available. If the RHS and solution buffers overlap, the kernel first waits for *all* forward substitutions to finish: otherwise a solution write could overwrite a right-hand-side value another thread has not read yet. Identical buffers and partial overlap in either direction are supported. The parallel COLAMD wrapper uses a separate solution scratch vector in the permuted phase, then maps the answer back to the original unknown order. This also preserves the RHS and avoids imposing an overlap barrier solely to undo a column permutation.

Repeated solves and practical comparisons

Three operations should be timed separately when evaluating the solver:

1. The first assembly and solution, when a column ordering may not yet be known. The naive COLAMD wrappers compute an ordering from this pattern, but solve this first assembled matrix in its existing order. The ordering becomes active after the next matrix reset and reassembly.

2. Reassembly, numerical refactorization, and solution with a known column ordering. New coefficients and numerical pivots are still computed; the previous factors are not reused. This corresponds to the distinction made for "Subsequent Solutions" in the paper's Section 3 and Tables I–II (discussion on pp. 6–8).

3. Substitution for a new RHS using unchanged numerical factors. This needs neither reassembly nor factorization and is normally much cheaper than the preceding operation.

The modes can be selected, when multithreaded naive support is enabled, using the following alternatives:

```
linear solver: naive, colamd, mt, 2;
linear solver: naive, colamd, mt, 2, batching;
linear solver: naive, colamd, mt, 2, coupled batching;
linear solver: naive, colamd, mt, 2, coupled batching, pivots, 8;
```

The first selects the adaptive single-pivot parallel implementation. The next selects independent batching; the last two select coupled batching with different maximum widths. The batching modes are mutually exclusive and require at least two factorization threads. The input manual's `linear solver` description gives the complete syntax and parameter limits.

More threads or wider panels do not guarantee a faster solve. Sparse matrices may offer too little work between dependencies to pay for publication, waiting, or serial fill bookkeeping. Ordering can reduce the arithmetic so much that synchronization becomes a larger fraction of the remaining time. Compare the modes on the intended matrices, with the same numerical pivot threshold and the same first/subsequent solve conditions. Check residuals as well as timings. The normalized times in the paper describe its original kernels and hardware; they are not performance predictions for these implementations.

Where to find the implementation. The scalar kernels are in `libraries/libnaive/mthrdslv.c`; the three parallel factorization kernels and parallel substitution are in `libraries/libnaive/pmthrdslv.cc`. The workspaces are declared in `pmthrdslv.h`. The scalar and parallel solution-manager wrappers are in `libraries/libmbwrap/naivewrap.cc` and `libraries/libmbwrap/parnaivewrap.cc`; the latter also contains the adaptive mode selection and the persistent worker team.

3.4 Non linear solvers

...

3.5 Parallel solver

3.5.1 Partitioning

`iTotVertices` is equal to the sum of nodes and elements. It is made in this way because we want the partitioner to generate a twofold subdivision:

- a subdivision related to elements; this subdivision is done in order to share the computational load during the assembly phase;
- a subdivision related to nodes, which is necessary for the solving phase with the substructuring method.

Of course this two partitions must be connected, so we build created a graph which is made of nodes and elements as vertex. The connection between vertexes are only between nodes and elements. There is no node to node or element to element connection.

`pVertexWgts` contains what we call the computational weight of each entity, so nodes have weight null while elements has a weight related to the dimension of the submatrix of the Jacobian matrix assembled by each one of them.

`pCommWgts` contains the communication weights (see metis documentation) which are a measure of the quantity of data which needs to be sent if the i-th vertex is part of an interface between different partitions. This means that nodes have a `CommWgts` equal to the number of DOFs, while elements have a weight equal to any internal DOFs they possess.

3.6 Convergence check

MDByn needs to solve a set of nonlinear equations

$$\boldsymbol{f}(\boldsymbol{x}) = \boldsymbol{0}, \tag{3.5}$$

where $\boldsymbol{f}$ is the so-called residual vector. The standard `norm` convergence check is based on the norm

$$f = \sqrt{\boldsymbol{f}^T \boldsymbol{f}} \tag{3.6}$$

of vector $\boldsymbol{f}$. While this often works in practice it has two shortcoming:

1. one doesn not know the generalized forces magnitude of the model, that is, a residual norm equal to 1 can be perfectly fine if the order of magnitude of the generalized forces transmitted by the structure is of 1E6, while is not ok if the order of magnitude is 10;

2. different components of vector $\boldsymbol{f}$ do have different physical dimensions, and it makes no sense to sum them together.

The `relnorm` test is designed to solve the first shorcoming. In addition to assembing the residual component f_i as

$$f_i = \sum_{e=1}^{\text{elements of the model}} f_{i(e)}(\boldsymbol{x}), \tag{3.7}$$

also the absolute values of the different contribution from the elements are assembled into a new vector $\tilde{\boldsymbol{f}}$ with components

$$\tilde{f}_i = \sum_{e=1}^{\text{elements of the model}} |f_{i(e)}(\boldsymbol{x})|. \tag{3.8}$$

The convergence test is then performed over

$$f = \frac{\sqrt{\boldsymbol{f}^T \boldsymbol{f}}}{\sqrt{\tilde{\boldsymbol{f}}^T \tilde{\boldsymbol{f}}}} \tag{3.9}$$

so that the residual is automatically scaled with respect to the generalized force magnitude appearing in the model.

The `sepnorm` test tries to solve both issues. Beside assembling the additional vector $\tilde{\boldsymbol{f}}$, just like the `relnorm` test, it partitions the equations into N independent set $\boldsymbol{f}_{[j]}$ and $\tilde{\boldsymbol{f}}_{[j]}$, with $j \in [1, N]$, one foreach physical dimension apperaring in the residual vector, so that every components $\boldsymbol{f}_{i[j]}$ of the subvector $\boldsymbol{f}_{[j]}$ has the same physical dimension. The relative residual test is then computed independently for each set

$$f_{[j]} = \frac{\sqrt{\boldsymbol{f}_{[j]}^T \boldsymbol{f}_{[j]}}}{\sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}}} \tag{3.10}$$

and the test returns the worst $f_{[j]}$, $\max_j(f_{[j]})$.

In order to identify the set of equations that are inactive (for which either $\sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}} = 0$ or $f_{[j]} \approx 1$ because the norms are very small and comes mostly from numerical errors),

1. $f_{[j]} = 0$ if $\sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}} = 0$
   AND
2. $f_{[j]} = 0$ if $\sqrt{\boldsymbol{f}_{[j]}^T \boldsymbol{f}_{[j]}} / \sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}} > \epsilon_1$ and $\sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}} < \epsilon_2 * \max_j \left(\sqrt{\tilde{\boldsymbol{f}}_{[j]}^T \tilde{\boldsymbol{f}}_{[j]}} \right)$

where the coefficients ϵ_1 and ϵ_2 are hard coded, $\epsilon_1 = 1.E-1$ and $\epsilon_2 = 1.E-5$. One could consider, in the future, to allow reading them from the input file.

Chapter 4

Orientation Handling

The orientation of structural nodes is handled by storing the orientation matrix of each node, and updating it during prediction and correction by incremental orientations.

The code uses Gibbs-Rodrigues parameters to account for incremental rotations. These parameters allow very efficient implementation, since they only require few algebraic operations to obtain the orientation matrix and related entities. However, they require the absolute value of the orientation to be limited; this requirement is usually overcome by accuracy requirements, so it is not viewed as a strong limitation.

One main advantage of this approach is that only three parameters are required to handle orientations. A main drawback of this approach is that it is quite difficult to keep track of how large a change in orientation occurred to a given node, since simply converting the orientation matrix into any other representation of a finite rotation typically results in the minimal rotation that yields that matrix.

MBDyn can output rotations in the following representations:

- Euler angles according to the 123 sequence;
- the orientation vector;
- the orientation matrix.

4.1 Euler Angles

Consider an orientation expressed by matrix $\boldsymbol{R}$. It can be expressed as the result of a precise sequence of rotations about three distinct axes. The 123 sequence means that matrix $\boldsymbol{R}$ is obtained as a sequence of three rotations: the first about axis 1; the second about axis 2 as it results after the first rotation; the third about axis 3 as it results after the second rotation, namely:

$$\boldsymbol{R}_1 = \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos\alpha & -\sin\alpha \\ 0 & \sin\alpha & \cos\alpha \end{bmatrix}, \tag{4.1}$$

$$\boldsymbol{R}_2 = \begin{bmatrix} \cos\beta & 0 & \sin\beta \\ 0 & 1 & 0 \\ -\sin\beta & 0 & \cos\beta \end{bmatrix}, \tag{4.2}$$

$$\boldsymbol{R}_3 = \begin{bmatrix} \cos\gamma & -\sin\gamma & 0 \\ \sin\gamma & \cos\gamma & 0 \\ 0 & 0 & 1 \end{bmatrix}, \tag{4.3}$$

piled up, must equal $\boldsymbol{R}$:

$$\begin{aligned}\boldsymbol{R} &= \boldsymbol{R}_1\boldsymbol{R}_2\boldsymbol{R}_3 \\ &= \begin{bmatrix} \cos\beta\cos\gamma & -\cos\beta\sin\gamma & \sin\beta \\ \sin\alpha\sin\beta\cos\gamma+\cos\alpha\sin\gamma & -\sin\alpha\sin\beta\sin\gamma+\cos\alpha\cos\gamma & -\sin\alpha\cos\beta \\ -\cos\alpha\sin\beta\cos\gamma+\sin\alpha\sin\gamma & \cos\alpha\sin\beta\sin\gamma+\sin\alpha\cos\gamma & \cos\alpha\cos\beta \end{bmatrix}.\end{aligned} \tag{4.4}$$

The angles can then be computed by means of a simple, partially recursive algorithm:

$$\alpha = -\tan^{-1}\left(\frac{\boldsymbol{R}_{23}}{\boldsymbol{R}_{33}}\right) \tag{4.5}$$

$$\beta = \tan^{-1}\left(\frac{\boldsymbol{R}_{13}}{\cos\alpha\boldsymbol{R}_{33}-\sin\alpha\boldsymbol{R}_{23}}\right) \tag{4.6}$$

$$\gamma = \tan^{-1}\left(\frac{\cos\alpha\boldsymbol{R}_{21}+\sin\alpha\boldsymbol{R}_{31}}{\cos\alpha\boldsymbol{R}_{22}+\sin\alpha\boldsymbol{R}_{32}}\right) \tag{4.7}$$

The use of the function `atan2(double dSin, double dCos)` eliminates the risk of divisions by zero or of excessive loss of precision.

4.2 Orientation Vector

An orientation matrix can be represented as a finite rotation about an axis, in the form

$$\boldsymbol{R} = \boldsymbol{I} + \sin\phi\ \boldsymbol{n}\times\ + (1-\cos\phi)\,\boldsymbol{n}\times\boldsymbol{n}\times \tag{4.8}$$

where ϕ is the amplitude of the rotation and $\boldsymbol{n}$ is the unit vector that represents the rotation axis.

Simple algebra manipulation shows that the trace of the orientation matrix corresponds to

$$\operatorname{tr}(\boldsymbol{R}) = \operatorname{tr}(\boldsymbol{I}) + (1-\cos\phi)\operatorname{tr}(\boldsymbol{n}\times\boldsymbol{n}\times) \tag{4.9}$$

$$= 3 - 2(1-\cos\phi), \tag{4.10}$$

since

$$\boldsymbol{n}\times\boldsymbol{n}\times\ = \boldsymbol{n}\boldsymbol{n}^T - \boldsymbol{I}, \tag{4.11}$$

so

$$\cos\phi = \frac{\operatorname{tr}(\boldsymbol{R})-1}{2}. \tag{4.12}$$

At the same time, the skew-symmetric portion of $\boldsymbol{R}$ is

$$\operatorname{skw}(\boldsymbol{R}) = \sin\phi\ \boldsymbol{n}\times, \tag{4.13}$$

so

$$\operatorname{ax}(\operatorname{skw}(\boldsymbol{R})) = \sin\phi\ \boldsymbol{n} \tag{4.14}$$

which yields the amplitude of the rotation,

$$\sin\phi = \operatorname{norm}(\operatorname{ax}(\operatorname{skw}(\boldsymbol{R}))), \tag{4.15}$$

and the direction of the rotation axis,

$$\boldsymbol{n} = \frac{1}{\sin\phi}\mathrm{ax}\left(\mathrm{skw}\left(\boldsymbol{R}\right)\right), \tag{4.16}$$

while ϕ can be computed from its sine and cosine as

$$\phi = \tan^{-1}\left(\frac{\sin\phi}{\cos\phi}\right). \tag{4.17}$$

Chapter 5

Integration

differential variable: a variable is declared differential in `SimulationEntity::GetDofType()` by returning `DofOrder::DIFFERENTIAL`. The increment of the value of a differential variable is equal to $\Delta x = \texttt{dCoef}\Delta\dot{x}$. When writing the Jacobian matrix, this must be considered; as a consequence, for an equation $f = 0$ (the residual is $-f$) the linearization is $f_{/\dot{x}} + f_{/x} * \texttt{dCoef}) * \Delta\dot{x} = -f$, as $\texttt{dCoef} * \Delta\dot{x} = \Delta x$.

algebraic variable: a variable is declared algebraic in `SimulationEntity::GetDofType()` by returning `DofOrder::ALGEBRAIC`. The increment of the value of an algebraic variable is the increment of the variable.

differential equation: an equation is declared differential in `SimulationEntity::GetEqType()` by returning `DofOrder::DIFFERENTIAL`. An equation $f = 0$ must be declared differential if $f_{/\dot{x}}$ is not null. The residual is $-f$, and its linearization is: $\left(f_{/\dot{x}} + f_{/x} * \texttt{dCoef}\right) * \Delta\dot{x} = -f$.

algebraic equation: an equation is declared algebraic in `SimulationEntity::GetEqType()` by returning `DofOrder::ALGEBRAIC`. An equation $f = 0$ can be declared algebraic iff $f_{/\dot{x}}$ is structurally null (e.g. regardless of the values the state may assume) and x is not algebraic. If an equation $f(x, t) = 0$ is declared differential, the residual is $-f$, and its linearization is: $f_{/x} * \texttt{dCoef} * \Delta\dot{x} = -f$. If the equation can be declared algebraic, it can be divided by `dCoef`: $f/\texttt{dCoef} = 0$, with residual $-f/\texttt{dCoef}$, and linearization $f_{/x} * \Delta\dot{x} = -f/\texttt{dCoef}$. This helps scaling the equations. Clearly, this has no sense if x is algebraic, or if $f_{/\dot{x}} \neq 0$.

5.1 Nodal rotation

The rotational DOF unknown during `AssRes()` and `AssJac()` are the increment of (Gibbs-Rodrigues) rotation parameters with respect to the reference configuration. Of course the increment of the parameter is $\Delta\boldsymbol{g} = \texttt{dCoef}\Delta\dot{\boldsymbol{g}}$. The increment of angular velocity is $\Delta\boldsymbol{\omega} = \boldsymbol{G}\Delta\dot{\boldsymbol{g}} + \Delta\boldsymbol{G}\dot{\boldsymbol{g}} - \boldsymbol{\omega}_{\mathrm{ref}} \times \boldsymbol{G}\Delta\boldsymbol{g}$, where $\boldsymbol{G}(\boldsymbol{g})$ is the tensor relating $\boldsymbol{g}_\delta$ to $\delta\boldsymbol{g}$, and $\boldsymbol{\omega}_{\mathrm{ref}}$ is the nodal reference angular velocity (Wref). We assume $\boldsymbol{G} = \boldsymbol{I}$ and $\Delta\boldsymbol{G} = \boldsymbol{0}$, so that $\Delta\boldsymbol{\omega} = \Delta\dot{\boldsymbol{g}} - \boldsymbol{\omega}_{\mathrm{ref}} \times \Delta\boldsymbol{g}$ and so $\Delta\boldsymbol{\omega} = \Delta\dot{\boldsymbol{g}} - \boldsymbol{\omega}_{\mathrm{ref}} \times \Delta\dot{\boldsymbol{g}} * \texttt{dCoef}$.

5.2 Integrators

Most of MBDyn's integrators are documented in [6, 7], that are distributed verbatim in Appendix A, B, respectively.

Chapter 6

Solution Phases

6.1 Initial Assembly

This phase only involves some of the structural elements. It is intended to ensure that the initial configuration and velocity complies with the constraint equations. It is not performed if the `control data` block contains the statement `skip initial joint assembly`.

To allow non-compliant system analysis, the initial configuration and velocity can be changed by this phase. To this purpose, the nodal positions, orientations, velocities and angular velocities are grounded by dummy springs, acting as penalty functions. The springs can be set on a node basis, and separately for configuration and velocity, to allow to selectively enforce the initial configuration.

The problem can be stated as follows:

$$\boldsymbol{K}\boldsymbol{x} + \boldsymbol{\phi}^T_{/\boldsymbol{x}}\boldsymbol{\lambda}_{\boldsymbol{\phi}} + \boldsymbol{A}^T\boldsymbol{\lambda}_{\boldsymbol{A}} = \boldsymbol{K}\boldsymbol{x}_0 + \boldsymbol{f} \tag{6.1}$$

$$\boldsymbol{C}\boldsymbol{v} + \boldsymbol{\phi}^T_{/\boldsymbol{x}}\boldsymbol{\mu} = \boldsymbol{C}\boldsymbol{v}_0 \tag{6.2}$$

$$\boldsymbol{\phi}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.3}$$

$$\boldsymbol{A}(\boldsymbol{x}, t)\,\boldsymbol{v} + \boldsymbol{b}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.4}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}} v + \boldsymbol{\phi}_{/t} = \boldsymbol{0} \tag{6.5}$$

where Equation (6.3) and (6.4) respectively contain the holonomic and non-holonomic constraint equations. The solution of this problem leads to the direct determination of an initial configuration and velocity that complies with the constraints.

Unfortunately, this requires the implementation of more constraints than required by the regular solution phases, namely the time derivative of the algebraic constraints that depend only on the configuration.

NOTE: Rationale. The rationale of an initial assembly procedure is to drive the problem in a configuration that complies with the kinematic constraints, starting from the configuration that was defined during the input.

Constraint equations can be partitioned in holonomic,

$$\boldsymbol{\phi}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.6}$$

and non-holonomic, which are usually expressed as linear in the coordinate derivatives,

$$\boldsymbol{A}(\boldsymbol{x}, t)\dot{\boldsymbol{x}} + \boldsymbol{b}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.7}$$

It is legitimate that $\boldsymbol{\phi}(\boldsymbol{x}_0^{(0)}, t_0) \neq \mathbf{0}$, or that $\boldsymbol{A}(\boldsymbol{x}_0^{(0)}, t_0)\boldsymbol{v}_0^{(0)} + \boldsymbol{b}(\boldsymbol{x}_0^{(0)}, t_0) \neq \mathbf{0}$, where the subscript 0 indicates the initial condition, and the superscript (0) indicates the values provided at input. In such cases, a procedure is sought that provides $\boldsymbol{x}_0$ and $\boldsymbol{v}_0$. Since the problem in many cases is underdetermined (as the number of constraint equations is less than the number of degrees of freedom of the unconstrained problem), a criterion is needed to determine the correction to the input configuration.

A minimum norm correction is obtained by requiring that the solution complies with the constraints and, at the same time, departs as little as possible from the configuration that was provided at input, namely

$$\begin{aligned} \min_{\boldsymbol{x}_0, \boldsymbol{v}_0} \frac{1}{2} \left[\left(\boldsymbol{x}_0 - \boldsymbol{x}_0^{(0)} \right)^T \boldsymbol{W}_{\boldsymbol{x}} \left(\boldsymbol{x}_0 - \boldsymbol{x}_0^{(0)} \right) + \left(\boldsymbol{v}_0 - \boldsymbol{v}_0^{(0)} \right)^T \boldsymbol{W}_{\boldsymbol{v}} \left(\boldsymbol{v}_0 - \boldsymbol{v}_0^{(0)} \right) \right] \\ \text{subjected to} \quad \begin{array}{l} \boldsymbol{\phi}(\boldsymbol{x}_0, t_0) = \mathbf{0} \\ \dot{\boldsymbol{\phi}} = \boldsymbol{\phi}_{/\boldsymbol{x}}(\boldsymbol{x}_0, t_0)\boldsymbol{v}_0 + \boldsymbol{\phi}_{/t}(\boldsymbol{x}_0, t_0) = \mathbf{0} \\ \boldsymbol{A}(\boldsymbol{x}_0, t_0)\boldsymbol{v}_0 + \boldsymbol{b}(\boldsymbol{x}_0, t_0) = \mathbf{0} \end{array} \end{aligned} \tag{6.8}$$

The problem can be reformulated as

$$\boldsymbol{W}_{\boldsymbol{x}} \left(\boldsymbol{x}_0 - \boldsymbol{x}_0^{(0)} \right) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda}_{\boldsymbol{\phi}} = \mathbf{0} \tag{6.9a}$$

$$\boldsymbol{W}_{\boldsymbol{v}} \left(\boldsymbol{v}_0 - \boldsymbol{v}_0^{(0)} \right) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\mu}_{\boldsymbol{\phi}} + \boldsymbol{A}^T \boldsymbol{\mu}_{\boldsymbol{\psi}} = \mathbf{0} \tag{6.9b}$$

$$\boldsymbol{\phi}(\boldsymbol{x}_0, t_0) = \mathbf{0} \tag{6.9c}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}}(\boldsymbol{x}_0, t_0)\boldsymbol{v}_0 + \boldsymbol{\phi}_{/t}(\boldsymbol{x}_0, t_0) = \mathbf{0} \tag{6.9d}$$

$$\boldsymbol{A}(\boldsymbol{x}_0, t_0)\boldsymbol{v}_0 + \boldsymbol{b}(\boldsymbol{x}_0, t_0) = \mathbf{0} \tag{6.9e}$$

After (incomplete) linearization, the problem can be solved as

$$\begin{bmatrix} \boldsymbol{W}_{\boldsymbol{x}} & \mathbf{0} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & \boldsymbol{W}_{\boldsymbol{v}} & \mathbf{0} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{A}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & \boldsymbol{\phi}_{/\boldsymbol{x}} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & \boldsymbol{A} & \mathbf{0} & \mathbf{0} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \Delta\boldsymbol{x}_0 \\ \Delta\boldsymbol{v}_0 \\ \Delta\boldsymbol{\lambda}_{\boldsymbol{\phi}} \\ \Delta\boldsymbol{\mu}_{\boldsymbol{\phi}} \\ \Delta\boldsymbol{\mu}_{\boldsymbol{\psi}} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{W}_{\boldsymbol{x}} \left(\boldsymbol{x}_0^{(0)} - \boldsymbol{x}_0 \right) - \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda}_{\boldsymbol{\phi}} \\ \boldsymbol{W}_{\boldsymbol{v}} \left(\boldsymbol{v}_0^{(0)} - \boldsymbol{v}_0 \right) - \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\mu}_{\boldsymbol{\phi}} - \boldsymbol{A}^T \boldsymbol{\mu}_{\boldsymbol{\psi}} \\ -\boldsymbol{\phi} \\ -\dot{\boldsymbol{\phi}} \\ -\boldsymbol{A}\boldsymbol{v}_0 - \boldsymbol{b} \end{Bmatrix} \tag{6.10}$$

The problem can be decomposed in two formally independent subproblems,

$$\begin{bmatrix} \boldsymbol{W}_{\boldsymbol{x}} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \Delta\boldsymbol{x}_0 \\ \Delta\boldsymbol{\lambda}_{\boldsymbol{\phi}} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{W}_{\boldsymbol{x}} \left(\boldsymbol{x}_0^{(0)} - \boldsymbol{x}_0 \right) - \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda}_{\boldsymbol{\phi}} \\ -\boldsymbol{\phi} \end{Bmatrix} \tag{6.11}$$

$$\begin{bmatrix} \boldsymbol{W}_{\boldsymbol{v}} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{A}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \mathbf{0} & \mathbf{0} \\ \boldsymbol{A} & \mathbf{0} & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \Delta\boldsymbol{v}_0 \\ \Delta\boldsymbol{\mu}_{\boldsymbol{\phi}} \\ \Delta\boldsymbol{\mu}_{\boldsymbol{\psi}} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{W}_{\boldsymbol{v}} \left(\boldsymbol{v}_0^{(0)} - \boldsymbol{v}_0 \right) - \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\mu}_{\boldsymbol{\phi}} - \boldsymbol{A}^T \boldsymbol{\mu}_{\boldsymbol{\psi}} \\ -\dot{\boldsymbol{\phi}} \\ -\boldsymbol{A}\boldsymbol{v}_0 - \boldsymbol{b} \end{Bmatrix} \tag{6.12}$$

where the latter depends on the former since $\boldsymbol{\phi}$, $\boldsymbol{A}$, and $\boldsymbol{b}$ may depend on $\boldsymbol{x}_0$.

The problems may couple again when, in order to influence the solution, one adds to the right hand side of Eq. (6.9a) some relatively arbitrary contributions that can be interpreted as the residual of an equilibrium,

$$\boldsymbol{W}_{\boldsymbol{x}} \left(\boldsymbol{x}_0 - \boldsymbol{x}_0^{(0)} \right) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda}_{\boldsymbol{\phi}} = \boldsymbol{r}(\boldsymbol{x}_0, \boldsymbol{v}_0, \boldsymbol{a}_0, t_0) \tag{6.13}$$

where $\boldsymbol{r}$ may include position, velocity, and even acceleration-dependent loads. By selectively activating what appears in $\boldsymbol{r}$, one would drive the minimization towards a solution that finds the desired trade-off

between staying close to the input configuration and, at the same time, tries to minimize the strain energy, or the gravitational potential energy, or whatever is desired.

For example, one could set $\boldsymbol{r} = \boldsymbol{f}(t_0) - \boldsymbol{K}\boldsymbol{x}_0$ to account for a dead load $\boldsymbol{f}(t_0)$, e.g. the weight. By carefully crafting the weight matrix $\boldsymbol{W}_{\boldsymbol{x}}$ (e.g. by setting it to zero if the stiffness matrix $\boldsymbol{K}$ is not singular), one could allow the nodes to depart from their initial configuration and obtain the static equilibrium configuration directly with the initial assembly.

(OUTDATED?) NOTE: this is a work in progress. A new procedure is being considered, which requires only the use of the constraint equation ϕ and its Jacobian matrix $\phi_{/x}$.

The problem that is solved with the new procedure is:

- solve for configuration and holonomic constraints first

$$\boldsymbol{K}\boldsymbol{x} + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda}_{\boldsymbol{\phi}} = \boldsymbol{K}\boldsymbol{x}_0 + \boldsymbol{f} \tag{6.14}$$

$$\boldsymbol{\phi}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.15}$$

- then solve for non-holonomic ones,

$$\boldsymbol{C}\boldsymbol{v} + \boldsymbol{A}^T \boldsymbol{\lambda}_{\boldsymbol{A}} = \boldsymbol{C}\boldsymbol{v}_0 \tag{6.16}$$

$$\boldsymbol{A}(\boldsymbol{x}, t)\,\boldsymbol{v} + \boldsymbol{b}(\boldsymbol{x}, t) = \boldsymbol{0} \tag{6.17}$$

  keeping the configuration $\boldsymbol{x}$ fixed, so that only the configuration is required to comply with the constraint equations, and the same constraint Jacobian matrix and residual of the regular steps are required;

- finally, after convergence, the following equation is considered:

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\boldsymbol{v} + \boldsymbol{\phi}_{/t} = 0 \tag{6.18}$$

  which uses the Jacobian matrix of the constraint equations; only the derivative of the time-dependent constraints is required.

  The number of rows of matrix $\boldsymbol{\phi}_{/\boldsymbol{x}}$ is equal to the number of degrees of freedom that are constrained, so typically the matrix must be underdetermined. It can be decomposed as

$$\boldsymbol{\phi}_{/\boldsymbol{x}}^T = \boldsymbol{Q}\boldsymbol{R} = \begin{bmatrix} \boldsymbol{Q}_1 & \boldsymbol{Q}_2 \end{bmatrix} \begin{bmatrix} \boldsymbol{R}_1 \\ \boldsymbol{0} \end{bmatrix} \tag{6.19}$$

  so

$$\boldsymbol{Q}_1^T \boldsymbol{v} + \boldsymbol{R}_1^{-T} \boldsymbol{\phi}_{/t} = 0 \tag{6.20}$$

  becomes a compatibility test for the initial velocities. There are two possible choices:

  1. the initial configuration assessment fails if the given initial velocities, after the correction occurring during the position and orientation assessment and correction phase, do not pass test (6.20);
  2. the initial velocities $\boldsymbol{v}$ are corrected into $\boldsymbol{v}_c$ by projecting them in the space that is compatible with the constraints, e.g.:

$$\boldsymbol{v}_c = \boldsymbol{v} - \boldsymbol{Q}_1 \left(\boldsymbol{Q}_1^T \boldsymbol{v} + \boldsymbol{R}_1^{-T} \boldsymbol{\phi}_{/t} \right) \tag{6.21}$$

     The initial assembly procedure can be repeated until test (6.20) passes.

A consistent implementation of this approach is not available yet; it requires the availability of the time derivatives of the constraint equations, which is an open issue since it is not well understood what is the physical meaning of knowing the time derivatives of a constraint. Implementation issues are still open as well.

6.2 Initial Value Problem

6.2.1 Initial Derivatives

The so-called "derivatives" phase can be thought as computing the initial value of the highest order derivatives at $t = t_0$ before any iteration starts. For simplicity, think of an explicit Ordinary Differential Equation (ODE) problem like

$$\dot{\boldsymbol{y}} = \hat{\boldsymbol{f}}(\boldsymbol{y}, t) \tag{6.22}$$

with the initial value of $t(0) = t_0$ and $\boldsymbol{y}(0) = \boldsymbol{y}_0$; then, the computation of $\dot{\boldsymbol{y}}(0)$ is trivial. Now, the actual problem is Differential Algebraic (DAE) and implicit, i.e. something like

$$\boldsymbol{f}(\dot{\boldsymbol{y}}, \boldsymbol{y}, t) = 0 \tag{6.23}$$

(actually, it's a bit more complicated, since it's index 3), and we still need to compute the derivatives $\dot{\boldsymbol{y}}(0)$ of the differential variables, and the algebraic variables as well, which in the above representation are hidden in the $\dot{\boldsymbol{y}}$. During the regular solution phase (i.e. the Newton iteration) we solve a problem of the form

$$\boldsymbol{f}_{/\dot{\boldsymbol{y}}} \Delta\dot{\boldsymbol{y}} + \boldsymbol{f}_{/\boldsymbol{y}} \Delta\boldsymbol{y} = -\boldsymbol{f} \tag{6.24}$$

and, according to the integration formula that we are using,

$$\Delta\boldsymbol{y} = \texttt{dCoef} \cdot \Delta\dot{\boldsymbol{y}} \tag{6.25}$$

where $\texttt{dCoef} = b_0 h$ is essentially the time step h times some coefficient b_0 specific for the integration formula; it is 1/2 for Crank-Nicolson, 2/3 for BDF and so on. So the actual iteration is

$$\left(\boldsymbol{f}_{/\dot{\boldsymbol{y}}} + \texttt{dCoef} \cdot \boldsymbol{f}_{/\boldsymbol{y}}\right) \Delta\dot{\boldsymbol{y}} = -\boldsymbol{f}. \tag{6.26}$$

To avoid the need to implement a dedicated routine to compute the initial value of $\dot{\boldsymbol{y}}$, we iterate over the above reported problem, ideally with a time step of 0, which means that $\boldsymbol{f}_{/\boldsymbol{y}}$ is not considered. However, since the problem is differential algebraic, the Jacobian matrix $\boldsymbol{f}_{/\dot{\boldsymbol{y}}}$ can be structurally singular, so the time step must be greater than 0, but small enough to let the correction

$$\Delta\boldsymbol{y} = \texttt{dCoef} \cdot \Delta\dot{\boldsymbol{y}} \tag{6.27}$$

be negligible with respect to $\Delta\dot{\boldsymbol{y}}$.

Assuming the above is true, during this phase the update procedure of the Newton iteration is modified. Instead of computing

$$\dot{\boldsymbol{y}}^{(i+1)} = \dot{\boldsymbol{y}}^{(i)} + \Delta\dot{\boldsymbol{y}} \tag{6.28a}$$

$$\boldsymbol{y}^{(i+1)} = \boldsymbol{y}^{(i)} + \texttt{dCoef} \cdot \Delta\dot{\boldsymbol{y}}, \tag{6.28b}$$

the "derivatives" update actually consists in

$$\dot{\boldsymbol{y}}^{(i+1)} = \dot{\boldsymbol{y}}^{(i)} + \Delta\dot{\boldsymbol{y}} \tag{6.29a}$$

$$\boldsymbol{y}^{(i+1)} = \boldsymbol{y}^{(i)}; \tag{6.29b}$$

namely, the initial value of $\boldsymbol{y}$ is preserved. This corresponds to performing a Newton iteration with an incomplete Jacobian matrix. For this purpose, nodes and elements that need to take this into account when updating internal states can provide a `DerivativesUpdate` method (declared in `SimulationEntity`).

To conclude, the "derivatives coefficient" defined in the input file is the "`dCoef`" of Eq. (6.26), which can be interpreted as the time step of a "fake" initial step that is used to compute the initial value of the highest order derivatives. It should be as small as possible, but too small makes the problem ill-conditioned (and 0 makes it structurally singular). The default value is usually fine (it rarely needs to be set, unless something really strange is going on).

If the initial derivatives phase requires more than one iteration this may mean that the system is impulsively loaded with inappropriate initial values of states; In this case, the number of iterations can be increased, by setting

```
derivatives coefficient: 1e-9;
derivatives tolerance: 1e-6;
derivatives max iterations: 10;
```

in the `initial value` block. If the solution does not converge, you should enable iterations output, adding

```
output: iterations;
```

in the `initial value` block. If you notice that the error settled to some value, and does not reduce as iterations progress, this means that the incomplete update of Eqs. (6.29) is preventing the problem from converging, because the initial value of $\boldsymbol{y}$ is compatible with the constraints but does not satisfy equilibrium.

In this case, one can play with the `derivatives coefficient` parameter, to emphasize the "inertia" terms instead of the "elastic" ones, or simply increase the `derivatives tolerance` so that the solution with the current `derivatives coefficient` is considered converged. The latter choice may result in a "rough" behavior of the solution during the initial steps of the simulation.

6.2.2 Dummy Steps

TODO

6.2.3 Regular Steps

TODO

6.3 Inverse Dynamics Problem

In principle, an inverse dynamics problem consists in computing the 'torques' (actuator forces) required to comply with equilibrium for a given configuration (position, velocity and acceleration) of the entire system.

In practice, in many cases the motion of the system is not directly known in terms of the coordinates that are used to describe it, but rather in terms of the prescribed motion of the 'joints' (the actuators) that apply the unknown torques. As a consequence, an inverse kinematics problem needs to be solved first, to determine the configuration of the system up to the acceleration level as a function of the motion prescribed to the end effector up to the acceleration level. Section 6.3.2 deals with the case of a fully actuated problem, i.e. a problem whose motion is completely prescribed in terms of joint coordinates. Section 6.3.4 deals with the case of an underactuated problem, i.e. a problem whose motion is only partially prescribed in terms of joint coordinates.

In many cases, even the motion of the actuators is not directly known. On the contrary, the motion of another part of the system (called the 'end effector') is prescribed, and the actuators' motion required

to move the end effector as prescribed needs to be computed. As a consequence, the inverse kinematics problem is driven by the motion prescribed to the end effector rather than directly to the joints. This case is specifically dealt with in Section 6.3.5.

6.3.1 Nomenclature

In the following, $\boldsymbol{x}$ are the n coordinates that describe the motion of the system;

$$\boldsymbol{\phi}(\boldsymbol{x}) = \mathbf{0} \tag{6.30}$$

are b so-called 'passive' constraints, namely those that describe the assembly of the system;

$$\boldsymbol{\vartheta}(\boldsymbol{x}) = \boldsymbol{\theta} \tag{6.31}$$

are j so-called 'joint coordinates', namely those that describe the motion $\boldsymbol{\theta}$ of the joints, with $\boldsymbol{\phi}_{/\boldsymbol{x}}\boldsymbol{\vartheta}^{+}_{/\boldsymbol{x}} \equiv \mathbf{0}$;

$$\boldsymbol{\psi}(\boldsymbol{x}) = \boldsymbol{\alpha}(t) \tag{6.32}$$

are c so-called 'control constraints', namely equations that prescribe the motion of the end effector, with $\boldsymbol{\phi}_{/\boldsymbol{x}}\boldsymbol{\psi}^{+}_{/\boldsymbol{x}} \equiv \mathbf{0}$. When the joint motion is directly prescribed, $\boldsymbol{\theta} \equiv \boldsymbol{\alpha}(t)$ and thus $\boldsymbol{\vartheta}(\boldsymbol{x}) \equiv \boldsymbol{\psi}(\boldsymbol{x})$. In some cases, a partial overlap may exist between the two sets of equations.

6.3.2 Fully Actuated, Collocated Problem

In this case, $\boldsymbol{\psi}(\boldsymbol{x}) \equiv \boldsymbol{\vartheta}(\boldsymbol{x})$ and $c = j = n - b$.

Inverse Kinematics: Position Subproblem

$$\boldsymbol{\phi}(\boldsymbol{x}) = \mathbf{0} \tag{6.33a}$$
$$\boldsymbol{\psi}(\boldsymbol{x}) = \boldsymbol{\alpha} \tag{6.33b}$$

using Newton-Raphson:

$$\begin{bmatrix} \boldsymbol{\phi}_{/\boldsymbol{x}} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} \end{bmatrix} \Delta\boldsymbol{x} = \begin{Bmatrix} -\boldsymbol{\phi}(\boldsymbol{x}) \\ \boldsymbol{\alpha} - \boldsymbol{\psi}(\boldsymbol{x}) \end{Bmatrix}. \tag{6.34}$$

Inverse Kinematics: Velocity Subproblem

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}} = \mathbf{0} \tag{6.35a}$$
$$\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}} = \dot{\boldsymbol{\alpha}} \tag{6.35b}$$

or

$$\begin{bmatrix} \boldsymbol{\phi}_{/\boldsymbol{x}} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} \end{bmatrix} \dot{\boldsymbol{x}} = \begin{Bmatrix} \mathbf{0} \\ \dot{\boldsymbol{\alpha}} \end{Bmatrix}. \tag{6.36}$$

Inverse Kinematics: Acceleration Subproblem

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}} = -\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.37a}$$
$$\boldsymbol{\psi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{\alpha}} - \left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.37b}$$

or

$$\begin{bmatrix} \boldsymbol{\phi}_{/\boldsymbol{x}} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} \end{bmatrix} \ddot{\boldsymbol{x}} = \begin{Bmatrix} -\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \\ \ddot{\boldsymbol{\alpha}} - \left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \end{Bmatrix}. \tag{6.38}$$

Inverse Dynamics Subproblem

$$\boldsymbol{M}\ddot{\boldsymbol{x}} + \boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T\boldsymbol{c} = \boldsymbol{f} \tag{6.39}$$

or

$$\begin{bmatrix} \boldsymbol{\phi}_{/\boldsymbol{x}} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} \end{bmatrix}^T \begin{Bmatrix} \boldsymbol{\lambda} \\ \boldsymbol{c} \end{Bmatrix} = \boldsymbol{f} - \boldsymbol{M}\ddot{\boldsymbol{x}}. \tag{6.40}$$

The matrix of the Newton-Raphson problem for the position is identical to the matrices of the linear problems for the velocity and the acceleration, while the inverse dynamics problem uses its transpose, so the same factorization can be easily reused.

6.3.3 Fully Actuated, Non-Collocated Problem

In this case, $\boldsymbol{\psi}(\boldsymbol{x}) \neq \boldsymbol{\vartheta}(\boldsymbol{x})$, but still $c = j = n - b$.

Inverse Kinematics: Position, Velocity and Acceleration Subproblems

The position, velocity and acceleration subproblems that define the inverse kinematics problem are identical to those of the collocated case of Section 6.3.2.

Inverse Dynamics Subproblem

$$\boldsymbol{M}\ddot{\boldsymbol{x}} + \boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda} + \boldsymbol{\vartheta}_{/\boldsymbol{x}}^T\boldsymbol{c} = \boldsymbol{f} \tag{6.41}$$

or

$$\begin{bmatrix} \boldsymbol{\phi}_{/\boldsymbol{x}} \\ \boldsymbol{\vartheta}_{/\boldsymbol{x}} \end{bmatrix}^T \begin{Bmatrix} \boldsymbol{\lambda} \\ \boldsymbol{c} \end{Bmatrix} = \boldsymbol{f} - \boldsymbol{M}\ddot{\boldsymbol{x}}. \tag{6.42}$$

The inverse dynamics problem uses a different matrix from the transpose of that that was used for the inverse kinematics subproblems.

6.3.4 Underdetermined, Underactuated but Collocated Problem

In this case, again $\boldsymbol{\psi}(\boldsymbol{x}) \equiv \boldsymbol{\vartheta}(\boldsymbol{x})$ but $c = j < n - b$.

Inverse Kinematics: Position Subproblem

Constraint equations:

$$\boldsymbol{\phi}(\boldsymbol{x}) = \boldsymbol{0} \tag{6.43a}$$

$$\boldsymbol{\psi}(\boldsymbol{x}) = \boldsymbol{\alpha}(t) \tag{6.43b}$$

with $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\psi}_{/\boldsymbol{x}}$ rectangular, full row rank. The problem is underdetermined; as a consequence, some criteria are needed to find an optimal solution.

The problem can be augmented by

$$\boldsymbol{K}(\boldsymbol{x} - \boldsymbol{x}_0) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T\boldsymbol{\mu} = \boldsymbol{0} \tag{6.44}$$

This nonlinear problem is solved for $\boldsymbol{x}$, $\boldsymbol{\lambda}$ and $\boldsymbol{\mu}$ to convergence ($\boldsymbol{K}$, $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\psi}_{/\boldsymbol{x}}$ may further depend on $\boldsymbol{x}$). It corresponds to a least-squares solution for $\boldsymbol{x} - \boldsymbol{x}_0$, where the quadratic form

$$J_{\boldsymbol{x}} = \frac{1}{2} (\boldsymbol{x} - \boldsymbol{x}_0)^T \boldsymbol{K} (\boldsymbol{x} - \boldsymbol{x}_0) \tag{6.45}$$

is minimized subjected to $\boldsymbol{\phi} = \boldsymbol{0}$ and $\boldsymbol{\psi} = \boldsymbol{\alpha}$, and weighted by matrix $\boldsymbol{K}$; $\boldsymbol{x}_0$ is a reference solution. Matrix $\boldsymbol{K}$ can further depend on $\boldsymbol{x}$.

The reference solution $\boldsymbol{x}_0$ can be used to further control the quality of the solution. For example, it may represent a prescribed tentative, although possibly incompatible, trajectory. Another option consists in augmenting $J_{\boldsymbol{x}}$ with another quadratic form

$$J_{\boldsymbol{x}} = \frac{1}{2} (\boldsymbol{x} - \boldsymbol{x}_0)^T \boldsymbol{K} (\boldsymbol{x} - \boldsymbol{x}_0) + w_{\boldsymbol{x}} \frac{1}{2} (\boldsymbol{x} - \boldsymbol{x}_{\text{prev}})^T \boldsymbol{M} (\boldsymbol{x} - \boldsymbol{x}_{\text{prev}}) \tag{6.46}$$

where $\boldsymbol{x}_{\text{prev}}$ is the value of $\boldsymbol{x}$ at the previous time step. This modified quadratic form weights the rate of change of $\boldsymbol{x}$ within two consecutive steps. As a consequence, minimal position changes (i.e. velocities), weighted by the mass of the system, are sought. The corresponding problem is

$$\boldsymbol{K} (\boldsymbol{x} - \boldsymbol{x}_0) + w_{\boldsymbol{x}} \boldsymbol{M} (\boldsymbol{x} - \boldsymbol{x}_{\text{prev}}) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T \boldsymbol{\mu} = \boldsymbol{0} \tag{6.47a}$$

$$\boldsymbol{\phi} (\boldsymbol{x}) = \boldsymbol{0} \tag{6.47b}$$

$$\boldsymbol{\psi} (\boldsymbol{x}) = \boldsymbol{\alpha}, \tag{6.47c}$$

or

$$(\boldsymbol{K} + w_{\boldsymbol{x}} \boldsymbol{M}) \boldsymbol{x} + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T \boldsymbol{\mu} = \boldsymbol{K} \boldsymbol{x}_0 + w_{\boldsymbol{x}} \boldsymbol{M} \boldsymbol{x}_{\text{prev}} \tag{6.48a}$$

$$\boldsymbol{\phi} (\boldsymbol{x}) = \boldsymbol{0} \tag{6.48b}$$

$$\boldsymbol{\psi} (\boldsymbol{x}) = \boldsymbol{\alpha}. \tag{6.48c}$$

Using Newton-Raphson:

$$\begin{bmatrix} \boldsymbol{K} + w_{\boldsymbol{x}} \boldsymbol{M} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{\psi}_{/\boldsymbol{x}}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \Delta \boldsymbol{x} \\ \Delta \boldsymbol{\lambda} \\ \Delta \boldsymbol{\mu} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{K} (\boldsymbol{x}_0 - \boldsymbol{x}) + w_{\boldsymbol{x}} \boldsymbol{M} (\boldsymbol{x}_{\text{prev}} - \boldsymbol{x}) - \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda} - \boldsymbol{\psi}_{/\boldsymbol{x}}^T \boldsymbol{\mu} \\ -\boldsymbol{\phi} (\boldsymbol{x}) \\ \boldsymbol{\alpha}(t) - \boldsymbol{\psi} (\boldsymbol{x}) \end{Bmatrix} \tag{6.49}$$

Inverse Kinematics: Velocity Subproblem

Constraint first derivative:

$$\boldsymbol{R} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0) + \boldsymbol{\phi}_{/\boldsymbol{x}}^T \boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T \boldsymbol{\mu} = \boldsymbol{0} \tag{6.50a}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}} \dot{\boldsymbol{x}} = \boldsymbol{0} \tag{6.50b}$$

$$\boldsymbol{\psi}_{/\boldsymbol{x}} \dot{\boldsymbol{x}} = \dot{\boldsymbol{\alpha}}. \tag{6.50c}$$

In analogy with the position constraint case, it corresponds to minimizing the quadratic form

$$J_{\dot{\boldsymbol{x}}} = \frac{1}{2} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0)^T \boldsymbol{R} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0), \tag{6.51}$$

which can be augmented as well, resulting in

$$J_{\dot{\boldsymbol{x}}} = \frac{1}{2} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0)^T \boldsymbol{R} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0) + w_{\dot{\boldsymbol{x}}} \frac{1}{2} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_{\text{prev}})^T \boldsymbol{M} (\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_{\text{prev}}), \tag{6.52}$$

to minimize the velocity increment between two consecutive time steps. The corresponding problem is

$$(\boldsymbol{R} + w_{\dot{\boldsymbol{x}}}\boldsymbol{M})\,\dot{\boldsymbol{x}} + \boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}^T\boldsymbol{\mu} = \boldsymbol{R}\dot{\boldsymbol{x}}_0 + w_{\dot{\boldsymbol{x}}}\boldsymbol{M}\dot{\boldsymbol{x}}_{\text{prev}} \tag{6.53a}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}} = \boldsymbol{0} \tag{6.53b}$$

$$\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}} = \dot{\boldsymbol{\alpha}}, \tag{6.53c}$$

or

$$\begin{bmatrix} \boldsymbol{R} + w_{\dot{\boldsymbol{x}}}\boldsymbol{M} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{\psi}_{/\boldsymbol{x}}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \dot{\boldsymbol{x}} \\ \boldsymbol{\lambda} \\ \boldsymbol{\mu} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{R}\dot{\boldsymbol{x}}_0 + w_{\dot{\boldsymbol{x}}}\boldsymbol{M}\dot{\boldsymbol{x}}_{\text{prev}} \\ \boldsymbol{0} \\ \dot{\boldsymbol{\alpha}} \end{Bmatrix}. \tag{6.54}$$

The constraint derivative problem is linear in $\dot{\boldsymbol{x}}$; the same symbols $\boldsymbol{\lambda}$ and $\boldsymbol{\mu}$ are used for the multipliers since they are ineffective (their value is never used). The problems can be solved sequentially. Only in case $\boldsymbol{K} \equiv \boldsymbol{R}$ and $w_{\boldsymbol{x}} \equiv w_{\dot{\boldsymbol{x}}}$ both problems use the same matrix and thus the same factorization can be reused.

Inverse Dynamics Subproblem

The second derivative of the constraint cannot be resolved as in the fully actuated case, otherwise it could yield accelerations that cannot be imposed by the constraints. On the contrary, the inverse dynamics problem of Eq. (6.39) is directly solved, yielding both the accelerations and the torques,

$$\boldsymbol{M}\ddot{\boldsymbol{x}} + \boldsymbol{\phi}_{/\boldsymbol{x}}\boldsymbol{\lambda} + \boldsymbol{\psi}_{/\boldsymbol{x}}\boldsymbol{c} = \boldsymbol{f} \tag{6.55a}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}} = -\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.55b}$$

$$\boldsymbol{\psi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{\alpha}} - \left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.55c}$$

or

$$\begin{bmatrix} \boldsymbol{M} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{\psi}_{/\boldsymbol{x}}^T \\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{\psi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \ddot{\boldsymbol{x}} \\ \boldsymbol{\lambda} \\ \boldsymbol{c} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{f} \\ -\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \\ \ddot{\boldsymbol{\alpha}} - \left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \end{Bmatrix} \tag{6.56}$$

As a consequence, the same structure of the inverse kinematic problems is achieved, and the last problem of Eq. (6.56) directly yields both accelerations and multipliers.

6.3.5 Underdetermined, Overcontrolled Problem

In this case, $\boldsymbol{\psi}(\boldsymbol{x}) \neq \boldsymbol{\vartheta}(\boldsymbol{x})$, $c < n - b$, $j = n - b$, which implies $c < j$. This is the case, for example, of an inverse biomechanics problem, where each degree of freedom is a joint commanded by a set of muscles. The inverse kinematics problem is solved by prescribing the motion of some part (e.g. a hand or a foot) in order to determine an 'optimal' (e.g. in terms of maximal ergonomy) motion. Then, an inverse dynamics problem is computed by freeing the part whose motion was initially prescribed, and by computing the torque required by all joints.

Inverse Kinematics: Position and Velocity Subproblems

The constraint and its first derivative are dealt with as in Section 6.3.4.

Inverse Kinematics: Acceleration Subproblem

Constraint second derivative:

$$\boldsymbol{M}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_0\right)+\boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda}+\boldsymbol{\psi}_{/\boldsymbol{x}}^T\boldsymbol{\mu}=\boldsymbol{0} \tag{6.57a}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}}=-\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.57b}$$

$$\boldsymbol{\psi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}}=\ddot{\boldsymbol{\alpha}}-\left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}}. \tag{6.57c}$$

In analogy with the position constraint case, it corresponds to minimizing the quadratic form

$$J_{\ddot{\boldsymbol{x}}}=\frac{1}{2}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_0\right)^T\boldsymbol{M}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_0\right), \tag{6.58}$$

which can be augmented as well, resulting in

$$J_{\ddot{\boldsymbol{x}}}=\frac{1}{2}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_0\right)^T\boldsymbol{M}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_0\right)+w_{\ddot{\boldsymbol{x}}}\frac{1}{2}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_{\text{prev}}\right)^T\boldsymbol{M}\left(\ddot{\boldsymbol{x}}-\ddot{\boldsymbol{x}}_{\text{prev}}\right), \tag{6.59}$$

to minimize the acceleration increment between two consecutive time steps. The corresponding problem is

$$\left(1+w_{\ddot{\boldsymbol{x}}}\right)\boldsymbol{M}\ddot{\boldsymbol{x}}+\boldsymbol{\phi}_{/\boldsymbol{x}}^T\boldsymbol{\lambda}+\boldsymbol{\psi}_{/\boldsymbol{x}}^T\boldsymbol{\mu}=\boldsymbol{M}\ddot{\boldsymbol{x}}_0+w_{\ddot{\boldsymbol{x}}}\boldsymbol{M}\ddot{\boldsymbol{x}}_{\text{prev}} \tag{6.60a}$$

$$\boldsymbol{\phi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}}=-\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}} \tag{6.60b}$$

$$\boldsymbol{\psi}_{/\boldsymbol{x}}\ddot{\boldsymbol{x}}=\ddot{\boldsymbol{\alpha}}-\left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}}, \tag{6.60c}$$

or

$$\begin{bmatrix}\left(1+w_{\ddot{\boldsymbol{x}}}\right)\boldsymbol{M} & \boldsymbol{\phi}_{/\boldsymbol{x}}^T & \boldsymbol{\psi}_{/\boldsymbol{x}}^T\\ \boldsymbol{\phi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0}\\ \boldsymbol{\psi}_{/\boldsymbol{x}} & \boldsymbol{0} & \boldsymbol{0}\end{bmatrix}\begin{Bmatrix}\ddot{\boldsymbol{x}}\\ \boldsymbol{\lambda}\\ \boldsymbol{\mu}\end{Bmatrix}=\begin{Bmatrix}\boldsymbol{M}\ddot{\boldsymbol{x}}_0+w_{\ddot{\boldsymbol{x}}}\boldsymbol{M}\ddot{\boldsymbol{x}}_{\text{prev}}\\ -\left(\boldsymbol{\phi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\\ \ddot{\boldsymbol{\alpha}}-\left(\boldsymbol{\psi}_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\right)_{/\boldsymbol{x}}\dot{\boldsymbol{x}}\end{Bmatrix}. \tag{6.61}$$

Inverse Dynamics Subproblem

The inverse dynamics subproblem is identical to that of the fully determined, non-collocated case, Eq. (6.41).

Implementation

- during 'position' inverse kinematics substep:
  - assemble $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\phi}_{/\boldsymbol{x}}^T$ for passive constraints
  - assemble $\boldsymbol{\psi}_{/\boldsymbol{x}}$ and $\boldsymbol{\psi}_{/\boldsymbol{x}}^T$ for prescribed motion
  - assemble equations related to $\boldsymbol{\vartheta}_{/\boldsymbol{x}}$ as $\boldsymbol{c}=\boldsymbol{0}$ to neutralize them
  - assemble dummy springs
  - optionally assemble mass matrix contribution weighted by $w_{/\boldsymbol{x}}$
- during 'velocity' inverse kinematics substep:
  - assemble $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\phi}_{/\boldsymbol{x}}^T$ for passive constraints
  - assemble $\boldsymbol{\psi}_{/\boldsymbol{x}}$ and $\boldsymbol{\psi}_{/\boldsymbol{x}}^T$ for prescribed motion

  - assemble equations related to $\boldsymbol{\vartheta}_{/\boldsymbol{x}}$ as $\boldsymbol{c} = \boldsymbol{0}$ to neutralize them
  - assemble dummy dampers
  - optionally assemble mass matrix contribution weighted by $w_{/\dot{\boldsymbol{x}}}$
- during 'acceleration' inverse kinematics substep:
  - assemble $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\phi}^T_{/\boldsymbol{x}}$ for passive constraints
  - assemble $\boldsymbol{\psi}_{/\boldsymbol{x}}$ and $\boldsymbol{\psi}^T_{/\boldsymbol{x}}$ for prescribed motion
  - assemble equations related to $\boldsymbol{\vartheta}_{/\boldsymbol{x}}$ as $\boldsymbol{c} = \boldsymbol{0}$ to neutralize them
  - assemble mass matrix contribution, optionally weighted by $(1 + w_{/\ddot{\boldsymbol{x}}})$
- during inverse dynamics substep:
  - assemble $\boldsymbol{\phi}_{/\boldsymbol{x}}$ and $\boldsymbol{\phi}^T_{/\boldsymbol{x}}$ for passive constraints
  - assemble $\boldsymbol{\vartheta}_{/\boldsymbol{x}}$ and $\boldsymbol{\vartheta}^T_{/\boldsymbol{x}}$ for torques
  - assemble equations related to $\boldsymbol{\psi}_{/\boldsymbol{x}}$ as $\boldsymbol{\mu} = \boldsymbol{0}$ to neutralize them
  - assemble other elements (external forces, springs, etc.)

Chapter 7

Data Structure

(This chapter is a mess.)

7.1 Constitutive Laws

Code that uses constitutive laws requires

$$\boldsymbol{f} = \boldsymbol{f}\left(\boldsymbol{\epsilon}, \dot{\boldsymbol{\epsilon}}, t, \ldots\right) \tag{7.1}$$

where $\boldsymbol{f}$ can be 1, 3, and 6 dimensional. Similarly, $\boldsymbol{\epsilon}$ and $\dot{\boldsymbol{\epsilon}}$ respectively are 1, 3, and 6 dimensional (scalar, `Vec3`, and `Vec6`).

The `ConstitutiveLaw` provides

$$\texttt{GetF()} = \boldsymbol{f}\left(\boldsymbol{\epsilon}, \dot{\boldsymbol{\epsilon}}, t, \ldots\right) \tag{7.2a}$$

$$\texttt{GetFDE()} = \frac{\partial \boldsymbol{f}}{\partial \boldsymbol{\epsilon}} \tag{7.2b}$$

$$\texttt{GetFDEPrime()} = \frac{\partial \boldsymbol{f}}{\partial \dot{\boldsymbol{\epsilon}}} \tag{7.2c}$$

The values returned by these methods are updated by a call to `Update()`.

7.2 ExpandableRowVector

`ExpandableRowVector` is a class that supports the computation of nested Jacobian matrices.

Consider a scalar y that depends on a set of variables $\boldsymbol{k}$, namely $y = y\left(\boldsymbol{k}\right)$. The generic variable k_i, in turn, may be directly a subset of the variables of the problem, $\boldsymbol{x}$, with $k_i = x_j$, or depend on them either directly, namely $k_i = k_i\left(\boldsymbol{x}\right)$, or indirectly, namely $k_i = k_i\left(\boldsymbol{k}'\left(\boldsymbol{x}\right)\right)$ and so on, with as many levels of recursion as needed, namely

$$\frac{\partial y}{\partial x_j} = \sum_i \frac{\partial y}{\partial k_i} \left(\sum_{i'} \frac{\partial k_i}{\partial k'_{i'}} \left(\cdots \sum_j \frac{\partial k^{(n)}_{i^{(n)}}}{\partial x_j} \right) \right) . \tag{7.3}$$

The computation of the contribution of y to the Jacobian matrix of the problem requires the capability to assemble the partial derivatives of y with respect to the variables $\boldsymbol{x}$ in the appropriate locations.

The `ExpandableRowVector` allows to associate each partial derivative of y with respect to the variables $\boldsymbol{k}$ it depends on, namely $y_{/k_i}$, to either

a) its index, if k_i is directly a variable of the problem, $k_i \rightarrow x_j$, or

b) to another `ExpandableRowVector` that contains the partial derivatives of the corresponding k_i with respect to the variables it depends on.

Since the assembly of the contributions to the Jacobian matrix of the problem is usually done using submatrices, within an element the association between a coefficient and a problem variable is not done based on the absolute numbering of the variable, but rather on a local numbering within the submatrix. The submatrix in turn will take care of mapping local indexing to global indexing when it is assembled to the global Jacobian matrix of the problem.

When the variable k_i directly corresponds to the problem variable x_j, the `ExpandableRowVector` provides a method to associate one of its elements to the problem variable indexing within the submatrix. So, if $k_i \rightarrow x_j$, and the global index j corresponds to index `ip` in the submatrix,

```
v.Set(y_{/k_i}, i, ip)
```

simultaneously sets the value $y_{/k_i}$ and the variable subindex `ip` of the `i`-th element of vector `v`.

Alternatively, the method

```
v.SetIdx(i, ip)
```

associates the variable subindex `ip` to the `i`-th element of the vector.

When k_i is a function of a set of variables, and its partial derivatives with respect to those variables are stored in another `ExpandableRowVector` $\boldsymbol{w}$, the method

```
v.Link(i, &w)
```

allows to associate vector `w` to the `i`-th element of vector `v`.

As soon as $\boldsymbol{v}$ is assembled, it can be contributed to a specific equation (row) of a Jacobian matrix.

For example, calling the method

```
void
AddTo(FullSubMatrixHandler& WM,
    const integer eq,
    const doublereal c = 1.) const
```

of vector `v` corresponds to

```
for (integer j = 1; j <= n; j++) {
    WM(eq, idx(j)) += c*v(j);
}
```

where `idx` is the vector that contains the submatrix indexes of the elements of $\boldsymbol{v}$, as set by the `SetIdx()` method.

The `SubFrom` method takes the same arguments of `AddTo`, but subtracts instead of adding.

If another `ExpandableRowVector` is linked to the `i`-th element of vector $\boldsymbol{v}$, the related operation on the submatrix is propagated recursively as

```
for (integer j = 1; j <= n; j++) {
    if ( /* linked to another ExpandableRowVector */ ) {
        // propagate operation
        xm(j)->AddTo(WM, eq, c*v(j));
    } else {
        WM(eq, idx(j)) += c*v(j);
    }
}
```

where `xm` is the container of the pointers to the linked `ExpandableRowVector`.

Blocks of equations can be added simultaneously using the method

```
void
AddTo(FullSubMatrixHandler& WM,
    const std::vector<integer>& eq,
    const std::vector<doublereal>& cc,
    const doublereal c = 1.) const
```

The same operation illustrated above is performed on each equation whose subindex is stored in the array `eq`, weighed by the coefficients stored in the array `cc`.

A similar method allows to build a subvector. Its use is currently undocumented.

Example.

```
ExpandableRowVector v(4);
ExpandableRowVector w(2);
FullSubMatrixHandler m(6, 9);

w.Set(10., 1, 8);
w.Set(20., 2, 9);

v.Set(1., 1, 4);
v.Set(2., 2, 5);
v.Set(3., 3, 6);
v.Set(10., 4);
v.Link(4, &w);

v.AddTo(m, 5, 1.);

//       col.  1   2   3   4   5   6   7     8     9
// m(5, :) = { 0., 0., 0., 1., 2., 3., 0., 100., 200. }

std::vector<integer> eq(3);
std::vector<doublereal> cc(3);
eq[0] = 1; cc[0] = 1.;
eq[1] = 2; cc[1] = 2.;
eq[2] = 3; cc[2] = 3.;

v.AddTo(m, eq, cc, 1.);

//       col.  1   2   3   4   5   6   7     8     9
// m(1, :) = { 0., 0., 0., 1., 2., 3., 0., 100., 200. }
// m(2, :) = { 0., 0., 0., 2., 4., 6., 0., 200., 400. }
// m(3, :) = { 0., 0., 0., 3., 6., 9., 0., 300., 600. }
```

Chapter 8

Nodes

8.1 Structural Nodes

Structural nodes provide the kinematics unknowns and the corresponding equilibrium equations.

8.1.1 Dynamic Structural Nodes

The dynamic structural node also provides momentum and momenta moment unknowns, and the equations that represent their definition in terms of the inertia properties and the node's kinematics:

$$\begin{aligned}\boldsymbol{\beta} &= m\dot{\boldsymbol{x}}_{\mathrm{CM}} \\ &= m\left(\dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{b}\right) \\ &= m\dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{s} \end{aligned} \tag{8.1a}$$

$$\begin{aligned}\boldsymbol{\gamma} &= \boldsymbol{\gamma}_{\mathrm{CM}} + \boldsymbol{b}\times\boldsymbol{\beta} \\ &= \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{b}\times\boldsymbol{\beta} \\ &= \boldsymbol{s}\times\dot{\boldsymbol{x}} + \boldsymbol{J}\boldsymbol{\omega}, \end{aligned} \tag{8.1b}$$

where

$$\boldsymbol{b} = \frac{\boldsymbol{s}}{m} \tag{8.2}$$

is the distance between the node and the CM of the body, which is constant in the reference frame of the node for a rigid body, and $\boldsymbol{J} = \boldsymbol{J}_{\mathrm{CM}} + m\boldsymbol{b}\times\boldsymbol{b}\times^{T}$.

The contribution to the equations of motion (Newton-Euler) is

$$\boldsymbol{f}_{\mathrm{in}} = \dot{\boldsymbol{\beta}} \tag{8.3a}$$

$$\begin{aligned}\boldsymbol{m}_{\mathrm{in}} &= \dot{\boldsymbol{\gamma}}_{\mathrm{CM}} + \boldsymbol{b}\times\boldsymbol{f}_{\mathrm{in}} \\ &= \dot{\boldsymbol{\gamma}} - (\boldsymbol{\omega}\times\boldsymbol{b})\times\boldsymbol{\beta} \\ &= \dot{\boldsymbol{\gamma}} - m\left(\boldsymbol{\omega}\times\boldsymbol{b}\right)\times\left(\dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{b}\right) \\ &= \dot{\boldsymbol{\gamma}} + m\dot{\boldsymbol{x}}\times\left(\boldsymbol{\omega}\times\boldsymbol{b}\right) \\ &= \dot{\boldsymbol{\gamma}} + m\dot{\boldsymbol{x}}\times\left(\dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{b}\right) \\ &= \dot{\boldsymbol{\gamma}} + \dot{\boldsymbol{x}}\times\boldsymbol{\beta} \end{aligned} \tag{8.3b}$$

The perturbation of the momentum and momenta moment definitions yields

$$\delta\boldsymbol{\beta} = m\delta\dot{\boldsymbol{x}} - \boldsymbol{s}\times\delta\boldsymbol{\omega} - \boldsymbol{\omega}\times\boldsymbol{s}\times\boldsymbol{\theta}_\delta \tag{8.4a}$$

$$\delta\boldsymbol{\gamma} = \boldsymbol{s}\times\delta\dot{\boldsymbol{x}} + \boldsymbol{J}\delta\boldsymbol{\omega} + (\dot{\boldsymbol{x}}\times\boldsymbol{s}\times - (\boldsymbol{J}\boldsymbol{\omega})\times + \boldsymbol{J}\boldsymbol{\omega}\times)\,\boldsymbol{\theta}_\delta \tag{8.4b}$$

The perturbation of the inertia force and moment yields

$$\delta\boldsymbol{f}_{\text{in}} = \delta\dot{\boldsymbol{\beta}} \tag{8.5a}$$

$$\delta\boldsymbol{m}_{\text{in}} = \delta\dot{\boldsymbol{\gamma}} - \boldsymbol{\beta}\times\delta\dot{\boldsymbol{x}} + \dot{\boldsymbol{x}}\times\delta\boldsymbol{\beta} \tag{8.5b}$$

Accelerations

Since momentum and momenta moments are used as the unknowns that take care of inertia, linear and angular accelerations are not directly available from the simulation. They are computed, on demand, as postprocessing from the derivatives of the definitions of the momentum and the momenta moment.

The differentiation of Equations (8.1) yields

$$\dot{\boldsymbol{\beta}} = m\ddot{\boldsymbol{x}} + \dot{\boldsymbol{\omega}}\times\boldsymbol{s} + \boldsymbol{\omega}\times\boldsymbol{\omega}\times\boldsymbol{s} \tag{8.6a}$$

$$\dot{\boldsymbol{\gamma}} = (\boldsymbol{\omega}\times\boldsymbol{s})\times\dot{\boldsymbol{x}} + \boldsymbol{s}\times\ddot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{J}\boldsymbol{\omega} + \boldsymbol{J}\dot{\boldsymbol{\omega}}. \tag{8.6b}$$

As a consequence, the linear and angular accelerations are computed as

$$\dot{\boldsymbol{\omega}} = \boldsymbol{J}_{\text{CM}}^{-1}\left(\dot{\boldsymbol{\gamma}} - \boldsymbol{b}\times\dot{\boldsymbol{\beta}} + \dot{\boldsymbol{x}}\times\boldsymbol{\beta} - \boldsymbol{\omega}\times\boldsymbol{J}_{\text{CM}}\boldsymbol{\omega}\right) \tag{8.7}$$

$$\begin{aligned}\ddot{\boldsymbol{x}} &= \frac{1}{m}\left(\dot{\boldsymbol{\beta}} - \dot{\boldsymbol{\omega}}\times\boldsymbol{s} - \boldsymbol{\omega}\times\boldsymbol{\omega}\times\boldsymbol{s}\right)\\ &= \left(\frac{1}{m}\boldsymbol{I} + \boldsymbol{b}\times^T\boldsymbol{J}_{\text{CM}}^{-1}\boldsymbol{b}\times\right)\dot{\boldsymbol{\beta}} - \boldsymbol{b}\times^T\boldsymbol{J}_{\text{CM}}^{-1}\dot{\boldsymbol{\gamma}} - \boldsymbol{b}\times^T\boldsymbol{J}_{\text{CM}}^{-1}\left(\dot{\boldsymbol{x}}\times\boldsymbol{\beta} - \boldsymbol{\omega}\times\boldsymbol{J}_{\text{CM}}\boldsymbol{\omega}\right),\end{aligned} \tag{8.8}$$

namely

$$\left\{\begin{array}{c}\ddot{\boldsymbol{x}}\\ \dot{\boldsymbol{\omega}}\end{array}\right\} = \boldsymbol{M}^{-1}\left\{\begin{array}{c}\dot{\boldsymbol{\beta}}\\ \dot{\boldsymbol{\gamma}}\end{array}\right\} + \left[\begin{array}{c}-\boldsymbol{b}\times^T\\ \boldsymbol{I}\end{array}\right]\boldsymbol{J}_{\text{CM}}^{-1}\left(\dot{\boldsymbol{x}}\times\boldsymbol{\beta} - \boldsymbol{\omega}\times\boldsymbol{J}_{\text{CM}}\boldsymbol{\omega}\right) \tag{8.9}$$

Note on the inverse of the mass matrix

The mass matrix is

$$\boldsymbol{M} = \left[\begin{array}{cc} m\boldsymbol{I} & \boldsymbol{s}\times^T\\ \boldsymbol{s}\times & \boldsymbol{J}\end{array}\right] \tag{8.10}$$

Its inverse is

$$\begin{aligned}\boldsymbol{M}^{-1} &= \left[\begin{array}{cc} \left(m\boldsymbol{I} - \boldsymbol{s}\times^T\boldsymbol{J}^{-1}\boldsymbol{s}\times\right)^{-1} & -\frac{1}{m}\boldsymbol{s}\times^T\left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s}\times\boldsymbol{s}\times^T\right)^{-1}\\ -\frac{1}{m}\left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s}\times\boldsymbol{s}\times^T\right)^{-1}\boldsymbol{s}\times & \left(\boldsymbol{J} - \frac{1}{m}\boldsymbol{s}\times\boldsymbol{s}\times^T\right)^{-1}\end{array}\right]\\ &= \left[\begin{array}{cc}\frac{1}{m}\boldsymbol{I} + \boldsymbol{b}\times^T\boldsymbol{J}_{\text{CM}}^{-1}\boldsymbol{b}\times & -\boldsymbol{b}\times^T\boldsymbol{J}_{\text{CM}}^{-1}\\ -\boldsymbol{J}_{\text{CM}}^{-1}\boldsymbol{b}\times & \boldsymbol{J}_{\text{CM}}^{-1}\end{array}\right].\end{aligned} \tag{8.11}$$

In fact, according to the matrix inversion lemma,

$$\left(m\boldsymbol{I} - \boldsymbol{s}\times {}^{T}\boldsymbol{J}^{-1}\boldsymbol{s}\times\right)^{-1} = \frac{1}{m}\boldsymbol{I} + \boldsymbol{b}\times {}^{T}\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{b}\times \tag{8.12}$$

(NOTE: simplifications when using updated-updated formulas).

Perturbation of momentum and momenta moment derivatives

According to Eqs. (8.4), the perturbation of the linear and angular velocity is

$$\left\{\begin{array}{c}\delta\dot{\boldsymbol{x}}\\ \delta\boldsymbol{\omega}\end{array}\right\} = \boldsymbol{M}^{-1}\left(\left\{\begin{array}{c}\delta\boldsymbol{\beta}\\ \delta\boldsymbol{\gamma}\end{array}\right\} - \left[\begin{array}{c}-\boldsymbol{\omega}\times\boldsymbol{s}\times\\ \dot{\boldsymbol{x}}\times\boldsymbol{s}\times\ -(\boldsymbol{J}\boldsymbol{\omega})\times\ +\boldsymbol{J}\boldsymbol{\omega}\times\end{array}\right]\boldsymbol{\theta}_{\delta}\right) \tag{8.13a}$$

The perturbation of the momentum and momenta moment derivatives is

$$\delta\dot{\boldsymbol{\beta}} = m\delta\ddot{\boldsymbol{x}} - \boldsymbol{s}\times\delta\dot{\boldsymbol{\omega}} - (\boldsymbol{\omega}\times\boldsymbol{s})\times\delta\boldsymbol{\omega} - \boldsymbol{\omega}\times\boldsymbol{s}\times\delta\boldsymbol{\omega} - \dot{\boldsymbol{\omega}}\times\boldsymbol{s}\times\boldsymbol{\theta}_{\delta} - \boldsymbol{\omega}\times\boldsymbol{\omega}\times\boldsymbol{s}\times\boldsymbol{\theta}_{\delta} \tag{8.14a}$$

$$\begin{aligned}\delta\dot{\boldsymbol{\gamma}} = {}& \boldsymbol{s}\times\delta\ddot{\boldsymbol{x}} + \boldsymbol{J}\delta\dot{\boldsymbol{\omega}} + (\boldsymbol{\omega}\times\boldsymbol{s})\times\delta\dot{\boldsymbol{x}} + \dot{\boldsymbol{x}}\times\boldsymbol{s}\times\delta\boldsymbol{\omega} + \boldsymbol{\omega}\times\boldsymbol{J}\delta\boldsymbol{\omega} - (\boldsymbol{J}\boldsymbol{\omega})\times\delta\boldsymbol{\omega}\\ & + \dot{\boldsymbol{x}}\times\boldsymbol{\omega}\times\boldsymbol{s}\times\boldsymbol{\theta}_{\delta} + \ddot{\boldsymbol{x}}\times\boldsymbol{s}\times\boldsymbol{\theta}_{\delta} - \boldsymbol{\omega}\times(\boldsymbol{J}\boldsymbol{\omega})\times\boldsymbol{\theta}_{\delta} + \boldsymbol{\omega}\times\boldsymbol{J}\boldsymbol{\omega}\times\boldsymbol{\theta}_{\delta} - (\boldsymbol{J}\dot{\boldsymbol{\omega}})\times\boldsymbol{\theta}_{\delta} + \boldsymbol{J}\dot{\boldsymbol{\omega}}\times\boldsymbol{\theta}_{\delta}.\end{aligned} \tag{8.14b}$$

As a consequence,

$$\begin{aligned}\left\{\begin{array}{c}\delta\ddot{\boldsymbol{x}}\\ \delta\dot{\boldsymbol{\omega}}\end{array}\right\} = \boldsymbol{M}^{-1}\Bigg(&\left\{\begin{array}{c}\dot{\boldsymbol{\beta}}\\ \dot{\boldsymbol{\gamma}}\end{array}\right\} - \left[\begin{array}{c}\boldsymbol{0}\\ (\boldsymbol{\omega}\times\boldsymbol{s})\times\end{array}\right]\delta\dot{\boldsymbol{x}} - \left[\begin{array}{c}-(\boldsymbol{\omega}\times\boldsymbol{s})\times\ -\boldsymbol{\omega}\times\boldsymbol{s}\times\\ \dot{\boldsymbol{x}}\times\boldsymbol{s}\times\ +\boldsymbol{\omega}\times\boldsymbol{J} - (\boldsymbol{J}\boldsymbol{\omega})\times\end{array}\right]\delta\boldsymbol{\omega}\\ &- \left[\begin{array}{c}-\dot{\boldsymbol{\omega}}\times\boldsymbol{s}\times\ -\boldsymbol{\omega}\times\boldsymbol{\omega}\times\boldsymbol{s}\times\\ \dot{\boldsymbol{x}}\times\boldsymbol{\omega}\times\boldsymbol{s}\times\ +\ddot{\boldsymbol{x}}\times\boldsymbol{s}\times\ -\boldsymbol{\omega}\times(\boldsymbol{J}\boldsymbol{\omega})\times\ +\boldsymbol{\omega}\times\boldsymbol{J}\boldsymbol{\omega}\times\ -(\boldsymbol{J}\dot{\boldsymbol{\omega}})\times\ +\boldsymbol{J}\dot{\boldsymbol{\omega}}\times\end{array}\right]\boldsymbol{\theta}_{\delta}\Bigg)\end{aligned} \tag{8.15}$$

(NOTE: simplifications when using updated-updated formulas).

Variable Mass Momentum:

$$\boldsymbol{\beta} = m\dot{\boldsymbol{x}}_{\mathrm{CM}} \tag{8.16}$$

with

$$\dot{\boldsymbol{x}}_{\mathrm{CM}} = \dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{b} + \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}. \tag{8.17}$$

$$\dot{\boldsymbol{\beta}} = m\ddot{\boldsymbol{x}}_{\mathrm{CM}} + \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}} \tag{8.18}$$

Eq. (8.3a) becomes

$$\boldsymbol{f}_{\mathrm{in}} = \dot{\boldsymbol{\beta}} - \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}}. \tag{8.19}$$

Only the portion of $\dot{\boldsymbol{\beta}}$ related to the change in mass is subtracted from the inertia forces; the portion related to the change in mass distribution, $\dot{\tilde{\boldsymbol{b}}}$, is retained.

Momenta moment:

$$\begin{aligned}\boldsymbol{\gamma} &= \boldsymbol{\gamma}_{\mathrm{CM}} + \boldsymbol{b}\times\boldsymbol{\beta}\\ &= \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{b}\times m\dot{\boldsymbol{x}}_{\mathrm{CM}}\end{aligned} \tag{8.20}$$

$$\dot{\boldsymbol{\gamma}}_{\mathrm{CM}} = \boldsymbol{\omega} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{J}_{\mathrm{CM}}\dot{\boldsymbol{\omega}} + \left(\boldsymbol{J}_{\mathrm{CM\ \ variable\ geometry}/t} + \boldsymbol{J}_{\mathrm{CM\ \ variable\ mass}/t}\right)\boldsymbol{\omega} \tag{8.21}$$

$$\begin{aligned}\dot{\boldsymbol{\gamma}} &= \dot{\boldsymbol{\gamma}}_{\mathrm{CM}} + \dot{\boldsymbol{b}} \times \boldsymbol{\beta} + \boldsymbol{b} \times \dot{\boldsymbol{\beta}} \\ &= \boldsymbol{\omega} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{J}_{\mathrm{CM}}\dot{\boldsymbol{\omega}} + \left(\boldsymbol{J}_{\mathrm{CM\ variable\ geometry}/t} + \boldsymbol{J}_{\mathrm{CM\ variable\ mass}/t}\right)\boldsymbol{\omega} \\ &+ \left(\boldsymbol{\omega} \times \boldsymbol{b} + \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \times \boldsymbol{\beta} + \boldsymbol{b} \times (m\ddot{\boldsymbol{x}}_{\mathrm{CM}} + \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}})\end{aligned} \tag{8.22}$$

Inertia moment of the whole body

$$\begin{aligned}\boldsymbol{m}_{\mathrm{in}} &= \dot{\boldsymbol{\gamma}}_{\mathrm{CM}} + \boldsymbol{b} \times \dot{\boldsymbol{\beta}} \\ &= \dot{\boldsymbol{\gamma}} - \dot{\boldsymbol{b}} \times \boldsymbol{\beta} \\ &= \boldsymbol{\omega} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{J}_{\mathrm{CM}}\dot{\boldsymbol{\omega}} + \left(\boldsymbol{J}_{\mathrm{CM\ variable\ geometry}/t} + \boldsymbol{J}_{\mathrm{CM\ variable\ mass}/t}\right)\boldsymbol{\omega} \\ &+ \boldsymbol{b} \times (m\ddot{\boldsymbol{x}}_{\mathrm{CM}} + \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}})\end{aligned} \tag{8.23}$$

Inertia moment of the whole body minus the mass that is lost

$$\boldsymbol{m}_{\mathrm{in}} = \dot{\boldsymbol{\gamma}} - \dot{\boldsymbol{b}} \times \boldsymbol{\beta} - \boldsymbol{J}_{\mathrm{CM\ variable\ mass}/t}\boldsymbol{\omega} - \boldsymbol{b} \times \dot{m}\dot{\boldsymbol{x}}_{\mathrm{CM}} \tag{8.24}$$

Only the portion of $\dot{\boldsymbol{\gamma}}$ related to the change in mass is subtracted from the inertia forces; the portion related to the change in mass distribution, $\boldsymbol{J}_{\mathrm{CM\ variable\ geometry}/t}$, is retained.

Actually, in the constant mass code, the term $\dot{\boldsymbol{b}} \times \boldsymbol{\beta}$ is written as $-\boldsymbol{v} \times \boldsymbol{\beta}$, exploiting its structure:

$$\begin{aligned}\dot{\boldsymbol{b}} \times \boldsymbol{\beta} &= m\,(\boldsymbol{\omega} \times \boldsymbol{b}) \times (\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b}) \\ &= m\,(\boldsymbol{\omega} \times \boldsymbol{b}) \times \boldsymbol{v} \\ &= m\,(\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b}) \times \boldsymbol{v} \\ &= \boldsymbol{\beta} \times \boldsymbol{v}\end{aligned} \tag{8.25}$$

In the variable mass case, this can be written as

$$\begin{aligned}\dot{\boldsymbol{b}} \times \boldsymbol{\beta} &= m\left(\boldsymbol{\omega} \times \boldsymbol{b} + \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \times \left(\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b} + \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \\ &= \boldsymbol{\beta} \times \boldsymbol{v} + m\left(\boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \times \left(\boldsymbol{v} + \boldsymbol{\omega} \times \boldsymbol{b} + \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) + m\,(\boldsymbol{\omega} \times \boldsymbol{b}) \times \boldsymbol{R}\dot{\tilde{\boldsymbol{b}}} \\ &= \boldsymbol{\beta} \times \boldsymbol{v} + m\left(\boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \times \boldsymbol{v}\end{aligned} \tag{8.26}$$

The correction term $\boldsymbol{\beta} \times \boldsymbol{v}$ is already included in the equations of motion by the `AutomaticStructuralElem` element associated with the underlying node; the correction term $m\left(\boldsymbol{R}\dot{\tilde{\boldsymbol{b}}}\right) \times \boldsymbol{v}$ must be explicitly applied by the `DynamicVariableBody` element.

Linearization: currently the `DynamicVariableBody` element does not contribute to the Jacobian matrix with respect to the variable inertia properties; only the original contribution of the constant inertia properties element is provided. This implies that the residual is exact to the required tolerance, while the Jacobian matrix is not; convergence should not be compromised as soon as moderate inertia variations are used.

8.1.2 Static Structural Nodes

Static structural nodes represent a degeneration of the dynamic ones, when the inertia is structurally null. In that case, no momentum nor momenta moment definition equations are instantiated, and their derivatives are always null. As a consequence, static nodes only instantiate their equilibrium equations.

8.1.3 Dummy Nodes

Dummy nodes are special structural nodes that do not directly participate in the analysis. In fact, they do not provide degrees of freedom; they rather present information associated with other structural nodes in a different manner, which is output in the `.mov` file much like if they were regular nodes.

Offset Dummy Node. The `offset` dummy structural node outputs the configuration of a reference frame that is rigidly offset from a base node (subscript b) by $\boldsymbol{b}_h$ and oriented by matrix $\boldsymbol{R}_h$ according to the transformation

$$\boldsymbol{x} = \boldsymbol{x}_b + \boldsymbol{R}_b \boldsymbol{b}_h \tag{8.27a}$$
$$\boldsymbol{R} = \boldsymbol{R}_b \boldsymbol{R}_h \tag{8.27b}$$
$$\dot{\boldsymbol{x}} = \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{R}_b \boldsymbol{b}_h \tag{8.27c}$$
$$\boldsymbol{\omega} = \boldsymbol{\omega}_b \tag{8.27d}$$
$$\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{x}}_b + (\dot{\boldsymbol{\omega}}_b \times \ + \boldsymbol{\omega}_b \times \boldsymbol{\omega}_b \times \ ) \boldsymbol{R}_b \boldsymbol{b}_h \tag{8.27e}$$
$$\dot{\boldsymbol{\omega}} = \dot{\boldsymbol{\omega}}_b \tag{8.27f}$$

Reference Frame Dummy Node. The `reference frame` dummy structural node outputs the configuration of the base node (subscript b) in the reference frame of a reference node (subscript r), optionally offset by $\boldsymbol{b}_h$ and with an orientation relative to r provided by matrix $\boldsymbol{R}_h$, according to the transformation

$$\overline{\boldsymbol{x}} = \boldsymbol{R}_h^T \left(\boldsymbol{R}_r^T \left(\boldsymbol{x}_b - \boldsymbol{x}_r \right) - \boldsymbol{b}_h \right) \tag{8.28a}$$
$$\overline{\boldsymbol{R}} = \boldsymbol{R}_h^T \boldsymbol{R}_r^T \boldsymbol{R}_b \tag{8.28b}$$
$$\overline{\dot{\boldsymbol{x}}} = \boldsymbol{R}_h^T \boldsymbol{R}_r^T \left(\dot{\boldsymbol{x}}_b - \dot{\boldsymbol{x}}_r - \boldsymbol{\omega}_r \times \left(\boldsymbol{x}_b - \boldsymbol{x}_r \right) \right) \tag{8.28c}$$
$$\overline{\boldsymbol{\omega}} = \boldsymbol{R}_h^T \boldsymbol{R}_r^T \left(\boldsymbol{\omega}_b - \boldsymbol{\omega}_r \right) \tag{8.28d}$$
$$\overline{\ddot{\boldsymbol{x}}} = \boldsymbol{R}_h^T \boldsymbol{R}_r^T \left(\ddot{\boldsymbol{x}}_b - \ddot{\boldsymbol{x}}_r - (\dot{\boldsymbol{\omega}}_r \times \ + \boldsymbol{\omega}_r \times \boldsymbol{\omega}_r \times \ ) \left(\boldsymbol{x}_b - \boldsymbol{x}_r \right) - 2 \boldsymbol{\omega}_r \times \left(\dot{\boldsymbol{x}}_b - \dot{\boldsymbol{x}}_r \right) \right) \tag{8.28e}$$
$$\overline{\dot{\boldsymbol{\omega}}} = \boldsymbol{R}_h^T \boldsymbol{R}_r^T \left(\dot{\boldsymbol{\omega}}_b - \dot{\boldsymbol{\omega}}_r - \boldsymbol{\omega}_r \times \boldsymbol{\omega}_b \right) \tag{8.28f}$$

Pivot Reference Frame Dummy Node. The `pivot reference frame` dummy node is a variant of the `reference frame` dummy node that outputs the configuration of the base node, expressed in the reference frame of the reference node, as if it were attached to the pivot node (subscript p), optionally offset by $\boldsymbol{b}_k$ and with an orientation relative to p provided by matrix $\boldsymbol{R}_k$, according to the transformation

$$\hat{\boldsymbol{x}} = \boldsymbol{x}_p + \boldsymbol{R}_p \left(\boldsymbol{R}_k \overline{\boldsymbol{x}} + \boldsymbol{b}_k \right) \tag{8.29a}$$
$$\hat{\boldsymbol{R}} = \boldsymbol{R}_p \boldsymbol{R}_k \overline{\boldsymbol{R}} \tag{8.29b}$$
$$\hat{\dot{\boldsymbol{x}}} = \dot{\boldsymbol{x}}_p + \boldsymbol{\omega}_p \times \boldsymbol{R}_p \left(\boldsymbol{R}_k \overline{\boldsymbol{x}} + \boldsymbol{b}_k \right) + \boldsymbol{R}_p \boldsymbol{R}_k \overline{\dot{\boldsymbol{x}}} \tag{8.29c}$$
$$\hat{\boldsymbol{\omega}} = \boldsymbol{\omega}_p + \boldsymbol{R}_p \boldsymbol{R}_k \overline{\boldsymbol{\omega}} \tag{8.29d}$$
$$\hat{\ddot{\boldsymbol{x}}} = \ddot{\boldsymbol{x}}_p + (\dot{\boldsymbol{\omega}}_p \times \ + \boldsymbol{\omega}_p \times \boldsymbol{\omega}_p \times \ ) \boldsymbol{R}_p \left(\boldsymbol{R}_k \overline{\boldsymbol{x}} + \boldsymbol{b}_k \right) + 2 \boldsymbol{\omega}_p \times \boldsymbol{R}_p \boldsymbol{R}_k \overline{\dot{\boldsymbol{x}}} + \boldsymbol{R}_p \boldsymbol{R}_k \overline{\ddot{\boldsymbol{x}}} \tag{8.29e}$$
$$\hat{\dot{\boldsymbol{\omega}}} = \dot{\boldsymbol{\omega}}_p + \boldsymbol{\omega}_p \times \boldsymbol{R}_p \boldsymbol{R}_k \overline{\boldsymbol{\omega}} + \boldsymbol{R}_p \boldsymbol{R}_k \overline{\dot{\boldsymbol{\omega}}} \tag{8.29f}$$

8.1.4 Relative Motion

MBDyn uses the absolute coordinates of the nodes, and their absolute orientation, to define the motion. Whenever the representation of the motion in a relative reference frame is required or convenient, it needs to be computed from the absolute one that is computed inside the code.

This is possible either run-time, by adding `dummy` structural nodes, or off-line, as a post-processing. For this purpose, the script `abs2rel.awk` is provided to convert the contents of the `.mov` file into the corresponding motion relative to a given node.

Absolute motion as function of relative (tilde) and reference (0) motion:

$$\boldsymbol{R} = \boldsymbol{R}_0\tilde{\boldsymbol{R}} \tag{8.30a}$$
$$\boldsymbol{x} = \boldsymbol{x}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{x}} \tag{8.30b}$$
$$\boldsymbol{\omega} = \boldsymbol{\omega}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{\omega}} \tag{8.30c}$$
$$\dot{\boldsymbol{x}} = \dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} \tag{8.30d}$$
$$\dot{\boldsymbol{\omega}} = \dot{\boldsymbol{\omega}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{\omega}}} \tag{8.30e}$$
$$\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{x}}_0 + \dot{\boldsymbol{\omega}}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\ddot{\tilde{\boldsymbol{x}}} \tag{8.30f}$$

Relative motion (tilde) as function of absolute and reference (0) motion:

$$\tilde{\boldsymbol{R}} = \boldsymbol{R}_0^T\boldsymbol{R} \tag{8.31a}$$
$$\tilde{\boldsymbol{x}} = \boldsymbol{R}_0^T\left(\boldsymbol{x} - \boldsymbol{x}_0\right) \tag{8.31b}$$
$$\tilde{\boldsymbol{\omega}} = \boldsymbol{R}_0^T\left(\boldsymbol{\omega} - \boldsymbol{\omega}_0\right) \tag{8.31c}$$
$$\begin{aligned}\dot{\tilde{\boldsymbol{x}}} &= \boldsymbol{R}_0^T\left(\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0 - \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}}\right)\\ &= \boldsymbol{R}_0^T\left(\dot{\boldsymbol{x}} - \dot{\boldsymbol{x}}_0\right) - \left(\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \tilde{\boldsymbol{x}}\end{aligned} \tag{8.31d}$$
$$\begin{aligned}\dot{\tilde{\boldsymbol{\omega}}} &= \boldsymbol{R}_0^T\left(\dot{\boldsymbol{\omega}} - \dot{\boldsymbol{\omega}}_0 - \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{\omega}}\right)\\ &= \boldsymbol{R}_0^T\left(\dot{\boldsymbol{\omega}} - \dot{\boldsymbol{\omega}}_0\right) - \left(\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \tilde{\boldsymbol{\omega}}\end{aligned} \tag{8.31e}$$
$$\begin{aligned}\ddot{\tilde{\boldsymbol{x}}} &= \boldsymbol{R}_0^T\left(\ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_0 - \dot{\boldsymbol{\omega}}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} - \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} - 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}}\right)\\ &= \boldsymbol{R}_0^T\left(\ddot{\boldsymbol{x}} - \ddot{\boldsymbol{x}}_0\right) - \left(\boldsymbol{R}_0^T\dot{\boldsymbol{\omega}}_0\right) \times \tilde{\boldsymbol{x}}\\ &\quad - \left(\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \left(\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \tilde{\boldsymbol{x}} - 2\left(\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \dot{\tilde{\boldsymbol{x}}}\end{aligned} \tag{8.31f}$$

Perturbation, assuming reference motion is imposed:

$$\boldsymbol{\theta}_\delta = \boldsymbol{R}_0\tilde{\boldsymbol{\theta}}_\delta \tag{8.32a}$$
$$\delta\boldsymbol{x} = \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} \tag{8.32b}$$
$$\delta\boldsymbol{\omega} = \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}} \tag{8.32c}$$
$$\delta\dot{\boldsymbol{x}} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}} \tag{8.32d}$$
$$\delta\dot{\boldsymbol{\omega}} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{\omega}}} \tag{8.32e}$$
$$\begin{aligned}\delta\ddot{\boldsymbol{x}} &= \dot{\boldsymbol{\omega}}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\delta\ddot{\tilde{\boldsymbol{x}}}\\ &= \left(\dot{\boldsymbol{\omega}}_0 \times\ + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times\right)\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\delta\ddot{\tilde{\boldsymbol{x}}}\end{aligned} \tag{8.32f}$$

Perturbation, when reference motion is independent:

$$\boldsymbol{\theta}_\delta = \boldsymbol{\theta}_{0\delta} + \boldsymbol{R}_0\tilde{\boldsymbol{\theta}}_\delta \tag{8.33a}$$

$$\begin{aligned}\delta\boldsymbol{x} &= \delta\boldsymbol{x}_0 + \boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}}\\ &= \delta\boldsymbol{x}_0 - (\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times\boldsymbol{\theta}_{0\delta} + \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}}\end{aligned} \tag{8.33b}$$

$$\begin{aligned}\delta\boldsymbol{\omega} &= \delta\boldsymbol{\omega}_0 + \boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}}\\ &= \delta\boldsymbol{\omega}_0 - (\boldsymbol{R}_0\tilde{\boldsymbol{\omega}})\times\boldsymbol{\theta}_{0\delta} + \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}}\end{aligned} \tag{8.33c}$$

$$\begin{aligned}\delta\dot{\boldsymbol{x}} &= \delta\dot{\boldsymbol{x}}_0 + \delta\boldsymbol{\omega}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0\times\boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}}\\ &\quad + \boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}}\\ &= \delta\dot{\boldsymbol{x}}_0 - (\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times\delta\boldsymbol{\omega}_0 - \left(\boldsymbol{\omega}_0\times(\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times + \left(\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}}\right)\times\right)\boldsymbol{\theta}_{0\delta}\\ &\quad + \boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}}\end{aligned} \tag{8.33d}$$

$$\begin{aligned}\delta\dot{\boldsymbol{\omega}} &= \delta\dot{\boldsymbol{\omega}}_0 + \delta\boldsymbol{\omega}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{\omega}} + \boldsymbol{\omega}_0\times\boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{\omega}} + \boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}}\\ &\quad + \boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\dot{\tilde{\boldsymbol{\omega}}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{\omega}}}\\ &= \delta\dot{\boldsymbol{\omega}}_0 - (\boldsymbol{R}_0\tilde{\boldsymbol{\omega}})\times\delta\boldsymbol{\omega}_0 - \left(\boldsymbol{\omega}_0\times(\boldsymbol{R}_0\tilde{\boldsymbol{\omega}})\times + \left(\boldsymbol{R}_0\dot{\tilde{\boldsymbol{\omega}}}\right)\times\right)\boldsymbol{\theta}_{0\delta}\\ &\quad + \boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{\omega}}}\end{aligned} \tag{8.33e}$$

$$\begin{aligned}\delta\ddot{\boldsymbol{x}} &= \delta\ddot{\boldsymbol{x}}_0\\ &\quad + \delta\dot{\boldsymbol{\omega}}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \dot{\boldsymbol{\omega}}_0\times\boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \dot{\boldsymbol{\omega}}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}}\\ &\quad + \delta\boldsymbol{\omega}_0\times\boldsymbol{\omega}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0\times\delta\boldsymbol{\omega}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{x}}\\ &\quad + \boldsymbol{\omega}_0\times\boldsymbol{\omega}_0\times\boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0\times\boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}}\\ &\quad + 2\delta\boldsymbol{\omega}_0\times\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} + 2\boldsymbol{\omega}_0\times\boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} + 2\boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}}\\ &\quad + \boldsymbol{\theta}_{0\delta}\times\boldsymbol{R}_0\ddot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\delta\ddot{\tilde{\boldsymbol{x}}}\\ &= \delta\ddot{\boldsymbol{x}}_0 - (\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times\delta\dot{\boldsymbol{\omega}}_0\\ &\quad - \left((\boldsymbol{\omega}_0\times\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times + \boldsymbol{\omega}_0\times(\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times + 2\left(\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}}\right)\times\right)\delta\boldsymbol{\omega}_0\\ &\quad - \left((\dot{\boldsymbol{\omega}}_0\times + \boldsymbol{\omega}_0\times\boldsymbol{\omega}_0\times)(\boldsymbol{R}_0\tilde{\boldsymbol{x}})\times + 2\boldsymbol{\omega}_0\times\left(\boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}}\right)\times + \left(\boldsymbol{R}_0\ddot{\tilde{\boldsymbol{x}}}\right)\times\right)\boldsymbol{\theta}_{0\delta}\\ &\quad + (\dot{\boldsymbol{\omega}}_0\times + \boldsymbol{\omega}_0\times\boldsymbol{\omega}_0\times)\boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0\times\boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{x}}} + \boldsymbol{R}_0\delta\ddot{\tilde{\boldsymbol{x}}}\end{aligned} \tag{8.33f}$$

8.1.5 Motion Expressed in a Relative Reference Frame

An alternative, useful case is given by representing the absolute motion in a relative reference frame:

$$\tilde{\boldsymbol{R}} = \boldsymbol{R}_0^T\boldsymbol{R} \tag{8.34a}$$

$$\tilde{\boldsymbol{x}} = \boldsymbol{R}_0^T(\boldsymbol{x} - \boldsymbol{x}_0) \tag{8.34b}$$

$$\overline{\boldsymbol{\omega}} = \boldsymbol{R}_0^T\boldsymbol{\omega} \tag{8.34c}$$

$$\dot{\overline{\boldsymbol{x}}} = \boldsymbol{R}_0^T\dot{\boldsymbol{x}} \tag{8.34d}$$

$$\dot{\overline{\boldsymbol{\omega}}} = \boldsymbol{R}_0^T\dot{\boldsymbol{\omega}} \tag{8.34e}$$

$$\ddot{\overline{\boldsymbol{x}}} = \boldsymbol{R}_0^T\ddot{\boldsymbol{x}} \tag{8.34f}$$

8.1.6 Dynamics in a Relative Reference Frame

The rationale is that MBDyn is based on the assumption that the kinematics of the nodes and their equations of motion are formulated in the global reference frame. However, in some cases one may want to express the motion of the nodes in a relative reference frame.

The following discussion is intended to modify the inertial contribution to the equilibrium in order to reformulate the dynamical problem in a relative reference frame, whose motion is imposed. The constraints and the deformable components are unaffected, as they already intrinsically based on relative kinematics.

Momentum and momenta moments

$$\boldsymbol{\beta} = m\dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{s}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{\beta}} \tag{8.35a}$$

$$\boldsymbol{\gamma} = \boldsymbol{s} \times (\dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}}) + \boldsymbol{J}\boldsymbol{\omega}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{\gamma}} \tag{8.35b}$$

where

$$\boldsymbol{s}_0 = \boldsymbol{R}_0\tilde{\boldsymbol{s}}_0 \tag{8.36}$$

$$\tilde{\boldsymbol{s}}_0 = \tilde{\boldsymbol{s}} + m\tilde{\boldsymbol{x}} \tag{8.37}$$

$$\boldsymbol{s} = \boldsymbol{R}_0\tilde{\boldsymbol{s}} \tag{8.38}$$

$$\boldsymbol{J} = \boldsymbol{R}_0\tilde{\boldsymbol{J}}\boldsymbol{R}_0^T \tag{8.39}$$

Momentum and momenta moments derivative

$$\dot{\boldsymbol{\beta}} = m\ddot{\boldsymbol{x}}_0 + (\dot{\boldsymbol{\omega}}_0 \times\ + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times)\,\boldsymbol{R}_0\tilde{\boldsymbol{s}}_0 + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\beta} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{\beta}}} \tag{8.40a}$$

$$\begin{aligned}\dot{\boldsymbol{\gamma}} = {} & \dot{\boldsymbol{s}} \times (\dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}}) \\ & + \boldsymbol{s} \times \left(\ddot{\boldsymbol{x}}_0 + (\dot{\boldsymbol{\omega}}_0 \times\ + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times)\,\boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}}\right) \\ & + \boldsymbol{\omega}_0 \times \boldsymbol{J}\boldsymbol{\omega}_0 + \boldsymbol{J}\dot{\boldsymbol{\omega}}_0 + \boldsymbol{R}_0\left(\tilde{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \tilde{\boldsymbol{J}}\tilde{\boldsymbol{\omega}} \times\right)\boldsymbol{R}_0^T\boldsymbol{\omega}_0 \\ & + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{\gamma}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{\gamma}}}\end{aligned} \tag{8.40b}$$

Inertia forces and moments projected in the relative frame

$$\begin{aligned}\overline{\boldsymbol{f}}_{\text{in}} &= \boldsymbol{R}_0^T\dot{\boldsymbol{\beta}} \\ &= m\ddot{\overline{\boldsymbol{x}}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times\ + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\tilde{\boldsymbol{s}}_0 + 2\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\beta}} + \underbrace{\dot{\tilde{\boldsymbol{\beta}}}}_{\text{relative momentum}}\end{aligned} \tag{8.41a}$$

$$\begin{aligned}\overline{\boldsymbol{m}}_{\text{in}} &= \boldsymbol{R}_0^T\left(\dot{\boldsymbol{\gamma}} + \dot{\boldsymbol{x}} \times \boldsymbol{\beta}\right) \\ &= \tilde{\boldsymbol{s}} \times \left(\ddot{\overline{\boldsymbol{x}}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times\ + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\tilde{\boldsymbol{x}} + \overline{\boldsymbol{\omega}}_0 \times \dot{\tilde{\boldsymbol{x}}}\right) \\ &\quad + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 + \tilde{\boldsymbol{J}}\dot{\overline{\boldsymbol{\omega}}}_0 + \left(\tilde{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \tilde{\boldsymbol{J}}\tilde{\boldsymbol{\omega}} \times\right)\overline{\boldsymbol{\omega}}_0 \\ &\quad + \dot{\boldsymbol{x}} \times \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{s}} + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\gamma}} + \underbrace{\dot{\boldsymbol{x}} \times \tilde{\boldsymbol{\beta}} + \dot{\tilde{\boldsymbol{\gamma}}}}_{\text{relative momenta moment}}\end{aligned} \tag{8.41b}$$

The contributions

$$\overline{\boldsymbol{f}}^*_{\text{in}} = 2\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\beta}} + \dot{\tilde{\boldsymbol{\beta}}} \tag{8.42a}$$

$$\overline{\boldsymbol{m}}^*_{\text{in}} = \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\gamma}} + \dot{\boldsymbol{x}} \times \tilde{\boldsymbol{\beta}} + \dot{\tilde{\boldsymbol{\gamma}}} \tag{8.42b}$$

belong to the `automatic structural` element associated to each dynamic node. As such, they are computed once for all irrespective of the number of rigid bodies that are connected to the node. The remaining contributions are computed by each rigid body.

Perturbation, assuming reference motion is imposed:

$$\delta\overline{\boldsymbol{f}}_{\text{in}} = \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\left(m\delta\tilde{\boldsymbol{x}} - \tilde{\boldsymbol{s}} \times \tilde{\boldsymbol{\theta}}_\delta\right) \tag{8.43a}$$

$$+ 2\overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{\beta}} + \delta\dot{\tilde{\boldsymbol{\beta}}} \tag{8.43b}$$

$$\begin{aligned}
\delta\overline{\boldsymbol{m}}_{\text{in}} = {} & \left(\left(\ddot{\overline{\boldsymbol{x}}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\tilde{\boldsymbol{x}} + \overline{\boldsymbol{\omega}}_0 \times \dot{\tilde{\boldsymbol{x}}}\right) \times \tilde{\boldsymbol{s}} \times\right. \\
& + (\overline{\boldsymbol{\omega}}_0 + \tilde{\boldsymbol{\omega}}) \times \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0\right) \times\right) \\
& + \tilde{\boldsymbol{J}}\left(\dot{\overline{\boldsymbol{\omega}}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\omega}}\right) \times - \left(\tilde{\boldsymbol{J}}\left(\dot{\overline{\boldsymbol{\omega}}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\omega}}\right)\right) \times \\
& \left. - \dot{\tilde{\boldsymbol{x}}} \times \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{s}} \times\right) \tilde{\boldsymbol{\theta}}_\delta \\
& + \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0\right) \times\right) \delta\tilde{\boldsymbol{\omega}} \\
& + \tilde{\boldsymbol{s}} \times \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \delta\tilde{\boldsymbol{x}} \\
& + \left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times - (\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{s}}) \times - \tilde{\boldsymbol{\beta}} \times\right) \delta\dot{\tilde{\boldsymbol{x}}} \\
& + \overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{\gamma}} + \dot{\tilde{\boldsymbol{x}}} \times \delta\tilde{\boldsymbol{\beta}} + \delta\dot{\tilde{\boldsymbol{\gamma}}}
\end{aligned} \tag{8.43c}$$

To summarize:

$$\begin{aligned}
& \left\{ \begin{array}{c} \delta\overline{\boldsymbol{f}}_{\text{in}} \\ \delta\overline{\boldsymbol{m}}_{\text{in}} \end{array} \right\} = \left[\begin{array}{cc} \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{I} \end{array} \right] \left\{ \begin{array}{c} \delta\dot{\tilde{\boldsymbol{\beta}}} \\ \delta\dot{\tilde{\boldsymbol{\gamma}}} \end{array} \right\} + \left[\begin{array}{cc} 2\overline{\boldsymbol{\omega}}_0 \times & \boldsymbol{0} \\ \dot{\tilde{\boldsymbol{x}}} \times & \overline{\boldsymbol{\omega}} \times \end{array} \right] \left\{ \begin{array}{c} \delta\tilde{\boldsymbol{\beta}} \\ \delta\tilde{\boldsymbol{\gamma}} \end{array} \right\} \\
& + \left[\begin{array}{cc} \boldsymbol{0} & \boldsymbol{0} \\ \left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times - (\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{s}}) \times - \tilde{\boldsymbol{\beta}} \times\right) & \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0\right) \times\right) \end{array} \right] \left\{ \begin{array}{c} \delta\dot{\tilde{\boldsymbol{x}}} \\ \delta\tilde{\boldsymbol{\omega}} \end{array} \right\} \\
& + \left[\begin{array}{c} m\left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \\ \tilde{\boldsymbol{s}} \times \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \end{array} \right] \delta\tilde{\boldsymbol{x}} \\
& + \left[\begin{array}{c} - \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \tilde{\boldsymbol{s}} \times \\ \left(\begin{array}{c} \left(\ddot{\overline{\boldsymbol{x}}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\tilde{\boldsymbol{x}} + \overline{\boldsymbol{\omega}}_0 \times \dot{\tilde{\boldsymbol{x}}}\right) \times \tilde{\boldsymbol{s}} \times \\ - \dot{\tilde{\boldsymbol{x}}} \times \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{s}} \times + \overline{\boldsymbol{\omega}} \times \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0\right) \times\right) \\ + \tilde{\boldsymbol{J}}\left(\dot{\overline{\boldsymbol{\omega}}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\omega}}\right) \times - \left(\tilde{\boldsymbol{J}}\left(\dot{\overline{\boldsymbol{\omega}}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\omega}}\right)\right) \times \end{array} \right) \end{array} \right] \tilde{\boldsymbol{\theta}}_\delta
\end{aligned} \tag{8.44}$$

8.1.7 Airstream Velocity

Aerodynamic elements need the absolute velocity of specific points in order to evaluate the boundary conditions for the computation of the aerodynamic forces.

The velocity of the airstream at a given absolute location $\boldsymbol{x}$ is

$$\boldsymbol{v}_{\text{as}} = \boldsymbol{v}_{\text{as}}(\boldsymbol{x}, t)\,, \tag{8.45}$$

which results from the superimposition of a time-dependent airstream velocity and of a time- and space-dependent gust velocity,

$$\boldsymbol{v}_{\text{as}} = \boldsymbol{v}_{\text{as0}}(t) + \boldsymbol{v}_{\text{g}}(\boldsymbol{x}, t)\,. \tag{8.46}$$

The velocity of point $\boldsymbol{x}$ with respect to the air at point $\boldsymbol{x}$ itself is thus

$$\boldsymbol{v}_{\mathrm{a}} = \dot{\boldsymbol{x}} - \boldsymbol{v}_{\mathrm{as}}. \tag{8.47}$$

When the motion of the point is expressed in the relative reference frame, the position of the point is expressed by Eq. (8.30d). The velocity of Eq. (8.47) becomes

$$\boldsymbol{v}_{\mathrm{a}} = \dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{x}}} - \boldsymbol{v}_{\mathrm{as}}. \tag{8.48}$$

This velocity, projected in the relative reference frame, is

$$\begin{aligned}\overline{\boldsymbol{v}}_{\mathrm{a}} &= \boldsymbol{R}_0^T\boldsymbol{v}_{\mathrm{a}} \\ &= \dot{\overline{\boldsymbol{x}}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{x}} + \dot{\tilde{\boldsymbol{x}}} - \overline{\boldsymbol{v}}_{\mathrm{as}}.\end{aligned} \tag{8.49}$$

When referring aerodynamic elements to the relative frame, the equivalent airstream speed is thus

$$\boldsymbol{v}_{\text{as equivalent}} = \overline{\boldsymbol{v}}_{\mathrm{as}} - \dot{\overline{\boldsymbol{x}}}_0 - \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{x}}, \tag{8.50}$$

so that the velocity of the air at point $\tilde{\boldsymbol{x}}$ is computed as

$$\overline{\boldsymbol{v}}_{\mathrm{a}} = \dot{\tilde{\boldsymbol{x}}} - \boldsymbol{v}_{\text{as equivalent}}, \tag{8.51}$$

in analogy with Eq. (8.47). This allows to confine the relative reference frame modification of the aerodynamic forces in the computation of the airstream velocity.

8.1.8 Implementation Notes

Kinematics

The relative reference frame dynamics is under development. In the current design, the whole model is subjected to a single relative reference frame. The "ground" is intended to be rigidly connected to the relative reference frame (e.g. all "pin" joints and the "clamp" joint). Deformable elements and kinematic constraints do not discriminate between absolute and relative reference frame, since they only deal with the relative kinematics of the nodes they connect.

The relative frame motion is delegated to the `DataManager`. The `StructNode` is responsible for providing a pointer to a `RigidBodyKinematics` object that describes the relative frame motion.

The kinematic parameters received in input with the `rigid body kinematics` card in the `control data` section are intended expressed in the global reference frame. Note however that the calls to the `Get*()` methods of the `RigidBodyKinematics` class return them in the relative reference frame, namely pre-multiplied by the transpose of the orientation matrix:

`GetR()` :
$$\boldsymbol{R}_0 = \texttt{\{ } \exp(\texttt{abs_orientation_vector} \times) \texttt{ | abs_orientation \}} \tag{8.52a}$$

`GetX()` :
$$\overline{\boldsymbol{x}}_0 = \boldsymbol{R}_0^T\,\texttt{abs_position} \tag{8.52b}$$

`GetW()` :
$$\overline{\boldsymbol{\omega}}_0 = \boldsymbol{R}_0^T\,\texttt{abs_angular_velocity} \tag{8.52c}$$

`GetV()` :
$$\dot{\overline{\boldsymbol{x}}}_0 = \boldsymbol{R}_0^T\,\texttt{abs_velocity} \tag{8.52d}$$

`GetWP()` :
$$\dot{\overline{\boldsymbol{\omega}}}_0 = \boldsymbol{R}_0^T\,\texttt{abs_angular_acceleration} \tag{8.52e}$$

`GetXPP()` :
$$\ddot{\overline{\boldsymbol{x}}}_0 = \boldsymbol{R}_0^T\,\texttt{abs_acceleration} \tag{8.52f}$$

Dynamics

The equations of motion (force and moment equilibrium) and the definitions of the momentum and momenta moment are not altered.

The `AutomaticStructElem` element takes care of the portion of relative frame inertia forces that depends on the momentum and on the momenta moment. The `DynamicBody` element takes care of the remaining portion of relative frame inertia forces. The `StaticBody` element has been modified accordingly.

Air Properties

The `AirProperties` element takes care of the relative frame motion in order to project the absolute reference frame airstream velocity into the relative reference frame, according to Section 8.1.7.

All other built-in aerodynamic elements should naturally inherit the correct air velocity at the reference points.

Future Development

Future development may allow to have multiple relative reference frame submodels, connected to each other and to the absolute reference frame submodel, if any, by dedicated algebraic constraints.

8.1.9 Pseudo-Velocities Approach

NOTE: this is not currently implemented, nor foreseen.

The pseudo-velocities approach consists in replacing the momentum and momenta moment definitions with the definitions of the angular and linear velocities,

$$\boldsymbol{v} = \dot{\boldsymbol{x}} \tag{8.53a}$$

$$\boldsymbol{\omega} = \mathrm{ax}\left(\dot{\boldsymbol{R}}\boldsymbol{R}^T\right) \tag{8.53b}$$

An advantage is that this approach allows an easier implementation of constraint stabilization.

Kinematics:

$$\boldsymbol{R} := \text{node orientation matrix} \tag{8.54a}$$

$$\boldsymbol{x} := \text{node position} \tag{8.54b}$$

Angular and linear velocity, $\boldsymbol{\omega}$ and $\boldsymbol{v}$:

$$\boldsymbol{\omega} = \mathrm{ax}\left(\dot{\boldsymbol{R}}\boldsymbol{R}^T\right) \tag{8.55a}$$

$$\boldsymbol{v} = \dot{\boldsymbol{x}} \tag{8.55b}$$

Inertia forces and moments:

$$\boldsymbol{f}_{\mathrm{in}} = m\dot{\boldsymbol{v}}_{\mathrm{CM}} \tag{8.56a}$$

$$\boldsymbol{m}_{\mathrm{in}} = \boldsymbol{\omega} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{J}_{\mathrm{CM}}\dot{\boldsymbol{\omega}} + \boldsymbol{s} \times \dot{\boldsymbol{v}}_{\mathrm{CM}} \tag{8.56b}$$

where

$$\boldsymbol{s} \qquad \text{static moment with respect to the node position} \tag{8.57a}$$

$$\boldsymbol{J}_{\mathrm{CM}} \qquad \text{inertia tensor with respect to the center of mass} \tag{8.57b}$$

$$\boldsymbol{x}_{\mathrm{CM}} = \boldsymbol{x} + \frac{1}{m}\boldsymbol{s} \qquad \text{position of the center of mass} \tag{8.57c}$$

$$\boldsymbol{v}_{\mathrm{CM}} = \boldsymbol{v} + \frac{1}{m}\boldsymbol{\omega} \times \boldsymbol{s} \qquad \text{velocity of the center of mass} \tag{8.57d}$$

$$\dot{\boldsymbol{v}}_{\mathrm{CM}} = \dot{\boldsymbol{v}} + \frac{1}{m}\left(\dot{\boldsymbol{\omega}} \times \; + \boldsymbol{\omega} \times \boldsymbol{\omega} \times\right)\boldsymbol{s} \tag{8.57e}$$

Perturbation

$$\delta\boldsymbol{s} = \boldsymbol{\theta}_\delta \times \boldsymbol{s} \tag{8.58a}$$

$$\delta\boldsymbol{J}_{\mathrm{CM}} = \boldsymbol{\theta}_\delta \times \boldsymbol{J}_{\mathrm{CM}} - \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\theta}_\delta \times \tag{8.58b}$$

$$\begin{aligned}\delta\boldsymbol{x}_{\mathrm{CM}} &= \delta\boldsymbol{x} + \frac{1}{m}\delta\boldsymbol{s} \\ &= \delta\boldsymbol{x} - \frac{1}{m}\boldsymbol{s} \times \boldsymbol{\theta}_\delta\end{aligned} \tag{8.58c}$$

$$\begin{aligned}\boldsymbol{v}_{\mathrm{CM}} &= \delta\boldsymbol{v} + \frac{1}{m}\delta\boldsymbol{\omega} \times \boldsymbol{s} + \frac{1}{m}\boldsymbol{\omega} \times \delta\boldsymbol{s} \\ &= \delta\boldsymbol{v} - \frac{1}{m}\boldsymbol{s} \times \delta\boldsymbol{\omega} - \frac{1}{m}\boldsymbol{\omega} \times \boldsymbol{s} \times \boldsymbol{\theta}_\delta\end{aligned} \tag{8.58d}$$

$$\begin{aligned}\delta\dot{\boldsymbol{v}}_{\mathrm{CM}} &= \delta\dot{\boldsymbol{v}} + \frac{1}{m}\left(\delta\dot{\boldsymbol{\omega}} \times \boldsymbol{s} + \delta\boldsymbol{\omega} \times \boldsymbol{\omega} \times \boldsymbol{s} + \boldsymbol{\omega} \times \delta\boldsymbol{\omega} \times \boldsymbol{s} + \left(\dot{\boldsymbol{\omega}} \times \; + \boldsymbol{\omega} \times \boldsymbol{\omega} \times\right)\delta\boldsymbol{s}\right) \\ &= \delta\dot{\boldsymbol{v}} - \frac{1}{m}\boldsymbol{s} \times \delta\dot{\boldsymbol{\omega}} - \frac{1}{m}\left((\boldsymbol{\omega} \times \boldsymbol{s}) \times \; + \boldsymbol{\omega} \times \boldsymbol{s} \times\right)\delta\boldsymbol{\omega} \\ &\quad - \frac{1}{m}\left(\dot{\boldsymbol{\omega}} \times \; + \boldsymbol{\omega} \times \boldsymbol{\omega} \times\right)\boldsymbol{s} \times \boldsymbol{\theta}_\delta\end{aligned} \tag{8.58e}$$

Inertia forces and moments with respect to nodal quantities:

$$\begin{aligned}\boldsymbol{f}_{\mathrm{in}} &= m\dot{\boldsymbol{v}}_{\mathrm{CM}} \\ &= m\dot{\boldsymbol{v}} + \left(\dot{\boldsymbol{\omega}} \times \; + \boldsymbol{\omega} \times \boldsymbol{\omega} \times\right)\boldsymbol{s}\end{aligned} \tag{8.59a}$$

$$\begin{aligned}\boldsymbol{m}_{\mathrm{in}} &= \boldsymbol{\omega} \times \boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega} + \boldsymbol{J}_{\mathrm{CM}}\dot{\boldsymbol{\omega}} + \boldsymbol{s} \times \dot{\boldsymbol{v}}_{\mathrm{CM}} \\ &= \boldsymbol{s} \times \dot{\boldsymbol{v}} + \boldsymbol{J}\dot{\boldsymbol{\omega}} + \boldsymbol{\omega} \times \boldsymbol{J}\boldsymbol{\omega}\end{aligned} \tag{8.59b}$$

with

$$\boldsymbol{J} = \boldsymbol{J}_{\mathrm{CM}} - \frac{1}{m}\boldsymbol{s} \times \boldsymbol{s} \times \tag{8.60}$$

the inertia tensor with respect to the node.

Perturbation:

$$\begin{aligned}\delta\boldsymbol{f}_{\mathrm{in}} &= m\delta\dot{\boldsymbol{v}} - \boldsymbol{s} \times \delta\dot{\boldsymbol{\omega}} - \left((\boldsymbol{\omega} \times \boldsymbol{s}) \times \; + \boldsymbol{\omega} \times \boldsymbol{s} \times\right)\delta\boldsymbol{\omega} \\ &\quad - \left(\dot{\boldsymbol{\omega}} \times \; + \boldsymbol{\omega} \times \boldsymbol{\omega} \times\right)\boldsymbol{s} \times \boldsymbol{\theta}_\delta\end{aligned} \tag{8.61a}$$

$$\begin{aligned}\delta\boldsymbol{m}_{\mathrm{in}} &= \boldsymbol{s} \times \delta\dot{\boldsymbol{v}} + \boldsymbol{J}\delta\dot{\boldsymbol{\omega}} + \left(\boldsymbol{\omega} \times \boldsymbol{J} - (\boldsymbol{J}\boldsymbol{\omega}) \times\right)\delta\boldsymbol{\omega} \\ &\quad + \left(\boldsymbol{\omega} \times (\boldsymbol{J}\boldsymbol{\omega} \times \; - (\boldsymbol{J}\boldsymbol{\omega}) \times) + \boldsymbol{J}\dot{\boldsymbol{\omega}} \times \; - (\boldsymbol{J}\dot{\boldsymbol{\omega}}) \times \; + \dot{\boldsymbol{v}} \times \boldsymbol{s} \times\right)\boldsymbol{\theta}_\delta\end{aligned} \tag{8.61b}$$

Relative frame kinematics:

$$\boldsymbol{R} = \boldsymbol{R}_0\tilde{\boldsymbol{R}} \tag{8.62a}$$
$$\boldsymbol{x} = \boldsymbol{x}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{x}} \tag{8.62b}$$
$$\boldsymbol{\omega} = \boldsymbol{\omega}_0 + \boldsymbol{R}_0\tilde{\boldsymbol{\omega}} \tag{8.62c}$$
$$\boldsymbol{v} = \boldsymbol{v}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\tilde{\boldsymbol{v}} \tag{8.62d}$$
$$\dot{\boldsymbol{\omega}} = \dot{\boldsymbol{\omega}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{\omega}}} \tag{8.62e}$$
$$\dot{\boldsymbol{v}} = \dot{\boldsymbol{v}}_0 + (\dot{\boldsymbol{\omega}}_0 \times\ + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times)\, \boldsymbol{R}_0\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\tilde{\boldsymbol{v}} + \boldsymbol{R}_0\dot{\tilde{\boldsymbol{v}}} \tag{8.62f}$$

Perturbation:

$$\boldsymbol{\theta}_\delta = \boldsymbol{R}_0\tilde{\boldsymbol{\theta}}_\delta \tag{8.63a}$$
$$\delta\boldsymbol{x} = \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} \tag{8.63b}$$
$$\delta\boldsymbol{\omega} = \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}} \tag{8.63c}$$
$$\delta\boldsymbol{v} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + \boldsymbol{R}_0\delta\tilde{\boldsymbol{v}} \tag{8.63d}$$
$$\delta\dot{\boldsymbol{\omega}} = \boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{\omega}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{\omega}}} \tag{8.63e}$$
$$\delta\dot{\boldsymbol{v}} = (\dot{\boldsymbol{\omega}}_0 \times\ + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times)\, \boldsymbol{R}_0\delta\tilde{\boldsymbol{x}} + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0\delta\tilde{\boldsymbol{v}} + \boldsymbol{R}_0\delta\dot{\tilde{\boldsymbol{v}}} \tag{8.63f}$$

Relative frame kinematics projected in the relative frame:

$$\overline{\boldsymbol{R}} = \tilde{\boldsymbol{R}} \tag{8.64a}$$
$$\overline{\boldsymbol{x}} = \boldsymbol{R}_0^T\boldsymbol{x}_0 + \tilde{\boldsymbol{x}} \tag{8.64b}$$
$$\overline{\boldsymbol{\omega}} = \boldsymbol{R}_0^T\boldsymbol{\omega}_0 + \tilde{\boldsymbol{\omega}} \tag{8.64c}$$
$$\overline{\boldsymbol{v}} = \boldsymbol{R}_0^T\boldsymbol{v}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{x}} + \tilde{\boldsymbol{v}} \tag{8.64d}$$
$$\dot{\overline{\boldsymbol{\omega}}} = \boldsymbol{R}_0^T\dot{\boldsymbol{\omega}}_0 + \overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{\omega}} + \dot{\tilde{\boldsymbol{\omega}}} \tag{8.64e}$$
$$\dot{\overline{\boldsymbol{v}}} = \boldsymbol{R}_0^T\dot{\boldsymbol{v}}_0 + \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times\ + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \tilde{\boldsymbol{x}} + 2\overline{\boldsymbol{\omega}}_0 \times \tilde{\boldsymbol{v}} + \dot{\tilde{\boldsymbol{v}}} \tag{8.64f}$$

Perturbation projected in the relative frame:

$$\overline{\boldsymbol{\theta}}_\delta = \tilde{\boldsymbol{\theta}}_\delta \tag{8.65a}$$
$$\delta\overline{\boldsymbol{x}} = \delta\tilde{\boldsymbol{x}} \tag{8.65b}$$
$$\delta\overline{\boldsymbol{\omega}} = \delta\tilde{\boldsymbol{\omega}} \tag{8.65c}$$
$$\delta\overline{\boldsymbol{v}} = \overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{x}} + \delta\tilde{\boldsymbol{v}} \tag{8.65d}$$
$$\delta\dot{\overline{\boldsymbol{\omega}}} = \overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{\omega}} + \delta\dot{\tilde{\boldsymbol{\omega}}} \tag{8.65e}$$
$$\delta\dot{\overline{\boldsymbol{v}}} = \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times\ + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \delta\tilde{\boldsymbol{x}} + 2\overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{v}} + \delta\dot{\tilde{\boldsymbol{v}}} \tag{8.65f}$$

Inertia forces and moments with respect to nodal quantities, in a relative frame:

$$\overline{\boldsymbol{f}}_{\text{in}} = m\dot{\overline{\boldsymbol{v}}}_{\text{CM}} \tag{8.66a}$$
$$\overline{\boldsymbol{m}}_{\text{in}} = \tilde{\boldsymbol{s}} \times \dot{\overline{\boldsymbol{v}}}_{\text{CM}} + \overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}}_{\text{CM}}\overline{\boldsymbol{\omega}} + \tilde{\boldsymbol{J}}_{\text{CM}}\dot{\overline{\boldsymbol{\omega}}} \tag{8.66b}$$

Perturbation

$$
\begin{aligned}
\delta\overline{\boldsymbol{f}}_{\text{in}} &= m\delta\dot{\overline{\boldsymbol{v}}}_{\text{CM}} \\
&= m\delta\dot{\tilde{\boldsymbol{v}}} + 2m\overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{v}} + m\left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\delta\tilde{\boldsymbol{x}} \\
&\quad - \tilde{\boldsymbol{s}} \times \delta\dot{\tilde{\boldsymbol{\omega}}} - \left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times + \overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{s}} \times - \left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}\right) \times\right)\delta\tilde{\boldsymbol{\omega}} \\
&\quad - \left(\dot{\overline{\boldsymbol{\omega}}} \times + \overline{\boldsymbol{\omega}} \times \overline{\boldsymbol{\omega}} \times\right)\tilde{\boldsymbol{s}} \times \tilde{\boldsymbol{\theta}}_\delta
\end{aligned} \tag{8.67a}
$$

$$
\begin{aligned}
\delta\overline{\boldsymbol{m}}_{\text{in}} &= \tilde{\boldsymbol{s}} \times \delta\dot{\overline{\boldsymbol{v}}}_{\text{CM}} + \delta\tilde{\boldsymbol{s}} \times \dot{\overline{\boldsymbol{v}}}_{\text{CM}} \\
&\quad + \tilde{\boldsymbol{J}}_{\text{CM}}\delta\dot{\overline{\boldsymbol{\omega}}} + \left(\overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}}_{\text{CM}} - \left(\tilde{\boldsymbol{J}}_{\text{CM}}\overline{\boldsymbol{\omega}}\right) \times\right)\delta\overline{\boldsymbol{\omega}} \\
&\quad + \left(\overline{\boldsymbol{\omega}} \times \left(\tilde{\boldsymbol{J}}_{\text{CM}}\overline{\boldsymbol{\omega}} \times - \left(\tilde{\boldsymbol{J}}_{\text{CM}}\overline{\boldsymbol{\omega}}\right) \times\right) + \tilde{\boldsymbol{J}}_{\text{CM}}\dot{\overline{\boldsymbol{\omega}}} \times - \left(\tilde{\boldsymbol{J}}_{\text{CM}}\dot{\overline{\boldsymbol{\omega}}}\right) \times\right)\tilde{\boldsymbol{\theta}}_\delta \\
&= \tilde{\boldsymbol{s}} \times \delta\dot{\tilde{\boldsymbol{v}}} \\
&\quad + 2\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times \delta\tilde{\boldsymbol{v}} \\
&\quad + \tilde{\boldsymbol{s}} \times \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right)\delta\tilde{\boldsymbol{x}} \\
&\quad + \tilde{\boldsymbol{J}}\delta\dot{\tilde{\boldsymbol{\omega}}} \\
&\quad + \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times + \overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}\right) \times\right)\delta\tilde{\boldsymbol{\omega}} \\
&\quad + \left(\tilde{\boldsymbol{J}}\dot{\overline{\boldsymbol{\omega}}} \times - \left(\tilde{\boldsymbol{J}}\dot{\overline{\boldsymbol{\omega}}}\right) \times + \overline{\boldsymbol{\omega}} \times \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}} \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}\right) \times\right) + \dot{\overline{\boldsymbol{v}}} \times \tilde{\boldsymbol{s}} \times\right)\tilde{\boldsymbol{\theta}}_\delta
\end{aligned} \tag{8.67b}
$$

To summarize:

$$
\begin{aligned}
&\begin{Bmatrix} \delta\overline{\boldsymbol{f}}_{\text{in}} \\ \delta\overline{\boldsymbol{m}}_{\text{in}} \end{Bmatrix} = \begin{bmatrix} m\boldsymbol{I} & -\tilde{\boldsymbol{s}} \times \\ \tilde{\boldsymbol{s}} \times & \tilde{\boldsymbol{J}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\tilde{\boldsymbol{v}}} \\ \delta\dot{\tilde{\boldsymbol{\omega}}} \end{Bmatrix} \\
&+ \begin{bmatrix} 2m\overline{\boldsymbol{\omega}}_0 \times & -\left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times + \overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{s}} \times - \left(\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}\right) \times\right) \\ 2\tilde{\boldsymbol{s}} \times \overline{\boldsymbol{\omega}}_0 \times & \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}_0 \times + \overline{\boldsymbol{\omega}} \times \tilde{\boldsymbol{J}} - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}\right) \times\right) \end{bmatrix} \begin{Bmatrix} \delta\tilde{\boldsymbol{v}} \\ \delta\tilde{\boldsymbol{\omega}} \end{Bmatrix} \\
&+ \begin{bmatrix} m\left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \\ \tilde{\boldsymbol{s}} \times \left(\dot{\overline{\boldsymbol{\omega}}}_0 \times + \overline{\boldsymbol{\omega}}_0 \times \overline{\boldsymbol{\omega}}_0 \times\right) \end{bmatrix} \delta\tilde{\boldsymbol{x}} \\
&+ \begin{bmatrix} -\left(\dot{\overline{\boldsymbol{\omega}}} \times + \overline{\boldsymbol{\omega}} \times \overline{\boldsymbol{\omega}} \times\right)\tilde{\boldsymbol{s}} \times \\ \left(\tilde{\boldsymbol{J}}\dot{\overline{\boldsymbol{\omega}}} \times - \left(\tilde{\boldsymbol{J}}\dot{\overline{\boldsymbol{\omega}}}\right) \times + \overline{\boldsymbol{\omega}} \times \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}} \times - \left(\tilde{\boldsymbol{J}}\overline{\boldsymbol{\omega}}\right) \times\right) + \dot{\overline{\boldsymbol{v}}} \times \tilde{\boldsymbol{s}} \times\right) \end{bmatrix} \tilde{\boldsymbol{\theta}}_\delta
\end{aligned} \tag{8.68}
$$

Chapter 9

Constraints (aka Joints)

9.1 Algebraic Constraints

Consider a holonomic constraint equation of the form

$$\boldsymbol{\phi}\left(\boldsymbol{q},t\right)=0 \tag{9.1}$$

Its time derivative and perturbation yields

$$\begin{aligned}
\delta\frac{\mathrm{d}}{\mathrm{d}t}\left(\boldsymbol{\mu}^{T}\boldsymbol{\phi}\right) &= \delta\dot{\boldsymbol{\mu}}^{T}\boldsymbol{\phi}+\delta\boldsymbol{\phi}^{T}\dot{\boldsymbol{\mu}}+\delta\boldsymbol{\mu}^{T}\dot{\boldsymbol{\phi}}+\delta\dot{\boldsymbol{\phi}}^{T}\boldsymbol{\mu}\\
&= \delta\dot{\boldsymbol{\mu}}^{T}\boldsymbol{\phi}+\delta\boldsymbol{q}^{T}\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\dot{\boldsymbol{\mu}}+\delta\boldsymbol{\mu}^{T}\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)\\
&\quad+\left(\delta\dot{\boldsymbol{q}}^{T}\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}+\delta\boldsymbol{q}^{T}\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^{T}\right)\boldsymbol{\mu}\\
&= \delta\dot{\boldsymbol{q}}^{T}\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\boldsymbol{\mu}\\
&\quad+\delta\boldsymbol{q}^{T}\left(\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^{T}\boldsymbol{\mu}+\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\dot{\boldsymbol{\mu}}\right)\\
&\quad+\delta\dot{\boldsymbol{\mu}}^{T}\boldsymbol{\phi}\\
&\quad+\delta\boldsymbol{\mu}^{T}\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)
\end{aligned} \tag{9.2}$$

Its linearization yields

$$\begin{aligned}
\Delta\left(\delta\frac{\mathrm{d}}{\mathrm{d}t}\left(\boldsymbol{\mu}^{T}\boldsymbol{\phi}\right)\right) &= \delta\dot{\boldsymbol{q}}^{T}\left(\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\Delta\boldsymbol{\mu}+\left(\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\boldsymbol{\mu}\right)_{/\boldsymbol{q}}\Delta\boldsymbol{q}\right)\\
&\quad+\delta\boldsymbol{q}^{T}\left(\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^{T}\Delta\boldsymbol{\mu}+\boldsymbol{\phi}_{/\boldsymbol{q}}\Delta\dot{\boldsymbol{\mu}}+\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\Delta\dot{\boldsymbol{q}}\right)_{/\boldsymbol{q}}^{T}\boldsymbol{\mu}\right.\\
&\qquad\left.+\left(\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^{T}\boldsymbol{\mu}+\boldsymbol{\phi}_{/\boldsymbol{q}}^{T}\dot{\boldsymbol{\mu}}\right)_{/\boldsymbol{q}}\Delta\boldsymbol{q}\right)\\
&\quad+\delta\dot{\boldsymbol{\mu}}^{T}\boldsymbol{\phi}_{/\boldsymbol{q}}\Delta\boldsymbol{q}\\
&\quad+\delta\boldsymbol{\mu}^{T}\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\Delta\dot{\boldsymbol{q}}+\left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}}+\boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}\Delta\boldsymbol{q}\right)
\end{aligned} \tag{9.3}$$

An unconstrained problem of the form

$$\boldsymbol{M}\dot{\boldsymbol{q}}-\boldsymbol{p}=\boldsymbol{0} \tag{9.4a}$$

$$\dot{\boldsymbol{p}}=\boldsymbol{F}\left(\boldsymbol{q},\dot{\boldsymbol{q}},t\right) \tag{9.4b}$$

becomes

$$\boldsymbol{M}\dot{\boldsymbol{q}} - \boldsymbol{p} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \boldsymbol{\mu} = \boldsymbol{0} \tag{9.5a}$$

$$\dot{\boldsymbol{p}} + \left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^T \boldsymbol{\mu} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \dot{\boldsymbol{\mu}} = \boldsymbol{F}\left(\boldsymbol{q}, \dot{\boldsymbol{q}}, t\right) \tag{9.5b}$$

$$\boldsymbol{\phi} = \boldsymbol{0} \tag{9.5c}$$

$$\boldsymbol{\phi}_{/\boldsymbol{q}}\boldsymbol{M}^{-1}\boldsymbol{p} + \boldsymbol{\phi}_{/t} = \boldsymbol{0}, \tag{9.5d}$$

where $\dot{\boldsymbol{q}} = \boldsymbol{M}^{-1}\boldsymbol{p}$ has been used in Eq. (9.5d). Actually, $\dot{\boldsymbol{\mu}}$ is independent of $\boldsymbol{\mu}$; $\boldsymbol{\mu}$ by definition is zero if the exact solution is considered. So $\dot{\boldsymbol{\mu}}$ is redefined as $\dot{\boldsymbol{\mu}} = \boldsymbol{\lambda}$:

$$\boldsymbol{M}\dot{\boldsymbol{q}} - \boldsymbol{p} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \boldsymbol{\mu} = \boldsymbol{0} \tag{9.6a}$$

$$\dot{\boldsymbol{p}} + \left(\boldsymbol{\phi}_{/\boldsymbol{q}}\dot{\boldsymbol{q}} + \boldsymbol{\phi}_{/t}\right)_{/\boldsymbol{q}}^T \boldsymbol{\mu} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \boldsymbol{\lambda} = \boldsymbol{F}\left(\boldsymbol{q}, \dot{\boldsymbol{q}}, t\right) \tag{9.6b}$$

$$\boldsymbol{\phi} = \boldsymbol{0} \tag{9.6c}$$

$$\boldsymbol{\phi}_{/\boldsymbol{q}}\boldsymbol{M}^{-1}\boldsymbol{p} + \boldsymbol{\phi}_{/t} = \boldsymbol{0}. \tag{9.6d}$$

If $\boldsymbol{\mu} = 0$ then a conventional DAE of index 3 results, i.e.

$$\boldsymbol{M}\dot{\boldsymbol{q}} - \boldsymbol{p} = \boldsymbol{0} \tag{9.7a}$$

$$\dot{\boldsymbol{p}} + \boldsymbol{\phi}_{/\boldsymbol{q}}^T \boldsymbol{\lambda} = \boldsymbol{F}\left(\boldsymbol{q}, \dot{\boldsymbol{q}}, t\right) \tag{9.7b}$$

$$\boldsymbol{\phi} = \boldsymbol{0}, \tag{9.7c}$$

while the previous form is known as stabilized index 2 form. The latter is typically used throughout MBDyn, while the former is used in the initial assembly and, occasionally, in specific constraints.

9.1.1 Beam Slider Joint

The beam slider joint allows a point attache to a node, $\boldsymbol{x}_c = \boldsymbol{x}_b + \boldsymbol{R}_b\boldsymbol{f}_b$ to slide along a sequence of three-node beam elements. The current contact position on the beam is $\boldsymbol{x} = \sum_{i=1}^{3} N_i(s)(\boldsymbol{x}_i + \boldsymbol{R}_i\boldsymbol{f}_i)$.

Files. It is implemented in files

```
mbdyn/struct/beamslider.h
mbdyn/struct/beamslider.cc
```

Unknowns.

- s position along the beam
- $\boldsymbol{F}$ reaction force vector (three components)
- $\boldsymbol{M}$ reaction moment vector (no components for the *spherical* slider, two components for the *classical* slider, three components for the *spline* slider, currently not implemented)

If friction is present additional unknowns depend on the chosen friction model.

Definitions.

- $\boldsymbol{x}_{ti} = \boldsymbol{x}_i + \boldsymbol{R}_i\boldsymbol{f}_i$
- $\boldsymbol{l} = \sum_{i=1}^{3} N_{i/s}(s)\boldsymbol{x}_{ti}$ beam tangent

- $\boldsymbol{e}_{3a} = \boldsymbol{l}/\sqrt{\boldsymbol{l}\cdot\boldsymbol{l}}$ unit beam tangent
- $\boldsymbol{x}_c = \boldsymbol{x}_b + \boldsymbol{R}_b\boldsymbol{f}_b$ body sliding point position
- $\boldsymbol{x} = \sum_{i=1}^{3} N_i(s)(\boldsymbol{x}_i + \boldsymbol{R}_i\boldsymbol{f}_i)$ contact point position on the beam
- $\boldsymbol{v}_c = \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{R}_b\boldsymbol{f}_b$ body sliding point velocity
- $\boldsymbol{v} = \sum_{i=1}^{3} N_i(s)(\dot{\boldsymbol{x}}_i + \boldsymbol{\omega}_i \times \boldsymbol{R}_i\boldsymbol{f}_i)$ contact point velocity on the beam

Equations.

- 1: $\boldsymbol{F}\cdot\boldsymbol{l}/\texttt{dCoef} = 0$
- 2–4: $(\boldsymbol{x}_c - \boldsymbol{x})/\texttt{dCoef} = \boldsymbol{0}$

If *classical* two additiona equation:

- 5: $\boldsymbol{R}_b(2)\cdot\boldsymbol{l} = 0$
- 6: $\boldsymbol{R}_b(3)\cdot\boldsymbol{l} = 0$

If *spline*: not implemented

Friction If friction is present the friction coefficient f is computed as a function of the relative sliding velocity $v_{rel} = \boldsymbol{e}_{3a}\cdot\boldsymbol{v}_{rel}$ where $\boldsymbol{v}_{rel} = \boldsymbol{v}_c - \boldsymbol{v}$. The tangent friction force component is $F_3 = f * S_{hc} * \sqrt{(\boldsymbol{F}\cdot\boldsymbol{F})}$ and his direction is that of $\boldsymbol{e}_{3a}$, so that the resultant reaction force is $\boldsymbol{F}_{res} = \boldsymbol{F} - \boldsymbol{e}_{3a}F_3$

Friction linearization.

$$\Delta v_{rel} = \boldsymbol{e}_{3a}\cdot\Delta\boldsymbol{v}_{rel} + \boldsymbol{v}_{rel}\cdot\Delta\boldsymbol{e}_{3a}$$

$$\begin{aligned}\boldsymbol{e}_{3a}\cdot\Delta\boldsymbol{v}_{rel} =& \boldsymbol{e}_{3a}\cdot\Delta\boldsymbol{x}_c \\ &- \sum_{i=1}^{3}\boldsymbol{e}_{3a}\cdot(\dot{\boldsymbol{x}}_i + \boldsymbol{\omega}_i\times\boldsymbol{R}_i\boldsymbol{f}_i)N_{i/s}\Delta s \\ &- \sum_{i=1}^{3} N_i\boldsymbol{e}_{3a}\cdot\Delta\dot{\boldsymbol{x}}_i \\ &- \sum_{i=1}^{3} N_i(\boldsymbol{R}_i\boldsymbol{f}_i)\times\boldsymbol{e}_{3a}\Delta\boldsymbol{\omega}_i \\ &- \sum_{i=1}^{3} N_i(\boldsymbol{R}_i\boldsymbol{f}_i)\times\boldsymbol{\omega}_i\times\boldsymbol{e}_{3a}\texttt{dCoef}\Delta\dot{\boldsymbol{g}}\end{aligned}$$

where, as explained in Sec. 5.1, $\Delta\boldsymbol{\omega} = \Delta\dot{\boldsymbol{g}} - \boldsymbol{\omega}_{\rm ref}\times\Delta\dot{\boldsymbol{g}} * \texttt{dCoef}$. Furthermore,

$$\boldsymbol{v}\Delta\boldsymbol{e}_{3a} = \left(\frac{\boldsymbol{v}}{\sqrt{\boldsymbol{l}\cdot\boldsymbol{l}}} - \frac{v_{rel}\boldsymbol{l}}{(\boldsymbol{l}\cdot\boldsymbol{l})^{3/2}}\right)\cdot\Delta\boldsymbol{l}$$

with

$$\begin{aligned}\Delta \boldsymbol{l} = &\sum_{i=1}^{3} N_{i/ss} \boldsymbol{x}_{ti} \Delta \dot{s} \\ &+ \sum_{i=1}^{3} N_{i/s} \boldsymbol{I} \mathtt{dCoef} \Delta \dot{\boldsymbol{x}}_i \\ &+ \sum_{i=1}^{3} N_{i/s} (-\boldsymbol{R}_i \boldsymbol{f}_i) \times \mathtt{dCoef} \Delta \dot{\boldsymbol{g}}_i\end{aligned}$$

9.1.2 Clamp Joint

The clamp joint (`Clamp`) imposes the position and the orientation of a node.

Files. It is implemented in files
`mbdyn/struct/genj.h`
`mbdyn/struct/genj.cc`

Definitions.

$$\boldsymbol{d}_c = \boldsymbol{x} - \boldsymbol{x}_0 \tag{9.8}$$
$$\boldsymbol{\theta}_c = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}\boldsymbol{R}_0^T\right)\right) \tag{9.9}$$

Constraint Equation.

$$\boldsymbol{d}_c = \boldsymbol{0} \tag{9.10}$$
$$\boldsymbol{\theta}_c = \boldsymbol{0} \tag{9.11}$$

Perturbation.

$$\delta \boldsymbol{d}_c = \delta \boldsymbol{x} \tag{9.12}$$
$$\delta \boldsymbol{\theta}_c = \boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_c)\, \boldsymbol{\theta}_\delta \tag{9.13}$$

Forces.

$$\boldsymbol{f} = \boldsymbol{\lambda} \tag{9.14a}$$
$$\boldsymbol{m} = \boldsymbol{\Gamma}^{-T}(\boldsymbol{\theta}_c)\, \overline{\boldsymbol{\mu}} \stackrel{\mathrm{def}}{=} \boldsymbol{\mu} \tag{9.14b}$$

Linearization.

$$\begin{bmatrix} \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \Delta \boldsymbol{x} \\ \boldsymbol{\theta}_\Delta \end{Bmatrix} + \begin{bmatrix} \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{I} \\ \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \Delta \boldsymbol{\lambda} \\ \Delta \boldsymbol{\mu} \end{Bmatrix} = - \begin{Bmatrix} -\boldsymbol{\lambda} \\ -\boldsymbol{\mu} \\ -\boldsymbol{d}_c \\ -\boldsymbol{\theta}_c \end{Bmatrix} \tag{9.15}$$

since $\boldsymbol{\Gamma}(\boldsymbol{\theta}_c)\, \boldsymbol{\theta}_c = \boldsymbol{\theta}_c$.

9.1.3 Distance Joint

The distance joint (`DistanceJoint`) imposes the distance between two nodes, which may depend on time and other states of the problem.

Variants. There is a variant with offsets (`DistanceJointWithOffset`), discussed in Section 9.1.4.

Files. It is implemented in files
`mbdyn/struct/distance.h`
`mbdyn/struct/distance.cc`

Definitions.

$$\boldsymbol{d} = \boldsymbol{x}_2 - \boldsymbol{x}_1 \tag{9.16}$$

$$d = \sqrt{\boldsymbol{d}^T \boldsymbol{d}} \tag{9.17}$$

$$\boldsymbol{u} = \frac{\boldsymbol{d}}{d} \tag{9.18}$$

Limitations.

$$d > 0 \tag{9.19}$$

Constraint Equation.

$$d\sqrt{\boldsymbol{u}^T \boldsymbol{u}} = d \tag{9.20}$$

Forces.

$$\boldsymbol{F}_1 = \alpha \boldsymbol{u} \tag{9.21a}$$
$$\boldsymbol{F}_2 = -\alpha \boldsymbol{u} \tag{9.21b}$$

Linearization.

$$\begin{bmatrix} \frac{\alpha}{d}\boldsymbol{I} & -\frac{\alpha}{d}\boldsymbol{I} & -\boldsymbol{u} \\ -\frac{\alpha}{d}\boldsymbol{I} & \frac{\alpha}{d}\boldsymbol{I} & \boldsymbol{u} \\ -\boldsymbol{u}^T & \boldsymbol{u}^T & 0 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\alpha \end{Bmatrix} = \begin{Bmatrix} \alpha\boldsymbol{u} \\ -\alpha\boldsymbol{u} \\ d\left(1 - \sqrt{\boldsymbol{u}^T\boldsymbol{u}}\right) \end{Bmatrix} \tag{9.22}$$

Constraint Equation Derivative.

$$d\boldsymbol{u}^T \dot{\boldsymbol{u}} = 0 \tag{9.23}$$

Force Derivatives.

$$\dot{\boldsymbol{F}}_1 = \alpha\dot{\boldsymbol{u}} + \dot{\alpha}\boldsymbol{u} \tag{9.24a}$$

$$\dot{\boldsymbol{F}}_2 = -\alpha\dot{\boldsymbol{u}} - \dot{\alpha}\boldsymbol{u} \tag{9.24b}$$

where

$$\dot{\boldsymbol{u}} = \frac{\dot{\boldsymbol{x}}_2 - \dot{\boldsymbol{x}}_1}{d} - \boldsymbol{u}\frac{\dot{d}}{d} \tag{9.25}$$

Linearization.

$$\begin{bmatrix} \frac{\dot{\alpha}}{d}\boldsymbol{I} & \frac{\alpha}{d}\boldsymbol{I} & -\frac{\dot{\alpha}}{d}\boldsymbol{I} & -\frac{\alpha}{d}\boldsymbol{I} & -\dot{\boldsymbol{u}} & -\boldsymbol{u} \\ -\frac{\dot{\alpha}}{d}\boldsymbol{I} & -\frac{\alpha}{d}\boldsymbol{I} & \frac{\dot{\alpha}}{d}\boldsymbol{I} & \frac{\alpha}{d}\boldsymbol{I} & \dot{\boldsymbol{u}} & \boldsymbol{u} \\ -\dot{\boldsymbol{u}}^T & -\boldsymbol{u}^T & \dot{\boldsymbol{u}}^T & \boldsymbol{u}^T & \boldsymbol{0} & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\dot{\boldsymbol{x}}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\dot{\boldsymbol{x}}_2 \\ \delta\alpha \\ \delta\dot{\alpha} \end{Bmatrix} = \begin{Bmatrix} \alpha\dot{\boldsymbol{u}} + \dot{\alpha}\boldsymbol{u} \\ -\alpha\dot{\boldsymbol{u}} - \dot{\alpha}\boldsymbol{u} \\ d\boldsymbol{u}^T\dot{\boldsymbol{u}} \end{Bmatrix} \tag{9.26}$$

9.1.4 Distance Joint With Offsets

The distance joint with offset (`DistanceJointWithOffset`) imposes the distance between two points that rigidly offset from the respective nodes. It is a variant of the distance joint (`DistanceJoint`) discussed in Section 9.1.3.

Files. It is implemented in files
`mbdyn/struct/distance.h`
`mbdyn/struct/distance.cc`

Definitions.

$$\boldsymbol{d} = \boldsymbol{x}_2 + \boldsymbol{b}_2 - \boldsymbol{x}_1 - \boldsymbol{b}_1 \tag{9.27}$$

$$d = \sqrt{\boldsymbol{d}^T\boldsymbol{d}} \tag{9.28}$$

$$\boldsymbol{u} = \frac{\boldsymbol{d}}{d} \tag{9.29}$$

Limitations:

$$d > 0 \tag{9.30}$$

Constraint equation

$$d\sqrt{\boldsymbol{u}^T\boldsymbol{u}} = d \tag{9.31}$$

Forces:

$$\boldsymbol{F}_1 = \alpha\boldsymbol{u} \tag{9.32a}$$

$$\boldsymbol{M}_1 = \alpha\boldsymbol{b}_1 \times \boldsymbol{u} \tag{9.32b}$$

$$\boldsymbol{F}_2 = -\alpha\boldsymbol{u} \tag{9.32c}$$

$$\boldsymbol{M}_2 = -\alpha\boldsymbol{b}_2 \times \boldsymbol{u} \tag{9.32d}$$

Linearization:

$$\begin{bmatrix} \frac{\alpha}{d}\boldsymbol{I} & -\frac{\alpha}{d}\boldsymbol{b}_1\times & -\frac{\alpha}{d}\boldsymbol{I} & \frac{\alpha}{d}\boldsymbol{b}_2\times & -\boldsymbol{u} \\ \frac{\alpha}{d}\boldsymbol{b}_1\times & -\frac{\alpha}{d}(\boldsymbol{b}_1+\boldsymbol{d})\times\boldsymbol{b}_1\times & -\frac{\alpha}{d}\boldsymbol{b}_1\times & \frac{\alpha}{d}\boldsymbol{b}_1\times\boldsymbol{b}_2\times & -\boldsymbol{b}_1\times\boldsymbol{u} \\ -\frac{\alpha}{d}\boldsymbol{I} & \frac{\alpha}{d}\boldsymbol{b}_1\times & \frac{\alpha}{d}\boldsymbol{I} & -\frac{\alpha}{d}\boldsymbol{b}_2\times & \boldsymbol{u} \\ -\frac{\alpha}{d}\boldsymbol{b}_2\times & \frac{\alpha}{d}\boldsymbol{b}_2\times\boldsymbol{b}_1\times & \frac{\alpha}{d}\boldsymbol{b}_2\times & -\frac{\alpha}{d}(\boldsymbol{b}_2-\boldsymbol{d})\times\boldsymbol{b}_2\times & \boldsymbol{b}_2\times\boldsymbol{u} \\ -\boldsymbol{u}^T & -(\boldsymbol{b}_1\times\boldsymbol{u})^T & \boldsymbol{u}^T & (\boldsymbol{b}_2\times\boldsymbol{u})^T & 0 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \\ \delta\alpha \end{Bmatrix}$$

$$= \begin{Bmatrix} \alpha\boldsymbol{u} \\ \alpha\boldsymbol{b}_1\times\boldsymbol{u} \\ -\alpha\boldsymbol{u} \\ -\alpha\boldsymbol{b}_2\times\boldsymbol{u} \\ d\left(1-\sqrt{\boldsymbol{u}^T\boldsymbol{u}}\right) \end{Bmatrix} \tag{9.33}$$

Constraint Equation Derivative

$$d\boldsymbol{u}^T\dot{\boldsymbol{u}} = 0 \tag{9.34}$$

Forces:

$$\dot{\boldsymbol{F}}_1 = \alpha\dot{\boldsymbol{u}} + \dot{\alpha}\boldsymbol{u} \tag{9.35a}$$

$$\dot{\boldsymbol{M}}_1 = \alpha\left(\boldsymbol{\omega}_1\times\boldsymbol{b}_1\right)\times\boldsymbol{u} + \alpha\boldsymbol{b}_1\times\dot{\boldsymbol{u}} + \dot{\alpha}\boldsymbol{b}_1\times\boldsymbol{u} \tag{9.35b}$$

$$\dot{\boldsymbol{F}}_2 = -\alpha\dot{\boldsymbol{u}} - \dot{\alpha}\boldsymbol{u} \tag{9.35c}$$

$$\dot{\boldsymbol{M}}_2 = -\alpha\left(\boldsymbol{\omega}_2\times\boldsymbol{b}_2\right)\times\boldsymbol{u} - \alpha\boldsymbol{b}_2\times\dot{\boldsymbol{u}} - \dot{\alpha}\boldsymbol{b}_2\times\boldsymbol{u} \tag{9.35d}$$

Linearization: TODO©.

9.1.5 Spherical hinge

The spherical hinge joint (`SphericalHingeJoint`) constrains the positions of two points, that may be rigidly offset from two nodes, to be coincident.

Variants. There exists a pinned version (`SphericalPinJoint`, TODO©).

Files. It is implemented in files
`mbdyn/struct/spherj.h`
`mbdyn/struct/spherj.cc`

Joint data.

$$\tilde{\boldsymbol{b}}_1, \tilde{\boldsymbol{b}}_2 \tag{9.36}$$

where:
$\tilde{\boldsymbol{b}}_1$, $\tilde{\boldsymbol{b}}_2$ offset of connection point from nodes 1, 2 in node reference;

Constraint equations (normalized[1] by `dCoef`)

$$(\boldsymbol{x}_2 + \boldsymbol{b}_2) - (\boldsymbol{x}_1 + \boldsymbol{b}_1) = \boldsymbol{0} \tag{9.37}$$

where:

$\boldsymbol{x}_1$, $\boldsymbol{x}_2$	position of nodes 1, 2;
$\boldsymbol{R}_1$, $\boldsymbol{R}_2$	orientation of nodes 1, 2.
$\boldsymbol{b}_1 = \boldsymbol{R}_1\tilde{\boldsymbol{b}}_1$, $\boldsymbol{b}_2 = \boldsymbol{R}_2\tilde{\boldsymbol{b}}_2$	offset of connection point from nodes 1, 2 in global frame

Residual vector:

$$\begin{aligned}
\text{node1 momentum}: \ & 1-3 && -= && \boldsymbol{F} \\
\text{node1 angular momentum}: \ & 4-6 && -= && (\boldsymbol{R}_1 \cdot \boldsymbol{d}_1) \times \boldsymbol{F} \\
\text{node2 momentum}: \ & 7-9 && += && \boldsymbol{F} \\
\text{node2 angular momentum}: \ & 10-12 && += && (\boldsymbol{R}_2 \cdot \boldsymbol{d}_2) \times \boldsymbol{F} \\
\text{constraint}: \ & 13-15 && = && ((\boldsymbol{x}_1 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_1) - (\boldsymbol{x}_2 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_2))/\texttt{dCoef}
\end{aligned}$$

where:

$\boldsymbol{F}$	constraint reaction force.

9.1.6 Revolute hinge

The revolute hinge joint (`PlaneHingeJoint`) constrains the positions of two points, that may be rigidly offset from two nodes, to be coincident. It also constrains their orientations to keep the respective axis 3 parallel.

Variants. There exist a pinned version (`RevolutePinJoint`, TODO©), a version that does not constrain the position (`RevoluteRotationJoint`), and a version which imposes the relative angular velocity about axis 3 (`AxialRotationJoint`).

Files. It is implemented in files
`mbdyn/struct/planej.h`
`mbdyn/struct/planej.cc`

Joint data.

$$\boldsymbol{d}_1, \boldsymbol{d}_2, \boldsymbol{R}_{h1}, \boldsymbol{R}_{h2} \tag{9.38}$$

where:
$\boldsymbol{d}_1$, $\boldsymbol{d}_2$: offset of nodes 1,2 in node reference;
$\boldsymbol{R}_{h1}$, $\boldsymbol{R}_{h2}$: joint relative orientation wrt. nodes 1,2 (FIXME).

Constraint equations (normalized by `dCoef`)

$$\begin{aligned}
(\boldsymbol{x}_1 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_1) - (\boldsymbol{x}_2 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_2) &= 0 \\
(\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2] &= 0 \\
(\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1] &= 0
\end{aligned}$$

[1] When purely algebraic constraints are considered, to improve the scaling of the matrix, the constraint equation can be divided by `dCoef`, the coefficient related to the integration method illustrated in Equation (6.27).

where:
$\boldsymbol{x}_1$, $\boldsymbol{x}_2$: positions of nodes 1,2;
$\boldsymbol{R}_1$, $\boldsymbol{R}_2$: orientation of nodes 1, 2.

Residual vector:

$$
\begin{aligned}
\text{node1 momentum}: \ 1-3 \quad &-= \quad \boldsymbol{F} \\
\text{node1 angular momentum}: \ 4-6 \quad &-= \quad (\boldsymbol{R}_1 \cdot \boldsymbol{d}_1) \times \boldsymbol{F} + \\
&\qquad (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2] \times (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[1] + \\
&\qquad (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \times (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1] * \boldsymbol{M}[2] \\
\text{node2 momentum}: \ 7-9 \quad &+= \quad \boldsymbol{F} \\
\text{node2 angular momentum}: \ 10-12 \quad &+= \quad (\boldsymbol{R}_2 \cdot \boldsymbol{d}_2) \times \boldsymbol{F} + \\
&\qquad (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2] \times (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[1] + \\
&\qquad (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \times (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1] * \boldsymbol{M}[2] \\
\text{constraint}: \ 13-15 \quad &= \quad ((\boldsymbol{x}_1 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_1) - (\boldsymbol{x}_2 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_2))/\texttt{dCoef} \\
\text{constraint}: \ 16 \quad &= \quad ((\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2])/\texttt{dCoef} \\
\text{constraint}: \ 17 \quad &= \quad ((\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1])/\texttt{dCoef}
\end{aligned}
$$

where:
$\boldsymbol{F}$: constraint reaction force;
$\boldsymbol{M}$: constraint moment reaction (third component null).

Friction:

- add third component of constraint moment $\boldsymbol{M}$
- add a constraint equation; this could be one of the following:
  - direct definition of $\boldsymbol{M}[3]$ in function of relative velocity, friction coefficient and $\boldsymbol{F}$
  - impose null relative velocity
- optionally add internal states dynamic z (for friction)

add third component of constraint moment $\boldsymbol{M}$

Residual vector:

$$
\begin{aligned}
\text{node1 momentum : } 1-3 \quad &-= \quad \boldsymbol{F} \\
\text{node1 angular momentum : } 4-6 \quad &-= \quad (\boldsymbol{R}_1 \cdot \boldsymbol{d}_1) \times \boldsymbol{F} + \\
&\quad\; (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2] \times (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[1] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \times (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1] * \boldsymbol{M}[2] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[3] \\
\text{node2 momentum : } 7-9 \quad &+= \quad \boldsymbol{F} \\
\text{node2 angular momentum : } 10-12 \quad &+= \quad (\boldsymbol{R}_2 \cdot \boldsymbol{d}_2) \times \boldsymbol{F} + \\
&\quad\; (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2] \times (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[1] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \times (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1] * \boldsymbol{M}[2] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * \boldsymbol{M}[3] \\
\text{constraint : } 13-15 \quad &= \quad ((\boldsymbol{x}_1 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_1) - (\boldsymbol{x}_2 + \boldsymbol{R}_1 \cdot \boldsymbol{d}_2))/\texttt{dCoef} \\
\text{constraint : } 16 \quad &= \quad ((\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[2])/\texttt{dCoef} \\
\text{constraint : } 17 \quad &= \quad ((\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\boldsymbol{R}_2 \cdot \boldsymbol{R}_{h2})[1])/\texttt{dCoef} \\
\text{friction : } 18 \quad &= \quad \boldsymbol{M}[3] - f(\boldsymbol{F}, v, \text{friction coef}) \\
&= \quad (\text{rel velocity})[3] \\
\text{(optional) friction states : } 19... \quad &= \quad \dot{z} - g(z, v)
\end{aligned}
$$

where v is the relative velocity $v = r * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$. The constraint is based on positions. This means that during integration $(\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2)$ will NOT have exactly the direction $(\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$. We choose to disregard this error. The friction moment should be along $(\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$.
r is the joint radius.
CHECK THIS!!!
Explicit form of friction moment contribution (FIXME: remove vector $(\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$ and write scalar equation???):
$f(\boldsymbol{F}, \text{rel velocity})$: $\boldsymbol{M}[3] = \text{sh_c}(||\boldsymbol{F}||, f_c(v, z, \dot{z})) * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * ||\boldsymbol{F}|| * f_c(v, z, \dot{z})$,
with $\boldsymbol{R}_{h1}$ constant.
Variation of friction moment contribution:

$$
\begin{aligned}
\delta(\boldsymbol{M}[3](\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]) \quad &= \quad \boldsymbol{M}[3] * (\boldsymbol{R}_{\delta 1} \times \boldsymbol{R}_1)[3] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]) * \delta \boldsymbol{M}[3] \\
&= \quad \boldsymbol{M}[3] * \boldsymbol{R}_1^T \cdot (\boldsymbol{R}_{\delta 1} \times)[3] + \\
&\quad\; (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]) * \delta \boldsymbol{M}[3]
\end{aligned}
$$

Variation of friction moment contribution component:

$$
\begin{aligned}
\delta \boldsymbol{M}[3] &= \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) * f_\mathrm{c}(v,z,\dot{z}) * \frac{\boldsymbol{F}}{||\boldsymbol{F}||} \cdot \delta \boldsymbol{F} + \\
&\quad \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] * ||\boldsymbol{F}|| * \frac{\partial f_\mathrm{c}}{\partial v} * \delta v + \\
&\quad ||\boldsymbol{F}|| * f_\mathrm{c}(v,z,\dot{z}) * \frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial ||\boldsymbol{F}||} \frac{\partial ||\boldsymbol{F}||}{\partial \boldsymbol{F}} \cdot \delta \boldsymbol{F} + \\
&\quad ||\boldsymbol{F}|| * f_\mathrm{c}(v,z,\dot{z}) * \frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial f_\mathrm{c}(v,z,\dot{z})} * \frac{\partial f_\mathrm{c}}{\partial v} * \delta v \\
&= \begin{pmatrix} \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) * f_\mathrm{c}(v,z,\dot{z}) \frac{\boldsymbol{F}}{||\boldsymbol{F}||} \\ ||\boldsymbol{F}|| * f_\mathrm{c}(v,z,\dot{z}) * \frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial ||\boldsymbol{F}||} \end{pmatrix} \cdot \delta \boldsymbol{F} + \\
&\quad \begin{pmatrix} \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) * ||\boldsymbol{F}|| \\ ||\boldsymbol{F}|| * f_\mathrm{c}(v,z,\dot{z}) * \frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial f_\mathrm{c}(v,z,\dot{z})} \end{pmatrix} * \begin{Bmatrix} \frac{\partial f_\mathrm{c}}{\partial v} * \delta v \\ \frac{\partial f_\mathrm{c}}{\partial z} * \delta z \\ \frac{\partial f_\mathrm{c}}{\partial \dot{z}} * \delta \dot{z} \end{Bmatrix}
\end{aligned}
$$

where

- $v = r * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3]$ so that

$$
\begin{aligned}
\delta v &= d * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\delta \boldsymbol{\omega}_1 - \delta \boldsymbol{\omega}_2) + \\
&\quad d * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot (\boldsymbol{R}_{\delta 1} \times \boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \\
&= d * (\boldsymbol{R}_1 \cdot \boldsymbol{R}_{h1})[3] \cdot (\delta \boldsymbol{\omega}_1 - \delta \boldsymbol{\omega}_2) + \\
&\quad d * (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \cdot \boldsymbol{R}_{h1}^T \cdot \boldsymbol{R}_1^T \cdot (\boldsymbol{R}_{\delta 1} \times)[3]
\end{aligned}
$$

- $\mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) = r * C_\alpha(\alpha(\mathrm{constants}, f_\mathrm{c}(v,z,\dot{z}), ||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))) \frac{1}{\sqrt{1 + f_\mathrm{c}^2(v,z,\dot{z})}}$
- $\alpha(\mathrm{constants}, f_\mathrm{c}(v,z,\dot{z}), ||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) = \sin^{-1}\left(\sqrt{\frac{2 * 31 * ||\boldsymbol{F}||}{E * b * \sqrt{1 + f_\mathrm{c}^2(v,z,\dot{z})}} \frac{r'/r}{r' - r}}\right)$
- for very low joint loads (angle of contact $\alpha < 20^\mathrm{o}$, i.e. about less that 1% of the joint allowable load) we can safely assume $C_\alpha \approx 1$ so that
  $\mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z})) \approx r * \frac{1}{\sqrt{1 + f_\mathrm{c}^2(v,z,\dot{z})}}$,
  $\frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial ||\boldsymbol{F}||} = \boldsymbol{0}$
  and
  $\frac{\partial \mathrm{sh_c}(||\boldsymbol{F}||, f_\mathrm{c}(v,z,\dot{z}))}{\partial \mathrm{f_c(v,z,\dot{z})}} = -r * (1 + f_\mathrm{c}^2(v,z,\dot{z}))^{-3/2} * f_\mathrm{c}(v,z,\dot{z})$

9.1.7 Inline

This joint forces a point rigidly attached to node b to slide along a line rigidly attached to node a, thus removing 2 degrees of freedom.

Files. It is implemented in files
`mbdyn/struct/inline.h`
`mbdyn/struct/inline.cc`

Definitions. Orientation of line

$$\boldsymbol{R}_v = \boldsymbol{R}_a \tilde{\boldsymbol{R}}_v \tag{9.39}$$

the axis is along local axis 3 of matrix $\tilde{\boldsymbol{R}}_v$, $\tilde{\boldsymbol{e}}_3$, while directions $\tilde{\boldsymbol{e}}_1$, $\tilde{\boldsymbol{e}}_2$ are constrained.

Origin of line

$$\boldsymbol{x}_p = \boldsymbol{x}_a + \boldsymbol{p} = \boldsymbol{x}_a + \boldsymbol{R}_a \tilde{\boldsymbol{p}} \tag{9.40}$$

Sliding point

$$\boldsymbol{x}_q = \boldsymbol{x}_b + \boldsymbol{q} = \boldsymbol{x}_b + \boldsymbol{R}_b \tilde{\boldsymbol{q}} \tag{9.41}$$

Constraint equations: distance between sliding point $\boldsymbol{x}_q$ and axis null in local directions $\tilde{\boldsymbol{e}}_1$, $\tilde{\boldsymbol{e}}_2$, namely

$$\boldsymbol{e}_i^T \boldsymbol{d} = 0, \tag{9.42}$$

with $i = 1, 2$ and $\boldsymbol{d} = \boldsymbol{x}_q - \boldsymbol{x}_p$. After simple manipulation,

$$\boldsymbol{e}_i^T \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a \right) - \tilde{\boldsymbol{e}}_i^T \tilde{\boldsymbol{p}} = 0. \tag{9.43}$$

Perturbation:

$$\left(\boldsymbol{e}_i \times \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a \right) \right)^T \boldsymbol{\theta}_{a\delta} + \boldsymbol{e}_i^T \left(\delta \boldsymbol{x}_b - \boldsymbol{q} \times \boldsymbol{\theta}_{b\delta} - \delta \boldsymbol{x}_a \right) = 0 \tag{9.44}$$

Forces and moments:

$$\boldsymbol{f}_a = - \sum_{i=1,2} \boldsymbol{e}_i \lambda_i \tag{9.45a}$$

$$\boldsymbol{m}_a = \sum_{i=1,2} \boldsymbol{e}_i \times \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a \right) \lambda_i \tag{9.45b}$$

$$\boldsymbol{f}_b = \sum_{i=1,2} \boldsymbol{e}_i \lambda_i \tag{9.45c}$$

$$\boldsymbol{m}_b = - \sum_{i=1,2} \boldsymbol{e}_i \times \boldsymbol{q} \lambda_i \tag{9.45d}$$

Linearization

$$\left[\begin{array}{cccc} -\boldsymbol{e}_i^T & \left(\boldsymbol{e}_i \times \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a \right) \right)^T & \boldsymbol{e}_i^T & -\left(\boldsymbol{e}_i \times \boldsymbol{q} \right)^T \end{array} \right] \left\{ \begin{array}{c} \delta \boldsymbol{x}_a \\ \boldsymbol{\theta}_{a\delta} \\ \delta \boldsymbol{x}_b \\ \boldsymbol{\theta}_{b\delta} \end{array} \right\} = 0 \tag{9.46}$$

$$\delta \boldsymbol{f}_a = -\sum_{i=1,2} \left(\boldsymbol{e}_i \delta\lambda_i - \lambda_i \boldsymbol{e}_i \times \boldsymbol{\theta}_{a\delta} \right) \tag{9.47a}$$

$$\delta \boldsymbol{m}_a = \sum_{i=1,2} \left(\boldsymbol{e}_i \times (\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a)\, \delta\lambda_i + \lambda_i \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a\right) \times \boldsymbol{e}_i \times \boldsymbol{\theta}_{a\delta} + \lambda_i \boldsymbol{e}_i \times (\delta\boldsymbol{x}_b - \boldsymbol{q} \times \boldsymbol{\theta}_{b\delta} - \delta\boldsymbol{x}_a) \right) \tag{9.47b}$$

$$\delta \boldsymbol{f}_b = \sum_{i=1,2} \left(\boldsymbol{e}_i \delta\lambda_i - \lambda_i \boldsymbol{e}_i \times \boldsymbol{\theta}_{a\delta} \right) \tag{9.47c}$$

$$\delta \boldsymbol{m}_b = -\sum_{i=1,2} \left(\boldsymbol{e}_i \times \boldsymbol{q} \delta\lambda_i + \lambda_i \boldsymbol{q} \times \boldsymbol{e}_i \times \boldsymbol{\theta}_{a\delta} - \lambda_i \boldsymbol{e}_i \times \boldsymbol{q} \times \boldsymbol{\theta}_{b\delta} \right) \tag{9.47d}$$

or

$$\begin{Bmatrix} \delta \boldsymbol{f}_a \\ \delta \boldsymbol{m}_a \\ \delta \boldsymbol{f}_b \\ \delta \boldsymbol{m}_b \end{Bmatrix} = \begin{bmatrix} -\boldsymbol{e}_1 & -\boldsymbol{e}_2 \\ \boldsymbol{e}_1 \times (\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a) & \boldsymbol{e}_2 \times (\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a) \\ \boldsymbol{e}_1 & \boldsymbol{e}_2 \\ -\boldsymbol{e}_1 \times \boldsymbol{q} & -\boldsymbol{e}_2 \times \boldsymbol{q} \end{bmatrix} \begin{Bmatrix} \delta\lambda_1 \\ \delta\lambda_2 \end{Bmatrix}$$
$$+ \begin{bmatrix} \boldsymbol{0} & \sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times & \boldsymbol{0} & \boldsymbol{0} \\ -\sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times & \sum_{i=1,2} \lambda_i \left(\boldsymbol{x}_b + \boldsymbol{q} - \boldsymbol{x}_a\right) \times \boldsymbol{e}_i \times & \sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times & -\sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times \boldsymbol{q} \times \\ \boldsymbol{0} & -\sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & -\sum_{i=1,2} \lambda_i \boldsymbol{q} \times \boldsymbol{e}_i \times & \boldsymbol{0} & \sum_{i=1,2} \lambda_i \boldsymbol{e}_i \times \boldsymbol{q} \times \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_a \\ \boldsymbol{\theta}_{a\delta} \\ \delta\boldsymbol{x}_b \\ \boldsymbol{\theta}_{b\delta} \end{Bmatrix} \tag{9.48}$$

9.1.8 Drive Hinge

This joint (`DriveHingeJoint`) forces two nodes to assume a relative orientation given by a rotation vector $\boldsymbol{\theta}$, whose direction with respect to node 1 represents the rotation axis, and whose amplitude represents the magnitude of the rotation.

Variants. There exist no variants, although a pinned version may be of use (TODO©).

Files. It is implemented in files
`mbdyn/struct/drvhinge.h`
`mbdyn/struct/drvhinge.cc`

Definitions.

$$\begin{aligned} \boldsymbol{R}_{\mathrm{rel}} &= \boldsymbol{R}_1^T \boldsymbol{R}_2 \\ \boldsymbol{\theta} &= \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{\mathrm{rel}}\right)\right) \end{aligned}$$

Limitations:

$$\|\boldsymbol{\theta}\| < \pi \tag{9.49}$$

Constraint equation

$$\boldsymbol{\theta} - \boldsymbol{\theta}_0 = \boldsymbol{0} \tag{9.50}$$

Couples:

$$\begin{aligned} \boldsymbol{M}_1 &= -\boldsymbol{R}_1\boldsymbol{\alpha} \\ \boldsymbol{M}_2 &= \boldsymbol{R}_1\boldsymbol{\alpha} \end{aligned}$$

Linearization:

$$\begin{bmatrix} (\boldsymbol{R}_1\boldsymbol{\alpha})\times & 0 & -\boldsymbol{R}_1 \\ -(\boldsymbol{R}_1\boldsymbol{\alpha})\times & 0 & \boldsymbol{R}_1 \\ -\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T & \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T & 0 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \\ \delta\boldsymbol{\alpha} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{R}_1\boldsymbol{\alpha} \\ -\boldsymbol{R}_1\boldsymbol{\alpha} \\ \boldsymbol{\theta}_0 - \boldsymbol{\theta} \end{Bmatrix} \tag{9.51}$$

The linearization of the reaction moments contribution to the moment equilibrium equations of the nodes is straightforward. The linearization of the constraint equation is a bit more complicated. According to the definition of $\boldsymbol{\theta}$, its linearization yields

$$\begin{aligned} \delta\boldsymbol{\theta} &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\,\mathrm{ax}\left(\delta\boldsymbol{R}_{\mathrm{rel}}\boldsymbol{R}_{\mathrm{rel}}^T\right) \\ &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\,\mathrm{ax}\left(\delta\boldsymbol{R}_1^T\boldsymbol{R}_1 + \boldsymbol{R}_1^T\delta\boldsymbol{R}_2\boldsymbol{R}_2^T\boldsymbol{R}_1\right) \\ &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\,\mathrm{ax}\left(\boldsymbol{R}_1^T\boldsymbol{\theta}_{1\delta}\times{}^T\boldsymbol{R}_1 + \boldsymbol{R}_1^T\boldsymbol{\theta}_{2\delta}\times\boldsymbol{R}_1\right) \\ &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\,\mathrm{ax}\left(-\boldsymbol{R}_1^T\boldsymbol{\theta}_{1\delta}\times\boldsymbol{R}_1 + \boldsymbol{R}_1^T\boldsymbol{\theta}_{2\delta}\times\boldsymbol{R}_1\right) \\ &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\,\mathrm{ax}\left(\boldsymbol{R}_1^T(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})\times\boldsymbol{R}_1\right) \\ &= \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \end{aligned}$$

according to the updated-updated[2] simplifications, $\boldsymbol{\theta}_{i\delta} \overset{\mathrm{uu}}{=} \delta\boldsymbol{g}_i$, thus resulting in

$$\boldsymbol{\theta}_\delta = \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\delta\boldsymbol{g}_2 - \delta\boldsymbol{g}_1) \tag{9.52}$$

note that $\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}$ does not simplify to $\boldsymbol{I}$ because $\boldsymbol{\theta}$ in general is a finite rotation.

9.1.9 Drive Displacement

This joint (`DriveDisplacementJoint`) constrains the relative position of a point optionally offset from node b with respect to a point optionally offset from node a, so that their relative position matches a value that is imposed in node a reference frame; the imposed vector may depend on time and other states during the simulation.

Variants. There exists a pinned version (`DriveDisplacementPinJoint`), discussed in Section 9.1.10.

Files. It is implemented in files
`mbdyn/struct/drvdisp.h`
`mbdyn/struct/drvdisp.cc`

Constraint Equation. The constraint equation is

$$\boldsymbol{\phi} = \boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a - \boldsymbol{f}_a - \boldsymbol{v} = \boldsymbol{0} \tag{9.53}$$

or, based on the initial assumptions,

$$\boldsymbol{\phi} = \boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a - \boldsymbol{R}_a\left(\tilde{\boldsymbol{f}}_a + \tilde{\boldsymbol{v}}\right) = \boldsymbol{0} \tag{9.54}$$

[2] In the following, the operator $\overset{\mathrm{uu}}{=}$ will be used to indicate the updated-updated approximation.

The perturbation of the constraint equation yields

$$\delta\boldsymbol{\phi} = \delta\boldsymbol{x}_b - \boldsymbol{f}_b \times \boldsymbol{\theta}_{b\delta} - \delta\boldsymbol{x}_a + \boldsymbol{d} \times \boldsymbol{\theta}_{a\delta} \tag{9.55}$$

where $\boldsymbol{d} = \boldsymbol{R}_a \left(\tilde{\boldsymbol{f}}_a + \tilde{\boldsymbol{v}} \right)$. The contribution of the constraint to the equilibrium equations is

$$\left\{ \begin{array}{c} \boldsymbol{F}_a \\ \boldsymbol{C}_a \\ \boldsymbol{F}_b \\ \boldsymbol{C}_b \end{array} \right\} = \left\{ \begin{array}{c} -\boldsymbol{\lambda} \\ -\boldsymbol{d} \times \boldsymbol{\lambda} \\ \boldsymbol{\lambda} \\ \boldsymbol{f}_b \times \boldsymbol{\lambda} \end{array} \right\} \tag{9.56}$$

where $\boldsymbol{\lambda}$ is the reaction force in the global reference frame.

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\left[\begin{array}{ccccc} \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{I} \\ \boldsymbol{0} & -\boldsymbol{\lambda} \times \boldsymbol{d} \times & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{d} \times \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{I} \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{\lambda} \times \boldsymbol{f}_b \times & \boldsymbol{f}_b \times \\ -\boldsymbol{I} & \boldsymbol{d} \times & \boldsymbol{I} & -\boldsymbol{f}_b \times & \boldsymbol{0} \end{array} \right] \left\{ \begin{array}{c} \delta\boldsymbol{x}_a \\ \boldsymbol{\theta}_{a\delta} \\ \delta\boldsymbol{x}_b \\ \boldsymbol{\theta}_{b\delta} \\ \delta\boldsymbol{\lambda} \end{array} \right\} \tag{9.57}$$

The derivative of the constraint equation is

$$\dot{\boldsymbol{\phi}} = \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{f}_b - \dot{\boldsymbol{x}}_a - \boldsymbol{\omega}_a \times \boldsymbol{d} - \dot{\boldsymbol{d}} \tag{9.58}$$

where $\dot{\boldsymbol{d}} = \boldsymbol{R}_a \dot{\tilde{\boldsymbol{v}}}$; its perturbation yields

$$\delta\dot{\boldsymbol{\phi}} = \delta\dot{\boldsymbol{x}}_b + \delta\boldsymbol{\omega}_b \times \boldsymbol{f}_b + \boldsymbol{\omega}_b \times \boldsymbol{\theta}_{b\delta} \times \boldsymbol{f}_b - \delta\dot{\boldsymbol{x}}_a - \delta\boldsymbol{\omega}_a \times \boldsymbol{d} - \boldsymbol{\omega}_a \times \boldsymbol{\theta}_{a\delta} \times \boldsymbol{d} - \boldsymbol{\theta}_{a\delta} \times \dot{\boldsymbol{d}}. \tag{9.59}$$

The contributions to the Jacobian matrix and residual of the initial assembly are

$$
\left[\begin{array}{ccccc}
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & -\boldsymbol{I} \\
\mathbf{0} & -\boldsymbol{\lambda}\times\boldsymbol{d}\times\ -\boldsymbol{\mu}\times\dot{\boldsymbol{d}}\times+(\boldsymbol{\omega}_a\times\boldsymbol{\mu})\times\boldsymbol{d}\times & \mathbf{0} & \mathbf{0} & -\boldsymbol{d}\times \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{I} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{\lambda}\times\boldsymbol{f}_b\times\ -(\boldsymbol{\omega}_b\times\boldsymbol{\mu})\times\boldsymbol{f}_b\times & \boldsymbol{f}_b\times \\
-\boldsymbol{I} & \boldsymbol{d}\times & \boldsymbol{I} & -\boldsymbol{f}_b\times & \mathbf{0} \\
\hline
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\mathbf{0} & -\boldsymbol{\mu}\times\boldsymbol{d}\times & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{\mu}\times\boldsymbol{f}_b\times & \mathbf{0} \\
\mathbf{0} & \dot{\boldsymbol{d}}\times\ +\boldsymbol{\omega}_a\times\boldsymbol{d}\times & \mathbf{0} & -\boldsymbol{\omega}_b\times\boldsymbol{f}_b\times & \mathbf{0}
\end{array}\right]
\left\{\begin{array}{c}
\delta\boldsymbol{x}_a \\ \boldsymbol{\theta}_{a\delta} \\ \delta\boldsymbol{x}_b \\ \boldsymbol{\theta}_{b\delta} \\ \delta\boldsymbol{\lambda}
\end{array}\right\}
$$

$$
+\left[\begin{array}{ccccc}
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\mathbf{0} & -\boldsymbol{d}\times\boldsymbol{\mu}\times & \mathbf{0} & \mathbf{0} & -\dot{\boldsymbol{d}}\times\ +\boldsymbol{d}\times\boldsymbol{\omega}_a\times \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{f}_b\times\boldsymbol{\mu}\times & -\boldsymbol{f}_b\times\boldsymbol{\omega}_b\times \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\
\hline
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & -\boldsymbol{I} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & -\boldsymbol{d}\times \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{I} \\
\mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{f}_b\times \\
-\boldsymbol{I} & \boldsymbol{d}\times & \boldsymbol{I} & -\boldsymbol{f}_b\times & \mathbf{0}
\end{array}\right]
\left\{\begin{array}{c}
\delta\dot{\boldsymbol{x}}_a \\ \delta\boldsymbol{\omega}_a \\ \delta\dot{\boldsymbol{x}}_b \\ \delta\boldsymbol{\omega}_b \\ \delta\boldsymbol{\mu}
\end{array}\right\}
$$

$$
=\left\{\begin{array}{c}
\boldsymbol{\lambda} \\
\boldsymbol{d}\times\boldsymbol{\lambda}-\boldsymbol{d}\times\boldsymbol{\omega}_a\times\boldsymbol{\mu}+\dot{\boldsymbol{d}}\times\boldsymbol{\mu} \\
-\boldsymbol{\lambda} \\
-\boldsymbol{f}_b\times\boldsymbol{\lambda}+\boldsymbol{f}_b\times\boldsymbol{\omega}_b\times\boldsymbol{\mu} \\
\boldsymbol{x}_a+\boldsymbol{d}-\boldsymbol{x}_b-\boldsymbol{f}_b \\
\hline
\boldsymbol{\mu} \\
\boldsymbol{d}\times\boldsymbol{\mu} \\
-\boldsymbol{\mu} \\
-\boldsymbol{f}_b\times\boldsymbol{\mu} \\
\dot{\boldsymbol{x}}_a+\boldsymbol{\omega}_a\times\boldsymbol{d}+\dot{\boldsymbol{d}}-\dot{\boldsymbol{x}}_b-\boldsymbol{\omega}_b\times\boldsymbol{f}_b
\end{array}\right\} \tag{9.60}
$$

9.1.10 Drive Displacement Pin

This joint (`DriveDisplacementPinJoint`) is the "pinned" variant of the drive displacement joint (`DriveDisplacementJoint`) discussed in Section 9.1.9. It imposes the absolute position $\boldsymbol{v}$ of a point optionally connected to a node by a rigid offset $\boldsymbol{f}$:

$$\boldsymbol{\phi}=\boldsymbol{x}+\boldsymbol{f}-\boldsymbol{x}_0-\boldsymbol{v}=\mathbf{0} \tag{9.61}$$

The perturbation of the constraint equation yields

$$\delta\boldsymbol{\phi}=\delta\boldsymbol{x}-\boldsymbol{f}\times\boldsymbol{\theta}_\delta \tag{9.62}$$

The contribution of the constraint to the equilibrium equations is

$$\left\{\begin{array}{c}\boldsymbol{F}\\ \boldsymbol{C}\end{array}\right\}=\left\{\begin{array}{c}\boldsymbol{\lambda}\\ \boldsymbol{f}\times\boldsymbol{\lambda}\end{array}\right\} \tag{9.63}$$

where $\boldsymbol{\lambda}$ is the reaction force in the absolute reference frame.

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\begin{bmatrix} \mathbf{0} & \mathbf{0} & \boldsymbol{I} \\ \mathbf{0} & \boldsymbol{\lambda}\times\boldsymbol{f}\times & \boldsymbol{f}\times \\ \boldsymbol{I} & -\boldsymbol{f}\times & \mathbf{0} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x} \\ \boldsymbol{\theta}_\delta \\ \delta\boldsymbol{\lambda} \end{Bmatrix} \tag{9.64}$$

The derivative of the constraint equation is

$$\dot{\boldsymbol{\phi}} = \dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{f} - \dot{\boldsymbol{v}}; \tag{9.65}$$

its perturbation yields

$$\delta\dot{\boldsymbol{\phi}} = \delta\dot{\boldsymbol{x}} - \boldsymbol{f}\times\delta\boldsymbol{\omega} - \boldsymbol{\omega}\times\boldsymbol{f}\times\boldsymbol{\theta}_\delta \tag{9.66}$$

The contributions to the Jacobian matrix and residual of the initial assembly are

$$\left[\begin{array}{ccc} \mathbf{0} & \mathbf{0} & \boldsymbol{I} \\ \mathbf{0} & \boldsymbol{\lambda}\times\boldsymbol{f}\times - (\boldsymbol{\omega}\times\boldsymbol{\mu})\times\boldsymbol{f}\times & \boldsymbol{f}\times \\ \boldsymbol{I} & -\boldsymbol{f}\times & \mathbf{0} \\ \hline \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & \boldsymbol{\mu}\times\boldsymbol{f}\times & \mathbf{0} \\ \mathbf{0} & -\boldsymbol{\omega}\times\boldsymbol{f}\times & \mathbf{0} \end{array}\right] \begin{Bmatrix} \delta\boldsymbol{x} \\ \boldsymbol{\theta}_\delta \\ \delta\boldsymbol{\lambda} \end{Bmatrix}$$

$$\left[\begin{array}{ccc} \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & \boldsymbol{f}\times\boldsymbol{\mu}\times & -\boldsymbol{f}\times\boldsymbol{\omega}\times \\ \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \hline \mathbf{0} & \mathbf{0} & \boldsymbol{I} \\ \mathbf{0} & \mathbf{0} & \boldsymbol{f}\times \\ \boldsymbol{I} & -\boldsymbol{f}\times & \mathbf{0} \end{array}\right] \begin{Bmatrix} \delta\dot{\boldsymbol{x}} \\ \delta\boldsymbol{\omega} \\ \delta\boldsymbol{\mu} \end{Bmatrix} = \left\{\begin{array}{c} -\boldsymbol{\lambda} \\ -\boldsymbol{f}\times\boldsymbol{\lambda} + \boldsymbol{f}\times\boldsymbol{\omega}\times\boldsymbol{\mu} \\ \boldsymbol{x}_0 + \boldsymbol{v} - \boldsymbol{x} - \boldsymbol{f} \\ \hline -\boldsymbol{\mu} \\ -\boldsymbol{f}\times\boldsymbol{\mu} \\ \dot{\boldsymbol{v}} - \dot{\boldsymbol{x}} - \boldsymbol{\omega}\times\boldsymbol{f} \end{array}\right\} \tag{9.67}$$

9.1.11 Imposed Displacement

The imposed displacement joint (`ImposedDisplacementJoint`) is similar to the drive displacement joint (`DriveDisplacementPinJoint`), discussed in Section 9.1.10, but the relative displacement v, a scalar possibly dependent on the time and on other states of the problem, is imposed only in direction $\tilde{\boldsymbol{e}}_a$, relative to node a.

Variants. There exists a pinned version (`ImposedDisplacementPinJoint`), discussed in Section 9.1.12.

Files. It is implemented in files

```
mbdyn/struct/impdisp.h
mbdyn/struct/impdisp.cc
```

Constraint equation.

$$\phi = \boldsymbol{e}_a^T\left(\boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a - \boldsymbol{f}_a\right) - v = 0, \tag{9.68}$$

or, based on the initial assumptions,

$$\phi = \boldsymbol{e}_a^T\left(\boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a\right) - \left(\tilde{\boldsymbol{e}}_a^T\tilde{\boldsymbol{f}}_a + v\right) = 0, \tag{9.69}$$

or

$$\phi = \boldsymbol{e}_a^T\boldsymbol{d} - \left(\tilde{\boldsymbol{e}}_a^T\tilde{\boldsymbol{f}}_a + v\right) = 0, \tag{9.70}$$

where $\boldsymbol{d} = \boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a$ and $\tilde{\boldsymbol{e}}_a$ is constant in the reference frame of node a. The perturbation of the constraint equation yields

$$\delta\phi = \boldsymbol{e}_a^T \left(\delta\boldsymbol{x}_b - \boldsymbol{f}_b \times \boldsymbol{\theta}_{b\delta} - \delta\boldsymbol{x}_a\right) + \left(\boldsymbol{e}_a \times (\boldsymbol{x}_b + \boldsymbol{f}_b - \boldsymbol{x}_a)\right)^T \boldsymbol{\theta}_{a\delta}, \tag{9.71}$$

or

$$\delta\phi = \boldsymbol{e}_a^T \left(\delta\boldsymbol{x}_b - \boldsymbol{f}_b \times \boldsymbol{\theta}_{b\delta} - \delta\boldsymbol{x}_a\right) + \left(\boldsymbol{e}_a \times \boldsymbol{d}\right)^T \boldsymbol{\theta}_{a\delta}. \tag{9.72}$$

The contribution of the constraint to the equilibrium equations is

$$\left\{ \begin{array}{c} \boldsymbol{F}_a \\ \boldsymbol{C}_a \\ \boldsymbol{F}_b \\ \boldsymbol{C}_b \end{array} \right\} = \left\{ \begin{array}{c} -\boldsymbol{e}_a\lambda \\ -\boldsymbol{d} \times \boldsymbol{e}_a\lambda \\ \boldsymbol{e}_a\lambda \\ \boldsymbol{f}_b \times \boldsymbol{e}_a\lambda \end{array} \right\} \tag{9.73}$$

where λ is the reaction force (a scalar).

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\left[\begin{array}{ccccc} \boldsymbol{0} & \lambda\boldsymbol{e}_a \times & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{e}_a \\ -\lambda\boldsymbol{e}_a \times & \lambda\boldsymbol{d} \times \boldsymbol{e}_a \times & \lambda\boldsymbol{e}_a \times & -\lambda\boldsymbol{e}_a \times \boldsymbol{f}_b \times & -\boldsymbol{d} \times \boldsymbol{e}_a \\ \boldsymbol{0} & -\lambda\boldsymbol{e}_a \times & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{e}_a \\ \boldsymbol{0} & -\lambda\boldsymbol{f}_b \times \boldsymbol{e}_a \times & \boldsymbol{0} & \lambda\boldsymbol{e}_a \times \boldsymbol{f}_b \times & \boldsymbol{f}_b \times \boldsymbol{e}_a \\ -\boldsymbol{e}_a^T & -\left(\boldsymbol{d} \times \boldsymbol{e}_a\right)^T & \boldsymbol{e}_a^T & \left(\boldsymbol{f}_b \times e_a\right)^T & \boldsymbol{0} \end{array} \right] \left\{ \begin{array}{c} \delta\boldsymbol{x}_a \\ \boldsymbol{\theta}_{a\delta} \\ \delta\boldsymbol{x}_b \\ \boldsymbol{\theta}_{b\delta} \\ \delta\lambda \end{array} \right\} \tag{9.74}$$

The constraint derivative is

$$\dot{\phi} = \boldsymbol{e}_a^T \left(\dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{f}_b - \dot{\boldsymbol{x}}_a\right) + \boldsymbol{d}^T \left(\boldsymbol{\omega}_a \times \boldsymbol{e}_a\right) - \dot{v} = 0, \tag{9.75}$$

or

$$\dot{\phi} = \boldsymbol{e}_a^T \dot{\boldsymbol{d}} + \boldsymbol{d}^T \left(\boldsymbol{\omega}_a \times \boldsymbol{e}_a\right) - \dot{v} = 0, \tag{9.76}$$

with $\dot{\boldsymbol{d}} = \dot{\boldsymbol{x}}_b + \boldsymbol{\omega}_b \times \boldsymbol{f}_b - \dot{\boldsymbol{x}}_a$. Its linearization yields

$$\begin{aligned} \delta\dot{\phi} = {} & \boldsymbol{e}_a^T \delta\dot{\boldsymbol{x}}_b - \boldsymbol{e}_a^T \delta\dot{\boldsymbol{x}}_a + \left(\boldsymbol{f}_b \times \boldsymbol{e}_a\right)^T \delta\boldsymbol{\omega}_b - \left(\boldsymbol{d} \times \boldsymbol{e}_a\right)^T \delta\boldsymbol{\omega}_a \\ & + \left(\boldsymbol{\omega}_a \times \boldsymbol{e}_a\right)^T \delta\boldsymbol{x}_b - \left(\boldsymbol{\omega}_a \times \boldsymbol{e}_a\right)^T \delta\boldsymbol{x}_a \\ & + \left(\boldsymbol{f}_b \times \boldsymbol{e}_a \times (\boldsymbol{\omega}_b - \boldsymbol{\omega}_a)\right)^T \boldsymbol{\theta}_{b\delta} + \left(\boldsymbol{e}_a \times \left(\dot{\boldsymbol{d}} - \boldsymbol{\omega}_a \times \boldsymbol{d}\right)\right)^T \boldsymbol{\theta}_{a\delta} \end{aligned} \tag{9.77}$$

9.1.12 Imposed Displacement Pin

The imposed displacement pin joint (`ImposedDisplacementPinJoint`) is the "pinned" variant of the imposed displacement joint (`ImposedDisplacementJoint`) discussed in Section 9.1.11.

In this case, the direction $\boldsymbol{e}$ is referred to the absolute frame, so it does no longer depend on the state of the problem.

Variants. There exists a version that imposes the relative displacement of two nodes along a direction that is fixed with respect to one of them (`ImposedDisplacementJoint`), discussed in Section 9.1.11.

Files. It is implemented in files
`mbdyn/struct/impdisp.h`
`mbdyn/struct/impdisp.cc`
The constraint equation is

$$\phi = \boldsymbol{e}^T (\boldsymbol{x} + \boldsymbol{f} - \boldsymbol{x}_0) - v = 0, \tag{9.78}$$

or

$$\phi = \boldsymbol{e}^T \boldsymbol{d} - v = 0, \tag{9.79}$$

where $\boldsymbol{d} = \boldsymbol{x} + \boldsymbol{f} - \boldsymbol{x}_0$. The perturbation of the constraint equation yields

$$\delta\phi = \boldsymbol{e}^T (\delta\boldsymbol{x}_b - \boldsymbol{f}_b \times \boldsymbol{\theta}_{b\delta}) . \tag{9.80}$$

The contribution of the constraint to the equilibrium equations is

$$\left\{ \begin{array}{c} \boldsymbol{F} \\ \boldsymbol{C} \end{array} \right\} = \left\{ \begin{array}{c} \boldsymbol{e}\lambda \\ \boldsymbol{f} \times \boldsymbol{e}\lambda \end{array} \right\} \tag{9.81}$$

where λ is the reaction force (a scalar).

The contribution of forces and moments and of the constraint equation to the Jacobian matrix is

$$\left[\begin{array}{ccc} \mathbf{0} & \mathbf{0} & \boldsymbol{e} \\ \mathbf{0} & \lambda\boldsymbol{e} \times \boldsymbol{f} \times & \boldsymbol{f} \times \boldsymbol{e} \\ \boldsymbol{e}^T & (\boldsymbol{f} \times e)^T & \mathbf{0} \end{array} \right] \left\{ \begin{array}{c} \delta\boldsymbol{x} \\ \boldsymbol{\theta}_\delta \\ \delta\lambda \end{array} \right\} \tag{9.82}$$

The constraint derivative is

$$\dot{\phi} = \boldsymbol{e}^T (\dot{\boldsymbol{x}} + \boldsymbol{\omega} \times \boldsymbol{f}) - \dot{v} = 0, \tag{9.83}$$

or

$$\dot{\phi} = \boldsymbol{e}^T \dot{\boldsymbol{d}} - \dot{v} = 0, \tag{9.84}$$

Its linearization yields

$$\left[\begin{array}{cccccc} \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{e} & \mathbf{0} \\ \mathbf{0} & \lambda\boldsymbol{e} \times \boldsymbol{f} \times & \mathbf{0} & \mathbf{0} & \boldsymbol{f} \times \boldsymbol{e} & \mathbf{0} \\ \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{e} \\ \mathbf{0} & \mu\boldsymbol{e} \times \boldsymbol{f} \times & \mathbf{0} & \mathbf{0} & \mathbf{0} & \boldsymbol{f} \times \boldsymbol{e} \\ \boldsymbol{e}^T & (\boldsymbol{f} \times e)^T & \mathbf{0} & \mathbf{0} & \mathbf{0} & \mathbf{0} \\ \mathbf{0} & -(\boldsymbol{f} \times \boldsymbol{\omega} \times \boldsymbol{e})^T & \boldsymbol{e}^T & (\boldsymbol{f} \times \boldsymbol{e})^T & \mathbf{0} & \mathbf{0} \end{array} \right] \left\{ \begin{array}{c} \delta\boldsymbol{x} \\ \boldsymbol{\theta}_\delta \\ \delta\dot{\boldsymbol{x}} \\ \delta\boldsymbol{\omega} \\ \delta\lambda \\ \delta\mu \end{array} \right\} \tag{9.85}$$

9.1.13 Total Joint

This joint (`TotalJoint`) forces two nodes to assume an imposed relative position and orientation about selected axes. Both imposed position and orientation are specified in the reference frame of node 1. The joint consists in 6 equations, 3 for positions and 3 for orientation, that can be selectively turned on or off to enforce a constraint on that DOF.

Variants. There exists a pinned version of this joint that imposes the absolute position and orientation of a node (`TotalPinJoint`). It is discussed in Section 9.1.14.

Files. It is implemented in files
`mbdyn/struct/totalj.h`
`mbdyn/struct/totalj.cc`

Definitions. The position of the nodes with respect to the global reference frame are $\boldsymbol{x}_1$ and $\boldsymbol{x}_2$. The matrices that describe the orientation of the nodes with respect to the global reference frame are $\boldsymbol{R}_1$ and $\boldsymbol{R}_2$. An offset is allowed for the location of the points where the relative position is constrained; the offsets $\tilde{\boldsymbol{f}}_1$ and $\tilde{\boldsymbol{f}}_2$ are rigidly connected to the nodes, so in the global reference frame their expression is

$$\boldsymbol{f}_1 = \boldsymbol{R}_1 \tilde{\boldsymbol{f}}_1 \tag{9.86a}$$

$$\boldsymbol{f}_2 = \boldsymbol{R}_2 \tilde{\boldsymbol{f}}_2. \tag{9.86b}$$

The position constraint may be expressed in a reference frame that is rigidly connected to node 1, $\tilde{\boldsymbol{R}}_{1h}$, whose orientation in the global reference frame is

$$\boldsymbol{R}_{1h} = \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1h}. \tag{9.87}$$

Similarly, the orientation constraint may be expressed in a reference frame that is rigidly connected to both nodes by matrices $\tilde{\boldsymbol{R}}_{1hr}$ and $\tilde{\boldsymbol{R}}_{2hr}$, whose orientation in the global reference frame is

$$\boldsymbol{R}_{1hr} = \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1hr} \tag{9.88a}$$

$$\boldsymbol{R}_{2hr} = \boldsymbol{R}_2 \tilde{\boldsymbol{R}}_{2hr}. \tag{9.88b}$$

The relative position and orientation may refer to different local reference frames to increase the versatility of the element.

It is essential to notice that the differentiation of the constraint orientation matrices does not affect the relative orientation between the constraint and each node, namely matrices $\tilde{\boldsymbol{R}}_{1hr}$ and $\tilde{\boldsymbol{R}}_{2hr}$, which are constant. As a consequence,

$$\begin{aligned}\delta\boldsymbol{R}_{1hr} &= \delta\boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1hr} \\ &= \boldsymbol{\theta}_{1\delta} \times \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1hr} \\ &= \boldsymbol{\theta}_{1\delta} \times \boldsymbol{R}_{1hr}\end{aligned} \tag{9.89a}$$

$$\delta\boldsymbol{R}_{2hr} = \boldsymbol{\theta}_{2\delta} \times \boldsymbol{R}_{2hr}, \tag{9.89b}$$

and

$$\dot{\boldsymbol{R}}_{1hr} = \boldsymbol{\omega}_1 \times \boldsymbol{R}_{1hr} \tag{9.90}$$

$$\dot{\boldsymbol{R}}_{2hr} = \boldsymbol{\omega}_2 \times \boldsymbol{R}_{2hr}. \tag{9.91}$$

The same is true for the relative position orientation matrix, $\boldsymbol{R}_{1h}$.

Orientation Constraint. The relative orientation is expressed by matrix

$$\boldsymbol{R}_{\mathrm{rel}} = \boldsymbol{R}_{1hr}^T \boldsymbol{R}_{2hr} \tag{9.92}$$

The desired relative orientation can be expressed by means of a rotation vector $\boldsymbol{\theta}_0$; the corresponding rotation matrix is

$$\boldsymbol{R}_0 = \exp\left(\boldsymbol{\theta}_0 \times\right). \tag{9.93}$$

This operation can always be performed with no ambiguity, regardless of the amplitude of $\boldsymbol{\theta}_0$. However, the same is not true for the inverse operation, namely

$$\boldsymbol{\theta}_0 = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_0\right)\right), \tag{9.94}$$

which can only yield the minimal $\boldsymbol{\theta}_0$ corresponding to $\boldsymbol{R}_0$, with the indetermination corresponding to an arbitrary amount of complete revolutions.

The equality

$$\boldsymbol{\theta} = \boldsymbol{\theta}_0 \tag{9.95}$$

implies that

$$\boldsymbol{R}_{\mathrm{rel}} = \boldsymbol{R}_0. \tag{9.96}$$

Equation (9.96) can be rewritten as

$$\boldsymbol{R}_{\mathrm{rel}}\boldsymbol{R}_0^T = \boldsymbol{I}, \tag{9.97}$$

and thus Eq. (9.95), after defining

$$\boldsymbol{R}^\delta = \boldsymbol{R}_{\mathrm{rel}}\boldsymbol{R}_0^T, \tag{9.98}$$

is equivalent to

$$\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}^\delta\right)\right) = \boldsymbol{0}. \tag{9.99}$$

In general, the difference between the desired rotation $\boldsymbol{\theta}_0$ and the current relative rotation vector between nodes 1 and 2,

$$\boldsymbol{\theta} = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1hr}^T\boldsymbol{R}_{2hr}\right)\right) \tag{9.100}$$

through the previous redefinition can be expressed as

$$\boldsymbol{\theta}^\delta = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1hr}^T\boldsymbol{R}_{2hr}\boldsymbol{R}_0^T\right)\right) \tag{9.101}$$

and is equivalent to

$$\boldsymbol{\theta}^\delta = \boldsymbol{\theta} - \boldsymbol{\theta}_0 \tag{9.102}$$

when $\boldsymbol{\theta}^\delta = \boldsymbol{0}$.

Position Constraint. The desired relative position is imposed by means of a vector $\boldsymbol{x}_0$ defined in the relative position constraint reference frame of node 1. The relative position is represented by vector $\boldsymbol{x}$, defined as

$$\boldsymbol{x} = \boldsymbol{R}_{1h}^T\left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1\right); \tag{9.103}$$

the constraint equations for the relative position are:

$$\boldsymbol{x} = \boldsymbol{x}_0. \tag{9.104}$$

In analogy with the definition of $\boldsymbol{\theta}^\delta$, a vector $\boldsymbol{x}^\delta$ can be used to express the constraint on the position DOFs,

$$\boldsymbol{x}^\delta = \boldsymbol{x} - \boldsymbol{x}_0. \tag{9.105}$$

Constraint Equations. The resulting constraint equations are:

$$\boldsymbol{x}^{\delta} = \mathbf{0} \tag{9.106a}$$

$$\boldsymbol{\theta}^{\delta} = \mathbf{0}. \tag{9.106b}$$

Any component of $\boldsymbol{x}^{\delta}$ and $\boldsymbol{\theta}^{\delta}$ can be selectively set to zero to enforce a constraint on that degree of freedom. The axis about which the constraint is applied can be arbitrarily defined with respect to the node orientation by appropriately setting the constant relative orientation matrix of each node, both for position ($\tilde{\boldsymbol{R}}_{1h}$) and for orientation ($\tilde{\boldsymbol{R}}_{1hr}$ and $\tilde{\boldsymbol{R}}_{2hr}$). For imposed rotations, an arbitrary amplitude of the rotation about the constraint axis can be imposed by means of the components of vector $\boldsymbol{\theta}_0$. The same is true for positions, by means of $\tilde{\boldsymbol{v}}$.

Alternatively, equations related to any of the components of $\boldsymbol{x}^{\delta}$ and $\boldsymbol{\theta}^{\delta}$ can be omitted, thus omitting the constraint along or about the corresponding axis. The corresponding value of $\boldsymbol{x}^{\delta}$ and $\boldsymbol{\theta}^{\delta}$ could be used to apply moments based on the relative position/orientation of the nodes, e.g. linear/rotational springs or dampers. In this case, the singularity problem on rotations is back: the norm of the relative rotation must not exceed π, i.e. $\left|\boldsymbol{\theta}^{\delta}\right| < \pi$. Note that the relative rotation is computed with respect to $\boldsymbol{\theta}_0$, so an anelastic (or imposed) rotation can be easily applied to the spring, resulting in an imposed rotation with stiffness.

Linearization. First, the perturbation of $\boldsymbol{x}^{\delta}$,

$$\delta\boldsymbol{x}^{\delta} = \boldsymbol{R}_{1h}^{T}\left(\delta\boldsymbol{x}_2 - \boldsymbol{b}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{b}_1 \times \boldsymbol{\theta}_{1\delta}\right) \tag{9.107}$$

is computed, where

$$\boldsymbol{b}_1 = \boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \tag{9.108a}$$

$$\boldsymbol{b}_2 = \boldsymbol{f}_2. \tag{9.108b}$$

Note that, since the constraint equations are defined by setting to zero any components of the vector $\boldsymbol{x}^{\delta}$, the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix $\boldsymbol{R}_{1h}$.

Then, the perturbation of $\boldsymbol{\theta}^{\delta}$ results from

$$\begin{aligned}\boldsymbol{\theta}_{\delta}^{\delta}\times &= \delta\boldsymbol{R}^{\delta}\boldsymbol{R}^{\delta T}\\ &= \boldsymbol{R}_{1hr}^{T}\boldsymbol{\theta}_{1\delta}\times^{T}\boldsymbol{R}_{1hr} + \boldsymbol{R}_{1hr}^{T}\boldsymbol{\theta}_{2\delta}\times\boldsymbol{R}_{1hr}\\ &= \boldsymbol{R}_{1hr}^{T}\left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right)\times\boldsymbol{R}_{1hr},\end{aligned} \tag{9.109}$$

which implies

$$\boldsymbol{\theta}_{\delta}^{\delta} = \boldsymbol{R}_{1hr}^{T}\left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right). \tag{9.110}$$

Note that, since the constraint equations are defined by setting to zero any components of the vector $\boldsymbol{\theta}^{\delta}$, the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix $\boldsymbol{R}_{1hr}$.

After calling $\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}}$ and $\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}}$ the Lagrange multipliers respectively related to the relative position and orientation constraints, and noticing that in the global reference frame they become

$$\boldsymbol{\lambda}_{\boldsymbol{x}} = \boldsymbol{R}_{1h}\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}} \tag{9.111a}$$

$$\boldsymbol{\lambda}_{\boldsymbol{\theta}} = \boldsymbol{R}_{1hr}\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}}, \tag{9.111b}$$

the contribution of the constraint reactions to the equilibrium equations of the participating nodes is

$$\boldsymbol{F}_1 = -\boldsymbol{\lambda}_{\boldsymbol{x}} \tag{9.112a}$$

$$\boldsymbol{C}_1 = -\boldsymbol{b}_1 \times \boldsymbol{\lambda}_{\boldsymbol{x}} - \boldsymbol{\lambda}_{\boldsymbol{\theta}} \tag{9.112b}$$

$$\boldsymbol{F}_2 = \boldsymbol{\lambda}_{\boldsymbol{x}} \tag{9.112c}$$

$$\boldsymbol{C}_2 = \boldsymbol{b}_2 \times \boldsymbol{\lambda}_{\boldsymbol{x}} + \boldsymbol{\lambda}_{\boldsymbol{\theta}}. \tag{9.112d}$$

Due to the simplifications related to the updated-updated approach, the contribution of the constraint equations and of the equilibrium to the Jacobian matrix is:

$$\left[\begin{array}{cccc|cc}
\boldsymbol{0} & \boldsymbol{\lambda}_{\boldsymbol{x}} \times & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{R}_{1h} & \boldsymbol{0} \\
-\boldsymbol{\lambda}_{\boldsymbol{x}} \times & \boldsymbol{b}_1 \times \boldsymbol{\lambda}_{\boldsymbol{x}} \times + \boldsymbol{\lambda}_{\boldsymbol{\theta}} \times & \boldsymbol{\lambda}_{\boldsymbol{x}} \times & -\boldsymbol{\lambda}_{\boldsymbol{x}} \times \boldsymbol{b}_2 \times & -\boldsymbol{b}_1 \times \boldsymbol{R}_{1h} & -\boldsymbol{R}_{1hr} \\
\boldsymbol{0} & -\boldsymbol{\lambda}_{\boldsymbol{x}} \times & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{R}_{1h} & \boldsymbol{0} \\
\boldsymbol{0} & -\boldsymbol{b}_2 \times \boldsymbol{\lambda}_{\boldsymbol{x}} \times - \boldsymbol{\lambda}_{\boldsymbol{\theta}} \times & \boldsymbol{0} & \boldsymbol{\lambda}_{\boldsymbol{x}} \times \boldsymbol{b}_2 \times & \boldsymbol{b}_2 \times \boldsymbol{R}_{1h} & \boldsymbol{R}_{1hr} \\
\hline
-\boldsymbol{R}_{1h}^T & \boldsymbol{R}_{1h}^T \boldsymbol{b}_1 \times & \boldsymbol{R}_{1h}^T & -\boldsymbol{R}_{1h}^T \boldsymbol{b}_2 \times & \boldsymbol{0} & \boldsymbol{0} \\
\boldsymbol{0} & -\boldsymbol{R}_{1hr}^T & \boldsymbol{0} & \boldsymbol{R}_{1hr}^T & \boldsymbol{0} & \boldsymbol{0}
\end{array}\right]
\left\{\begin{array}{c}
\delta\boldsymbol{x}_1 \\
\boldsymbol{\theta}_{1\delta} \\
\delta\boldsymbol{x}_2 \\
\boldsymbol{\theta}_{2\delta} \\
\hline
\delta\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}} \\
\delta\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}}
\end{array}\right\}$$

$$= \left\{\begin{array}{c}
\boldsymbol{\lambda}_{\boldsymbol{x}} \\
\boldsymbol{b}_1 \times \boldsymbol{\lambda}_{\boldsymbol{x}} + \boldsymbol{\lambda}_{\boldsymbol{\theta}} \\
-\boldsymbol{\lambda}_{\boldsymbol{x}} \\
-\boldsymbol{b}_2 \times \boldsymbol{\lambda}_{\boldsymbol{x}} - \boldsymbol{\lambda}_{\boldsymbol{\theta}} \\
\hline
-\boldsymbol{x}^{\delta} \\
-\boldsymbol{\theta}^{\delta}
\end{array}\right\}. \tag{9.113}$$

The updated-updated form is obtained by simply replacing $\boldsymbol{\theta}_{1\delta}$ and $\boldsymbol{\theta}_{2\delta}$ with $\delta\boldsymbol{g}_1$ and $\delta\boldsymbol{g}_2$, respectively.

Summary

- each component of the relative position/orientation can be subjected to separate constraint conditions;
- an ideal constraint results from activating the constraint equation on that degree of freedom and setting to zero, or to any desired, time dependent value the relative position/orientation of that component;
- a deformable constraint results from deactivating the constraint equation on that degree of freedom, possibly adding a constitutive law based on that error and possibly on its derivative (currently, this requires a separate instance of a deformable element); in this case, the norm of the amplitude of the relative orientation is limited to π;
- the imposed relative orientation goes in matrix $\boldsymbol{R}_0$ by means of a rotation vector $\boldsymbol{\theta}_0$ which can be time dependent; there is no limitation on the amplitude of that rotation;
- friction can be added as well on those components that are not constrained;
- an interesting option, left as a future development, consists in leaving all the constraint equations always in place, and activate/deactivate them based on some trigger.

Future Development: Velocity/Acceleration

The time derivative of vector $\boldsymbol{x}^{\delta}$ yields

$$\boldsymbol{v}^{\delta} = \dot{\boldsymbol{x}} - \boldsymbol{v}_0 = \boldsymbol{R}_{1h}^T \left(\dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1)\right) - \boldsymbol{v}_0. \tag{9.114}$$

Its linearization yields

$$
\begin{aligned}
\delta \boldsymbol{v}^{\delta} &= \delta \dot{\boldsymbol{x}} \\
&= \boldsymbol{R}_{1h}^{T} \delta \dot{\boldsymbol{x}}_2 \\
&- \boldsymbol{R}_{1h}^{T} \delta \dot{\boldsymbol{x}}_1 \\
&- \boldsymbol{R}_{1h}^{T} \boldsymbol{f}_2 \times \delta \boldsymbol{\omega}_2 \\
&+ \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \right) \times \delta \boldsymbol{\omega}_1 \\
&- \boldsymbol{R}_{1h}^{T} \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_2 \\
&+ \boldsymbol{R}_{1h}^{T} \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_1 \\
&- \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} \\
&+ \boldsymbol{R}_{1h}^{T} \left(\dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \right) \right) \times \boldsymbol{\theta}_{1\delta} \\
&\overset{\text{uu}}{=} \boldsymbol{R}_{1h}^{T} \delta \dot{\boldsymbol{x}}_2 \\
&- \boldsymbol{R}_{1h}^{T} \delta \dot{\boldsymbol{x}}_1 \\
&- \boldsymbol{R}_{1h}^{T} \boldsymbol{f}_2 \times \delta \dot{\boldsymbol{g}}_2 \\
&+ \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \right) \times \delta \dot{\boldsymbol{g}}_1 \\
&- \boldsymbol{R}_{1h}^{T} \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_2 \\
&+ \boldsymbol{R}_{1h}^{T} \boldsymbol{\omega}_1 \times \delta \boldsymbol{x}_1 \\
&+ \boldsymbol{R}_{1h}^{T} \left(\left(\boldsymbol{f}_2 \times \boldsymbol{\omega}_2 \right) \times \; + \boldsymbol{\omega}_1 \times \boldsymbol{f}_2 \times \right) \boldsymbol{\theta}_{2\delta} \\
&+ \boldsymbol{R}_{1h}^{T} \left(\left(\dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 \right) \times \; - \boldsymbol{\omega}_1 \times \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \right) \times \right) \boldsymbol{\theta}_{1\delta}. \qquad (9.115)
\end{aligned}
$$

The time derivative of matrix $\boldsymbol{R}^{\delta}$ yields the constraint equation on the angular velocity

$$
\begin{aligned}
\boldsymbol{\omega}^{\delta} \times \; &= \dot{\boldsymbol{R}}^{\delta} \boldsymbol{R}^{\delta T} \\
&= \boldsymbol{R}_{1hr}^{T} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \boldsymbol{R}_{1hr} - \boldsymbol{R}^{\delta} \boldsymbol{\omega}_0 \times \boldsymbol{R}^{\delta T}, \qquad (9.116)
\end{aligned}
$$

which results in

$$
\boldsymbol{\omega}^{\delta} = \boldsymbol{R}_{1hr}^{T} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) - \boldsymbol{R}^{\delta} \boldsymbol{\omega}_0, \qquad (9.117)
$$

where $\boldsymbol{\omega}_0$ is the derivative of the imposed orientation,

$$
\boldsymbol{\omega}_0 = \dot{\boldsymbol{\theta}}_0. \qquad (9.118)
$$

Note that if the angular velocity constraint is the derivative of an orientation constraint, $\boldsymbol{R}^{\delta} = \boldsymbol{I}$, so, by setting $\boldsymbol{\omega}^{\delta} = \boldsymbol{0}$, Equation (9.117) becomes

$$
\boldsymbol{\omega}_0 = \boldsymbol{R}_{1hr}^{T} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right). \qquad (9.119)
$$

Otherwise, Equation (9.117) represents a non-holonomic constraint. In this case, $\boldsymbol{R}^{\delta}$ is again the identity matrix, although resulting from an unknown $\boldsymbol{R}_0$, which is the result of integrating the dynamics of the problem with the non-holonomic constraint represented by Equation (9.119). In fact,

$$
\boldsymbol{R}_0 = \boldsymbol{R}_{1hr}^{T} \boldsymbol{R}_{2hr} \qquad (9.120)
$$

is the definition of the relative orientation resulting from imposing the constraint of Equation (9.119).

The perturbation of Equation (9.119) results in

$$\begin{aligned}\delta\left(\boldsymbol{R}_{1hr}^T\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\right) &= \boldsymbol{R}_{1hr}^T\left(\delta\boldsymbol{\omega}_2-\delta\boldsymbol{\omega}_1+\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\times\boldsymbol{\theta}_{1\delta}\right)\\ &\overset{\text{uu}}{=} \boldsymbol{R}_{1hr}^T\left(\delta\dot{\boldsymbol{g}}_2-\delta\dot{\boldsymbol{g}}_1-\boldsymbol{\omega}_2\times\delta\boldsymbol{g}_2+\boldsymbol{\omega}_2\times\delta\boldsymbol{g}_1\right)\end{aligned} \tag{9.121}$$

Further time differentiation of the constraint equation results in

$$\dot{\boldsymbol{\omega}}^{\delta}=\boldsymbol{R}_{1hr}^T\left(\dot{\boldsymbol{\omega}}_2-\dot{\boldsymbol{\omega}}_1-\boldsymbol{\omega}_1\times\boldsymbol{\omega}_2\right)-\boldsymbol{\omega}^{\delta}\times\boldsymbol{R}^{\delta}\boldsymbol{\omega}_0-\boldsymbol{R}^{\delta}\dot{\boldsymbol{\omega}}_0. \tag{9.122}$$

Similarly, if the angular acceleration constraint is the derivative of an orientation or an angular velocity constraint, then $\boldsymbol{R}^{\delta}=\boldsymbol{I}$, $\boldsymbol{\omega}^{\delta}=\boldsymbol{0}$, respectively, and, by setting $\dot{\boldsymbol{\omega}}^{\delta}=\boldsymbol{0}$, Equation (9.122) becomes

$$\dot{\boldsymbol{\omega}}_0=\boldsymbol{R}_{1hr}^T\left(\dot{\boldsymbol{\omega}}_2-\dot{\boldsymbol{\omega}}_1-\boldsymbol{\omega}_1\times\boldsymbol{\omega}_2\right). \tag{9.123}$$

9.1.14 Total Pin Joint

This joint (`TotalPinJoint`) forces a node to assume an imposed absolute position and orientation about selected axes. Both imposed position and orientation are specified in the global reference frame, optionally re-oriented by a constant orientation. The joint consists in 6 equations, 3 for positions and 3 for orientation, that can be selectively turned on or off to enforce a constraint on that DOF.

Variants. This joint is a variant of the `TotalJoint`, described in Section 9.1.13.

Files. It is implemented in files
`mbdyn/struct/totalj.h`
`mbdyn/struct/totalj.cc`

Definitions. The position of the node with respect to the global reference frame is $\boldsymbol{x}_n$, while the absolute position of the constraint is $\boldsymbol{x}_c$. The matrix that expresses the orientation of the node with respect to the global reference frame is $\boldsymbol{R}_n$. An offset is allowed for the location of the points where the absolute position is constrained; the offset $\tilde{\boldsymbol{f}}_n$ is rigidly connected to the node, so in the global reference frame its expression is

$$\boldsymbol{f}_n=\boldsymbol{R}_n\tilde{\boldsymbol{f}}_n \tag{9.124}$$

The position constraint may be expressed in a reference frame, whose orientation in the global reference frame is $\boldsymbol{R}_{ch}$. Later on, it will occasionally be convenient to express the absolute position of the constraint, $\boldsymbol{x}_c$, in the reference frame $\boldsymbol{R}_{ch}$, namely

$$\tilde{\boldsymbol{x}}_c=\boldsymbol{R}_{ch}^T\boldsymbol{x}_c. \tag{9.125}$$

Similarly, the orientation constraint may be expressed in a reference frame that is rigidly connected to the node by matrix $\tilde{\boldsymbol{R}}_{nhr}$, whose orientation in the global reference frame is

$$\boldsymbol{R}_{nhr}=\boldsymbol{R}_n\tilde{\boldsymbol{R}}_{nhr}, \tag{9.126}$$

while the absolute orientation is described by the constant matrix $\boldsymbol{R}_{chr}$. The absolute position and orientation may refer to different local reference frames to increase the versatility of the element.

It is essential to notice that the differentiation of the constraint orientation matrices does not affect the relative orientation between the constraint and the node, namely matrix $\tilde{\boldsymbol{R}}_{nhr}$, which is constant. As a consequence,

$$\begin{aligned}\delta\boldsymbol{R}_{nhr} &= \delta\boldsymbol{R}_n\tilde{\boldsymbol{R}}_{nhr}\\ &= \boldsymbol{\theta}_{n\delta}\times\boldsymbol{R}_n\tilde{\boldsymbol{R}}_{nhr}\\ &= \boldsymbol{\theta}_{n\delta}\times\boldsymbol{R}_{nhr},\end{aligned} \tag{9.127}$$

and

$$\dot{\boldsymbol{R}}_{nhr} = \boldsymbol{\omega}_n\times\boldsymbol{R}_{nhr}. \tag{9.128}$$

The same is true for the relative position orientation matrix, $\boldsymbol{R}_{nh}$.

Orientation Constraint. The matrix that expresses the relative orientation is

$$\boldsymbol{R}_{\mathrm{rel}} = \boldsymbol{R}_{chr}^T\boldsymbol{R}_{nhr} \tag{9.129}$$

The desired relative orientation is expressed in analogy with the `TotalJoint`.

In general, the difference between the desired rotation $\boldsymbol{\theta}_0$ and the current absolute orientation of the node,

$$\boldsymbol{\theta} = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{chr}^T\boldsymbol{R}_{nhr}\right)\right) \tag{9.130}$$

through the redefinition of Eq. (9.98) can be expressed as

$$\boldsymbol{\theta}^\delta = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{chr}^T\boldsymbol{R}_{nhr}\boldsymbol{R}_0^T\right)\right) \tag{9.131}$$

and is equivalent to

$$\boldsymbol{\theta}^\delta = \boldsymbol{\theta} - \boldsymbol{\theta}_0 \tag{9.132}$$

when $\boldsymbol{\theta}^\delta = \mathbf{0}$.

Position Constraint. The desired absolute position is imposed by means of a vector $\boldsymbol{x}_0$ defined in the absolute position constraint reference frame $\boldsymbol{R}_{ch}$. The absolute position is represented by vector $\boldsymbol{x}$, defined as

$$\begin{aligned}\boldsymbol{x} &= \boldsymbol{R}_{ch}^T\left(\boldsymbol{x}_n + \boldsymbol{f}_n - \boldsymbol{x}_c\right)\\ &= \boldsymbol{R}_{ch}^T\left(\boldsymbol{x}_n + \boldsymbol{f}_n\right) - \tilde{\boldsymbol{x}}_c;\end{aligned} \tag{9.133}$$

the constraint equations for the relative position are:

$$\boldsymbol{x} = \boldsymbol{x}_0. \tag{9.134}$$

In analogy with the definition of $\boldsymbol{\theta}^\delta$, a vector $\boldsymbol{x}^\delta$ can be used to express the constraint on the position DOFs,

$$\boldsymbol{x}^\delta = \boldsymbol{x} - \boldsymbol{x}_0. \tag{9.135}$$

Constraint Equations. The resulting constraint equations are identical to Eqs. (9.106a, 9.106b), related to the `TotalJoint`, as illustrated at page 75; the same considerations apply.

Linearization. First, the perturbation of $\boldsymbol{x}^\delta$,

$$\delta\boldsymbol{x}^\delta = \boldsymbol{R}_{ch}^T\left(\delta\boldsymbol{x}_n - \boldsymbol{f}_n \times \boldsymbol{\theta}_{n\delta}\right) \tag{9.136}$$

is computed. Note that, since the constraint equations are defined by setting to zero any components of the vector $\boldsymbol{x}^\delta$, the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix $\boldsymbol{R}_{ch}$.

Then, the perturbation of $\boldsymbol{\theta}^\delta$ results from

$$\begin{aligned}\boldsymbol{\theta}_\delta^\delta \times \ &= \delta\boldsymbol{R}^\delta \boldsymbol{R}^{\delta T} \\ &= \boldsymbol{R}_{chr}^T \boldsymbol{\theta}_{n\delta} \times \boldsymbol{R}_{chr},\end{aligned} \tag{9.137}$$

which implies

$$\boldsymbol{\theta}_\delta^\delta = \boldsymbol{R}_{chr}^T \boldsymbol{\theta}_{n\delta}. \tag{9.138}$$

Note that, since the constraint equations are defined by setting to zero any components of the vector $\boldsymbol{\theta}^\delta$, the related Jacobian matrix contribution is obtained by selecting the corresponding columns of matrix $\boldsymbol{R}_{chr}$.

After calling $\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}}$ and $\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}}$ the Lagrange multipliers respectively related to the relative position and orientation constraints, and noticing that in the global reference frame they become

$$\boldsymbol{\lambda}_{\boldsymbol{x}} = \boldsymbol{R}_{ch}\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}} \tag{9.139a}$$

$$\boldsymbol{\lambda}_{\boldsymbol{\theta}} = \boldsymbol{R}_{chr}\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}}, \tag{9.139b}$$

the contribution of the constraint reactions to the equilibrium equations of the participating nodes is

$$\boldsymbol{F}_n = \boldsymbol{\lambda}_{\boldsymbol{x}} \tag{9.140a}$$

$$\boldsymbol{C}_n = \boldsymbol{f}_n \times \boldsymbol{\lambda}_{\boldsymbol{x}} + \boldsymbol{\lambda}_{\boldsymbol{\theta}}. \tag{9.140b}$$

Due to the simplifications related to the updated-updated approach, the contribution of the constraint equations and of the equilibrium to the Jacobian matrix is:

$$\left[\begin{array}{cc|cc} \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{R}_{ch} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{\lambda}_{\boldsymbol{x}} \times \boldsymbol{f}_n \times & \boldsymbol{f}_n \times \boldsymbol{R}_{ch} & \boldsymbol{R}_{chr} \\ \hline \boldsymbol{R}_{ch}^T & -\boldsymbol{R}_{ch}^T \boldsymbol{f}_n \times & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}_{chr}^T & \boldsymbol{0} & \boldsymbol{0} \end{array}\right] \left\{\begin{array}{c} \delta\boldsymbol{x}_n \\ \boldsymbol{\theta}_{n\delta} \\ \hline \delta\tilde{\boldsymbol{\lambda}}_{\boldsymbol{x}} \\ \delta\tilde{\boldsymbol{\lambda}}_{\boldsymbol{\theta}} \end{array}\right\} = \left\{\begin{array}{c} -\boldsymbol{\lambda}_{\boldsymbol{x}} \\ -\boldsymbol{f}_n \times \boldsymbol{\lambda}_{\boldsymbol{x}} - \boldsymbol{\lambda}_{\boldsymbol{\theta}} \\ \hline -\boldsymbol{x}^\delta \\ -\boldsymbol{\theta}^\delta \end{array}\right\}. \tag{9.141}$$

The updated-updated form is obtained by simply replacing $\boldsymbol{\theta}_{n\delta}$ with $\delta\boldsymbol{g}_n$.

Stabilized Form

Equations.

$$\boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}} = \boldsymbol{0} \tag{9.142a}$$

$$\boldsymbol{f}_n \times \boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}} + \boldsymbol{R}_{chr}\boldsymbol{\mu}_{\boldsymbol{\theta}} = \boldsymbol{0} \tag{9.142b}$$

$$\boldsymbol{R}_{ch}\boldsymbol{\lambda}_{\boldsymbol{x}} = \boldsymbol{0} \tag{9.142c}$$

$$\begin{aligned}-\boldsymbol{f}_n \times \boldsymbol{\omega}_n \times \boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}} - \boldsymbol{R}_{chr}\left(\boldsymbol{R}^\delta\boldsymbol{\omega}_0\right) \times \boldsymbol{\mu}_{\boldsymbol{\theta}} \\ + \boldsymbol{f}_n \times \boldsymbol{R}_{ch}\boldsymbol{\lambda}_{\boldsymbol{x}} + \boldsymbol{R}_{chr}\boldsymbol{\lambda}_{\boldsymbol{\theta}} = \boldsymbol{0}\end{aligned} \tag{9.142d}$$

$$\boldsymbol{R}_{ch}^T\left(\boldsymbol{x}_n + \boldsymbol{f}_n\right) - \boldsymbol{x}_0 = \boldsymbol{0} \tag{9.142e}$$

$$\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}^\delta\right)\right) = \boldsymbol{0} \tag{9.142f}$$

$$\boldsymbol{R}_{ch}^T\left(\dot{\boldsymbol{x}}_n + \boldsymbol{\omega}_n \times \boldsymbol{f}_n\right) - \dot{\boldsymbol{x}}_0 = \boldsymbol{0} \tag{9.142g}$$

$$\boldsymbol{R}_{chr}^T\boldsymbol{\omega}_n - \boldsymbol{R}^\delta\boldsymbol{\omega}_0 = \boldsymbol{0} \tag{9.142h}$$

Linearization.

$$\boldsymbol{R}_{ch}\delta\boldsymbol{\mu}_{\boldsymbol{x}} = \boldsymbol{0} \tag{9.143a}$$

$$-\left(\boldsymbol{f}_n \times \boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}}\right) \times \boldsymbol{\theta}_{n\delta} + \boldsymbol{f}_n \times \boldsymbol{R}_{ch}\delta\boldsymbol{\mu}_{\boldsymbol{x}} + \boldsymbol{R}_{chr}\delta\boldsymbol{\mu}_{\boldsymbol{\theta}} = \boldsymbol{0} \tag{9.143b}$$

$$\boldsymbol{R}_{ch}\delta\boldsymbol{\lambda}_{\boldsymbol{x}} = \boldsymbol{0} \tag{9.143c}$$

$$\begin{aligned}\left(\boldsymbol{f}_n \times \boldsymbol{\omega}_n \times \boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}}\right) \times \boldsymbol{\theta}_{n\delta} + \boldsymbol{f}_n \times \left(\boldsymbol{R}_{ch}\boldsymbol{\mu}_{\boldsymbol{x}}\right) \times \delta\boldsymbol{\omega}_n \\ - \boldsymbol{f}_n \times \boldsymbol{\omega}_n \times \boldsymbol{R}_{ch}\delta\boldsymbol{\mu}_{\boldsymbol{x}} \\ - \left(\boldsymbol{R}_{chr}\boldsymbol{\mu}_{\boldsymbol{\theta}}\right) \times \left(\boldsymbol{R}_{nhr}\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \boldsymbol{\theta}_{n\delta} - \boldsymbol{R}_{chr}\left(\boldsymbol{R}^{\delta}\boldsymbol{\omega}_0\right) \times \delta\boldsymbol{\mu}_{\boldsymbol{\theta}} \\ - \left(\boldsymbol{f}_n \times \boldsymbol{R}_{ch}\boldsymbol{\lambda}_{\boldsymbol{x}}\right) \times \boldsymbol{\theta}_{n\delta} + \boldsymbol{f}_n \times \boldsymbol{R}_{ch}\delta\boldsymbol{\lambda}_{\boldsymbol{x}} + \boldsymbol{R}_{chr}\delta\boldsymbol{\lambda}_{\boldsymbol{\theta}} = \boldsymbol{0}\end{aligned} \tag{9.143d}$$

$$\boldsymbol{R}_{ch}^T\delta\boldsymbol{x}_n - \boldsymbol{R}_{ch}^T\boldsymbol{f}_n \times \boldsymbol{\theta}_{n\delta} = \boldsymbol{0} \tag{9.143e}$$

$$\boldsymbol{R}_{chr}^T\boldsymbol{\theta}_{n\delta} = \boldsymbol{0} \tag{9.143f}$$

$$\boldsymbol{R}_{ch}^T\delta\dot{\boldsymbol{x}}_n - \boldsymbol{R}_{ch}^T\boldsymbol{f}_n \times \delta\boldsymbol{\omega}_n - \boldsymbol{R}_{ch}^T\boldsymbol{\omega}_n \times \boldsymbol{f}_n \times \boldsymbol{\theta}_{n\delta} = \boldsymbol{0} \tag{9.143g}$$

$$\boldsymbol{R}_{chr}^T\delta\boldsymbol{\omega}_n + \boldsymbol{R}_{chr}^T\left(\boldsymbol{R}_{nhr}\boldsymbol{R}_0^T\boldsymbol{\omega}_0\right) \times \boldsymbol{\theta}_{n\delta} = \boldsymbol{0} \tag{9.143h}$$

Summary

The same considerations formulated for the `TotalJoint` apply.

9.1.15 Gimbal

This element implements an ideal gimbal joint. It is discussed in [8]. A gimbal is a joint that allows the rotation between two nodes about two orthogonal axes. The angular velocity about the remaining axis is preserved regardless of the relative angle between the two nodes. It is essentially equivalent to two Cardano joints[3] each of which accounts for half of the relative orientation.

Variants. This joint is only defined in the variant that constrains the relative rotation between two nodes. It may need to be combined with another joint that constrains the (relative) position of the related nodes, and with a deformable hinge to provide some stiffness or damping.

Files. It is implemented in files

```
mbdyn/struct/gimbal.h
mbdyn/struct/gimbal.cc
```

Definitions. The relative orientation between the nodes is made of three steps, described by

$$\boldsymbol{R}_{\mathrm{rel}} = \boldsymbol{R}_a^T\boldsymbol{R}_b \qquad (= \boldsymbol{R}_{ab}) \tag{9.144a}$$

$$= \exp\left(\vartheta\boldsymbol{e}_2 \times\right) \exp\left(\varphi\boldsymbol{e}_1 \times\right) \exp\left(\vartheta\boldsymbol{e}_2 \times\right) \qquad (= \boldsymbol{R}\left(\vartheta, \varphi\right)) \tag{9.144b}$$

where

$$\exp\left(\vartheta\boldsymbol{e}_2 \times\right) = \boldsymbol{I} + \sin\vartheta\boldsymbol{e}_2 \times + \left(1 - \cos\vartheta\right)\boldsymbol{e}_2 \times \boldsymbol{e}_2 \times \tag{9.145a}$$

$$\exp\left(\varphi\boldsymbol{e}_1 \times\right) = \boldsymbol{I} + \sin\varphi\boldsymbol{e}_1 \times + \left(1 - \cos\varphi\right)\boldsymbol{e}_1 \times \boldsymbol{e}_1 \times \tag{9.145b}$$

and $\boldsymbol{e}_i$ are the unit vectors in directions $i = 1, 2, 3$.

[3] Or "universal joints"; this is also known as a double Hooke joint.

This represents a sequence of mutually orthogonal rotations, symmetrical with respect to the mid of the central rotation, and thus consisting in a sequence of two Cardano joints in the "W" arrangement, which is homokinetic.
The constraint equation is obtained by equating the relative orientation matrices of Equations (9.144a, 9.144b):

$$\boldsymbol{R}_{ab} = \boldsymbol{R}\left(\vartheta, \varphi\right), \tag{9.146}$$

or, which is equivalent,

$$\boldsymbol{R}_{ab}\boldsymbol{R}\left(\vartheta, \varphi\right)^T = \boldsymbol{I}. \tag{9.147}$$

As a consequence, the rotation vector

$$\boldsymbol{\theta} = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{ab}\boldsymbol{R}\left(\vartheta, \varphi\right)^T\right)\right), \tag{9.148}$$

corresponding to the orientation matrix at the left-hand side of Equation (9.147), must vanish:

$$\boldsymbol{\theta} = \boldsymbol{0}. \tag{9.149}$$

Lagrange multipliers approach:

$$\begin{aligned} 0 &= \delta\left(\boldsymbol{\lambda}^T\boldsymbol{\theta}\right) \\ &= \delta\boldsymbol{\lambda}^T\boldsymbol{\theta} + \delta\boldsymbol{\theta}^T\boldsymbol{\lambda}, \end{aligned} \tag{9.150}$$

where

$$\delta\boldsymbol{\theta} = \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{\theta}_\delta. \tag{9.151}$$

Note, that by definition $\boldsymbol{\theta}$ must be zero, so $\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right) \cong \boldsymbol{I}$. Without any simplification, Equation (9.150) results in

$$0 = \delta\left(\boldsymbol{\lambda}^T\boldsymbol{\theta}\right) \tag{9.152a}$$

$$= \delta\boldsymbol{\lambda}^T\boldsymbol{\theta} + \boldsymbol{\theta}_\delta^T\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T}\boldsymbol{\lambda}. \tag{9.152b}$$

To eliminate the $\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T}$ term, the multipliers can be redefined as

$$\hat{\boldsymbol{\lambda}} = \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T}\boldsymbol{\lambda}. \tag{9.153}$$

The perturbation $\boldsymbol{\theta}_\delta$ results from

$$\begin{aligned} \boldsymbol{\theta}_\delta \times \; &= \delta\exp\left(\boldsymbol{\theta}\times\right)\exp\left(\boldsymbol{\theta}\times\right)^T \\ &= \delta\left(\boldsymbol{R}_a^T\boldsymbol{R}_b\exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\exp\left(\varphi\boldsymbol{e}_1\times\right)^T\exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\right)\cdot \\ &\qquad \left(\boldsymbol{R}_a^T\boldsymbol{R}_b\exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\exp\left(\varphi\boldsymbol{e}_1\times\right)^T\exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\right)^T \\ &= \boldsymbol{R}_a^T\left(\boldsymbol{\theta}_{b\delta} - \boldsymbol{\theta}_{a\delta}\right)\times\boldsymbol{R}_a \\ &- \delta\vartheta\boldsymbol{R}_a^T\boldsymbol{R}_b\left(\left(\boldsymbol{I} + \exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\exp\left(\varphi\boldsymbol{e}_1\times\right)^T\right)\boldsymbol{e}_2\right)\times\boldsymbol{R}_b^T\boldsymbol{R}_a \\ &- \delta\varphi\boldsymbol{R}_a^T\boldsymbol{R}_b\left(\exp\left(\vartheta\boldsymbol{e}_2\times\right)^T\boldsymbol{e}_1\right)\times\boldsymbol{R}_b^T\boldsymbol{R}_a \end{aligned} \tag{9.154}$$

which yields

$$\boldsymbol{\theta}_\delta = \boldsymbol{R}_a^T \left(\boldsymbol{\theta}_{b\delta} - \boldsymbol{\theta}_{a\delta}\right) - \boldsymbol{R}_a^T \boldsymbol{R}_b \left(\delta\vartheta \boldsymbol{w}_\vartheta + \delta\varphi \boldsymbol{w}_\varphi\right) \tag{9.155}$$

with

$$\begin{aligned}
\boldsymbol{w}_\vartheta &= \left(\boldsymbol{I} + \exp\left(\vartheta \boldsymbol{e}_2 \times\right)^T \exp\left(\varphi \boldsymbol{e}_1 \times\right)^T\right) \boldsymbol{e}_2 \\
&= \sin\varphi \sin\vartheta \boldsymbol{e}_1 + \left(1 + \cos\varphi\right) \boldsymbol{e}_2 - \sin\varphi \cos\vartheta \boldsymbol{e}_3 && (9.156a) \\
\boldsymbol{w}_\varphi &= \exp\left(\vartheta \boldsymbol{e}_2 \times\right)^T \boldsymbol{e}_1 \\
&= \cos\vartheta \boldsymbol{e}_1 + \sin\vartheta \boldsymbol{e}_3. && (9.156b)
\end{aligned}$$

Linearization

$$\begin{aligned}
&\begin{bmatrix}
-\left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right) \times & \boldsymbol{0} & \boldsymbol{R}_a \\
\left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right) \times & \boldsymbol{0} & -\boldsymbol{R}_a \\
\boldsymbol{R}_a^T & -\boldsymbol{R}_a^T & \boldsymbol{0} \\
-\left(\left(\boldsymbol{R}_b \boldsymbol{w}_\vartheta\right) \times \left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right)\right)^T & \left(\left(\boldsymbol{R}_b \boldsymbol{w}_\vartheta\right) \times \left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right)\right)^T & \left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\vartheta\right)^T \\
-\left(\left(\boldsymbol{R}_b \boldsymbol{w}_\varphi\right) \times \left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right)\right)^T & \left(\left(\boldsymbol{R}_b \boldsymbol{w}_\varphi\right) \times \left(\boldsymbol{R}_a \hat{\boldsymbol{\lambda}}\right)\right)^T & \left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\varphi\right)^T
\end{bmatrix}
\begin{Bmatrix}
\boldsymbol{\theta}_{a\Delta} \\ \boldsymbol{\theta}_{b\Delta} \\ \Delta\hat{\boldsymbol{\lambda}}
\end{Bmatrix} \\
&\begin{bmatrix}
\boldsymbol{0} & \boldsymbol{0} \\
\boldsymbol{0} & \boldsymbol{0} \\
\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\vartheta & \boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\varphi \\
\left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_{\vartheta/\vartheta}\right)^T \hat{\boldsymbol{\lambda}} & \left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_{\vartheta/\varphi}\right)^T \hat{\boldsymbol{\lambda}} \\
\left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_{\varphi/\vartheta}\right)^T \hat{\boldsymbol{\lambda}} & \left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_{\varphi/\varphi}\right)^T \hat{\boldsymbol{\lambda}}
\end{bmatrix}
\begin{Bmatrix}
\Delta\vartheta \\ \Delta\varphi
\end{Bmatrix} \\
&= \begin{Bmatrix}
-\boldsymbol{R}_a \hat{\boldsymbol{\lambda}} \\
\boldsymbol{R}_a \hat{\boldsymbol{\lambda}} \\
\boldsymbol{\theta} \\
-\left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\vartheta\right)^T \hat{\boldsymbol{\lambda}} \\
-\left(\boldsymbol{R}_a^T \boldsymbol{R}_b \boldsymbol{w}_\varphi\right)^T \hat{\boldsymbol{\lambda}}
\end{Bmatrix} && (9.157)
\end{aligned}$$

where

$$\begin{aligned}
\boldsymbol{w}_{\vartheta/\vartheta} &= \sin\varphi \cos\vartheta \boldsymbol{e}_1 + \sin\varphi \sin\vartheta \boldsymbol{e}_3 && (9.158a) \\
\boldsymbol{w}_{\vartheta/\varphi} &= \cos\varphi \sin\vartheta \boldsymbol{e}_1 - \sin\varphi \boldsymbol{e}_2 - \cos\varphi \cos\vartheta \boldsymbol{e}_3 && (9.158b) \\
\boldsymbol{w}_{\varphi/\vartheta} &= -\sin\vartheta \boldsymbol{e}_1 + \cos\vartheta \boldsymbol{e}_3 && (9.158c) \\
\boldsymbol{w}_{\varphi/\varphi} &= \boldsymbol{0}. && (9.158d)
\end{aligned}$$

9.1.16 Screw Joint

Author: Mauro Manetti and Marco Morandini

The screw joint is a combination of:

- an in line joint, that constrains one point to move along a line attached to another point:

$$\begin{aligned}
\boldsymbol{e}_{1hx}^T \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1\right) &= 0 \\
\boldsymbol{e}_{1hy}^T \left(\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1\right) &= 0
\end{aligned}$$

where $\boldsymbol{e}_{1hi}$ is the i-th column of matrix $\boldsymbol{R}_1\tilde{\boldsymbol{R}}_{1h}$

$$\boldsymbol{e}_{jhi} = \left(\boldsymbol{R}_j\tilde{\boldsymbol{R}}_{jh}\right)[i] \tag{9.159}$$

$\boldsymbol{x}_j$ is the position of node j and $\boldsymbol{f}_j$ is the offset of the joint with respect node j, both in the absolute coordinate system; the offset is constant with respect to the reference frame of the joint, so $\boldsymbol{f}_j = \boldsymbol{R}_j\tilde{\boldsymbol{f}}_j$.

- a revolute rotation joint, that constrains the relative orientation of two nodes to be a rotation about an axis that is fixed with respect to the two bodies:

$$\begin{aligned}\boldsymbol{e}_{2hx}^T\boldsymbol{e}_{1hz} &= 0\\ \boldsymbol{e}_{2hy}^T\boldsymbol{e}_{1hz} &= 0\end{aligned}$$

- a linear relationship between the relative rotation about the common axis and the relative position along the common axis:

$$\frac{p}{2\pi}(\theta-\theta_0) - \boldsymbol{e}_{1hz}^T(\boldsymbol{d}-\boldsymbol{d}_0) = 0 \tag{9.160}$$

where the nodes distance vectors $\boldsymbol{d}$ and $\boldsymbol{d}_0$ can be written as:

$$\begin{aligned}\boldsymbol{d} &= \boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1\\ \boldsymbol{d}_0 &= \boldsymbol{x}_{2_0} + \boldsymbol{f}_{2_0} - \boldsymbol{x}_{1_0} - \boldsymbol{f}_{1_0}\end{aligned}$$

while p represents the distance between the nodes along axis $\boldsymbol{e}_{1hz}$ corresponding to one revolution about the same axis.

The rotation θ is formulated as

$$\begin{aligned}\theta =&\tilde{\boldsymbol{R}}_{1h3}^T\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_1^T\boldsymbol{R}_2\right)\right)\\ =&\tilde{\boldsymbol{R}}_{1h3}^T\boldsymbol{R}_1^T\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_2\boldsymbol{R}_1^T\right)\right)\\ =&\boldsymbol{e}_{1hz}^T\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_2\boldsymbol{R}_1^T\right)\right)\end{aligned} \tag{9.161}$$

where $\tilde{\boldsymbol{R}}_{1h3}$ is the third axis of the constant relative orientation of node 1, while $\boldsymbol{e}_{1hz}$ is the screw joint axis. To overcome the limitation $|\theta| < \pi$, an appropriate unwrap angle function has been implemented in the code, so allowing to compute the right residual of Equation (9.160).

The virtual perturbation of Equation (9.161) can be expressed as

$$\delta\theta = \tilde{\boldsymbol{R}}_{1h3}^T\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \tag{9.162}$$

so the virtual perturbation of Equation (9.160)

$$\begin{aligned}&\frac{p}{2\pi}\boldsymbol{e}_{1hz}^T\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) - \boldsymbol{e}_{1hz}^T\boldsymbol{d}\times\boldsymbol{\theta}_{1\delta}\\ &-\boldsymbol{e}_{1hz}^T(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2\times\boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1\times\boldsymbol{\theta}_{1\delta}) = 0\end{aligned} \tag{9.163}$$

yields the contribution of the constraint to the forces and moments acting on the constrained nodes:

$$\boldsymbol{F}_1 = \boldsymbol{e}_{1hz}\lambda \tag{9.164}$$

$$\boldsymbol{C}_1 = \left(-\frac{p}{2\pi}\boldsymbol{R}_1\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T}\tilde{\boldsymbol{R}}_{1h3} + \boldsymbol{f}_1\times\boldsymbol{e}_{1hz}\right)\lambda \tag{9.165}$$

$$\boldsymbol{F}_2 = -\boldsymbol{e}_{1hz}\lambda \tag{9.166}$$

$$\boldsymbol{C}_2 = \left(\frac{p}{2\pi}\boldsymbol{R}_1\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T}\tilde{\boldsymbol{R}}_{1h3} - \boldsymbol{f}_2\times\boldsymbol{e}_{1hz}\right)\lambda \tag{9.167}$$

where λ is the Lagrange multiplier that here assumes the meaning of reaction force along the screw axis.

The problem linearization requires the already computed virtual perturbation of the constraint equation (see Equation (9.163)) and the constraint forces and couples virtual perturbation:

$$\delta \boldsymbol{F}_1 = -\lambda \boldsymbol{e}_{1hz} \times \boldsymbol{\theta}_{1\delta} + \boldsymbol{e}_{1hz}\delta\lambda \tag{9.168}$$

$$\begin{aligned}\delta \boldsymbol{C}_1 =& \lambda \Bigg[\frac{p}{2\pi} \left(\boldsymbol{R}_1 \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \tilde{\boldsymbol{R}}_{1h3} \right) \times \boldsymbol{\theta}_{1\delta} - \\ & \frac{p}{2\pi} \boldsymbol{R}_1 \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \boldsymbol{L}\left(-\boldsymbol{\theta}, \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \tilde{\boldsymbol{R}}_{1h3} \right) \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1} \boldsymbol{R}_1^T \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right) + \\ & \boldsymbol{e}_{1hz} \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} - \boldsymbol{f}_1 \times \boldsymbol{e}_{1hz} \times \boldsymbol{\theta}_{1\delta} \Bigg] + \\ & \frac{\boldsymbol{C}_1}{\lambda}\delta\lambda \end{aligned} \tag{9.169}$$

$$\delta \boldsymbol{F}_2 = \lambda \boldsymbol{e}_{1hz} \times \boldsymbol{\theta}_{1\delta} - \boldsymbol{e}_{1hz}\delta\lambda \tag{9.170}$$

$$\begin{aligned}\delta \boldsymbol{C}_2 =& \lambda \Bigg[-\frac{p}{2\pi} \left(\boldsymbol{R}_1 \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \tilde{\boldsymbol{R}}_{1h3} \right) \times \boldsymbol{\theta}_{1\delta} + \\ & \frac{p}{2\pi} \boldsymbol{R}_1 \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \boldsymbol{L}\left(-\boldsymbol{\theta}, \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-T} \tilde{\boldsymbol{R}}_{1h3} \right) \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1} \boldsymbol{R}_1^T \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right) - \\ & \boldsymbol{e}_{1hz} \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} + \boldsymbol{f}_2 \times \boldsymbol{e}_{1hz} \times \boldsymbol{\theta}_{1\delta} \Bigg] + \\ & \frac{\boldsymbol{C}_2}{\lambda}\delta\lambda \end{aligned} \tag{9.171}$$

where the operator $\boldsymbol{L}()$ has been introduced according to the following definition

$$\delta \boldsymbol{\Gamma}(\boldsymbol{\theta})^T \boldsymbol{a} = -\boldsymbol{L}(-\boldsymbol{\theta}, \boldsymbol{a})\delta\boldsymbol{\theta} \tag{9.172}$$

which can be manipulated to obtain the needed relation

$$\begin{aligned}\delta(\boldsymbol{\Gamma}(\boldsymbol{\theta})^T \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{a}) =& \delta\boldsymbol{\Gamma}(\boldsymbol{\theta})^T \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{a} + \\ & \boldsymbol{\Gamma}(\boldsymbol{\theta})^T \delta\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{a} + \\ & \boldsymbol{\Gamma}(\boldsymbol{\theta})^T \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \delta\boldsymbol{a} = \delta\boldsymbol{a} \end{aligned} \tag{9.173}$$

$$\delta \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{a} = \delta\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{L}\left(-\boldsymbol{\theta}, \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{a}\right) \delta\boldsymbol{\theta} \tag{9.174}$$

Now a contribution useful to obtain previous results will be reported

$$\begin{aligned}\delta\left(\boldsymbol{R}_1 \Gamma(\boldsymbol{\theta})^{-1} \tilde{\boldsymbol{R}}_{1h3} \right) =& \delta\boldsymbol{R}_1 \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} + \boldsymbol{R}_1 \delta\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} \\ =& -\left(\boldsymbol{R}_1 \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3} \right)_{\times} \boldsymbol{\theta}_{1\delta} + \boldsymbol{R}_1 \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \boldsymbol{L}(-\boldsymbol{\theta}, \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-T} \tilde{\boldsymbol{R}}_{1h3}) \delta\boldsymbol{\theta} \end{aligned}$$

This joint formulation can be improved to take into account the presence of friction. Figures (9.1) and (9.2) show sketches useful to identify the forces acting on the screw thread. In the figures the case of a screw which is raising a load $\boldsymbol{F}$ is presented, the equilibrium equation can be written for the vertical and the horizontal directions to obtain

$$\boldsymbol{F} + \mu \boldsymbol{F}_n \sin\alpha = \boldsymbol{F}_n \cos\gamma_n cos\alpha \tag{9.175}$$

$$\boldsymbol{P} = \mu \boldsymbol{F}_n \cos\alpha + \boldsymbol{F}_n \cos\gamma_n \sin\alpha \tag{9.176}$$

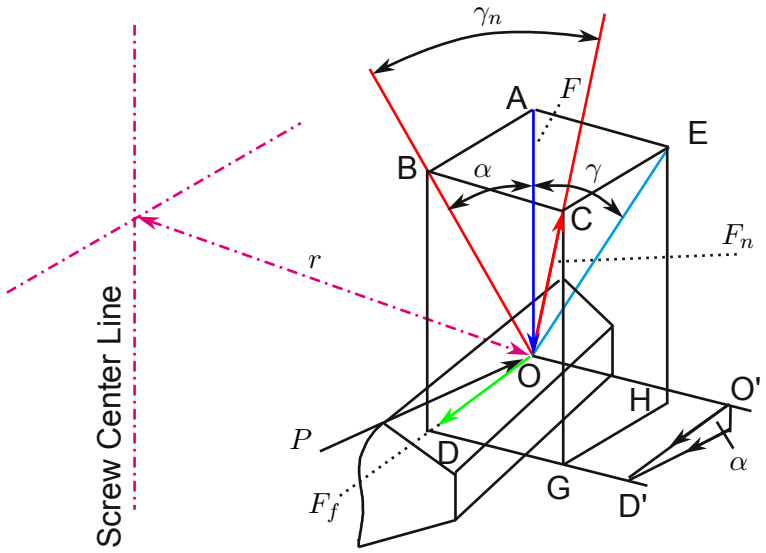


Figure 9.1: 3D screw thread sketch.

where $\boldsymbol{F}$ is the load, or the force, along the screw axis, $\boldsymbol{P}$ the force acting to rotate the screw, i.e. the torque moment over the mean thread radius r, $\boldsymbol{F}_n$ is the thread normal reaction, α the lead angle, and γ_n the angle between the vectors $\boldsymbol{OC}$ and $\boldsymbol{OB}$ represented in Figure (9.1). Inside the code all the screw friction formulation is developed in function of the angle γ_n for convenience, anyway the usual screw informations relate the thread angle 2γ, so the joint requires as input the half thread angle γ. Looking at the Figure 9.1 it is possible to find the relation between these two angles

$$BC = AE = OA \tan\gamma = OB \cos\alpha \tan\gamma \tag{9.177}$$

so

$$\tan\gamma_n = \frac{BC}{OB} = \cos\alpha \tan\gamma \quad \Rightarrow \quad \gamma_n = tan^{-1}(\cos\alpha \tan\gamma). \tag{9.178}$$

From Equations (9.175) and (9.176) is possible to retrive the relation between the screw raising torque $\boldsymbol{C}_r$ and the axial force $\boldsymbol{F}$

$$\boldsymbol{C}_r = r\boldsymbol{F}\left(\frac{\cos\gamma_n \sin\alpha + \mu\cos\alpha}{\cos\gamma_n \cos\alpha - \mu\sin\alpha}\right). \tag{9.179}$$

It is easy to find the previous relation in presence of a lowering torque

$$\boldsymbol{C}_l = r\boldsymbol{F}\left(\frac{\cos\gamma_n \sin\alpha - \mu\cos\alpha}{\cos\gamma_n \cos\alpha + \mu\sin\alpha}\right). \tag{9.180}$$

from which it is possible to understand the torque dependency from the versus of the friction force $\mu\boldsymbol{F}_n$. A general discriminant to apply the right formula can be linked to the versus of the relative velocity v between the internal and external thread and the sign of the constraint Lagrange multiplier λ which

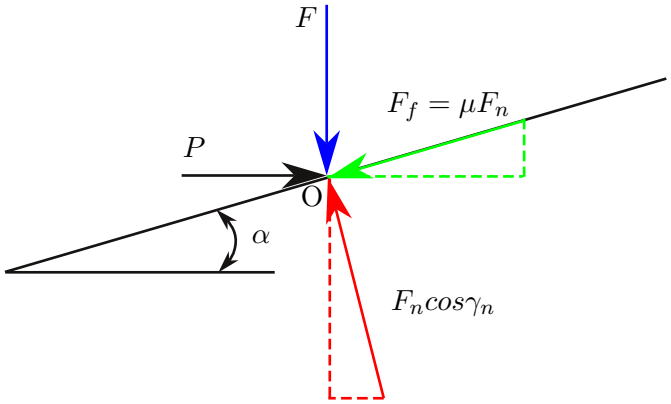


Figure 9.2: 2D screw thread sketch

represents the versus of the axial screw force

$$\boldsymbol{C} = r\boldsymbol{F}\left(\frac{\cos\gamma_n \sin\alpha + sign(v\lambda)\,\mu\cos\alpha}{\cos\gamma_n \cos\alpha - sign(v\lambda)\,\mu\sin\alpha}\right). \tag{9.181}$$

Inside the code $sign(v\lambda)$ will be embedded in the friction coefficient computation $\mu = \mu(v, \boldsymbol{F})$, so in the following for brevity it will be removed from equations introducing the notation $\boldsymbol{C} = \boldsymbol{C}(\mu)$.

The torque acting on the screw for the friction presence can now be computed as

$$\boldsymbol{C}_{frc}(\mu) = \boldsymbol{C}(\mu) - \boldsymbol{C}(0) = r\boldsymbol{F}\left[\frac{\mu\sec\gamma_n(1+\tan^2\alpha)}{1-\mu\sec\gamma_n\tan\alpha}\right]. \tag{9.182}$$

Equation (9.182) can be used to add the torque friction contribution to the couples acting on the constrained nodes reported in Equations (9.165) and (9.167)

$$\boldsymbol{C}_{1_{frc}} = \boldsymbol{C}_1 - \boldsymbol{C}_{frc}(\mu) = \boldsymbol{C}_1 - r\boldsymbol{F}_1\left[\frac{\mu\sec\gamma_n(1+\tan^2\alpha)}{1-\mu\sec\gamma_n\tan\alpha}\right] \tag{9.183}$$

$$\boldsymbol{C}_{2_{frc}} = \boldsymbol{C}_2 - \boldsymbol{C}_{frc}(\mu) = \boldsymbol{C}_2 - r\boldsymbol{F}_2\left[\frac{\mu\sec\gamma_n(1+\tan^2\alpha)}{1-\mu\sec\gamma_n\tan\alpha}\right] \tag{9.184}$$

At this point the only further required informations regard the relative velocity v and the virtual variation of the friction torque contribution. Starting from the already used formula

$$\delta\boldsymbol{\theta} = \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \tag{9.185}$$

it is possible to write the following relation

$$\dot{\boldsymbol{\theta}} = \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\Gamma}(\boldsymbol{\theta}_2)\dot{\boldsymbol{\theta}}_2 - \boldsymbol{\Gamma}(\boldsymbol{\theta}_1)\dot{\boldsymbol{\theta}}_1). \tag{9.186}$$

The angular velocity vector is defined as

$$\boldsymbol{\omega}_\theta = \boldsymbol{\Gamma}(\boldsymbol{\theta})\dot{\boldsymbol{\theta}} = \boldsymbol{\Gamma}(\boldsymbol{\theta})\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_1^T(\boldsymbol{\Gamma}(\boldsymbol{\theta}_2)\dot{\boldsymbol{\theta}}_2 - \boldsymbol{\Gamma}(\boldsymbol{\theta}_1)\dot{\boldsymbol{\theta}}_1) = \boldsymbol{R}_1^T(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \tag{9.187}$$

from which the angular velocity modulus with sign can be obtained

$$\omega_\theta = \tilde{\boldsymbol{R}}_{1h3}^T \boldsymbol{\omega}_\theta = \tilde{\boldsymbol{R}}_{1h3}^T \boldsymbol{R}_1^T (\boldsymbol{\omega_2} - \boldsymbol{\omega}_1). \tag{9.188}$$

Now the relative velocity on the screw thread, along the friction force direction, can be written as

$$v = \omega_\theta r \cos\alpha = \tilde{\boldsymbol{R}}_{1h3}^T \boldsymbol{R}_1^T (\boldsymbol{\omega_2} - \boldsymbol{\omega}_1) r \cos\alpha. \tag{9.189}$$

The virtual perturbation of the friction couple is required to write the linearized problem

$$\begin{aligned}
\delta \boldsymbol{C}_{frc} =& \delta \boldsymbol{F} r \left[\frac{\mu \sec\gamma_n (1+\tan^2\alpha)}{1-\mu\sec\gamma_n \tan\alpha} \right] + \\
& \boldsymbol{F} r \left[\frac{\sec\gamma_n (1+\tan^2\alpha)}{1-\mu\sec\gamma_n \tan\alpha} + \frac{\mu \sec\gamma_n (1+\tan^2\alpha)}{(1-\mu\sec\gamma_n\tan\alpha)^2} \sec\gamma_n \tan\alpha \right] \delta\mu \\
=& r \left[\frac{\mu \sec\gamma_n (1+\tan^2\alpha)}{1-\mu\sec\gamma_n \tan\alpha} \right] \delta \boldsymbol{F} + \boldsymbol{F} r \left[\frac{\mu \sec\gamma_n (1+\tan^2\alpha)}{(1-\mu\sec\gamma_n\tan\alpha)^2} \right] \delta\mu
\end{aligned} \tag{9.190}$$

where the friction coefficient virtual variation is automatically computed by the code, once provided the F and μ virtual perturbations

$$\delta\mu = \delta\mu(\delta \boldsymbol{F}, \delta v). \tag{9.191}$$

Anyway the screw axial forces virtual variations have already been reported in Equations 9.168 and 9.170, so to complete the problem description is just required the definition of the relative velocity virtual perturbation

$$\begin{aligned}
\delta v =& \tilde{\boldsymbol{R}}_{1h3}^T \delta \boldsymbol{R}_1^T (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) r\cos\alpha + \tilde{\boldsymbol{R}}_{1h3}^T \boldsymbol{R}_1^T (\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1) r\cos\alpha \\
=& r\cos\alpha \tilde{\boldsymbol{R}}_{1h3}^T \boldsymbol{R}_1^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right)_\times \boldsymbol{\theta}_{1\delta} + r\cos\alpha \tilde{\boldsymbol{R}}_{1h3}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1\right).
\end{aligned} \tag{9.192}$$

Physics. In other words, node 1 is the screw and node 2 is the bolt; neglecting the offset, the force along the screw axis is related to the couple about the same axis by the relationship

$$C = -\frac{p}{2\pi} F \tag{9.193}$$

which results from a power balance

$$C\omega_\theta + F v_{lin} = 0 \tag{9.194}$$

in terms of relative linear (v_{lin}) and angular (ω_θ) velocity, with the kinematic relationship

$$v_{lin} = \frac{p}{2\pi}\omega_\theta \tag{9.195}$$

9.1.17 Strapdown Sensor

This constraint imposes the acceleration and the angular velocity of a node in a relative frame attached to the node itself.

$$\ddot{\boldsymbol{x}} = \ddot{\boldsymbol{x}}_n + \dot{\boldsymbol{\omega}}_n \times \boldsymbol{b} + \boldsymbol{\omega}_n \times \boldsymbol{\omega}_n \times \boldsymbol{b} \tag{9.196a}$$

$$\boldsymbol{\omega} = \boldsymbol{\omega}_n \tag{9.196b}$$

where $\boldsymbol{b} = \boldsymbol{R}_n\tilde{\boldsymbol{b}}$ is the offset of the accelerometer from the node.

The acceleration and the angular velocity in the reference frame of the node, as output from the strapdown sensor, respectively are $\overline{\ddot{\boldsymbol{x}}}$ and $\overline{\boldsymbol{\omega}}$. The constraint equations are

$$\ddot{\boldsymbol{x}} = \boldsymbol{R}_n\overline{\ddot{\boldsymbol{x}}} \tag{9.197a}$$

$$\boldsymbol{\omega} = \boldsymbol{R}_n\overline{\boldsymbol{\omega}} \tag{9.197b}$$

The acceleration of the point where the strapdown sensor is placed is

$$\begin{aligned}
\ddot{\boldsymbol{x}} &= \left(\frac{1}{m}\boldsymbol{I} + \boldsymbol{f}\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{f}\times\right)\dot{\boldsymbol{\beta}} - \boldsymbol{f}\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\dot{\boldsymbol{\gamma}} - \boldsymbol{f}\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\left(\dot{\boldsymbol{x}}_n\times\boldsymbol{\beta} - \boldsymbol{\omega}_n\times\boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_n\right) \\
&\quad + \boldsymbol{b}\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\left(\dot{\boldsymbol{\gamma}} - \boldsymbol{f}\times\dot{\boldsymbol{\beta}} + \dot{\boldsymbol{x}}_n\times\boldsymbol{\beta} - \boldsymbol{\omega}_n\times\boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_n\right) + \boldsymbol{\omega}_n\times\boldsymbol{\omega}_n\times\boldsymbol{b} \\
&= \left(\frac{1}{m}\boldsymbol{I} + (\boldsymbol{f}-\boldsymbol{b})\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\boldsymbol{f}\times\right)\dot{\boldsymbol{\beta}} - (\boldsymbol{f}-\boldsymbol{b})\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\dot{\boldsymbol{\gamma}} \\
&\quad - (\boldsymbol{f}-\boldsymbol{b})\times{}^T\boldsymbol{J}_{\mathrm{CM}}^{-1}\left(\dot{\boldsymbol{x}}_n\times\boldsymbol{\beta} - \boldsymbol{\omega}_n\times\boldsymbol{J}_{\mathrm{CM}}\boldsymbol{\omega}_n\right) + \boldsymbol{\omega}_n\times\boldsymbol{\omega}_n\times\boldsymbol{b}
\end{aligned} \tag{9.198}$$

Note: this constraint is extremely simpler when the node is in the center of mass ($\boldsymbol{f} = \boldsymbol{0}$), and the strapdown sensor is in the node ($\boldsymbol{b} = \boldsymbol{0}$).

9.1.18 Rigid body displacement joint

Author: Reinhard Resch
A rigid body displacement joint is a load distributing rigid body coupling constraint similar to NASTRAN's `RBE3` element.

Files. It is implemented in files
`mbdyn/struct/rbdispjad.h`
`mbdyn/struct/rbdispjad.cc`

Kinematics The purpose of a rigid body displacement joint is, to apply a position and orientation constraint to a master node in such a way, that the master node is following the weighted average rigid body motion of a set of displacement only slave nodes. In contrast to NASTRAN's `RBE3` element, large deformations and large rotations are supported. For each slave node the difference $\boldsymbol{u}_j$, between the actual position of the slave node $\boldsymbol{x}_j$ and the corresponding nominal offset from the master node, can be written as:

$$\boldsymbol{u}_j = \boldsymbol{x}_m + \boldsymbol{R}_m\,\boldsymbol{o}_j - \boldsymbol{x}_j \tag{9.199}$$

$\boldsymbol{x}_m$ Position of the master node

$\boldsymbol{R}_m$ Orientation matrix of the master node

$\boldsymbol{o}_j$ Initial distance between the slave node and the master node

$\boldsymbol{x}_j$ Position of the slave node

In order to derive the expressions for the kinematic constraints, the virtual perturbation of $\boldsymbol{u}_j$ is needed.

$$\delta\boldsymbol{u}_j = \delta\boldsymbol{x}_m + \delta\boldsymbol{R}_m\,\boldsymbol{o}_j - \delta\boldsymbol{x}_j \tag{9.200}$$

$$\delta\boldsymbol{R}_m \approx \delta\boldsymbol{\varphi}_m\times\boldsymbol{R}_m \tag{9.201}$$

$$\delta\boldsymbol{u}_j = \delta\boldsymbol{x}_m + \delta\boldsymbol{\varphi}_m\times(\boldsymbol{R}_m\,\boldsymbol{o}_j) - \underbrace{\delta\boldsymbol{x}_j}_{=\boldsymbol{0}} \tag{9.202}$$

$\delta \boldsymbol{u}_j$ Virtual perturbation of $\boldsymbol{u}_j$

$\delta \boldsymbol{x}_m$ Virtual perturbation of the position of the master node

$\delta \boldsymbol{R}_m$ Virtual perturbation of the orientation matrix of the master node

$\delta \boldsymbol{\varphi}_m$ Virtual perturbation of the rotation vector of the master node

$\delta \boldsymbol{x}_j$ Virtual perturbation of $\boldsymbol{x}_j$

Since the kinematic constraints should be applied only to the master node, $\delta \boldsymbol{x}_j = \boldsymbol{0}$ is assumed.

Fictitious strain energy In the following equation, the virtual perturbation of the fictitious strain energy $U^\star$ is defined.

$$\delta U^\star = \sum_{j=1}^{N} w_j \, \delta \boldsymbol{u}_j^T \, \boldsymbol{u}_j \tag{9.203}$$

$\delta U^\star$ Virtual perturbation of the fictitious strain energy

w_j Weighting factor for slave node j

N Number of slave nodes

It is not required, that every weighting factor w_j is greater than zero. However the following condition must hold:

$$\sum_{j=1}^{N} w_j > 0 \tag{9.204}$$

Physical interpretation One could give the following physical interpretation of $U^\star$: Between each slave node and the master node, a fictitious linear isotropic spring with stiffness w_j is attached at an offset $\boldsymbol{o}_j$ with respect to the master node. Then $U^\star$ is the overall strain energy of all fictitious springs. In order to fulfill the constraint equations, the fictitious strain energy $U^\star$ must be minimized. For that reason, we may write:

$$\delta U^\star \equiv \boldsymbol{0} \tag{9.205}$$

Within this context it is not obvious why $w_j < 0$ should be allowed. However, this condition is required only for second order hexahedral elements which require negative weights at the corner nodes. Otherwise it would not be possible to achieve a smooth stress distribution for such elements.

Constraint equations Now equation 9.199 and equation 9.202 are substituted into equation 9.203:

$$\delta U^\star = \sum_{j=1}^{N} w_j \, \left(\delta \boldsymbol{x}_m^T + \delta \boldsymbol{\varphi}_m^T \times \boldsymbol{R}_m \, \boldsymbol{o}_j \right) \left(\boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \right) \tag{9.206}$$

$$= \sum_{j=1}^{N} w_j \, \left[\delta \boldsymbol{x}_m^T \, \left(\boldsymbol{x}_m + \boldsymbol{R}_m \, \boldsymbol{o}_j - \boldsymbol{x}_j \right) + \delta \boldsymbol{\varphi}_m^T \, \left(\boldsymbol{R}_m \, \boldsymbol{o}_j \right) \times \left(\boldsymbol{x}_m + \boldsymbol{R}_{\boldsymbol{m}} \, \boldsymbol{o}_j - \boldsymbol{x}_j \right) \right] \tag{9.207}$$

Since equation 9.207 and equation 9.205 must be valid for any $\delta\boldsymbol{x}_m$ and any $\delta\boldsymbol{\varphi}_m$ we can directly derive the constraint equations $\boldsymbol{\Phi}_t$ and $\boldsymbol{\Phi}_r$:

$$\boldsymbol{\Phi}_t = \sum_{j=1}^{N} w_j \left(\boldsymbol{x}_m + \boldsymbol{R}_m \boldsymbol{o}_j - \boldsymbol{x}_j\right) = \boldsymbol{0} \tag{9.208}$$

$$\boldsymbol{\Phi}_r = \sum_{j=1}^{N} w_j \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\boldsymbol{x}_m + \boldsymbol{R}_m \boldsymbol{o}_j - \boldsymbol{x}_j\right) = \boldsymbol{0} \tag{9.209}$$

$\boldsymbol{\Phi}_t$ Constraint equations for the position of the master node

$\boldsymbol{\Phi}_r$ Constraint equations for the orientation of the master node

Because $\left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) = \boldsymbol{0}$, the expression for $\boldsymbol{\Phi}_r$ can be simplified.

$$\boldsymbol{\Phi}_r = \sum_{j=1}^{N} w_j \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\boldsymbol{x}_m - \boldsymbol{x}_j\right) = \boldsymbol{0} \tag{9.210}$$

Virtual perturbation of constraint equations In order to include Lagrange multipliers in the equations of motion, it is required to derive the virtual perturbation of the constraint equations $\delta\boldsymbol{\Phi}_t$ and $\delta\boldsymbol{\Phi}_r$.

$$\delta\boldsymbol{\Phi}_t = \sum_{j=1}^{N} w_j \left[\delta\boldsymbol{x}_m + \delta\boldsymbol{\varphi}_m \times \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) - \delta\boldsymbol{x}_j\right] \tag{9.211}$$

$$= \sum_{j=1}^{N} w_j \left[\delta\boldsymbol{x}_m - \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \delta\boldsymbol{\varphi}_m - \delta\boldsymbol{x}_j\right] \tag{9.212}$$

$$\delta\boldsymbol{\Phi}_t^T = \sum_{j=1}^{N} w_j \left[\delta\boldsymbol{x}_m^T + \delta\boldsymbol{\varphi}_m^T \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times -\delta\boldsymbol{x}_j^T\right] \tag{9.213}$$

Now equation 9.213 can be rearranged and written in matrix form:

$$\delta\boldsymbol{\Phi}_t^T = \begin{pmatrix} \delta\boldsymbol{x}_m^T & \delta\boldsymbol{\varphi}_m^T & \delta\boldsymbol{x}_1^T & \dots & \delta\boldsymbol{x}_N^T \end{pmatrix} \begin{pmatrix} \sum_{j=1}^{N} w_j \boldsymbol{I} \\ \sum_{j=1}^{N} w_j \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \\ -w_1 \boldsymbol{I} \\ \vdots \\ -w_N \boldsymbol{I} \end{pmatrix} \tag{9.214}$$

The same procedure is also applied to $\boldsymbol{\Phi}_r$.

$$\delta\boldsymbol{\Phi}_r = \sum_{j=1}^{N} w_j \left[-\left(\boldsymbol{x}_m - \boldsymbol{x}_j\right) \times \delta\boldsymbol{R}_m \boldsymbol{o}_j + \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\delta\boldsymbol{x}_m - \delta\boldsymbol{x}_j\right)\right] \tag{9.215}$$

$$= \sum_{j=1}^{N} w_j \left[-\left(\boldsymbol{x}_m - \boldsymbol{x}_j\right) \times \delta\boldsymbol{\varphi}_m \times \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) + \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\delta\boldsymbol{x}_m - \delta\boldsymbol{x}_j\right)\right] \tag{9.216}$$

$$= \sum_{j=1}^{N} w_j \left[\left(\boldsymbol{x}_m - \boldsymbol{x}_j\right) \times \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \delta\boldsymbol{\varphi}_m + \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\delta\boldsymbol{x}_m - \delta\boldsymbol{x}_j\right)\right] \tag{9.217}$$

$$\delta\boldsymbol{\Phi}_r^T = \sum_{j=1}^{N} w_j \left[\delta\boldsymbol{\varphi}_m^T \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times \left(\boldsymbol{x}_m - \boldsymbol{x}_j\right) \times - \left(\delta\boldsymbol{x}_m^T - \delta\boldsymbol{x}_j^T\right) \left(\boldsymbol{R}_m \boldsymbol{o}_j\right) \times\right] \tag{9.218}$$

Also equation 9.218 can be rearranged and written in matrix form:

$$\delta\boldsymbol{\Phi}_r^T = \begin{pmatrix}\delta\boldsymbol{x}_m^T & \delta\boldsymbol{\varphi}_m^T & \delta\boldsymbol{x}_1^T & \dots & \delta\boldsymbol{x}_N^T\end{pmatrix} \begin{pmatrix} -\sum_{j=1}^N w_j\ (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times \\ \sum_{j=1}^N w_j\ (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times(\boldsymbol{x}_m-\boldsymbol{x}_j)\times \\ w_1\ (\boldsymbol{R}_m\,\boldsymbol{o}_1)\times \\ \vdots \\ w_N\ (\boldsymbol{R}_m\,\boldsymbol{o}_N)\times \end{pmatrix} \tag{9.219}$$

Adding contributions due to Lagrange multipliers In order to enforce the constraint equations $\boldsymbol{\Phi}_t$ and $\boldsymbol{\Phi}_r$, Lagrange multipliers $\boldsymbol{\lambda}_t$ and $\boldsymbol{\lambda}_r$ are required.

$$\delta W_\lambda = \delta\boldsymbol{\Phi}_t^T\,\boldsymbol{\lambda}_t + \delta\boldsymbol{\Phi}_r^T\,\boldsymbol{\lambda}_r \tag{9.220}$$

$$= \begin{pmatrix}\delta\boldsymbol{x}_m\\ \delta\boldsymbol{\varphi}_m\\ \delta\boldsymbol{x}_1\\ \vdots\\ \delta\boldsymbol{x}_N\end{pmatrix}^T \begin{pmatrix} \sum_{j=1}^N w_j\ [\boldsymbol{\lambda}_t - (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times\boldsymbol{\lambda}_r] \\ \sum_{j=1}^N w_j\,[(\boldsymbol{R}_m\,\boldsymbol{o}_j)\times\boldsymbol{\lambda}_t + (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times(\boldsymbol{x}_m-\boldsymbol{x}_j)\times\boldsymbol{\lambda}_r] \\ w_1\,[(\boldsymbol{R}_m\,\boldsymbol{o}_1)\times\boldsymbol{\lambda}_r - \boldsymbol{\lambda}_t] \\ \vdots \\ w_N\,[(\boldsymbol{R}_m\,\boldsymbol{o}_N)\times\boldsymbol{\lambda}_r - \boldsymbol{\lambda}_t] \end{pmatrix} \tag{9.221}$$

$$= \begin{pmatrix}\delta\boldsymbol{x}_m\\ \delta\boldsymbol{\varphi}_m\\ \delta\boldsymbol{x}_1\\ \vdots\\ \delta\boldsymbol{x}_N\end{pmatrix}^T \begin{pmatrix}\boldsymbol{F}_m\\ \boldsymbol{M}_m\\ \boldsymbol{F}_1\\ \vdots\\ \boldsymbol{F}_N\end{pmatrix} \tag{9.222}$$

$\boldsymbol{\lambda}_t$ Lagrange multipliers for position constraints $\boldsymbol{\Phi}_t$

$\boldsymbol{\lambda}_r$ Lagrange multipliers for orientation constraints $\boldsymbol{\Phi}_r$

$\boldsymbol{F}_m$ Reaction force at the master node

$\boldsymbol{M}_m$ Reaction couple at the master node

$\boldsymbol{F}_j$ Reaction force at slave node j

Contributions of the element Finally the contributions of the rigid body displacement joint can be summarized as:

$$\begin{pmatrix}\texttt{dCoef}^{-1}\,\boldsymbol{\Phi}_t\\ \texttt{dCoef}^{-1}\,\boldsymbol{\Phi}_r\\ \boldsymbol{F}_m\\ \boldsymbol{M}_m\\ \boldsymbol{F}_1\\ \vdots\\ \boldsymbol{F}_N\end{pmatrix} = \begin{pmatrix} \texttt{dCoef}^{-1}\sum_{j=1}^N w_j\ (\boldsymbol{x}_m+\boldsymbol{R}_m\,\boldsymbol{o}_j-\boldsymbol{x}_j) \\ \texttt{dCoef}^{-1}\sum_{j=1}^N w_j\ (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times(\boldsymbol{x}_m-\boldsymbol{x}_j) \\ \sum_{j=1}^N w_j\ [\boldsymbol{\lambda}_t - (\boldsymbol{R}_m\,\boldsymbol{o}_j)\times\boldsymbol{\lambda}_r] \\ \sum_{j=1}^N w_j\,(\boldsymbol{R}_m\,\boldsymbol{o}_j)\times[\boldsymbol{\lambda}_t + (\boldsymbol{x}_m-\boldsymbol{x}_j)\times\boldsymbol{\lambda}_r] \\ w_1\,[(\boldsymbol{R}_m\,\boldsymbol{o}_1)\times\boldsymbol{\lambda}_r - \boldsymbol{\lambda}_t] \\ \vdots \\ w_N\,[(\boldsymbol{R}_m\,\boldsymbol{o}_N)\times\boldsymbol{\lambda}_r - \boldsymbol{\lambda}_t] \end{pmatrix} \tag{9.223}$$

In equation 9.223 the constraint equations $\boldsymbol{\Phi}_t$ and $\boldsymbol{\Phi}_r$ are divided by `dCoef` in order to improve the condition number of the Jacobian matrix.

9.2 Deformable Constraints

Definitions

$$\begin{aligned} \boldsymbol{f}_1 &= \boldsymbol{R}_1\tilde{\boldsymbol{f}}_1 \\ \boldsymbol{f}_2 &= \boldsymbol{R}_2\tilde{\boldsymbol{f}}_2 \\ \boldsymbol{R}_{1h} &= \boldsymbol{R}_1\tilde{\boldsymbol{R}}_{1h} \\ \boldsymbol{R}_{2h} &= \boldsymbol{R}_2\tilde{\boldsymbol{R}}_{2h} \end{aligned}$$

where $\boldsymbol{R}_i$ is the current orientation of node i, $\tilde{\boldsymbol{R}}_{ih}$ is a constant re-orientation of the joint with respect to node i, so $\boldsymbol{R}_{ih}$ is the orientation of the joint with respect to the global frame; $\tilde{\boldsymbol{f}}_i$ is the offset of the joint with respect to node i in the node reference frame, so $\boldsymbol{f}_i$ is the offset of the joint with respect to node i in the global frame, and $\boldsymbol{x}_i + \boldsymbol{f}_i$ is the position of the joint with respect to the global frame.

Equilibrium equations are obtained by means of the Virtual Work Principle (VWP). While the unknown orientation parameters depend on the parametrization in use, and typically are Gibbs-Rodrigues parameters according to the updated-updated approach, equilibrium is written in terms of the equations conjugated to perturbations of relative rotation, namely:

$$\delta\mathcal{L} = \sum \delta\boldsymbol{x}_i^T\boldsymbol{F}_i + \boldsymbol{\theta}_{i\delta}\boldsymbol{M}_i = 0 \tag{9.224}$$

9.2.1 Rod With Offsets

Distance vector between pin points

$$\boldsymbol{l} = \boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1 \tag{9.225}$$

scalar distance

$$l = \sqrt{\boldsymbol{l}^T\boldsymbol{l}} \tag{9.226}$$

strain

$$\varepsilon = \frac{l}{l_0} - 1 \tag{9.227}$$

strain rate

$$\dot{\varepsilon} = \frac{\dot{l}}{l_0} \tag{9.228}$$

where

$$\dot{l} = \frac{1}{l}\boldsymbol{l}^T\dot{\boldsymbol{l}} \tag{9.229a}$$

$$\dot{\boldsymbol{l}} = \dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \tag{9.229b}$$

scalar force

$$f = f\left(\varepsilon, \dot{\varepsilon}\right) \tag{9.230}$$

nodal forces and moments result from the VWP according to

$$\delta\mathcal{L} = \delta l^T f \tag{9.231a}$$

$$= \delta\boldsymbol{l}^T\frac{\boldsymbol{l}}{l}f \tag{9.231b}$$

$$= \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}\right)^T\frac{\boldsymbol{l}}{l}f \tag{9.231c}$$

force vector

$$\boldsymbol{F} = \frac{\boldsymbol{l}}{l} f \tag{9.232}$$

nodal forces and moments

$$\boldsymbol{F}_1 = -\boldsymbol{F} \tag{9.233a}$$
$$\boldsymbol{M}_1 = -\boldsymbol{f}_1 \times \boldsymbol{F} \tag{9.233b}$$
$$\boldsymbol{F}_2 = \boldsymbol{F} \tag{9.233c}$$
$$\boldsymbol{M}_2 = \boldsymbol{f}_2 \times \boldsymbol{F} \tag{9.233d}$$

equation linearization

$$\delta\boldsymbol{F}_1 = -\delta\boldsymbol{F} \tag{9.234a}$$
$$\delta\boldsymbol{M}_1 = -\boldsymbol{f}_1 \times \delta\boldsymbol{F} - \boldsymbol{F} \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \tag{9.234b}$$
$$\delta\boldsymbol{F}_2 = \delta\boldsymbol{F} \tag{9.234c}$$
$$\delta\boldsymbol{M}_2 = \boldsymbol{f}_2 \times \delta\boldsymbol{F} + \boldsymbol{F} \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} \tag{9.234d}$$

force linearization

$$\delta\boldsymbol{F} = \frac{f}{l}\left(\boldsymbol{I} - \frac{\boldsymbol{l}\boldsymbol{l}^T}{l^2}\right)\delta\boldsymbol{l} + \frac{\boldsymbol{l}}{l}\delta f \tag{9.235}$$

scalar force linearization

$$\delta f = \frac{\partial f}{\partial \varepsilon}\delta\varepsilon + \frac{\partial f}{\partial \dot{\varepsilon}}\delta\dot{\varepsilon} \tag{9.236}$$

strain linearization

$$\delta\varepsilon = \frac{1}{l_0}\delta l \tag{9.237}$$

where

$$\delta l = \frac{1}{l}\boldsymbol{l}^T\delta\boldsymbol{l} \tag{9.238a}$$
$$\delta\boldsymbol{l} = \delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \tag{9.238b}$$

strain rate linearization

$$\delta\dot{\varepsilon} = \frac{1}{l_0}\delta\dot{l} \tag{9.239}$$

where

$$\delta\dot{l} = \frac{\boldsymbol{l}^T}{l}\delta\dot{\boldsymbol{l}} + \frac{\dot{\boldsymbol{l}}^T}{l}\left(\boldsymbol{I} - \frac{\boldsymbol{l}\boldsymbol{l}^T}{l^2}\right)\delta\boldsymbol{l} \tag{9.240a}$$
$$\begin{aligned}\delta\dot{\boldsymbol{l}} = {} & \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{\omega}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} \\ & - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \times \delta\boldsymbol{\omega}_1 + \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}\end{aligned} \tag{9.240b}$$

to summarize:

$$\delta\boldsymbol{F} = \boldsymbol{K}_l\delta\boldsymbol{l} + \boldsymbol{K}_{\dot{l}}\delta\dot{\boldsymbol{l}} \tag{9.241}$$

with

$$\boldsymbol{K_l} = \frac{f}{l}\boldsymbol{I} + \left(\frac{1}{l^2 l_0}\frac{\partial f}{\partial \varepsilon} - \frac{\dot{\varepsilon}}{l^3}\frac{\partial f}{\partial \dot{\varepsilon}} - \frac{f}{l^3}\right)\boldsymbol{l}\boldsymbol{l}^T + \frac{1}{l^2 l_0}\frac{\partial f}{\partial \dot{\varepsilon}}\boldsymbol{l}\boldsymbol{l}^T \tag{9.242a}$$

$$\boldsymbol{K_{\dot{l}}} = \frac{1}{l^2 l_0}\frac{\partial f}{\partial \dot{\varepsilon}}\boldsymbol{l}\boldsymbol{l}^T \tag{9.242b}$$

according to the simplifications of the updated-updated approach,

$$\boldsymbol{\theta}_{i\delta} \overset{\text{uu}}{=} \delta\boldsymbol{g}_i \tag{9.243a}$$

$$\delta\boldsymbol{\omega}_i \overset{\text{uu}}{=} \delta\dot{\boldsymbol{g}}_i - \boldsymbol{\omega} \times \delta\boldsymbol{g}_i \tag{9.243b}$$

recalling that

$$\delta z = c\delta\dot{z} \tag{9.244}$$

the linearization of the force becomes

$$\begin{aligned}
\delta\boldsymbol{F} = {} & \left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\delta\dot{\boldsymbol{x}}_2 \\
& + \left(-\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_2\times + c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_2\times\boldsymbol{\omega}_2\right)\times\right)\delta\dot{\boldsymbol{g}}_2 \\
& - \left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\delta\dot{\boldsymbol{x}}_1 \\
& - \left(-\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_1\times + c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_1\times\boldsymbol{\omega}_1\right)\times\right)\delta\dot{\boldsymbol{g}}_1
\end{aligned} \tag{9.245}$$

In summary:

$$\begin{aligned}
& \begin{bmatrix} \left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ \boldsymbol{f}_1\times\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ -\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ -\boldsymbol{f}_2\times\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \end{bmatrix}\delta\dot{\boldsymbol{x}}_1 \\
& + \begin{bmatrix} -\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_1\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_1\times\boldsymbol{\omega}_1\right)\times\right) \\ -\boldsymbol{f}_1\times\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_1\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_1\times\boldsymbol{\omega}_1\right)\times\right) - c\boldsymbol{F}\times\boldsymbol{f}_1\times \\ \left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_1\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_1\times\boldsymbol{\omega}_1\right)\times\right) \\ \boldsymbol{f}_2\times\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_1\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_1\times\boldsymbol{\omega}_1\right)\times\right) \end{bmatrix}\delta\dot{\boldsymbol{g}}_1 \\
& + \begin{bmatrix} -\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ -\boldsymbol{f}_1\times\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ \left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \\ \boldsymbol{f}_2\times\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right) \end{bmatrix}\delta\dot{\boldsymbol{x}}_2 \\
& + \begin{bmatrix} \left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_2\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_2\times\boldsymbol{\omega}_2\right)\times\right) \\ \boldsymbol{f}_1\times\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_2\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_2\times\boldsymbol{\omega}_2\right)\times\right) \\ -\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_2\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_2\times\boldsymbol{\omega}_2\right)\times\right) \\ -\boldsymbol{f}_2\times\left(\left(c\boldsymbol{K_l} + \boldsymbol{K_{\dot{l}}}\right)\boldsymbol{f}_2\times - c\boldsymbol{K_{\dot{l}}}\left(\boldsymbol{f}_2\times\boldsymbol{\omega}_2\right)\times\right) + c\boldsymbol{F}\times\boldsymbol{f}_2\times \end{bmatrix}\delta\dot{\boldsymbol{g}}_2 = \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{f}_1\times\boldsymbol{F} \\ -\boldsymbol{F} \\ -\boldsymbol{f}_2\times\boldsymbol{F} \end{Bmatrix}
\end{aligned} \tag{9.246}$$

9.2.2 Deformable Hinge

The deformable hinge applies to two nodes an internal moment that may depend on their relative orientation and angular velocity by means of a 3D constitutive law. It is discussed in [9]. Two variants of this joint are presented:

- the one historically implemented in MBDyn, called "attached", considers the constitutive law and the resulting moment attached to node 1;

- the other one, called "invariant", defines an intermediate orientation that is halfway between that of the two nodes, and considers the constitutive law and the resulting moment attached to that intermediate orientation; as a consequence, the resulting internal moment does not depend on the node sequence even when anisotropic constitutive laws are considered.

The relative rotation vector is computed in analogy with the `drive hinge` joint (`DriveHingeJoint`).

$$\boldsymbol{\theta} = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}\right)\right) \tag{9.247}$$

where $\boldsymbol{R}_{1h}$, $\boldsymbol{R}_{2h}$ are the matrices that express the orientation of each side of the hinge in the global reference frame, defined as

$$\boldsymbol{R}_{1h} = \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1h} \tag{9.248a}$$

$$\boldsymbol{R}_{2h} = \boldsymbol{R}_2 \tilde{\boldsymbol{R}}_{2h} \tag{9.248b}$$

and $\tilde{\boldsymbol{R}}_{1h}$, $\tilde{\boldsymbol{R}}_{2h}$ are the matrices that express the orientation of each side of the hinge with respect to the corresponding node. The perturbation of $\boldsymbol{R}_{1h}$, $\boldsymbol{R}_{2h}$ yields

$$\delta\boldsymbol{R}_{1h} = \boldsymbol{\theta}_{1\delta} \times \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1h} = \boldsymbol{\theta}_{1\delta} \times \boldsymbol{R}_{1h} \tag{9.249a}$$

$$\delta\boldsymbol{R}_{2h} = \boldsymbol{\theta}_{2\delta} \times \boldsymbol{R}_2 \tilde{\boldsymbol{R}}_{2h} = \boldsymbol{\theta}_{2\delta} \times \boldsymbol{R}_{2h} \tag{9.249b}$$

since matrices $\tilde{\boldsymbol{R}}_{1h}$, $\tilde{\boldsymbol{R}}_{2h}$ are constant.

Since the relative orientation $\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}$ is a rotation about an axis parallel to $\boldsymbol{\theta}$, $\boldsymbol{\theta}$ itself does not change when it is referred to any intermediate orientation between $\boldsymbol{I}$ and $\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}$, namely

$$\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h} \boldsymbol{\theta} = \boldsymbol{\theta}. \tag{9.250}$$

The same applies for any relative orientation tensor built from a rotation vector $\alpha\boldsymbol{\theta}$ parallel to $\boldsymbol{\theta}$, whatever value the scalar α assumes.

The relative angular velocity is defined as the derivative of the relative orientation matrix

$$\begin{aligned}
\boldsymbol{\omega} \times &= \frac{\mathrm{d}}{\mathrm{d}t}\left(\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}\right)\left(\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}\right)^T \\
&= \left(\dot{\boldsymbol{R}}_{1h}^T \boldsymbol{R}_{2h} + \boldsymbol{R}_{1h}^T \dot{\boldsymbol{R}}_{2h}\right) \boldsymbol{R}_{2h}^T \boldsymbol{R}_{1h} \\
&= \boldsymbol{R}_{1h}^T \boldsymbol{\omega}_1 \times^T \boldsymbol{R}_{1h} + \boldsymbol{R}_{1h}^T \boldsymbol{\omega}_2 \times \boldsymbol{R}_{1h} \\
&= \boldsymbol{R}_{1h}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \boldsymbol{R}_{1h}
\end{aligned} \tag{9.251}$$

so

$$\boldsymbol{\omega} = \boldsymbol{R}_{1h}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \tag{9.252}$$

Attached Deformable Hinge

The constitutive law is defined attached to the reference frame of node 1; the value of the relative rotation vector, $\boldsymbol{\theta}$, does not vary, according to what stated earlier.

The perturbation of $\boldsymbol{\theta}$ yields

$$\boldsymbol{\theta}_\delta = \boldsymbol{R}_{1h}^T \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right) \tag{9.253}$$

which, according to the simplifications of the updated-updated approach, becomes

$$\boldsymbol{\theta}_\delta \overset{\mathrm{uu}}{=} \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{g}_2 - \delta\boldsymbol{g}_1\right) \tag{9.254}$$

The perturbation of the relative angular velocity of Equation (9.252), according to the simplifications of the updated-updated approach, yields

$$\begin{aligned}\delta\boldsymbol{\omega} &= \boldsymbol{R}_{1h}^T\left(\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\times\boldsymbol{\theta}_{1\delta}+\delta\boldsymbol{\omega}_2-\delta\boldsymbol{\omega}_1\right)\\ &\overset{\text{uu}}{=} \boldsymbol{R}_{1h}^T\left(\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\times\delta\boldsymbol{g}_1+\delta\dot{\boldsymbol{g}}_2-\boldsymbol{\omega}_2\times\delta\boldsymbol{g}_2-\delta\dot{\boldsymbol{g}}_1+\boldsymbol{\omega}_1\times\delta\boldsymbol{g}_1\right)\\ &= \boldsymbol{R}_{1h}^T\left(\delta\dot{\boldsymbol{g}}_2-\delta\dot{\boldsymbol{g}}_1-\boldsymbol{\omega}_2\times\left(\delta\boldsymbol{g}_2-\delta\boldsymbol{g}_1\right)\right).\end{aligned} \tag{9.255}$$

The internal moment $\tilde{\boldsymbol{M}}$ is computed as function of the relative rotation and velocity

$$\tilde{\boldsymbol{M}} = \tilde{\boldsymbol{M}}\left(\boldsymbol{\theta},\boldsymbol{\omega}\right). \tag{9.256}$$

The nodal moments result from the VWP as

$$\begin{aligned}\delta\mathcal{L} &= \boldsymbol{\theta}_\delta^T\tilde{\boldsymbol{M}}\\ &= \left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)^T\boldsymbol{R}_{1h}\tilde{\boldsymbol{M}},\end{aligned} \tag{9.257}$$

which states that the internal moment is applied to each node after pre-multiplication by $\boldsymbol{R}_{1h}$

$$\boldsymbol{M}_i = \left(-1\right)^i\boldsymbol{R}_{1h}\tilde{\boldsymbol{M}}\left(\boldsymbol{\theta},\boldsymbol{\omega}\right). \tag{9.258}$$

Its linearization yields

$$\delta\boldsymbol{M}_i = \left(-1\right)^i\boldsymbol{R}_{1h}\left(\tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}}\delta\boldsymbol{\theta}+\tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}}\delta\boldsymbol{\omega}\right)-\boldsymbol{M}_i\times\boldsymbol{\theta}_{1\delta} \tag{9.259}$$

The complete linearized problem is

$$\begin{aligned}&\begin{bmatrix}\boldsymbol{M}_{/\boldsymbol{\omega}} & -\boldsymbol{M}_{/\boldsymbol{\omega}}\\ -\boldsymbol{M}_{/\boldsymbol{\omega}} & \boldsymbol{M}_{/\boldsymbol{\omega}}\end{bmatrix}\begin{Bmatrix}\delta\boldsymbol{\omega}_1\\ \delta\boldsymbol{\omega}_2\end{Bmatrix}\\ &+\begin{bmatrix}-\boldsymbol{M}_{/\boldsymbol{\omega}}\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\times & \boldsymbol{0}\\ \boldsymbol{M}_{/\boldsymbol{\omega}}\left(\boldsymbol{\omega}_2-\boldsymbol{\omega}_1\right)\times & \boldsymbol{0}\end{bmatrix}\begin{Bmatrix}\boldsymbol{\theta}_{1\delta}\\ \boldsymbol{\theta}_{2\delta}\end{Bmatrix}\\ &+\begin{bmatrix}\boldsymbol{M}_{/\boldsymbol{\theta}} & -\boldsymbol{M}_{/\boldsymbol{\theta}}\\ -\boldsymbol{M}_{/\boldsymbol{\theta}} & \boldsymbol{M}_{/\boldsymbol{\theta}}\end{bmatrix}\begin{Bmatrix}\boldsymbol{\theta}_{1\delta}\\ \boldsymbol{\theta}_{2\delta}\end{Bmatrix}\\ &+\begin{bmatrix}\boldsymbol{M}\times & \boldsymbol{0}\\ -\boldsymbol{M}\times & \boldsymbol{0}\end{bmatrix}\begin{Bmatrix}\boldsymbol{\theta}_{1\delta}\\ \boldsymbol{\theta}_{2\delta}\end{Bmatrix}=\begin{Bmatrix}\boldsymbol{M}\\ -\boldsymbol{M}\end{Bmatrix},\end{aligned} \tag{9.260}$$

where

$$\boldsymbol{M}_{/\boldsymbol{\theta}} = \boldsymbol{R}_{1h}\tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}}\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{1h}^T \tag{9.261a}$$

$$\boldsymbol{M}_{/\boldsymbol{\omega}} = \boldsymbol{R}_{1h}\tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}}\boldsymbol{R}_{1h}^T. \tag{9.261b}$$

According to the simplifications of the updated-updated approach, the linearization becomes

$$\begin{aligned}&\begin{bmatrix}\boldsymbol{M}_{/\boldsymbol{\omega}} & -\boldsymbol{M}_{/\boldsymbol{\omega}}\\ -\boldsymbol{M}_{/\boldsymbol{\omega}} & \boldsymbol{M}_{/\boldsymbol{\omega}}\end{bmatrix}\begin{Bmatrix}\delta\dot{\boldsymbol{g}}_1\\ \delta\dot{\boldsymbol{g}}_2\end{Bmatrix}\\ &+\begin{bmatrix}-\boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2\times & \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2\times\\ \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2\times & -\boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2\times\end{bmatrix}\begin{Bmatrix}\delta\boldsymbol{g}_1\\ \delta\boldsymbol{g}_2\end{Bmatrix}\\ &+\begin{bmatrix}\boldsymbol{M}_{/\boldsymbol{\theta}} & -\boldsymbol{M}_{/\boldsymbol{\theta}}\\ -\boldsymbol{M}_{/\boldsymbol{\theta}} & \boldsymbol{M}_{/\boldsymbol{\theta}}\end{bmatrix}\begin{Bmatrix}\delta\boldsymbol{g}_1\\ \delta\boldsymbol{g}_2\end{Bmatrix}\\ &+\begin{bmatrix}\boldsymbol{M}\times & \boldsymbol{0}\\ -\boldsymbol{M}\times & \boldsymbol{0}\end{bmatrix}\begin{Bmatrix}\delta\boldsymbol{g}_1\\ \delta\boldsymbol{g}_2\end{Bmatrix}\overset{\text{uu}}{=}\begin{Bmatrix}\boldsymbol{M}\\ -\boldsymbol{M}\end{Bmatrix}.\end{aligned} \tag{9.262}$$

Invariant Deformable Hinge

The rotation $\tilde{\boldsymbol{\theta}} = \boldsymbol{\theta}/2$ is used to define an intermediate reference frame for the joint, whose orientation with respect to node 1 is

$$\begin{aligned}\tilde{\boldsymbol{R}} &= \exp\left(\frac{1}{2}\exp^{-1}\left(\boldsymbol{R}_{1h}^T\boldsymbol{R}_{2h}\right)\right)\\ &= \exp\left(\tilde{\boldsymbol{\theta}}\times\right)\end{aligned} \tag{9.263}$$

The orientation of the intermediate reference frame with respect to node 2 is defined by $-\tilde{\boldsymbol{\theta}}$, i.e. $\tilde{\boldsymbol{R}}^T$. The orientation of the intermediate frame with respect to the global frame is thus

$$\hat{\boldsymbol{R}} = \boldsymbol{R}_{1h}\tilde{\boldsymbol{R}} \tag{9.264a}$$

$$= \boldsymbol{R}_{2h}\tilde{\boldsymbol{R}}^T \tag{9.264b}$$

The perturbation of $\tilde{\boldsymbol{R}}$ is

$$\delta\tilde{\boldsymbol{R}} = \tilde{\boldsymbol{\theta}}_\delta \times \tilde{\boldsymbol{R}} \tag{9.265}$$

where

$$\delta\tilde{\boldsymbol{\theta}} = \frac{1}{2}\delta\boldsymbol{\theta} \tag{9.266}$$

and thus

$$\tilde{\boldsymbol{\theta}}_\delta = \boldsymbol{\Gamma}\left(\tilde{\boldsymbol{\theta}}\right)\frac{1}{2}\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{\theta}_\delta \tag{9.267}$$

Another interesting result is obtained by considering that the perturbation of the relative orientation matrix must be equal to the perturbation of the square of the half-relative orientation, namely

$$\begin{aligned}\boldsymbol{\theta}_\delta\times &= \delta\left(\tilde{\boldsymbol{R}}\tilde{\boldsymbol{R}}\right)\left(\tilde{\boldsymbol{R}}\tilde{\boldsymbol{R}}\right)^T\\ &= \tilde{\boldsymbol{\theta}}_\delta\times + \tilde{\boldsymbol{R}}\tilde{\boldsymbol{\theta}}_\delta\times\tilde{\boldsymbol{R}}^T\end{aligned} \tag{9.268}$$

and thus

$$\boldsymbol{\theta}_\delta = \left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)\tilde{\boldsymbol{\theta}}_\delta \tag{9.269}$$

The matrix $\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)$ has very interesting properties.

Property 1.

$$\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)\tilde{\boldsymbol{R}}^T = \left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right) \tag{9.270}$$

Property 2.

$$\tilde{\boldsymbol{R}}^T\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right) = \left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right) \tag{9.271}$$

Property 3.

$$\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)\tilde{\boldsymbol{R}} = \left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right) \tag{9.272}$$

Property 4.

$$\tilde{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right) \tag{9.273}$$

Property 5. As a consequence of Equations (9.270, 9.273),

$$\tilde{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)\tilde{\boldsymbol{R}}^T=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right) \tag{9.274}$$

which basically means that the transformation $\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)$ is coaxial with the rotation described by matrix $\tilde{\boldsymbol{R}}$. A similar property exists for matrix $\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)$ (e.g. by transposing Equation (9.274)), while the following

Property 6.

$$\tilde{\boldsymbol{R}}^T\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)\tilde{\boldsymbol{R}}=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right) \tag{9.275}$$

is true as a consequence of Equations (9.271, 9.272).

Property 7. Another interesting property is

$$\boldsymbol{I}-\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)^{-1}. \tag{9.276}$$

This can be easily proved by considering that, according to Equation (9.273),

$$\begin{aligned}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}&=\left(\tilde{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)\right)^{-1}\\&=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)^{-1}\tilde{\boldsymbol{R}}^T,\end{aligned} \tag{9.277}$$

and, as a consequence,

$$\boldsymbol{I}=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)^{-1}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right) \tag{9.278}$$

which reduces again to the identity matrix.

Property 8.

$$\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^T=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right) \tag{9.279}$$

Property 9.

$$\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-T}=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^T\right)^{-1} \tag{9.280}$$

Property 10. As a consequence of Equations (9.270–9.273),

$$\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)=\boldsymbol{R}_{1h}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^{T}\right) \tag{9.281}$$

and

$$\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^{T}\right)^{-1}=\boldsymbol{R}_{1h}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1} \tag{9.282}$$

and all other combinations.

It is convenient to define

$$\hat{\boldsymbol{I}}=\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^{T}. \tag{9.283}$$

According to Equations (9.269) and (9.253), the perturbation of the intermediate relative rotation vector yields

$$\begin{aligned}\tilde{\boldsymbol{\theta}}_{\delta}&=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{\theta}_{\delta}\\&=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{R}_{1h}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\\&=\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^{T}\right)^{-1}\hat{\boldsymbol{R}}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right).\end{aligned} \tag{9.284}$$

The perturbation of $\hat{\boldsymbol{R}}$, according to Equations (9.264a) and (9.264b), respectively yields

$$\begin{aligned}\delta\hat{\boldsymbol{R}}\hat{\boldsymbol{R}}^{T}&=\boldsymbol{\theta}_{1\delta}\times+\boldsymbol{R}_{1h}\tilde{\boldsymbol{\theta}}_{\delta}\times\boldsymbol{R}_{1h}^{T}\\&=\boldsymbol{\theta}_{2\delta}\times-\hat{\boldsymbol{R}}\tilde{\boldsymbol{\theta}}_{\delta}\times\hat{\boldsymbol{R}}^{T},\end{aligned} \tag{9.285}$$

so

$$\begin{aligned}\hat{\boldsymbol{\theta}}_{\delta}&=\boldsymbol{\theta}_{1\delta}+\boldsymbol{R}_{1h}\tilde{\boldsymbol{\theta}}_{\delta} && \text{Eq. (9.264a)}\\&=\boldsymbol{\theta}_{1\delta}+\boldsymbol{R}_{1h}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{R}_{1h}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\\&=\boldsymbol{\theta}_{1\delta}+\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\\&=\boldsymbol{\theta}_{2\delta}-\hat{\boldsymbol{R}}\tilde{\boldsymbol{\theta}}_{\delta} && \text{Eq. (9.264b)}\\&=\boldsymbol{\theta}_{2\delta}-\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{R}_{1h}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\\&=\boldsymbol{\theta}_{2\delta}-\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}^{T}\right)^{-1}\hat{\boldsymbol{R}}^{T}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\\&=\hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta}+\hat{\boldsymbol{I}}^{T}\boldsymbol{\theta}_{1\delta}\end{aligned} \tag{9.286}$$

The perturbation of matrix $\hat{\boldsymbol{I}}$ yields

$$
\begin{aligned}
\delta\hat{\boldsymbol{I}} &= \delta\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^T \\
&\quad + \hat{\boldsymbol{R}}\,\delta\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^T \\
&\quad + \hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\delta\hat{\boldsymbol{R}}^T \qquad (9.287a)\\
&= \hat{\boldsymbol{\theta}}_\delta\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\tilde{\boldsymbol{\theta}}_\delta\times\tilde{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^T + \hat{\boldsymbol{I}}\hat{\boldsymbol{\theta}}_\delta\times{}^T \\
&= \hat{\boldsymbol{\theta}}_\delta\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\underbrace{\boldsymbol{R}_{1h}^T\boldsymbol{R}_{1h}}_{\boldsymbol{I}}\tilde{\boldsymbol{\theta}}_\delta\times\underbrace{\boldsymbol{R}_{1h}^T\boldsymbol{R}_{1h}}_{\boldsymbol{I}}\tilde{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^T - \hat{\boldsymbol{I}}\hat{\boldsymbol{\theta}}_\delta\times \\
&= \hat{\boldsymbol{\theta}}_\delta\times\hat{\boldsymbol{I}} - \underbrace{\hat{\boldsymbol{R}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{R}_{1h}^T}_{\hat{\boldsymbol{I}}^T}\underbrace{\boldsymbol{R}_{1h}\tilde{\boldsymbol{\theta}}_\delta\times\boldsymbol{R}_{1h}^T}_{(\boldsymbol{R}_{1h}\tilde{\boldsymbol{\theta}}_\delta)\times}\underbrace{\overbrace{\boldsymbol{R}_{1h}\tilde{\boldsymbol{R}}}^{\hat{\boldsymbol{R}}}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\hat{\boldsymbol{R}}^T}_{\hat{\boldsymbol{I}}} - \hat{\boldsymbol{I}}\hat{\boldsymbol{\theta}}_\delta\times \\
&= \hat{\boldsymbol{\theta}}_\delta\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}^T\left(\underbrace{\boldsymbol{R}_{1h}\left(\boldsymbol{I}+\tilde{\boldsymbol{R}}\right)^{-1}\boldsymbol{R}_{1h}^T}_{\hat{\boldsymbol{I}}}(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta})\right)\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}\hat{\boldsymbol{\theta}}_\delta\times \\
&= \left(\hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta}+\hat{\boldsymbol{I}}^T\boldsymbol{\theta}_{1\delta}\right)\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}^T\left(\hat{\boldsymbol{I}}\left(\boldsymbol{\theta}_{2\delta}-\boldsymbol{\theta}_{1\delta}\right)\right)\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}\left(\hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta}+\hat{\boldsymbol{I}}^T\boldsymbol{\theta}_{1\delta}\right)\times \qquad (9.287b)
\end{aligned}
$$

The perturbation of matrix $\hat{\boldsymbol{I}}$ is generally useful when multiplying a generic vector $\boldsymbol{v}$, resulting in

$$
\begin{aligned}
\delta\hat{\boldsymbol{I}}\boldsymbol{v} &= \left(\left(\hat{\boldsymbol{I}}\boldsymbol{v}\times\ -\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\right)\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\hat{\boldsymbol{I}}\right)\boldsymbol{\theta}_{1\delta} \\
&\quad + \left(\left(\hat{\boldsymbol{I}}\boldsymbol{v}\times\ -\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\right)\hat{\boldsymbol{I}} + \hat{\boldsymbol{I}}^T\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\hat{\boldsymbol{I}}\right)\boldsymbol{\theta}_{2\delta} \\
&= \hat{\boldsymbol{I}}_{1(\boldsymbol{v})}\boldsymbol{\theta}_{1\delta} + \hat{\boldsymbol{I}}_{2(\boldsymbol{v})}\boldsymbol{\theta}_{2\delta} \qquad (9.288a)\\
\delta\left(\hat{\boldsymbol{I}}^T\right)\boldsymbol{v} &= \left(\left(\hat{\boldsymbol{I}}^T\boldsymbol{v}\times\ -\left(\hat{\boldsymbol{I}}^T\boldsymbol{v}\right)\times\right)\hat{\boldsymbol{I}}^T + \hat{\boldsymbol{I}}^T\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\hat{\boldsymbol{I}}\right)\boldsymbol{\theta}_{1\delta} \\
&\quad + \left(\left(\hat{\boldsymbol{I}}^T\boldsymbol{v}\times\ -\left(\hat{\boldsymbol{I}}^T\boldsymbol{v}\right)\times\right)\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}^T\left(\hat{\boldsymbol{I}}\boldsymbol{v}\right)\times\hat{\boldsymbol{I}}\right)\boldsymbol{\theta}_{2\delta} \\
&= \left(\hat{\boldsymbol{I}}^T\right)_{1(\boldsymbol{v})}\boldsymbol{\theta}_{1\delta} + \left(\hat{\boldsymbol{I}}^T\right)_{2(\boldsymbol{v})}\boldsymbol{\theta}_{2\delta}. \qquad (9.288b)
\end{aligned}
$$

Relative Rotation Vector. The relative rotation vector is $\boldsymbol{\theta}$; by definition, this does not depend on the reference frame that is considered, among those intermediate between node 1 and 2, since it is coaxial to any rotation intermediate between the orientations of the two nodes; in detail

$$
\tilde{\boldsymbol{R}}^T\boldsymbol{\theta} = \boldsymbol{\theta}, \qquad (9.289)
$$

since $\tilde{\boldsymbol{\theta}}$ is co-axial to $\boldsymbol{\theta}$ by construction.

This implies that

$$\begin{aligned}
\delta\boldsymbol{\theta} &= \delta\left(\tilde{\boldsymbol{R}}^T\boldsymbol{\theta}\right)\\
&= \tilde{\boldsymbol{R}}^T\left(\boldsymbol{\theta}\times\tilde{\boldsymbol{\theta}}_\delta + \delta\boldsymbol{\theta}\right)\\
&= \tilde{\boldsymbol{R}}^T\left(\boldsymbol{\theta}\times\boldsymbol{\Gamma}\left(\tilde{\boldsymbol{\theta}}\right)\delta\tilde{\boldsymbol{\theta}} + \delta\boldsymbol{\theta}\right)\\
&= \tilde{\boldsymbol{R}}^T\left(2\tilde{\boldsymbol{\theta}}\times\boldsymbol{\Gamma}\left(\tilde{\boldsymbol{\theta}}\right)\frac{\delta\boldsymbol{\theta}}{2} + \delta\boldsymbol{\theta}\right)\\
&= \tilde{\boldsymbol{R}}^T\left(\tilde{\boldsymbol{\theta}}\times\boldsymbol{\Gamma}\left(\tilde{\boldsymbol{\theta}}\right) + \boldsymbol{I}\right)\delta\boldsymbol{\theta}\\
&= \delta\boldsymbol{\theta},
\end{aligned} \tag{9.290}$$

since, by definition,

$$\boldsymbol{I} + \tilde{\boldsymbol{\theta}}\times\boldsymbol{\Gamma}\left(\tilde{\boldsymbol{\theta}}\right) = \tilde{\boldsymbol{R}}. \tag{9.291}$$

The perturbation of the relative rotation vector $\boldsymbol{\theta}$,

$$\delta\overline{\boldsymbol{\theta}} = \delta\boldsymbol{\theta}, \tag{9.292}$$

is used as perturbation of the measure of the straining of the joint.

Relative Angular Velocity. The relative angular velocity between the two nodes, in the intermediate reference frame $\hat{\boldsymbol{R}}$, is

$$\overline{\boldsymbol{\omega}} = \hat{\boldsymbol{R}}^T\left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right), \tag{9.293}$$

which corresponds to that of the attached case, Eq. (9.252), but projected in the material frame by $\hat{\boldsymbol{R}}^T$ instead of the reference frame of node 1, $\boldsymbol{R}_{1h}$. The linearization of the angular velocity of Equation (9.293)

yields

$$\begin{aligned}
\delta\overline{\boldsymbol{\omega}} &= \hat{\boldsymbol{R}}^T \left((\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \left(\boldsymbol{\theta}_{1\delta} + \boldsymbol{R}_{1h} \tilde{\boldsymbol{\theta}}_\delta \right) + \delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 \right) \\
&= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 \right) \\
&\quad + \hat{\boldsymbol{R}}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \boldsymbol{R}_{1h} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \boldsymbol{R}_{1h}^T \boldsymbol{\theta}_{2\delta} \\
&\quad + \hat{\boldsymbol{R}}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \left(\boldsymbol{I} - \boldsymbol{R}_{1h} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \boldsymbol{R}_{1h}^T \right) \boldsymbol{\theta}_{1\delta} \\
&= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 \right) \\
&\quad + \hat{\boldsymbol{R}}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \hat{\boldsymbol{R}} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{2\delta} \\
&\quad + \hat{\boldsymbol{R}}^T \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1 \right) \times \hat{\boldsymbol{R}} \left(\boldsymbol{I} - \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \right) \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{1\delta} \\
&= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 \right) \\
&\quad + \overline{\boldsymbol{\omega}} \times \left(\left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{2\delta} + \left(\boldsymbol{I} - \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \right) \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{1\delta} \right) \\
&= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 \right) \\
&\quad + \overline{\boldsymbol{\omega}} \times \left(\left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{2\delta} + \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^T \right)^{-1} \hat{\boldsymbol{R}}^T \boldsymbol{\theta}_{1\delta} \right) \\
&= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1 + (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \left(\hat{\boldsymbol{I}} \boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}^T \boldsymbol{\theta}_{1\delta} \right) \right)
\end{aligned} \tag{9.294}$$

since

$$\tilde{\boldsymbol{R}} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right) \tilde{\boldsymbol{R}}^T = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right) \tag{9.295}$$

and thus

$$\begin{aligned}
\left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} &= \tilde{\boldsymbol{R}}^{-T} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \tilde{\boldsymbol{R}}^{-1} \\
&= \tilde{\boldsymbol{R}} \left(\boldsymbol{I} + \tilde{\boldsymbol{R}} \right)^{-1} \tilde{\boldsymbol{R}}^T,
\end{aligned} \tag{9.296}$$

where Equation (9.276) has been used.

Intermediate Angular Velocity. Consider now

$$\begin{aligned}
\hat{\boldsymbol{\omega}} \times &= \dot{\hat{\boldsymbol{R}}} \hat{\boldsymbol{R}}^T \\
&= \boldsymbol{\omega}_1 \times + \boldsymbol{R}_{1h} \tilde{\boldsymbol{\omega}} \times \boldsymbol{R}_{1h}^T \\
&= \boldsymbol{\omega}_2 \times - \hat{\boldsymbol{R}} \tilde{\boldsymbol{\omega}} \times \hat{\boldsymbol{R}}^T,
\end{aligned} \tag{9.297}$$

where $\tilde{\boldsymbol{\omega}}$ is the angular velocity associated to the differentiation of matrix $\tilde{\boldsymbol{R}}$ with respect to time:

$$\tilde{\boldsymbol{\omega}} = \dot{\tilde{\boldsymbol{R}}} \tilde{\boldsymbol{R}}^T. \tag{9.298}$$

A relationship between that derivative and the remaining angular velocities results from

$$\begin{aligned}
\boldsymbol{\omega} \times &= \frac{\mathrm{d}}{\mathrm{d}t} \left(\tilde{\boldsymbol{R}} \tilde{\boldsymbol{R}} \right) \left(\tilde{\boldsymbol{R}} \tilde{\boldsymbol{R}} \right)^T \\
&= \tilde{\boldsymbol{\omega}} \times + \tilde{\boldsymbol{R}} \tilde{\boldsymbol{\omega}} \times \tilde{\boldsymbol{R}}^T,
\end{aligned} \tag{9.299}$$

so

$$\boldsymbol{\omega} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right) \tilde{\boldsymbol{\omega}}; \tag{9.300}$$

as a consequence,

$$\tilde{\boldsymbol{\omega}} = \left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-1} \boldsymbol{R}_{1h}^{T} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right). \tag{9.301}$$

The absolute velocity of the intermediate orientation results in

$$\hat{\boldsymbol{\omega}} = \hat{\boldsymbol{I}}\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1; \tag{9.302}$$

its perturbation becomes

$$\begin{aligned}
\delta\hat{\boldsymbol{\omega}} &= \delta\left(\hat{\boldsymbol{I}}\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1\right) \\
&= \hat{\boldsymbol{I}}\delta\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\delta\boldsymbol{\omega}_1 \\
&\quad + \begin{pmatrix} \left(\hat{\boldsymbol{I}}\boldsymbol{\omega}_2 \times \; + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1 \times\right)\hat{\boldsymbol{I}} \\ -\left(\hat{\boldsymbol{I}}\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}} \\ +\hat{\boldsymbol{I}}\left(\hat{\boldsymbol{I}}^T\left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right)\right) \times \hat{\boldsymbol{I}}^T \end{pmatrix} \boldsymbol{\theta}_{2\delta} \\
&\quad + \begin{pmatrix} \left(\hat{\boldsymbol{I}}\boldsymbol{\omega}_2 \times \; + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1 \times\right)\hat{\boldsymbol{I}}^T \\ -\left(\hat{\boldsymbol{I}}\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}\left(\hat{\boldsymbol{I}}^T\left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right)\right) \times \hat{\boldsymbol{I}}^T \end{pmatrix} \boldsymbol{\theta}_{1\delta} \\
&= \hat{\boldsymbol{I}}\delta\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\delta\boldsymbol{\omega}_1 + \hat{\boldsymbol{I}}_2\boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}_1\boldsymbol{\theta}_{1\delta} \\
&\overset{\text{uu}}{=} \hat{\boldsymbol{I}}\delta\dot{\boldsymbol{g}}_2 + \hat{\boldsymbol{I}}^T\delta\dot{\boldsymbol{g}}_1 + \left(\hat{\boldsymbol{I}}_2 - \hat{\boldsymbol{I}}\boldsymbol{\omega}_2 \times\right)\delta\boldsymbol{g}_2 + \left(\hat{\boldsymbol{I}}_1 - \hat{\boldsymbol{I}}^T\boldsymbol{\omega}_1 \times\right)\delta\boldsymbol{g}_1
\end{aligned} \tag{9.303}$$

Equilibrium Equations. The nodal moment results from the VWP, considering the perturbation of the relative orientation $\overline{\boldsymbol{\theta}}_\delta$,

$$\begin{aligned}
\delta\mathcal{L} &= \overline{\boldsymbol{\theta}}_\delta^T \tilde{\boldsymbol{M}} \\
&= \left(\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}\right)^T \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}},
\end{aligned} \tag{9.304}$$

which corresponds to

$$\boldsymbol{M}_i = (-1)^i \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}\left(\overline{\boldsymbol{\theta}}, \overline{\boldsymbol{\omega}}\right). \tag{9.305}$$

It depends on the relative rotation vector $\overline{\boldsymbol{\theta}} = \tilde{\boldsymbol{R}}^T\boldsymbol{\theta} = \boldsymbol{\theta}$, and on the relative angular velocity $\overline{\boldsymbol{\omega}}$, illustrated by Equation (9.293), expressed in the intermediate reference frame.

Equilibrium Perturbation. The perturbation of the moment then yields

$$\begin{aligned}
\delta\boldsymbol{M}_i &= (-1)^i \hat{\boldsymbol{R}}\left(\tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}}\delta\overline{\boldsymbol{\theta}} + \tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}}\delta\overline{\boldsymbol{\omega}}\right) \\
&\quad - \boldsymbol{M}_i \times \hat{\boldsymbol{R}}\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}\right)^{-1} \hat{\boldsymbol{R}}^T\boldsymbol{\theta}_{2\delta} \\
&\quad - \boldsymbol{M}_i \times \hat{\boldsymbol{R}}\left(\boldsymbol{I} + \tilde{\boldsymbol{R}}^T\right)^{-1} \hat{\boldsymbol{R}}^T\boldsymbol{\theta}_{1\delta} \\
&= (-1)^i \hat{\boldsymbol{R}}\left(\tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}}\delta\overline{\boldsymbol{\theta}} + \tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}}\delta\overline{\boldsymbol{\omega}}\right) - \boldsymbol{M}_i \times \left(\hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}^T\boldsymbol{\theta}_{1\delta}\right).
\end{aligned} \tag{9.306}$$

The complete linearized problem is

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{M}_{/\boldsymbol{\omega}} & -\boldsymbol{M}_{/\boldsymbol{\omega}} \\ -\boldsymbol{M}_{/\boldsymbol{\omega}} & \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{\omega}_1 \\ \delta\boldsymbol{\omega}_2 \end{Bmatrix} \\
+ &\begin{bmatrix} -\boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}}^T & -\boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}} \\ \boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}}^T & \boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}} \end{bmatrix} \begin{Bmatrix} \boldsymbol{\theta}_{1\delta} \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{M}_{/\boldsymbol{\theta}} & -\boldsymbol{M}_{/\boldsymbol{\theta}} \\ -\boldsymbol{M}_{/\boldsymbol{\theta}} & \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \boldsymbol{\theta}_{1\delta} \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{M} \times \hat{\boldsymbol{I}}^T & \boldsymbol{M} \times \hat{\boldsymbol{I}} \\ -\boldsymbol{M} \times \hat{\boldsymbol{I}}^T & -\boldsymbol{M} \times \hat{\boldsymbol{I}} \end{bmatrix} \begin{Bmatrix} \boldsymbol{\theta}_{1\delta} \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{M} \\ -\boldsymbol{M} \end{Bmatrix}
\end{aligned} \tag{9.307}$$

where

$$\boldsymbol{M}_{/\boldsymbol{\theta}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}} \boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1} \boldsymbol{R}_{1h}^T \tag{9.308a}$$

$$\boldsymbol{M}_{/\boldsymbol{\omega}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}} \hat{\boldsymbol{R}}^T. \tag{9.308b}$$

Accounting for the simplifications of the updated-updated approach, it becomes

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{M}_{/\boldsymbol{\omega}} & -\boldsymbol{M}_{/\boldsymbol{\omega}} \\ -\boldsymbol{M}_{/\boldsymbol{\omega}} & \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{g}}_1 \\ \delta\dot{\boldsymbol{g}}_2 \end{Bmatrix} \\
+ &\begin{bmatrix} -\boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T + \boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}}\right) & \boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T + \boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}}\right) \\ \boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T + \boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}}\right) & -\boldsymbol{M}_{/\boldsymbol{\omega}} \left(\boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T + \boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}}\right) \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{M}_{/\boldsymbol{\theta}} & -\boldsymbol{M}_{/\boldsymbol{\theta}} \\ -\boldsymbol{M}_{/\boldsymbol{\theta}} & \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{M} \times \hat{\boldsymbol{I}}^T & \boldsymbol{M} \times \hat{\boldsymbol{I}} \\ -\boldsymbol{M} \times \hat{\boldsymbol{I}}^T & -\boldsymbol{M} \times \hat{\boldsymbol{I}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \overset{\text{uu}}{=} \begin{Bmatrix} \boldsymbol{M} \\ -\boldsymbol{M} \end{Bmatrix}
\end{aligned} \tag{9.309}$$

Note on attached vs. invariant deformable hinge

The moment applied by the attached formulation to node 1, in the global reference frame, is

$$\boldsymbol{M}_a = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_a\left(\boldsymbol{\theta}\right), \tag{9.310}$$

while the moment applied by the invariant formulation to node 1, in the global reference frame, is

$$\begin{aligned}
\boldsymbol{M}_i &= \hat{\boldsymbol{R}} \tilde{\boldsymbol{M}}_i\left(\boldsymbol{\theta}\right) \\
&= \boldsymbol{R}_{1h} \tilde{\boldsymbol{R}} \tilde{\boldsymbol{M}}_i\left(\tilde{\boldsymbol{R}}^T \boldsymbol{\theta}\right),
\end{aligned} \tag{9.311}$$

since $\tilde{\boldsymbol{R}}^T \boldsymbol{\theta} = \boldsymbol{\theta}$. This means that whatever formula is used for the constitutive law, in the invariant case, it is equivalent to using an attached formula with a constitutive law re-oriented by $\tilde{\boldsymbol{R}}$,

$$\tilde{\boldsymbol{M}}_a\left(\boldsymbol{\theta}\right) = \tilde{\boldsymbol{R}} \tilde{\boldsymbol{M}}_i\left(\tilde{\boldsymbol{R}}^T \boldsymbol{\theta}\right); \tag{9.312}$$

similar considerations apply to the viscous portion of the constitutive law. This transformation should be kept in mind when determining the properties of the deformable component. In fact, exchanging the locations where the constitutive law is evaluated implies a transformation of the constitutive matrix; in case a linear elastic constitutive law,

$$\tilde{\boldsymbol{M}}_i = \tilde{\boldsymbol{K}}_i \boldsymbol{\theta}, \tag{9.313}$$

with a constant (symmetric, positive definite) $\tilde{\boldsymbol{K}}_i$ matrix, is used for the invariant formula, which appears to be a natural solution for simple elastic hinges, it is equivalent to a nonlinear elastic constitutive law when transposing it into the attached formulation. The two formulas are coincident, and independent from $\boldsymbol{\theta}$, only in case of an isotropic spring, namely $\tilde{\boldsymbol{K}}_i = k\boldsymbol{I}$.

A "natural" solution, for a geometrically and materially symmetrical component, behaves the same when the order of the nodes is swapped. This corresponds to the "invariant" formula for the deformable hinge. However, typical experiments to determine the mechanical behavior of a component would rather consist in straining it while measuring the resulting loads at one or both ends, not in the intermediate location where the constitutive law would be naturally applied. As a consequence, a "natural" procedure for the determination of the constitutive law would consist in determining the $\boldsymbol{M}_a(\boldsymbol{\theta})$ law first; then, assuming the moment can be expressed in the form

$$\boldsymbol{R}_{1h}^T \boldsymbol{M}_a(\boldsymbol{\theta}) = \tilde{\boldsymbol{M}}_a(\boldsymbol{\theta}), \tag{9.314}$$

matrix $\tilde{\boldsymbol{R}}$ would be computed from the measured relative rotation of the extremities of the component, $\tilde{\boldsymbol{\theta}} = \boldsymbol{\theta}/2$, and the constitutive law $\tilde{\boldsymbol{M}}_i(\boldsymbol{\theta})$ would be computed as

$$\tilde{\boldsymbol{M}}_i\left(\tilde{\boldsymbol{R}}^T\boldsymbol{\theta}\right) = \tilde{\boldsymbol{R}}^T \tilde{\boldsymbol{M}}_a(\boldsymbol{\theta}) \tag{9.315}$$

to yield the invariant constitutive law.

9.2.3 Deformable Displacement Joint

The deformable displacement joint applies an internal force to two nodes at a specified point that may be offset from the nodes. The force may depend on the relative position and velocity of the nodes at the point of application through a 3D constitutive law.

The points whose relative displacement represents the measure of the straining can be offset from the nodes by rigid offsets $\tilde{\boldsymbol{f}}_1$ and $\tilde{\boldsymbol{f}}_2$, which are defined in the reference frame of the respective nodes. So the offsets in the global reference frame are

$$\boldsymbol{f}_1 = \boldsymbol{R}_1 \tilde{\boldsymbol{f}}_1 \tag{9.316a}$$

$$\boldsymbol{f}_2 = \boldsymbol{R}_2 \tilde{\boldsymbol{f}}_2. \tag{9.316b}$$

The constitutive law is expressed in a reference frame that may be rotated from that of the node by rigid rotations $\tilde{\boldsymbol{R}}_{1h}$ and $\tilde{\boldsymbol{R}}_{2h}$. So the orientations of the constitutive law in the global reference frame are

$$\boldsymbol{R}_{1h} = \boldsymbol{R}_1 \tilde{\boldsymbol{R}}_{1h} \tag{9.317a}$$

$$\boldsymbol{R}_{2h} = \boldsymbol{R}_2 \tilde{\boldsymbol{R}}_{2h}. \tag{9.317b}$$

As for the `deformable hinge`, the constitutive law of this joint may be either attached to one node or defined in an intermediate reference frame that accounts for the relative orientation of the two nodes, so that the order in which the nodes are defined becomes irrelevant.

The relative position in the absolute reference frame, $\boldsymbol{d}$, is

$$\boldsymbol{d} = \boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 - \boldsymbol{f}_1. \tag{9.318}$$

The relative velocity is

$$\dot{\boldsymbol{d}} = \dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{f}_1. \tag{9.319}$$

Attached Deformable Displacement Joint

The "attached" form of the deformable displacement joint is obtained by projecting the relative position $\boldsymbol{d}$ in a reference frame attached to node 1:

$$\tilde{\boldsymbol{d}} = \boldsymbol{R}_{1h}^T \boldsymbol{d} \tag{9.320}$$

The relative velocity is

$$\dot{\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h}^T \left(\dot{\boldsymbol{d}} - \boldsymbol{\omega}_1 \times \boldsymbol{d} \right), \tag{9.321}$$

but it can be replaced by

$$\dot{\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h}^T \left(\dot{\boldsymbol{d}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \right), \tag{9.322}$$

where

$$\boldsymbol{d}_1 = \boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1 \tag{9.323a}$$

$$\dot{\boldsymbol{d}}_1 = \dot{\boldsymbol{x}}_2 + \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 - \dot{\boldsymbol{x}}_1, \tag{9.323b}$$

since the relative velocity associated with the rotation of $\boldsymbol{f}_1$, the offset of the reference point attached to node 1, is zero by definition. The linearization of the distance yields

$$\begin{aligned}
\delta\tilde{\boldsymbol{d}} &= \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{d} - \boldsymbol{d} \times \boldsymbol{\theta}_{1\delta} \right) \\
&= \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \right) + \boldsymbol{R}_{1h}^T \boldsymbol{d} \times \boldsymbol{\theta}_{1\delta} \\
&= \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + (\boldsymbol{x}_2 + \boldsymbol{f}_2 - \boldsymbol{x}_1) \times \boldsymbol{\theta}_\delta 1 \right) \\
&= \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{d}_1 \times \boldsymbol{\theta}_{1\delta} \right) \\
&\overset{\text{uu}}{=} \boldsymbol{R}_{1h}^T \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{g}_2 - \delta\boldsymbol{x}_1 + \boldsymbol{d}_1 \times \delta\boldsymbol{g}_1 \right)
\end{aligned} \tag{9.324}$$

while the linearization of the relative velocity yields

$$\begin{aligned}
\delta\dot{\tilde{\boldsymbol{d}}} &= \boldsymbol{R}_{1h}^T \left(\delta\dot{\boldsymbol{d}} + \boldsymbol{d} \times \delta\boldsymbol{\omega}_1 - \boldsymbol{\omega}_1 \times \delta\boldsymbol{d} + \left(\dot{\boldsymbol{d}} - \boldsymbol{\omega}_1 \times \boldsymbol{d} \right) \times \boldsymbol{\theta}_{1\delta} \right) \\
&= \boldsymbol{R}_{1h}^T \begin{pmatrix} \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{\omega}_2 - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{d}_1 \times \delta\boldsymbol{\omega}_1 \\ -\boldsymbol{\omega}_1 \times \delta\boldsymbol{x}_2 - (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} \\ +\boldsymbol{\omega}_1 \times \delta\boldsymbol{x}_1 + \left(\dot{\boldsymbol{d}} - \boldsymbol{\omega}_1 \times \boldsymbol{d} \right) \times \boldsymbol{\theta}_{1\delta} \end{pmatrix} \\
&\overset{\text{uu}}{=} \boldsymbol{R}_{1h}^T \begin{pmatrix} \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta\dot{\boldsymbol{g}}_2 - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{d}_1 \times \delta\dot{\boldsymbol{g}}_1 \\ -\boldsymbol{\omega}_1 \times \delta\boldsymbol{x}_2 - \left((\boldsymbol{\omega}_2 \times \boldsymbol{f}_2) \times \; - \boldsymbol{\omega}_1 \times \boldsymbol{f}_2 \times \right) \delta\boldsymbol{g}_2 \\ +\boldsymbol{\omega}_1 \times \delta\boldsymbol{x}_1 + \left(\dot{\boldsymbol{d}}_1 \times \; - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times \right) \delta\boldsymbol{g}_1 \end{pmatrix}
\end{aligned} \tag{9.325}$$

The nodal forces and moments result from the VWP

$$\begin{aligned}
\delta\mathcal{L} &= \delta\tilde{\boldsymbol{d}}^T \tilde{\boldsymbol{F}} \\
&= \left(\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{d}_1 \times \boldsymbol{\theta}_{1\delta} \right)^T \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}},
\end{aligned} \tag{9.326}$$

which corresponds to

$$\boldsymbol{F}_i = (-1)^i \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}} \left(\tilde{\boldsymbol{d}}, \dot{\tilde{\boldsymbol{d}}} \right) \tag{9.327a}$$

$$\boldsymbol{M}_i = \boldsymbol{d}_i \times \boldsymbol{F}_i \tag{9.327b}$$

where $\boldsymbol{d}_1$ has already been defined, and

$$\boldsymbol{d}_2 = \boldsymbol{f}_2; \tag{9.328}$$

note that

$$\begin{aligned}\boldsymbol{\omega}_2 \times \boldsymbol{f}_2 &= \boldsymbol{\omega}_2 \times \boldsymbol{d}_2 \\ &= \dot{\boldsymbol{d}}_2.\end{aligned} \tag{9.329}$$

Their linearization yields

$$\delta \boldsymbol{F}_i = (-1)^i \, \boldsymbol{R}_{1h} \left(\tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}} \delta \tilde{\boldsymbol{d}} + \tilde{\boldsymbol{F}}_{/\dot{\tilde{\boldsymbol{d}}}} \delta \dot{\tilde{\boldsymbol{d}}} \right) - \boldsymbol{F}_i \times \boldsymbol{\theta}_{1\delta} \tag{9.330a}$$

$$\delta \boldsymbol{M}_i = \boldsymbol{d}_i \times \delta \boldsymbol{F}_i - \boldsymbol{F}_i \times \delta \boldsymbol{d}_i \tag{9.330b}$$

The complete linearized problem, after applying the updated-updated approximation, is

$$\begin{aligned}
&\begin{bmatrix}
\boldsymbol{F}_{/\dot{\boldsymbol{d}}} & -\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_1 \times & -\boldsymbol{F}_{/\dot{\boldsymbol{d}}} & \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} & -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_1 \times & -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} & \boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
-\boldsymbol{F}_{/\dot{\boldsymbol{d}}} & \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_1 \times & \boldsymbol{F}_{/\dot{\boldsymbol{d}}} & -\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
-\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} & \boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_1 \times & \boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} & -\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{d}_2 \times
\end{bmatrix}
\begin{Bmatrix} \delta \dot{\boldsymbol{x}}_1 \\ \delta \dot{\boldsymbol{g}}_1 \\ \delta \dot{\boldsymbol{x}}_2 \\ \delta \dot{\boldsymbol{g}}_2 \end{Bmatrix} \\
&\quad + \begin{bmatrix}
-\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
-\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times
\end{bmatrix} \delta \boldsymbol{x}_1 + \begin{bmatrix}
-\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_1 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times \right) \\
-\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_1 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times \right) \\
\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_1 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times \right) \\
\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_1 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times \right)
\end{bmatrix} \delta \boldsymbol{g}_1 \\
&\quad + \begin{bmatrix}
\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
-\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times \\
-\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \boldsymbol{\omega}_1 \times
\end{bmatrix} \delta \boldsymbol{x}_2 + \begin{bmatrix}
\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_2 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times \right) \\
\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_2 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times \right) \\
-\boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_2 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times \right) \\
-\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\boldsymbol{d}}} \left(\dot{\boldsymbol{d}}_2 \times -\boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times \right)
\end{bmatrix} \delta \boldsymbol{g}_2 \\
&+ \begin{bmatrix}
\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_1 \times & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
\boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_1 \times & -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
-\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_1 \times & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_2 \times \\
-\boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_1 \times & \boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{d}_2 \times
\end{bmatrix}
\begin{Bmatrix} \delta \boldsymbol{x}_1 \\ \delta \boldsymbol{g}_1 \\ \delta \boldsymbol{x}_2 \\ \delta \boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix}
\boldsymbol{0} & \boldsymbol{F} \times & \boldsymbol{0} & \boldsymbol{0} \\
-\boldsymbol{F} \times & \boldsymbol{d}_1 \times \boldsymbol{F} \times & \boldsymbol{F} \times & -\boldsymbol{F} \times \boldsymbol{d}_2 \times \\
\boldsymbol{0} & -\boldsymbol{F} \times & \boldsymbol{0} & \boldsymbol{0} \\
\boldsymbol{0} & -\boldsymbol{d}_2 \times \boldsymbol{F} \times & \boldsymbol{0} & \boldsymbol{F} \times \boldsymbol{d}_2 \times
\end{bmatrix}
\begin{Bmatrix} \delta \boldsymbol{x}_1 \\ \delta \boldsymbol{g}_1 \\ \delta \boldsymbol{x}_2 \\ \delta \boldsymbol{g}_2 \end{Bmatrix} =
\begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{d}_1 \times \boldsymbol{F} \\ -\boldsymbol{F} \\ -\boldsymbol{d}_2 \times \boldsymbol{F} \end{Bmatrix}
\end{aligned} \tag{9.331}$$

where

$$\boldsymbol{F}_{/\dot{\boldsymbol{d}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\dot{\boldsymbol{d}}} \boldsymbol{R}_{1h}^T \tag{9.332a}$$

$$\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}} \boldsymbol{R}_{1h}^T \tag{9.332b}$$

Invariant Deformable Displacement Joint

The invariant form of the `deformable displacement` joint assumes that the constitutive properties of the component, that explicitly depend only on the relative position of the nodes, is defined in a reference frame that is intermediate between those of node 1 and 2, much like the invariant form of the `deformable hinge` joint.

The distance between the two reference points, expressed in the global reference frame, is pulled back in the intermediate material reference frame by the transpose of matrix $\hat{\boldsymbol{R}}$

$$\tilde{\boldsymbol{d}} = \hat{\boldsymbol{R}}^T \boldsymbol{d} \tag{9.333}$$

The relative velocity is

$$\begin{aligned}\dot{\tilde{\boldsymbol{d}}} &= \dot{\hat{\boldsymbol{R}}}^T \boldsymbol{d} + \hat{\boldsymbol{R}}^T \dot{\boldsymbol{d}} \\ &= \hat{\boldsymbol{R}}^T \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right);\end{aligned} \tag{9.334}$$

for a discussion of the properties of the entities that appear in Eq. (9.302) see Section 9.2.2.

The perturbation of the relative position yields

$$\delta\tilde{\boldsymbol{d}} = \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{d} + \boldsymbol{d} \times \hat{\boldsymbol{\theta}}_\delta \right) \tag{9.335}$$

where

$$\begin{aligned}\delta\boldsymbol{d} &= \delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \\ &\overset{\text{uu}}{=} \delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{g}_2 - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \delta\boldsymbol{g}_1 \qquad (9.336a) \\ \hat{\boldsymbol{\theta}}_\delta &= \hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}^T \boldsymbol{\theta}_{1\delta} \\ &\overset{\text{uu}}{=} \hat{\boldsymbol{I}}\delta\boldsymbol{g}_2 + \hat{\boldsymbol{I}}^T \delta\boldsymbol{g}_1, \qquad (9.336b)\end{aligned}$$

and thus

$$\begin{aligned}\delta\tilde{\boldsymbol{d}} &= \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{x}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \boldsymbol{\theta}_{1\delta} \right) \\ &\overset{\text{uu}}{=} \hat{\boldsymbol{R}}^T \left(\delta\boldsymbol{x}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \delta\boldsymbol{g}_2 - \delta\boldsymbol{x}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \delta\boldsymbol{g}_1 \right).\end{aligned} \tag{9.337}$$

The perturbation of the relative velocity yields

$$\delta\dot{\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}}^T \left(\delta\dot{\boldsymbol{d}} + \boldsymbol{d} \times \delta\hat{\boldsymbol{\omega}} - \hat{\boldsymbol{\omega}} \times \delta\boldsymbol{d} + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{\theta}}_\delta \right) \tag{9.338}$$

where

$$\begin{aligned}\delta\dot{\boldsymbol{d}} &= \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{\omega}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \times \delta\boldsymbol{\omega}_1 + \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \\ &\overset{\text{uu}}{=} \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \delta\dot{\boldsymbol{g}}_2 + (\boldsymbol{f}_2 \times \boldsymbol{\omega}_2) \times \delta\boldsymbol{g}_2 - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \delta\dot{\boldsymbol{g}}_1 - (\boldsymbol{f}_1 \times \boldsymbol{\omega}_1) \times \delta\boldsymbol{g}_1.\end{aligned} \tag{9.339}$$

The computation of $\delta\hat{\boldsymbol{\omega}}$ has been illustrated in Section 9.2.2. Thus,

$$
\begin{aligned}
\delta\dot{\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}}^T \Big(& \delta\dot{\boldsymbol{x}}_2 - \boldsymbol{f}_2 \times \delta\boldsymbol{\omega}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\dot{\boldsymbol{x}}_1 + \boldsymbol{f}_1 \times \delta\boldsymbol{\omega}_1 + \boldsymbol{\omega}_1 \times \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta} \\
& + \boldsymbol{d} \times \left(\hat{\boldsymbol{I}}\delta\boldsymbol{\omega}_2 + \hat{\boldsymbol{I}}^T\delta\boldsymbol{\omega}_1 + \hat{\boldsymbol{I}}_2\boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}_1\boldsymbol{\theta}_{1\delta} \right) \\
& - \hat{\boldsymbol{\omega}} \times (\delta\boldsymbol{x}_2 - \boldsymbol{f}_2 \times \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \boldsymbol{f}_1 \times \boldsymbol{\theta}_{1\delta}) \\
& + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \left(\hat{\boldsymbol{I}}\boldsymbol{\theta}_{2\delta} + \hat{\boldsymbol{I}}^T\boldsymbol{\theta}_{1\delta} \right) \Big) \\
= \hat{\boldsymbol{R}}^T \Big(& \delta\dot{\boldsymbol{x}}_2 - \delta\dot{\boldsymbol{x}}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \delta\boldsymbol{\omega}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \delta\boldsymbol{\omega}_1 \\
& - \hat{\boldsymbol{\omega}} \times \delta\boldsymbol{x}_2 + \hat{\boldsymbol{\omega}} \times \delta\boldsymbol{x}_1 \\
& + \left((\hat{\boldsymbol{\omega}} - \boldsymbol{\omega}_2) \times \boldsymbol{f}_2 \times \; + \boldsymbol{d} \times \hat{\boldsymbol{I}}_2 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}} \right) \boldsymbol{\theta}_{2\delta} \\
& + \left(- (\hat{\boldsymbol{\omega}} - \boldsymbol{\omega}_1) \times \boldsymbol{f}_1 \times \; + \boldsymbol{d} \times \hat{\boldsymbol{I}}_1 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}}^T \right) \boldsymbol{\theta}_{1\delta} \Big) \\
\overset{\text{uu}}{=} \hat{\boldsymbol{R}}^T \Big(& \delta\dot{\boldsymbol{x}}_2 - \delta\dot{\boldsymbol{x}}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \delta\dot{\boldsymbol{g}}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \delta\dot{\boldsymbol{g}}_1 \\
& - \hat{\boldsymbol{\omega}} \times \delta\boldsymbol{x}_2 + \hat{\boldsymbol{\omega}} \times \delta\boldsymbol{x}_1 \\
& + \begin{pmatrix} \left(\hat{\boldsymbol{I}}^T (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \right) \times \boldsymbol{f}_2 \times \; - \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \boldsymbol{\omega}_2 \times \\ + \boldsymbol{d} \times \hat{\boldsymbol{I}}_2 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}} \end{pmatrix} \delta\boldsymbol{g}_2 \\
& + \begin{pmatrix} \left(\hat{\boldsymbol{I}} (\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2) \right) \times \boldsymbol{f}_1 \times \; - \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \boldsymbol{\omega}_1 \times \\ + \boldsymbol{d} \times \hat{\boldsymbol{I}}_1 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}}^T \end{pmatrix} \delta\boldsymbol{g}_1 \Big)
\end{aligned}
\tag{9.340}
$$

The force and the moment result from the VWP

$$
\begin{aligned}
\delta\mathcal{L} &= \delta\tilde{\boldsymbol{d}}^T \tilde{\boldsymbol{F}} \\
&= \left(\delta\boldsymbol{d} + \boldsymbol{d} \times \hat{\boldsymbol{\theta}}_\delta \right)^T \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}} \\
&= \left(\delta\boldsymbol{x}_2 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}} - \boldsymbol{f}_2 \times \right) \boldsymbol{\theta}_{2\delta} - \delta\boldsymbol{x}_1 + \left(\boldsymbol{d} \times \hat{\boldsymbol{I}}^T + \boldsymbol{f}_1 \times \right) \boldsymbol{\theta}_{1\delta} \right)^T \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}
\end{aligned}
\tag{9.341}
$$

and, after defining

$$
\boldsymbol{F} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}} \left(\tilde{\boldsymbol{d}}, \dot{\tilde{\boldsymbol{d}}} \right),
\tag{9.342}
$$

are

$$
\boldsymbol{F}_1 = -\boldsymbol{F} \tag{9.343a}
$$

$$
\boldsymbol{M}_1 = - \left(\boldsymbol{f}_1 \times \; + \hat{\boldsymbol{I}}\boldsymbol{d} \times \right) \boldsymbol{F} \tag{9.343b}
$$

$$
\boldsymbol{F}_2 = \boldsymbol{F} \tag{9.343c}
$$

$$
\boldsymbol{M}_2 = \left(\boldsymbol{f}_2 \times \; - \hat{\boldsymbol{I}}^T\boldsymbol{d} \times \right) \boldsymbol{F}. \tag{9.343d}
$$

Their linearization, after defining

$$
\delta\boldsymbol{F} = \hat{\boldsymbol{R}} \left(\tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}} \delta\tilde{\boldsymbol{d}} + \tilde{\boldsymbol{F}}_{/\dot{\tilde{\boldsymbol{d}}}} \delta\dot{\tilde{\boldsymbol{d}}} \right) - \boldsymbol{F} \times \hat{\boldsymbol{\theta}}_\delta,
\tag{9.344}
$$

yields

$$\delta \boldsymbol{F}_1 = -\delta \boldsymbol{F} \tag{9.345a}$$

$$\delta \boldsymbol{M}_1 = \left(\boldsymbol{f}_1 \times \ + \hat{\boldsymbol{I}} \boldsymbol{d} \times \right) \delta \boldsymbol{F} - \delta \boldsymbol{f}_1 \times \boldsymbol{F} - \delta \hat{\boldsymbol{I}} \boldsymbol{d} \times \boldsymbol{F} - \hat{\boldsymbol{I}} \delta \boldsymbol{d} \times \boldsymbol{F} \tag{9.345b}$$

$$\delta \boldsymbol{F}_2 = \delta \boldsymbol{F} \tag{9.345c}$$

$$\delta \boldsymbol{M}_2 = \left(\boldsymbol{f}_2 \times \ - \hat{\boldsymbol{I}}^T \boldsymbol{d} \times \right) \delta \boldsymbol{F} + \delta \boldsymbol{f}_2 \times \boldsymbol{F} - \delta \hat{\boldsymbol{I}}^T \boldsymbol{d} \times \boldsymbol{F} - \hat{\boldsymbol{I}}^T \delta \boldsymbol{d} \times \boldsymbol{F} \tag{9.345d}$$

After setting

$$\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}} \hat{\boldsymbol{R}}^T \tag{9.346a}$$

$$\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} = \hat{\boldsymbol{R}} \tilde{\boldsymbol{F}}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{R}}^T \tag{9.346b}$$

and

$$\boldsymbol{A}_1 = \left(\boldsymbol{f}_1 \times \ + \hat{\boldsymbol{I}} \boldsymbol{d} \times \right) \tag{9.347a}$$

$$\boldsymbol{A}_2 = \left(\boldsymbol{f}_2 \times \ - \hat{\boldsymbol{I}}^T \boldsymbol{d} \times \right) \tag{9.347b}$$

$$\boldsymbol{B}_1 = \left(\left(\hat{\boldsymbol{I}} \left(\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2 \right) \right) \times \boldsymbol{f}_1 \times \ + \boldsymbol{d} \times \hat{\boldsymbol{I}}_1 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}}^T \right) \tag{9.347c}$$

$$\boldsymbol{B}_2 = \left(\left(\hat{\boldsymbol{I}}^T \left(\boldsymbol{\omega}_1 - \boldsymbol{\omega}_2 \right) \right) \times \boldsymbol{f}_2 \times \ + \boldsymbol{d} \times \hat{\boldsymbol{I}}_2 + \left(\dot{\boldsymbol{d}} - \hat{\boldsymbol{\omega}} \times \boldsymbol{d} \right) \times \hat{\boldsymbol{I}} \right) \tag{9.347d}$$

the complete linearized problem is

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_1^T & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_2^T \\ \boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_1^T & -\boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_2^T \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_1^T & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_2^T \\ -\boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_1^T & \boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{A}_2^T \end{bmatrix} \begin{Bmatrix} \delta \dot{\boldsymbol{x}}_1 \\ \delta \boldsymbol{\omega}_1 \\ \delta \dot{\boldsymbol{x}}_2 \\ \delta \boldsymbol{\omega}_2 \end{Bmatrix} \\
+ &\begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_1 & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_2 \\ -\boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & -\boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_1 & \boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & -\boldsymbol{A}_1 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_2 \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_1 & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_2 \\ \boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & \boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_1 & -\boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \hat{\boldsymbol{\omega}} \times & \boldsymbol{A}_2 \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{B}_2 \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \\ \delta \boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
+ &\begin{bmatrix} \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_1^T & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_2^T \\ \boldsymbol{A}_1 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_1 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_1^T & -\boldsymbol{A}_1 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_1 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_2^T \\ -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_1^T & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_2^T \\ -\boldsymbol{A}_2 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_2 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_1^T & \boldsymbol{A}_2 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_2 \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \boldsymbol{A}_2^T \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \\ \delta \boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
+ &\begin{bmatrix} \boldsymbol{0} & \boldsymbol{F} \times \hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}} \boldsymbol{F} \times & \boldsymbol{A}_1 \boldsymbol{F} \times \hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T \boldsymbol{F} \times \boldsymbol{f}_1 \times \ - \hat{\boldsymbol{I}}_{1(\boldsymbol{d} \times \boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F} \times \hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}^T \boldsymbol{F} \times & -\boldsymbol{A}_2 \boldsymbol{F} \times \hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T \boldsymbol{F} \times \boldsymbol{f}_1 \times \ - \left(\hat{\boldsymbol{I}}^T \right)_{1(\boldsymbol{d} \times \boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \end{Bmatrix} \\
+ &\begin{bmatrix} \boldsymbol{0} & \boldsymbol{F} \times \hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}} \boldsymbol{F} \times & \boldsymbol{A}_1 \boldsymbol{F} \times \hat{\boldsymbol{I}} - \hat{\boldsymbol{I}} \boldsymbol{F} \times \boldsymbol{f}_2 \times \ - \hat{\boldsymbol{I}}_{2(\boldsymbol{d} \times \boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F} \times \hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}}^T \boldsymbol{F} \times & -\boldsymbol{A}_2 \boldsymbol{F} \times \hat{\boldsymbol{I}} + \hat{\boldsymbol{I}} \boldsymbol{F} \times \boldsymbol{f}_2 \times \ + \left(\hat{\boldsymbol{I}}^T \right)_{2(\boldsymbol{d} \times \boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&= \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{A}_1 \boldsymbol{F} \\ -\boldsymbol{F} \\ -\boldsymbol{A}_2 \boldsymbol{F} \end{Bmatrix}
\end{aligned} \tag{9.348}$$

When the updated-updated approach is considered, after defining

$$\hat{\boldsymbol{B}}_1 = \boldsymbol{B}_1 + \boldsymbol{A}_1^T \boldsymbol{\omega}_1 \times \tag{9.349a}$$

$$\hat{\boldsymbol{B}}_2 = \boldsymbol{B}_2 - \boldsymbol{A}_2^T \boldsymbol{\omega}_2 \times , \tag{9.349b}$$

one obtains

$$\begin{aligned}
&\begin{bmatrix}
\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T \\
\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T & -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T \\
-\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T \\
-\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T & \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T
\end{bmatrix}
\begin{Bmatrix} \delta\dot{\boldsymbol{x}}_1 \\ \delta\dot{\boldsymbol{g}}_1 \\ \delta\dot{\boldsymbol{x}}_2 \\ \delta\dot{\boldsymbol{g}}_2 \end{Bmatrix} \\
&+ \begin{bmatrix}
-\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_1 & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_2 \\
-\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_1 & \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_2 \\
\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_1 & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_2 \\
\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_1 & -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{B}}_2
\end{bmatrix}
\begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix}
\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T \\
\boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T & -\boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T \\
-\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T \\
-\boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T & \boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T
\end{bmatrix}
\begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix}
\boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\
-\hat{\boldsymbol{I}}\boldsymbol{F}\times & \boldsymbol{A}_1\boldsymbol{F}\times\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \hat{\boldsymbol{I}}_{1(\boldsymbol{d}\times\boldsymbol{F})} \\
\boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\
-\hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\boldsymbol{A}_2\boldsymbol{F}\times\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \left(\hat{\boldsymbol{I}}^T\right)_{1(\boldsymbol{d}\times\boldsymbol{F})}
\end{bmatrix}
\begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \end{Bmatrix} \\
&+ \begin{bmatrix}
\boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}} \\
\hat{\boldsymbol{I}}\boldsymbol{F}\times & \boldsymbol{A}_1\boldsymbol{F}\times\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times - \hat{\boldsymbol{I}}_{2(\boldsymbol{d}\times\boldsymbol{F})} \\
\boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}} \\
\hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\boldsymbol{A}_2\boldsymbol{F}\times\hat{\boldsymbol{I}} + \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times + \left(\hat{\boldsymbol{I}}^T\right)_{2(\boldsymbol{d}\times\boldsymbol{F})}
\end{bmatrix}
\begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&\overset{\text{uu}}{=} \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{A}_1\boldsymbol{F} \\ -\boldsymbol{F} \\ -\boldsymbol{A}_2\boldsymbol{F} \end{Bmatrix}
\end{aligned} \tag{9.350}$$

9.2.4 Deformable Joint

The deformable joint applies an internal force and an internal moment to two nodes at a specified point that may be offset from the nodes; the force and the moment may depend on the relative position and velocity at the point of application and on the relative rotation vector and angular velocity of the nodes through a 6D constitutive law.

Although it may appear as a combination of the Deformable Hinge and the Deformable Displacement Joint, and despite some commonality of code, it is a bit more general because the internal force and moment may depend on the relative displacement and orientation, i.e. the displacements and the orientations are coupled. However, if a simple linear diagonal constitutive law is used, the same result with a bit less overhead is obtained by using a combination of a deformable hinge and a deformable displacement joint.

The deformable joint equations can be computed by combining those of the deformable hinge (Section 9.2.2) and of the deformable displacement joint (Section 9.2.3), considering that both the force $\boldsymbol{F}$ and the moment $\boldsymbol{M}$ simultaneously depend on the relative displacement, $\tilde{\boldsymbol{d}}$, the relative orientation, $\boldsymbol{\theta}$, and their time derivatives, $\dot{\tilde{\boldsymbol{d}}}$ and $\boldsymbol{\omega}$.

Attached Deformable Joint

Internal force and moment:

$$\boldsymbol{F}_i = (-1)^i \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}} \left(\tilde{\boldsymbol{d}}, \boldsymbol{\theta}, \dot{\tilde{\boldsymbol{d}}}, \boldsymbol{\omega} \right) \tag{9.351a}$$

$$\boldsymbol{M}_i = \boldsymbol{d}_i \times \boldsymbol{F}_i + (-1)^i \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}} \left(\tilde{\boldsymbol{d}}, \boldsymbol{\theta}, \dot{\tilde{\boldsymbol{d}}}, \boldsymbol{\omega} \right). \tag{9.351b}$$

Their linearization, after defining

$$\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}} \boldsymbol{R}_{1h}^T \tag{9.352a}$$

$$\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{R}_{1h}^T \tag{9.352b}$$

$$\boldsymbol{F}_{/\boldsymbol{\theta}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\boldsymbol{\theta}} \boldsymbol{\Gamma} (\boldsymbol{\theta})^{-1} \boldsymbol{R}_{1h}^T \tag{9.352c}$$

$$\boldsymbol{F}_{/\boldsymbol{\omega}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{F}}_{/\boldsymbol{\omega}} \boldsymbol{R}_{1h}^T \tag{9.352d}$$

$$\boldsymbol{M}_{/\tilde{\boldsymbol{d}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\tilde{\boldsymbol{d}}} \boldsymbol{R}_{1h}^T \tag{9.352e}$$

$$\boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\dot{\tilde{\boldsymbol{d}}}} \boldsymbol{R}_{1h}^T \tag{9.352f}$$

$$\boldsymbol{M}_{/\boldsymbol{\theta}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}} \boldsymbol{\Gamma} (\boldsymbol{\theta})^{-1} \boldsymbol{R}_{1h}^T \tag{9.352g}$$

$$\boldsymbol{M}_{/\boldsymbol{\omega}} = \boldsymbol{R}_{1h} \tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}} \boldsymbol{R}_{1h}^T, \tag{9.352h}$$

yields the viscous contribution to perturbation,

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \\ \boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \\ -\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} \end{bmatrix} \delta\dot{\boldsymbol{x}}_1 + \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{d}_1 \times \left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times + \boldsymbol{M}_{/\boldsymbol{\omega}} \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{d}_2 \times \left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_1 \times - \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \delta\dot{\boldsymbol{g}}_1 \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \\ -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} \\ \boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} \end{bmatrix} \delta\dot{\boldsymbol{x}}_2 + \begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{d}_1 \times \left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times - \boldsymbol{M}_{/\boldsymbol{\omega}} \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{d}_2 \times \left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{d}_2 \times + \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \delta\dot{\boldsymbol{g}}_2 \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{\omega}_1 \times \\ -\left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\boldsymbol{\omega}_1 \times \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{\omega}_1 \times \\ \left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\boldsymbol{\omega}_1 \times \end{bmatrix} \delta\boldsymbol{x}_1 \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\left(\dot{\boldsymbol{d}}_1 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times\right) - \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2 \times \\ -\left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\left(\dot{\boldsymbol{d}}_1 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times\right) - \left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\boldsymbol{\omega}} + \boldsymbol{M}_{/\boldsymbol{\omega}}\right)\boldsymbol{\omega}_2 \times \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\left(\dot{\boldsymbol{d}}_1 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times\right) + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2 \times \\ \left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\left(\dot{\boldsymbol{d}}_1 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_1 \times\right) + \left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\boldsymbol{\omega}} + \boldsymbol{M}_{/\boldsymbol{\omega}}\right)\boldsymbol{\omega}_2 \times \end{bmatrix} \delta\boldsymbol{g}_1 \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{\omega}_1 \times \\ \left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\boldsymbol{\omega}_1 \times \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{\omega}_1 \times \\ -\left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\boldsymbol{\omega}_1 \times \end{bmatrix} \delta\boldsymbol{x}_2 \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\left(\dot{\boldsymbol{d}}_2 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times\right) + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2 \times \\ \left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\left(\dot{\boldsymbol{d}}_2 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times\right) + \left(\boldsymbol{d}_1 \times \boldsymbol{F}_{/\boldsymbol{\omega}} + \boldsymbol{M}_{/\boldsymbol{\omega}}\right)\boldsymbol{\omega}_2 \times \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\left(\dot{\boldsymbol{d}}_2 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times\right) - \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{\omega}_2 \times \\ -\left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\right)\left(\dot{\boldsymbol{d}}_2 \times - \boldsymbol{\omega}_1 \times \boldsymbol{d}_2 \times\right) + \left(\boldsymbol{d}_2 \times \boldsymbol{F}_{/\boldsymbol{\omega}} + \boldsymbol{M}_{/\boldsymbol{\omega}}\right)\boldsymbol{\omega}_2 \times \end{bmatrix} \delta\boldsymbol{g}_2
\end{aligned} \tag{9.353}$$

the elastic contribution to perturbation,

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \\ \boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}} \\ -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \\ -\boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}} \end{bmatrix} \delta\boldsymbol{x}_1 + \begin{bmatrix} -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{d}_1 \times \left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times + \boldsymbol{M}_{/\boldsymbol{\theta}} \\ \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{d}_2 \times \left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times - \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_1 \times - \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \delta\boldsymbol{g}_1 \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \\ -\boldsymbol{d}_1 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}} \\ \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} \\ \boldsymbol{d}_2 \times \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}} \end{bmatrix} \delta\boldsymbol{x}_2 + \begin{bmatrix} \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{d}_1 \times \left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times - \boldsymbol{M}_{/\boldsymbol{\theta}} \\ -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{d}_2 \times \left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times - \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{d}_2 \times + \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \delta\boldsymbol{g}_2
\end{aligned} \tag{9.354}$$

and a common contribution to perturbation,

$$\begin{bmatrix} \boldsymbol{0} & \boldsymbol{F}\times & \boldsymbol{0} & \boldsymbol{0} \\ -\boldsymbol{F}\times & \boldsymbol{d}_1 \times \boldsymbol{F}\times + \boldsymbol{M}\times & \boldsymbol{F}\times & -\boldsymbol{F}\times\boldsymbol{d}_2\times \\ \boldsymbol{0} & -\boldsymbol{F}\times & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & -\boldsymbol{d}_2\times\boldsymbol{F}\times - \boldsymbol{M}\times & \boldsymbol{0} & \boldsymbol{F}\times\boldsymbol{d}_2\times \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \overset{\text{uu}}{=} \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{d}_1 \times \boldsymbol{F} + \boldsymbol{M} \\ -\boldsymbol{F} \\ -\boldsymbol{d}_2 \times \boldsymbol{F} - \boldsymbol{M} \end{Bmatrix} \tag{9.355}$$

The contribution of Eq. (9.355) is always present. The contribution of Eq. (9.354) is present in the elastic and in the viscoelastic variants of the joint. The contribution of Eq. (9.353) is present in the viscous and in the viscoelastic variants of the joint.

Invariant Deformable Joint

The force and the moment, after defining

$$\boldsymbol{F} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}\left(\tilde{\boldsymbol{d}}, \dot{\tilde{\boldsymbol{d}}}, \boldsymbol{\theta}, \overline{\boldsymbol{\omega}}\right) \tag{9.356a}$$

$$\boldsymbol{M} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}\left(\tilde{\boldsymbol{d}}, \dot{\tilde{\boldsymbol{d}}}, \boldsymbol{\theta}, \overline{\boldsymbol{\omega}}\right), \tag{9.356b}$$

are

$$\boldsymbol{F}_1 = -\boldsymbol{F} \tag{9.357a}$$

$$\boldsymbol{M}_1 = -\left(\boldsymbol{f}_1 \times + \hat{\boldsymbol{I}}\boldsymbol{d} \times\right)\boldsymbol{F} - \boldsymbol{M} \tag{9.357b}$$

$$\boldsymbol{F}_2 = \boldsymbol{F} \tag{9.357c}$$

$$\boldsymbol{M}_2 = \left(\boldsymbol{f}_2 \times - \hat{\boldsymbol{I}}^T\boldsymbol{d} \times\right)\boldsymbol{F} + \boldsymbol{M}. \tag{9.357d}$$

Their linearization, after defining

$$\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}_{/\tilde{\boldsymbol{d}}}\hat{\boldsymbol{R}}^T \tag{9.358a}$$

$$\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{R}}^T \tag{9.358b}$$

$$\boldsymbol{F}_{/\boldsymbol{\theta}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}_{/\boldsymbol{\theta}}\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{1h}^T \tag{9.358c}$$

$$\boldsymbol{F}_{/\boldsymbol{\omega}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{F}}_{/\boldsymbol{\omega}}\hat{\boldsymbol{R}}^T \tag{9.358d}$$

$$\boldsymbol{M}_{/\tilde{\boldsymbol{d}}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}_{/\tilde{\boldsymbol{d}}}\hat{\boldsymbol{R}}^T \tag{9.358e}$$

$$\boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{R}}^T \tag{9.358f}$$

$$\boldsymbol{M}_{/\boldsymbol{\theta}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}_{/\boldsymbol{\theta}}\boldsymbol{\Gamma}\left(\boldsymbol{\theta}\right)^{-1}\boldsymbol{R}_{1h}^T \tag{9.358g}$$

$$\boldsymbol{M}_{/\boldsymbol{\omega}} = \hat{\boldsymbol{R}}\tilde{\boldsymbol{M}}_{/\boldsymbol{\omega}}\hat{\boldsymbol{R}}^T, \tag{9.358h}$$

and exploiting the definitions of Eqs (9.347) and

$$\boldsymbol{C}_1 = \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}}^T \tag{9.359a}$$

$$\boldsymbol{C}_2 = \left(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1\right) \times \hat{\boldsymbol{I}}, \tag{9.359b}$$

yields

$$
\begin{aligned}
&\begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T + \boldsymbol{M}_{/\boldsymbol{\omega}} \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_1^T - \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}}_1 \\ \delta\boldsymbol{\omega}_1 \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T - \boldsymbol{M}_{/\boldsymbol{\omega}} \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}} & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{A}_2^T + \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}}_2 \\ \delta\boldsymbol{\omega}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 - \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_1 \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_1\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 - \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{C}_1 \\ \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_1 \\ \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_1\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_1 + \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{C}_1 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 - \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_2 \\ \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_2\right) - \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 - \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{C}_2 \\ -\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_2 \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\boldsymbol{C}_2\right) + \boldsymbol{M}_{/\dot{\tilde{\boldsymbol{d}}}}\boldsymbol{B}_2 + \boldsymbol{M}_{/\boldsymbol{\omega}}\boldsymbol{C}_2 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_1\left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T + \boldsymbol{M}_{/\boldsymbol{\theta}} \\ -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_2\left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_1^T - \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T - \boldsymbol{M}_{/\boldsymbol{\theta}} \\ \boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{A}_2\boldsymbol{F}_{/\tilde{\boldsymbol{d}}} & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{\boldsymbol{d}}}\boldsymbol{A}_2^T + \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}\boldsymbol{F}\times & \left(\boldsymbol{A}_1\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \hat{\boldsymbol{I}}_{1(\boldsymbol{d}\times\boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\left(\boldsymbol{A}_2\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \left(\hat{\boldsymbol{I}}^T\right)_{1(\boldsymbol{d}\times\boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \boldsymbol{\theta}_{1\delta} \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}}\boldsymbol{F}\times & \left(\boldsymbol{A}_1\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times - \hat{\boldsymbol{I}}_{2(\boldsymbol{d}\times\boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\left(\boldsymbol{A}_2\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}} + \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times + \left(\hat{\boldsymbol{I}}^T\right)_{2(\boldsymbol{d}\times\boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\
&= \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{A}_1\boldsymbol{F} + \boldsymbol{M} \\ -\boldsymbol{F} \\ -\boldsymbol{A}_2\boldsymbol{F} - \boldsymbol{M} \end{Bmatrix}
\end{aligned}
\tag{9.360}
$$

The updated-updated form is

$$
\begin{aligned}
&\begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{d}}} & \boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{d}}} & \boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T + \boldsymbol{M}_{/\boldsymbol{\omega}} \\ -\boldsymbol{F}_{/\dot{\tilde{d}}} & -\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{d}}} & -\boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{d}}}\boldsymbol{A}_1^T - \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}}_1 \\ \delta\dot{\boldsymbol{g}}_1 \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{d}}} & -\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T - \boldsymbol{F}_{/\boldsymbol{\omega}} \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{d}}} & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) - \boldsymbol{M}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T - \boldsymbol{M}_{/\boldsymbol{\omega}} \\ \boldsymbol{F}_{/\dot{\tilde{d}}} & \boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}} \\ \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{d}}} & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\omega}}\right) + \boldsymbol{M}_{/\dot{\tilde{d}}}\boldsymbol{A}_2^T + \boldsymbol{M}_{/\boldsymbol{\omega}} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}}_2 \\ \delta\dot{\boldsymbol{g}}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 - \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1 \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1\right) - \boldsymbol{M}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 - \boldsymbol{M}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1 \\ \boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1 \\ \boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1\right) + \boldsymbol{M}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_1 + \boldsymbol{M}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_1 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 - \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2 \\ \boldsymbol{A}_1\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2\right) - \boldsymbol{M}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 - \boldsymbol{M}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2 \\ -\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2 \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{\omega}}\times & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 + \boldsymbol{F}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2\right) + \boldsymbol{M}_{/\dot{\tilde{d}}}\hat{\boldsymbol{B}}_2 + \boldsymbol{M}_{/\boldsymbol{\omega}}\hat{\boldsymbol{C}}_2 \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{F}_{/\tilde{d}} & \boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{A}_1\boldsymbol{F}_{/\tilde{d}} & \boldsymbol{A}_1\left(\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{d}}\boldsymbol{A}_1^T + \boldsymbol{M}_{/\boldsymbol{\theta}} \\ -\boldsymbol{F}_{/\tilde{d}} & -\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_1^T - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{A}_2\boldsymbol{F}_{/\tilde{d}} & -\boldsymbol{A}_2\left(\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_1^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{d}}\boldsymbol{A}_1^T - \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \end{Bmatrix} \\
&+ \begin{bmatrix} -\boldsymbol{F}_{/\tilde{d}} & -\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_2^T - \boldsymbol{F}_{/\boldsymbol{\theta}} \\ -\boldsymbol{A}_1\boldsymbol{F}_{/\tilde{d}} & -\boldsymbol{A}_1\left(\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) - \boldsymbol{M}_{/\tilde{d}}\boldsymbol{A}_2^T - \boldsymbol{M}_{/\boldsymbol{\theta}} \\ \boldsymbol{F}_{/\tilde{d}} & \boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}} \\ \boldsymbol{A}_2\boldsymbol{F}_{/\tilde{d}} & \boldsymbol{A}_2\left(\boldsymbol{F}_{/\tilde{d}}\boldsymbol{A}_2^T + \boldsymbol{F}_{/\boldsymbol{\theta}}\right) + \boldsymbol{M}_{/\tilde{d}}\boldsymbol{A}_2^T + \boldsymbol{M}_{/\boldsymbol{\theta}} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}\boldsymbol{F}\times & \left(\boldsymbol{A}_1\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \hat{\boldsymbol{I}}_{1(\boldsymbol{d}\times\boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}}^T \\ -\hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\left(\boldsymbol{A}_2\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}}^T - \hat{\boldsymbol{I}}^T\boldsymbol{F}\times\boldsymbol{f}_1\times - \left(\hat{\boldsymbol{I}}^T\right)_{1(\boldsymbol{d}\times\boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_1 \\ \delta\boldsymbol{g}_1 \end{Bmatrix} \\
&+ \begin{bmatrix} \boldsymbol{0} & \boldsymbol{F}\times\hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}}\boldsymbol{F}\times & \left(\boldsymbol{A}_1\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}} - \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times - \hat{\boldsymbol{I}}_{2(\boldsymbol{d}\times\boldsymbol{F})} \\ \boldsymbol{0} & -\boldsymbol{F}\times\hat{\boldsymbol{I}} \\ \hat{\boldsymbol{I}}^T\boldsymbol{F}\times & -\left(\boldsymbol{A}_2\boldsymbol{F}\times + \boldsymbol{M}\times\right)\hat{\boldsymbol{I}} + \hat{\boldsymbol{I}}\boldsymbol{F}\times\boldsymbol{f}_2\times + \left(\hat{\boldsymbol{I}}^T\right)_{2(\boldsymbol{d}\times\boldsymbol{F})} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_2 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\
&= \begin{Bmatrix} \boldsymbol{F} \\ \boldsymbol{A}_1\boldsymbol{F} + \boldsymbol{M} \\ -\boldsymbol{F} \\ -\boldsymbol{A}_2\boldsymbol{F} - \boldsymbol{M} \end{Bmatrix}
\end{aligned}
\tag{9.361}
$$

with

$$\hat{\boldsymbol{C}}_1 = \boldsymbol{C}_1 + \boldsymbol{\omega}_1\times \tag{9.362a}$$

$$\hat{\boldsymbol{C}}_2 = \boldsymbol{C}_2 - \boldsymbol{\omega}_2\times . \tag{9.362b}$$

Note that

$$\hat{\boldsymbol{C}}_1 = (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \hat{\boldsymbol{I}}^T + \boldsymbol{\omega}_1 \times \qquad = \boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}} + \boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T \tag{9.363a}$$

$$\hat{\boldsymbol{C}}_2 = (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \hat{\boldsymbol{I}} - \boldsymbol{\omega}_2 \times \qquad = -\boldsymbol{\omega}_1 \times \hat{\boldsymbol{I}} - \boldsymbol{\omega}_2 \times \hat{\boldsymbol{I}}^T, \tag{9.363b}$$

so $\hat{\boldsymbol{C}}_2 = -\hat{\boldsymbol{C}}_1$.

9.2.5 Deformable Axial Joint

Strain:

$$\boldsymbol{\theta} = \operatorname{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1h}^T \boldsymbol{R}_{2h}\right)\right) \tag{9.364}$$

$$\epsilon = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{\theta} \tag{9.365}$$

Strain rate:

$$\dot{\epsilon} = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{R}_{1h}^T (\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \tag{9.366}$$

Virtual perturbation/linearization of strain:

$$\delta\epsilon = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{R}_{1h}^T (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) = \boldsymbol{e}_z^T (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta}) \tag{9.367}$$

Linearization of strain rate:

$$\delta\dot{\epsilon} = \tilde{\boldsymbol{e}}_z \cdot \boldsymbol{R}_{1h}^T ((\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{\theta}_{1\delta} + \delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1) = \boldsymbol{e}_z^T ((\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \boldsymbol{\theta}_{1\delta} + \delta\boldsymbol{\omega}_2 - \delta\boldsymbol{\omega}_1) \tag{9.368}$$

Virtual work:

$$\delta\mathcal{L} = \delta\epsilon m(\epsilon, \dot{\epsilon}) = (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})^T \boldsymbol{R}_{1h} \tilde{\boldsymbol{e}}_z m = (\boldsymbol{\theta}_{2\delta} - \boldsymbol{\theta}_{1\delta})^T \boldsymbol{e}_z m \tag{9.369}$$

Loads (residual contribution):

$$\boldsymbol{m}_1 = \boldsymbol{e}_z m \tag{9.370a}$$

$$\boldsymbol{m}_2 = -\boldsymbol{e}_z m \tag{9.370b}$$

Linearization:

$$\delta(\boldsymbol{e}_z m) = -m\boldsymbol{e}_z \times \boldsymbol{\theta}_{1\delta} + \boldsymbol{e}_z \left(m_{/\epsilon}\delta\epsilon + m_{/\dot{\epsilon}}\delta\dot{\epsilon}\right) \tag{9.371}$$

Jacobian matrix contributions:

$$\begin{aligned} &m \begin{bmatrix} \boldsymbol{e}_z \times \\ -\boldsymbol{e}_z \times \end{bmatrix} \boldsymbol{\theta}_{1\delta} + m_{/\epsilon} \begin{bmatrix} \boldsymbol{e}_z\boldsymbol{e}_z^T & -\boldsymbol{e}_z\boldsymbol{e}_z^T \\ -\boldsymbol{e}_z\boldsymbol{e}_z^T & \boldsymbol{e}_z\boldsymbol{e}_z^T \end{bmatrix} \begin{Bmatrix} \boldsymbol{\theta}_{1\delta} \\ \boldsymbol{\theta}_{2\delta} \end{Bmatrix} \\ &+ m_{/\dot{\epsilon}} \left(\begin{bmatrix} \boldsymbol{e}_z\boldsymbol{e}_z^T & -\boldsymbol{e}_z\boldsymbol{e}_z^T \\ -\boldsymbol{e}_z\boldsymbol{e}_z^T & \boldsymbol{e}_z\boldsymbol{e}_z^T \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{\omega}_1 \\ \delta\boldsymbol{\omega}_2 \end{Bmatrix} + \begin{bmatrix} -\boldsymbol{e}_z\boldsymbol{e}_z^T(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \\ \boldsymbol{e}_z\boldsymbol{e}_z^T(\boldsymbol{\omega}_2 - \boldsymbol{\omega}_1) \times \end{bmatrix} \boldsymbol{\theta}_{1\delta} \right) = \begin{Bmatrix} \boldsymbol{e}_z \\ -\boldsymbol{e}_z \end{Bmatrix} m \end{aligned} \tag{9.372}$$

With the updated-updated approximation:

$$\begin{aligned} &m \begin{bmatrix} \boldsymbol{e}_z \times \\ -\boldsymbol{e}_z \times \end{bmatrix} \delta\boldsymbol{g}_1 + m_{/\epsilon} \begin{bmatrix} \boldsymbol{e}_z\boldsymbol{e}_z^T & -\boldsymbol{e}_z\boldsymbol{e}_z^T \\ -\boldsymbol{e}_z\boldsymbol{e}_z^T & \boldsymbol{e}_z\boldsymbol{e}_z^T \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \\ &+ m_{/\dot{\epsilon}} \left(\begin{bmatrix} \boldsymbol{e}_z\boldsymbol{e}_z^T & -\boldsymbol{e}_z\boldsymbol{e}_z^T \\ -\boldsymbol{e}_z\boldsymbol{e}_z^T & \boldsymbol{e}_z\boldsymbol{e}_z^T \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{g}}_1 \\ \delta\dot{\boldsymbol{g}}_2 \end{Bmatrix} + \begin{bmatrix} \boldsymbol{e}_z\boldsymbol{e}_z^T\boldsymbol{\omega}_2 \times & -\boldsymbol{e}_z\boldsymbol{e}_z^T\boldsymbol{\omega}_2 \times \\ -\boldsymbol{e}_z\boldsymbol{e}_z^T\boldsymbol{\omega}_2 \times & \boldsymbol{e}_z\boldsymbol{e}_z^T\boldsymbol{\omega}_2 \times \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{g}_1 \\ \delta\boldsymbol{g}_2 \end{Bmatrix} \right) \overset{\text{uu}}{=} \begin{Bmatrix} \boldsymbol{e}_z \\ -\boldsymbol{e}_z \end{Bmatrix} m \end{aligned} \tag{9.373}$$

Note: $\boldsymbol{e}_z\boldsymbol{e}_z^T\boldsymbol{\omega}_2 \times \; = \boldsymbol{e}_z(\boldsymbol{e}_z \times \boldsymbol{\omega}_2)^T$.

9.3 Viscous Body

This element implements the behavior of a viscous body, namely a force and a moment that depend on the absolute linear and angular velocity of a node, projected in the reference frame of the node. This element allows, for example, to implement the aerodynamics of a flight-mechanics rigid-body model, whose aerodynamic forces and moments depend on the absolute linear and angular velocity, projected in the reference frame of the body, by means of an appropriate constitutive law.

The force and moment are defined as

$$\boldsymbol{f} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{f}} \tag{9.374a}$$
$$\boldsymbol{m} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{m}} + \boldsymbol{o}\times\boldsymbol{f} \tag{9.374b}$$

where

$$\boldsymbol{o} = \boldsymbol{R}\tilde{\boldsymbol{o}}, \tag{9.375}$$

$$\tilde{\boldsymbol{f}} = \tilde{\boldsymbol{f}}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}\right) \tag{9.376a}$$
$$\tilde{\boldsymbol{m}} = \tilde{\boldsymbol{m}}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}\right) \tag{9.376b}$$

and

$$\tilde{\boldsymbol{v}} = \boldsymbol{R}_h^T\boldsymbol{R}^T\left(\dot{\boldsymbol{x}} + \boldsymbol{\omega}\times\boldsymbol{o}\right) \tag{9.377a}$$
$$\tilde{\boldsymbol{\omega}} = \boldsymbol{R}_h^T\boldsymbol{R}^T\boldsymbol{\omega}. \tag{9.377b}$$

The linearization of the force and moment yields

$$\delta\tilde{\boldsymbol{f}} = \tilde{\boldsymbol{f}}_{/\tilde{\boldsymbol{v}}}\delta\tilde{\boldsymbol{v}} + \tilde{\boldsymbol{f}}_{/\tilde{\boldsymbol{\omega}}}\delta\tilde{\boldsymbol{\omega}} \tag{9.378a}$$
$$\delta\tilde{\boldsymbol{m}} = \tilde{\boldsymbol{m}}_{/\tilde{\boldsymbol{v}}}\delta\tilde{\boldsymbol{v}} + \tilde{\boldsymbol{m}}_{/\tilde{\boldsymbol{\omega}}}\delta\tilde{\boldsymbol{\omega}} \tag{9.378b}$$

with

$$\delta\tilde{\boldsymbol{v}} = \boldsymbol{R}_h^T\boldsymbol{R}^T\left(\delta\dot{\boldsymbol{x}} + \delta\boldsymbol{\omega}\times\boldsymbol{o} + \boldsymbol{\omega}\times\boldsymbol{\theta}_\delta\times\boldsymbol{o}\right) \overset{\text{uu}}{=} \boldsymbol{R}_h^T\boldsymbol{R}^T\left(\delta\dot{\boldsymbol{x}} - \boldsymbol{o}\times\delta\dot{\boldsymbol{g}} + (\boldsymbol{o}\times\boldsymbol{\omega})\times\delta\boldsymbol{g}\right) \tag{9.379a}$$
$$\delta\tilde{\boldsymbol{\omega}} = \boldsymbol{R}_h^T\boldsymbol{R}^T\left(\delta\boldsymbol{\omega} + \boldsymbol{\omega}\times\boldsymbol{\theta}_\delta\right) \overset{\text{uu}}{=} \boldsymbol{R}_h^T\boldsymbol{R}^T\delta\dot{\boldsymbol{g}} \tag{9.379b}$$

The linearization of the nodal forces and moments yields

$$\delta\boldsymbol{f} = \boldsymbol{\theta}_\delta\times\boldsymbol{f} + \boldsymbol{R}\boldsymbol{R}_h\delta\tilde{\boldsymbol{f}} \tag{9.380a}$$
$$\delta\boldsymbol{m} = \boldsymbol{\theta}_\delta\times\boldsymbol{m} + \boldsymbol{R}\boldsymbol{R}_h\delta\tilde{\boldsymbol{m}} + \boldsymbol{o}\times\boldsymbol{R}\boldsymbol{R}_h\delta\tilde{\boldsymbol{f}}, \tag{9.380b}$$

namely

$$\begin{aligned}
&\begin{bmatrix} \boldsymbol{f}_{/\tilde{\boldsymbol{v}}} & \boldsymbol{f}_{/\tilde{\boldsymbol{\omega}}} - \boldsymbol{f}_{/\tilde{\boldsymbol{v}}}\boldsymbol{o}\times \\ \boldsymbol{m}_{/\tilde{\boldsymbol{v}}} + \boldsymbol{o}\times\boldsymbol{f}_{/\tilde{\boldsymbol{v}}} & \boldsymbol{m}_{/\tilde{\boldsymbol{\omega}}} - \boldsymbol{m}_{/\tilde{\boldsymbol{v}}}\boldsymbol{o}\times + \boldsymbol{o}\times\left(\boldsymbol{f}_{/\tilde{\boldsymbol{\omega}}} - \boldsymbol{f}_{/\tilde{\boldsymbol{v}}}\boldsymbol{o}\times\right) \end{bmatrix}\begin{Bmatrix} \delta\dot{\boldsymbol{x}} \\ \delta\boldsymbol{\omega} \end{Bmatrix} \\
&\quad + \begin{bmatrix} \boldsymbol{f}_{/\tilde{\boldsymbol{\omega}}}\boldsymbol{\omega}\times - \boldsymbol{f}_{/\tilde{\boldsymbol{v}}}\boldsymbol{\omega}\times\boldsymbol{o}\times \\ \boldsymbol{m}_{/\tilde{\boldsymbol{\omega}}}\boldsymbol{\omega}\times - \boldsymbol{m}_{/\tilde{\boldsymbol{v}}}\boldsymbol{\omega}\times\boldsymbol{o}\times + \boldsymbol{o}\times\left(\boldsymbol{f}_{/\tilde{\boldsymbol{\omega}}}\boldsymbol{\omega}\times - \boldsymbol{f}_{/\tilde{\boldsymbol{v}}}\boldsymbol{\omega}\times\boldsymbol{o}\times\right) \end{bmatrix}\boldsymbol{\theta}_\delta \\
&\qquad\qquad + \begin{bmatrix} -\boldsymbol{f}\times \\ -\boldsymbol{m}\times \end{bmatrix}\boldsymbol{\theta}_\delta = \begin{Bmatrix} \delta\boldsymbol{f} \\ \delta\boldsymbol{m} \end{Bmatrix}
\end{aligned} \tag{9.381}$$

where

$$\boldsymbol{f}_{/\tilde{v}} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{f}}_{/\tilde{v}}\boldsymbol{R}_h^T\boldsymbol{R}^T \tag{9.382a}$$

$$\boldsymbol{f}_{/\tilde{\omega}} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{f}}_{/\tilde{\omega}}\boldsymbol{R}_h^T\boldsymbol{R}^T \tag{9.382b}$$

$$\boldsymbol{m}_{/\tilde{v}} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{m}}_{/\tilde{v}}\boldsymbol{R}_h^T\boldsymbol{R}^T \tag{9.382c}$$

$$\boldsymbol{m}_{/\tilde{\omega}} = \boldsymbol{R}\boldsymbol{R}_h\tilde{\boldsymbol{m}}_{/\tilde{\omega}}\boldsymbol{R}_h^T\boldsymbol{R}^T \tag{9.382d}$$

The updated-updated approximation yields

$$\begin{bmatrix} \boldsymbol{f}_{/\tilde{v}} & \boldsymbol{f}_{/\tilde{\omega}} - \boldsymbol{f}_{/\tilde{v}}\boldsymbol{o}\times \\ \boldsymbol{m}_{/\tilde{v}} + \boldsymbol{o}\times\boldsymbol{f}_{/\tilde{v}} & \boldsymbol{m}_{/\tilde{\omega}} - \boldsymbol{m}_{/\tilde{v}}\boldsymbol{o}\times + \boldsymbol{o}\times\left(\boldsymbol{f}_{/\tilde{\omega}} - \boldsymbol{f}_{/\tilde{v}}\boldsymbol{o}\times\right) \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}} \\ \delta\dot{\boldsymbol{g}} \end{Bmatrix} + \begin{bmatrix} \boldsymbol{f}_{/\tilde{v}}\left(\boldsymbol{o}\times\boldsymbol{\omega}\right)\times \\ \left(\boldsymbol{m}_{/\tilde{v}} + \boldsymbol{o}\times\boldsymbol{f}_{/\tilde{v}}\right)\left(\boldsymbol{o}\times\boldsymbol{\omega}\right)\times \end{bmatrix}\delta\boldsymbol{g} + \begin{bmatrix} -\boldsymbol{f}\times \\ -\boldsymbol{m}\times \end{bmatrix}\delta\boldsymbol{g} = \begin{Bmatrix} \delta\boldsymbol{f} \\ \delta\boldsymbol{m} \end{Bmatrix} \tag{9.383}$$

9.4 Modal Element

9.4.1 Kinematics

Position of an arbitrary point P

$$\boldsymbol{x}_P = \boldsymbol{x}_0 + \boldsymbol{f}_P + \boldsymbol{u}_P \tag{9.384}$$

where $\boldsymbol{x}_0$ is the position of the point that describes the global motion of the body, $\boldsymbol{f}_P$ is the relative position of the point when the body is undeformed, and $\boldsymbol{u}_P$ is the relative displacement of the point when the body is deformed.

It can be rewritten as

$$\boldsymbol{x}_P = \boldsymbol{x}_0 + \boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \tilde{\boldsymbol{u}}_P\right) \tag{9.385}$$

where $\boldsymbol{R}_0$ is the global orientation matrix of the body, and the *tilde* $\tilde{(\cdot)}$ indicates entities expressed in the reference frame attached to the body.

The deformation of the body is expressed by a linear combination of M displacement (and rotation, for those models that consider them, like beam trusses) shapes

$$\tilde{\boldsymbol{u}}_P = \sum_{j=1,M} \boldsymbol{U}_{Pj}q_j = \boldsymbol{U}_P\boldsymbol{q} \tag{9.386}$$

where $\boldsymbol{U}_{Pj}$ is the vector containing the components of the j-th displacement shape related to point P, and q_j is the j-th mode multiplier.

The orientation of the generic point P is

$$\boldsymbol{R}_P = \boldsymbol{R}_0\tilde{\boldsymbol{R}}_P \tag{9.387}$$

and, assuming a representation of the relative orientation by a linear combination of rotation shapes

$$\tilde{\boldsymbol{\phi}} = \sum_{j=1,M} \boldsymbol{V}_{Pj}q_j = \boldsymbol{V}_P\boldsymbol{q} \tag{9.388}$$

it results in a linearized orientation

$$\boldsymbol{R}_P \cong \boldsymbol{R}_0\left(\boldsymbol{I} + \left(\boldsymbol{V}_P\boldsymbol{q}\right)\times\right) \tag{9.389}$$

which is no longer orthogonal, because of matrix

$$\tilde{\boldsymbol{R}}_P = \boldsymbol{I} + (\boldsymbol{V}_P \boldsymbol{q}) \times \tag{9.390}$$

which represents a linearized rotation.

The first and second derivatives of position and orientation yield:

$$\dot{\boldsymbol{x}}_P = \dot{\boldsymbol{x}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P \boldsymbol{q} \right) + \boldsymbol{R}_0 \boldsymbol{U}_P \dot{\boldsymbol{q}} \tag{9.391a}$$

$$\boldsymbol{\omega}_P = \boldsymbol{\omega}_0 + \boldsymbol{R}_0 \boldsymbol{V}_P \dot{\boldsymbol{q}} \tag{9.391b}$$

$$\begin{aligned} \ddot{\boldsymbol{x}}_P = {} & \ddot{\boldsymbol{x}}_0 + \dot{\boldsymbol{\omega}}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P \boldsymbol{q} \right) + \boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P \boldsymbol{q} \right) \\ & + 2 \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{U}_P \dot{\boldsymbol{q}} + \boldsymbol{R}_0 \boldsymbol{U}_P \ddot{\boldsymbol{q}} \end{aligned} \tag{9.391c}$$

$$\dot{\boldsymbol{\omega}}_P = \dot{\boldsymbol{\omega}}_0 + \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{V}_P \dot{\boldsymbol{q}} + \boldsymbol{R}_0 \boldsymbol{V}_P \ddot{\boldsymbol{q}} \tag{9.391d}$$

The virtual perturbation of the position and orientation of the generic point P are:

$$\delta \boldsymbol{x}_P = \delta \boldsymbol{x}_0 + \delta \boldsymbol{\phi}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P \boldsymbol{q} \right) + \boldsymbol{R}_0 \boldsymbol{U}_P \delta \boldsymbol{q} \tag{9.392a}$$

$$\delta \boldsymbol{\phi}_P = \delta \boldsymbol{\phi}_0 + \boldsymbol{R}_0 \boldsymbol{V}_P \delta \boldsymbol{q} \tag{9.392b}$$

Without significant losses in generality, from now on it is assumed that the structure of the problem is given in form of lumped inertia parameters in specific points, corresponding to FEM nodes, and that the position of each node corresponds to the center of mass of each lumped mass. A model made of N FEM nodes is considered. The nodal mass of the i-th FEM node is

$$\boldsymbol{M}_i = \begin{bmatrix} m_i \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{J}_i \end{bmatrix} \tag{9.393}$$

There is no strict requirement for matrix $\boldsymbol{J}_i$ to be diagonal.

The inertia forces and moments acting on each FEM node are:

$$\boldsymbol{F}_i = -m_i \ddot{\boldsymbol{x}}_i \tag{9.394a}$$

$$\boldsymbol{C}_i = -\boldsymbol{R}_i \boldsymbol{J}_i \boldsymbol{R}_i^T \dot{\boldsymbol{\omega}}_i \tag{9.394b}$$

and the virtual work done by the inertia forces is

$$\delta L = \sum_{i=1,N} \left(\delta \boldsymbol{x}_i^T \boldsymbol{F}_i + \delta \boldsymbol{\phi}_i^T \boldsymbol{C}_i \right) \tag{9.395}$$

which results in

$$\delta L = \begin{Bmatrix} \delta \boldsymbol{x}_0 \\ \delta \boldsymbol{\phi}_0 \\ \delta \boldsymbol{q} \end{Bmatrix}^T \left(\begin{bmatrix} \boldsymbol{M}_{xx} & \boldsymbol{M}_{x\phi} & \boldsymbol{M}_{xq} \\ & \boldsymbol{M}_{\phi\phi} & \boldsymbol{M}_{\phi q} \\ \text{sym.} & & \boldsymbol{M}_{qq} \end{bmatrix} \begin{Bmatrix} \ddot{\boldsymbol{x}}_0 \\ \dot{\boldsymbol{\omega}}_0 \\ \ddot{\boldsymbol{q}} \end{Bmatrix} + \begin{Bmatrix} \boldsymbol{F}_x \\ \boldsymbol{F}_\phi \\ \boldsymbol{F}_q \end{Bmatrix} \right) \tag{9.396}$$

with

$$\boldsymbol{M}_{xx} = \boldsymbol{I} \sum_{i=1,N} m_i \tag{9.397a}$$

$$\boldsymbol{M}_{x\phi} = \boldsymbol{R}_0 \sum_{i=1,N} m_i \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times^T \boldsymbol{R}_0^T \tag{9.397b}$$

$$\boldsymbol{M}_{xq} = \boldsymbol{R}_0 \sum_{i=1,N} m_i \boldsymbol{U}_i \tag{9.397c}$$

$$\boldsymbol{M}_{\phi\phi} = \boldsymbol{R}_0 \sum_{i=1,N} \left(m_i \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times^T + \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \right) \boldsymbol{R}_0^T \tag{9.397d}$$

$$\boldsymbol{M}_{\phi q} = \boldsymbol{R}_0 \sum_{i=1,N} \left(m_i \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times \boldsymbol{U}_i + \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \boldsymbol{V}_i \right) \tag{9.397e}$$

$$\boldsymbol{M}_{qq} = \sum_{i=1,N} \left(m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \boldsymbol{V}_i \right) \tag{9.397f}$$

$$\boldsymbol{F}_x = \sum_{i=1,N} m_i \left(\boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{U}_i \dot{\boldsymbol{q}} \right) \tag{9.397g}$$

$$\begin{aligned} \boldsymbol{F}_\phi = \sum_{i=1,N} & \boldsymbol{R}_0 \left(m_i \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) \times \left(\boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{U}_i \dot{\boldsymbol{q}} \right) \right. \\ & \left. + \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \boldsymbol{R}_0^T \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{V}_i \dot{\boldsymbol{q}} \right) \end{aligned} \tag{9.397h}$$

$$\begin{aligned} \boldsymbol{F}_q = \sum_{i=1,N} & \left(m_i \boldsymbol{U}_i^T \boldsymbol{R}_0^T \left(\boldsymbol{\omega}_0 \times \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \left(\tilde{\boldsymbol{f}}_i + \boldsymbol{U}_i \boldsymbol{q} \right) + 2\boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{U}_i \dot{\boldsymbol{q}} \right) \right. \\ & \left. + \boldsymbol{V}_i^T \tilde{\boldsymbol{R}}_i \boldsymbol{J}_i \tilde{\boldsymbol{R}}_i^T \boldsymbol{R}_0^T \boldsymbol{\omega}_0 \times \boldsymbol{R}_0 \boldsymbol{V}_i \dot{\boldsymbol{q}} \right) \end{aligned} \tag{9.397i}$$

The $\boldsymbol{M}_{jk}$ terms can be rewritten to highlight contributions of order 0, 1, and higher:

$$\boldsymbol{M}_{xx} = \boldsymbol{I} \left(\sum_{i=1,N} m_i \right) \tag{9.398a}$$

$$\boldsymbol{M}_{x\phi} = \boldsymbol{R}_0 \left(\left(\sum_{i=1,N} m_i \tilde{\boldsymbol{f}}_i \right) + \left(\left(\sum_{i=1,N} m_i \boldsymbol{U}_i \right) \boldsymbol{q} \right) \right) \times^T \boldsymbol{R}_0^T \tag{9.398b}$$

$$\boldsymbol{M}_{xq} = \boldsymbol{R}_0 \left(\sum_{i=1,N} m_i \boldsymbol{U}_i \right) \tag{9.398c}$$

$$\begin{aligned} \boldsymbol{M}_{\phi\phi} = \boldsymbol{R}_0 \Bigg(& \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \tilde{\boldsymbol{f}}_i \times^T + \boldsymbol{J}_i \right) \\ & + \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times (\boldsymbol{U}_i \boldsymbol{q}) \times^T + m_i (\boldsymbol{U}_i \boldsymbol{q}) \times \tilde{\boldsymbol{f}}_i \times^T + \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T + (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i \right) \\ & + \sum_{i=1,N} \left(m_i (\boldsymbol{U}_i \boldsymbol{q}) \times (\boldsymbol{U}_i \boldsymbol{q}) \times^T + (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T \right) \Bigg) \boldsymbol{R}_0^T \end{aligned} \tag{9.398d}$$

$$\begin{aligned} \boldsymbol{M}_{\phi q} = \boldsymbol{R}_0 \Bigg(& \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} \left(m_i (\boldsymbol{U}_i \boldsymbol{q}) \times \boldsymbol{U}_i + \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T \boldsymbol{V}_i + (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T \boldsymbol{V}_i \Bigg) \end{aligned} \tag{9.398e}$$

$$\begin{aligned} \boldsymbol{M}_{qq} = & \sum_{i=1,N} \left(m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} \left(\boldsymbol{V}_i^T \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T \boldsymbol{V}_i + \boldsymbol{V}_i^T (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} \boldsymbol{V}_i^T (\boldsymbol{V}_i \boldsymbol{q}) \times \boldsymbol{J}_i (\boldsymbol{V}_i \boldsymbol{q}) \times^T \boldsymbol{V}_i \end{aligned} \tag{9.398f}$$

9.4.2 Physics: Orthogonality

Some noteworthy entities appear in the above equations, which may partially simplify under special circumstances.

The overall mass of the body

$$m = \sum_{i=1,N} m_i \tag{9.399}$$

The static (first order) inertia moment

$$\boldsymbol{S}_{x\phi} = \sum_{i=1,N} m_i \tilde{\boldsymbol{f}}_i \tag{9.400}$$

vanishes if point $\boldsymbol{x}_0$ is the center of mass of the undeformed body.

Similarly, the static (first order) inertia moment computed with the modal displacement shapes

$$\boldsymbol{S}_{xq} = \sum_{i=1,N} m_i \boldsymbol{U}_i \tag{9.401}$$

vanishes if the mode shapes have been inertially decoupled from the rigid body displacements. In fact, the decoupling of the rigid and the deformable modes is expressed by

$$\begin{aligned} &\sum_{i=1,N} \boldsymbol{x}_r^T m_i \boldsymbol{U}_i = \\ &\boldsymbol{x}_r^T \sum_{i=1,N} m_i \boldsymbol{U}_i = 0 \end{aligned} \tag{9.402}$$

where $\boldsymbol{x}_r^T$ describes three independent rigid translations, which, for the arbitrariety of $\boldsymbol{x}_r$, implies the above Equation (9.401).

In the same case, also the zero-order terms of the coupling between the rigid body rotations and the modal variables,

$$\boldsymbol{S}_{\phi q} = \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{J}_i \boldsymbol{V}_i \right) \tag{9.403}$$

also vanishes. In fact, the decoupling of the rigid and the deformable modes is expressed by

$$\begin{aligned} &\sum_{i=1,N} \left(m_i \boldsymbol{\phi}_r^T \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{\phi}_r^T \boldsymbol{J}_i \boldsymbol{V}_i \right) = \\ &\boldsymbol{\phi}_r^T \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{J}_i \boldsymbol{V}_i \right) = 0 \end{aligned} \tag{9.404}$$

where $\boldsymbol{\phi}_r^T$ describes three independent rigid rotations, and $\boldsymbol{\phi}_r^T \tilde{\boldsymbol{f}}_i \times$ describes the corresponding displacements, which, for the arbitrariety of $\boldsymbol{\phi}_r$, implies the above Equation (9.403).

The second order inertia moment is

$$\boldsymbol{J} = \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \tilde{\boldsymbol{f}}_i \times^T + \boldsymbol{J}_i \right) \tag{9.405}$$

It results in a diagonal matrix if the orientation of the body is aligned with the principal inertia axes.

The modal mass matrix is

$$\boldsymbol{m} = \sum_{i=1,N} \left(m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \boldsymbol{J}_i \boldsymbol{V}_i \right) \tag{9.406}$$

It is diagonal if only the normal modes are considered.

9.4.3 Simplifications

The problem, as stated up to now, already contains some simplifications. First of all, those related to the lumped inertia model of a continuum; moreover, those related to the mode superposition to describe the straining of the body which, in the case of the FEM node rotation, yields a non-orthogonal linearized rotation matrix.

Further simplifications are usually accepted in common modeling practice, where some of the higher order terms are simply discarded.

When only the 0-th order coefficients are used in matrices M_{uv}, the dynamics of the body are written referred to the undeformed shape. This approximation can be quite drastic, but in some cases it may be reasonable, if the reference straining, represented by $\boldsymbol{q}$, remains very small throughout the simulation. This approximation is also required when the only available data are the global inertia properties (e.g. m, the postion of the center of mass and the inertia matrix $\boldsymbol{J}$), and the modal mass matrix $\boldsymbol{m}$.

More refined approximations include higher order terms: for example, the first and second order contributions illustrated before. This corresponds to using finer and finer descriptions of the inertia properties of the system, corresponding to computing the inertia properties in the deformed condition with first and second order accuracy, respectively.

9.4.4 Invariants

The dynamics of the deformed body can be written without any detailed knowledge of the mass distribution, provided some aggregate information can be gathered in so-called *invariants*. They are:

1. Total mass (scalar)

$$\mathcal{I}_1 = \sum_{i=1,N} m_i \tag{9.407}$$

   where m_i is the mass of the i-th FEM node[4].

2. Static moment (matrix 3×1)

$$\mathcal{I}_2 = \sum_{i=1,N} m_i \tilde{\boldsymbol{f}}_i \tag{9.408}$$

3. Static coupling between rigid body and FEM node displacements (matrix $3 \times M$)

$$\mathcal{I}_3 = \sum_{i=1,N} m_i \boldsymbol{U}_i \tag{9.409}$$

   where the portion related to the k-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass m_i by the three components of the modal displacement $\boldsymbol{U}_{ik}$ of the k-th mode.

4. Static coupling between rigid body rotations and FEM node displacements (matrix $3 \times M$)

$$\mathcal{I}_4 = \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_i + \boldsymbol{J}_i \boldsymbol{V}_i \right) \tag{9.410}$$

   where the portion related to the k-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass m_i by the cross product of the FEM node position $\tilde{\boldsymbol{f}}_i$ and the three components of the modal displacement $\boldsymbol{U}_{ik}$ of the k-th mode.

5. Static coupling between FEM node displacements (matrix $3 \times M \times M$)

$$\mathcal{I}_{5j} = \sum_{i=1,N} m_i \boldsymbol{U}_{ij} \times \boldsymbol{U}_i \tag{9.411}$$

   where the portion related to the j-th mode is computed by summation of the contribute of each FEM node, obtained by multiplying the FEM node mass m_i by the cross product of the three components of the FEM node j-th modal displacement $\boldsymbol{U}_{ij}$ and the three components of the k-th modal displacement $\boldsymbol{U}_{ik}$.

[4]Although the input format, because of NASTRAN legacy, allows each global direction to have a separate mass value, invariants assume that the same value is given, and only use the one associated with component 1.

6. Modal mass matrix (matrix $M \times M$)

$$\mathcal{I}_6 = \sum_{i=1,N} \left(m_i \boldsymbol{U}_i^T \boldsymbol{U}_i + \boldsymbol{V}_i^T \boldsymbol{J}_i \boldsymbol{V}_i \right) \tag{9.412}$$

7. Inertia matrix (matrix 3×3)

$$\mathcal{I}_7 = \sum_{i=1,N} \left(m_i \tilde{\boldsymbol{f}}_i \times \tilde{\boldsymbol{f}}_i \times^T + \boldsymbol{J}_i \right) \tag{9.413}$$

8. (matrix $3 \times M \times 3$)

$$\mathcal{I}_{8j} = \sum_{i=1,N} m_i \tilde{\boldsymbol{f}}_i \times \boldsymbol{U}_{ij} \times^T \tag{9.414}$$

9. (matrix $3 \times M \times M \times 3$)

$$\mathcal{I}_{9jk} = \sum_{i=1,N} m_i \boldsymbol{U}_{ij} \times \boldsymbol{U}_{ik} \times \tag{9.415}$$

10. (matrix $3 \times M \times 3$)

$$\mathcal{I}_{10j} = \sum_{i=1,N} \boldsymbol{V}_{ij} \times \boldsymbol{J}_i \tag{9.416}$$

11. (matrix $3 \times M$)

$$\mathcal{I}_{11} = \sum_{i=1,N} \boldsymbol{J}_i \boldsymbol{V}_i \tag{9.417}$$

Using the invariants, the contributions to the inertia matrix of the body become

$$\boldsymbol{M}_{xx} = \boldsymbol{I}\, \mathcal{I}_1 \tag{9.418a}$$

$$\boldsymbol{M}_{x\phi} = \boldsymbol{R}_0 \left(\mathcal{I}_2 + \mathcal{I}_3 \boldsymbol{q} \right) \times \boldsymbol{R}_0^T \tag{9.418b}$$

$$\boldsymbol{M}_{xq} = \boldsymbol{R}_0 \mathcal{I}_3 \tag{9.418c}$$

$$\boldsymbol{M}_{\phi\phi} = \boldsymbol{R}_0 \left(\mathcal{I}_7 + \left(\mathcal{I}_{8j} + \mathcal{I}_{8j}^T \right) q_j + \mathcal{I}_{9jk} q_j q_k \right) \boldsymbol{R}_0^T \tag{9.418d}$$

$$\begin{aligned} \boldsymbol{M}_{\phi q} = \boldsymbol{R}_0 \Bigg(& \mathcal{I}_4 + \mathcal{I}_{5j} q_j + \sum_{i=1,N} \left(\boldsymbol{J}_i \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times^T \boldsymbol{V}_i + \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times \boldsymbol{J}_i \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times^T \boldsymbol{V}_i \Bigg) \end{aligned} \tag{9.418e}$$

$$\begin{aligned} \boldsymbol{M}_{qq} = & \mathcal{I}_6 \\ & + \sum_{i=1,N} \left(\boldsymbol{V}_i^T \boldsymbol{J}_i \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times^T \boldsymbol{V}_i + \boldsymbol{V}_i^T \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times \boldsymbol{J}_i \boldsymbol{V}_i \right) \\ & + \sum_{i=1,N} \boldsymbol{V}_i^T \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times \boldsymbol{J}_i \left(\boldsymbol{V}_i \boldsymbol{q} \right) \times^T \boldsymbol{V}_i \end{aligned} \tag{9.418f}$$

where summation over repeated indices is assumed. The remaining summation terms could be also cast into some invariant form; however, in common practice (e.g. in ADAMS) they are simply neglected, under the assumption that the finer the discretization, the smaller the FEM node inertia, so that linear and quadratic terms in the nodal rotation become reasonably small, yielding

$$\boldsymbol{M}_{xx} = \boldsymbol{I}\,\mathcal{I}_1 \tag{9.419a}$$
$$\boldsymbol{M}_{x\phi} = \boldsymbol{R}_0\left(\mathcal{I}_2 + \mathcal{I}_3\boldsymbol{q}\right) \times \boldsymbol{R}_0^T \tag{9.419b}$$
$$\boldsymbol{M}_{xq} = \boldsymbol{R}_0\mathcal{I}_3 \tag{9.419c}$$
$$\boldsymbol{M}_{\phi\phi} = \boldsymbol{R}_0\left(\mathcal{I}_7 + \left(\mathcal{I}_{8j} + \mathcal{I}_{8j}^T\right)q_j + \mathcal{I}_{9jk}q_jq_k\right)\boldsymbol{R}_0^T \tag{9.419d}$$
$$\boldsymbol{M}_{\phi q} = \boldsymbol{R}_0\left(\mathcal{I}_4 + \mathcal{I}_{5j}q_j\right) \tag{9.419e}$$
$$\boldsymbol{M}_{qq} = \mathcal{I}_6 \tag{9.419f}$$

In some cases, the only remaining quadratic term in $\mathcal{I}_{9jk}$ is neglected as well.

9.4.5 Interfacing

The basic interface between the FEM and the multibody world occurs by clamping regular multibody nodes to selected nodes on the FEM mesh. Whenever more sophisticated interfacing is required, for example connecting a multibody node to a combination of FEM nodes, an FEM node equivalent to the desired aggregate of nodes should either be prepared at the FEM side, for example by means of RBEs, or at the FEM database side, for example by averaging existing mode shapes according to the desired pattern, into an equivalent FEM node[5].

The clamping is imposed by means of a coincidence and a parallelism constraint between the locations and the orientations of the two points: the multibody node N and the FEM node P, according to the expressions

$$\boldsymbol{x}_N + \boldsymbol{f}_N = \boldsymbol{x}_P \tag{9.420}$$
$$\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_N^T\boldsymbol{R}_P\right)\right) = \boldsymbol{0} \tag{9.421}$$

which becomes

$$\boldsymbol{x}_N + \boldsymbol{R}_N\tilde{\boldsymbol{f}}_N - \boldsymbol{x}_0 - \boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P\boldsymbol{q}\right) = \boldsymbol{0} \tag{9.422}$$
$$\mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_N^T\boldsymbol{R}_0\left(\boldsymbol{I} + \left(\boldsymbol{V}_P\boldsymbol{q}\right)\times\right)\right)\right) = \boldsymbol{0} \tag{9.423}$$

The reaction forces exchanged are $\boldsymbol{\lambda}$ in the global frame, while the reaction moments are $\boldsymbol{R}_N\boldsymbol{\alpha}$ in the reference frame of node N:

$$\boldsymbol{F}_N = \boldsymbol{\lambda} \tag{9.424}$$
$$\boldsymbol{M}_N = \boldsymbol{f}_N \times \boldsymbol{\lambda} + \boldsymbol{R}_N\boldsymbol{\alpha} \tag{9.425}$$
$$\boldsymbol{F}_P = -\boldsymbol{\lambda} \tag{9.426}$$
$$\boldsymbol{M}_P = -\boldsymbol{R}_N\boldsymbol{\alpha} \tag{9.427}$$

The force and the moment apply on the rigid body displacement and rotation, and on the modal equations as well, according to

$$\begin{matrix}\delta\boldsymbol{x}_P^T\boldsymbol{F}_P \\ +\,\delta\boldsymbol{\phi}_P^T\boldsymbol{M}_P\end{matrix} = \begin{Bmatrix}\delta\boldsymbol{x}_0 \\ \delta\boldsymbol{\phi}_0 \\ \delta\boldsymbol{q}\end{Bmatrix}^T \begin{Bmatrix} -\boldsymbol{\lambda} \\ -\left(\boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P\boldsymbol{q}\right)\right)\times\boldsymbol{\lambda} - \boldsymbol{R}_N\boldsymbol{\alpha} \\ -\boldsymbol{U}_P^T\boldsymbol{R}_0^T\boldsymbol{\lambda} - \boldsymbol{V}_P^T\boldsymbol{R}_0^T\boldsymbol{R}_N\boldsymbol{\alpha}\end{Bmatrix} \tag{9.428}$$

[5]For example, to constrain the displacement of a FEM node P that represents the weighing of the displacement of a set of FEM nodes according to a constant weighing matrix $\boldsymbol{W}_P \in \mathbb{R}^{3n\times 3}$, simply use $\boldsymbol{U}_P = \boldsymbol{W}_P^T\boldsymbol{U}$.

The linearization of the constraint yields

$$\begin{bmatrix} -\boldsymbol{I} & \boldsymbol{f}_N \times & \boldsymbol{I} & -\left(\boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P\boldsymbol{q}\right)\right)\times & \boldsymbol{R}_0\boldsymbol{U}_P \\ \boldsymbol{0} & -\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_N^T & \boldsymbol{0} & \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_N^T & \boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1}\boldsymbol{R}_N^T\boldsymbol{R}_0\boldsymbol{V}_P \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_N \\ \delta\boldsymbol{g}_N \\ \delta\boldsymbol{x}_0 \\ \delta\boldsymbol{g}_0 \\ \delta\boldsymbol{q} \end{Bmatrix} = \begin{Bmatrix} (9.422) \\ (9.423) \end{Bmatrix} \tag{9.429}$$

Note that $\boldsymbol{\Gamma}(\boldsymbol{\theta})^{-1} \cong \boldsymbol{I}$ since $\boldsymbol{\theta} \to \boldsymbol{0}$ when the constraint is satisfied. The linearization of forces and moments yields

$$\begin{bmatrix} \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & -\boldsymbol{\lambda}\times\boldsymbol{f}_N\times + (\boldsymbol{R}_N\boldsymbol{\alpha})\times \\ \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & -(\boldsymbol{R}_N\boldsymbol{\alpha})\times \\ \boldsymbol{0} & -\boldsymbol{V}_P^T\boldsymbol{R}_0^T(\boldsymbol{R}_N\boldsymbol{\alpha})\times \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_N \\ \delta\boldsymbol{g}_N \end{Bmatrix} \tag{9.430}$$

$$+ \begin{bmatrix} \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{\lambda}\times\left(\boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P\boldsymbol{q}\right)\right)\times & -\boldsymbol{\lambda}\times\boldsymbol{R}_0\boldsymbol{U}_P \\ \boldsymbol{0} & \boldsymbol{U}_P^T\boldsymbol{R}_0^T\boldsymbol{\lambda}\times + \boldsymbol{V}_P^T\boldsymbol{R}_0^T(\boldsymbol{R}_N\boldsymbol{\alpha})\times & \boldsymbol{0} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{x}_0 \\ \delta\boldsymbol{g}_0 \\ \delta\boldsymbol{q} \end{Bmatrix}$$

$$+ \begin{bmatrix} -\boldsymbol{I} & \boldsymbol{0} \\ -\boldsymbol{f}_N\times & -\boldsymbol{R}_N \\ \boldsymbol{I} & \boldsymbol{0} \\ \left(\boldsymbol{R}_0\left(\tilde{\boldsymbol{f}}_P + \boldsymbol{U}_P\boldsymbol{q}\right)\right)\times & \boldsymbol{R}_N \\ \boldsymbol{U}_P^T\boldsymbol{R}_0^T & \boldsymbol{V}_P^T\boldsymbol{R}_0^T\boldsymbol{R}_N \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{\lambda} \\ \delta\boldsymbol{\alpha} \end{Bmatrix} = \begin{Bmatrix} \boldsymbol{\lambda} \\ \boldsymbol{f}_N\times\boldsymbol{\lambda} + \boldsymbol{R}_N\boldsymbol{\alpha} \\ (9.428) \end{Bmatrix}$$

9.4.6 Virtual strain energy

Author: Reinhard Resch The modal element is based on the assumption of small elastic deformations but arbitrary superimposed rigid body motions. Since elastic deformations are small, the virtual strain energy δW may be approximated as a linear function of the modal displacement $\boldsymbol{q}$.

$$\delta W \approx \delta\boldsymbol{q}^T\boldsymbol{K}_{qq}\boldsymbol{q} \tag{9.431}$$

$\boldsymbol{K}_{qq}$ reduced order linear stiffness matrix

Quasi static corrections for stress stiffening

However, there are applications of structures subject to small elastic deformations and linear elastic material, where those linear approximation of the virtual strain energy according equation 9.431 is not applicable due to significant pre-stress effects. See also [10]. Typical examples are:

1. rotor blades of helicopters, wind turbines and gas turbines
2. propellers of airplanes
3. rotors of turbo chargers for internal combustion engines
4. connecting rods of high speed reciprocating engines

5. slender flexible arms of robots

According to the following assumptions, which are described in [10], it is possible to apply a quasi static correction to the virtual strain energy.

1. The flexible body should have low stiffness in some directions but high stiffness in other directions.
2. There are only low loads applied in directions of low stiffness. So, the deformations will remain small despite of low stiffness in those directions.
3. There are also high loads applied in directions of high stiffness. Because of such a high stiffness in those directions, the deformations will remain small. However, those high loads will cause high stresses which are affecting the stiffness in other directions.

Based on those assumptions, the corrected expression for the virtual strain energy according [10] is:

$$\delta W \approx \delta \boldsymbol{q}^T \left(\boldsymbol{K}_{qq} + \boldsymbol{K}_{qq_{geo}} \right) \boldsymbol{q} \tag{9.432}$$

In equation 9.432 the matrix $\boldsymbol{K}_{qq_{geo}}$ is called "geometrical stiffness matrix" or "stress stiffening matrix". According to [10], $\boldsymbol{K}_{qq_{geo}}$ can be written as a linear combination of a set of constant matrices.

$$\begin{aligned} \boldsymbol{K}_{qq_{geo}} = & \sum_{i=1,3} \left(\tilde{\ddot{x}}_{0_i} - \tilde{g}_i \right) \boldsymbol{K}_{0t_i} + \sum_{i=1,3} \tilde{\dot{\omega}}_{0_i} \boldsymbol{K}_{0r_i} + \sum_{m=1,6} \tilde{\omega}_{q_m} \boldsymbol{K}_{0\omega_m} \\ & + \sum_{i=1,3} \sum_{j=1,M} \tilde{F}_{P_{ij}} \boldsymbol{K}_{0F_{ij}} + \sum_{i=1,3} \sum_{j=1,M} \tilde{M}_{P_{ij}} \boldsymbol{K}_{0M_{ij}} \end{aligned} \tag{9.433}$$

So, $\boldsymbol{K}_{qq_{geo}}$ is a function of the rigid body motion of the modal node, and also a function of the Lagrange multipliers applied at the interface nodes.

$$\tilde{\ddot{\boldsymbol{x}}}_0 = \boldsymbol{R}_0^T \, \ddot{\boldsymbol{x}}_0 \tag{9.434}$$

$$\tilde{\dot{\boldsymbol{\omega}}}_0 = \boldsymbol{R}_0^T \, \dot{\boldsymbol{\omega}}_0 \tag{9.435}$$

$$\tilde{\boldsymbol{\omega}}_q = \begin{pmatrix} \tilde{\omega}_{0_1}^2 & \tilde{\omega}_{0_2}^2 & \tilde{\omega}_{0_3}^2 & \tilde{\omega}_{0_1} \tilde{\omega}_{0_2} & \tilde{\omega}_{0_2} \tilde{\omega}_{0_3} & \tilde{\omega}_{0_1} \tilde{\omega}_{0_3} \end{pmatrix}^T \tag{9.436}$$

$$\tilde{\boldsymbol{\omega}}_0 = \boldsymbol{R}_0^T \, \boldsymbol{\omega}_0 \tag{9.437}$$

$$\tilde{\boldsymbol{F}}_{P_j} = - \boldsymbol{R}_0^T \, \boldsymbol{\lambda}_j \tag{9.438}$$

$$\tilde{\boldsymbol{M}}_{P_j} = - \boldsymbol{R}_0^T \, \boldsymbol{R}_N \, \boldsymbol{\alpha}_j \tag{9.439}$$

Those matrices are also called "pre-stress stiffness matrices" and can be a determined a priori based on the stress field for various static unit loads.

$\boldsymbol{K}_{0t_i}$ A unit linear acceleration is applied in direction x_i

$\boldsymbol{K}_{0r_i}$ A unit angular acceleration is applied along the x_i axis

$\boldsymbol{K}_{0\omega_m}$ Can be computed from six angular velocity loads

$\boldsymbol{K}_{0F_{ij}}$ A unit force is applied in x_i direction at interface node j

$\boldsymbol{K}_{0M_{ij}}$ A unit moment is applied along the x_i axis at interface node j

In theory, any structural Finite Element solver like ANSYS, ABAQUS or NASTRAN could be used to generate those matrices. For a comprehensive description of the underlying procedure, the reader is referred to [11]. Probably, the most convenient solution to get those matrices and all the modal element data is, to use a dedicated toolkit like mboct-fem-pkg with builtin support for MBDyn's input files.

Chapter 10

Beam Element

TODO

10.1 Generalized strains, strain rates and their linearization

Authors: Marco Morandini and Wenguo Zhu

This a draft, but hopefully consistent and correct documentation of the beam strains, strain rates and of their derivatives. Arbitrary point on the beam reference line, and the rotation parameter:

$$p(\xi) = N_i(\xi)(x_i + R_i\tilde{f}_i)$$

$$g(\xi) = N_i(\xi)g_i$$

The generalized strain:

$$\varepsilon(\xi) = R^T(\xi)N_i'(\xi)(x_i + R_i\tilde{f}_i) - \bar{p}'$$

$$\kappa(\xi) = R^T(\xi)\left(G(\xi)N_i'(\xi)g_i\right) + \kappa_r$$

Rotation:

$$R = R(N_i g_i)R_r$$

Derivative of Rotation:

$$\dot{R} = \omega \times R$$

$$\dot{R}^T = -R^T\omega\times$$

Section angular velocity:

$$\omega = G(\xi)N_i'(\xi)\dot{g}_i - \omega_r \times N_i g_i$$

And the strain rate can be expressed as:

$$
\begin{aligned}
l &= N_i'(\xi)(x_i + R_i\tilde{f}_i) \\
\\
\dot{l} &= N_{Jk}'(\dot{x}_k + \dot{R}_k\tilde{f}_k) \\
&= N_{Jk}'(\dot{x}_k + \omega_k \times R_k\tilde{f}_k) \\
\\
\dot{\tilde{\varepsilon}} &= R^T(\dot{l} - \omega \times l) \\
&= R^T N_{Jk}'(\dot{x}_k + \omega_k \times R_k\tilde{f}_k) \\
&\quad -R^T\omega \times N_{Ji}'(x_i + R_i\tilde{f}_i)
\end{aligned}
$$

$$
\boldsymbol{G} = \frac{4}{4 + \boldsymbol{g}^T\boldsymbol{g}}(\boldsymbol{I} + \frac{1}{2}\boldsymbol{g}\times)
$$

$$
\dot{G} = -\frac{4}{(4 + \boldsymbol{g}^T\boldsymbol{g})^2}(\dot{\boldsymbol{g}} \otimes \boldsymbol{g} + \boldsymbol{g} \otimes \dot{\boldsymbol{g}})(\boldsymbol{I} + \frac{1}{2}\boldsymbol{g}\times) + \frac{4}{4 + \boldsymbol{g}^T\boldsymbol{g}}(\frac{1}{2}\dot{\boldsymbol{g}}\times)
$$

$$
\dot{\tilde{\kappa}} = R^T(G(\xi)N_i'(\xi)\dot{g}_i + \dot{G}(\xi)N_i'(\xi)g_i - \omega \times (G(\xi)N_i'(\xi)g_i)) + \dot{\kappa}_r
$$

$$
\omega = G(N_ig_i)N_i'\dot{g}_i + R(N_ig_i)\omega_r
$$

Angular velocity linearization at an evaluation point J:

$$
\begin{aligned}
\triangle\omega &= \triangle G N_{Ji}\dot{g}_i \\
&\quad +\cancelto{G\approx I}{G} N_{Ji}\Delta\dot{g}_i \\
&\quad +\Delta R\omega_r \\
&= \frac{1}{2}N_{jk}\Delta g_k \times N_{Ji}'\dot{g}_i \\
&\quad +N_{Ji}\Delta\dot{g}_i \\
&\quad -\omega_r \times N_{Ji}\Delta g_i \\
&= \cancelto{\dot{g}\approx 0}{-\frac{1}{2}N_{Ji}'\dot{g}_i \times N_{jk}\Delta g_k} \\
&\quad +N_{Ji}\Delta\dot{g}_i \\
&\quad -\omega_r \times N_{Ji}\Delta g_i \\
&= N_{Ji}\Delta\dot{g}_i - \omega_r \times N_{Ji}\Delta g_i
\end{aligned}
$$

Rotation linearization at an evaluation point J:

$$
\begin{aligned}
\triangle R &= \triangle g \times R_r \\
&= (N_{Ji}\Delta g_i) \times R_r
\end{aligned}
$$

$$\Delta R^T = -R_r^T (N_{Ji} \Delta g_i)\times$$

Rotation rate linearization at an evaluation point J:

$$\begin{aligned}
\dot{R} &= \cancel{\dot{R}_\delta R_r = (G_\delta \dot{g}) \times R_r} \\
&= \omega \times R
\end{aligned}$$

$$\dot{R}^T = -R^T \omega\times$$

$$\begin{aligned}
\Delta\dot{R} &= \Delta\omega \times R \\
&\quad +\omega \times \Delta R \\
&= (N_{Ji}\Delta\dot{g}_i - \omega_r \times N_{Ji}\Delta g_i) \times R \\
&\quad +\omega \times N_{Ji}\Delta g_i \times \\
&= N_{Ji}\Delta\dot{g}_i \times R \\
&\quad -N_{Ji}\Delta g_i \otimes \omega_r R \\
&\quad +\omega_r \otimes N_{Ji} R^T \Delta g_i \\
&\quad +\omega \times N_{Ji}\Delta g_i \times R_r
\end{aligned}$$

$$\begin{aligned}
\Delta\dot{R}_i &= \Delta\dot{g}_i \times R_i \\
&\quad -\Delta g_i \otimes \omega_{ri} R_i \\
&\quad +\omega_{ri} \otimes R_i^T \Delta g_i \\
&\quad +\omega_i \times \Delta g_i \times R_{ri}
\end{aligned}$$

$$\begin{aligned}
\triangle l &= N'_{Ji}(\triangle x_i + \triangle R_i \tilde{f}_i) \\
&= N'_{Ji}(\triangle x_i - (R_i \tilde{f}_i) \times \triangle g_i)
\end{aligned}$$

Strain linearization at an evaluation point J:

$$\begin{aligned}
\Delta\varepsilon &= \triangle R^T N'_{Jk}(x_k + R_k \tilde{f}_k) \\
&\quad +R^T N'_{Jk}(\Delta x_k + \Delta R_k \tilde{f}_k) \\
&= R_r^T N'_{Jk}(x_k + R_k \tilde{f}_k) \times (N_{Jm}\Delta g_m) \\
&\quad +R^T N'_{Jk}(\Delta x_k + \Delta g_k \times R_k \tilde{f}_k) \\
&= R_r^T N'_{Jk}(x_k + R_k \tilde{f}_k) \times (N_{Jm}\Delta g_m) \\
&\quad +R_r^T N'_{Jk}(\Delta x_k - R_k \tilde{f}_k \times \Delta g_k)
\end{aligned}$$

$$\begin{aligned}
\Delta\kappa &= \cancel{\Delta R^T G N'_{Ji} g_i}^{g_i \approx 0} \\
&\quad \cancel{+R^T \Delta G N'_{Ji} g_i}^{g_i \approx 0} \\
&\quad +R^T G N'_{Ji} \Delta g_i \\
&= R_r^T N'_{Ji} \Delta g_i
\end{aligned}$$

$$\dot{l} = N'_{Ji}(\dot{x}_i + \dot{R}_i \tilde{f}_i)$$

$$\begin{aligned}
\triangle\dot{l} &= N'_{Ji}(\triangle\dot{x}_i + \triangle\dot{R}_i\tilde{f}_i) \\
&= N'_{Ji}(\triangle\dot{x}_i + \left(\Delta\dot{g}_i \times R_i - \Delta g_i \otimes \omega_{ri} R_i + \omega_{ri} \otimes R_i^T \Delta g_i + \omega_i \times \Delta g_i \times R_{ri}\right)\tilde{f}_i) \\
&= N'_{Ji}\triangle\dot{x}_i \\
&\quad -N'_{Ji}(R_i\tilde{f}_i) \times \Delta\dot{g}_i \\
&\quad -N'_{Ji}(\omega_{ri}R_i\tilde{f}_i)\Delta g_i \\
&\quad +N'_{Ji}\omega_{ri} \otimes \tilde{f}_i R_i^T \Delta g_i \\
&\quad -N'_{Ji}\omega_i \times (R_{ri}\tilde{f}_i) \times \Delta g_i
\end{aligned}$$

Strain rate linearization at an evaluation point J:

$$\begin{aligned}
\triangle\dot{\tilde{\varepsilon}}_J &= \Delta R^T(\dot{l} - \omega \times l) \\
&\quad +R^T\Delta\dot{l} \\
&\quad -R^T\Delta\omega \times l \\
&\quad -R^T\omega \times \Delta l \\
&= R_r^T(\dot{l} - \omega \times l) \times N_{Ji}\Delta g_i \\
&\quad +R^T N'_{Ji}\triangle\dot{x}_i + \\
&\quad -R^T N'_{Ji}(R_i\tilde{f}_i) \times \Delta\dot{g}_i \\
&\quad -R^T N'_{Ji}(\omega_{ri}R_i\tilde{f}_i)\Delta g_i \\
&\quad +R^T N'_{Ji}\omega_{ri} \otimes \tilde{f}_i R_i^T \Delta g_i \\
&\quad -R^T N'_{Ji}\omega_i \times (R_{ri}\tilde{f}_i) \times \Delta g_i \\
&\quad +R^T l \times N_{Ji}\Delta\dot{g}_i \\
&\quad +\cancel{R^T(\omega_r \times N_{Ji}\Delta g_i) \times l} \text{ EXPANDED IN THE TWO LINES BELOW} \\
&\quad +(\omega_r \cdot l)R^T N_{Ji}\Delta g_i \\
&\quad -R^T\omega_r \otimes l \cdot N_{Ji}\Delta g_i \\
&\quad -R^T\omega \times N'_{Ji}\Delta x_i \\
&\quad +R^T\omega \times N'_{Ji}(R_i\tilde{f}_i) \times \triangle g_i \\
&= R^T N'_{Ji}\triangle\dot{x}_i \\
&\quad -R^T\omega \times N'_{Ji}\Delta x_i \\
&\quad +R_r^T(\dot{l} - \omega \times l) \times N_{Ji}\Delta g_i \\
&\quad -R^T N'_{Ji}(R_i\tilde{f}_i) \times \Delta\dot{g}_i \\
&\quad -R^T N'_{Ji}(\omega_{ri}R_i\tilde{f}_i)\Delta g_i \\
&\quad +R^T N'_{Ji}\omega_{ri} \otimes \tilde{f}_i R_i^T \Delta g_i \\
&\quad -R^T N'_{Ji}\omega_i \times (R_{ri}\tilde{f}_i) \times \Delta g_i \\
&\quad +R^T l \times N_{Ji}\Delta\dot{g}_i \\
&\quad +R^T(\omega_r \cdot l)N_{Ji}\Delta g_i \\
&\quad -R^T\omega_r \otimes l \cdot N_{Ji}\Delta g_i \\
&\quad +R^T\omega \times N'_{Ji}(R_i\tilde{f}_i) \times \triangle g_i
\end{aligned}$$

$$
\begin{aligned}
\triangle\dot{\tilde{\kappa}}_J(\xi) &= \triangle R^T \left(\cancelto{\approx I}{G} \cancelto{\approx 0}{N'_{Jk}\dot{g}_k} + \cancelto{\approx 0}{\Delta\dot{G} N'_{Jk} g_k} - \cancelto{\approx 0}{\omega_J \times (\cancelto{\approx I}{G} N'_{Jk} g_k)} \right) + \dot{\kappa}_r \\
&\quad + R^T \cancelto{\approx 0}{(\Delta G N'_{Jk} g_k)} \\
&\quad + R^T (\cancelto{\approx I}{G} N'_{Jk} \Delta\dot{g}_k) \\
&\quad + R^T \cancelto{\approx 0}{(\cancelto{\approx I}{G} N'_{Ji} g_i)} \times \Delta\omega \\
&\quad + \cancelto{\approx 0}{R^T (\Delta G N'_{Ji} g_i) \times \omega} \\
&\quad + R^T (\cancelto{\approx I}{G} N'_{Ji} \Delta g_i) \times \omega \\
&= + R^T N'_{Jk} \Delta\dot{g}_k \\
&\quad + R^T (N'_{Ji} \Delta g_i) \times \omega \\
&= + R^T (N'_{Jk} \Delta\dot{g}_k) \\
&\quad - R^T \omega \times (N'_{Ji} \Delta g_i) \\
&= + R^T N'_{Jk} \Delta\dot{g}_k \\
&\quad - R^T \omega \times (N'_{Jm} \Delta g_m)
\end{aligned}
$$

10.2 Fully coupled piezoelectric beam

A fully coupled piezoelectric beam, differently from a piezoelectric beam, do contribute to the electri equations of the abstrc nodes it is linked to. Each abstract node do represent an electrode. The constitutive law at any given evaluation point is

$$
\left\{ \begin{array}{c} \boldsymbol{F} \\ \boldsymbol{Q} \end{array} \right\} = \left[\begin{array}{cc} \boldsymbol{E}_{kk} & \boldsymbol{E}_{kV} \\ \boldsymbol{E}_{Vk} & \boldsymbol{E}_{VV} \end{array} \right] \left\{ \begin{array}{c} \boldsymbol{k} \\ \boldsymbol{V} \end{array} \right\} \tag{10.1}
$$

where $\boldsymbol{F}$ are the six beam internal actions at the evaluation point, $\boldsymbol{Q}$ the vector of electrodes charges per unit of beam length, $\boldsymbol{k}$ the six beam generalized deformations and $\boldsymbol{V}$ the electric difference of potential at the electrodes. The equation contribution to the structural nodes are the same of the piezoelectric beam. The difference with respect to the piezoelectric beam is the equations contribution to the asbtract nodes. The unknowns of the abstract nodes do represent the electric difference of potential at the electrodes. The equations at the abstract nodes states that the sum of charge flux (the electric current) flowing out from each node must be equal to zero:

$$
\sum_i I_i = 0 \tag{10.2}
$$

where I_i is the current flowing out from the abstract nodedue to the connected element i. For this element the current flowing out from the electrodes is

$$
\boldsymbol{I} = -\int_l \dot{\boldsymbol{Q}} \mathrm{d}s = -\int_l \boldsymbol{E}_{Vk}\dot{\boldsymbol{k}} + \boldsymbol{E}_{VV}\dot{\boldsymbol{V}} \mathrm{d}s \tag{10.3}
$$

The fully copled beam element thus turns out to be viscoelastic, as its contribution to the electric equations do depend on the time derivative of the beam generalized measure. The integral $\int()\mathrm{d}s$ is computed with the same gauss quadrature scheme used for the evaluation of the beam stiffness matrix. The assembled residual contribution is equal to Eq. (10.3) with sign changed.

Chapter 11

Shell Element

Authors: Marco Morandini and Riccardo Vescovini

11.1 Variational principle

The formulation refers to the modified Hu-Washizu variational functional. The linearization of the functional is written as:

$$\delta W + \Delta\delta W = 0 \tag{11.1}$$

with:

$$\delta W = \int_A \left(\delta\boldsymbol{\epsilon}^T\boldsymbol{\sigma} + \delta\hat{\boldsymbol{\epsilon}}^T\boldsymbol{\sigma}\right) \mathrm{d}A \tag{11.2}$$

with

$$\boldsymbol{\sigma} = \boldsymbol{\sigma}\left(\boldsymbol{\epsilon} + \hat{\boldsymbol{\epsilon}}\right) \tag{11.3}$$

A linear (visco)elastic stress-strain relationship is considered,

$$\boldsymbol{\sigma} = \boldsymbol{C}\left(\boldsymbol{\epsilon} + \hat{\boldsymbol{\epsilon}}\right) + \boldsymbol{E}\left(\dot{\boldsymbol{\epsilon}} + \dot{\hat{\boldsymbol{\epsilon}}}\right) \tag{11.4}$$

FIXME: $\dot{\hat{\epsilon}}$? Direi di no! and:

$$\Delta\delta W = \int_A \left(\delta\boldsymbol{\epsilon}^T\boldsymbol{C}\left(\Delta\boldsymbol{\epsilon} + \Delta\hat{\boldsymbol{\epsilon}}\right) + \delta\hat{\boldsymbol{\epsilon}}^T\boldsymbol{C}\left(\Delta\boldsymbol{\epsilon} + \Delta\hat{\boldsymbol{\epsilon}}\right) + \Delta\delta\boldsymbol{\epsilon}^T\boldsymbol{\sigma}\right) \mathrm{d}A \tag{11.5}$$

where:

- $\boldsymbol{C}$ and $\boldsymbol{E}$ are the linear viscoelastic constitutive law matrices (integrated along the shell thickness)
- $\boldsymbol{\epsilon}$ is the vector of the compatible strains (resulting from the strain-displacement relations)
- $\hat{\boldsymbol{\epsilon}}$ is the vector of the enhancing strains (EAS)
- $\boldsymbol{\sigma}$ is the vector of forces and moments per unit length

The enhancing strains $\hat{\boldsymbol{\epsilon}}$ are interpolated within the element.
The compatible strains $\boldsymbol{\epsilon}$ are defined as:

$$\underset{12\times1}{\boldsymbol{\epsilon}} = \left\{ \begin{array}{c} \tilde{\boldsymbol{\epsilon}}_1 \\ \tilde{\boldsymbol{\epsilon}}_2 \\ \tilde{\boldsymbol{\kappa}}_1 \\ \tilde{\boldsymbol{\kappa}}_2 \end{array} \right\} \tag{11.6}$$

where:

$$\tilde{\boldsymbol{\epsilon}}_k = \boldsymbol{T}^T \boldsymbol{y}_{,k} - \boldsymbol{e}_k \tag{11.7}$$

where the comma followed by the index represents the derivation with respect to the k-th arc-length coordinate.
$\boldsymbol{T}$ is the orientation and $\boldsymbol{y}$ is the position vector both in the deformed configuration, and $\boldsymbol{e}_k = \{e_{1k}, e_{2k}, e_{3k}\}$, with $e_{ik} = \delta_{ik}$.

$$\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{T}^T \boldsymbol{\kappa}_k - \boldsymbol{T}_0^T \boldsymbol{\kappa}_k^0 \tag{11.8}$$

with:

$$\boldsymbol{\kappa}_k \times = \boldsymbol{T}_{,k} \boldsymbol{T}^T \tag{11.9}$$

11.1.1 Strain Rate

The compatible strain derivatives $\dot{\boldsymbol{\epsilon}}$ are defined as:

$$\underset{12\times1}{\dot{\boldsymbol{\epsilon}}} = \left\{ \begin{array}{c} \dot{\tilde{\boldsymbol{\epsilon}}}_1 \\ \dot{\tilde{\boldsymbol{\epsilon}}}_2 \\ \dot{\tilde{\boldsymbol{\kappa}}}_1 \\ \dot{\tilde{\boldsymbol{\kappa}}}_2 \end{array} \right\} \tag{11.10}$$

where:

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\epsilon}}_k = \dot{\boldsymbol{T}}^T \boldsymbol{y}_{,k} + \boldsymbol{T}^T \dot{\boldsymbol{y}}_{,k} = -\boldsymbol{T}^T \boldsymbol{\omega} \times \boldsymbol{y}_{,k} + \boldsymbol{T}^T \dot{\boldsymbol{y}}_{,k} \tag{11.11}$$

and

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\kappa}}_k = \dot{\boldsymbol{T}}^T \boldsymbol{\kappa}_k + \boldsymbol{T}^T \dot{\boldsymbol{\kappa}}_k = -\boldsymbol{T}^T \boldsymbol{\omega} \times \boldsymbol{\kappa}_k + \boldsymbol{T}^T \dot{\boldsymbol{\kappa}}_k. \tag{11.12}$$

Since

$$\frac{\mathrm{d}}{\mathrm{d}t}(\boldsymbol{T}_{,k}) = \frac{\mathrm{d}}{\mathrm{d}t}(\boldsymbol{\kappa}_k \times \boldsymbol{T}) = \dot{\boldsymbol{\kappa}}_k \times \boldsymbol{T} + \boldsymbol{\kappa}_k \times \boldsymbol{\omega} \times \boldsymbol{T} \tag{11.13}$$

$$(\dot{\boldsymbol{T}})_{,k} = (\boldsymbol{\omega} \times \boldsymbol{T})_{,k} = \boldsymbol{\omega}_{,k} \times \boldsymbol{T} + \boldsymbol{\omega} \times \boldsymbol{\kappa}_k \times \boldsymbol{T} \tag{11.14}$$

then

$$\dot{\boldsymbol{\kappa}}_k \times + \boldsymbol{\kappa}_k \times \boldsymbol{\omega} \times = \boldsymbol{\omega}_{,k} \times + \boldsymbol{\omega} \times \boldsymbol{\kappa}_k \times \tag{11.15}$$

i.e.

$$\dot{\boldsymbol{\kappa}}_k = \boldsymbol{\omega}_{,k} + \boldsymbol{\omega} \times \boldsymbol{\kappa}_k \tag{11.16}$$

Thus

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{T}^T\boldsymbol{\omega}_{,k} \tag{11.17}$$

The vector $\boldsymbol{\sigma}$ is:

$$\boldsymbol{\sigma} = \left\{ \begin{array}{c} \boldsymbol{n}_1 \\ \boldsymbol{n}_2 \\ \boldsymbol{m}_1 \\ \boldsymbol{m}_2 \end{array} \right\} \tag{11.18}$$

11.2 Finite element discretization and notation

The shell elements has four nodes, numbered counterclockwise starting from the upper right node, as shown in Figure 11.1. In the natural domain, the coordinate system is identified by the coordinates ξ_1

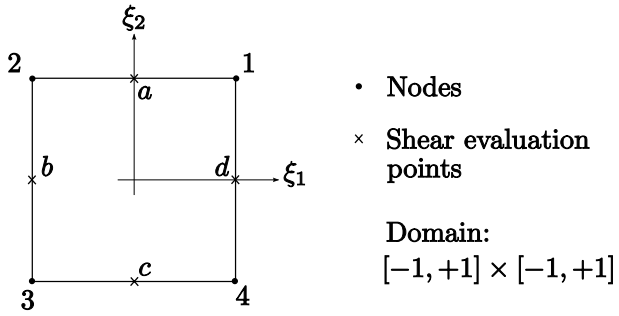


Figure 11.1: Shell finite element

and ξ_2, both varying in the range $[-1, 1]$.
In the following, the notation

$$\boldsymbol{\xi} = (\xi_1, \xi_2) \tag{11.19}$$

will be used. Four points are defined at the element's mid-sides. They are used in the context of the ANS approach. In particular, they are denoted by the set of coordinates:

$$\begin{array}{l} \boldsymbol{\xi}_a = (\xi_{1a}, \xi_{2a}) \\ \boldsymbol{\xi}_b = (\xi_{1b}, \xi_{2b}) \\ \boldsymbol{\xi}_c = (\xi_{1c}, \xi_{2c}) \\ \boldsymbol{\xi}_d = (\xi_{1d}, \xi_{2d}) \end{array} \tag{11.20}$$

The following convention is adopted:

- the subscript n denotes a nodal variable
- $\boldsymbol{\xi}_i$ means $\boldsymbol{\xi}$ evaluated in a generic integration point
- $\boldsymbol{\xi}_A$ means $\boldsymbol{\xi}$ evaluated in one of the four shear evaluation points
- $\boldsymbol{\xi}_0$ means $\boldsymbol{\xi}$ evaluated at the origin

According to the numbering of the nodes, the bilinear shape functions defined at element level are:

$$L_1(\boldsymbol{\xi}) = \frac{1}{4}(1+\xi_1)(1+\xi_2) \tag{11.21a}$$

$$L_2(\boldsymbol{\xi}) = \frac{1}{4}(1-\xi_1)(1+\xi_2) \tag{11.21b}$$

$$L_3(\boldsymbol{\xi}) = \frac{1}{4}(1-\xi_1)(1-\xi_2) \tag{11.21c}$$

$$L_4(\boldsymbol{\xi}) = \frac{1}{4}(1+\xi_1)(1-\xi_2) \tag{11.21d}$$

The degrees of freedom associated with each element are 24 nodal position and orientation parameter components, collected in vector $\boldsymbol{q}$:

$$\underset{24\times 1}{\delta\boldsymbol{q}} = \left\{ \begin{array}{c} \delta\boldsymbol{y}_n \\ \boldsymbol{\varphi}_{\delta n} \end{array} \right\} = \left\{ \begin{array}{c} \delta\boldsymbol{y}_1 \\ \boldsymbol{\varphi}_{\delta 1} \\ \delta\boldsymbol{y}_2 \\ \boldsymbol{\varphi}_{\delta 2} \\ \delta\boldsymbol{y}_3 \\ \boldsymbol{\varphi}_{\delta 3} \\ \delta\boldsymbol{y}_4 \\ \boldsymbol{\varphi}_{\delta 4} \end{array} \right\} \qquad \underset{24\times 1}{\Delta\boldsymbol{q}} = \left\{ \begin{array}{c} \delta\boldsymbol{y}_n \\ \boldsymbol{\varphi}_{\Delta n} \end{array} \right\} = \left\{ \begin{array}{c} \Delta\boldsymbol{y}_1 \\ \boldsymbol{\varphi}_{\Delta 1} \\ \Delta\boldsymbol{y}_2 \\ \boldsymbol{\varphi}_{\Delta 2} \\ \Delta\boldsymbol{y}_3 \\ \boldsymbol{\varphi}_{\Delta 3} \\ \Delta\boldsymbol{y}_4 \\ \boldsymbol{\varphi}_{\Delta 4} \end{array} \right\} \tag{11.22}$$

and 7 internal degrees of freedom related to the assumed strain (EAS) and collected in vector $\boldsymbol{\beta}$.
The total number of degrees of freedom is 31.

11.3 Linearization

The virtual variation of the compatible strains $\boldsymbol{\epsilon}$ is

$$\delta\boldsymbol{\epsilon} = \left\{ \begin{array}{c} \delta\tilde{\boldsymbol{\epsilon}}_1 \\ \delta\tilde{\boldsymbol{\epsilon}}_2 \\ \delta\tilde{\boldsymbol{\kappa}}_1 \\ \delta\tilde{\boldsymbol{\kappa}}_2 \end{array} \right\} \tag{11.23}$$

In particular, the virtual variations of the linear deformation $\tilde{\boldsymbol{\epsilon}}_k$ is:

$$\delta\tilde{\boldsymbol{\epsilon}}_k = \delta\left(\boldsymbol{T}^T\boldsymbol{y}_{,k}\right) = \sum_{i=1}^{n} \boldsymbol{T}^T\boldsymbol{y}_{,k} \times \boldsymbol{\Phi}_n L_n \boldsymbol{\varphi}_{\delta n} + \sum_{i=1}^{n} \boldsymbol{T}^T L_{n,k}\delta\boldsymbol{y}_n \tag{11.24}$$

where:

$$\boldsymbol{\Phi}_n = \overline{\boldsymbol{T}}\tilde{\boldsymbol{\Gamma}}\tilde{\boldsymbol{\Gamma}}_n^{-1}\overline{\boldsymbol{T}}^T \tag{11.25}$$

The virtual variations of the curvatures $\tilde{\boldsymbol{\kappa}}_k$ is:

$$\delta\tilde{\boldsymbol{\kappa}}_k = \delta\left(\boldsymbol{T}^T\boldsymbol{\kappa}_k\right) = \sum_{i=1}^{n} \boldsymbol{T}^T\boldsymbol{\kappa}_k \times \boldsymbol{\Phi}_n L_n \boldsymbol{\varphi}_{\delta n} + \sum_{i=1}^{n} \boldsymbol{T}^T \boldsymbol{K}_{kn}\boldsymbol{\varphi}_{\delta n} \tag{11.26}$$

where:

$$\boldsymbol{K}_{kn} = \overline{\boldsymbol{T}}\mathcal{L}\left(\tilde{\boldsymbol{\varphi}}, \tilde{\boldsymbol{\varphi}}_{,k}\right)\tilde{\boldsymbol{\Gamma}}_n^{-1}\overline{T}^T L_n + \boldsymbol{\Phi}_n L_{n,k} \tag{11.27}$$

the term $L_{n,k}$ is the derivative of the n-th shape function with respect to the k-th arc-length coordinate. The last term of Eq. 11.5 requires the evaluation of the terms:

$$\begin{aligned}\boldsymbol{n}_k \cdot \Delta\delta\tilde{\boldsymbol{\epsilon}}_k = \boldsymbol{n}_k \cdot \Delta\delta\left(\boldsymbol{T}^T\boldsymbol{y}_{,k}\right) = &\sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n}\boldsymbol{\Phi}_n^T L_n \boldsymbol{y}_{,k} \times (\boldsymbol{T}\boldsymbol{n}_k) \times \boldsymbol{\Phi}_m L_m \boldsymbol{\varphi}_{\Delta n} + \\ &+ \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n}\boldsymbol{\Phi}_n^T L_n (\boldsymbol{T}\boldsymbol{n}_k) \times L_{m,k}\Delta\boldsymbol{y}_n + \\ &- \sum_{m,n=1}^{4} \delta\boldsymbol{y}_n L_{n,k} (\boldsymbol{T}\boldsymbol{n}_k) \times \boldsymbol{\Phi}_m L_m \boldsymbol{\varphi}_{\Delta m}\end{aligned} \tag{11.28}$$

$$\begin{aligned}\boldsymbol{m}_k \cdot \Delta\delta\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{m}_k \cdot \Delta\delta\left(\boldsymbol{T}^T\boldsymbol{\kappa}_k\right) = &\sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} L_n \boldsymbol{\Phi}_n^T \boldsymbol{\kappa}_k \times (\boldsymbol{T}\boldsymbol{m}_k) \times \boldsymbol{\Phi}_{\boldsymbol{m}} L_m \boldsymbol{\varphi}_{\Delta m} + \\ &+ \sum_{m,n=1}^{4} \boldsymbol{\varphi}_{\delta n} L_n \boldsymbol{\Phi}_n^T (\boldsymbol{T}\boldsymbol{m}_k) \times \boldsymbol{\Phi}_m L_{m,k} \boldsymbol{\varphi}_{\Delta m}\end{aligned} \tag{11.29}$$

11.4 Structural Damping

Consistently formulated structural damping requires to express the time derivatives of strain and curvature. A linear contribution to internal force and moment fluxes is considered,

$$\boldsymbol{\sigma} \mathrel{+}= \boldsymbol{E}\dot{\boldsymbol{\epsilon}} \tag{11.30}$$

The discretized strain rate is

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\epsilon}}_k = \boldsymbol{T}^T\boldsymbol{y}_{,k} \times \sum_{i=1}^{n} \boldsymbol{\Phi}_i L_i \boldsymbol{\omega}_i + \boldsymbol{T}^T \sum_{i=1}^{n} L_{n,k}\dot{\boldsymbol{y}}_i \tag{11.31}$$

The discretized curvature rate is

$$\frac{\mathrm{d}}{\mathrm{d}t}\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{T}^T \sum_{i=1}^{n} L_{n,k}\boldsymbol{\omega}_i \tag{11.32}$$

11.5 Implementation

Having shown the variational principle and the linearization of strains and curvatures, it is then possible to develop the procedure to derive the Jacobian matrix and the residual.

11.5.1 Orientation interpolation

In the initial configuration it is built the matrix:

$$\boldsymbol{iTa}_n = \boldsymbol{R}_n^T \left[\boldsymbol{t}_{1n}\boldsymbol{t}_{2n}\boldsymbol{t}_{3n}\right] \tag{11.33}$$

with $\boldsymbol{R}_n$ node orientation, and $\boldsymbol{t}_{in}$ vectors tangent to the element surface.
So:

$$\boldsymbol{T}_n = \boldsymbol{R}_n \boldsymbol{iTa}_n \tag{11.34}$$

It is then calculated:

$$\boldsymbol{T}_{\text{avg}} = \frac{1}{4}\sum_{n=1}^{4}\boldsymbol{T}_n \tag{11.35}$$

which is in general a not orthogonal matrix.
An orthogonal matrix can be obtained by applying:

$$\overline{\boldsymbol{T}} = \texttt{Rot}\left(\texttt{VecRot}\left(\boldsymbol{T}_{\text{avg}}\right)\right) \tag{11.36}$$

which is then used to calculate the nodal rotation:

$$\tilde{\boldsymbol{R}}_n = \overline{\boldsymbol{T}}^T\boldsymbol{T}_n \tag{11.37}$$

and:

$$\tilde{\boldsymbol{\varphi}}_n = \texttt{VecRot}\left(\tilde{\boldsymbol{R}}_n\right) \tag{11.38}$$

The nodal values of $\tilde{\boldsymbol{\varphi}}_n$ are interpolated by means of the shape functions:

$$\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_i\right) = \sum_{i=1}^{4} L_n\left(\boldsymbol{\xi}_i\right)\tilde{\boldsymbol{\varphi}}_n \tag{11.39}$$

from which is obtained the rotation matrix at the integration point:

$$\tilde{\boldsymbol{R}}\left(\boldsymbol{\xi}_i\right) = \texttt{Rot}\left(\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_i\right)\right) \tag{11.40}$$

and finally the orientation at the integration point:

$$\boldsymbol{T}\left(\boldsymbol{\xi}_i\right) = \overline{\boldsymbol{T}}\tilde{\boldsymbol{R}}\left(\boldsymbol{\xi}_i\right) \tag{11.41}$$

The virtual variation of $\boldsymbol{\varphi}$ at the integration point is related to the nodal values by:

$$\boldsymbol{\varphi}_\delta\left(\boldsymbol{\xi}_i\right) = \sum_{n=1}^{4}\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)L_n\left(\boldsymbol{\xi}_i\right)\boldsymbol{\varphi}_{\delta n} \tag{11.42}$$

with:

$$\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right) = \overline{\boldsymbol{T}}\tilde{\boldsymbol{\Gamma}}\left(\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_i\right)\right)\tilde{\boldsymbol{\Gamma}}^{-1}\left(\tilde{\boldsymbol{\varphi}}_n\right)\overline{\boldsymbol{T}}^T \tag{11.43}$$

Similarly the virtual variation of $\boldsymbol{\varphi}$ can be obtained at the shear evaluation points as:

$$\boldsymbol{\varphi}_\delta\left(\boldsymbol{\xi}_A\right) = \sum_{n=1}^{4}\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_A\right)L_n\left(\boldsymbol{\xi}_A\right)\boldsymbol{\varphi}_{\delta n} \tag{11.44}$$

11.5.2 Position interpolation

The nodal positions are so interpolated as:

$$\boldsymbol{y} = \sum_{n=1}^{4} L_n\boldsymbol{y}_n \tag{11.45}$$

The derivatives with respect to the generic coordinate ξ_k at the integration points is:

$$\frac{\partial \boldsymbol{x}(\boldsymbol{\xi}_i)}{\partial \xi_k} = \sum_{n=1}^{4} \frac{\partial L_n(\boldsymbol{\xi}_i)}{\partial \xi_k} \boldsymbol{x}_n \tag{11.46}$$

It is then possible to build the matrix:

$$\underset{2\times 2}{\boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_i)} = \begin{bmatrix} \underset{1\times 3}{\boldsymbol{t}_1^0(\boldsymbol{\xi}_i)} \underset{3\times 1}{\frac{\partial \boldsymbol{x}(\boldsymbol{\xi}_i)}{\partial \xi_1}} & \boldsymbol{t}_1^0(\boldsymbol{\xi}_i) \frac{\partial \boldsymbol{x}(\boldsymbol{\xi}_i)}{\partial \xi_2} \\ \boldsymbol{t}_2^0(\boldsymbol{\xi}_i) \frac{\partial \boldsymbol{x}(\boldsymbol{\xi}_i)}{\partial \xi_1} & \boldsymbol{t}_2^0(\boldsymbol{\xi}_i) \frac{\partial \boldsymbol{x}(\boldsymbol{\xi}_i)}{\partial \xi_2} \end{bmatrix} \tag{11.47}$$

observing that $\boldsymbol{T}_0(\boldsymbol{\xi}_i) = \left[\boldsymbol{t}_1^0(\boldsymbol{\xi}_i)\, \boldsymbol{t}_2^0(\boldsymbol{\xi}_i)\, \boldsymbol{t}_3^0(\boldsymbol{\xi}_i)\right]$.
With the same procedure are derived $\boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_0)$ and $\boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_A)$.

$$\underset{4\times 2}{\boldsymbol{L}_{\alpha B}(\boldsymbol{\xi}_i)} = \begin{bmatrix} \frac{\partial L_1(\boldsymbol{\xi}_i)}{\partial \xi_1} & \frac{\partial L_1(\boldsymbol{\xi}_i)}{\partial \xi_2} \\ \frac{\partial L_2(\boldsymbol{\xi}_i)}{\partial \xi_1} & \frac{\partial L_2(\boldsymbol{\xi}_i)}{\partial \xi_2} \\ \frac{\partial L_3(\boldsymbol{\xi}_i)}{\partial \xi_1} & \frac{\partial L_3(\boldsymbol{\xi}_i)}{\partial \xi_2} \\ \frac{\partial L_4(\boldsymbol{\xi}_i)}{\partial \xi_1} & \frac{\partial L_4(\boldsymbol{\xi}_i)}{\partial \xi_2} \end{bmatrix} \tag{11.48}$$

$$\underset{4\times 2}{\boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_i)} = \boldsymbol{L}_{\alpha B}(\boldsymbol{\xi}_i)\, \boldsymbol{S}_{\alpha\beta}^{-1}(\boldsymbol{\xi}_i) \tag{11.49}$$

which is the matrix giving the variation of the shape functions L_n with respect the the arc-length coordinates:

$$\boldsymbol{L}_{\alpha\beta} = \begin{bmatrix} L_{1,1} & L_{1,2} \\ L_{2,1} & L_{2,2} \\ L_{3,1} & L_{3,2} \\ L_{4,1} & L_{4,2} \end{bmatrix} \tag{11.50}$$

In order to perform the integration in the isoparametric domain the area element need to be calculated. In particular, the determinant of the Jacobian of the transformation between the physical and the natural domain has to be calculated. It is:

$$\alpha(\boldsymbol{\xi}_i) = \det \boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_i) \qquad\qquad \alpha(\boldsymbol{\xi}_A) = \det \boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_A) \tag{11.51}$$

11.5.3 Enhancing strains interpolation

The virtual variation and increments of the enhancing strains $\hat{\boldsymbol{\epsilon}}$ are interpolated as:

$$\underset{12\times 1}{\delta\hat{\boldsymbol{\epsilon}}}(\boldsymbol{\xi}_i) = \underset{12\times 7}{\boldsymbol{P}}(\boldsymbol{\xi}_i)\, \underset{7\times 1}{\delta\boldsymbol{\beta}} \qquad\qquad \Delta\hat{\boldsymbol{\epsilon}}(\boldsymbol{\xi}_i) = \boldsymbol{P}(\boldsymbol{\xi}_i)\, \Delta\boldsymbol{\beta} \tag{11.52}$$

where $\boldsymbol{\beta}$ is the vector collecting the the strains parameters, while the expression of the matrix $\boldsymbol{P}$ is derived in the next.
The EAS approach here adopted considers the enhancing of the membrane strains only, i.e. ϵ_{11}, ϵ_{12}, ϵ_{21} and ϵ_{22}. Shear strains and bending strains are not enhanced.
The interpolation is performed in the natural domain adopting the shape functions:

$$\underset{4\times 7}{\boldsymbol{H}(\boldsymbol{\xi}_i)} = \begin{bmatrix} \xi_{1i} & \xi_{1i}\xi_{2i} & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & \xi_{2i} & \xi_{1i}\xi_{2i} & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & \xi_{1i} & \xi_{1i}\xi_{2i} & 0 \\ 0 & 0 & 0 & 0 & 0 & \xi_{1i}\xi_{2i} & \xi_{2i} \end{bmatrix} \tag{11.53}$$

The interpolation is reported in the physical domain with a push-forward operation with the transformation matrix $\boldsymbol{M}_0$, defined as:

$$\underset{4\times4}{\boldsymbol{M}_0} = \begin{bmatrix} s_{1,1}s_{1,1} & s_{1,2}s_{1,2} & s_{1,2}s_{1,1} & s_{1,1}s_{1,2} \\ s_{2,1}s_{2,1} & s_{2,2}s_{2,2} & s_{2,2}s_{2,1} & s_{2,1}s_{2,2} \\ s_{1,1}s_{2,1} & s_{1,2}s_{2,2} & s_{1,1}s_{2,2} & s_{1,2}s_{2,1} \\ s_{1,1}s_{2,1} & s_{1,2}s_{2,2} & s_{1,2}s_{2,1} & s_{1,1}s_{2,2} \end{bmatrix} \tag{11.54}$$

where the generic term $s_{i,k}$ is the element (i,k) of the matrix $\boldsymbol{S}_{\alpha\beta}(\boldsymbol{\xi}_0)$.

$$\underset{12\times7}{\boldsymbol{P}(\boldsymbol{\xi}_i)} = \frac{\alpha(\boldsymbol{\xi}_0)}{\alpha(\boldsymbol{\xi}_i)} \underset{12\times4}{\boldsymbol{\mathcal{P}}} \underset{4\times4}{\boldsymbol{M}_0^{-T}} \underset{4\times7}{\boldsymbol{H}(\boldsymbol{\xi}_i)} \tag{11.55}$$

where $\boldsymbol{\mathcal{P}}$ is a permutation matrix defined as:

$$\underset{12\times4}{\boldsymbol{\mathcal{P}}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \tag{11.56}$$

which has the places the enhanced strains in the corresponding positions of the global vector of membrane and bending strains $\boldsymbol{\epsilon}$.

11.5.4 Compatible strains interpolation

The virtual variations of the linear deformation $\tilde{\boldsymbol{\epsilon}}_k$ at the i-th integration point is obtained from Eq. 11.24:

$$\begin{aligned} \delta\tilde{\boldsymbol{\epsilon}}_k(\boldsymbol{\xi}_i) &= \delta\left(\boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{y}_{,k}(\boldsymbol{\xi}_i)\right) = \\ &\sum_{i=1}^{n} \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{y}_{,k}(\boldsymbol{\xi}_i) \times \boldsymbol{\Phi}_n(\boldsymbol{\xi}_i) L_n(\boldsymbol{\xi}_i) \boldsymbol{\varphi}_{n\delta} + \sum_{i=1}^{n} \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_i)(n,k)(\boldsymbol{\xi}_i)\delta\boldsymbol{y}_n \end{aligned} \tag{11.57}$$

where $\boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_i)(n,k)$ denotes the element (n,k) of the matrix $\boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_i)$.
The virtual variation of the curvatures $\tilde{\boldsymbol{\kappa}}_k$ at the i-th integration point is derived from Eq. 11.26:

$$\begin{aligned} \delta\tilde{\boldsymbol{\kappa}}_k(\boldsymbol{\xi}_i) &= \delta\left(\boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{\kappa}_k(\boldsymbol{\xi}_i)\right) = \\ &\sum_{i=1}^{n} \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{\kappa}_k(\boldsymbol{\xi}_i) \times \boldsymbol{\Phi}_n(\boldsymbol{\xi}_i) L_n(\boldsymbol{\xi}_i) \boldsymbol{\varphi}_{n\delta} + \sum_{i=1}^{n} \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{K}_{kn}(\boldsymbol{\xi}_i) \boldsymbol{\varphi}_{n\delta} \end{aligned} \tag{11.58}$$

where:

$$\boldsymbol{\Phi}_n(\boldsymbol{\xi}_i) = \overline{\boldsymbol{T}}\tilde{\boldsymbol{\Gamma}}(\tilde{\boldsymbol{\varphi}}(\boldsymbol{\xi}_i))\tilde{\boldsymbol{\Gamma}}_n^{-1}\overline{\boldsymbol{T}}^T \tag{11.59}$$

and:

$$\boldsymbol{K}_{kn}\left(\boldsymbol{\xi}_i\right) = \overline{\boldsymbol{T}}\mathcal{L}\left(\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_i\right), \tilde{\boldsymbol{\varphi}}_{,k}\left(\boldsymbol{\xi}_i\right)\right)\tilde{\boldsymbol{\Gamma}}_n^{-1}\overline{T}^T L_n\left(\boldsymbol{\xi}_i\right) + \boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)\boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,k)\left(\boldsymbol{\xi}_i\right) \tag{11.60}$$

The derivative of the the vector $\tilde{\boldsymbol{\varphi}}$ with respect to the k-th arc-length coordinate can be expressed as function of the nodal values as:

$$\tilde{\boldsymbol{\varphi}}_{,k}\left(\boldsymbol{\xi}_i\right) = \sum_{n=1}^{4}\boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,k)\,\boldsymbol{\varphi}_n \tag{11.61}$$

The curvatures are given by:

$$\boldsymbol{\kappa}_k\left(\boldsymbol{\xi}_i\right) = \overline{\boldsymbol{T}}\tilde{\boldsymbol{\Gamma}}\left(\tilde{\boldsymbol{\varphi}}\left(\boldsymbol{\xi}_i\right)\right)\tilde{\boldsymbol{\varphi}}_{,k}\left(\boldsymbol{\xi}_i\right) \tag{11.62}$$

and the derivative of the position vector is:

$$\boldsymbol{y}_{,k}\left(\boldsymbol{\xi}_i\right) = \sum_{i=1}^{4}\boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,k)\,\boldsymbol{y}_n \tag{11.63}$$

The compatible strains can so be expressed as function of the nodal variables $\boldsymbol{q}$ by considering Eqs. 11.57 and 11.58:

$$\delta\boldsymbol{\epsilon} = \overline{\boldsymbol{B}}\delta\boldsymbol{q} \tag{11.64}$$

with:

$$\underset{12\times 24}{\overline{\boldsymbol{B}}\left(\boldsymbol{\xi}_i\right)} = \left[\begin{array}{cccc}\overline{\boldsymbol{B}}_1\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{B}}_2\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{B}}_3\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{B}}_4\left(\boldsymbol{\xi}_i\right)\end{array}\right] \tag{11.65}$$

and:

$$\underset{12\times 6}{\overline{\boldsymbol{B}}_n\left(\boldsymbol{\xi}_i\right)} = \left[\begin{array}{cc}\boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,1) & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{y}_{,1}\left(\boldsymbol{\xi}_i\right)\times\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)L_n\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,2) & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{y}_{,2}\left(\boldsymbol{\xi}_i\right)\times\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)L_n\left(\boldsymbol{\xi}_i\right) \\ 0 & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{\kappa}_1\left(\boldsymbol{\xi}_i\right)\times\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)L_n\left(\boldsymbol{\xi}_i\right) + \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{K}_{1n}\left(\boldsymbol{\xi}_i\right) \\ 0 & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{\kappa}_2\left(\boldsymbol{\xi}_i\right)\times\boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right)L_n\left(\boldsymbol{\xi}_i\right) + \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{K}_{2n}\left(\boldsymbol{\xi}_i\right)\end{array}\right] \tag{11.66}$$

11.5.5 ANS

The ANS technique is applied to prevent shear locking. Here the ANS is applied to shear strains only, i.e. ϵ_1 and ϵ_2 The approach consists in interpolating the shear strains in the mid-sides of the element in the natural domain. Such interpolated strains are then used to derive the shear strains at the integration points.
The use of the ANS technique leads a re-definition of:

- the two rows of the $\overline{\boldsymbol{B}}$ matrix relative to shear strains
- the shear strains

The compatible strains are:

$$\tilde{\boldsymbol{\epsilon}}_1 = \left\{\begin{array}{c}\epsilon_{11}\\ \epsilon_{12}\\ \epsilon_1\end{array}\right\} \qquad\qquad \tilde{\boldsymbol{\epsilon}}_2 = \left\{\begin{array}{c}\epsilon_{21}\\ \epsilon_{22}\\ \epsilon_2\end{array}\right\} \tag{11.67}$$

At first, the compatible strains are evaluated at the shear evaluation points of Figure 11.1. This is done referring to Eq. 11.7

$$\tilde{\boldsymbol{\epsilon}}_k(\boldsymbol{\xi}_A) = \boldsymbol{T}(\boldsymbol{\xi}_A)^T \boldsymbol{y}_{,k}(\boldsymbol{\xi}_A) - \boldsymbol{e}_k \tag{11.68}$$

The matrix $\overline{\boldsymbol{B}}$ of Eq. 11.65 is built also in the shear evaluation points for the membrane strains only, and is indicated as $\overline{\overline{\boldsymbol{B}}}$

$$\underset{6\times 24}{\overline{\overline{\boldsymbol{B}}}}(\boldsymbol{\xi}_A) = \left[\begin{array}{cccc} \overline{\overline{\boldsymbol{B}}}_1(\boldsymbol{\xi}_A) & \overline{\overline{\boldsymbol{B}}}_2(\boldsymbol{\xi}_A) & \overline{\overline{\boldsymbol{B}}}_3(\boldsymbol{\xi}_A) & \overline{\overline{\boldsymbol{B}}}_4(\boldsymbol{\xi}_A) \end{array} \right] \tag{11.69}$$

with:

$$\underset{6\times 6}{\overline{\overline{\boldsymbol{B}}}_n}(\boldsymbol{\xi}_A) = \left[\begin{array}{cc} \boldsymbol{T}(\boldsymbol{\xi}_A)^T \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_A)(n,1) & \boldsymbol{T}(\boldsymbol{\xi}_A)^T \boldsymbol{y}_{,1}(\boldsymbol{\xi}_A) \times \boldsymbol{\Phi}_n(\boldsymbol{\xi}_A) L_n(\boldsymbol{\xi}_A) \\ \boldsymbol{T}(\boldsymbol{\xi}_A)^T \boldsymbol{L}_{\alpha\beta}(\boldsymbol{\xi}_A)(n,2) & \boldsymbol{T}(\boldsymbol{\xi}_A)^T \boldsymbol{y}_{,2}(\boldsymbol{\xi}_A) \times \boldsymbol{\Phi}_n(\boldsymbol{\xi}_A) L_n(\boldsymbol{\xi}_A) \end{array} \right] \tag{11.70}$$

The rows relative to the shear strains ϵ_1 and ϵ_2 are collected in:

$$\underset{4\times 24}{\overline{\overline{\boldsymbol{B3}}}}(\boldsymbol{\xi}_A) = \left[\begin{array}{c} \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_a)(3,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_b)(3,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_c)(3,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_d)(3,:) \end{array} \right] \qquad \underset{4\times 24}{\overline{\overline{\boldsymbol{B6}}}}(\boldsymbol{\xi}_A) = \left[\begin{array}{c} \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_a)(6,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_b)(6,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_c)(6,:) \\ \overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_d)(6,:) \end{array} \right] \tag{11.71}$$

where $\overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_a)(k,:)$ is used to denote all the element of the k-th row of $\overline{\overline{\boldsymbol{B}}}(\boldsymbol{\xi}_a)$.
The matrices $\overline{\overline{\boldsymbol{B3}}}$ and $\overline{\overline{\boldsymbol{B6}}}$ are interpolated to obtain the values at the integration points.

$$\overline{\overline{\boldsymbol{B3}}}(\boldsymbol{\xi}_i) = \frac{1}{2} \left[\begin{array}{cccc} 1+\xi_{2i} & 0 & 1-\xi_{2i} & 0 \end{array} \right] \overline{\overline{\boldsymbol{B3}}}(\boldsymbol{\xi}_A) \tag{11.72}$$

$$\overline{\overline{\boldsymbol{B6}}}(\boldsymbol{\xi}_i) = \frac{1}{2} \left[\begin{array}{cccc} 1+\xi_{1i} & 0 & 1-\xi_{1i} & 0 \end{array} \right] \overline{\overline{\boldsymbol{B6}}}(\boldsymbol{\xi}_A) \tag{11.73}$$

The resulting matrices $\overline{\overline{\boldsymbol{B3}}}$ and $\overline{\overline{\boldsymbol{B6}}}$ replace the corresponding rows of the matrix $\overline{\boldsymbol{B}}$ of Eq. 11.65.
The second step in the application of the ANS technique is the interpolation of the shear strains:

$$\epsilon_1(\boldsymbol{\xi}_i) = \frac{1}{2}(1+\xi_{2i})\,\epsilon_1(\boldsymbol{\xi}_a) + \frac{1}{2}(1-\xi_{2i})\,\epsilon_1(\boldsymbol{\xi}_c) \tag{11.74a}$$

$$\epsilon_2(\boldsymbol{\xi}_i) = \frac{1}{2}(1-\xi_{1i})\,\epsilon_2(\boldsymbol{\xi}_b) + \frac{1}{2}(1+\xi_{1i})\,\epsilon_2(\boldsymbol{\xi}_d) \tag{11.74b}$$

The so interpolated strains ϵ_1 and ϵ_2 are then inserted into the proper position in the vector $\boldsymbol{\epsilon}$ respectively.

11.5.6 Forces

Strains and curvatures can be calculated as:

$$\tilde{\boldsymbol{\epsilon}}_k(\boldsymbol{\xi}_i) = \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{y}_{,k}(\boldsymbol{\xi}_i) - \boldsymbol{e}_k \tag{11.75}$$

$$\tilde{\boldsymbol{\kappa}}_k = \boldsymbol{T}(\boldsymbol{\xi}_i)^T \boldsymbol{\kappa}_k(\boldsymbol{\xi}_i) - \boldsymbol{T}_0^T(\boldsymbol{\xi}_i)\,\boldsymbol{\kappa}_k^0(\boldsymbol{\xi}_i) \tag{11.76}$$

where $\boldsymbol{T}_0$ and $\boldsymbol{\kappa}_k^0$ are calculated at the first step.
The total strain is the sum of the compatible and the enhancing strains:

$$\boldsymbol{\epsilon}_t(\boldsymbol{\xi}_i) = \boldsymbol{\epsilon}(\boldsymbol{\xi}_i) + \hat{\boldsymbol{\epsilon}}(\boldsymbol{\xi}_i) \tag{11.77}$$

The resulting forces are easily computed by means of the constitutive law:

$$\boldsymbol{\sigma}\left(\boldsymbol{\xi}_i\right) = \boldsymbol{C}\left(\boldsymbol{\xi}_i\right)\boldsymbol{\epsilon}_t\left(\boldsymbol{\xi}_i\right) \tag{11.78}$$

which is:

$$\boldsymbol{\sigma}\left(\boldsymbol{\xi}_i\right) = \left\{ \begin{array}{c} \boldsymbol{n}_1\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{n}_2\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{m}_1\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{m}_2\left(\boldsymbol{\xi}_i\right) \end{array} \right\} \tag{11.79}$$

11.5.7 Jacobian matrix

The second variation of the variational principle of Eq. 11.5 gives the Jacobian matrix. In particular, the finite element discretization is here presented for the five different terms of Eq. 11.5.
The first term is:

$$\begin{aligned} \int_A \delta\boldsymbol{\epsilon}^T \boldsymbol{C} \Delta\boldsymbol{\epsilon} \mathrm{d}A = & \\ & = \delta\boldsymbol{q}^T \sum_{i=1}^{4} \overline{\boldsymbol{B}}\left(\boldsymbol{\xi}_i\right)^T \boldsymbol{C}\left(\boldsymbol{\xi}_i\right) \overline{\boldsymbol{B}}\left(\boldsymbol{\xi}_i\right) \alpha\left(\boldsymbol{\xi}_i\right) w_i \Delta\boldsymbol{q} \\ & = \delta\boldsymbol{q}^T \boldsymbol{K}_m \Delta\boldsymbol{q} \end{aligned} \tag{11.80}$$

The second term is:

$$\begin{aligned} \int_A \delta\hat{\boldsymbol{\epsilon}}^T \boldsymbol{C} \Delta\boldsymbol{\epsilon} \mathrm{d}A = & \\ & = \delta\boldsymbol{\beta}^T \sum_{i=1}^{4} \boldsymbol{P}\left(\boldsymbol{\xi}_i\right)^T \boldsymbol{C}\left(\boldsymbol{\xi}_i\right) \overline{\boldsymbol{B}}\left(\boldsymbol{\xi}_i\right) \alpha\left(\boldsymbol{\xi}_i\right) w_i \Delta\boldsymbol{q} \\ & = \delta\boldsymbol{\beta}^T \boldsymbol{K}_{\beta q} \Delta\boldsymbol{q} \end{aligned} \tag{11.81}$$

The third term is:

$$\begin{aligned} \int_A \delta\boldsymbol{\epsilon}^T \boldsymbol{C} \Delta\hat{\boldsymbol{\epsilon}} \mathrm{d}A = & \\ & = \delta\boldsymbol{q}^T \boldsymbol{K}_{\beta q}^T \Delta\boldsymbol{\beta} \end{aligned} \tag{11.82}$$

The fourth term is:

$$\begin{aligned} \int_A \delta\hat{\boldsymbol{\epsilon}}^T \boldsymbol{C} \Delta\hat{\boldsymbol{\epsilon}} \mathrm{d}A = & \\ & = \delta\boldsymbol{\beta}^T \sum_{i=1}^{4} \boldsymbol{P}\left(\boldsymbol{\xi}_i\right)^T \boldsymbol{C}\left(\boldsymbol{\xi}_i\right) \boldsymbol{P}\left(\boldsymbol{\xi}_i\right) \alpha\left(\boldsymbol{\xi}_i\right) w_i \Delta\boldsymbol{\beta} \\ & = \delta\boldsymbol{\beta}^T \boldsymbol{K}_{\beta\beta} \Delta\boldsymbol{\beta} \end{aligned} \tag{11.83}$$

The fifth term is:

$$\begin{aligned} \int_A \Delta\delta\boldsymbol{\epsilon}^T \boldsymbol{\sigma} \mathrm{d}A = & \\ & = \delta\boldsymbol{q}^T \sum_{i=1}^{4} \overline{\boldsymbol{D}}\left(\boldsymbol{\xi}_i\right)^T \boldsymbol{G}\left(\boldsymbol{\xi}_i\right) \overline{\boldsymbol{D}}\left(\boldsymbol{\xi}_i\right) \alpha\left(\boldsymbol{\xi}_i\right) w_i \Delta\boldsymbol{q} \\ & = \delta\boldsymbol{q}^T \boldsymbol{K}_g \Delta\boldsymbol{q} \end{aligned} \tag{11.84}$$

where this last expression is obtained starting from Eqs. 11.28 and 11.29, and where:

$$\underset{15\times 24}{\overline{\boldsymbol{D}}\left(\boldsymbol{\xi}_i\right)} = \left[\begin{array}{cccc} \overline{\boldsymbol{D}}_1\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{D}}_2\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{D}}_3\left(\boldsymbol{\xi}_i\right) & \overline{\boldsymbol{D}}_4\left(\boldsymbol{\xi}_i\right) \end{array}\right] \tag{11.85}$$

with:

$$\underset{15\times 6}{\overline{\boldsymbol{D}}_n\left(\boldsymbol{\xi}_i\right)} = \left[\begin{array}{cc} \boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,1)\,\boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{L}_{\alpha\beta}\left(\boldsymbol{\xi}_i\right)(n,2)\,\boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{K}_{1n}\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{0} & \boldsymbol{K}_{2n}\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{0} & \boldsymbol{\Phi}_n\left(\boldsymbol{\xi}_i\right) L_n\left(\boldsymbol{\xi}_i\right) \end{array}\right] \tag{11.86}$$

$$\begin{aligned} \boldsymbol{Hh}\left(\boldsymbol{\xi}_i\right) = {} & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_1\left(\boldsymbol{\xi}_i\right)\otimes\boldsymbol{y}_{,1}\left(\boldsymbol{\xi}_i\right) - \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_1\cdot\boldsymbol{y}_{,1}\left(\boldsymbol{\xi}_i\right)\boldsymbol{I} + \\ & + \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_2\left(\boldsymbol{\xi}_i\right)\otimes\boldsymbol{y}_{,2}\left(\boldsymbol{\xi}_i\right) - \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_2\cdot\boldsymbol{y}_{,2}\left(\boldsymbol{\xi}_i\right)\boldsymbol{I} + \\ & + \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_1\left(\boldsymbol{\xi}_i\right)\otimes\boldsymbol{\kappa}_1\left(\boldsymbol{\xi}_i\right) - \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_1\cdot\boldsymbol{\kappa}_1\left(\boldsymbol{\xi}_i\right)\boldsymbol{I} + \\ & + \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_2\left(\boldsymbol{\xi}_i\right)\otimes\boldsymbol{\kappa}_2\left(\boldsymbol{\xi}_i\right) - \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_2\cdot\boldsymbol{\kappa}_2\left(\boldsymbol{\xi}_i\right)\boldsymbol{I} \end{aligned} \tag{11.87}$$

$$\underset{15\times 15}{\boldsymbol{G}\left(\boldsymbol{\xi}_i\right)} = \left[\begin{array}{ccccc} \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_1\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_2\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & -\boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_1\left(\boldsymbol{\xi}_i\right) \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} & \boldsymbol{0} \\ \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_1\left(\boldsymbol{\xi}_i\right) & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{n}_2\left(\boldsymbol{\xi}_i\right) & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_1\left(\boldsymbol{\xi}_i\right) & \boldsymbol{T}\left(\boldsymbol{\xi}_i\right)\boldsymbol{m}_2\left(\boldsymbol{\xi}_i\right) & \boldsymbol{Hh}\left(\boldsymbol{\xi}_i\right) \end{array}\right] \tag{11.88}$$

11.5.8 Residual

The residual comes from the finite element approximation of Eq. 11.2.
The first term is:

$$\begin{aligned} \int_A \delta\boldsymbol{\epsilon}^T\boldsymbol{\sigma}\mathrm{d}A = & \\ & = \delta\boldsymbol{q}^T\sum_{i=1}^{4}\overline{\boldsymbol{B}}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{\sigma}\left(\boldsymbol{\xi}_i\right)\alpha\left(\boldsymbol{\xi}_i\right)w_i \\ & = \delta\boldsymbol{q}^T\boldsymbol{r}_d \end{aligned} \tag{11.89}$$

The second term is:

$$\begin{aligned} \int_A \delta\hat{\boldsymbol{\epsilon}}^T\boldsymbol{\sigma}\mathrm{d}A = & \\ & = \delta\boldsymbol{\beta}^T\sum_{i=1}^{4}\boldsymbol{P}\left(\boldsymbol{\xi}_i\right)^T\boldsymbol{\sigma}\left(\boldsymbol{\xi}_i\right)\alpha\left(\boldsymbol{\xi}_i\right)w_i \\ & = \delta\boldsymbol{\beta}^T\boldsymbol{r}_\beta \end{aligned} \tag{11.90}$$

The resulting governing equations are then:

$$\left(\boldsymbol{K}_m + \boldsymbol{K}_g\right)\Delta\boldsymbol{q} + \boldsymbol{K}_{\beta q}^T\Delta\boldsymbol{\beta} = -\boldsymbol{r}_d \tag{11.91a}$$

$$\boldsymbol{K}_{\beta q}\Delta\boldsymbol{q} + \boldsymbol{K}_{\beta\beta}\Delta\boldsymbol{\beta} = -\boldsymbol{r}_\beta \tag{11.91b}$$

Chapter 12

Solid Element

Author: Reinhard Resch
Solid elements are intended to model general three dimensional structures with complex shapes, subject to large deformations, large strain and nonlinear constitutive laws. Even fully incompressible constitutive laws are supported.

Files. It is implemented in files
`mbdyn/struct/solid.h`
`mbdyn/struct/solid.cc`
`mbdyn/struct/solidshape.h`
`mbdyn/struct/solidshape.cc`
`mbdyn/struct/solidshapetest.cc`
`mbdyn/struct/solidinteg.h`
`mbdyn/struct/solidinteg.cc`
`mbdyn/struct/solidpress.h`
`mbdyn/struct/solidpress.cc`
`mbdyn/struct/solidcsl.h`
`mbdyn/struct/solidcsl.cc`

12.0.1 Kinematics

MBDyn's solid elements are based on the classical displacement based isoparametric Finite Element formulation [11]. For enhancements, required for nearly or fully incompressible constitutive laws, see section 12.0.4.

Interpolation The three dimensional global Cartesian coordinates $\boldsymbol{x}$ and the displacements $\boldsymbol{u} = \boldsymbol{x} - {}^0\boldsymbol{x}$, of a particle inside an element, are interpolated between coordinates $\hat{\boldsymbol{x}}$ and displacements $\hat{\boldsymbol{u}}$ at element

nodes by means of shape functions $\boldsymbol{h} = f(\boldsymbol{r})$ [11], [12].

$$\boldsymbol{u}_i = \sum_{k=1}^{N_n} \hat{\boldsymbol{u}}_{ik}\, \boldsymbol{h}_k \tag{12.1}$$

$$\boldsymbol{x}_i = \sum_{k=1}^{N_n} \hat{\boldsymbol{x}}_{ik}\, \boldsymbol{h}_k \tag{12.2}$$

$$\boldsymbol{u} = \begin{pmatrix} \boldsymbol{u}_1 & \boldsymbol{u}_2 & \boldsymbol{u}_3 \end{pmatrix}^T \tag{12.3}$$

$$\boldsymbol{x} = \begin{pmatrix} \boldsymbol{x}_1 & \boldsymbol{x}_2 & \boldsymbol{x}_3 \end{pmatrix}^T \tag{12.4}$$

$$\boldsymbol{r} = \begin{pmatrix} \boldsymbol{r}_1 & \boldsymbol{r}_2 & \boldsymbol{r}_3 \end{pmatrix}^T \tag{12.5}$$

$$\hat{\boldsymbol{u}} = \begin{pmatrix} \hat{\boldsymbol{u}}_{1,1} & \hat{\boldsymbol{u}}_{1,2} & \dots & \hat{\boldsymbol{u}}_{1,N_n} \\ \hat{\boldsymbol{u}}_{2,1} & \hat{\boldsymbol{u}}_{2,2} & \dots & \hat{\boldsymbol{u}}_{2,N_n} \\ \hat{\boldsymbol{u}}_{3,1} & \hat{\boldsymbol{u}}_{2,2} & \dots & \hat{\boldsymbol{u}}_{3,N_n} \end{pmatrix} \tag{12.6}$$

$$\boldsymbol{h} = \begin{pmatrix} \boldsymbol{h}_1 & \boldsymbol{h}_2 & \dots & \boldsymbol{h}_{N_n} \end{pmatrix}^T \tag{12.7}$$

$\boldsymbol{x} = f(\boldsymbol{r})$ global Cartesian coordinates of a particle inside the deformed body

${}^0\boldsymbol{x} = f(\boldsymbol{r})$ global Cartesian coordinates of a particle inside the undeformed body

$\boldsymbol{u} = \boldsymbol{x} - {}^0\boldsymbol{x}$ deformation of a particle within the body

$\boldsymbol{r}$ curvilinear natural coordinates of a particle within the body

$\boldsymbol{h} = f(\boldsymbol{r})$ shape functions of a particular Finite Element type

N_n number of nodes per element

Shape functions All solid elements in MBDyn are based on templates and are using standard shape functions based on [11], [13] and [14]. In order to implement a new solid element type in MBDyn, it is sufficient to provide a new C++ class which defines it's shape functions $\boldsymbol{h}$, derivatives of the shape functions versus the natural coordinates $\boldsymbol{h}_d = \frac{\partial \boldsymbol{h}}{\partial \boldsymbol{r}}$ and also the integration points $\boldsymbol{r}|_g$ and weights $\alpha|_g$. The following types of elements are currently implemented:

- Hexahedrons with linear and quadratic shape functions [11], [13]
- Pentahedrons with quadratic shape functions [14]
- Tetrahedrons with quadratic shape functions [14]

See also MBDyn's *input-manual* for further information.

Deformation gradient Because MBDyn's solid elements are based on a Total Lagrangian Formulation, the deformation gradient $\boldsymbol{F}$ is evaluated with respect to the undeformed state ${}^0\boldsymbol{x}$. As a consequence, the

Jacobian matrix ${}^0\boldsymbol{J}$ and the gradient operator $\boldsymbol{h}_{0d}$ are constant.

$$ {}^0\boldsymbol{J}_{ij} = \frac{\partial^0 \boldsymbol{x}_j}{\partial \boldsymbol{r}_i} = \sum_{k=1}^{N_n} {}^0\hat{\boldsymbol{x}}_{jk} \underbrace{\frac{\partial \boldsymbol{h}_k}{\partial \boldsymbol{r}_i}}_{\boldsymbol{h}_{d_{ki}}} = \left({}^0\boldsymbol{x}\,\boldsymbol{h}_d\right)^T \tag{12.8} $$

$$ \left\{{}^0\boldsymbol{J}^{-1}\right\}_{ij} = \frac{\partial \boldsymbol{r}_j}{\partial^0 \boldsymbol{x}_i} \tag{12.9} $$

$$ \boldsymbol{F}_{ij} = \frac{\partial \boldsymbol{x}_i}{\partial^0 \boldsymbol{x}_j} = \delta_{ij} + \frac{\partial \boldsymbol{u}_i}{\partial^0 \boldsymbol{x}_j} = \delta_{ij} + \sum_{k=1}^{N_n} \hat{\boldsymbol{u}}_{ik} \underbrace{\frac{\partial \boldsymbol{h}_k}{\partial^0 \boldsymbol{x}_j}}_{\boldsymbol{h}_{0d_{kj}}} \tag{12.10} $$

$$ \dot{\boldsymbol{F}}_{ij} = \sum_{k=1}^{N_n} \dot{\hat{\boldsymbol{u}}}_{ik}\, \boldsymbol{h}_{0d_{kj}} \tag{12.11} $$

$$ \boldsymbol{h}_{0d_{ij}} = \frac{\partial \boldsymbol{h}_i}{\partial^0 \boldsymbol{x}_j} = \sum_{k=1}^{3} \frac{\partial \boldsymbol{h}_i}{\partial \boldsymbol{r}_k} \frac{\partial \boldsymbol{r}_k}{\partial^0 \boldsymbol{x}_j} = \left\{\boldsymbol{h}_d\, {}^0\boldsymbol{J}^{-T}\right\}_{ij} \tag{12.12} $$

$$ \delta_{ij} = \begin{cases} 1 & \text{if} \quad i = j \\ 0 & \text{if} \quad i \neq j \end{cases} \tag{12.13} $$

$\boldsymbol{F}$ deformation gradient

${}^0\boldsymbol{J}$ Jacobian matrix $\det\left({}^0\boldsymbol{J}\right) > 0$

$\boldsymbol{h}_{0d} = \frac{\partial \boldsymbol{h}}{\partial^0 \boldsymbol{x}}$ derivative of shape functions versus global Cartesian coordinates

$\boldsymbol{h}_d = \frac{\partial \boldsymbol{h}}{\partial \boldsymbol{r}}$ derivative of shape functions versus natural coordinates

δ_{ij} Kronecker delta

If elements become excessively distorted It is required that the deformation gradient $\boldsymbol{F}$ and the Jacobian matrix ${}^0\boldsymbol{J}$ are always invertible [11], [12]. For that reason $\det(\boldsymbol{F}) > 0$ will be checked by the solver at every iteration, and $\det\left({}^0\boldsymbol{J}\right) > 0$ will be checked once, when the mesh is loaded. An exception will be thrown by the solver, if any element becomes excessively distorted and those conditions are not valid any more.

Strain tensor and stress tensor In order to derive the expressions for virtual strain energy, the Green-Lagrange strain tensor $\boldsymbol{G}$ and the 2nd Piola-Kirchhoff stress tensor $\boldsymbol{S}$ are used. It is important to note, that the 2nd Piola-Kirchhoff stress tensor is work conjugate with the Green-Lagrange strain tensor [10], [11], [12]. Since MBDyn's solid element is pure displacement based, the stress tensor $\boldsymbol{S}$ is a function of the strain tensor $\boldsymbol{G}$ and optionally it's time derivative $\dot{\boldsymbol{G}}$ and the strain history. In case of viscoelastic constitutive laws, the strain rates $\dot{\boldsymbol{G}}$ are scaled according to equation 12.17 in order to make the effect

of viscous damping independent on the strain [12].

$$\boldsymbol{C}_{ij} = \sum_{k=1}^{3} \boldsymbol{F}_{ki}\,\boldsymbol{F}_{kj} \tag{12.14}$$

$$\boldsymbol{G}_{ij} = \frac{1}{2}\left(\boldsymbol{C}_{ij} - \delta_{ij}\right) = \frac{1}{2}\left(\sum_{k=1}^{3} \boldsymbol{F}_{ki}\,\boldsymbol{F}_{kj} - \delta_{ij}\right) \tag{12.15}$$

$$\dot{\boldsymbol{G}}_{ij} = \frac{1}{2}\left[\sum_{k=1}^{3}\left(\dot{\boldsymbol{F}}_{ki}\,\boldsymbol{F}_{kj} + \boldsymbol{F}_{ki}\,\dot{\boldsymbol{F}}_{kj}\right)\right] \tag{12.16}$$

$$\dot{\boldsymbol{G}}^{\star} = \boldsymbol{C}^{-1}\,\dot{\boldsymbol{G}}\,\boldsymbol{C}^{-1}\,\det\left(\boldsymbol{F}\right) \tag{12.17}$$

$$\boldsymbol{S} = f\left(\boldsymbol{G}, \dot{\boldsymbol{G}}^{\star}\right) \tag{12.18}$$

$\boldsymbol{C}$ Right Cauchy-Green strain tensor

$\boldsymbol{G}$ Green-Lagrange strain tensor

$\dot{\boldsymbol{G}}^{\star}$ scaled Green-Lagrange strain rates

$\boldsymbol{S}$ 2nd Piola-Kirchhoff stress tensor

Constitutive laws The relationship between stress tensor $\boldsymbol{S}$ and strain tensor $\boldsymbol{G}$ is determined by a specific constitutive law. Right now, the following types of constitutive laws are implemented:

- linear elastic generic (isotropic or anisotropic)
- linear Kelvin-Voigt viscoelastic generic (isotropic or anisotropic) [12]
- Hookean linear elastic isotropic
- Hookean linear Kelvin-Voigt viscoelastic isotropic
- linear viscoelastic generalized Maxwell (isotropic or anisotropic) [15]
- nonlinear hyperelastic Neo-Hookean [12]
- nonlinear Kelvin-Voigt viscoelastic Neo-Hookean [12]
- nonlinear hyperelastic Mooney-Rivlin [11]
- bilinear elasto-plastic with isotropic hardening [11]

See MBDyn's *input-manual* for further information about constitutive laws usable for solid elements.

12.0.2 The principle of virtual displacements

The equations of motion for displacement based Finite Element methods can be derived from the principle of virtual displacements [10], [11], [12].

$$\underbrace{\bigcup_{e=1}^{N_e} \int_{{}^0V} {}^0\rho \left[\sum_{i=1}^{3} \delta \boldsymbol{u}_i \left(\ddot{\boldsymbol{u}}_i - \boldsymbol{b}_i \right) \right] d^0V}_{\delta^m W} + \underbrace{\bigcup_{e=1}^{N_e} \int_{{}^0V} \left(\sum_{i=1}^{3} \sum_{j=1}^{3} \delta \boldsymbol{G}_{ij} \, \boldsymbol{S}_{ij} \right) d^0V}_{\delta^i W} = \underbrace{\bigcup_{e=1}^{N_e} \int_A \sum_{i=1}^{3} \delta \boldsymbol{u}_i \, {}^A\boldsymbol{f}_i \, dA}_{\delta^e W} \tag{12.19}$$

${}^0\rho$ Density of the undeformed body

${}^0V$ Volume of the undeformed body

$\boldsymbol{b}$ Body loads due to gravity and rigid body kinematics

${}^A\boldsymbol{f}$ Surface loads due to pressure and surface traction's

${}^mW$ Virtual work of body loads (e.g. inertia terms and gravity loads)

${}^iW$ Internal virtual work (e.g. virtual strain energy)

${}^eW$ External virtual work (e.g. due to surface loads ${}^A\boldsymbol{f}$)

N_e Number of solid elements

$\bigcup$ Summation over all elements

12.0.3 Virtual strain energy

In order to get the expression for the internal force vector at the element nodes ${}^i\hat{\boldsymbol{k}}$, the following equivalence is used:

$$\delta^i W = \bigcup_{e=1}^{N_e} \int_{{}^0V} \left(\sum_{i=1}^{3} \sum_{j=1}^{3} \delta \boldsymbol{G}_{ij} \, \boldsymbol{S}_{ij} \right) d^0V = \bigcup_{e=1}^{N_e} \sum_{k=1}^{3} \sum_{l=1}^{N_n} \delta \hat{\boldsymbol{u}}_{kl} \, {}^i\hat{\boldsymbol{k}}_{kl} \tag{12.20}$$

Virtual perturbation of the strain tensor As a first step, the virtual perturbation of the strain tensor $\delta \boldsymbol{G}$ must be expressed in terms of the vector of virtual nodal displacements $\delta \hat{\boldsymbol{u}}$. For that purpose, the virtual perturbation of equation 12.15 must be derived.

$$\delta \boldsymbol{G}_{ij} = \frac{1}{2} \sum_{k=1}^{3} \left(\delta \boldsymbol{F}_{ki} \, \boldsymbol{F}_{kj} + \boldsymbol{F}_{ki} \, \delta \boldsymbol{F}_{kj} \right) \tag{12.21}$$

Virtual perturbation of the deformation gradient $\delta \boldsymbol{F}$ In the same way, the virtual perturbation of equation 12.10 is derived. Since we are using a Total Lagrangian Formulation, $\boldsymbol{h}_{0d}$ is a constant matrix.

$$\delta \boldsymbol{F}_{ij} = \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_{0d_{kj}} \tag{12.22}$$

Virtual perturbation of the strain tensor expressed by virtual displacements $\delta\hat{\boldsymbol{u}}$ Now equation 12.22 is substituted into equation 12.21.

$$\delta \boldsymbol{G}_{ij} = \frac{1}{2} \sum_{k=1}^{3} \sum_{l=1}^{N_n} \delta\hat{\boldsymbol{u}}_{kl} \left(\boldsymbol{h}_{0d_{li}} \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \boldsymbol{F}_{ki} \right) \tag{12.23}$$

Virtual strain energy expressed by virtual displacements $\delta\hat{\boldsymbol{u}}$ Finally equation 12.23 is substituted into equation 12.20.

$$\delta^i W = \frac{1}{2} \bigcup_{e=1}^{N_e} \int_{{}^0V} \left[\sum_{i=1}^{3} \sum_{j=1}^{3} \sum_{k=1}^{3} \sum_{l=1}^{N_n} \delta\hat{\boldsymbol{u}}_{kl} \left(\boldsymbol{h}_{0d_{li}} \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \boldsymbol{F}_{ki} \right) \boldsymbol{S}_{ij} \right] d^0V \tag{12.24}$$

Internal elastic reactions due to internal stress Because equation 12.24 and equation 12.20 must be valid for arbitrary virtual displacements $\delta\hat{\boldsymbol{u}}$, we can get ${}^i\hat{\boldsymbol{k}}$ just by comparing the coefficients of those two equations.

$${}^i\hat{\boldsymbol{k}}_{kl} = \frac{1}{2} \int_{{}^0V} \left[\sum_{i=1}^{3} \sum_{j=1}^{3} \left(\boldsymbol{h}_{0d_{li}} \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \boldsymbol{F}_{ki} \right) \boldsymbol{S}_{ij} \right] d^0V \tag{12.25}$$

Numerical integration Finally standard numerical integration schemes (e.g. Gauss-Legendre) are applied, which sum up the weighted integrand at several integration points [11], [12]. Also in this case the values of $\det\left({}^0\boldsymbol{J}\right)$ for each integration point g are constant with respect to time, because a Total Lagrangian Formulation is used.

$${}^i\hat{\boldsymbol{k}}_{kl} \approx \frac{1}{2} \sum_{g=1}^{N_g} \left[\sum_{i=1}^{3} \sum_{j=1}^{3} \left(\boldsymbol{h}_{0d_{li}} \boldsymbol{F}_{kj} + \boldsymbol{h}_{0d_{lj}} \boldsymbol{F}_{ki} \right) \boldsymbol{S}_{ij} \, \alpha \, \det\left({}^0\boldsymbol{J}\right) \right] \Bigg|_g \tag{12.26}$$

α Weighting factor

N_g Number of integration points

$|_g$ Expression is evaluated at integration point g

12.0.4 Displacement/Pressure (u/p-c) formulation

In case of nearly incompressible constitutive laws, pure displacement based formulations are not effective. For that reason, it is necessary to introduce the hydrostatic pressure $\tilde{p}$ as an additional unknown. For a detailed discussion see also [11] section 4.4.3. In order to derive the u/p-c formulation for large displacements, the following modified strain energy potential per unit volume is assumed for isotropic materials [11]:

$${}^i\mathbb{W} = {}^i\,\bar{\mathbb{W}} - \frac{1}{2\kappa} \left(\bar{p} - \tilde{p} \right)^2 \tag{12.27}$$

See also [11] section 6.4.1, equation 6.136.

Strain energy potential per unit volume Within this section, ${}^{i}\mathbb{W}$ denotes strain energy potential per unit volume, whereas ${}^{i}W$ denotes overall strain energy potential. They are related as follows:

$$ {}^{i}W = \bigcup_{e=1}^{N_e} \int_{{}^{0}V} {}^{i}\mathbb{W} \, d^0V \tag{12.28} $$

${}^{i}W$ modified strain energy potential for the u/p-c formulation

${}^{i}\bar{W}$ strain energy potential for the pure displacement based formulation which is equal to equation 12.20

${}^{i}\mathbb{W}$ modified strain energy potential per unit volume for the u/p-c formulation

${}^{i}\bar{\mathbb{W}}$ strain energy potential per unit volume for the pure displacement based formulation equivalent to equation 12.20

$\bar{p}$ hydrostatic pressure obtained from the pure displacement based formulation

$\tilde{p}$ hydrostatic pressure interpolated from the element nodes

κ bulk modulus of the material

In order to enhance the principle of virtual-displacements equation 12.19, the virtual perturbation of the modified strain-energy potential ${}^{i}\mathbb{W}$ is derived with respect to the new unknowns (displacement $\hat{\boldsymbol{u}}$ and hydrostatic pressure $\hat{\boldsymbol{p}}$ at element nodes). This is equivalent to the application of the "Hu-Washizu" variational-principle. See also [11] section 4.4.3.

$$ \delta^{i}\mathbb{W} = \delta^{i}\bar{\mathbb{W}} - \frac{1}{\kappa} \left(\bar{p} - \tilde{p} \right) \left(\delta\bar{p} - \delta\tilde{p} \right) \tag{12.29} $$

As a next step, the virtual perturbations of the hydrostatic pressure $\bar{p}$ and $\tilde{p}$ are derived.

$$ \delta\bar{p} = \sum_{i=1}^{3} \sum_{j=1}^{3} \frac{\partial \bar{p}}{\partial \boldsymbol{G}_{ij}} \, \delta\boldsymbol{G}_{ij} \tag{12.30} $$

$$ \delta\tilde{p} = \sum_{i=1}^{N_p} \frac{\partial \tilde{p}}{\partial \hat{\boldsymbol{p}}_i} \, \delta\hat{\boldsymbol{p}}_i \tag{12.31} $$

N_p number element nodes for hydrostatic pressure

The displacement based hydrostatic pressure $\bar{p}$ is depending only on the strain tensor $\boldsymbol{G}$ whereas the hydrostatic pressure $\tilde{p}$ is depending only on the assumed hydrostatic pressure at element nodes $\hat{\boldsymbol{p}}$.

Reformulation in terms of the modified stress tensor In the following step, equation 12.30 and equation 12.31 are substituted into equation 12.29.

$$ \delta^{i}\mathbb{W} = \delta^{i}\bar{\mathbb{W}} - \frac{1}{\kappa} \left(\bar{p} - \tilde{p} \right) \left(\sum_{i=1}^{3} \sum_{j=1}^{3} \frac{\partial \bar{p}}{\partial \boldsymbol{G}_{ij}} \, \delta\boldsymbol{G}_{ij} - \sum_{i=1}^{N_p} \frac{\partial \tilde{p}}{\partial \hat{\boldsymbol{p}}_i} \, \delta\hat{\boldsymbol{p}}_i \right) \tag{12.32} $$

Furthermore we can use the expression for the virtual perturbation of the displacement based strain energy from equation 12.20. Within this section, $\bar{\boldsymbol{S}}$ denotes the displacement based stress tensor and $\boldsymbol{S}$ denotes the modified stress tensor.

$$ \delta^{i}\bar{\mathbb{W}} = \sum_{i=1}^{3} \sum_{j=1}^{3} \delta\boldsymbol{G}_{ij} \, \bar{\boldsymbol{S}}_{ij} \tag{12.33} $$

When comparing equation 12.32 to equation 12.33, it is obvious that the modified stress tensor $\boldsymbol{S}$ may be defined as:

$$\boldsymbol{S}_{ij} = \bar{\boldsymbol{S}}_{ij} - \frac{1}{\kappa}\left(\bar{p} - \tilde{p}\right)\frac{\partial \bar{p}}{\partial \boldsymbol{G}_{ij}} \tag{12.34}$$

The derivation of equation 12.34 is specific to a particular type of constitutive law. At the moment, the following types of constitutive laws area available for u/p-c formulations:

- Hookean linear elastic isotropic
- nonlinear hyperelastic Mooney-Rivlin
- bilinear-elastoplastic with isotropic hardening

Since the modified stress tensor is depending not only on the strain tensor $\boldsymbol{G}$, but also on the hydrostatic pressure $\tilde{p}$, specialized types of constitutive laws are required. Furthermore, it is required that those constitutive laws must return also the condition of volumetric compatibility $\frac{1}{\kappa}\left(\bar{p} - \tilde{p}\right)$. See also MBDyn's *input-manual* for further information about constitutive laws usable for solid elements based on u/p-c formulations.

Using the modified stress tensor and the condition of volumetric compatibility Now equation 12.34 and equation 12.33 are substituted into equation 12.32.

$$\delta^i \mathbb{W} = \sum_{i=1}^{3}\sum_{j=1}^{3} \delta \boldsymbol{G}_{ij}\, \boldsymbol{S}_{ij} + \frac{1}{\kappa}\left(\bar{p} - \tilde{p}\right)\sum_{i=1}^{N_p}\frac{\partial \tilde{p}}{\partial \hat{\boldsymbol{p}}_i}\,\delta \hat{\boldsymbol{p}}_i \tag{12.35}$$

Since we are using isoparametric shape functions $\boldsymbol{g}$ in order to interpolate the hydrostatic pressure $\tilde{p}$, the following simplification can be applied:

$$\tilde{p} = \sum_{i=1}^{N_p} \boldsymbol{g}_i\, \hat{\boldsymbol{p}}_i \tag{12.36}$$

$$\frac{\partial \tilde{p}}{\partial \hat{\boldsymbol{p}}_i} = \boldsymbol{g}_i \tag{12.37}$$

If the order of interpolation for the hydrostatic pressure $\hat{\boldsymbol{p}}$ is too high compared to the order of interpolation for displacements $\hat{\boldsymbol{u}}$, then the resulting element may behave like an displacement based element which will not be effective [11]. So, a lower order of interpolation is used for the hydrostatic pressure in MBDyn. For example, linear elements are using a constant hydrostatic pressure, whereas quadratic elements are using a linear interpolation of the hydrostatic pressure based on the pressure at corner nodes. See also MBDyn's *input-manual* for further information about the node layout.

Integration over the volume of all elements In the next step, we integrate the virtual perturbation of the modified strain energy over the element volume, and sum up the contributions of all the elements.

$$\delta^i W = \bigcup_{e=1}^{N_e} \int_{{}^0V} \delta^i \mathbb{W}\, d^0V \tag{12.38}$$

Finally we can substitute equation 12.35 into equation 12.38.

$$\delta^i W = \bigcup_{e=1}^{N_e} \int_{{}^0V} \sum_{i=1}^{3}\sum_{j=1}^{3} \delta \boldsymbol{G}_{ij}\, \boldsymbol{S}_{ij}\, d^0V + \bigcup_{e=1}^{N_e} \int_{{}^0V} \frac{1}{\kappa}\left(\bar{p} - \tilde{p}\right)\sum_{i=1}^{N_p} \boldsymbol{g}_i\, \delta \hat{\boldsymbol{p}}_i\, d^0V \tag{12.39}$$

In the end, we can use the same formula for the internal force vector ${}^i\hat{\boldsymbol{k}}$ as equation 12.25, just by replacing the displacement based stress tensor $\bar{\boldsymbol{S}}$ by the modified stress tensor $\boldsymbol{S}$. In addition to that, equation 12.41 is required, which represents the weak form of the condition of volumetric compatibility.

$$ {}^i\hat{\boldsymbol{k}}_{kl} = \frac{1}{2}\int_{{}^0V}\left[\sum_{i=1}^{3}\sum_{j=1}^{3}\left(\boldsymbol{h}_{0d_{li}}\,\boldsymbol{F}_{kj}+\boldsymbol{h}_{0d_{lj}}\,\boldsymbol{F}_{ki}\right)\,\boldsymbol{S}_{ij}\right]\,d^0V \tag{12.40} $$

$$ \hat{\boldsymbol{c}}_i = \int_{{}^0V}\frac{1}{\kappa}\left(\bar{p}-\tilde{p}\right)\,\boldsymbol{g}_i\,d^0V \tag{12.41} $$

$$ \delta^i W = \bigcup_{e=1}^{N_e}\sum_{k=1}^{3}\sum_{l=1}^{N_n}\delta\hat{\boldsymbol{u}}_{kl}\,{}^i\hat{\boldsymbol{k}}_{kl}+\bigcup_{e=1}^{N_e}\sum_{i=1}^{N_p}\delta\hat{\boldsymbol{p}}_i\,\hat{\boldsymbol{c}}_i \tag{12.42} $$

Those expressions will be used in order to formulate the global equations of motion 12.54 and 12.55 in section 12.0.6.

12.0.5 Virtual work of inertia terms and body loads

Also accelerations $\ddot{\hat{\boldsymbol{u}}}$ and virtual displacements $\delta\hat{\boldsymbol{u}}$ are interpolated by the same shape functions $\boldsymbol{h}$.

$$ \delta^m W = \bigcup_{e=1}^{N_e}\int_{{}^0V}\sum_{i=1}^{3}{}^0\rho\,\delta\boldsymbol{u}_i\,\left(\ddot{\boldsymbol{u}}_i-\boldsymbol{b}_i\right)\,d^0V \tag{12.43} $$

$$ \delta\boldsymbol{u}_i = \sum_{k=1}^{N_n}\delta\hat{\boldsymbol{u}}_{ik}\,\boldsymbol{h}_k \tag{12.44} $$

$$ \ddot{\boldsymbol{u}}_i = \sum_{k=1}^{N_n}\ddot{\hat{\boldsymbol{u}}}_{ik}\,\boldsymbol{h}_k \tag{12.45} $$

Body loads In MBDyn, body loads due to gravity $\boldsymbol{g}$ and rigid body kinematics are considered. See also section 8.1.6. As a consequence, solid elements may be used also for typical rotor-dynamic analysis.

$$ \boldsymbol{b} = \boldsymbol{g}-\ddot{\overline{\boldsymbol{x}}}_0-\overline{\boldsymbol{\omega}}_0\times\left(\overline{\boldsymbol{\omega}}_0\times\boldsymbol{x}\right)-\dot{\overline{\boldsymbol{\omega}}}_0\times\boldsymbol{x}\underbrace{-2\,\overline{\boldsymbol{\omega}}_0\times\dot{\boldsymbol{u}}}_{\boldsymbol{a}_c} \tag{12.46} $$

$\boldsymbol{g}$ Gravity.

$\ddot{\overline{\boldsymbol{x}}}_0$ Acceleration of the global reference frame.

$\overline{\boldsymbol{\omega}}_0$ Angular velocity of the global reference frame.

$\dot{\overline{\boldsymbol{\omega}}}_0$ Angular acceleration of the global reference frame.

$\boldsymbol{a}_c$ Acceleration of Coriolis (contributed by the "AutomaticStructDispElem" element)

Mass matrix and body load vector When equation 12.44 and equation 12.45 are substituted into equation 12.43, the virtual work $\delta^m W$ can be written in terms of the consistent mass matrix $\boldsymbol{M}$ and body load vector ${}^b\hat{\boldsymbol{f}}$. Because of the isoparametric approach, the consistent mass matrix $\boldsymbol{M}$ is constant with respect to time and needs to be evaluated only once [11], [12]. In contradiction to that, the actual

magnitudes of $\boldsymbol{b}$ and ${}^{b}\hat{\boldsymbol{f}}$ may be time dependent.

$$\hat{\boldsymbol{M}}_{kl} = \int_{{}^{0}V} {}^{0}\rho\, \boldsymbol{h}_k\, \boldsymbol{h}_l\, d^0V \approx \sum_{g=1}^{N_g} \left[{}^{0}\rho\, \boldsymbol{h}_k\, \boldsymbol{h}_l\, \alpha\, \det\left({}^{0}\boldsymbol{J}\right)\right]\Big|_g \tag{12.47}$$

$${}^{b}\hat{\boldsymbol{f}}_{ik} = \int_{{}^{0}V} {}^{0}\rho\, \boldsymbol{h}_k\, \boldsymbol{b}_i\, d^0V \approx \sum_{g=1}^{N_g} \left[{}^{0}\rho\, \boldsymbol{h}_k\, \boldsymbol{b}_i\, \alpha\, \det\left({}^{0}\boldsymbol{J}\right)\right]\Big|_g \tag{12.48}$$

$$\delta^m W = \bigcup_{e=1}^{N_e} \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \sum_{l=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \ddot{\hat{\boldsymbol{u}}}_{il}\, \hat{\boldsymbol{M}}_{kl} - \sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, {}^{b}\hat{\boldsymbol{f}}_{ik} \right) = \bigcup_{e=1}^{N_e} \delta\hat{\boldsymbol{u}}^T \left(\boldsymbol{M}\, \ddot{\hat{\boldsymbol{u}}} - {}^{b}\hat{\boldsymbol{f}} \right) \tag{12.49}$$

$\hat{\boldsymbol{M}}$ $N_n \times N_n$ element mass matrix in compact storage

$\boldsymbol{M}$ $3N_n \times 3N_n$ element mass matrix in redundant storage (e.g. $\boldsymbol{M}_{iijk} = \hat{\boldsymbol{M}}_{jk}$)

${}^{b}\hat{\boldsymbol{f}}$ Element body load vector

Lumped mass matrix In addition to a consistent mass matrix, also a lumped mass matrix can be used in MBDyn. For that purpose, the diagonal of the consistent mass matrix is scaled, so that the overall mass is conserved.

$$\hat{\boldsymbol{M}}^{\star}_{kk} = \int_{{}^{0}V} {}^{0}\rho\, \boldsymbol{h}_k^2\, d^0V \approx \sum_{g=1}^{N_g} \left[{}^{0}\rho\, \boldsymbol{h}_k^2\, \alpha\, \det\left({}^{0}\boldsymbol{J}\right)\right]\Big|_g \tag{12.50}$$

$$\hat{\boldsymbol{M}}_{kk} = \hat{\boldsymbol{M}}^{\star}_{kk} \frac{m}{\sum_{k=1}^{N_n} \hat{\boldsymbol{M}}^{\star}_{kk}} \tag{12.51}$$

$$m = \int_{{}^{0}V} {}^{0}\rho\, d^0V \approx \sum_{g=1}^{N_g} \left[{}^{0}\rho\, \alpha\, \det\left({}^{0}\boldsymbol{J}\right)\right]\Big|_g \tag{12.52}$$

If a lumped mass matrix is used, the virtual work of the inertia terms becomes:

$$\delta^m W = \bigcup_{e=1}^{N_e} \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \ddot{\hat{\boldsymbol{u}}}_{ik}\, \hat{\boldsymbol{M}}_{kk} - \sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, {}^{b}\hat{\boldsymbol{f}}_{ik} \right) \tag{12.53}$$

12.0.6 Reformulation of inertia terms required for a first order DAE solver

The principle of virtual displacements equation 12.19 leads to the following system of second order ordinary differential equations.

$$\bigcup_{e=1}^{N_e} \left(\boldsymbol{M}\, \ddot{\hat{\boldsymbol{u}}} + {}^{i}\hat{\boldsymbol{k}} - {}^{b}\hat{\boldsymbol{f}} - {}^{e}\hat{\boldsymbol{f}} \right) = \boldsymbol{0} \tag{12.54}$$

The special case of u/p-c formulations In case of an u/p-c formulation, an additional set of algebraic equations 12.41 is required in order to determine the hydrostatic pressure $\hat{\boldsymbol{p}}$.

$$\bigcup_{e=1}^{N_e} \hat{\boldsymbol{c}} = \boldsymbol{0} \tag{12.55}$$

As a consequence, the whole system of equations becomes Differential Algebraic, even if it is unconstrained.

Implementation issues in MBDyn Since MBDyn does not use accelerations for the solution of equations of motion, a reformulation of the equations of motion is required for solid elements. It is required also because rigid bodies might be present in the same model, and those rigid bodies might share common nodes with solid elements. So, equation 12.54 cannot be implemented directly.

Introducing the momentum Since the mass matrix $\boldsymbol{M}$ is constant with respect to time, equation 12.54 can be easily reformulated as a system of two first order ODE's using the momentum $\hat{\boldsymbol{\beta}}$ as a new unknown. This approach is strictly consistent with MBDyn's conventions for rigid bodies.

$$\hat{\boldsymbol{\beta}} = \boldsymbol{M}\,\dot{\hat{\boldsymbol{u}}} \tag{12.56}$$

$$\dot{\hat{\boldsymbol{\beta}}} = \boldsymbol{M}\,\ddot{\hat{\boldsymbol{u}}} \tag{12.57}$$

$\hat{\boldsymbol{\beta}}$ Momentum at element nodes

With equation 12.56 and equation 12.57 the global system of equations is formulated as:

$$\bigcup_{e=1}^{N_e} \left(\hat{\boldsymbol{\beta}} - \boldsymbol{M}\,\dot{\hat{\boldsymbol{u}}}\right) = \mathbf{0} \tag{12.58}$$

$$-\bigcup_{e=1}^{N_e} \left(\dot{\hat{\boldsymbol{\beta}}} + {}^{i}\hat{\boldsymbol{k}} - {}^{b}\hat{\boldsymbol{f}} - {}^{e}\hat{\boldsymbol{f}}\right) = \mathbf{0} \tag{12.59}$$

$$-\bigcup_{e=1}^{N_e} \hat{\boldsymbol{c}} = \mathbf{0} \tag{12.60}$$

In equation 12.58 to 12.60, MBDyn's sign conventions are applied in order to ensure compatiblity with other elements. Equation 12.60 is present only in case of u/p-c based formulations.

Limitations The only remaining limitation of this approach is, that it is not possible to compute accelerations for a model using solid elements, unless a lumped mass matrix is used for all solid elements in the model. See the MBDyn's *input-manual* for further information on how to activate a lumped mass matrix instead of a consistent mass matrix.

12.0.7 Elements for surface loads

In order to apply surface loads at solid elements, dedicated surface elements are required. Basically the same isoparametric approach known from section 12.0.1 is applied also to surface elements. Instead of the determinant of the Jacobian matrix, equation 12.63 is used to transform infinitesimal surface areas

between natural curvilinear coordinates $\boldsymbol{r}$ and global Cartesian coordinates $\boldsymbol{x}$.

$$\boldsymbol{x}_i = \sum_{k=1}^{N_n} \boldsymbol{h}_k \, \hat{\boldsymbol{x}}_{ik} \tag{12.61}$$

$$\boldsymbol{u}_i = \sum_{k=1}^{N_n} \boldsymbol{h}_k \, \hat{\boldsymbol{u}}_{ik} \tag{12.62}$$

$$dA = \left\| \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_1} \times \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_2} \right\| d\boldsymbol{r}_1 \, d\boldsymbol{r}_2 \tag{12.63}$$

$$\frac{\partial \boldsymbol{x}_i}{\partial \boldsymbol{r}_1} = \sum_{k=1}^{N_n} \frac{\partial \boldsymbol{h}_k}{\partial \boldsymbol{r}_1} \, \hat{\boldsymbol{x}}_i \tag{12.64}$$

$$\frac{\partial \boldsymbol{x}_i}{\partial \boldsymbol{r}_2} = \sum_{k=1}^{N_n} \frac{\partial \boldsymbol{h}_k}{\partial \boldsymbol{r}_2} \, \hat{\boldsymbol{x}}_i \tag{12.65}$$

$$\boldsymbol{r} = \begin{pmatrix} \boldsymbol{r}_1 & \boldsymbol{r}_2 \end{pmatrix}^T \tag{12.66}$$

Shape functions Also surface elements are based on C++ templates in order to simplify the implementation of new element types. The following types of elements are currently implemented:

- Quadrangular elements with linear and quadratic shape functions [11], [13]
- Triangular elements with quadratic shape functions [14]

See also MBDyn's *input-manual* for further information about the node layout of different surface elements.

Virtual work of surface loads In order to derive the expressions for external virtual work, surface loads must be expressed in terms of virtual displacements $\delta\hat{\boldsymbol{u}}$ at the element nodes.

$$\delta^e W = \bigcup_{e=1}^{N_e} \int_A \left(\sum_{i=1}^{3} \delta \boldsymbol{u}_i \, {}^A\boldsymbol{f}_i \right) dA \tag{12.67}$$

$$= \bigcup_{e=1}^{N_e} \int_A \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, \boldsymbol{h}_k \, {}^A\boldsymbol{f}_i \right) dA \tag{12.68}$$

$$= \bigcup_{e=1}^{N_e} \sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta \hat{\boldsymbol{u}}_{ik} \, {}^e\hat{\boldsymbol{f}}_{ik} \tag{12.69}$$

Pressure loads In case of pressure loads, ${}^A\boldsymbol{f}$ will always act normal to the surface. It should be emphasized, that the surface normal- and tangent vectors must be evaluated with respect to the deformed state.

$${}^A\boldsymbol{f} = -\frac{1}{\|{}^A\boldsymbol{n}\|} \, {}^A\boldsymbol{n} \, p \tag{12.70}$$

$$p = \sum_{k=1}^{N_n} \boldsymbol{h}_k \, \hat{\boldsymbol{p}}_k \tag{12.71}$$

$${}^A\boldsymbol{n} = \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_1} \times \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_2} \tag{12.72}$$

p pressure at a point $\boldsymbol{x}$ at the surface

$\hat{\boldsymbol{p}}$ pressures at the element nodes

${}^{A}\boldsymbol{n}$ outward surface normal vector at point $\boldsymbol{x}$

Finally, the virtual work of pressure loads can be evaluated by numerical integration across the surface area. Due to the fact, that the surface may be moved or deformed during the simulation, pressure loads will not be constant, even if the nodal pressures are constant values. In addition to that, pressure loads do contribute to the global stiffness matrix, and they will directly (e.g. due to the deformation of the surface) and indirectly (e.g. due to the stress in solid elements) affect mode shapes and natural frequencies of the structures they are applied to.

$$\delta^e W = -\bigcup_{e=1}^{N_e} \int_A \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \boldsymbol{h}_k\, {}^{A}\boldsymbol{n}_i\, \frac{p}{\|{}^{A}\boldsymbol{n}\|} \right) dA \tag{12.73}$$

$$\approx -\bigcup_{e=1}^{N_e} \sum_{g=1}^{N_g} \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \boldsymbol{h}_k\, p\, {}^{A}\boldsymbol{n}_i\, \alpha \right) \Bigg|_g \tag{12.74}$$

Surface traction's Surface traction's are similar to pressure loads, but they do not necessarily act normal to the surface. Instead the initial orientation of traction loads will be specified by the user, by means of an orientation matrix $\boldsymbol{R}_f$. In that way, shear stresses may be imposed at the surface of a body.

$$\boldsymbol{e}_1^\star = \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_1} \tag{12.75}$$

$$\boldsymbol{e}_2^\star = \frac{\partial \boldsymbol{x}}{\partial \boldsymbol{r}_2} \tag{12.76}$$

$$\boldsymbol{e}_3^\star = \boldsymbol{e}_1^\star \times \boldsymbol{e}_2^\star \tag{12.77}$$

$$\boldsymbol{e}_2^{\star\star} = \boldsymbol{e}_3^\star \times \boldsymbol{e}_1^\star \tag{12.78}$$

$${}^{A}\boldsymbol{R} = \left(\frac{1}{\|\boldsymbol{e}_1^\star\|}\, \boldsymbol{e}_1^\star \quad \frac{1}{\|\boldsymbol{e}_2^{\star\star}\|}\, \boldsymbol{e}_2^{\star\star} \quad \frac{1}{\|\boldsymbol{e}_3^\star\|}\, \boldsymbol{e}_3^\star \right) \tag{12.79}$$

$${}^{A}\boldsymbol{f} = {}^{A}\boldsymbol{R}\, {}^{A_0}\boldsymbol{R}^T\, \boldsymbol{R}_f\, {}^{A}\bar{\boldsymbol{f}} \tag{12.80}$$

$${}^{A}\bar{\boldsymbol{f}}_i = \sum_{k=1}^{N_n} \boldsymbol{h}_k\, {}^{A}\bar{\hat{\boldsymbol{f}}}_{ik} \tag{12.81}$$

$$\delta^e W = \bigcup_{e=1}^{N_e} \int_A \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \boldsymbol{h}_k\, {}^{A}\boldsymbol{f}_i \right) dA \tag{12.82}$$

$$\approx \bigcup_{e=1}^{N_e} \sum_{g=1}^{N_g} \left(\sum_{i=1}^{3} \sum_{k=1}^{N_n} \delta\hat{\boldsymbol{u}}_{ik}\, \boldsymbol{h}_k\, {}^{A}\boldsymbol{f}_i\, \|\boldsymbol{e}_3^\star\|\, \alpha \right) \Bigg|_g \tag{12.83}$$

${}^{A}\boldsymbol{R}$ relative orientation matrix at point $\boldsymbol{x}$ at the deformed state

${}^{A_0}\boldsymbol{R}$ relative orientation matrix at point $\boldsymbol{x}$ at the undeformed state

$\boldsymbol{R}_f$ absolute orientation matrix for the applied traction load with respect to the undeformed state

${}^{A}\boldsymbol{f}$ surface traction's at point $\boldsymbol{x}$ with respect to the global reference frame

${}^{A}\bar{\boldsymbol{f}}$ surface traction's at point $\boldsymbol{x}$ with respect to the local reference frame

${}^{A}\bar{\hat{\boldsymbol{f}}}$ surface traction's at element nodes

12.0.8 Implementation notes

Many authors of textbooks about nonlinear Finite Element Methods spent a lot of effort to explain the consistent derivation of the tangent stiffness matrix, since this is crucial for any Newton-like nonlinear solver [10], [11]. In contradiction to that, the analytical derivation of a sparse tangent stiffness matrix is not required for MBDyn's solid elements, because they are exploiting a technique called "Automatic Differentiation" for Newton based- as well as Newton Krylov based solvers.

Chapter 13

Aerodynamic Elements

Aerodynamic elements apply aerodynamic forces to structural nodes.

This section is not intended to give details about the aerodynamic models adopted but mainly discuss the computation of the contributions to the Jacobian matrix of the aerodynamic elements.

Files. 2D aerodnamic elements are implemented in files
`mbdyn/aero/aeroelem.h`
`mbdyn/aero/aeroelem.cc`
2D aerodynamic models are implemented in files
`mbdyn/aero/aerodata.h`
`mbdyn/aero/aerodata.cc`
`mbdyn/aero/aerodata_impl.h`
`mbdyn/aero/aerodata_impl.cc`

13.1 Linearization of 2D Aerodynamic Forces and Moments

MBDyn's built-in 2D aerodynamics computes aerodynamic forces $\tilde{\boldsymbol{f}}_{a/\xi}$ and moments $\tilde{\boldsymbol{c}}_{a/\xi}$ per unit span, in a relative frame at station ξ, based on the instantaneous value of linear and angular velocity boundary conditions, respectively $\tilde{\boldsymbol{v}}$ and $\tilde{\boldsymbol{\omega}}$, expressed in the same relative frame, namely

$$\tilde{\boldsymbol{f}}_{a/\xi} = \tilde{\boldsymbol{f}}_{a/\xi}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \xi\right) \tag{13.1a}$$

$$\tilde{\boldsymbol{c}}_{a/\xi} = \tilde{\boldsymbol{c}}_{a/\xi}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \xi\right). \tag{13.1b}$$

The boundary conditions are computed by projecting the *effective* linear and angular velocity at station ξ, respectively $\boldsymbol{v}(\xi)$ and $\boldsymbol{\omega}(\xi)$, in the reference frame of the aerodynamic forces, namely

$$\tilde{\boldsymbol{v}}(\xi) = \boldsymbol{R}^T(\xi)\,\boldsymbol{v}(\xi) \tag{13.2a}$$

$$\tilde{\boldsymbol{\omega}}(\xi) = \boldsymbol{R}^T(\xi)\,\boldsymbol{\omega}(\xi), \tag{13.2b}$$

where $\boldsymbol{R}(\xi)$ is the matrix that expresses the local orientation of the aerodynamic section at station ξ.

In detail, the effective linear velocity at an arbitrary station is the combination of the absolute velocity resulting from the kinematics of the model, of an airstream velocity that may depend on the absolute location of a reference point and on time, and of a contribution resulting from an inflow model, namely

$$\boldsymbol{v}(\xi) = \boldsymbol{v}_{\text{kin}}(\xi) + \boldsymbol{v}_{\infty}\left(\boldsymbol{x}(\xi), t\right) + \boldsymbol{v}_{\text{inflow}}\left(\boldsymbol{x}(\xi)\right). \tag{13.3}$$

It is assumed that the last two contributions do not depend on the state of the problem, or only depend on it in a loose manner, and thus do not directly participate in the linearization of the aerodynamic forces and moments.

Their linearization yields

$$\delta\tilde{\boldsymbol{v}} = \boldsymbol{R}^T(\xi)\left(\delta\boldsymbol{v}_{\text{kin}}(\xi) + \boldsymbol{v}(\xi)\times\boldsymbol{\theta}_\delta(\xi)\right) \tag{13.4a}$$

$$\delta\tilde{\boldsymbol{\omega}} = \boldsymbol{R}^T(\xi)\left(\delta\boldsymbol{\omega}(\xi) + \boldsymbol{\omega}(\xi)\times\boldsymbol{\theta}_\delta(\xi)\right), \tag{13.4b}$$

where

$$\boldsymbol{\theta}_\delta(\xi) = \operatorname{ax}\left(\delta\boldsymbol{R}(\xi)\,\boldsymbol{R}^T(\xi)\right). \tag{13.5}$$

By means of numerical integration, the force and moment per unit span are integrated into discrete contributions to the force and the moment applied to the appropriate node equilibrium. This is usually done by multiplying each force and moment per unit span contribution by an appropriate reference length coefficient. At the i-th quadrature point, define this coefficient as

$$\alpha_i = J_\ell(\xi_i)\,w_i, \tag{13.6}$$

where J_ℓ is the Jacobian of the mapping from the quadrature coordinate to the physical spanwise coordinate, and w_i is the quadrature weight. In the implementation, this coefficient is

$$\alpha_i = \texttt{dHalfSpan}\,w_i \qquad \text{for an aerodynamic body}, \tag{13.7a}$$

$$\alpha_i = \texttt{dXds}\,\texttt{dsdCsi}\,w_i \qquad \text{for an aerodynamic beam}. \tag{13.7b}$$

As a consequence, the weighted force and moment contributions used in the following are

$$\tilde{\boldsymbol{f}}_a^{(i)} = \alpha_i\,\tilde{\boldsymbol{f}}_{a/\xi}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}},\xi_i) \tag{13.8a}$$

$$\tilde{\boldsymbol{c}}_a^{(i)} = \alpha_i\,\tilde{\boldsymbol{c}}_{a/\xi}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}},\xi_i). \tag{13.8b}$$

The quadrature-point index is omitted in the remainder of this section. Since α_i does not depend on the state variables, the same factor must multiply every block of the sectional aerodynamic Jacobian, namely

$$\tilde{\boldsymbol{J}}_{Fa}^{(i)} = \alpha_i\,\tilde{\boldsymbol{J}}_{Fa/\xi}^{(i)}. \tag{13.9}$$

As already mentioned, each weighted sectional force and moment contribution is applied to the appropriate node after projection in the global reference frame. The contribution to the force and moment equilibrium of the n-th node is

$$\Delta\boldsymbol{f}_n = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_a \tag{13.10a}$$

$$\Delta\boldsymbol{c}_n = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_a + (\boldsymbol{x}(\xi) - \boldsymbol{x}_n)\times\Delta\boldsymbol{f}_n. \tag{13.10b}$$

Their linearization yields

$$\delta\Delta\boldsymbol{f}_n = -\Delta\boldsymbol{f}_n\times\boldsymbol{\theta}_\delta(\xi) + \boldsymbol{R}(\xi)\,\delta\tilde{\boldsymbol{f}}_a \tag{13.11a}$$

$$\begin{aligned}\delta\Delta\boldsymbol{c}_n = {}& -\Delta\boldsymbol{c}_n\times\boldsymbol{\theta}_\delta(\xi) + \boldsymbol{R}(\xi)\,\delta\tilde{\boldsymbol{c}}_a - \Delta\boldsymbol{f}_n\times(\delta\boldsymbol{x}(\xi) - \delta\boldsymbol{x}_n)\\ & + (\boldsymbol{x}(\xi) - \boldsymbol{x}_n)\times\left(-\Delta\boldsymbol{f}_n\times\boldsymbol{\theta}_\delta(\xi) + \boldsymbol{R}(\xi)\,\delta\tilde{\boldsymbol{f}}_a\right),\end{aligned} \tag{13.11b}$$

which can be summarized as

$$\left\{ \begin{array}{c} \delta\Delta\boldsymbol{f}_n \\ \delta\Delta\boldsymbol{c}_n \end{array} \right\} = \left[\begin{array}{c} -\Delta\boldsymbol{f}_n \times \\ -\Delta\boldsymbol{c}_n \times \; - \left(\boldsymbol{x}\left(\xi\right) - \boldsymbol{x}_n\right) \times \Delta\boldsymbol{f}_n \times \end{array} \right] \boldsymbol{\theta}_\delta\left(\xi\right) + \left[\begin{array}{c} \boldsymbol{0} \\ -\Delta\boldsymbol{f}_n \times \end{array} \right] \left(\delta\boldsymbol{x}\left(\xi\right) - \delta\boldsymbol{x}_n\right) + \left[\begin{array}{cc} \boldsymbol{I} & \boldsymbol{0} \\ \left(\boldsymbol{x}\left(\xi\right) - \boldsymbol{x}_n\right) \times & \boldsymbol{I} \end{array} \right] \left\{ \begin{array}{c} \boldsymbol{R}\left(\xi\right) \delta\tilde{\boldsymbol{f}}_a \\ \boldsymbol{R}\left(\xi\right) \delta\tilde{\boldsymbol{c}}_a \end{array} \right\}. \tag{13.12}$$

It is assumed that the Jacobian matrix of the sectional force and moment with respect to the linear and angular velocity is either available or can be computed by numerical differentiation. The resulting force and moment perturbation is

$$\left\{ \begin{array}{c} \delta\tilde{\boldsymbol{f}}_a \\ \delta\tilde{\boldsymbol{c}}_a \end{array} \right\} = \left[\begin{array}{cc} \tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}} & \tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}} \\ \tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}} & \tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}} \end{array} \right] \left\{ \begin{array}{c} \delta\tilde{\boldsymbol{v}} \\ \delta\tilde{\boldsymbol{\omega}} \end{array} \right\}. \tag{13.13}$$

The computation of the matrix of Eq. (13.13) is delegated to the `AeroData` class.

Each type of element determines how the sectional force and moment contributions are applied to the nodes, and how the sectional boundary conditions at each section are computed from the kinematics of the nodes.

13.2 Numerical Linearization of Sectional Forces

Consider an arbitrary submatrix of the Jacobian matrix of Eq. (13.13), $\boldsymbol{J} = \boldsymbol{p}_{/\boldsymbol{q}}$. Its generic element, the c-th component of $\boldsymbol{p}$ derived by the r-th component of $\boldsymbol{q}$, is

$$J_{rc} = \frac{\partial \boldsymbol{p}_r}{\partial \boldsymbol{q}_c}. \tag{13.14}$$

A forward difference approach is used, namely

$$J_{rc} \cong \frac{\boldsymbol{p}_r\left(\boldsymbol{q} + \Delta q \boldsymbol{e}_c\right) - \boldsymbol{p}_r\left(\boldsymbol{q}\right)}{\Delta q}, \tag{13.15}$$

where $\boldsymbol{e}_c$ is the unit vector along the c-th component, and Δq is a suitably chosen perturbation. Alternatively, a centered difference approach can be used, namely

$$J_{rc} \cong \frac{\boldsymbol{p}_r\left(\boldsymbol{q} + \Delta q \boldsymbol{e}_c\right) - \boldsymbol{p}_r\left(\boldsymbol{q} - \Delta q \boldsymbol{e}_c\right)}{2\Delta q}. \tag{13.16}$$

The perturbation is

$$\Delta q = \varepsilon \left\|\boldsymbol{q}\right\| + \nu. \tag{13.17}$$

Since the boundary condition $\boldsymbol{q}$ is perturbed in order to determine an equivalent perturbation of angle of attack, a resolution of few tenth of degree is deemed sufficient. As a consequence, $\varepsilon > 0$ must be a "small" number that, in case $\boldsymbol{e}_c$ is orthogonal to $\boldsymbol{q}$, yields an angle of the order of a tenth of a degree. The default value is $\varepsilon = 10^{-3}$. However, in order to avoid divisions by too small numbers, the perturbation is corrected by another "small" parameter, $\nu > 0$. The default value is $\nu = 10^{-9}$.

13.3 Aerodynamic Forces with Internal States

Consider the case of a model of the aerodynamic forces that requires the use of internal states $\boldsymbol{q}$, namely

$$\tilde{\boldsymbol{f}}_a = \tilde{\boldsymbol{f}}_a\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q}\right) \tag{13.18a}$$

$$\tilde{\boldsymbol{c}}_a = \tilde{\boldsymbol{c}}_a\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q}\right) \tag{13.18b}$$

$$\boldsymbol{0} = \boldsymbol{g}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q}, \dot{\boldsymbol{q}}\right). \tag{13.18c}$$

Usually, the dynamic model of the aerodynamics is differential, and thus its perturbation yields a linearized state-space system,

$$\delta\boldsymbol{g} = \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}\delta\tilde{\boldsymbol{v}} + \boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\delta\tilde{\boldsymbol{\omega}} + \boldsymbol{g}_{/\boldsymbol{q}}\delta\boldsymbol{q} + \boldsymbol{g}_{/\dot{\boldsymbol{q}}}\delta\dot{\boldsymbol{q}} \tag{13.19a}$$

$$\delta\tilde{\boldsymbol{f}}_a = \tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}}\delta\tilde{\boldsymbol{v}} + \tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}}\delta\tilde{\boldsymbol{\omega}} + \tilde{\boldsymbol{f}}_{a/\boldsymbol{q}}\delta\boldsymbol{q} \tag{13.19b}$$

$$\delta\tilde{\boldsymbol{c}}_a = \tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}}\delta\tilde{\boldsymbol{v}} + \tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}}\delta\tilde{\boldsymbol{\omega}} + \tilde{\boldsymbol{c}}_{a/\boldsymbol{q}}\delta\boldsymbol{q}, \tag{13.19c}$$

where, with respect to $\delta\boldsymbol{g}$, the terms $\delta\tilde{\boldsymbol{v}}$ and $\delta\tilde{\boldsymbol{\omega}}$ play the role of the input, while $\delta\boldsymbol{q}$ plays the role of the state; $\delta\tilde{\boldsymbol{f}}_a$, $\delta\tilde{\boldsymbol{c}}_a$ play the role of the output.

In those cases, the underlying aerodynamic model has to deal with $\boldsymbol{g}$, Eq. (13.18c), and its perturbation $\delta\boldsymbol{g}$, Eq. (13.18c).

However, the aerodynamic elements have to:

1. provide the underlying aerodynamic model the Jacobian submatrices required to compute $\delta\tilde{\boldsymbol{v}}$ and $\delta\tilde{\boldsymbol{\omega}}$ from the perturbations of the nodal position, orientation, and linear and angular velocity that are needed to deal with $\delta\boldsymbol{g}$, Eq. (13.18c);
2. account for the contribution of the Jacobian matrices $\delta\tilde{\boldsymbol{f}}_{a/\boldsymbol{q}}$ and $\delta\tilde{\boldsymbol{c}}_{a/\boldsymbol{q}}$ respectively required by Eqs. (13.19b) and (13.19c).

13.4 Aerodynamic body

The `aerodynamic body` element applies aerodynamic forces to the structural node it is connected to, based on the relative velocity between an aerodynamic surface attached to the node and the airstream.

The boundary conditions are related to the rigid body motion of the node, so

$$\boldsymbol{R}\left(\xi\right) = \boldsymbol{R}_n\boldsymbol{R}_a\boldsymbol{R}_t\left(\xi\right) \tag{13.20a}$$

$$\boldsymbol{b}\left(\xi\right) = \boldsymbol{R}_n\left(\tilde{\boldsymbol{b}}_0 + \boldsymbol{R}_a\left(b\left(\xi\right)\boldsymbol{e}_1 + \xi\boldsymbol{e}_3\right)\right) \tag{13.20b}$$

$$\boldsymbol{\omega}\left(\xi\right) = \boldsymbol{\omega}_n \tag{13.20c}$$

$$\boldsymbol{v}_{\mathrm{kin}}\left(\xi\right) = \boldsymbol{v}_n + \boldsymbol{\omega}_n \times \boldsymbol{b}\left(\xi\right), \tag{13.20d}$$

where $\boldsymbol{R}_n$ is the orientation of the node, $\boldsymbol{R}_a$ is the relative orientation of the aerodynamics with respect to the node, $\boldsymbol{R}_t$ is the pretwist matrix, $\boldsymbol{v}_n$ is the absolute velocity of the node, $\boldsymbol{\omega}_n$ is the absolute angular velocity of the node, $\tilde{\boldsymbol{b}}_0$ is an offset between the node and the reference location of the aerodynamic body, and $b\left(\xi\right)$ is the chordwise location of the point where the boundary conditions are evaluated.

Their linearization is straightforward:

$$\boldsymbol{\theta}_\delta\left(\xi\right) = \boldsymbol{\theta}_{n\delta} \tag{13.21a}$$

$$\delta\boldsymbol{b}\left(\xi\right) = -\boldsymbol{b}\left(\xi\right) \times \boldsymbol{\theta}_{n\delta} \tag{13.21b}$$

$$\delta\boldsymbol{\omega}\left(\xi\right) = \delta\boldsymbol{\omega}_n \tag{13.21c}$$

$$\delta\boldsymbol{v}_{\mathrm{kin}}\left(\xi\right) = \delta\boldsymbol{v}_n - \boldsymbol{b}\left(\xi\right) \times \delta\boldsymbol{\omega}_n - \boldsymbol{\omega}_n \times \boldsymbol{b}\left(\xi\right) \times \boldsymbol{\theta}_{n\delta}. \tag{13.21d}$$

Eq. (13.10b) can be rewritten as

$$\Delta \boldsymbol{c}_n = \boldsymbol{R}(\xi)\left(\tilde{\boldsymbol{c}}_a + \tilde{\boldsymbol{o}}(\xi) \times \tilde{\boldsymbol{f}}_a\right), \tag{13.22}$$

where $\tilde{\boldsymbol{o}}(\xi) = \boldsymbol{R}^T(\xi)(\boldsymbol{x}(\xi) - \boldsymbol{x}_n)$, the offset between the point where the force is applied and the node, in the reference frame of the node, does not depend on the kinematics of the system, since the body is rigid. Its linearization yields

$$\delta\Delta \boldsymbol{c}_n = -\Delta \boldsymbol{c}_n \times \boldsymbol{\theta}_\delta(\xi) + \boldsymbol{R}(\xi)\left(\delta\tilde{\boldsymbol{c}}_a + \tilde{\boldsymbol{o}}(\xi) \times \delta\tilde{\boldsymbol{f}}_a\right), \tag{13.23}$$

since $\delta\tilde{\boldsymbol{o}}(\xi) \equiv 0$. So the linearized force and moment is

$$\begin{Bmatrix} \delta\Delta \boldsymbol{f}_n \\ \delta\Delta \boldsymbol{c}_n \end{Bmatrix} = -\begin{bmatrix} \Delta \boldsymbol{f}_n \times \\ \Delta \boldsymbol{c}_n \times \end{bmatrix} \boldsymbol{\theta}_{n\delta} + \begin{bmatrix} \boldsymbol{I} & \boldsymbol{0} \\ \boldsymbol{o}(\xi) \times & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \boldsymbol{R}(\xi)\,\delta\tilde{\boldsymbol{f}}_a \\ \boldsymbol{R}(\xi)\,\delta\tilde{\boldsymbol{c}}_a \end{Bmatrix}. \tag{13.24}$$

with $\boldsymbol{o}(\xi) = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{o}}(\xi)$.

The linearization of the boundary conditions yields

$$\begin{aligned} \begin{Bmatrix} \delta\tilde{\boldsymbol{v}}(\xi) \\ \delta\tilde{\boldsymbol{\omega}}(\xi) \end{Bmatrix} &= \begin{bmatrix} \boldsymbol{R}^T(\xi) & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}^T(\xi) \end{bmatrix} \left(\begin{bmatrix} \boldsymbol{v}(\xi) \times & -\boldsymbol{\omega}_n \times \boldsymbol{b}(\xi) \times \\ & \boldsymbol{\omega}_n \times \end{bmatrix} \boldsymbol{\theta}_{n\delta} \right. \\ &\quad \left. + \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{b}(\xi) \times \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \delta\boldsymbol{v}_n \\ \delta\boldsymbol{\omega}_n \end{Bmatrix} \right) \qquad (13.25a) \\ &\overset{\text{uu}}{=} \begin{bmatrix} \boldsymbol{R}^T(\xi) & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}^T(\xi) \end{bmatrix} \left(\begin{bmatrix} (\boldsymbol{v}(\xi) + \boldsymbol{b}(\xi) \times \boldsymbol{\omega}_n) \times \\ \boldsymbol{0} \end{bmatrix} \delta\boldsymbol{g}_n \right. \\ &\quad \left. + \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{b}(\xi) \times \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \delta\dot{\boldsymbol{x}}_n \\ \delta\dot{\boldsymbol{g}}_n \end{Bmatrix} \right). \qquad (13.25b) \end{aligned}$$

After defining

$$\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi) \tag{13.26a}$$

$$\boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi) \tag{13.26b}$$

$$\boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi) \tag{13.26c}$$

$$\boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi), \tag{13.26d}$$

the linearization becomes

$$\begin{aligned} &\begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} \\ \boldsymbol{o}(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} \end{bmatrix} \delta\dot{\boldsymbol{x}}_n \\ &+ \begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} - \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{b}(\xi) \times \\ \boldsymbol{o}(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} - \left(\boldsymbol{o}(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\right)\boldsymbol{b}(\xi) \times \end{bmatrix} \delta\dot{\boldsymbol{g}}_n \\ &+ \begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}(\boldsymbol{v}(\xi) + \boldsymbol{b}(\xi) \times \boldsymbol{\omega}_n) \times \\ \left(\boldsymbol{o}(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\right)(\boldsymbol{v}(\xi) + \boldsymbol{b}(\xi) \times \boldsymbol{\omega}_n) \times \end{bmatrix} \delta\boldsymbol{g}_n \\ &- \begin{bmatrix} \Delta \boldsymbol{f}_n \times \\ \Delta \boldsymbol{c}_n \times \end{bmatrix} \delta\boldsymbol{g}_n \overset{\text{uu}}{=} \begin{Bmatrix} \delta\Delta \boldsymbol{f}_n \\ \delta\Delta \boldsymbol{c}_n \end{Bmatrix}. \end{aligned} \tag{13.27}$$

13.5 Aerodynamic Beam (3 Nodes)

The `aerodynamic beam3` element applies aerodynamic forces to the nodes of a three node structural beam element.

The aerodynamic forces/moments acting on each node are computed based on the relative velocity of a set of locations along the beam and the airstream. The kinematic quantities of the beam are computed based on an interpolation of the kinematics of the three nodes.

Kinematics Interpolation. *Note: this part is common to all elements that use the three-node beam discretization and interpolation model.* The generic field variable $\boldsymbol{p}(x)$ is interpolated using parabolic functions related to the value of the field variable at three locations that in general can be offset from the nodes,

$$\boldsymbol{p}(\xi) = \sum_{i=1,2,3} N_i(\xi)\,\boldsymbol{p}_i, \tag{13.28}$$

with

$$N_1 = \frac{1}{2}\xi(\xi - 1) \tag{13.29a}$$

$$N_2 = 1 - \xi^2 \tag{13.29b}$$

$$N_3 = \frac{1}{2}\xi(\xi + 1). \tag{13.29c}$$

Orientation at an arbitrary location ξ:

$$\boldsymbol{R}(\xi) = \boldsymbol{R}_{2_a}\boldsymbol{R}(\boldsymbol{\theta}(\xi)) \tag{13.30}$$

$$\boldsymbol{\theta}(\xi) = \sum_{i=1,3} N_i(\xi)\,\boldsymbol{\theta}_{2\leftarrow i} = N_1(\xi)\,\boldsymbol{\theta}_{2\leftarrow 1} + N_3(\xi)\,\boldsymbol{\theta}_{2\leftarrow 3} \tag{13.31}$$

$$\boldsymbol{\theta}_{2\leftarrow i} = \mathrm{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{2_a}^T\boldsymbol{R}_{i_a}\right)\right). \tag{13.32}$$

Orientation is dealt with specially, given its special nature. The orientation of the mid node is used as a reference, and the orientation parameters that express the relative orientation between each of the end nodes and the mid node are interpolated. The interpolated orientation parameters are used to compute the interpolated relative orientation matrix, which is then pre-multiplied by the orientation matrix of the mid node. Summation in this case occurs on $i = 1, 3$ only because by definition $\boldsymbol{\theta}_{2\leftarrow 2} = \mathrm{ax}(\exp^{-1}((\boldsymbol{I})) \equiv \boldsymbol{0}$.

Since the Euler-Rodrigues orientation parameters are used (the so-caller 'rotation vector'), the magnitude of the relative orientation between each end node and the mid node must be limited (formally, to π, but it should be less for accuracy).

Position at an arbitrary location ξ:

$$\boldsymbol{x}(\xi) = \sum_{i=1,2,3} N_i(\xi)\,(\boldsymbol{x}_i + \boldsymbol{o}_i), \tag{13.33}$$

with $\boldsymbol{o}_i = \boldsymbol{R}_i\tilde{\boldsymbol{o}}_i$.

Angular velocity at an arbitrary location ξ:

$$\boldsymbol{\omega}(\xi) = \sum_{i=1,2,3} N_i(\xi)\,\boldsymbol{\omega}_i. \tag{13.34}$$

Velocity at an arbitrary location ξ:

$$\boldsymbol{v}_{\mathrm{kin}}(\xi) = \sum_{i=1,2,3} N_i(\xi)\,(\boldsymbol{v}_i + \boldsymbol{\omega}_i \times \boldsymbol{o}_i). \tag{13.35}$$

Perturbation of Interpolated Kinematics. Orientation perturbation at an arbitrary location ξ:

$$\delta\boldsymbol{\theta}(\xi) = \sum_{i=1,3} N_i(\xi)\,\delta\boldsymbol{\theta}_{2\leftarrow i} \tag{13.36}$$

$$\delta\boldsymbol{\theta}_{2\leftarrow i} = \boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow i})\,\boldsymbol{\theta}_{(2\leftarrow i)\delta} \tag{13.37}$$

$$\boldsymbol{\theta}_{(2\leftarrow i)\delta} = \boldsymbol{R}_{2_a}^T(\boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{2\delta}) \tag{13.38}$$

$$\begin{aligned}
\boldsymbol{\theta}_\delta(\xi) &= \boldsymbol{\theta}_{2\delta} + \sum_{i=1,3} \boldsymbol{R}_{2_a}\boldsymbol{\Gamma}(\boldsymbol{\theta}(\xi))\,N_i(\xi)\,\boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow i})\,\boldsymbol{R}_{2_a}^T(\boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{2\delta}) \\
&= \left(\boldsymbol{I} - \boldsymbol{R}_{2_a}\boldsymbol{\Gamma}(\boldsymbol{\theta}(\xi)) \sum_{i=1,3} N_i(\xi)\,\boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow i})\,\boldsymbol{R}_{2_a}^T\right)\boldsymbol{\theta}_{2\delta} \\
&\quad + \boldsymbol{R}_{2_a}\boldsymbol{\Gamma}(\boldsymbol{\theta}(\xi))\,N_1\boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow 1})\,\boldsymbol{R}_{2_a}^T\boldsymbol{\theta}_{1\delta} \\
&\quad + \boldsymbol{R}_{2_a}\boldsymbol{\Gamma}(\boldsymbol{\theta}(\xi))\,N_3\boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow 3})\,\boldsymbol{R}_{2_a}^T\boldsymbol{\theta}_{3\delta} \\
&= \sum_{i=1,2,3} \boldsymbol{\Theta}_i(\xi)\,\boldsymbol{\theta}_{i\delta},
\end{aligned} \tag{13.39}$$

with

$$\boldsymbol{\Theta}_i(\xi) = \boldsymbol{R}_{2_a}\boldsymbol{\Gamma}(\boldsymbol{\theta}(\xi))\,N_i\boldsymbol{\Gamma}^{-1}(\boldsymbol{\theta}_{2\leftarrow i})\,\boldsymbol{R}_{2_a}^T \qquad i = 1 \text{ and } 3 \tag{13.40a}$$

$$\boldsymbol{\Theta}_2(\xi) = \boldsymbol{I} - \boldsymbol{\Theta}_1(\xi) - \boldsymbol{\Theta}_3(\xi) \tag{13.40b}$$

playing the role of shape functions.

In fact, note that, when $N_1 = 1$ and $N_3 = 0$, then $\boldsymbol{\Theta}_1 = \boldsymbol{I}$, $\boldsymbol{\Theta}_2 = \boldsymbol{\Theta}_3 = \boldsymbol{0}$ and $\boldsymbol{\theta}_\delta(\xi) = \boldsymbol{\theta}_{1\delta}$, while, when $N_1 = 0$ and $N_3 = 1$, then $\boldsymbol{\Theta}_1 = \boldsymbol{\Theta}_2 = \boldsymbol{0}$, $\boldsymbol{\Theta}_3 = \boldsymbol{I}$ and $\boldsymbol{\theta}_\delta(\xi) = \boldsymbol{\theta}_{3\delta}$. Finally, when $N_1 = N_3 = 0$, then $\boldsymbol{\Theta}_1 = \boldsymbol{\Theta}_3 = \boldsymbol{0}$, $\boldsymbol{\Theta}_2 = \boldsymbol{I}$ and $\boldsymbol{\theta}_\delta(\xi) = \boldsymbol{\theta}_{2\delta}$. Moreover, $\sum_{i=1,2,3} \boldsymbol{\Theta}_i(\xi) = \boldsymbol{I}\ \forall\xi$.

Position perturbation at an arbitrary location ξ:

$$\delta\boldsymbol{x}(\xi) = \sum_{i=1,2,3} N_i(\xi)\,(\delta\boldsymbol{x}_i + \boldsymbol{\theta}_{i\delta}\times\boldsymbol{o}_i)\,. \tag{13.41}$$

Angular velocity perturbation at an arbitrary location ξ:

$$\begin{aligned}
\delta\boldsymbol{\omega}(\xi) &= \sum_{i=1,2,3} N_i\delta\boldsymbol{\omega}_i \\
&\overset{\text{uu}}{=} \sum_{i=1,2,3} N_i\,(\delta\dot{\boldsymbol{g}}_i - \boldsymbol{\omega}_i\times\delta\boldsymbol{g}_i)\,.
\end{aligned} \tag{13.42}$$

Velocity perturbation at an arbitrary location ξ:

$$\begin{aligned}
\delta\boldsymbol{v}_{\text{kin}}(\xi) &= \sum_{i=1,2,3} N_i(\xi)\,(\delta\boldsymbol{v}_i + \delta\boldsymbol{\omega}_i\times\boldsymbol{o}_i + \boldsymbol{\omega}_i\times\delta\boldsymbol{o}_i) \\
&= \sum_{i=1,2,3} N_i(\xi)\,(\delta\boldsymbol{v}_i - \boldsymbol{o}_i\times\delta\boldsymbol{\omega}_i - \boldsymbol{\omega}_i\times\boldsymbol{o}_i\times\boldsymbol{\theta}_{i\delta}) \\
&\overset{\text{uu}}{=} \sum_{i=1,2,3} N_i(\xi)\,(\delta\dot{\boldsymbol{x}}_i - \boldsymbol{o}_i\times\delta\dot{\boldsymbol{g}}_i - (\boldsymbol{\omega}_i\times\boldsymbol{o}_i)\times\delta\boldsymbol{g}_i)\,.
\end{aligned} \tag{13.43}$$

Boundary Conditions Perturbation. Angular velocity perturbation:

$$\begin{aligned}\delta\tilde{\boldsymbol{\omega}}(\xi) &= \boldsymbol{R}^T(\xi)\sum_{i=1,2,3}\left(N_i(\xi)\,\delta\boldsymbol{\omega}_i+\boldsymbol{\omega}(\xi)\times\boldsymbol{\Theta}_i(\xi)\,\boldsymbol{\theta}_{i\delta}\right)\\ &\overset{\text{uu}}{=}\boldsymbol{R}^T(\xi)\left(N_i(\xi)\,\delta\dot{\boldsymbol{g}}_i+\left(\boldsymbol{\omega}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\,\boldsymbol{\omega}_i\times\right)\delta\boldsymbol{g}_i\right).\end{aligned}\tag{13.44}$$

Velocity perturbation:

$$\begin{aligned}\delta\tilde{\boldsymbol{v}}(\xi) &= \boldsymbol{R}^T(\xi)\left(N_i(\xi)\,\delta\boldsymbol{v}_i-N_i(\xi)\,\boldsymbol{o}_i\times\delta\boldsymbol{\omega}_i\right.\\ &\qquad\left.+\left(\boldsymbol{v}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\,\boldsymbol{\omega}_i\times\boldsymbol{o}_i\times\right)\boldsymbol{\theta}_{i\delta}\right)\\ &\overset{\text{uu}}{=}\boldsymbol{R}^T(\xi)\left(N_i(\xi)\,\delta\dot{\boldsymbol{x}}_i-N_i(\xi)\,\boldsymbol{o}_i\times\delta\dot{\boldsymbol{g}}_i\right.\\ &\qquad\left.+\left(\boldsymbol{v}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\left(\boldsymbol{\omega}_i\times\boldsymbol{o}_i\right)\times\right)\delta\boldsymbol{g}_i\right).\end{aligned}\tag{13.45}$$

They can be summarized as

$$\begin{aligned}\begin{Bmatrix}\delta\tilde{\boldsymbol{v}}(\xi)\\ \delta\tilde{\boldsymbol{\omega}}(\xi)\end{Bmatrix} &= \begin{bmatrix}\boldsymbol{R}^T(\xi) & \boldsymbol{0}\\ \boldsymbol{0} & \boldsymbol{R}^T(\xi)\end{bmatrix}\sum_{i=1,2,3}\left(N_i(\xi)\begin{bmatrix}\boldsymbol{I} & -\boldsymbol{o}_i\times\\ \boldsymbol{0} & \boldsymbol{I}\end{bmatrix}\begin{Bmatrix}\delta\boldsymbol{v}_i\\ \delta\boldsymbol{\omega}_i\end{Bmatrix}\right.\\ &\qquad\left.+\begin{bmatrix}\boldsymbol{v}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\,\boldsymbol{\omega}_i\times\boldsymbol{o}_i\times\\ \boldsymbol{\omega}(\xi)\times\boldsymbol{\Theta}_i(\xi)\end{bmatrix}\boldsymbol{\theta}_{i\delta}\right)\\ &\overset{\text{uu}}{=}\begin{bmatrix}\boldsymbol{R}^T(\xi) & \boldsymbol{0}\\ \boldsymbol{0} & \boldsymbol{R}^T(\xi)\end{bmatrix}\sum_{i=1,2,3}\left(N_i(\xi)\begin{bmatrix}\boldsymbol{I} & -\boldsymbol{o}_i\times\\ \boldsymbol{0} & \boldsymbol{I}\end{bmatrix}\begin{Bmatrix}\delta\dot{\boldsymbol{x}}_i\\ \delta\dot{\boldsymbol{g}}_i\end{Bmatrix}\right.\\ &\qquad\left.+\begin{bmatrix}\boldsymbol{v}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\left(\boldsymbol{\omega}_i\times\boldsymbol{o}_i\right)\times\\ \boldsymbol{\omega}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\,\boldsymbol{\omega}_i\times\end{bmatrix}\delta\boldsymbol{g}_i\right).\end{aligned}\tag{13.46}$$

Contribution to Jacobian Matrix. After defining

$$\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi)\tag{13.47a}$$

$$\boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi)\tag{13.47b}$$

$$\boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi)\tag{13.47c}$$

$$\boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi)\tag{13.47d}$$

$$\boldsymbol{B}_{\tilde{\boldsymbol{v}}} = \boldsymbol{v}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\left(\boldsymbol{\omega}_i\times\boldsymbol{o}_i\right)\times\tag{13.47e}$$

$$\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} = \boldsymbol{\omega}(\xi)\times\boldsymbol{\Theta}_i(\xi)-N_i(\xi)\,\boldsymbol{\omega}_i\times\tag{13.47f}$$

$$\boldsymbol{d}_n(\xi) = \boldsymbol{x}(\xi)-\boldsymbol{x}_n,\tag{13.47g}$$

the contribution of the i-th node's motion to the equilibrium of the n-th node ($i = 1, 2, 3$, $n = 1, 2, 3$) is

$$
\begin{aligned}
& N_i(\xi) \begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} \\ \boldsymbol{d}_n(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} \end{bmatrix} \delta\dot{\boldsymbol{x}}_i \\
+ N_i(\xi) & \begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} - \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{o}_i \times \\ \boldsymbol{d}_n(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} - \left(\boldsymbol{d}_n(\xi) \times \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\right)\boldsymbol{o}_i \times \end{bmatrix} \delta\dot{\boldsymbol{g}}_i \\
& + \begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} \\ \boldsymbol{d}_n(\xi) \times \left(\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}}\right) + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} \end{bmatrix} \delta\boldsymbol{g}_i \\
& + \begin{bmatrix} \boldsymbol{0} \\ -\left(N_i - \delta_{ni}\right)\Delta\boldsymbol{f}_n \times \end{bmatrix} \delta\boldsymbol{x}_i \\
& + \begin{bmatrix} -\Delta\boldsymbol{f}_n \times \boldsymbol{\Theta}_i(\xi) \\ -\left(\boldsymbol{d}_n(\xi) \times \Delta\boldsymbol{f}_n \times + \Delta\boldsymbol{c}_n \times\right)\boldsymbol{\Theta}_i(\xi) + \Delta\boldsymbol{f}_n \times N_i\boldsymbol{o}_i \times \end{bmatrix} \delta\boldsymbol{g}_i \\
& \overset{\text{uu}}{=} \begin{Bmatrix} \delta\Delta\boldsymbol{f}_n \\ \delta\Delta\boldsymbol{c}_n \end{Bmatrix},
\end{aligned}
\tag{13.48}
$$

where δ_{ni} is Dirac's delta, which is 1 when $i = n$, and 0 otherwise.

13.6 Aerodynamic Beam (2 Nodes)

The `aerodynamic beam2` element applies aerodynamic forces to the nodes of a two node structural beam element.

The aerodynamic forces/moments acting on each node are computed based on the relative velocity of a set of locations along the beam and the airstream. The kinematic quantities of the beam are computed based on an interpolation of the kinematics of the three nodes.

Kinematics Interpolation. *Note: this part is common to all elements that use the two-node beam discretization and interpolation model.* The generic field variable $\boldsymbol{p}(x)$ is interpolated using linear functions related to the value of the field variable at two locations that in general can be offset from the nodes,

$$
\boldsymbol{p}(\xi) = \sum_{i=1,2} N_i(\xi)\,\boldsymbol{p}_i,
\tag{13.49}
$$

with

$$
N_1 = \frac{1}{2}(1 - \xi)
\tag{13.50a}
$$

$$
N_2 = \frac{1}{2}(1 + \xi).
\tag{13.50b}
$$

Orientation at an arbitrary location ξ:

$$
\boldsymbol{R}(\xi) = \boldsymbol{R}_{\text{mid}}\exp\left(\boldsymbol{\theta}(\xi) \times\right)
\tag{13.51}
$$

$$
\boldsymbol{R}_{\text{mid}} = \boldsymbol{R}_{1_a}\exp\left(\overline{\boldsymbol{\theta}} \times\right) = \boldsymbol{R}_{2_a}\exp\left(\overline{\boldsymbol{\theta}} \times\right)^T
\tag{13.52}
$$

$$
\overline{\boldsymbol{\theta}} = \frac{1}{2}\text{ax}\left(\exp^{-1}\left(\boldsymbol{R}_{1_a}^T\boldsymbol{R}_{2_a}\right)\right)
\tag{13.53}
$$

$$
\boldsymbol{\theta}(\xi) = \sum_{i=1,2} N_i(\xi)\,\boldsymbol{\theta}_{\text{mid}\leftarrow i} = N_1(\xi)\,\boldsymbol{\theta}_{\text{mid}\leftarrow 1} + N_2(\xi)\,\boldsymbol{\theta}_{\text{mid}\leftarrow 2}
\tag{13.54}
$$

$$
\boldsymbol{\theta}_{\text{mid}\leftarrow 1} = -\overline{\boldsymbol{\theta}}
\tag{13.55}
$$

$$
\boldsymbol{\theta}_{\text{mid}\leftarrow 2} = \overline{\boldsymbol{\theta}}.
\tag{13.56}
$$

Orientation is dealt with specially, given its special nature. The orientation of the mid point is used as a reference, and the orientation parameters that express the relative orientation between each of the end nodes and the mid point are interpolated. The interpolated orientation parameters are used to compute the interpolated relative orientation matrix, which is then pre-multiplied by the orientation matrix of the mid point.

Since the Euler-Rodrigues parametrization is used (the so-called 'rotation vector'), the magnitude of the relative orientation between each end node must be limited (formally, to π, but it should be less for accuracy).

Note that since the generic orientation $\boldsymbol{R}(\xi)$ is the result of a sequence of orientations about a common axis $\overline{\boldsymbol{\theta}}$, it can be conveniently rewritten as

$$\begin{aligned}\boldsymbol{R}(\xi) &= \boldsymbol{R}_{1_a}\exp\left(\overline{\boldsymbol{\theta}}\times\right)\exp\left(\left(\left(N_2(\xi)-N_1(\xi)\right)\overline{\boldsymbol{\theta}}\right)\times\right)\\ &= \boldsymbol{R}_{1_a}\exp\left(\left(\left(1+N_2(\xi)-N_1(\xi)\right)\overline{\boldsymbol{\theta}}\right)\times\right).\end{aligned} \tag{13.57}$$

In fact, when $\xi=-1$, $N_1=1$ and $N_2=0$, then $\boldsymbol{R}(\xi)=\boldsymbol{R}_{1_a}$, while when $\xi=1$, $N_1=0$ and $N_2=1$, then $\boldsymbol{R}(\xi)=\boldsymbol{R}_{2_a}$.

Position at an arbitrary location ξ:

$$\boldsymbol{x}(\xi)=\sum_{i=1,2}N_i(\xi)\left(\boldsymbol{x}_i+\boldsymbol{o}_i\right), \tag{13.58}$$

with $\boldsymbol{o}_i=\boldsymbol{R}_i\tilde{\boldsymbol{o}}_i$.

Angular velocity at an arbitrary location ξ:

$$\boldsymbol{\omega}(\xi)=\sum_{i=1,2}N_i(\xi)\,\boldsymbol{\omega}_i. \tag{13.59}$$

Velocity at an arbitrary location ξ:

$$\boldsymbol{v}_{\text{kin}}(\xi)=\sum_{i=1,2}N_i(\xi)\left(\boldsymbol{v}_i+\boldsymbol{\omega}_i\times\boldsymbol{o}_i\right). \tag{13.60}$$

Perturbation of Interpolated Kinematics. Orientation perturbation at an arbitrary location ξ:

$$\boldsymbol{\theta}_\delta(\xi)=\frac{1+N_2(\xi)-N_1(\xi)}{2}\boldsymbol{\theta}_{2\delta}+\frac{1+N_1(\xi)-N_2(\xi)}{2}\boldsymbol{\theta}_{1\delta} \tag{13.61}$$

$$=\sum_{i=1,2}\mathcal{N}_i(\xi)\,\boldsymbol{\theta}_{i\delta}, \tag{13.62}$$

with

$$\mathcal{N}_i(\xi)=\frac{1+N_i(\xi)-N_{3-i}(\xi)}{2}. \tag{13.63a}$$

Note, however, that according to Eqs. (13.50), the shape functions of Eq. (13.63a) are $\mathcal{N}_i(\xi)=N_i(\xi)$.

Position perturbation at an arbitrary location ξ:

$$\delta\boldsymbol{x}(\xi)=\sum_{i=1,2}N_i(\xi)\left(\delta\boldsymbol{x}_i+\boldsymbol{\theta}_{i\delta}\times\boldsymbol{o}_i\right). \tag{13.64}$$

Angular velocity perturbation at an arbitrary location ξ:

$$\begin{aligned}\delta\boldsymbol{\omega}(\xi) &= \sum_{i=1,2}N_i\delta\boldsymbol{\omega}_i\\ &\overset{\text{uu}}{=} \sum_{i=1,2}N_i\left(\delta\dot{\boldsymbol{g}}_i-\boldsymbol{\omega}_i\times\delta\boldsymbol{g}_i\right).\end{aligned} \tag{13.65}$$

Velocity perturbation at an arbitrary location ξ:

$$\begin{aligned}\delta \boldsymbol{v}_{\text{kin}}(\xi) &= \sum_{i=1,2} N_i(\xi)\left(\delta \boldsymbol{v}_i + \delta \boldsymbol{\omega}_i \times \boldsymbol{o}_i + \boldsymbol{\omega}_i \times \delta \boldsymbol{o}_i\right) \\ &= \sum_{i=1,2} N_i(\xi)\left(\delta \boldsymbol{v}_i - \boldsymbol{o}_i \times \delta \boldsymbol{\omega}_i - \boldsymbol{\omega}_i \times \boldsymbol{o}_i \times \boldsymbol{\theta}_{i\delta}\right) \\ &\overset{\text{uu}}{=} \sum_{i=1,2} N_i(\xi)\left(\delta \dot{\boldsymbol{x}}_i - \boldsymbol{o}_i \times \delta \dot{\boldsymbol{g}}_i - (\boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \delta \boldsymbol{g}_i\right). \end{aligned} \tag{13.66}$$

Boundary Conditions Perturbation. Angular velocity perturbation:

$$\begin{aligned}\delta \tilde{\boldsymbol{\omega}}(\xi) &= \boldsymbol{R}^T(\xi) \sum_{i=1,2} \left(N_i(\xi)\,\delta \boldsymbol{\omega}_i + \boldsymbol{\omega}(\xi) \times \mathcal{N}_i(\xi)\,\boldsymbol{\theta}_{i\delta}\right) \\ &\overset{\text{uu}}{=} \boldsymbol{R}^T(\xi) \sum_{i=1,2} \left(N_i(\xi)\,\delta \dot{\boldsymbol{g}}_i + (\mathcal{N}_i \boldsymbol{\omega}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i) \times \delta \boldsymbol{g}_i\right) \\ &= \boldsymbol{R}^T(\xi) \sum_{i=1,2} N_i(\xi)\left(\delta \dot{\boldsymbol{g}}_i + (\boldsymbol{\omega}(\xi) - \boldsymbol{\omega}_i) \times \delta \boldsymbol{g}_i\right). \end{aligned} \tag{13.67}$$

Velocity perturbation:

$$\begin{aligned}\delta \tilde{\boldsymbol{v}}(\xi) &= \boldsymbol{R}^T(\xi)\left(N_i(\xi)\,\delta \boldsymbol{v}_i - N_i(\xi)\,\boldsymbol{o}_i \times \delta \boldsymbol{\omega}_i \right. \\ &\qquad \left. + (\mathcal{N}_i(\xi)\,\boldsymbol{v}(\xi) \times\ - N_i(\xi)\,\boldsymbol{\omega}_i \times \boldsymbol{o}_i \times\ )\,\boldsymbol{\theta}_{i\delta}\right) \\ &\overset{\text{uu}}{=} \boldsymbol{R}^T(\xi)\left(N_i(\xi)\,\delta \dot{\boldsymbol{x}}_i - N_i(\xi)\,\boldsymbol{o}_i \times \delta \dot{\boldsymbol{g}}_i \right. \\ &\qquad \left. + (\mathcal{N}_i(\xi)\,\boldsymbol{v}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \delta \boldsymbol{g}_i\right) \\ &= \boldsymbol{R}^T(\xi)\, N_i(\xi)\left(\delta \dot{\boldsymbol{x}}_i - \boldsymbol{o}_i \times \delta \dot{\boldsymbol{g}}_i + (\boldsymbol{v}(\xi) - \boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \delta \boldsymbol{g}_i\right). \end{aligned} \tag{13.68}$$

They can be summarized as

$$\begin{aligned}\begin{Bmatrix} \delta \tilde{\boldsymbol{v}}(\xi) \\ \delta \tilde{\boldsymbol{\omega}}(\xi) \end{Bmatrix} &= \begin{bmatrix} \boldsymbol{R}^T(\xi) & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}^T(\xi) \end{bmatrix} \sum_{i=1,2} \left(N_i(\xi) \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{o}_i \times \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \delta \boldsymbol{v}_i \\ \delta \boldsymbol{\omega}_i \end{Bmatrix} \right. \\ &\qquad \left. + \begin{bmatrix} \mathcal{N}_i(\xi)\,\boldsymbol{v}(\xi) \times\ - N_i(\xi)\,\boldsymbol{\omega}_i \times \boldsymbol{o}_i \times \\ \mathcal{N}_i(\xi)\,\boldsymbol{\omega}(\xi) \times \end{bmatrix} \boldsymbol{\theta}_{i\delta} \right) \\ &\overset{\text{uu}}{=} \begin{bmatrix} \boldsymbol{R}^T(\xi) & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}^T(\xi) \end{bmatrix} \sum_{i=1,2} \left(N_i(\xi) \begin{bmatrix} \boldsymbol{I} & -\boldsymbol{o}_i \times \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \delta \dot{\boldsymbol{x}}_i \\ \delta \dot{\boldsymbol{g}}_i \end{Bmatrix} \right. \\ &\qquad \left. + \begin{bmatrix} (\mathcal{N}_i(\xi)\,\boldsymbol{v}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \\ (\mathcal{N}_i(\xi)\,\boldsymbol{\omega}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i) \times \end{bmatrix} \delta \boldsymbol{g}_i \right) \\ &= \begin{bmatrix} \boldsymbol{R}^T(\xi) & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{R}^T(\xi) \end{bmatrix} \sum_{i=1,2} N_i(\xi) \left(\begin{bmatrix} \boldsymbol{I} & -\boldsymbol{o}_i \times \\ \boldsymbol{0} & \boldsymbol{I} \end{bmatrix} \begin{Bmatrix} \delta \dot{\boldsymbol{x}}_i \\ \delta \dot{\boldsymbol{g}}_i \end{Bmatrix} \right. \\ &\qquad \left. + \begin{bmatrix} (\boldsymbol{v}(\xi) - \boldsymbol{\omega}_i \times \boldsymbol{o}_i) \times \\ (\boldsymbol{\omega}(\xi) - \boldsymbol{\omega}_i) \times \end{bmatrix} \delta \boldsymbol{g}_i \right). \end{aligned} \tag{13.69}$$

i

Contribution to Jacobian Matrix. After defining

$$\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi) \tag{13.70a}$$
$$\boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi) \tag{13.70b}$$
$$\boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{R}^T(\xi) \tag{13.70c}$$
$$\boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} = \boldsymbol{R}(\xi)\,\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{R}^T(\xi) \tag{13.70d}$$
$$\begin{aligned}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} &= (\mathcal{N}_i(\xi)\,\boldsymbol{v}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i \times \boldsymbol{o}_i)\times \\ &= N_i(\xi)\,(\boldsymbol{v}(\xi) - \boldsymbol{\omega}_i \times \boldsymbol{o}_i)\times\end{aligned} \tag{13.70e}$$
$$\begin{aligned}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} &= (\mathcal{N}_i(\xi)\,\boldsymbol{\omega}(\xi) - N_i(\xi)\,\boldsymbol{\omega}_i)\times \\ &= N_i(\xi)\,(\boldsymbol{\omega}(\xi) - \boldsymbol{\omega}_i)\times\end{aligned} \tag{13.70f}$$
$$\boldsymbol{d}_n(\xi) = \boldsymbol{x}(\xi) - \boldsymbol{x}_n, \tag{13.70g}$$

the contribution of the i-th node's motion to the equilibrium of the n-th node ($i = 1, 2$, $n = 1, 2$) is

$$\begin{aligned}
&N_i(\xi)\begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} \\ \boldsymbol{d}_n(\xi)\times\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}} \end{bmatrix}\delta\dot{\boldsymbol{x}}_i \\
+N_i(\xi)&\begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} - \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{o}_i\times \\ \boldsymbol{d}_n(\xi)\times\boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}} - \left(\boldsymbol{d}_n(\xi)\times\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\right)\boldsymbol{o}_i\times \end{bmatrix}\delta\dot{\boldsymbol{g}}_i \\
+&\begin{bmatrix} \boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} \\ \boldsymbol{d}_n(\xi)\times\left(\boldsymbol{f}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{f}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}}\right) + \boldsymbol{c}_{a/\tilde{\boldsymbol{v}}}\boldsymbol{B}_{\tilde{\boldsymbol{v}}} + \boldsymbol{c}_{a/\tilde{\boldsymbol{\omega}}}\boldsymbol{B}_{\tilde{\boldsymbol{\omega}}} \end{bmatrix}\delta\boldsymbol{g}_i \\
&+\begin{bmatrix} \boldsymbol{0} \\ -(N_i - \delta_{ni})\,\Delta\boldsymbol{f}_n\times \end{bmatrix}\delta\boldsymbol{x}_i \\
+&\begin{bmatrix} -\mathcal{N}_i(\xi)\,\Delta\boldsymbol{f}_n\times \\ -\mathcal{N}_i(\xi)\,(\boldsymbol{d}_n(\xi)\times\Delta\boldsymbol{f}_n\times + \Delta\boldsymbol{c}_n\times) + \Delta\boldsymbol{f}_n\times N_i\boldsymbol{o}_i\times \end{bmatrix}\delta\boldsymbol{g}_i \\
&\overset{\text{uu}}{=}\begin{Bmatrix} \delta\Delta\boldsymbol{f}_n \\ \delta\Delta\boldsymbol{c}_n \end{Bmatrix},
\end{aligned} \tag{13.71}$$

where δ_{ni} is Dirac's delta, which is 1 when $i = n$, and 0 otherwise.

13.7 Unsteady aerodynamics model

(Author: Mattia Mattaboni)
The 2D unsteady aerodynamics loads are computed implementing the Theodorsen theory in state-space form using the Wagner approximation of the Theodorsen function.

$$\tilde{\boldsymbol{f}}_a = \frac{1}{2}\rho\tilde{\boldsymbol{v}}^T\tilde{\boldsymbol{v}}c\tilde{\boldsymbol{c}}_{f_a}(\boldsymbol{y}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}},\boldsymbol{q}), U_\infty) \tag{13.72a}$$
$$\tilde{\boldsymbol{c}}_a = \frac{1}{2}\rho\tilde{\boldsymbol{v}}^T\tilde{\boldsymbol{v}}c^2\tilde{\boldsymbol{c}}_{c_a}(\boldsymbol{y}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}},\boldsymbol{q}), U_\infty) \tag{13.72b}$$
$$\boldsymbol{0} = \boldsymbol{g}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}},\boldsymbol{q},\dot{\boldsymbol{q}}) = \dot{\boldsymbol{q}} - \boldsymbol{A}(U_\infty)\,\boldsymbol{q} - \boldsymbol{B}(U_\infty)\,\boldsymbol{u}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}}), \tag{13.72c}$$

where ρ is the air density, c the airfoil chord and $\boldsymbol{y}$ is

$$\boldsymbol{y} = \boldsymbol{C}(U_\infty)\,\boldsymbol{q} + \boldsymbol{D}(U_\infty)\,\boldsymbol{u}(\tilde{\boldsymbol{v}},\tilde{\boldsymbol{\omega}}). \tag{13.73}$$

Table 13.1: Coefficients of the Wagner indicial response approximation of Theodorsen's function ([1, 2])

	approx. 1	approx. 2
A_1	0.165	0.165
A_2	0.335	0.335
b_1	0.0455	0.041
b_2	0.3	0.32

Matrix $\boldsymbol{A}$ is

$$\boldsymbol{A} = \begin{bmatrix} 0 & 1 & 0 & 0 & 0 & 0 \\ -b_1 b_2 \left(\frac{2U_\infty}{c}\right)^2 & -\left(b_1+b_2\right)\left(\frac{2U_\infty}{c}\right) & 0 & 0 & 0 & 0 \\ 0 & 0 & -2\omega_{\mathrm{PD}} & -\omega_{\mathrm{PD}}^2 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & -2\omega_{\mathrm{PD}} & -\omega_{\mathrm{PD}}^2 \\ 0 & 0 & 0 & 0 & 1 & 0 \end{bmatrix}, \tag{13.74}$$

where A_1, A_2, b_1 and b_2 are the coefficients of the Theodorsen function approximation (Table 13.1 from [1] and [2]), ω_{PD} is the frequency of the pseudo-derivative algorithm

$$\mathcal{L}\left(\dot{f}\right) = s\mathcal{L}\left(f\right) - f\left(0\right) \cong \frac{s}{\left(1+s/\omega_{\mathrm{PD}}\right)^2}\mathcal{L}\left(f\right) \tag{13.75}$$

(where $f\left(0\right)$ can be neglected under broad assumptions), and

$$U_\infty = \sqrt{\tilde{v}_x^2 + \tilde{v}_y^2}. \tag{13.76}$$

Matrix $\boldsymbol{B}$ is

$$\boldsymbol{B} = \tilde{\boldsymbol{B}}\boldsymbol{T}_u\left(U_\infty\right), \tag{13.77}$$

where

$$\tilde{\boldsymbol{B}} = \begin{bmatrix} 0 & 0 & 0 \\ 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 1 \\ 0 & 0 & 0 \end{bmatrix}, \tag{13.78}$$

and

$$\boldsymbol{T}_u = \begin{bmatrix} 0 & 1 \\ \begin{bmatrix} 1 & -\frac{d_{1/4}}{U_\infty} \\ 1 & -\frac{d_{3/4}}{U_\infty} \end{bmatrix}^{-1} \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ \frac{1}{d_{3/4}-d_{1/4}} \begin{bmatrix} d_{3/4} & -d_{1/4} \\ U_\infty & -U_\infty \end{bmatrix} \end{bmatrix}. \tag{13.79}$$

$$\boldsymbol{B} = \begin{bmatrix} 0 & 0 \\ 0 & 1 \\ \frac{1}{d_{3/4}-d_{1/4}} d_{3/4} & -\frac{1}{d_{3/4}-d_{1/4}} d_{1/4} \\ 0 & 0 \\ \frac{1}{d_{3/4}-d_{1/4}} U_\infty & -\frac{1}{d_{3/4}-d_{1/4}} U_\infty \\ 0 & 0 \end{bmatrix} \tag{13.80}$$

$$\boldsymbol{u} = \left\{ \begin{array}{c} \tan^{-1}\left(\frac{-V_y - \omega_z d_{1/4}}{V_x}\right) \\ \tan^{-1}\left(\frac{-V_y - \omega_z d_{3/4}}{V_x}\right) \end{array} \right\} \tag{13.81}$$

Matrix $\boldsymbol{C}$ is

$$\boldsymbol{C} = \left[\begin{array}{cccccc} (A_1 + A_2)\, b_1 b_2 \left(\frac{2U_\infty}{c}\right)^2 & (A_1 b_1 + A_2 b_2)\left(\frac{2U_\infty}{c}\right) & 0 & 0 & 0 & 0 \\ 0 & 0 & \omega_{\mathrm{PD}}^2 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & \omega_{\mathrm{PD}}^2 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{array} \right]. \tag{13.82}$$

Matrix $\boldsymbol{D}$ is

$$\boldsymbol{D} = \tilde{\boldsymbol{D}} \boldsymbol{T}_u \left(U_\infty\right), \tag{13.83}$$

where

$$\tilde{\boldsymbol{D}} = \left[\begin{array}{ccc} (1 - A_1 - A_2) & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 1 \end{array} \right]. \tag{13.84}$$

$$\boldsymbol{D} = \left[\begin{array}{cc} 0 & (1 - A_1 - A_2) \\ 0 & 0 \\ 0 & 0 \\ \frac{1}{d_{3/4} - d_{1/4}} U_\infty & -\frac{1}{d_{3/4} - d_{1/4}} U_\infty \end{array} \right]. \tag{13.85}$$

$$\tilde{\boldsymbol{c}}_{f_a} = \left\{ \begin{array}{c} -c_d \\ c_l \\ 0 \end{array} \right\} = \boldsymbol{c}_{f_a}^{\text{lookup}}\left(\boldsymbol{y}\right) + \tilde{\boldsymbol{T}}_{f_a} \boldsymbol{y}. \tag{13.86}$$

$$\tilde{\boldsymbol{c}}_{c_a} = \left\{ \begin{array}{c} 0 \\ 0 \\ c_m \end{array} \right\} = \boldsymbol{c}_{c_a}^{\text{lookup}}\left(\boldsymbol{y}\right) + \tilde{\boldsymbol{T}}_{c_a} \boldsymbol{y}. \tag{13.87}$$

The second part is the noncirculatory effect.

$$\left\{ \begin{array}{c} c_l^{NC} \\ c_m^{NC} \end{array} \right\} = \boldsymbol{T}_1 \boldsymbol{T}_2 \left(U_\infty\right) \boldsymbol{y} = \tilde{\boldsymbol{T}} \boldsymbol{y}, \tag{13.88}$$

where

$$\boldsymbol{T}_1 = \left[\begin{array}{cc} 1 & 0 \\ -\frac{a + \frac{1}{2}}{2} & 1 \end{array} \right], \tag{13.89}$$

and

$$\boldsymbol{T}_2 = \frac{C_{l_\alpha}}{2} \frac{c}{2} \left[\begin{array}{cccc} 0 & \frac{1}{U_\infty} & -\frac{ca}{2U_\infty^2} & 0 \\ 0 & \frac{a}{2U_\infty} & -\frac{c}{4U_\infty^2}\left(\frac{1}{8} + a^2\right) & -\frac{1}{4U_\infty} \end{array} \right]. \tag{13.90}$$

$$\tilde{\boldsymbol{T}} = \frac{C_{l_\alpha}}{2}\frac{c}{2}\begin{bmatrix} 0 & \frac{1}{U_\infty} & -\frac{ca}{2U_\infty^2} & 0 \\ 0 & -\frac{1}{4U_\infty} & \left(\frac{ca}{8U_\infty^2} - \frac{c}{32U_\infty^2}\right) & -\frac{1}{4U_\infty} \end{bmatrix} \tag{13.91}$$

$$\tilde{\boldsymbol{T}}_{f_a} = \frac{C_{l_\alpha}}{2}\frac{c}{2}\begin{bmatrix} 0 & \frac{1}{U_\infty} & -\frac{ca}{2U_\infty^2} & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \tag{13.92}$$

$$\tilde{\boldsymbol{T}}_{c_a} = \frac{C_{l_\alpha}}{2}\frac{c}{2}\begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & -\frac{1}{4U_\infty} & \left(\frac{ca}{8U_\infty^2} - \frac{c}{32U_\infty^2}\right) & -\frac{1}{4U_\infty} \end{bmatrix} \tag{13.93}$$

Finally,

$$\tilde{\boldsymbol{c}}_{f_a} = \boldsymbol{c}_{f_a}^{\text{lookup}}(y_1) + \begin{Bmatrix} 0 \\ \frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty}\left(y_2 - \frac{ca}{2U_\infty}y_3\right) \\ 0 \end{Bmatrix}. \tag{13.94}$$

$$\tilde{\boldsymbol{c}}_{c_a} = \boldsymbol{c}_{c_a}^{\text{lookup}}(y_1) + \begin{Bmatrix} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty}\left(-\frac{1}{4}y_2 + \left(\frac{ca}{8U_\infty} - \frac{c}{32U_\infty}\right)y_3 - \frac{1}{4}y_4\right) \end{Bmatrix}. \tag{13.95}$$

13.7.1 Perturbation of the Equations

Perturbation of $\boldsymbol{g}$ with respect to $\tilde{\boldsymbol{v}}$

The perturbation of $\boldsymbol{g}$ is

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}} = -\left(\boldsymbol{A}_{/U_\infty}\boldsymbol{q} + \boldsymbol{B}_{/U_\infty}\boldsymbol{u}\right)U_{\infty/\tilde{\boldsymbol{v}}} - \boldsymbol{B}\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}. \tag{13.96}$$

where, according to the previous definition of the matrices, the derivatives are

$$\boldsymbol{A}_{/U_\infty} = \begin{bmatrix} 0 & 0 & 0 & 0 & 0 & 0 \\ -b_1 b_2 \frac{8}{c^2}U_\infty & -(b_1+b_2)\frac{2}{c} & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \tag{13.97}$$

$$\boldsymbol{B}_{/U_\infty} = \begin{bmatrix} 0 & 0 \\ 0 & 0 \\ 0 & 0 \\ 0 & 0 \\ \frac{1}{d_{3/4}-d_{1/4}} & -\frac{1}{d_{3/4}-d_{1/4}} \\ 0 & 0 \end{bmatrix} \tag{13.98}$$

$$U_{\infty/\tilde{\boldsymbol{v}}} = \begin{bmatrix} \frac{\tilde{v}_x}{U_\infty} & \frac{\tilde{v}_y}{U_\infty} & 0 \end{bmatrix} \tag{13.99}$$

$$\boldsymbol{u}_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} \frac{\tilde{v}_y+\tilde{\omega}_z d_{1/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{1/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{1/4}} & \frac{-\tilde{v}_x}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{1/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{1/4}} & 0 \\ \frac{\tilde{v}_y+\tilde{\omega}_z d_{3/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}} & \frac{-\tilde{v}_x}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}} & 0 \end{bmatrix} \tag{13.100}$$

The explicit computation of each term of Eq. 13.96 yields

$$\left(\boldsymbol{A}_{U_\infty}\boldsymbol{q}+\boldsymbol{B}_{U_\infty}\boldsymbol{u}\right)U_{\infty/\tilde{v}} = \begin{Bmatrix} 0 \\ -b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2 \\ 0 \\ 0 \\ \frac{u_1-u_2}{d_{3/4}-d_{1/4}} \\ 0 \end{Bmatrix} \begin{Bmatrix} \frac{\tilde{v}_x}{U_\infty} & \frac{\tilde{v}_x}{U_\infty} & 0 \end{Bmatrix} \tag{13.101}$$

$$= \begin{bmatrix} 0 & 0 & 0 \\ \left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_x}{U_\infty} & \left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_y}{U_\infty} & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ \left(\frac{u_1-u_2}{d_{3/4}-d_{1/4}}\right)\frac{\tilde{v}_x}{U_\infty} & \left(\frac{u_1-u_2}{d_{3/4}-d_{1/4}}\right)\frac{\tilde{v}_y}{U_\infty} & 0 \\ 0 & 0 & 0 \end{bmatrix} \tag{13.102}$$

for the first, while the second yields

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(2,1) & \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(2,2) & 0 \\ \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,1) & \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,2) & 0 \\ 0 & 0 & 0 \\ \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(5,1) & \boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(5,2) & 0 \\ 0 & 0 & 0 \end{bmatrix} \tag{13.103}$$

The non-null terms are

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(2,1) = \boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,1) \tag{13.104}$$

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(2,2) = \boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,2) \tag{13.105}$$

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,1) = \boldsymbol{B}(3,1)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(1,1) + \boldsymbol{B}(3,2)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,1) \tag{13.106}$$

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,2) = \boldsymbol{B}(3,1)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(1,2) + \boldsymbol{B}(3,2)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,2) \tag{13.107}$$

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,1) = \boldsymbol{B}(5,1)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(1,1) + \boldsymbol{B}(5,2)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,1) \tag{13.108}$$

$$\boldsymbol{Bu}_{/\tilde{\boldsymbol{v}}}(3,2) = \boldsymbol{B}(5,1)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(1,2) + \boldsymbol{B}(5,2)\,\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}(2,2) \tag{13.109}$$

So, the Jacobian matrix $\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}$ is

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,1) & \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,2) & 0 \\ \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(3,1) & \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(3,2) & 0 \\ 0 & 0 & 0 \\ \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(5,1) & \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(5,2) & 0 \\ 0 & 0 & 0 \end{bmatrix}, \tag{13.110}$$

where the matrix elements are

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}\left(2,1\right)=-\left(-b_1b_2\frac{8}{c^2}U_\infty q_1-\left(b_1+b_2\right)\frac{2}{c}q_2\right)\frac{\tilde{v}_x}{U_\infty}-\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,1\right) \tag{13.111}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}\left(2,2\right)=-\left(-b_1b_2\frac{8}{c^2}U_\infty q_1-\left(b_1+b_2\right)\frac{2}{c}q_2\right)\frac{\tilde{v}_y}{U_\infty}-\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,2\right) \tag{13.112}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}\left(3,1\right)=-\left(\boldsymbol{B}\left(3,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(1,1\right)+\boldsymbol{B}\left(3,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,1\right)\right) \tag{13.113}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}\left(3,2\right)=-\left(\boldsymbol{B}\left(3,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(1,2\right)+\boldsymbol{B}\left(3,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,2\right)\right) \tag{13.114}$$

$$\boldsymbol{g}_{\tilde{\boldsymbol{v}}}\left(3,1\right)=-\left(\frac{u_1-u_2}{d_{3/4}-d_{1/4}}\right)\frac{\tilde{v}_x}{U_\infty}-\left(\boldsymbol{B}\left(5,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(1,1\right)+\boldsymbol{B}\left(5,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,1\right)\right) \tag{13.115}$$

$$\boldsymbol{g}_{\tilde{\boldsymbol{v}}}\left(3,2\right)=-\left(\frac{u_1-u_2}{d_{3/4}-d_{1/4}}\right)\frac{\tilde{v}_y}{U_\infty}-\left(\boldsymbol{B}\left(5,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(1,2\right)+\boldsymbol{B}\left(5,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{v}}}\left(2,2\right)\right) \tag{13.116}$$

Perturbation of g with respect to $\tilde{\omega}$

The perturbation of $\boldsymbol{g}$ yields

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}=-\boldsymbol{B}\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}. \tag{13.117}$$

Where

$$\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}=\begin{bmatrix}0 & 0 & \frac{-\tilde{v}_x d_{1/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{1/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{1/4}}\\ 0 & 0 & \frac{-\tilde{v}_x d_{3/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}}\end{bmatrix} \tag{13.118}$$

Thus,

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}=\begin{bmatrix}0 & 0 & 0\\ 0 & 0 & \boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right)\\ 0 & 0 & \boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(3,3\right)\\ 0 & 0 & 0\\ 0 & 0 & \boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(5,3\right)\\ 0 & 0 & 0\end{bmatrix} \tag{13.119}$$

where

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right)=-\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right) \tag{13.120}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(5,3\right)=-\left(\boldsymbol{B}\left(3,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}\left(1,3\right)+\boldsymbol{B}\left(3,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right)\right) \tag{13.121}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}}\left(5,3\right)=-\left(\boldsymbol{B}\left(5,1\right)\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}\left(1,3\right)+\boldsymbol{B}\left(5,2\right)\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}}\left(2,3\right)\right) \tag{13.122}$$

Perturbation of g with respect to q

The perturbation of $\boldsymbol{g}$ yields

$$\boldsymbol{g}_{/\boldsymbol{q}}=-\boldsymbol{A} \tag{13.123}$$

Perturbation of $\boldsymbol{g}$ with respect to $\dot{\boldsymbol{q}}$

The perturbation of $\boldsymbol{g}$ yields

$$\boldsymbol{g}_{/\dot{\boldsymbol{q}}} = \boldsymbol{I} \tag{13.124}$$

13.7.2 Perturbation of the aerodynamic forces

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\tilde{\boldsymbol{v}}$

$$\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}} = \rho c \tilde{\boldsymbol{c}}_{f_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{f_{a/U_\infty}} U_{\infty/\tilde{\boldsymbol{v}}} \right) \tag{13.125}$$

where

$$\boldsymbol{y}_{/\tilde{\boldsymbol{v}}} = \left(\boldsymbol{C}_{/U_\infty} \boldsymbol{q} + \boldsymbol{D}_{/U_\infty} \boldsymbol{u} \right) U_{\infty/\tilde{\boldsymbol{v}}} + \boldsymbol{D}\boldsymbol{u}_{/\tilde{\boldsymbol{v}}} \tag{13.126}$$

$$\boldsymbol{C}_{/U_\infty} = \begin{bmatrix} (A_1 + A_2)\, b_1 b_2 \frac{8}{c^2} U_\infty & (A_1 b_1 + A_2 b_2)\frac{2}{c} & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \tag{13.127}$$

$$\boldsymbol{D}_{/U_\infty} = \begin{bmatrix} 0 & 0 \\ 0 & 0 \\ 0 & 0 \\ \frac{1}{d_{3/4} - d_{1/4}} & -\frac{1}{d_{3/4} - d_{1/4}} \end{bmatrix} \tag{13.128}$$

$$\tilde{\boldsymbol{c}}_{f_{a/U_\infty}} = \begin{Bmatrix} 0 \\ \frac{C_{l_\alpha}}{2} \frac{c}{2} \frac{1}{U_\infty^2} \left(-y_2 + \frac{ca}{U_\infty} y_3 \right) \\ 0 \end{Bmatrix} \tag{13.129}$$

$$\tilde{\boldsymbol{c}}_{f_{a/\boldsymbol{y}}} = \begin{bmatrix} \frac{dc_d^{\text{lookup}}}{d\alpha} & 0 & 0 & 0 \\ \frac{dc_l^{\text{lookup}}}{d\alpha} & \frac{C_{l_\alpha}}{2} \frac{c}{2U_\infty} & -\frac{c_{l_\alpha}}{2} \frac{c^2 a}{4U_\infty^2} & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \tag{13.130}$$

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\tilde{\boldsymbol{\omega}}$

$$\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.131}$$

where

$$\boldsymbol{y}_{/\tilde{\boldsymbol{\omega}}} = \boldsymbol{D}\boldsymbol{u}_{/\tilde{\boldsymbol{\omega}}} \tag{13.132}$$

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\boldsymbol{q}$

$$\tilde{\boldsymbol{f}}_{a/\boldsymbol{q}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\boldsymbol{q}} \right) \tag{13.133}$$

where

$$\boldsymbol{y}_{/\boldsymbol{q}} = \boldsymbol{C} \tag{13.134}$$

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\dot{\boldsymbol{q}}$

$$\tilde{\boldsymbol{f}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.135}$$

13.7.3 Perturbation of the aerodynamic moments

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\tilde{\boldsymbol{v}}$

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}} = \rho c^2 \tilde{\boldsymbol{c}}_{c_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{c_{a/U_\infty}} U_{\infty/\tilde{\boldsymbol{v}}} \right) \tag{13.136}$$

$$\tilde{\boldsymbol{c}}_{c_{a/U_\infty}} = \begin{Bmatrix} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2} \frac{c}{2} \frac{1}{4U_\infty^2} \left(y_2 - \left(\frac{ca}{U_\infty} - \frac{c}{4U_\infty} \right) y_3 + y_4 \right) \end{Bmatrix} \tag{13.137}$$

$$\tilde{\boldsymbol{c}}_{c_{a/\boldsymbol{y}}} = \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ \frac{dc_m^{\text{lookup}}}{d\alpha} & -\frac{1}{4}\frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty} & \frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty}\left(\frac{ca}{8U_\infty} - \frac{c}{32U_\infty} \right) & -\frac{1}{4}\frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty} \end{bmatrix} \tag{13.138}$$

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\tilde{\boldsymbol{\omega}}$

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.139}$$

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\boldsymbol{q}$

$$\tilde{\boldsymbol{c}}_{a/\boldsymbol{q}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/\boldsymbol{y}}} \boldsymbol{y}_{/\boldsymbol{q}} \right) \tag{13.140}$$

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\dot{\boldsymbol{q}}$

$$\tilde{\boldsymbol{c}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.141}$$

13.7.4 Finite difference version

A reduced state-space model, with just 2 states instead of 6 states, can be used deleting the pseudo-derivative algorithm and computing the derivate using the backward finite diffenence.

The set of equations that descibes the unsteady aerodynamic loads is still the same:

$$\tilde{\boldsymbol{f}}_a = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \tilde{\boldsymbol{c}}_{f_a} \left(y\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q} \right), U_\infty \right) \tag{13.142a}$$

$$\tilde{\boldsymbol{c}}_a = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \tilde{\boldsymbol{c}}_{c_a} \left(y\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q} \right), U_\infty \right) \tag{13.142b}$$

$$\boldsymbol{0} = \boldsymbol{g}\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}}, \boldsymbol{q}, \dot{\boldsymbol{q}} \right) = \dot{\boldsymbol{q}} - \boldsymbol{A}\left(U_\infty \right) \boldsymbol{q} - \boldsymbol{B} u\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}} \right), \tag{13.142c}$$

where ρ is the air density, c the airfoil chord and $\boldsymbol{y}$ is defined as:

$$y = \boldsymbol{C}\left(U_\infty \right) \boldsymbol{q} + \boldsymbol{D} u\left(\tilde{\boldsymbol{v}}, \tilde{\boldsymbol{\omega}} \right). \tag{13.143}$$

In this case the matrix $\boldsymbol{A}$ is:

$$\boldsymbol{A} = \begin{bmatrix} 0 & 1 \\ -b_1 b_2 \left(\frac{2U_\infty}{c} \right)^2 & -\left(b_1 + b_2 \right) \left(\frac{2U_\infty}{c} \right) \end{bmatrix}, \tag{13.144}$$

where A_1, A_2, b_1 and b_2 are the coefficients of the Theodorsen function approximation (Table 13.1 from [1] and [2]),

The matrix $\boldsymbol{B}$ is simply:

$$\boldsymbol{B} = \begin{bmatrix} 0 \\ 1 \end{bmatrix}, \tag{13.145}$$

Whereas the input of the system u is the angle of attack computed at the 3/4 chord point:

$$u = \tan^{-1}\left(\frac{-V_y - \omega_z d_{3/4}}{V_x}\right) \tag{13.146}$$

The $\boldsymbol{C}$ matrix is:

$$\boldsymbol{C} = \begin{bmatrix} (A_1 + A_2)\, b_1 b_2 \left(\frac{2U_\infty}{c}\right)^2 & (A_1 b_1 + A_2 b_2)\left(\frac{2U_\infty}{c}\right) \end{bmatrix}. \tag{13.147}$$

and the $\boldsymbol{D}$ matrix:

$$\boldsymbol{D} = \begin{bmatrix} (1 - A_1 - A_2) \end{bmatrix}. \tag{13.148}$$

Using the otuput $\boldsymbol{y}$ of this SISO state-space model as input for the lookup table the circulatory part of the unsteady loads is computed.

The non-circulatory part is computed starting from the angle of attack computed at 1/4 chord (u_1) and 3/4 chord (u_2):

$$\begin{Bmatrix} \alpha_{pivot} \\ \dot{\alpha} \end{Bmatrix} = \begin{bmatrix} 1 & -\frac{d_{1/4}}{U_\infty} \\ 1 & -\frac{d_{3/4}}{U_\infty} \end{bmatrix}^{-1} \begin{Bmatrix} u_1 \\ u_2 \end{Bmatrix} = \frac{1}{d_{3/4} - d_{1/4}} \begin{bmatrix} d_{3/4} & -d_{1/4} \\ U_\infty & -U_\infty \end{bmatrix} \begin{Bmatrix} u_1 \\ u_2 \end{Bmatrix} \tag{13.149}$$

where:

$$\boldsymbol{u} = \begin{Bmatrix} \tan^{-1}\left(\frac{-V_y - \omega_z d_{1/4}}{V_x}\right) \\ \tan^{-1}\left(\frac{-V_y - \omega_z d_{3/4}}{V_x}\right) \end{Bmatrix} \tag{13.150}$$

Thus, the aerodynamic coefficients result:

$$\tilde{\boldsymbol{c}}_{f_a} = \boldsymbol{c}_{f_a}^{\text{lookup}}(y) + \begin{Bmatrix} 0 \\ \frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty}\left(\dot{\alpha}_{pivot} - \frac{ca}{2U_\infty}\ddot{\alpha}\right) \\ 0 \end{Bmatrix}. \tag{13.151}$$

$$\tilde{\boldsymbol{c}}_{c_a} = \boldsymbol{c}_{c_a}^{\text{lookup}}(y) + \begin{Bmatrix} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2}\frac{c}{2U_\infty}\left(-\frac{1}{4}\dot{\alpha}_{pivot} + \left(\frac{ca}{8U_\infty} - \frac{c}{32U_\infty}\right)\ddot{\alpha} - \frac{1}{4}\dot{\alpha}\right) \end{Bmatrix}. \tag{13.152}$$

In order to compute the aerodynamic coefficients $\dot{\alpha}_{pivot}$ and $\ddot{\alpha}$ are necessary and they can be computed using the backward finite difference:

$$\begin{Bmatrix} \dot{\alpha}_{pivot} \\ \ddot{\alpha} \end{Bmatrix} = \frac{1}{\Delta t}\left(\begin{Bmatrix} \alpha_{pivot} \\ \dot{\alpha} \end{Bmatrix}_k - \begin{Bmatrix} \alpha_{pivot} \\ \dot{\alpha} \end{Bmatrix}_{k-1}\right) \tag{13.153}$$

13.7.5 Perturbation of the equations

Perturbation of g with respect to $\tilde{v}$

The perturbation of $\boldsymbol{g}$ is:

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}} = -\boldsymbol{A}_{/U_\infty}\boldsymbol{q}U_{\infty/\tilde{\boldsymbol{v}}} - \boldsymbol{B}u_{/\tilde{\boldsymbol{v}}}. \tag{13.154}$$

where, accordingly with the previous definition of the matrices the derivatives are:

$$\boldsymbol{A}_{/U_\infty} = \begin{bmatrix} 0 & 0 \\ -b_1 b_2 \frac{8}{c^2} U_\infty & -(b_1+b_2)\frac{2}{c} \end{bmatrix} \tag{13.155}$$

$$U_{\infty/\tilde{\boldsymbol{v}}} = \begin{bmatrix} \frac{\tilde{v}_x}{U_\infty} & \frac{\tilde{v}_y}{U_\infty} & 0 \end{bmatrix} \tag{13.156}$$

$$u_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} \frac{\tilde{v}_y+\tilde{\omega}_z d_{3/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}} & \frac{-\tilde{v}_x}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}} & 0 \end{bmatrix} \tag{13.157}$$

We can now explicitly perform the computation of each term of Eq. 13.154:

$$\boldsymbol{A}_{U_\infty}\boldsymbol{q}U_{\infty/\tilde{v}} = \begin{Bmatrix} 0 \\ -b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2 \end{Bmatrix} \begin{Bmatrix} \frac{\tilde{v}_x}{U_\infty} & \frac{\tilde{v}_x}{U_\infty} & 0 \end{Bmatrix} \tag{13.158}$$

$$= \begin{bmatrix} 0 & 0 & 0 \\ \left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_x}{U_\infty} & \left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_y}{U_\infty} & 0 \end{bmatrix} \tag{13.159}$$

wheres the second is:

$$\boldsymbol{B}u_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ u_{/\tilde{\boldsymbol{v}}}(1,1) & u_{/\tilde{\boldsymbol{v}}}(1,2) & 0 \end{bmatrix} \tag{13.160}$$

So, the jacobian matrix $\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}$ results:

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}} = \begin{bmatrix} 0 & 0 & 0 \\ \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,1) & \boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,2) & 0 \end{bmatrix} \tag{13.161}$$

where the matrix elements are:

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,1) = -\left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_x}{U_\infty} - u_{/\tilde{\boldsymbol{v}}}(1,1) \tag{13.162}$$

$$\boldsymbol{g}_{/\tilde{\boldsymbol{v}}}(2,2) = -\left(-b_1 b_2 \frac{8}{c^2} U_\infty q_1 - (b_1+b_2)\frac{2}{c} q_2\right)\frac{\tilde{v}_y}{U_\infty} - u_{/\tilde{\boldsymbol{v}}}(1,2) \tag{13.163}$$

Perturbation of g with respect to $\tilde{\omega}$

The perturbation of $\boldsymbol{g}$ is:

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}} = -\boldsymbol{B}u_{/\tilde{\boldsymbol{\omega}}}. \tag{13.164}$$

Where:

$$u_{/\tilde{\boldsymbol{\omega}}} = \begin{bmatrix} 0 & 0 & \frac{-\tilde{v}_x d_{3/4}}{\tilde{v}_x^2+\tilde{v}_y^2+\tilde{\omega}_z^2 d_{3/4}^2+2\tilde{v}_y\tilde{\omega}_z d_{3/4}} \end{bmatrix} \tag{13.165}$$

Thus, it results:

$$\boldsymbol{g}_{/\tilde{\boldsymbol{\omega}}} = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & -u_{/\tilde{\boldsymbol{\omega}}}(1,3) \end{bmatrix} \tag{13.166}$$

Perturbation of $\boldsymbol{g}$ with respect to $\boldsymbol{q}$

The perturbation of $\boldsymbol{g}$ is simply:

$$\boldsymbol{g}_{/\boldsymbol{q}} = -\boldsymbol{A} \tag{13.167}$$

Perturbation of $\boldsymbol{g}$ with respect to $\dot{\boldsymbol{q}}$

The perturbation of $\boldsymbol{g}$ is simply:

$$\boldsymbol{g}_{/\dot{\boldsymbol{q}}} = \boldsymbol{I} \tag{13.168}$$

13.7.6 Perturbation of the aerodynamic forces

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\tilde{\boldsymbol{v}}$

$$\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{v}}} = \rho c \tilde{\boldsymbol{c}}_{f_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/y}} y_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{f_{a/U_\infty}} U_{\infty/\tilde{\boldsymbol{v}}} \right) \tag{13.169}$$

where:

$$y_{/\tilde{\boldsymbol{v}}} = \boldsymbol{C}_{/U_\infty} \boldsymbol{q} U_{\infty/\tilde{\boldsymbol{v}}} + \boldsymbol{D} u_{/\tilde{\boldsymbol{v}}} \tag{13.170}$$

$$\boldsymbol{C}_{/U_\infty} = \begin{bmatrix} (A_1 + A_2)\, b_1 b_2 \frac{8}{c^2} U_\infty & (A_1 b_1 + A_2 b_2)\, \frac{2}{c} \end{bmatrix} \tag{13.171}$$

$$\tilde{\boldsymbol{c}}_{f_{a/U_\infty}} = \begin{Bmatrix} 0 \\ \frac{C_{l_\alpha}}{2} \frac{c}{2} \frac{1}{U_\infty^2} \left(-\dot{\alpha}_{pivot} + \frac{ca}{U_\infty} \ddot{\alpha} \right) \\ 0 \end{Bmatrix} \tag{13.172}$$

$$\tilde{\boldsymbol{c}}_{f_{a/y}} = \begin{Bmatrix} \frac{dc_d^{\text{lookup}}}{d\alpha} \\ \frac{dc_l^{\text{lookup}}}{d\alpha} \\ 0 \end{Bmatrix} \tag{13.173}$$

where the dependence of $\dot{\alpha}_{pivot}$, $\dot{\alpha}$ and $\ddot{\alpha}$ is neglected.

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\tilde{\boldsymbol{\omega}}$

$$\tilde{\boldsymbol{f}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/\boldsymbol{y}}} y_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.174}$$

where:

$$y_{/\tilde{\boldsymbol{\omega}}} = \boldsymbol{D} u_{/\tilde{\boldsymbol{\omega}}} \tag{13.175}$$

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\boldsymbol{q}$

$$\tilde{\boldsymbol{f}}_{a/\boldsymbol{q}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c \left(\tilde{\boldsymbol{c}}_{f_{a/y}} \boldsymbol{y}_{/\boldsymbol{q}} \right) \tag{13.176}$$

where:

$$y_{/\boldsymbol{q}} = \boldsymbol{C} \tag{13.177}$$

Perturbation of $\tilde{\boldsymbol{f}}_a$ with respect to $\dot{\boldsymbol{q}}$

$$\tilde{\boldsymbol{f}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.178}$$

13.7.7 Perturbation of the aerodynamic moments

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\tilde{\boldsymbol{v}}$

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{v}}} = \rho c^2 \tilde{\boldsymbol{c}}_{c_a} \begin{bmatrix} \tilde{v}_x & \tilde{v}_y & \tilde{v}_z \end{bmatrix} + \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/y}} y_{/\tilde{\boldsymbol{v}}} + \tilde{\boldsymbol{c}}_{c_{a/U_\infty}} U_{\infty/\tilde{\boldsymbol{v}}} \right) \tag{13.179}$$

$$\tilde{\boldsymbol{c}}_{c_{a/U_\infty}} = \begin{Bmatrix} 0 \\ 0 \\ \frac{c_{l_\alpha}}{2} \frac{c}{2} \frac{1}{4U_\infty^2} \left(\dot{\alpha}_{pivot} - \left(\frac{ca}{U_\infty} - \frac{c}{4U_\infty} \right) \ddot{\alpha} + \dot{\alpha} \right) \end{Bmatrix} \tag{13.180}$$

$$\tilde{\boldsymbol{c}}_{c_{a/y}} = \begin{bmatrix} 0 \\ 0 \\ \frac{dc_m^{\text{lookup}}}{d\alpha} \end{bmatrix} \tag{13.181}$$

where again the dependence of $\dot{\alpha}_{pivot}$, $\dot{\alpha}$ and $\ddot{\alpha}$ is neglected.

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\tilde{\boldsymbol{\omega}}$

$$\tilde{\boldsymbol{c}}_{a/\tilde{\boldsymbol{\omega}}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/y}} y_{/\tilde{\boldsymbol{\omega}}} \right) \tag{13.182}$$

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\boldsymbol{q}$

$$\tilde{\boldsymbol{c}}_{a/\boldsymbol{q}} = \frac{1}{2}\rho \tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}} c^2 \left(\tilde{\boldsymbol{c}}_{c_{a/y}} y_{/\boldsymbol{q}} \right) \tag{13.183}$$

Perturbation of $\tilde{\boldsymbol{c}}_a$ with respect to $\dot{\boldsymbol{q}}$

$$\tilde{\boldsymbol{c}}_{a/\dot{\boldsymbol{q}}} = \boldsymbol{0} \tag{13.184}$$

13.8 Rotor

Definitions. Axis 3 is the rotor's axis. $\tilde{\boldsymbol{v}}$ is the composition of the velocity of the 'aircraft' node and of the airstream speed, if any, projected in the reference frame of the 'aircraft' node, namely

$$\tilde{\boldsymbol{v}} = \boldsymbol{R}_{\text{craft}}^T \left(-\boldsymbol{v}_{\text{craft}} + \boldsymbol{v}_\infty \right). \tag{13.185}$$

$$v_{12} = \sqrt{v_1^2 + v_2^2} \tag{13.186a}$$

$$v = \sqrt{v_1^2 + v_2^2 + v_3^2} = \sqrt{\tilde{\boldsymbol{v}}^T \tilde{\boldsymbol{v}}} \tag{13.186b}$$

$$\sin \alpha_d = -v_3/v \tag{13.186c}$$

$$\cos \alpha_d = v_{12}/v \tag{13.186d}$$

$$\psi_0 = \tan^{-1}\left(\frac{v_2}{v_1}\right) \tag{13.186e}$$

$$v_{\text{tip}} = \Omega R \tag{13.186f}$$

$$\mu = \cos \alpha_d \frac{v}{v_{\text{tip}}} \tag{13.186g}$$

Note: $v \geq 0$ and $v_{12} \geq 0$ by definition; as a consequence, $\cos \alpha_d \geq 0$, while the sign of $\sin \alpha_d$ depends on whether the flow related to the absolute motion of the rotor enters the disk from above (> 0) or from below (< 0). $v_{\text{tip}} > 0$ by construction ($\Omega = \|\boldsymbol{\omega}\|$, and no induced velocity is computed if Ω is below a threshold). As a consequence, $\mu \geq 0$.

Ground effect. If defined, according to [16],

$$u_{\text{IGE}} = k_{\text{GE}} u_{\text{OGE}} \tag{13.187a}$$

$$k = 1 - \frac{1}{z^2} \tag{13.187b}$$

$$z = \max\left(\frac{h}{R}, \frac{1}{4}\right) \tag{13.187c}$$

where h is the component along axis 3 of the 'ground' node of distance between the 'aircraft' and the 'ground' node, assuming the 'aircraft' node is located at the hub center.

Reference Induced Velocity. The reference induced velocity u is computed by solving the implicit problem

$$f = \lambda_u - \frac{C_t}{2\sqrt{\mu^2 + \lambda^2}} = 0, \tag{13.188}$$

with

$$C_t = \frac{T}{\rho \pi R^4 \Omega^2} \tag{13.189a}$$

$$\lambda_u = \frac{u}{v_{\text{tip}}} \tag{13.189b}$$

$$\lambda = \frac{v \sin \alpha_d + u}{v_{\text{tip}}} = \mu \tan \alpha_d + \lambda_u; \tag{13.189c}$$

T is the component of the aerodynamic force of the rotor along the shaft axis. The value of λ_u is initialized using the reference induced velocity u at the previous step/iteration. Only when $u = 0$ and $C_t \neq 0$, u is initialized using its nominal value in hover,

$$u = \text{sign}\,(T) \sqrt{\frac{\|T\|}{2\rho A}}. \tag{13.190}$$

The problem is solved by means of a local Newton iteration. The Jacobian of the problem is

$$\frac{\partial f}{\partial \lambda_u} = 1 + \frac{C_t}{2\left(\mu^2 + \lambda^2\right)^{3/2}}\lambda. \tag{13.191}$$

The solution,

$$\Delta\lambda_u = -\left(\frac{\partial f}{\partial \lambda_u}\right)^{-1} f, \tag{13.192}$$

is added to λ_u as $\lambda_u += \eta\Delta\lambda_u$, where $0 < \eta \leq 1$ is an optional relaxation factor (by default, $\eta = 1$).

Corrections. The reference induced velocity is corrected by separately correcting the inflow and advance parameters, namely

$$\lambda^* = \frac{\lambda}{k_{\mathrm{H}}^2} \tag{13.193a}$$

$$\mu^* = \frac{\mu}{k_{\mathrm{FF}}} \tag{13.193b}$$

(by default, $k_{\mathrm{H}} = 1$ and $k_{\mathrm{FF}} = 1$). The reference induced velocity is then recomputed as

$$u^* = (1-\rho)\, k_{\mathrm{GE}} v_{\mathrm{tip}} \frac{C_t}{2\sqrt{\mu^{*^2} + \lambda^{*^2}}} + \rho u^*_{\mathrm{prev}}, \tag{13.194}$$

where $0 \leq \rho < 1$ is a memory factor (by default, $\rho = 0$).

Note: in principle, multiple solutions for λ_u are possible. However, only one solution is physical. Currently, no strategy is put in place to ensure that only the physical solution is considered.

13.8.1 Uniform Inflow Model

The induced velocity is equal to its reference value, u^*, everywhere.

13.8.2 Glauert Model

In forward flight (when $\mu > 0.15$) the inflow over the rotor disk can be approximated by:

$$\lambda_i = \lambda_0 \left(1 + k_x \frac{x}{R} + k_y \frac{y}{R}\right) \tag{13.195}$$

$$= \lambda_0 \left(1 + k_x r \cos\psi + k_y r \sin\psi\right), \tag{13.196}$$

where the mean induced velocity λ_0 is computed as shown in the previous section, while $r = \sqrt{x^2 + y^2}/R$ is the nondimensional radius.

In literature a lot of expressions for the k_x and k_y coefficients have been proposed by different authors, as summarized in table 13.2. Up to now in MBDyn the following expressions are implemented:

$$k_x = \frac{4}{3}\left(1 - 1.8\mu^2\right)\tan\frac{\chi}{2} \tag{13.197}$$

$$k_y = 0, \tag{13.198}$$

FIXME: è diversa dalle espressioni riportate sul Leishman!

Table 13.2: Glauert inflow model (source: Leishman [2])

Author(s)	k_x	k_y
Coleman et al. (1945)	$\tan\frac{\chi}{2}$	0
Drees (1949)	$\frac{4}{3}\frac{\left(1-\cos\chi-1.8\mu^2\right)}{\sin\chi}$	-2μ
Payne (1959)	$\frac{4}{3}(\mu/\lambda/(1.2+\mu/\lambda))$	0
White & Blake (1979)	$\sqrt{2}\sin\chi$	0
Pitt & Peters (1981)	$\frac{15\pi}{23}\tan\frac{\chi}{2}$	0
Howlett (1981)	$\sin^2\chi$	0

where χ is the wake skew angle:

$$\chi = \tan^{-1}\left(\frac{\mu}{\lambda}\right). \tag{13.199}$$

TODO: check, dovrebbe essere equivalente all'espressione di Leishman ma sarebbe meglio verificare!!!

Note: the Glauert inflow model exactly matches the uniform inflow model when the advance ratio is null (in hover). In fact, when $\mu = 0$ then $\chi = k_x = 0$. The inflow is thus uniform over the rotor disk, and equal to λ_0.

Table 13.3: Glauert inflow model as implemented in MBDyn

Name	**Author(s)**	k_x	k_y
(default)	Glauert	$\frac{4}{3}\left(1-1.8\mu^2\right)\tan\left(\frac{\chi}{2}\right)$	0
`coleman`	Coleman et al. (1945)	$\tan\left(\frac{\chi}{2}\right)$	0
`drees`	Drees (1949)	$\frac{4}{3}\frac{\left(1-\cos\chi-1.8\mu^2\right)}{\sin\chi}$	-2μ
`payne`	Payne (1959)	$\frac{4}{3}\frac{\mu/\lambda}{1.2+\mu/\lambda}$	0
`white and blake`	White & Blake (1979)	$\sqrt{2}\sin\chi$	0
`pitt and peters`	Pitt & Peters (1981)	$\frac{15\pi}{23}\tan\left(\frac{\chi}{2}\right)$	0
`howlett`	Howlett (1981)	$\sin^2\chi$	0
`drees 2`	Drees (?)	$\frac{4}{3}\left(1-1.8\mu^2\right)\sqrt{1-\frac{\lambda}{\mu}+\left(\frac{\lambda}{\mu}\right)^2}$	-2μ

13.8.3 Mangler-Squire Model

The Mangler-Squire model is developed under the high speed assumption and it should be used only for advance ratio grater than 0.1.

In the original formulation the induced velocity is computed as:

$$\lambda_i = \left(\frac{2C_T}{\mu}\right)\left[\frac{c_0}{2} - \sum_{n=1}^{\infty} c_n(r,\alpha_d)\cos n\psi\right], \tag{13.200}$$

since the advance ratio μ appears in the denominator this expression is not valid in hover. Bramwell [17] proposed a different expression for the induced velocity:

$$\lambda_i = 4\lambda_0 \left[\frac{c_0}{2} - \sum_{n=1}^{\infty} c_n(r, \alpha_d) \cos n\psi \right], \tag{13.201}$$

where λ_0 is the mean inflow computed as shown before. In this way the Mangler-Squire inflow model makes sense also in hover. MBDyn uses the latter version.

The expression of the c_n coefficients depends on the form of the rotor disk loading. Mangler and Squire developed the theory for two fundamental forms: Type I (elliptical loading) and Type III (a loading that vanishes at the edges and at the center of the disk). The total loading is finally obtained by a linear combination of Type I and Type III loadings (see [2]).

MBDyn uses just a Type III loading, and the resulting expressions for the c_n coefficients are:

$$c_0 = \frac{15}{8}\eta\left(1-\eta^2\right), \tag{13.202}$$

where $\eta = \sqrt{1-r^2}$, and $r = \sqrt{x^2+y^2}/R$ is the nondimensional radius.

$$c_1 = -\frac{15\pi}{256}\left(5-9\eta^2\right)\left[\left(1-\eta^2\right)\left(\frac{1-\sin\alpha_d}{1+\sin\alpha_d}\right)\right]^{\frac{1}{2}}, \tag{13.203}$$

$$c_3 = \frac{45\pi}{256}\left[\left(1-\eta^2\right)\left(\frac{1-\sin\alpha_d}{1+\sin\alpha_d}\right)\right]^{\frac{3}{2}}, \tag{13.204}$$

and $c_n = 0$ for odd values of $n \geq 0$.

For even values:

$$c_n = (-1)^{\frac{n}{2}-1}\frac{15}{8}\left[\frac{\eta+n}{n^2-1}\frac{9\eta^2+\dot{n}^2-6}{n^2-9}+\frac{3\eta}{n^2-9}\right]\left[\left(\frac{1-\eta}{1+\eta}\right)\left(\frac{1-\sin\alpha_d}{1+\sin\alpha_d}\right)\right]^{\frac{n}{2}}, \tag{13.205}$$

Note: the version proposed by Bramwell [17] makes sense also in hover but gives different results with respect to the uniform inflow and the Glauert inflow models. Let assume $\alpha_d = \pi/2$, it follows that $c_n = 0$ for $n \geq 1$. Therefore the induced velocity does not depend on the azimuthal position ψ but only on the radial position r, so the inflow is not uniform, but the mean inflow is still λ_0.

13.8.4 Dynamic Inflow Model

The dynamic inflow model implemented in MBDyn has been developed by Pitt and Peters [18]. Here the model is just briefly described together with the MBDyn implementation peculiarities.

The inflow dynamics is represented by a simple first-order linear model:

$$\boldsymbol{M}\dot{\boldsymbol{\lambda}} + \boldsymbol{L}^{-1}\boldsymbol{\lambda} = \boldsymbol{c}, \tag{13.206}$$

where $\boldsymbol{\lambda}$ is a vector with 3 elements:

$$\boldsymbol{\lambda} = \begin{bmatrix} \lambda_0 \\ \lambda_s \\ \lambda_c \end{bmatrix}, \tag{13.207}$$

the induced velocity on the rotor disk is finally obtained as function of the azimuthal angle ψ and the non dimensional radial position $r = \frac{\sqrt{x^2+y^2}}{R}$ using the following equation:

$$u_{ind}(r,\psi) = \Omega R(\lambda_0 + \lambda_s r\sin\psi + \lambda_c r\cos\psi). \tag{13.208}$$

The right-hand term in equation 13.206 contains the thrust, roll moment and pitch moment coefficients:

$$\boldsymbol{c} = \begin{bmatrix} C_T \\ C_L \\ C_M \end{bmatrix} = \begin{bmatrix} \frac{T}{\rho A \Omega^2 R^2} \\ \frac{L}{\rho A \Omega^2 R^3} \\ \frac{M}{\rho A \Omega^2 R^3} \end{bmatrix}, \tag{13.209}$$

while $\boldsymbol{\lambda}$ is derived with respect a non-dimensional time Ωt:

$$\dot{\boldsymbol{\lambda}} = \frac{d\boldsymbol{\lambda}}{d(\Omega t)}. \tag{13.210}$$

Equation 13.206 could be rewritten as:

$$\boldsymbol{M}\dot{\boldsymbol{\lambda}} + \Omega \boldsymbol{L}^{-1}\boldsymbol{\lambda} = \Omega \boldsymbol{c}, \tag{13.211}$$

where now the dot represents the (dimensional) time derivative. The latter is the form implemented in MBDyn.

Matrix $\boldsymbol{L}$ is defined as:

$$\boldsymbol{L} = \tilde{\boldsymbol{L}} \cdot \boldsymbol{K} = \begin{bmatrix} \frac{1}{2} & 0 & \frac{15\pi}{64}\tan\frac{\chi}{2} \\ 0 & -\frac{4}{2\cos^2\frac{\chi}{2}} & 0 \\ \frac{15\pi}{64}\tan\frac{\chi}{2} & 0 & -\frac{4(2\cos^2\frac{\chi}{2}-1)}{2\cos^2\frac{\chi}{2}} \end{bmatrix} \begin{bmatrix} \frac{1}{V_T} & & \\ & \frac{1}{V_m} & \\ & & \frac{1}{V_m} \end{bmatrix}, \tag{13.212}$$

where χ is wake skew angle defined as:

$$\chi = \tan^{-1}\frac{\mu}{\lambda}, \tag{13.213}$$

where

$$\mu = \frac{V_\infty \cos\alpha_d}{\Omega R}, \tag{13.214}$$

and

$$\lambda = \frac{V_\infty \sin\alpha_d}{\Omega R} + \frac{u^0_{ind}}{\Omega R}, \tag{13.215}$$

where u^0_{ind} is the steady uniform induced velocity computed as described in the uniform inflow model section. The elements in matrix $\boldsymbol{K}$ matrix are respectively:

$$V_T = \sqrt{\lambda^2 + \mu^2}, \tag{13.216}$$

and

$$V_m = \frac{\mu^2 + \lambda\left(\lambda + \frac{u^0_{ind}}{\Omega R}\right)}{\sqrt{\lambda^2 + \mu^2}} \tag{13.217}$$

Note: matrix $\boldsymbol{L}$ is slightly different from matrix $\boldsymbol{L}$ in Pitt and Peters' paper [18] because here the first column elements are divided by V_T while the second and third columns elements by V_m, whereas in matrix $\boldsymbol{L}$ an unique value v is used for all the elements in the matrix. The V_m term corresponds to the *steady lift mass-flow parameter* defined in the Pitt and Peters paper, while the V_T corresponds to the *no lift mass-flow parameter*, because $\overline{\lambda} + \overline{\nu} = \lambda$ and $\overline{\nu} = u_{ind}^0/(\Omega R)$. Moreover in the Pitt and Peters work the elements are function of $\alpha = \tan^{-1}\frac{\lambda}{\mu}$, the relation between α and χ is:

$$\alpha = \frac{\pi}{2} - \chi. \tag{13.218}$$

So,

$$\sin\alpha = \cos\chi = \cos\left(\frac{\chi}{2} + \frac{\chi}{2}\right) = \cos^2\frac{\chi}{2} - \sin^2\frac{\chi}{2} = 2\cos^2\frac{\chi}{2} - 1, \tag{13.219}$$

$$\sqrt{\frac{1-\sin\alpha}{1+\sin\alpha}} = \sqrt{\frac{2-2\cos^2\frac{\chi}{2}}{2\cos^2\frac{\chi}{2}}} = \sqrt{\frac{2\sin^2\frac{\chi}{2}}{2\cos^2\frac{\chi}{2}}} = \tan\frac{\chi}{2}. \tag{13.220}$$

That means that the only difference in the MBDyn implementation is related to matrix $\boldsymbol{K}$.

In MBDyn the inversion of the $\boldsymbol{L}$ matrix is formulated analytically; matrix $\boldsymbol{L}^*$ is defined as:

$$\boldsymbol{L}^* = \Omega\boldsymbol{L}^{-1} = \Omega\begin{bmatrix} \frac{l_{33}}{l_{11}l_{33}-l_{13}l_{31}} & 0 & -\frac{l_{13}}{l_{11}l_{33}-l_{13}l_{31}} \\ 0 & \frac{1}{l_{22}} & 0 \\ -\frac{l_{31}}{l_{11}l_{33}-l_{13}l_{31}} & 0 & \frac{l_{11}}{l_{11}l_{33}-l_{13}l_{31}} \end{bmatrix}. \tag{13.221}$$

Finally, matrix $\boldsymbol{M}$ is defined as:

$$\boldsymbol{M} = \begin{bmatrix} \frac{128}{75\pi} & 0 & 0 \\ 0 & -\frac{16}{45\pi} & 0 \\ 0 & 0 & -\frac{16}{45\pi} \end{bmatrix}. \tag{13.222}$$

Note: this choice of matrix $\boldsymbol{M}$ corresponds to the mixed *uncorrected-corrected* (following the authors' nomenclature) M-matrix proposed by Pitt and Peters in their paper.

13.9 Aero Modal

13.9.1 Clamped

TODO

The matrices $\boldsymbol{A}$, $\boldsymbol{B}$, $\boldsymbol{C}$, $\boldsymbol{D}_0$, $\boldsymbol{D}_1$ and $\boldsymbol{D}_2$, of a state space model according to the representation

$$\dot{\boldsymbol{x}} = \boldsymbol{A}\boldsymbol{x} + \boldsymbol{B}\boldsymbol{q}$$

$$\boldsymbol{f} = q\left(\boldsymbol{C}\boldsymbol{x} + \boldsymbol{D}_0\boldsymbol{q} + \frac{c}{2V_\infty}\boldsymbol{D}_1\dot{\boldsymbol{q}} + \left(\frac{c}{2V_\infty}\right)^2\boldsymbol{D}_2\ddot{\boldsymbol{q}}\right)$$

where $\boldsymbol{x}$ are the aerodynamic state variables, $\boldsymbol{q}$ are the modal variables that describe the structural motion as defined in the related modal joint, c is the reference length, V_∞ is the free airstream velocity, $q = \rho V_\infty^2/2$ is the dynamic pressure, and $\boldsymbol{f}$ are the unsteady aerodynamic forces applied to the structural dynamics equations.

13.9.2 Free

TODO

The matrices $\boldsymbol{A}$, $\boldsymbol{B}$, $\boldsymbol{C}$, $\boldsymbol{D}_0$, $\boldsymbol{D}_1$ and $\boldsymbol{D}_2$, of a state space model according to the representation

$$\dot{\boldsymbol{x}} = \boldsymbol{A}\boldsymbol{x} + \boldsymbol{B}\boldsymbol{q} + \boldsymbol{B}_{q_x}\boldsymbol{q}_x + \boldsymbol{B}_{q_\theta}\boldsymbol{q}_\theta$$

$$\boldsymbol{f} = q\left(\boldsymbol{C}\boldsymbol{x} + \boldsymbol{D}_0\boldsymbol{q} + \boldsymbol{D}_{0q_x}\boldsymbol{q}_x + \boldsymbol{D}_{0q_\theta}\boldsymbol{q}_\theta + \frac{c}{2V_\infty}\left(\boldsymbol{D}_1\dot{\boldsymbol{q}} + \boldsymbol{D}_{1q_x}\dot{\boldsymbol{q}}_x + \boldsymbol{D}_{1q_\theta}\dot{\boldsymbol{q}}_\theta\right) + \left(\frac{c}{2V_\infty}\right)^2\left(\boldsymbol{D}_2\ddot{\boldsymbol{q}} + \boldsymbol{D}_{2q_x}\ddot{\boldsymbol{q}}_x + \boldsymbol{D}_{2q_\theta}\ddot{\boldsymbol{q}}_\theta\right)\right)$$

$$\boldsymbol{F} = q\boldsymbol{R}\left(\boldsymbol{C}_F\boldsymbol{x} + \boldsymbol{D}_{0F}\boldsymbol{q} + \boldsymbol{D}_{0Fq_x}\boldsymbol{q}_x + \boldsymbol{D}_{0Fq_\theta}\boldsymbol{q}_\theta + \frac{c}{2V_\infty}\left(\boldsymbol{D}_{1F}\dot{\boldsymbol{q}} + \boldsymbol{D}_{1Fq_x}\dot{\boldsymbol{q}}_x + \boldsymbol{D}_{1Fq_\theta}\dot{\boldsymbol{q}}_\theta\right) + \left(\frac{c}{2V_\infty}\right)^2\left(\boldsymbol{D}_{2F}\ddot{\boldsymbol{q}} + \boldsymbol{D}_{2Fq_x}\ddot{\boldsymbol{q}}_x\right.\right.$$

$$\boldsymbol{M} =$$

where $\boldsymbol{q}_x = \boldsymbol{R}^T(\boldsymbol{x} - \boldsymbol{x}_0)$, $\boldsymbol{q}_\theta = \boldsymbol{R}^T(\boldsymbol{\theta}_\Delta - \boldsymbol{\theta}_{\Delta 0})$, $\dot{\boldsymbol{q}}_x = \boldsymbol{R}^T\dot{\boldsymbol{x}}$, $\dot{\boldsymbol{q}}_\theta = \boldsymbol{R}^T\boldsymbol{\omega}$, ...

Chapter 14

Forces

14.1 Abstract Force

14.1.1 Abstract

14.1.2 Abstract Internal

14.2 Structural Forces

14.2.1 Force

Absolute

Follower

Absolute Internal

A structural internal force is a pair of internal forces, of equal magnitude and opposite direction, applied to two nodes. Consider two nodes, 1 and 2, and an internal force $\boldsymbol{f}$. The force is applied to node 1 with an offset, $\tilde{\boldsymbol{o}}_1$, in the node's reference frame.

The force and moment acting on the first node are

$$\boldsymbol{f}_1 = \boldsymbol{f} \tag{14.1a}$$

$$\boldsymbol{m}_1 = \boldsymbol{o}_1 \times \boldsymbol{f} \tag{14.1b}$$

with $\boldsymbol{o}_1 = \boldsymbol{R}_1 \tilde{\boldsymbol{o}}_1$, where $\boldsymbol{R}_1$ is the orientation matrix of the first node.

The force acting on the second node is

$$\boldsymbol{f}_2 = -\boldsymbol{f} \tag{14.2}$$

Two options are available for the moment applied to the second node:

- Case 1: the opposite force is applied to node 2 with another offset, $\tilde{\boldsymbol{o}}_2$, in the node's reference frame;
- Case 2: the opposite force is applied to node 2 in the same point where it is applied to node 1. This case is not implemented yet.

In the first case, the moment acting on the second node is

$$\boldsymbol{m}_2 = -\boldsymbol{o}_2 \times \boldsymbol{f} \tag{14.3}$$

with $\boldsymbol{o}_2 = \boldsymbol{R}_2\tilde{\boldsymbol{o}}_2$, where $\boldsymbol{R}_2$ is the orientation matrix of the second node.

In the second case, the moment acting on the second node is

$$\boldsymbol{m}_2 = -\left(\boldsymbol{p}_1 + \boldsymbol{o}_1 - \boldsymbol{p}_2\right) \times \boldsymbol{f} \tag{14.4}$$

where $\boldsymbol{p}_1$ and $\boldsymbol{p}_2$ are the positions of the two nodes.

When the force is *absolute*, its direction is fixed in the global reference frame. As such, $\boldsymbol{f}$ does not depend on the orientation of any node.

The linearization of the forces and moments is thus:

$$\Delta\boldsymbol{f}_1 = \boldsymbol{0} \tag{14.5a}$$
$$\Delta\boldsymbol{m}_1 = \left(\boldsymbol{\theta}_{1\Delta} \times \boldsymbol{o}_1\right) \times \boldsymbol{f} = \boldsymbol{f} \times \boldsymbol{o}_1 \times \boldsymbol{\theta}_{1\Delta} \tag{14.5b}$$
$$\Delta\boldsymbol{f}_2 = \boldsymbol{0} \tag{14.5c}$$

Case 1:

$$\Delta\boldsymbol{m}_2 = -\left(\boldsymbol{\theta}_{2\Delta} \times \boldsymbol{o}_2\right) \times \boldsymbol{f} = -\boldsymbol{f} \times \boldsymbol{o}_2 \times \boldsymbol{\theta}_{2\Delta} \tag{14.5d}$$

Case 2:

$$\Delta\boldsymbol{m}_2 = -\left(\Delta\boldsymbol{p}_1 + \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{o}_1 - \Delta\boldsymbol{p}_2\right) \times \boldsymbol{f} = \boldsymbol{f} \times \Delta\boldsymbol{p}_1 - \boldsymbol{f} \times \boldsymbol{o}_1 \times \boldsymbol{\theta}_{1\Delta} - \boldsymbol{f} \times \Delta\boldsymbol{p}_2 \tag{14.5e}$$

Follower Internal

When the force is *follower*, it can be expressed as

$$\boldsymbol{f} = \boldsymbol{R}_1\tilde{\boldsymbol{f}} \tag{14.6}$$

with $\tilde{\boldsymbol{f}}$ expressed in the frame of the first node, i.e., it is assumed to follow the orientation of the first node.

The linearization of the forces and moments is thus:

$$\Delta\boldsymbol{f}_1 = \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{f} = -\boldsymbol{f} \times \boldsymbol{\theta}_{1\Delta} \tag{14.7a}$$
$$\Delta\boldsymbol{m}_1 = \left(\boldsymbol{\theta}_{1\Delta} \times \boldsymbol{o}_1\right) \times \boldsymbol{f} + \boldsymbol{o}_1 \times \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{f} = \left(\boldsymbol{f} \times \boldsymbol{o}_1\right) \times \boldsymbol{\theta}_{1\Delta} \tag{14.7b}$$
$$\Delta\boldsymbol{f}_2 = -\boldsymbol{\theta}_{1\Delta} \times \boldsymbol{f} = \boldsymbol{f} \times \boldsymbol{\theta}_{1\Delta} \tag{14.7c}$$

Case 1:

$$\Delta\boldsymbol{m}_2 = -\left(\boldsymbol{\theta}_{2\Delta} \times \boldsymbol{o}_2\right) \times \boldsymbol{f} - \boldsymbol{o}_2 \times \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{f} = \boldsymbol{o}_2 \times \boldsymbol{f} \times \boldsymbol{\theta}_{1\Delta} - \boldsymbol{f} \times \boldsymbol{o}_2 \times \boldsymbol{\theta}_{2\Delta} \tag{14.7d}$$

Case 2:

$$\begin{aligned}\Delta\boldsymbol{m}_2 &= -\left(\Delta\boldsymbol{p}_1 + \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{o}_1 - \Delta\boldsymbol{p}_2\right) \times \boldsymbol{f} - \boldsymbol{o}_1 \times \boldsymbol{\theta}_{1\Delta} \times \boldsymbol{f} \\ &= \boldsymbol{f} \times \Delta\boldsymbol{p}_1 - \left(\boldsymbol{f} \times \boldsymbol{o}_1\right) \times \boldsymbol{\theta}_{1\Delta} - \boldsymbol{f} \times \Delta\boldsymbol{p}_2\end{aligned} \tag{14.7e}$$

14.2.2 Couple

Absolute

Follower

Absolute Internal

Follower Internal

14.3 Modal

14.4 External

The external structural force element allows MBDyn to cooperate with external solvers by defining a meta-element that applies forces and moments to a set of structural nodes. The forces and moments are provided by an external solver, called the *peer*. MBDyn provides the peer information about the motion of the nodes participating in the set.

Optionally, an additional layer of field mapping can be interposed. In this case, the motion of the nodes is transformed in the motion of a set of intermediate points, which is further mapped into the motion of the points known by the peer by means of a linear mapping.

The forces at the mapped points returned by the peer are mapped back into forces and moments for the structural nodes participating in the set of the element.

14.4.1 External Structural

The external structural and external structural mapping forces can be formulated directly in the absolute frame, or referred to a reference node. In the former case, operations are straightforward; in the latter one, the kinematics are first expressed in the reference frame of the reference node and then sent to the peer along with the motion of the reference node. The latter returns nodal forces and moments oriented according to the reference frame of the reference node. The additional operations performed by the mapping variant are discussed separately in a subsequent section. The orientation of the reference node is $\boldsymbol{R}_r$; the position is $\boldsymbol{x}_r$.

The orientation of the generic node i is

$$\boldsymbol{R}_i = \boldsymbol{R}_r \overline{\boldsymbol{R}}_i. \tag{14.8}$$

The relative orientation passed to the peer solver is

$$\overline{\boldsymbol{R}}_i = \boldsymbol{R}_r^T \boldsymbol{R}_i. \tag{14.9}$$

The position of the generic node i is

$$\boldsymbol{x}_i = \boldsymbol{x}_r + \boldsymbol{R}_r \overline{\boldsymbol{x}}_i. \tag{14.10}$$

The relative position passed to the peer solver is

$$\overline{\boldsymbol{x}}_i = \boldsymbol{R}_r^T \left(\boldsymbol{x}_i - \boldsymbol{x}_r \right). \tag{14.11}$$

The angular velocity of the generic node i is

$$\boldsymbol{\omega}_i \times \, = \dot{\boldsymbol{R}}_i \boldsymbol{R}_i^T = \dot{\boldsymbol{R}}_r \boldsymbol{R}_r^T + \boldsymbol{R}_r \dot{\overline{\boldsymbol{R}}}_i \overline{\boldsymbol{R}}_i^T \boldsymbol{R}_r^T = \boldsymbol{\omega}_r \times \, + \boldsymbol{R}_r \overline{\boldsymbol{\omega}}_i \times \boldsymbol{R}_r^T. \tag{14.12}$$

The relative angular velocity passed to the peer solver is

$$\overline{\boldsymbol{\omega}}_i = \boldsymbol{R}_r^T \left(\boldsymbol{\omega}_i - \boldsymbol{\omega}_r \right). \tag{14.13}$$

The velocity of the generic node i is

$$\dot{\boldsymbol{x}}_i = \dot{\boldsymbol{x}}_r + \boldsymbol{\omega}_r \times \boldsymbol{R}_r \overline{\boldsymbol{x}}_i + \boldsymbol{R}_r \dot{\overline{\boldsymbol{x}}}_i. \tag{14.14}$$

The relative velocity passed to the peer solver is

$$\dot{\overline{\boldsymbol{x}}}_i = \boldsymbol{R}_r^T \left(\dot{\boldsymbol{x}}_i - \dot{\boldsymbol{x}}_r \right) - \left(\boldsymbol{R}_r^T \boldsymbol{\omega}_r \right) \times \overline{\boldsymbol{x}}_i \tag{14.15}$$

TODO: accelerations

The virtual work done by the forces applied to the nodes is

$$\delta\mathcal{L} = \delta\boldsymbol{x}_r \cdot \boldsymbol{f}_r + \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{m}_r + \sum_i \left(\delta\overline{\boldsymbol{x}}_i \cdot \overline{\boldsymbol{f}}_i + \overline{\boldsymbol{\theta}}_{i\delta} \cdot \overline{\boldsymbol{m}}_i \right). \tag{14.16}$$

The virtual rotation of the generic node i is

$$\delta\boldsymbol{R}_i \boldsymbol{R}_i^T = \boldsymbol{\theta}_{i\delta} \times \; = \delta\boldsymbol{R}_r \boldsymbol{R}_r^T + \boldsymbol{R}_r \delta\overline{\boldsymbol{R}}_i \overline{\boldsymbol{R}}_i^T \boldsymbol{R}_r^T = \boldsymbol{\theta}_{r\delta} \times \; + \boldsymbol{R}_r \overline{\boldsymbol{\theta}}_{i\delta} \times \boldsymbol{R}_r^T. \tag{14.17}$$

The relative virtual rotation is thus

$$\overline{\boldsymbol{\theta}}_{i\delta} = \boldsymbol{R}_r^T \left(\boldsymbol{\theta}_{i\delta} - \boldsymbol{\theta}_{r\delta} \right). \tag{14.18}$$

The virtual displacement of the generic node i is

$$\delta\boldsymbol{x}_i = \delta\boldsymbol{x}_r + \boldsymbol{\theta}_{r\delta} \times \boldsymbol{R}_r \overline{\boldsymbol{x}}_i + \boldsymbol{R}_r \delta\overline{\boldsymbol{x}}_i. \tag{14.19}$$

The relative virtual displacement is thus

$$\delta\overline{\boldsymbol{x}}_i = \boldsymbol{R}_r^T \left(\delta\boldsymbol{x}_i - \delta\boldsymbol{x}_r \right) + \overline{\boldsymbol{x}}_i \times \left(\boldsymbol{R}_r^T \boldsymbol{\theta}_{r\delta} \right). \tag{14.20}$$

The virtual work becomes

$$\delta\mathcal{L} = \delta\boldsymbol{x}_r \cdot \boldsymbol{f}_r + \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{m}_r + \sum_i \left(\delta\boldsymbol{x}_i \cdot \boldsymbol{R}_r \overline{\boldsymbol{f}}_i + \boldsymbol{\theta}_{i\delta} \cdot \boldsymbol{R}_r \overline{\boldsymbol{m}}_i - \delta\boldsymbol{x}_r \cdot \boldsymbol{R}_r \overline{\boldsymbol{f}}_i - \boldsymbol{\theta}_{r\delta} \cdot \boldsymbol{R}_r \left(\overline{\boldsymbol{m}}_i + \overline{\boldsymbol{x}}_i \times \overline{\boldsymbol{f}}_i \right) \right). \tag{14.21}$$

The force and moment acting on the generic node i are

$$\boldsymbol{f}_i = \boldsymbol{R}_r \overline{\boldsymbol{f}}_i \tag{14.22}$$

$$\boldsymbol{m}_i = \boldsymbol{R}_r \overline{\boldsymbol{m}}_i. \tag{14.23}$$

The moment is always intrinsically referred to the current position of the node. The force and moment acting on the reference node are

$$\boldsymbol{f} = \boldsymbol{f}_r - \sum_i \boldsymbol{R}_r \overline{\boldsymbol{f}}_i \tag{14.24}$$

$$\boldsymbol{m} = \boldsymbol{m}_r - \sum_i \boldsymbol{R}_r \left(\overline{\boldsymbol{m}}_i + \overline{\boldsymbol{x}}_i \times \overline{\boldsymbol{f}}_i \right). \tag{14.25}$$

The moment is always intrinsically referred to the current position of the node.

In principle, $\boldsymbol{f}$ and $\boldsymbol{m}$ should be identically zero, unless the reference node is specifically loaded. This fact can be exploited by setting `use reference node forces` to `no`, which results in ignoring $\boldsymbol{f}$ and $\boldsymbol{m}$.

14.4.2 External Structural Mapping

The external structural mapping case differs from the previous one in the fact that two additional intermediate layers are added. The first layer computes the motion of a set of points rigidly connected to the nodes that participate in the set. Each node n can have an arbitrary number of associated points p, whose position in the reference frame of the node is $\tilde{\boldsymbol{o}}_{np}$. The position of point p associated with node n is

$$\boldsymbol{x}_{np} = \boldsymbol{x}_n + \boldsymbol{R}_n \tilde{\boldsymbol{o}}_{np}. \tag{14.26}$$

The position $\boldsymbol{x}_{np}$, instead of $\boldsymbol{x}_i$, must be used to compute the relative position. Orientations are not mapped.

As soon as the positions, velocities (and accelerations, if needed) of the points are computed and collected in vectors denoted by the subscript $(\cdot)_{\mathrm{mbdyn}}$, they are mapped into the corresponding quantities of the peer, denoted by the subscript $(\cdot)_{\mathrm{peer}}$, using a linear transformation $\boldsymbol{H}$, namely

$$\boldsymbol{x}_{\mathrm{peer}} = \boldsymbol{H}\boldsymbol{x}_{\mathrm{mbdyn}} \tag{14.27}$$

$$\dot{\boldsymbol{x}}_{\mathrm{peer}} = \boldsymbol{H}\dot{\boldsymbol{x}}_{\mathrm{mbdyn}} \tag{14.28}$$

$$\delta\boldsymbol{x}_{\mathrm{peer}} = \boldsymbol{H}\delta\boldsymbol{x}_{\mathrm{mbdyn}}. \tag{14.29}$$

The work done in the peer domain must be equal by the work done in MBDyn's; this implies

$$\delta\mathcal{L}_{\mathrm{mbdyn}} = \delta\boldsymbol{x}_{\mathrm{mbdyn}} \cdot \boldsymbol{f}_{\mathrm{mbdyn}} = \delta\boldsymbol{x}_{\mathrm{peer}} \cdot \boldsymbol{f}_{\mathrm{peer}} = \delta\mathcal{L}_{\mathrm{peer}}, \tag{14.30}$$

which yields

$$\delta\boldsymbol{x}_{\mathrm{mbdyn}} \cdot \boldsymbol{f}_{\mathrm{mbdyn}} = \delta\boldsymbol{x}_{\mathrm{mbdyn}} \cdot \boldsymbol{H}^T \boldsymbol{f}_{\mathrm{peer}}, \tag{14.31}$$

and thus, thanks to the arbitrariness of virtual displacements,

$$\boldsymbol{f}_{\mathrm{mbdyn}} = \boldsymbol{H}^T \boldsymbol{f}_{\mathrm{peer}}. \tag{14.32}$$

The forces $\boldsymbol{f}_{\mathrm{mbdyn}}$ corrrespond to the points of the intermediate mapping layer. They are transformed into the corresponding nodal forces and moments considering the work done by the virtual perturbation of Eq. (14.26),

$$\delta\boldsymbol{x}_{np} = \delta\boldsymbol{x}_n - (\boldsymbol{R}_n\tilde{\boldsymbol{o}}_{np}) \times \boldsymbol{\theta}_{n\delta}, \tag{14.33}$$

namely

$$\delta\mathcal{L}_n = \sum_p \delta\boldsymbol{x}_{np} \cdot \boldsymbol{f}_{np} = \sum_p \left(\delta\boldsymbol{x}_n \cdot \boldsymbol{f}_{np} + \boldsymbol{\theta}_{n\delta} \cdot (\boldsymbol{R}_n\tilde{\boldsymbol{o}}_{np}) \times \boldsymbol{f}_{np}\right). \tag{14.34}$$

The corresponding nodal force and moment are

$$\boldsymbol{f}_n = \sum_p \boldsymbol{f}_{np} \tag{14.35}$$

$$\boldsymbol{m}_n = \sum_p (\boldsymbol{R}_n\tilde{\boldsymbol{o}}_{np}) \times \boldsymbol{f}_{np}. \tag{14.36}$$

The moment is always intrinsically referred to the current position of the node.

When a reference node is defined, all symbols in the expressions of the nodal force and moment must bear an overbar $\overline{(\cdot)}$, to indicate that they are relative and thus need to be further transformed as previously shown for the external structural force element.

14.4.3 External Modal

14.4.4 External Modal Mapping

14.4.5 Client Library

The peer side of the communication protocol has been implemented in a set of client libraries. At the core there is `libmbc`, a library written in C that performs the core operations. Declarations are provided in the header file `mbc.h`.

A high-level interface is provided in C++ in `libmbcxx`. Declarations are provided in the header file `mbcxx.h`.

Another interface is provided in Python, in module `_mbc_py.so`. The corresponding Python code is defined in `mbc_py_interface.py`.

Socket-Based Protocol

Each communication is prefixed by a `uint8_t` value that indicates the type of operation being performed. It is optionally followed by a message. Legal values are

- `ES_REGULAR_DATA`
- `ES_GOTO_NEXT_STEP`
- `ES_ABORT`
- `ES_REGULAR_DATA_AND_GOTO_NEXT_STEP`
- `ES_NEGOTIATION`
- `ES_OK`

The corresponding numerical value is defined in `mbc.h`.

Operations are:

- negotiation: the client tells the server what
- kinematics exchange: the master sends the motion
- forces exchange: the peer receives the loads

Chapter 15

Hydraulic Library

15.1 Hydraulic Fluids

15.2 Hydraulic Nodes

15.3 Hydraulic Elements

15.3.1 Accumulator

The accumulator defines two internal states x and v that represent the position and the velocity of the cap that, in a conventional gas device, separates the fluid and the gas. However, both the gravity effect and a linear spring effect can be considered as well, and any combination of reaction forces can be modeled by setting the appropriate parameters: g for a gravity device, p_{g0} for a gas device, and k for a linear spring device.

$$\begin{aligned} 0 &= q \\ m\dot{v} + kx &= -mg + Ap\left(p - p_g\right) - f_0 - \frac{1}{2}\rho A c_e \left(\frac{A}{A_p}\right)^2 |v|\, v \\ &\quad - \operatorname{step}\left(x_{\min} - x\right)\left(c_1\left(x - x_{\min}\right) + c_2 v + c_3 \dot{v}\right) \\ &\quad - \operatorname{step}\left(x - x_{\max}\right)\left(c_1\left(x - x_{\max}\right) + c_2 v + c_3 \dot{v}\right) \\ \dot{x} &= v \end{aligned}$$

where $p_g = p_{g0}\left(\frac{l}{l-x}\right)^{\gamma}$ and $q = \rho A v$.

15.3.2 Actuator

The hydraulic actuator element couples the hydraulic library with the structural library. It connects the displacement of two structural nodes to the flow through two hydraulic nodes, and the pressure at two hydraulic nodes to the forces applied at two structural nodes. In the spirit of the multibody analysis philosophy, this element provides the essential connection between structural and hydraulic nodes; the constraints between the structural nodes, and other flow elements, e.g. leakages between the chambers, must be added by the user.

Definitions

In the following, $(\cdot)_{s1}$ and $(\cdot)_{s2}$ refer to structural nodes 1 and 2, and $(\cdot)_{h1}$ and $(\cdot)_{h2}$ refer to hydraulic nodes 1 and 2. The structural node labeled as 1 is assumed as the cylinder, and its orientation determines the axis of the actuator. The relative orientation of the actuator is defined by the unit vector $\tilde{\boldsymbol{v}}$, and the absolute orientation is $\boldsymbol{R}_{s1}\tilde{\boldsymbol{v}}$. It is assumed that appropriate kinematic constraints allow only a relative displacement of the structural nodes along the axis $\tilde{\boldsymbol{v}}$, and the only relative rotation, if any, is about the axis itself. This can be obtained by combining an inline joint with a revolute rotation or a prismatic joint.

Equations

$$
\begin{aligned}
0 &= -\boldsymbol{F} \\
0 &= -\boldsymbol{f}_{s1} \times \boldsymbol{F} \\
0 &= \boldsymbol{F} \\
0 &= \boldsymbol{f}_{s2} \times \boldsymbol{F} \\
0 &= q_{h1} \\
0 &= q_{h2} \\
p_{h1} &= P_{h1} \\
p_{h2} &= P_{h2}
\end{aligned}
$$

The first four equations apply the force resulting from the hydraulic pressure to the structural nodes; the fifth and the sixth apply the flow resulting from the actuator kinematics to the flow balance equations of the hydraulic nodes. The last two equations are required to associate two scalar differential unknowns to the hydraulic node pressures, because the flow definitions require the derivative of the pressure, while the hydraulic nodes are defined as scalar algebraic.

The force is defined as

$$
\boldsymbol{F} = \left(A_{h1}p_{h1} - A_{h2}p_{h2}\right)\left(\boldsymbol{R}_{s1}\tilde{\boldsymbol{v}}\right) \tag{15.1}
$$

The distance between the structural nodes, along the actuator axis, is

$$
l = \left(\boldsymbol{R}_{s1}\tilde{\boldsymbol{v}}\right)^T \left(\boldsymbol{x}_{s2} + \boldsymbol{f}_{s2} - \boldsymbol{x}_{s1} - \boldsymbol{f}_{s1}\right) \tag{15.2}
$$

The relative velocity of the structural nodes, along the actuator axis, is

$$
\dot{l} = \left(\boldsymbol{R}_{s1}\tilde{\boldsymbol{v}}\right)^T \left(\dot{\boldsymbol{x}}_{s2} - \dot{\boldsymbol{x}}_{s1} + \boldsymbol{\omega}_{s1} \times \left(\boldsymbol{x}_{s2} - \boldsymbol{x}_{s1}\right) + \left(\boldsymbol{\omega}_{s2} - \boldsymbol{\omega}_{s1}\right) \times \boldsymbol{f}_{s2}\right) \tag{15.3}
$$

The flow at the two hydraulic nodes is

$$
\begin{aligned}
q_{h1} &= A_{h1}\left(l\frac{\partial \rho_{h1}}{\partial p}\dot{P}_{h1} + \rho_{h1}\dot{d}\right) \\
q_{h2} &= A_{h2}\left(\left(L - l\right)\frac{\partial \rho_{h2}}{\partial p}\dot{P}_{h2} - \rho_{h2}\dot{d}\right)
\end{aligned}
$$

where ρ is the fluid density (different fluids in the chambers are allowed), and L is the total length of the actuator. In case stroke limitations must be enforced, the kinematic constraints must account for them.

15.3.3 Dynamic Pipe

Finite Volume dynamic pipe.

Definitions

The dynamic pipe is formulated according to the finite volume approach. The pipe is discretized by means of the pressures and the flow at the two ends, which are interpolated linearly. The mass and the momentum balance equations are written by cutting the pipe in two halves and adding the contribution of each resulting subvolume to the respective nodal equations.

Consider the mass conservation and the momentum balance equations for a one-dimensional flow:

$$\frac{D}{Dt}(dm) = 0, \tag{15.4}$$

$$\frac{D}{Dt}(dQ) = df. \tag{15.5}$$

When a rigid pipe is considered, the total derivative D/Dt of the test mass $dm = \rho A dx$ of Equation (15.4) yields

$$\frac{D}{Dt}(dm) = \frac{\partial}{\partial t}(dm) + v\frac{\partial}{\partial x}(dm), \tag{15.6}$$

which results in

$$q_{/x} + A\rho_{/t} = 0, \tag{15.7}$$

where $q = \rho A v$ is the mass flow. Consider now the momentum equation (15.5); the total derivative of the momentum $dQ = vdm$ yields

$$\frac{D}{Dt}(dQ) = \left(q_{/t} + (qv)_{/x}\right)dx, \tag{15.8}$$

while the pressure gradient and the viscous contributions can be isolated from the force per unit length on the right hand side:

$$df = -Adp + f_v dx + df^*, \tag{15.9}$$

so, by neglecting the deformability of the pipe and the extra forces df^* acting on the fluid, the momentum balance equation yields

$$q_{/t} + (qv + Ap)_{/x} = f_v, \tag{15.10}$$

which can be reduced to the pressure and flow unknowns simply by recalling the definition of the flow:

$$q_{/t} + \left(\frac{q^2}{\rho A} + Ap\right)_{/x} = f_v. \tag{15.11}$$

A flexible pipe has been considered as well; the formulation is not reported for simplicity, because such a level of detail is required only for very specialized problems, and a first approximation can be obtained by altering the bulk modulus of the fluid.

The pipe is discretized by considering a finite volume approach, based on the use of constant stepwise (*Heavyside*) test functions with arbitrary trial functions. In the present case, linear trial functions have been considered both for the flow and for the pressure:

$$q(x) = \begin{bmatrix} \frac{1-\xi}{2} & \frac{1+\xi}{2} \end{bmatrix} \begin{Bmatrix} q_1 \\ q_2 \end{Bmatrix},$$

$$p(x) = \begin{bmatrix} \frac{1-\xi}{2} & \frac{1+\xi}{2} \end{bmatrix} \begin{Bmatrix} p_1 \\ p_2 \end{Bmatrix},$$

with $\xi = \xi(x) \in [-1,1]$ and $d\xi/dx = 2/(b-a)$. The discrete form of the pipe equations results in

$$\begin{aligned} q(b) - q(a) &= -\int_a^b \frac{\partial \rho}{\partial p} p_{/t}\, dx, \\ \frac{b-a}{2}\left(q(b)_{/t} + q(a)_{/t}\right) + \left(\frac{q(b)^2}{\rho(b)A} + Ap(b)\right) & \\ -\left(\frac{q(a)^2}{\rho(a)A} + Ap(a)\right) &= \int_a^b f_v\, dx; \end{aligned}$$

by dividing the pipe in two portions, and by considering the domains $[-1,0]$ and $[0,1]$ for ξ in each portion, the discrete equations of the finite volume pipe become

$$\begin{aligned} -\frac{1}{2}(q_1+q_2) - \frac{\partial \rho(-1/2)}{\partial p}\frac{L}{8}(3\dot{p}_1 + \dot{p}_2) &= \phi_1, \\ \frac{1}{2}(q_1+q_2) - \frac{\partial \rho(1/2)}{\partial p}\frac{L}{8}(\dot{p}_1 + 3\dot{p}_2) &= \phi_2, \\ \frac{L}{8}(3\dot{q}_1 + \dot{q}_2) + \frac{(q_1+q_2)^2}{4\rho(0)A} - \frac{q_1^2}{\rho(-1)A} & \\ + \frac{A}{2}(p_2 - p_1) &= \frac{L}{2}\int_{-1}^0 f_v\, d\xi, \\ \frac{L}{8}(\dot{q}_1 + 3\dot{q}_2) + \frac{q_2^2}{\rho(1)A} - \frac{(q_1+q_2)^2}{4\rho(0)A} & \\ + \frac{A}{2}(p_2 - p_1) &= \frac{L}{2}\int_0^1 f_v\, d\xi, \end{aligned}$$

where ϕ_1 and ϕ_2 are the contributions of the two portions of pipe to the respective nodal flow balance equations. The integral of the time derivative of the density is numerically computed. The integral of the viscous forces per unit length is numerically performed as well, accounting for the flow regime in the pipe as function of the *Reynolds* number. In fact, for the forces per unit length, the dependency on the flow is considered linear for $0 < Re < 2000$, and quadratic for $Re > 4000$, while a polynomial fitting of the transition behavior, accounting also for the rate of the *Reynolds* number, is modeled for $2000 < Re < 4000$.

Equations

$$\begin{aligned} 0 &= \frac{1}{2}(q_1+q_2) + AL\frac{\partial \rho}{\partial p_1}\left(\frac{3}{8}\dot{P}_1 + \frac{1}{8}\dot{P}_2\right) \\ 0 &= -\frac{1}{2}(q_1+q_2) + AL\frac{\partial \rho}{\partial p_2}\left(\frac{1}{8}\dot{P}_1 + \frac{3}{8}\dot{P}_2\right) \\ 0 &= -L\left(\frac{3}{8}\dot{q}_1 + \frac{1}{8}\dot{q}_2\right) - \left(\frac{1}{2}(q_1+q_2)\right)^2 \frac{1}{\rho_m A} + q_1^2\frac{1}{\rho_1 A} - \frac{A}{2}(p_2 - p_1) - f_1 \\ 0 &= -L\left(\frac{1}{8}\dot{q}_1 + \frac{3}{8}\dot{q}_2\right) - q_2^2\frac{1}{\rho_2 A} + \left(\frac{1}{2}(q_1+q_2)\right)^2 \frac{1}{\rho_m A} - \frac{A}{2}(p_2 - p_1) - f_2 \\ p_1 &= P_1 \\ p_2 &= P_2 \end{aligned}$$

15.3.4 Pressure Flow Control Valve

$$R_1 = Q_{12} + Q_{13} \tag{15.12}$$
$$R_2 = -Q_{12} + Q_{24} \tag{15.13}$$
$$R_3 = -Q_{13} + Q_{34} \tag{15.14}$$
$$R_4 = -Q_{34} - Q_{24} \tag{15.15}$$
$$R_5 = A_v s; \tag{15.16}$$
$$R_6 = -A_v s \tag{15.17}$$
$$R_7 = -F + M\dot{v} + C\dot{s} + Ks + c_1 s + c_2 \dot{s} + c_3 \dot{v} + cf_1(s - s_{\max}) + cf_2 \dot{s} + cf_3 \dot{v} \tag{15.18}$$
$$R_8 = \dot{s} - v \tag{15.19}$$

Chapter 16

Hydrodynamic Plain Bearing Element

Author: Reinhard Resch
Hydrodynamic plain bearing elements are intended to model tribological fluid-structure interactions between a bearing journal and a bearing shell.

Files. It is implemented in files
`modules/module-hydrodynamic_plain_bearing2/module-hydrodynamic_plain_bearing2.h`
`modules/module-hydrodynamic_plain_bearing2/module-hydrodynamic_plain_bearing2.cc`

16.1 Introduction

Hydrodynamic lubricated journal plain bearings are used in many different types of machinery:

- Combustion engines
- Turbo chargers
- Steam turbines for power plants
- Hydraulic pumps

MBDyn's "module-hydrodynamic_plain_bearing2" is intended to simulate the following effects in rigid or flexible multibody systems including hydrodynamic bearings:

- Frictional losses inside the bearing
- Maximum contact pressure and maximum fluid pressure at the surface of the bearing
- Minimum lubricant film thickness at the surface of the bearing
- Demand of lubricant to be supplied by means of a hydraulic pump
- Impact on structural damping of a mechanism due to the squeeze effect
- Impact on stability of the orbital path for high speed and low load applications (e.g. turbo chargers)

16.2 The compressible Reynolds differential equation

16.2.1 Determination of the coordinate system for the cylindrical journal bearing

Figure 16.1 shows a cylindrical journal bearing with the following coordinate systems:

$\boldsymbol{R}_{b1}$ Coordinate system in the center of the bearing journal

$\boldsymbol{R}_{b2}$ Coordinate system in the center of the bearing shell

$\boldsymbol{R}_{t1}$ Coordinate system tangential to the surface of the bearing journal

$\boldsymbol{R}_{t2}$ Coordinate system tangential to the surface of the bearing shell

The following symbols are used:

R Radius of the bearing shell

r Radius of the bearing journal

B Width of the bearing shell or bearing journal

h Radial gap height

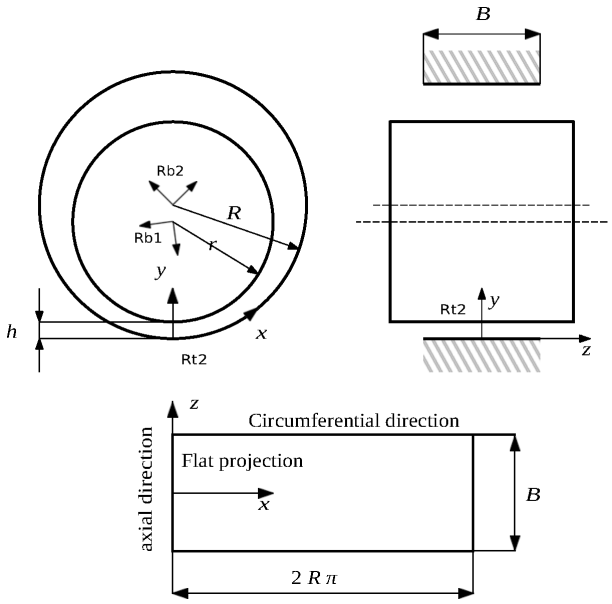


Figure 16.1: Coordinate systems for cylindrical plain bearings

The z axes of $\boldsymbol{R}_{b1}$ and $\boldsymbol{R}_{b2}$ correspond to the axes of the bearing journal and bearing shell. The x and y axis can be defined as required. The x axis of $\boldsymbol{R}_{t2}$ is tangential to the circumference of the bearing shell, the y axis is in the radial direction and the z axis is parallel to the z axis of $\boldsymbol{R}_{b2}$. The derivation of the Reynolds differential equation in section 16.2.2 is based on the coordinate system $\boldsymbol{R}_{t2}$. However, $\boldsymbol{R}_{t1}$ could be used as well.

16.2.2 Derivation of the Reynolds equation from the compressible Navier Stokes equation

Since, according to [19], the radial gap height h is small compared to the radius R, the curvature of the oil-filled gap can be neglected. For this reason, as shown in figure 16.1, the volume of the gap can be unrolled onto a plane and the Navier Stokes equation can be written in Cartesian coordinates. If we assume a Newtonian fluid with constant viscosity and laminar flow, then according to [20] the Navier Stokes equation given in equation 16.1 follows for the flow in x and z direction. As the flow velocity in the radial gap height direction is neglected, the Navier Stokes equation for the y direction is not applicable.

$$\begin{aligned}
\underbrace{\rho\left(\frac{\partial u_x}{\partial t}+u_x\frac{\partial u_x}{\partial x}+u_y\frac{\partial u_x}{\partial y}+u_z\frac{\partial u_x}{\partial z}\right)}_{\approx 0} &= \underbrace{\rho\, g_x}_{\approx 0}-\frac{\partial p}{\partial x}+\underbrace{2\,\eta\frac{\partial^2 u_x}{\partial x^2}}_{\approx 0}-\frac{2}{3}\,\eta\left(\underbrace{\frac{\partial^2 u_x}{\partial x^2}}_{\approx 0}+\underbrace{\frac{\partial^2 u_y}{\partial x\,\partial y}}_{\approx 0}+\underbrace{\frac{\partial^2 u_z}{\partial x\,\partial z}}_{\approx 0}\right)\\
&\quad+\eta\left(\frac{\partial^2 u_x}{\partial y^2}+\underbrace{\frac{\partial^2 u_y}{\partial x\,\partial y}}_{\approx 0}\right)+\eta\left(\underbrace{\frac{\partial^2 u_x}{\partial z^2}}_{\approx 0}+\underbrace{\frac{\partial^2 u_z}{\partial x\,\partial z}}_{\approx 0}\right)\\
\underbrace{\rho\left(\frac{\partial u_z}{\partial t}+u_x\frac{\partial u_z}{\partial x}+u_y\frac{\partial u_z}{\partial y}+u_z\frac{\partial u_z}{\partial z}\right)}_{\approx 0} &= \underbrace{\rho\, g_z}_{\approx 0}-\frac{\partial p}{\partial z}+\underbrace{2\,\eta\frac{\partial^2 u_z}{\partial z^2}}_{\approx 0}-\frac{2}{3}\,\eta\left(\underbrace{\frac{\partial^2 u_x}{\partial x\,\partial z}}_{\approx 0}+\underbrace{\frac{\partial^2 u_y}{\partial y\,\partial z}}_{\approx 0}+\underbrace{\frac{\partial^2 u_z}{\partial z^2}}_{\approx 0}\right)\\
&\quad+\eta\left(\underbrace{\frac{\partial^2 u_x}{\partial x\,\partial z}}_{\approx 0}+\underbrace{\frac{\partial^2 u_z}{\partial x^2}}_{\approx 0}\right)+\eta\left(\underbrace{\frac{\partial^2 u_y}{\partial y\,\partial z}}_{\approx 0}+\frac{\partial^2 u_z}{\partial y^2}\right)
\end{aligned}\tag{16.1}$$

$\boldsymbol{u}=\begin{pmatrix}u_x\\u_z\end{pmatrix}$ Flow velocity measured in the coordinate system $\boldsymbol{R}_{t1}$ or $\boldsymbol{R}_{t2}$[1]

p Fluid pressure

ρ Fluid density

η Dynamic viscosity of the fluid

According to [19] and [20], the following simplifying assumptions can be made:

- Due to the small Reynolds numbers present in hydrodynamic plain bearings, the inertia forces can be neglected compared to the pressure forces and the frictional forces.
- The gravity loads can also be neglected compared to the pressure forces and the frictional forces.
- Since the radial gap height h is very small compared to the bearing width B and the bearing circumference $2\,R\,\pi$ for the usual bearing dimensions, the velocity gradients in x and z direction can be neglected in the friction terms compared to the velocity gradients in y direction.
- It is also assumed that the pressure change in the direction of the radial gap height is negligible. For the same reason, the Navier Stokes equation for the y direction is also omitted.

[1] Strictly speaking, an inertial coordinate system would have to be used for the derivation. However, since the inertial forces are neglected in the derivation of Reynolds' differential equation, this does not matter

With these assumptions, equation 16.1 is reduced to equation 16.2.

$$\begin{aligned} \frac{\partial p}{\partial x} &= \eta \frac{\partial^2 u_x}{\partial y^2} \\ \frac{\partial p}{\partial z} &= \eta \frac{\partial^2 u_z}{\partial y^2} \end{aligned} \tag{16.2}$$

Boundary conditions for the flow velocity at the bearing surface

If it is assumed that the fluid adheres to the surface of the bearing journal and the surface of the bearing shell, the boundary conditions according to equation 16.3 apply[19]. This requirement is usually fulfilled for radial plain bearings by selecting the appropriate bearing materials, as the adhesion condition is of decisive importance for the load carrying capacity of the bearing. For piston-cylinder bearings, however, adhesion to the surface is not absolutely necessary. For example, when using special coatings for pistons, the adhesion condition may not be fulfilled. This specific case, however, is excluded from this formulation.

$$\begin{aligned} u_x|_{y=0} &= \Delta U_{2x} \\ u_x|_{y=h} &= \Delta U_{1x} \\ u_z|_{y=0} &= \Delta U_{2z} \\ u_z|_{y=h} &= \Delta U_{1z} \end{aligned} \tag{16.3}$$

When introducing the boundary conditions, care must be taken to ensure that they are objective. A distinction is made between two cases:

control volume moves with the bearing journal

$$\Delta \boldsymbol{U}_1 = \boldsymbol{0} \tag{16.4}$$

$$\Delta \boldsymbol{U}_2 = \boldsymbol{U}_2 - \boldsymbol{U}_1 \tag{16.5}$$

control volume moves with the bearing shell

$$\Delta \boldsymbol{U}_1 = \boldsymbol{U}_1 - \boldsymbol{U}_2 \tag{16.6}$$

$$\Delta \boldsymbol{U}_2 = \boldsymbol{0} \tag{16.7}$$

Obviously, the boundary conditions depend on the choice of control volume. However, the derivation of the radial gap height $\frac{\partial h}{\partial t}$ also depends on the choice of control volume. The kinematic relationships are discussed in section 16.6.

$\boldsymbol{U}_1$ Absolute velocity at the surface of the bearing journal projected into the coordinate system $\boldsymbol{R}_{t1}$ or $\boldsymbol{R}_{t2}$

$\boldsymbol{U}_2$ Absolute velocity at the surface of the bearing shell projected into the coordinate system $\boldsymbol{R}_{t1}$ or $\boldsymbol{R}_{t2}$

$\Delta \boldsymbol{U}_1 = \begin{pmatrix} \Delta U_{1x} \\ \Delta U_{1y} \\ \Delta U_{1z} \end{pmatrix}$ Velocity of the surface of the bearing journal relative to the control volume

$\Delta \boldsymbol{U}_2 = \begin{pmatrix} \Delta U_{2x} \\ \Delta U_{2y} \\ \Delta U_{2z} \end{pmatrix}$ Velocity of the surface of the bearing shell relative to the control volume

If equation 16.2 is integrated twice over the radial gap height and the boundary conditions 16.3 are used, this results in a parabolic velocity distribution in the direction of the radial gap height[19], [20].

$$u_x = \frac{1}{\eta}\frac{\partial p}{\partial x}\left(\frac{y^2}{2} - y\frac{h}{2}\right) + \frac{\Delta U_{1x} - \Delta U_{2x}}{h}y + \Delta U_{2x}$$
$$u_z = \frac{1}{\eta}\frac{\partial p}{\partial z}\left(\frac{y^2}{2} - y\frac{h}{2}\right) + \frac{\Delta U_{1z} - \Delta U_{2z}}{h}y + \Delta U_{2z} \tag{16.8}$$

For the mass flow per unit length through the boundary of the control volume, the following applies[19], [20]

$$\dot{m}_x = \int_{y=0}^{y=h} \rho\, u_x\, dy = \rho \underbrace{\int_{y=0}^{y=h} u_x\, dy}_{q_x} \tag{16.9}$$

$$\dot{m}_z = \int_{y=0}^{y=h} \rho\, u_z\, dy = \rho \underbrace{\int_{y=0}^{y=h} u_z\, dy}_{q_z} \tag{16.10}$$

It is assumed that the density ρ is only a function of the pressure p. Since the pressure is assumed to be constant in the direction of the radial gap height, the density is also constant in the y direction.

$$\dot{m}_x = \rho\, q_x \tag{16.11}$$
$$\dot{m}_z = \rho\, q_z \tag{16.12}$$
$$q_x = \underbrace{\frac{\Delta U_{1x} + \Delta U_{2x}}{2}h}_{\text{Couette term}} \underbrace{-\frac{h^3}{12\,\eta}\frac{\partial p}{\partial x}}_{\text{Poiseuille term}} \tag{16.13}$$
$$q_z = \underbrace{\frac{\Delta U_{1z} + \Delta U_{2z}}{2}h}_{\text{Couette term}} \underbrace{-\frac{h^3}{12\,\eta}\frac{\partial p}{\partial z}}_{\text{Poiseuille term}} \tag{16.14}$$

The compressible Reynolds differential equation 16.15 follows from the application of the continuity equation to the infinitesimal volume element[19], [20]. To close this equation, a relationship between pressure and density must be specified. This is the purpose of the cavitation model, which will be introduced in section 16.8.2.

$$\begin{aligned}\underbrace{\frac{\partial}{\partial t}(\rho\, h)}_{a} &= -\frac{\partial \dot{m}_x}{\partial x} - \frac{\partial \dot{m}_z}{\partial z} \\ &= -\frac{\partial}{\partial x}\left[\rho\left(\frac{\Delta U_{1x} + \Delta U_{2x}}{2}h - \frac{h^3}{12\,\eta}\frac{\partial p}{\partial x}\right)\right] \\ &\quad -\frac{\partial}{\partial z}\left[\rho\left(\frac{\Delta U_{1z} + \Delta U_{2z}}{2}h - \frac{h^3}{12\,\eta}\frac{\partial p}{\partial z}\right)\right]\end{aligned} \tag{16.15}$$

Micro hydrodynamic effects

Equation 16.15 is valid for smooth and rough surfaces, as long as the resolution of the mesh is sufficiently high in order to capture the surface roughness profile at micrometer scale. Otherwise, the averaged Reynolds equation 16.16 according to Patir and Cheng must be used[3]. In equation 16.16 $\bar{h}_T$ is the

Table 16.1: Coefficients for the calculation of the pressure flow factors ϕ_x and ϕ_z[3]

γ_c	C	r
1/9	1.48	0.42
1/6	1.38	0.42
1/3	1.18	0.42
1	0.9	0.56
3	0.225	1.5
6	0.520	1.5
9	0.870	1.5

average radial clearance considering the roughness profile, ϕ_x and ϕ_z are the pressure flow factors in x and z-direction respectively, ϕ_{s_x} and ϕ_{s_z} are the shear flow factors in x and z-direction respectively, and $\sigma_c = \sqrt{\sigma_1^2 + \sigma_2^2}$ is the combined standard deviation of the roughness profiles of the bearing journal and shell surface. σ_1 and σ_2 are the standard deviations of the roughness profiles of the bearing journal and shell surface respectively.

$$\frac{\partial}{\partial t}\left(\rho\,\bar{h}_T\right) = -\frac{\partial}{\partial x}\left[\rho\left(\frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,\bar{h}_T + \frac{\Delta U_{1x}-\Delta U_{2x}}{2}\,\sigma_c\,\phi_{s_x} - \phi_x\,\frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial x}\right)\right] - \frac{\partial}{\partial z}\left[\rho\left(\frac{\Delta U_{1z}+\Delta U_{2z}}{2}\,\bar{h}_T + \frac{\Delta U_{1z}-\Delta U_{2z}}{2}\,\sigma_c\,\phi_{s_z} - \phi_z\,\frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial z}\right)\right] \tag{16.16}$$

$$\bar{h}_T = \frac{h}{2}\left[1 + erf\left(\frac{h}{\sqrt{2}\,\sigma_c}\right)\right] + \frac{\sigma_c}{\sqrt{2\pi}}\exp\left(-\frac{h^2}{2\sigma_c^2}\right) \tag{16.17}$$

Pressure flow factors The pressure flow factors are defined as[3]:

$$H = \frac{h}{\sigma_c} \tag{16.18}$$

$$\phi_x = \begin{cases} 1 - C\,\exp\left(-r\,H\right) & \text{if} \quad \gamma_c \leq 1 \\ 1 + C\,H^{-r} & \text{if} \quad \gamma_c > 1 \end{cases} \tag{16.19}$$

$$\phi_z\left(H, \gamma_c\right) = \phi_x\left(H, \frac{1}{\gamma_c}\right) \tag{16.20}$$

Where C and r are functions of the combined Peklenik factor γ_c, which are interpolated from table 16.1. The combined Peklenik factor γ_c is defined as:

$$\gamma_c = \frac{\frac{V_{r1}}{\lambda_{z1}} + \frac{V_{r2}}{\lambda_{z2}}}{\frac{V_{r1}}{\lambda_{x1}} + \frac{V_{r2}}{\lambda_{x2}}} \tag{16.21}$$

$$V_{r1} = \left(\frac{\sigma_1}{\sigma_c}\right)^2 \tag{16.22}$$

$$V_{r2} = \left(\frac{\sigma_2}{\sigma_c}\right)^2 \tag{16.23}$$

Where σ_1 and σ_2 are the standard deviations of the roughness profiles from the bearing journal and shell surface respectively. λ_{x1} and λ_{x2} are the autocorrelation lengths in x-direction of the roughness profiles of the bearing journal and shell surface respectively. λ_{z1} and λ_{z2} are the corresponding autocorrelation lengths in z-direction. Standard deviations and autocorrelation lengths can be determined from a profilometer trace of the respective bearing surface.

Table 16.2: Coefficients for the calculation of the shear flow factors Φ_s[3]

γ_1/γ_2	A_1	α_1	α_2	α_3	A_2
1/9	2.046	1.12	0.78	0.03	1.856
1/6	1.962	1.08	0.77	0.03	1.754
1/3	1.858	1.01	0.76	0.03	1.561
1	1.899	0.98	0.92	0.05	1.126
3	1.560	0.85	1.13	0.08	0.556
6	1.290	0.62	1.09	0.08	0.388
9	1.011	0.54	1.07	0.08	0.295

Shear flow factors The shear flow factors are defined as[3]:

$$\phi_{s_x} = V_{r1}\,\Phi_s\left(H,\gamma_1\right) - V_{r2}\,\Phi_s\left(H,\gamma_2\right) \tag{16.24}$$

$$\phi_{s_z} = V_{r1}\,\Phi_s\left(H,\frac{1}{\gamma_1}\right) - V_{r2}\,\Phi_s\left(H,\frac{1}{\gamma_2}\right) \tag{16.25}$$

$$\Phi_s = \begin{cases} A_1\,H^{\alpha_1}\,\exp\left(-\alpha_2\,H+\alpha_3\,H^2\right) & \text{if} \quad H \leq 5 \\ A_2\,\exp\left(-0.25\,H\right) & \text{if} \quad H > 5 \end{cases} \tag{16.26}$$

$$\gamma_1 = \frac{\lambda_{x1}}{\lambda_{z1}} \tag{16.27}$$

$$\gamma_2 = \frac{\lambda_{x2}}{\lambda_{z2}} \tag{16.28}$$

Where γ_1 and γ_2 are the Peklenik factors of the bearing journal and shell surface respectively. A_1, A_2, α_1, α_2 and α_3 are functions of the Peklenik factor of the corresponding bearing surface. Those values must be interpolated from table 16.2.

16.3 Cavitation models

16.3.1 Non-mass conserving cavitation

The incompressible Reynolds differential equation

For the incompressible case, the density ρ is constant[2]. This results in a linear partial differential equation of elliptic type with the pressure p as an unknown.

$$\begin{aligned}\frac{\partial q_x}{\partial x} + \frac{\partial q_z}{\partial z} + \frac{\partial h}{\partial t} = \frac{\partial}{\partial x}\left(\frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,h - \frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial x}\right) \\ + \frac{\partial}{\partial z}\left(\frac{\Delta U_{1z}+\Delta U_{2z}}{2}\,h - \frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial z}\right) + \frac{\partial h}{\partial t} = 0\end{aligned} \tag{16.29}$$

The Gümbel boundary condition

After discretization using finite differences or finite elements, a linear system of equations results. Since no cavitation model was used, its solution can contain negative pressures[19]. According to [19], the negative pressures are set to zero after the solution of the linear system of equations in accordance with the Gümbel boundary condition. However, this violates the continuity equation at the boundary of the cavitation region. According to [19], this causes an error in the pressure distribution. That error is increasing with

[2]In fact the fluid will be incompressible if the Dowson-Higginson relation is not used, which is the default.

the pressure gradient. The analytical solution of the incompressible Reynolds differential equation for an infinitely wide bearing given in [19] results in a deviation in the Sommerfeld number between Gümbel boundary condition and Reynolds boundary condition of 18% with a relative eccentricity of $\varepsilon = 0.999$ for the case of pure rotary motion[19]. See also Figure 16.2. Due to its simple implementation, the Gümbel boundary condition was used for the incompressible case. With this method, however, it is not possible to calculate the amount of oil supplied via a lubrication groove as soon as the Gümbel boundary condition becomes active, as the global conservation of mass is not fulfilled. Instead, the required oil quantity must be calculated from the volume flow that exits via the bearings boundaries.

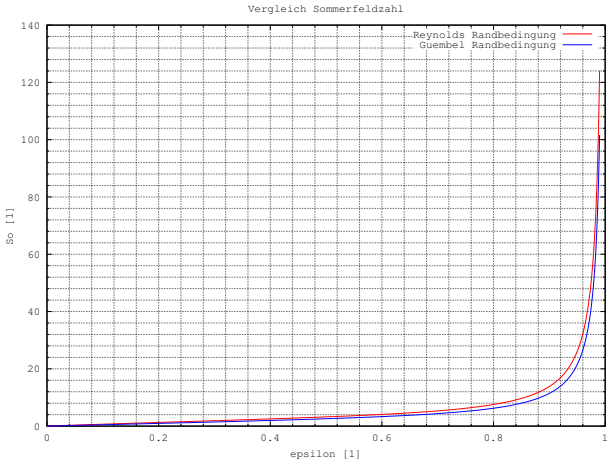


Figure 16.2: Differences in the Sommerfeld number between the Reynolds boundary condition and the Gümbel boundary condition for the infinitely wide bearing with pure rotary motion

The Reynolds boundary condition

According to [19], the Reynolds boundary condition also requires that the pressure gradient is zero where the pressure is also zero. As a result, the continuity equation according to [19] is fulfilled at least at the boundary of the cavitation region. In the cavitation region itself, however, the continuity equation is still not fulfilled according to [20]. The implementation of the Reynolds boundary condition is much more difficult than the implementation of the Gümbel boundary condition. In [19], for example, the pressures in the widest gap were iteratively adjusted to fulfill the Reynolds boundary condition. However, this method is only applicable in the case of a pure rotary motion. According to [21], it is possible to obtain the Reynolds boundary condition for the general case by setting the negative pressures to zero during the iterative solution of the linear system of equations using the Gauss Seidel method. However, this method only works if the matrices of the linear system of equations are symmetrically positive definite. As this is not the case in the multi-body system used, this method could not be implemented there. For test purposes, however, this method was implemented in a stand-alone finite element program for the solution of the incompressible Reynolds equation.

16.3.2 Mass conserving cavitation

The Jakobsson Floberg Ollson (JFO) cavitation model

According to [22], the so-called JFO cavitation model assumes that the flow in the cavitation region is divided into oil-filled strips and strips with oil vapor or dissolved gas. It is assumed that in the oil-filled

strips the radial gap height is completely filled with oil. In the cavitation region where the mean density is less than the density of the liquid oil, the vapor pressure p_c is uniform. This means that only Couette flow is possible in this region. In the full-film region where the pressure is greater than p_c, the fluid is assumed to be incompressible. The implementation of the JFO model is relatively complex as the boundaries of the cavitation region must be treated explicitly.

The cavitation model of H. G. Elrod

In [22], Elrod assumes in contrast to the JFO theory that the fluid in the full-film region is linearly compressible. The pressure is represented as a function of density.

$$p = p_c + g\,\beta\,(\Theta - 1)$$
$$g = \begin{cases} 1 & \text{if} \quad \Theta \geq 1 \\ 0 & \text{if} \quad \Theta < 1 \end{cases} \tag{16.30}$$
$$\Theta = \frac{\rho}{\rho_c} \tag{16.31}$$

p_c Cavitation pressure

ρ_c Cavitation density

β bulk modulus

Θ dimensionless density/pressure

By assuming a slightly compressible fluid, it is possible to calculate the distribution of pressure and density in the bearing without having to know the boundaries of the cavitation region. The problem is that the bulk modulus β is very high, which affects the numerical stability. According to [23], for example, the bulk modulus of mineral oil is $\beta = 2.41GPa$. To avoid numerical stability problems, [23] often uses values for β that are ten to one hundred times smaller than the physically correct bulk modulus. This circumstance was taken into account in [22] by assuming the fluid to be incompressible for the calculation of the mass flows. The linear compressibility of the fluid is only taken into account in the term a in equation 16.15. According to [24], this makes it possible to artificially reduce the bulk modulus β without affecting the results for the steady state. According to [24], the choice of the bulk modulus only affects the rate of convergence towards the steady state. However, an artificial reduction of β is not applicable to transient analysis, because the orbital path would be undoubtedly affected.

The solution of the cavitation condition based on a mixed-complementarity problem Since the original Elrod model is not really applicable, it is necessary to modify the solution procedure. Instead of having only one unknown variable (e.g. either pressure p or density ρ), it is necessary to solve for p and ρ simultaneously, and to add another inequality in order to make the mathematical problem well posed. This is a mixed nonlinear complementarity problem (MCP). Now the complementarity condition describing the cavitation model is:

- If $p \geq 0$ then $\rho = \rho_{liquid}$
- If $\rho < \rho_{liquid}$ then $p = 0$

Where ρ_{liquid} is the density of pure liquid without void fraction which is determined by equation 16.33. Actually $\rho >= 0$ is not a complementary condition but usually it is not hard to fulfill. In any case, it is necessary to use a dedicated nonlinear solver like SICONOS, for the solution of this MCP. See also MBDyn's input manual about the nonlinear solvers which are usable for MCP's.

Fluid properties

So far, no assumptions have been made regarding the fluid viscosity η and fluid density ρ_{liquid}. Actually MBDyn uses the Barus equation 16.32 for the viscosity[20] and the Dowson-Higginson equation 16.33 for the density[20].

$$\eta_{liquid} = \eta_c \exp\left[\alpha_p \ (p - p_c)\right] \tag{16.32}$$

$$\rho_{liquid} = \rho_c \left[1 + \frac{A_{\rho_1} \ (p - p_c)}{1 + A_{\rho_2} \ (p - p_c)}\right] \tag{16.33}$$

$$\eta = \eta_{liquid} \frac{\rho}{\rho_{liquid}} \tag{16.34}$$

Where η_{liquid} is the dynamic viscosity of the pure liquid without any void fraction, α_p is the pressure-viscosity coefficient and η_c is the reference viscosity at pressure p_c. ρ_c is the reference density at pressure p_c and the coefficients for mineral oil are $A_{\rho_1} = 0.6GPa^{-1}$ and $A_{\rho_2} = 1.7GPa^{-1}$[20].

16.4 Discretization of the Reynolds differential equation using finite differences

16.4.1 The orthogonal finite difference mesh of a cylindrical journal bearing

Figure 16.3 shows the basic structure of such a mesh. The grid spacing does not have to be equidistant. For example, it is possible to refine the mesh in the areas of the piston skirt and the sealing edge of the piston. To make it easier to implement the periodic boundary condition of the cylindrical journal bearing with the five node elements, the mesh on the left-hand side was extended by one node beyond the physical boundary of the bearing surface. For each active node, a five-node element with that node in the center must be defined. The edge nodes of a five-node element can be active or passive nodes. The four node elements for reaction forces and axial mass flow are only located within the physical bearing surface.

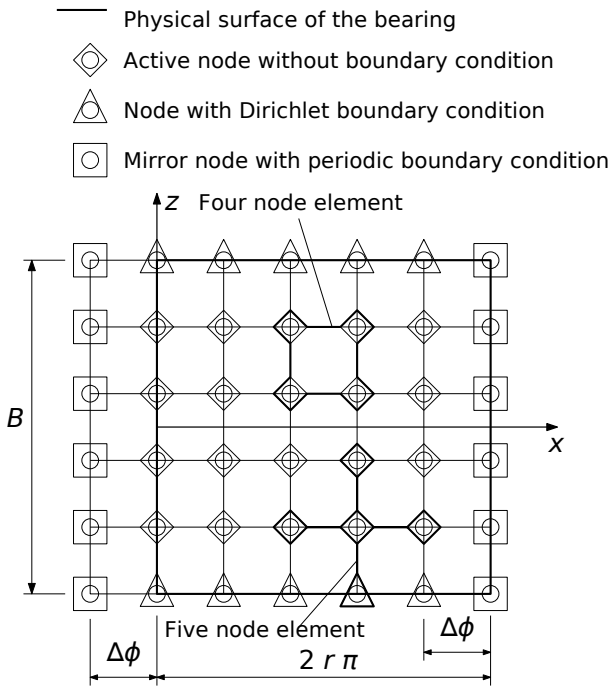


Figure 16.3: orthogonal finite difference mesh of a cylindrical journal bearing

16.4.2 The compressible Reynolds differential equation

$$\left.\frac{\partial p}{\partial x}\right|_{wc} \approx \frac{p|_{center} - p|_{west}}{x|_{center} - x|_{west}} \tag{16.35}$$

$$h|_{wc} \approx \frac{1}{2}\,(h|_{west} + h|_{center}) \tag{16.36}$$

$$\phi_{s_x}|_{wc} \approx \phi_{s_x}\,(h|_{wc}) \tag{16.37}$$

$$\Delta U_{1x}|_{wc} \approx \frac{1}{2}\,(\Delta U_{1x}|_{west} + \Delta U_{1x}|_{center}) \tag{16.38}$$

$$\Delta U_{2x}|_{wc} \approx \frac{1}{2}\,(\Delta U_{2x}|_{west} + \Delta U_{2x}|_{center}) \tag{16.39}$$

$$\begin{aligned} q_x|_{wc} \approx{}& \frac{\Delta U_{1x}|_{wc} + \Delta U_{2x}|_{wc}}{2}\;\bar{h}_T\big|_{wc} + \frac{\Delta U_{1x}|_{wc} - \Delta U_{2x}|_{wc}}{2}\,\sigma_c\;\phi_{s_x}|_{wc} \\ & -\phi_x\,\frac{h^3|_{wc}}{12\;\eta|_{wc}}\;\left.\frac{\partial p}{\partial x}\right|_{wc} \end{aligned} \tag{16.40}$$

$$\rho|_{wc} \approx \begin{cases} \rho|_{west} & \text{if} \quad q_x|_{wc} \geq 0 \\ \rho|_{center} & \text{if} \quad q_x|_{wc} < 0 \end{cases} \tag{16.41}$$

$$\eta|_{wc} \approx \frac{1}{2}\,(\eta|_{west} + \eta|_{center}) \tag{16.42}$$

$$\dot{m}_x|_{wc} \approx \rho|_{wc}\;q_x|_{wc} \tag{16.43}$$

$$\left.\frac{\partial \dot{m}_x}{\partial x}\right|_{center} \approx \frac{\dot{m}_x|_{ce} - \dot{m}_x|_{wc}}{x|_{ce} - x|_{wc}} \tag{16.44}$$

$$\left.\frac{\partial \dot{m}_z}{\partial z}\right|_{center} \approx \frac{\dot{m}_z|_{cn} - \dot{m}_z|_{sc}}{z|_{cn} - z|_{sc}} \tag{16.45}$$

$$\left.\frac{\partial}{\partial t}\,(\rho\,h)\right|_{center} \approx \frac{\partial}{\partial t}\,(\rho|_{center}\;h|_{center}) \tag{16.46}$$

The Courant Friedrichs Lewy condition

Since the compressible Reynolds equation is of parabolic type, it is necessary to consider the CFL condition. This is for the two-dimensional case:

$$\Delta t \leq \frac{C_{max}}{\frac{q_x}{h\,\Delta x} + \frac{q_z}{h\,\Delta z}} \tag{16.47}$$

The CFL condition is checked in the multibody system in each iteration after the calculation of the residual, and the time step size is reduced accordingly if necessary. For explicit methods, $C_{max} = 1$ usually applies. However, since the solution method used is implicit, it is also possible that $C_{max} \geq 1$ is specified. However, values of C_{max} that are too high can lead to divergence of the non-linear solver.

16.5 Hydraulic boundary conditions

16.5.1 Dirichlet boundary condition

Dirichlet boundary conditions can be specified either for the hydraulic pressure p or for the density ρ or for the radial gap height h_0 filled with oil.

Partially flooded boundaries of the bearing

In this case, it is assumed that the component surface on the opposite side of the mesh is wetted with an oil film with a layer thickness of h_0 at the boundaries of the bearings. See figure 16.4. This assumption

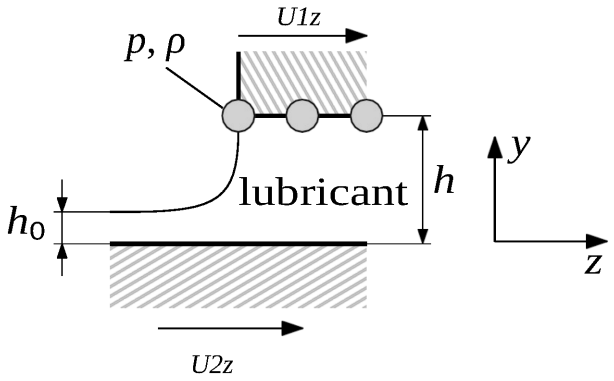


Figure 16.4: assumptions for partially flooded boundaries of the bearing

was made based on the commercial software AVL-Excite. In the case of the lubricating film of the piston, where the mesh is always on the piston side, an oil film with a layer of constant thickness h_0 on the cylinder liner is assumed, because only in this case it is possible to have oil transport through the boundaries of the bearing due to the axial movement of the piston. The fluid density at the boundaries of the bearing is determined as follows:

$$\Phi = \frac{h_0}{h} \tag{16.48}$$

$$\rho = \begin{cases} \rho_c \, \Phi & \text{if} \quad \Phi \leq 1 \\ \rho_c & \text{if} \quad \Phi > 1 \end{cases} \tag{16.49}$$

However, since Reynolds' differential equation only knows one independent variable, it is not possible to specify density and pressure at the boundaries of the bearing at the same time. In order to be able to specify pressure and density independently of each other, it would be necessary to switch to a multiphase flow which also takes into account the proportion of dissolved gas. However, such an approach was not pursued.

Coupling of boundary conditions with other variables

When specifying a Dirichlet boundary condition, it is possible to specify not only constants but also any function as a boundary conditions. For example the pressure can be specified as a boundary condition for the lubricating film at the boundaries of a bearing, or within lubrication grooves, by means of a "DriveCaller". See also MBDyn's input manual.

Geometric locations for the application of boundary conditions

A Dirichlet boundary condition is always required at the boundaries of the bearing for cylindrical plain bearings. In addition, lubrication grooves with a circular or rectangular cross-section can be defined and Dirichlet boundary conditions can be specified there. For reasons of accuracy, the mesh must be located at the same side as the lubrication grooves.

16.5.2 Periodic boundary conditions

Since the surface of the cylindrical plain bearing is unwound onto a plane, it is necessary that the radial boundaries of the unwound bearing surface are coupled with each other. For this purpose, so-called mirror nodes were introduced which have their own nodal coordinates but obtain their value and equation number from their corresponding nodes at the opposite side of the mesh.

16.5.3 Coupling of a plain bearing with a hydraulic network

In MBDyn, it is also possible to set up hydraulic networks consisting of pipelines, valves, throttle points, tanks and hydraulic actuators. For this reason, it was obvious to provide a coupling between individual plain bearings with a hydraulic network. In this way, for example, two journal bearings may be connected to each other via a pipeline. The quantity of oil supplied via the oil pump can be specified as a function of the revolution speed, for example.

Coupling at the boundaries of the bearing surface

When coupling the mass flow through the boundaries of the bearing with the hydraulic network, the following conditions apply for the bearing boundary at $z = \frac{B}{2}$:

$$p|_{z=\frac{B}{2}} = p_{hyd} \tag{16.50}$$

$$\dot{m}_{hyd} = -\int_{x=0}^{2\pi r} \left[\rho \left(\frac{\Delta U_{1z} + \Delta U_{2z}}{2}\,\bar{h}_T + \frac{\Delta U_{1z} - \Delta U_{2z}}{2}\,\sigma_c\,\phi_{s_z} - \phi_z\,\frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial z}\right)\right]\Bigg|_{z=\frac{B}{2}} dx \tag{16.51}$$

p_{hyd} Pressure of the node from the hydraulic network which is coupled to the axial boundary of the bearing

$\dot{m}_{hyd}$ Mass flow which emerges from the hydraulic network

The negative sign in equation 16.51 results from the convention for defining the residual for the nodes in the hydraulic network. Equation 16.51 applies if the network is located on the bearing journal. Otherwise, it must be integrated over $\int_{x=0}^{2\,\pi\,R}$.

Consideration of the flow direction for $z = -\frac{B}{2}$ Coupling with the hydraulic network is achieved using four node coupling elements at the axial boundaries of the bearing surface. To couple the mass flow in the negative z direction, the nodal coordinates are swapped in the x direction so that dx becomes negative.

Coupling with a radial lubrication groove

When coupling with a radial lubrication groove, the continuity equation is extended by an additional source term.

$$p|_{A_{hyd}} = p_{hyd} \tag{16.52}$$

$$\begin{aligned}\dot{m}_{hyd} = \int_{A_{hyd}} \Bigg\{ &\frac{\partial\left(\rho\,\bar{h}_T\right)}{\partial t} + \frac{\partial}{\partial x}\left[\rho\left(\frac{\Delta U_{1x} + \Delta U_{2x}}{2}\,\bar{h}_T + \frac{\Delta U_{1x} - \Delta U_{2x}}{2}\,\sigma_c\,\phi_{s_x} - \phi_x\,\frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial x}\right)\right] \\ &+ \frac{\partial}{\partial z}\left[\rho\left(\frac{\Delta U_{1z} + \Delta U_{2z}}{2}\,\bar{h}_T + \frac{\Delta U_{1z} - \Delta U_{2z}}{2}\,\sigma_c\,\phi_{s_z} - \phi_z\,\frac{h^3}{12\,\eta}\,\frac{\partial p}{\partial z}\right)\right]\Bigg\}\, dA_{hyd}\end{aligned} \tag{16.53}$$

A_{hyd} Area of the radial lubrication groove on the bearing surface

Pressure losses due to flow restrictions when entering the lubricating oil bore must be explicitly modeled in the hydraulic network by means of a throttling point. Coupling with a radial lubrication groove is possible only if it is located on the side of the mesh.

16.6 Kinematic boundary conditions

The kinematic variables h, $\frac{\partial h}{\partial t} = \dot{h}$, $\Delta \boldsymbol{U}_1$ and $\Delta \boldsymbol{U}_2$ required in equation 16.15 are derived in this section. Two possibilities have been implemented so far:

- The mesh moves with the bearing journal
- The mesh moves with the bearing shell

In the case of a piston-cylinder bearing, the first option must be selected so that the kinematic boundary conditions and the reaction forces correspond to reality. Both options can be used for radial plain bearings. The mesh must be located on the side where the lubrication grooves are located. However, it is also possible to specify pockets on the side opposite to the mesh.

16.6.1 The cylindrical plain bearing in which the mesh moves with the bearing journal

The kinematic relationships in Equation 16.54 are shown in Figure 16.5. It is assumed that the radial gap height vector $\boldsymbol{v}_h$ is normal to the surface of the bearing shell. Other assumptions would lead to a quadratic equation with multiple solutions. However, with the bearing clearances of $\Psi \approx 10^{-3}$ that are usual for radial plain bearings, the approximation used should be more than sufficiently accurate. For piston-cylinder bearings, the relative bearing clearance is even smaller than that.

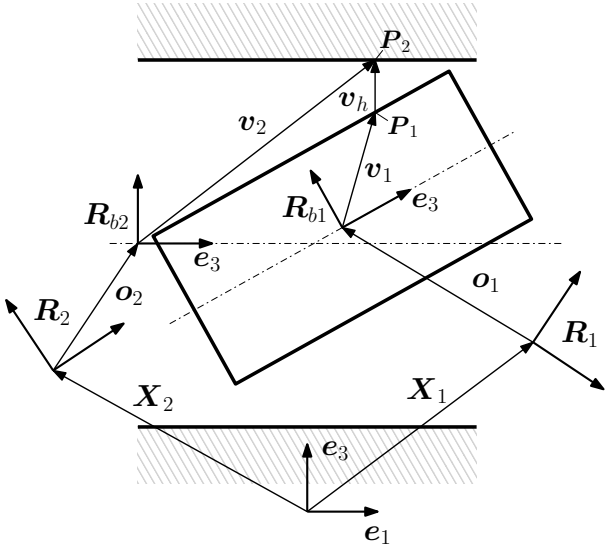


Figure 16.5: Kinematics of the rigid cylindrical plain bearing with mesh on the bearing journal

The determination of the radial gap height

$$\boldsymbol{X}_1 + \boldsymbol{R}_1 \left(\boldsymbol{o}_1 + \boldsymbol{R}_{b1}\, \boldsymbol{v}_1\right) + \boldsymbol{R}_2\, \boldsymbol{R}_{b2}\, \boldsymbol{v}_h = \boldsymbol{X}_2 + \boldsymbol{R}_2 \left(\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2\right) \tag{16.54}$$

$\boldsymbol{X}_1$ Position of the node of the bearing journal

$\boldsymbol{R}_1$ Orientation of the node of the bearing journal

$\boldsymbol{\omega}_1$ Angular velocity of the node of the bearing journal

$\boldsymbol{o}_1$ Distance between the center of the bearing journal and the structural node of the bearing journal

$\boldsymbol{R}_{b1}$ Orientation of the bearing journal relative to the node of the bearing journal

$\boldsymbol{v}_1$ Distance from the center of the bearing journal to the point at the surface of the journal at which the radial gap height is measured, in the coordinate system of the journal

$\boldsymbol{X}_2$ Position of the node of the bearing shell

$\boldsymbol{R}_2$ Orientation of the node of the bearing shell

$\boldsymbol{\omega}_2$ Angular velocity of the structural node of the bearing shell

$\boldsymbol{o}_2$ Distance between the center of the bearing shell and the node of the bearing shell

$\boldsymbol{R}_{b2}$ Orientation of the bearing shell relative to the structural node of the bearing shell

$\boldsymbol{v}_2$ Distance from the center of the bearing shell to the point on the surface of the bearing shell at which the radial gap height is measured, in the coordinate system of the bearing shell

$\boldsymbol{v}_h$ Vector of the radial gap height

h_{rb} Radial gap height, not considering elastic deformations of the bearing surfaces

h Actual radial gap height

w_{tot} Total radial component of the elastic deformation of the surfaces of bearing shell and bearing journal[3].

For a certain node on the bearing journal, the vector $\boldsymbol{v}_1$ is known a priori according to equation 16.55. The unknown variables in equation 16.56 and equation 16.57 are φ_2 and h_{rb}. These must be determined so that equation 16.54 is fulfilled.

$$\boldsymbol{v}_1 = \begin{pmatrix} (r + \Delta y_1)\cos\varphi_1 \\ (r + \Delta y_1)\sin\varphi_1 \\ z_1 \end{pmatrix} \tag{16.55}$$

$$\boldsymbol{v}_2 = \begin{pmatrix} (R + \Delta y_2)\cos\varphi_2 \\ (R + \Delta y_2)\sin\varphi_2 \\ z_2 \end{pmatrix} \tag{16.56}$$

$$\boldsymbol{v}_h = \begin{pmatrix} h_{rb}\cos\varphi_2 \\ h_{rb}\sin\varphi_2 \\ 0 \end{pmatrix} \tag{16.57}$$

$\begin{pmatrix} \varphi_1 & z_1 \end{pmatrix}$ Position of the hydrodynamic node on the bearing journal in cylindrical coordinates

Δy_1 Deviation of the journal surface with respect to the ideal cylindrical shape within specified areas (e.g. barrel shape, cone shape, ellipse shape, grooves, ...).

[3]The determination of w_{tot} will be covered in section 16.10

$\begin{pmatrix}\varphi_2 & z_2\end{pmatrix}$ Position of the point on the surface of the bearing shell which is opposite the hydrodynamic node on the bearing journal

Δy_2 Deviation of the bearing shell surface with respect to the ideal cylindrical surface within specified areas (e.g. barrel shape, cone shape, ellipse shape, grooves, ...).

Due to the assumption that the vector $\boldsymbol{v}_h$ is normal to the surface of the bearing shell, the resolution of equation 16.54 to φ_2 and h_{rb} is simple:

$$\boldsymbol{v}_2 - \boldsymbol{v}_h = \underbrace{\boldsymbol{R}_{b2}^T \left\{ \boldsymbol{R}_2^T \left[\boldsymbol{X}_1 + \boldsymbol{R}_1 \left(\boldsymbol{o}_1 + \boldsymbol{R}_{b1} \boldsymbol{v}_1 \right) - \boldsymbol{X}_2 \right] - \boldsymbol{o}_2 \right\}}_{\boldsymbol{b}} \tag{16.58}$$

$$\begin{pmatrix} \left[(R + \Delta y_2) - h_{rb} \right] \cos\varphi_2 \\ \left[(R + \Delta y_2) - h_{rb} \right] \sin\varphi_2 \\ z_2 \end{pmatrix} = \begin{pmatrix} b_1 \\ b_2 \\ b_3 \end{pmatrix} \tag{16.59}$$

$$\sin\varphi_2 = \frac{b_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.60}$$

$$\cos\varphi_2 = \frac{b_1}{\sqrt{b_1^2 + b_2^2}} \tag{16.61}$$

$$\tan\varphi_2 = \frac{b_2}{b_1} \tag{16.62}$$

$$h_{rb} = R + \Delta y_2 - \sqrt{b_1^2 + b_2^2} \tag{16.63}$$

$$h = h_{rb} + w_{tot} \tag{16.64}$$

In addition, the derivatives of the radial gap height with respect to time are required for the Reynolds differential equation:

$$\dot{h}_{rb} = \Delta\dot{y}_2 - \frac{b_1 \dot{b}_1 + b_2 \dot{b}_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.65}$$

$$\dot{h} = \dot{h}_{rb} + \dot{w}_{tot} \tag{16.66}$$

$$\begin{aligned} \dot{\boldsymbol{b}} = \boldsymbol{R}_{b2}^T \boldsymbol{R}_2^T \Big\{ & \dot{\boldsymbol{X}}_1 + \langle \boldsymbol{\omega}_1 \rangle \, \boldsymbol{R}_1 \left(\boldsymbol{o}_1 + \boldsymbol{R}_{b1} \boldsymbol{v}_1 \right) - \dot{\boldsymbol{X}}_2 \\ & - \langle \boldsymbol{\omega}_2 \rangle \left[\boldsymbol{X}_1 + \boldsymbol{R}_1 \left(\boldsymbol{o}_1 + \boldsymbol{R}_{b1} \boldsymbol{v}_1 \right) - \boldsymbol{X}_2 \right] \Big\} \end{aligned} \tag{16.67}$$

$$\Delta\dot{y}_2 = \frac{\partial \Delta y_2}{\partial x_2} \dot{x}_2 + \frac{\partial \Delta y_2}{\partial z_2} \dot{z}_2 \tag{16.68}$$

$$\dot{x}_2 = R \, \dot{\varphi}_2 \tag{16.69}$$

$$\dot{\varphi}_2 = \frac{b_1 \dot{b}_2 - \dot{b}_1 b_2}{b_1^2 + b_2^2} \tag{16.70}$$

$$\dot{z}_2 = \dot{b}_3 \tag{16.71}$$

For this purpose, the derivatives of Δy_2 must be specified.

Deviations from the cylindrical bearing geometry

Various types of so-called pockets were implemented. A pocket is a deviation from the cylindrical bearing geometry within a given boundary. Rectangular and circular boundaries are currently implemented. If a node is located within this boundary, then Δy_1 or Δy_2 correspond to the height of the respective pocket. In the case of a circular boundary, this is of course only a very rough approximation. In the case of a rectangular boundary, it is still possible to align the grid lines accordingly when generating the mesh.

Pocket with constant height Δy In this case, the specified height Δy applies to the entire area within the boundary. This means that $\frac{\partial \Delta y}{\partial x} = 0$ and $\frac{\partial \Delta y}{\partial z} = 0$.

Pocket with linear interpolation of Δy With linear interpolation, the height Δy can be specified at four vertices of a rectangle. See figure 16.6. The rectangle is only used for interpolation or extrapolation. The boundary of the pocket, on the other hand, can also be a circle, for example.

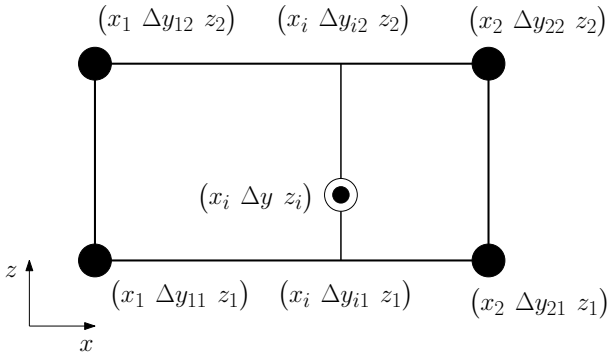


Figure 16.6: Interpolation of Δy for a rectangular pocket

$$\Delta y_{i1} = (\Delta y_{21} - \Delta y_{11})\ \frac{x_i - x_1}{x_2 - x_1} + \Delta y_{11} \tag{16.72}$$

$$\Delta y_{i2} = (\Delta y_{22} - \Delta y_{12})\ \frac{x_i - x_1}{x_2 - x_1} + \Delta y_{12} \tag{16.73}$$

$$\Delta y = (\Delta y_{i2} - \Delta y_{i1})\ \frac{z_i - z_1}{z_2 - z_1} + \Delta y_{i1} \tag{16.74}$$

$$\frac{\partial \Delta y}{\partial x} = \frac{z_i - z_1}{z_2 - z_1} \left(\frac{\partial \Delta y_{i2}}{\partial x} - \frac{\partial \Delta y_{i1}}{\partial x} \right) + \frac{\partial \Delta y_{i1}}{\partial x} \tag{16.75}$$

$$\frac{\partial \Delta y_{i1}}{\partial x} = \frac{\Delta y_{21} - \Delta y_{11}}{x_2 - x_1} \tag{16.76}$$

$$\frac{\partial \Delta y_{i2}}{\partial x} = \frac{\Delta y_{22} - \Delta y_{12}}{x_2 - x_1} \tag{16.77}$$

$$\frac{\partial \Delta y}{\partial z} = \frac{\Delta y_{i2} - \Delta y_{i1}}{z_2 - z_1} \tag{16.78}$$

boundary conditions for the velocities

The velocities $\Delta \boldsymbol{U}_1$ and $\Delta \boldsymbol{U}_2$ must still be specified for the Reynolds differential equation. For this purpose, the velocity of the points $\boldsymbol{P}_1$ and $\boldsymbol{P}_2$ which are located on the surface of the bearing journal and bearing shell are first determined as shown in figure 16.5.

$$\boldsymbol{P}_1 = \boldsymbol{X}_1 + \boldsymbol{R}_1\ (\boldsymbol{o}_1 + \boldsymbol{R}_{b1}\, \boldsymbol{v}_1) \tag{16.79}$$

$$\boldsymbol{P}_2 = \boldsymbol{X}_2 + \boldsymbol{R}_2\ (\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2) \tag{16.80}$$

For the absolute velocities of the points $\boldsymbol{P}_1$ and $\boldsymbol{P}_2$ we get

$$\dot{\boldsymbol{P}}_1 = \dot{\boldsymbol{X}}_1 + \langle \boldsymbol{\omega}_1 \rangle\ \boldsymbol{R}_1\ (\boldsymbol{o}_1 + \boldsymbol{R}_{b1}\, \boldsymbol{v}_1) \tag{16.81}$$

$$\dot{\boldsymbol{P}}_2 = \dot{\boldsymbol{X}}_2 + \langle \boldsymbol{\omega}_2 \rangle\ \boldsymbol{R}_2\ (\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2) - \langle \boldsymbol{\omega}_1 \rangle\ \boldsymbol{R}_2\, \boldsymbol{R}_{b2}\, \boldsymbol{v}_h \tag{16.82}$$

Finally, the difference between the absolute velocities of the component surface and the control volume is transformed into the tangential coordinate system $\boldsymbol{R}_{t1}$. The orientation of the tangential coordinate system is shown in Figure 16.7. Since the mesh moves with the bearing journal according to the assumptions in this section, the velocity difference $\Delta\boldsymbol{U}_1$ at the bearing journal is zero.

$$\Delta\boldsymbol{U}_1 = \boldsymbol{0} \tag{16.83}$$

$$\Delta\boldsymbol{U}_2 = \boldsymbol{R}_{t1}^T\, \boldsymbol{R}_{b1}^T\, \boldsymbol{R}_1^T\, \left(\dot{\boldsymbol{P}}_2 - \dot{\boldsymbol{P}}_1\right) \tag{16.84}$$

$$\boldsymbol{R}_{t1} = \begin{pmatrix} -\sin\varphi_1 & -\cos\varphi_1 & 0 \\ \cos\varphi_1 & -\sin\varphi_1 & 0 \\ 0 & 0 & 1 \end{pmatrix} \tag{16.85}$$

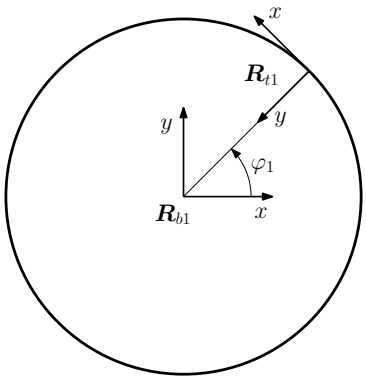


Figure 16.7: Orientation of the tangential coordinate system

16.6.2 The cylindrical plain bearing in which the mesh moves with the bearing shell

It is assumed that the radial gap height $\boldsymbol{v}_h$ is measured normal to the surface of the bearing journal. See figure 16.8. Apart from this, the kinematic relationships are the same as in section 16.6.1.

The determination of the radial gap height

$$\boldsymbol{v}_h = \begin{pmatrix} h_{rb}\,\cos\varphi_1 \\ h_{rb}\,\sin\varphi_1 \\ 0 \end{pmatrix} \tag{16.86}$$

$$\begin{aligned} \boldsymbol{v}_1 + \boldsymbol{v}_h &= \boldsymbol{b} \\ &= \boldsymbol{R}_{b1}^T\, \left\{\boldsymbol{R}_1^T\, \left[\boldsymbol{X}_2 + \boldsymbol{R}_2\, \left(\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2\right) - \boldsymbol{X}_1\right] - \boldsymbol{o}_1\right\} \end{aligned} \tag{16.87}$$

$$\begin{aligned} \dot{\boldsymbol{b}} = \boldsymbol{R}_{b1}^T\, \boldsymbol{R}_1^T\, &\left\{\dot{X}_2 + \langle\boldsymbol{\omega}_2\rangle\, \boldsymbol{R}_2\, \left(\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2\right) - \dot{\boldsymbol{X}}_1 \right. \\ &\left. - \langle\boldsymbol{\omega}_1\rangle\, \left[\boldsymbol{X}_2 + \boldsymbol{R}_2\, \left(\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\, \boldsymbol{v}_2\right) - \boldsymbol{X}_1\right]\right\} \end{aligned} \tag{16.88}$$

$$\tag{16.89}$$

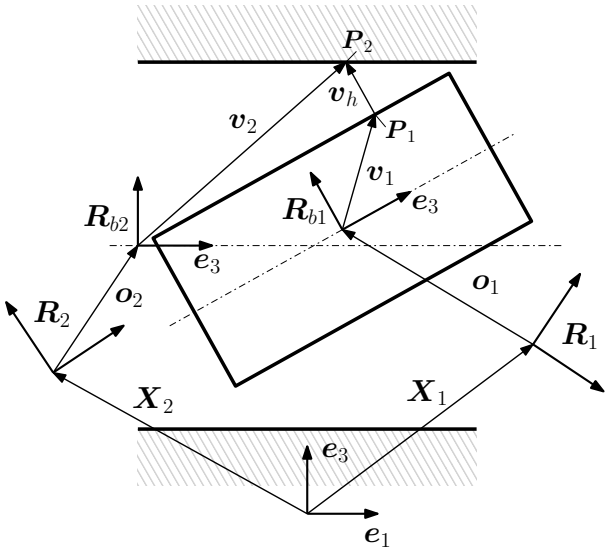


Figure 16.8: Kinematics of the cylindrical plain bearing with mesh on the bearing shell

$$\sin\varphi_1 = \frac{b_2}{\sqrt{b_1^2 + b_2^2}} \tag{16.90}$$

$$\cos\varphi_1 = \frac{b_1}{\sqrt{b_1^2 + b_2^2}} \tag{16.91}$$

$$\tan\varphi_1 = \frac{b_2}{b_1} \tag{16.92}$$

$$\dot{\varphi}_1 = \frac{b_1\,\dot{b}_2 - \dot{b}_1\,b_2}{b_1^2 + b_2^2} \tag{16.93}$$

$$h_{rb} = \sqrt{b_1^2 + b_2^2} - r - \Delta y_1 \tag{16.94}$$

$$\dot{h}_{rb} = \frac{b_1\,\dot{b}_1 + b_2\,\dot{b}_2}{\sqrt{b_1^2 + b_2^2}} - \Delta\dot{y}_1 \tag{16.95}$$

$$h = h_{rb} + w_{tot} \tag{16.96}$$

$$\dot{h} = \dot{h}_{rb} + \dot{w}_{tot} \tag{16.97}$$

$$\Delta\dot{y}_1 = \frac{\partial\Delta y_1}{\partial x_1}\,\dot{x}_1 + \frac{\partial\Delta y_1}{\partial z_1}\,\dot{z}_1 \tag{16.98}$$

$$\dot{x}_1 = r\,\dot{\varphi}_1 \tag{16.99}$$

$$\dot{z}_1 = \dot{b}_3 \tag{16.100}$$

Boundary conditions for the velocities

In contrast to section 16.6.1, the following applies to the velocities:

$$\dot{\boldsymbol{P}}_1 = \dot{\boldsymbol{X}}_1 + \langle \boldsymbol{\omega}_1 \rangle \; \boldsymbol{R}_1 \; (\boldsymbol{o}_1 + \boldsymbol{R}_{b1} \, \boldsymbol{v}_1) + \langle \boldsymbol{\omega}_2 \rangle \; \boldsymbol{R}_1 \, \boldsymbol{R}_{b1} \, \boldsymbol{v}_h \tag{16.101}$$

$$\dot{\boldsymbol{P}}_2 = \dot{\boldsymbol{X}}_2 + \langle \boldsymbol{\omega}_2 \rangle \; \boldsymbol{R}_2 \; (\boldsymbol{o}_2 + \boldsymbol{R}_{b2} \, \boldsymbol{v}_2) \tag{16.102}$$

$$\Delta \boldsymbol{U}_1 = \boldsymbol{R}_{t2}^T \, \boldsymbol{R}_{b2}^T \, \boldsymbol{R}_2^T \left(\dot{\boldsymbol{P}}_1 - \dot{\boldsymbol{P}}_2 \right) \tag{16.103}$$

$$\Delta \boldsymbol{U}_2 = \boldsymbol{0} \tag{16.104}$$

$$\boldsymbol{R}_{t2} = \begin{pmatrix} -\sin\varphi_2 & -\cos\varphi_2 & 0 \\ \cos\varphi_2 & -\sin\varphi_2 & 0 \\ 0 & 0 & 1 \end{pmatrix} \tag{16.105}$$

16.7 Solid body contact and dry friction

16.7.1 The contact model of Greenwood and Tripp

In order to account for solid contact and dry friction between rough surfaces, the approach of Greenwood and Tripp was applied[25]. The equations for the Hertzian contact pressure between asperities of rough surfaces are [25]:

$$p_{asp} = \frac{16\sqrt{2}}{15} \, \pi \, \left(\eta_{asp} \, \beta_{asp} \sigma_\delta \right)^2 \, \acute{E} \, \sqrt{\frac{\sigma_\delta}{\beta_{asp}}} \, F_{\frac{5}{2}} \left(\frac{h}{\sigma_\delta} \right) \tag{16.106}$$

$$\acute{E} = \left(\frac{1-\nu_1^2}{E_1} + \frac{1-\nu_2^2}{E_2} \right)^{-1} \tag{16.107}$$

$$F_{\frac{5}{2}}(H) = \begin{cases} 4.4086 \cdot 10^{-5} \, (4-H)^{6.804} & \text{if} \quad H \leq 4 \\ 0 & \text{if} \quad H > 4 \end{cases} \tag{16.108}$$

$$H = \frac{h}{\sigma_\delta} \tag{16.109}$$

$$\sigma_\delta = \sqrt{M_0} \tag{16.110}$$

$$\eta_{asp} = \frac{1}{6\,\pi\,\sqrt{3}} \, \frac{M_4}{M_2} \tag{16.111}$$

$$\beta_{asp} = \frac{3\sqrt{\pi}}{8\sqrt{M_4}} \tag{16.112}$$

p_{asp} Pressure due to contact between the asperities of the rough surfaces

η_{asp} Asperity density

β_{asp} Radius of curvature of the asperity tip

σ_δ Variance of the measured values of the roughness profile

$M_0 = \sigma_\delta^2$ combined zeroth spectral moment to describe the surface roughness

$M_2 = \dot{\sigma}_\delta^2$ combined second spectral moment to describe the surface roughness

$M_4 = \ddot{\sigma}_\delta^2$ combined fourth spectral moment to describe the surface roughness

According to [26], those values can be determined from the analysis of measured roughness profiles of the component surfaces.

16.7.2 The two-dimensional LuGre solid friction model

The standard model for the description of dry friction between solid bodies is Coulomb's law. However, the implementation of the transition between sliding friction and static friction for the general two-dimensional case is not trivial. The consideration of this transition is always important in a multi-body system, if the relative movement of a mechanism is going to stop due to friction. If sliding friction were always used in the calculation, an explicit integration scheme would result in endless oscillations around the static equilibrium point. For this reason, the two-dimensional LuGre model presented in [27] was selected, which is based on a linear differential equation and does not require any case distinctions. The LuGre friction model assumes that two bodies with rough surfaces touch each other at the tips of the asperities, also called bristles in the literature. With small relative movements, these bristles behave like springs. However, as soon as a certain maximum deformation is reached, the bristles begin to slide over each other. However, the transition between sticking and sliding is continuous in the LuGre model. The two-dimensional LuGre model from [27] reads:

$$\boldsymbol{\tau}_{asp} = (\boldsymbol{\sigma}_0\,\boldsymbol{z} + \boldsymbol{\sigma}_1\,\dot{\boldsymbol{z}})\;p_{asp} \tag{16.113}$$

$$\dot{\boldsymbol{z}} = \Delta\boldsymbol{U} - \kappa\,\boldsymbol{M}_k^{-2}\,\boldsymbol{\sigma}_0\,\boldsymbol{z} \tag{16.114}$$

$$g = \frac{\left\|\boldsymbol{M}_k^2\,\Delta\boldsymbol{U}\right\|}{\left\|\boldsymbol{M}_k\,\Delta\boldsymbol{U}\right\|} + \left(\frac{\left\|\boldsymbol{M}_s^2\,\Delta\boldsymbol{U}\right\|}{\left\|\boldsymbol{M}_s\,\Delta\boldsymbol{U}\right\|} - \frac{\left\|\boldsymbol{M}_k^2\,\Delta\boldsymbol{U}\right\|}{\left\|\boldsymbol{M}_k\,\Delta\boldsymbol{U}\right\|}\right)\exp\left[-\left(\frac{\|\Delta\boldsymbol{U}\|}{v_s}\right)^{\gamma}\right] \tag{16.115}$$

$$\kappa = \frac{\left\|\boldsymbol{M}_k^2\,\Delta\boldsymbol{U}\right\|}{g} \tag{16.116}$$

$$\boldsymbol{M}_k = \begin{pmatrix}\mu_{kx} & 0\\ 0 & \mu_{kz}\end{pmatrix} \tag{16.117}$$

$$\boldsymbol{M}_s = \begin{pmatrix}\mu_{sx} & 0\\ 0 & \mu_{sz}\end{pmatrix} \tag{16.118}$$

$$\boldsymbol{\sigma}_0 = \begin{pmatrix}\sigma_{0x} & 0\\ 0 & \sigma_{0z}\end{pmatrix} \tag{16.119}$$

$$\boldsymbol{\sigma}_1 = \begin{pmatrix}\sigma_{1x} & 0\\ 0 & \sigma_{1z}\end{pmatrix} \tag{16.120}$$

$$\Delta\boldsymbol{U} = \begin{pmatrix}\boldsymbol{e}_1^T\\ \boldsymbol{e}_3^T\end{pmatrix}(\Delta\boldsymbol{U}_1 - \Delta\boldsymbol{U}_2) \tag{16.121}$$

$\boldsymbol{z} = \begin{pmatrix}z_1\\ z_2\end{pmatrix}$ Deformation of the bristles

$\boldsymbol{\tau}_{asp} = \begin{pmatrix}\tau_{asp_{xy}}\\ \tau_{asp_{yz}}\end{pmatrix}$ Shear stresses due to dry friction

$\Delta\boldsymbol{U}$ Components of the velocity difference in x- and z direction

$\boldsymbol{\sigma}_0$ transient micro-sliding stiffness matrix

$\boldsymbol{\sigma}_1$ transient micro-slip damping matrix

$\boldsymbol{M}_k$ sliding friction matrix

μ_{kx} coefficient of sliding friction in x direction

μ_{kz} Sliding friction coefficient in z direction

$\boldsymbol{M}_s$ static friction matrix

μ_{sx} Coefficient of static friction in x direction

μ_{sz} Coefficient of static friction in z direction

v_s Velocity which describes the transition between static friction and dynamic friction (Stribeck effect)

γ Coefficient that describes the transition between static friction and dynamic friction (Stribeck effect)

The transition to Coulomb's law of friction

For the stationary sliding process for isotropic surfaces without Stribeck effect, the LuGre model can be simplified as follows for illustrative purposes:

$$\dot{\boldsymbol{z}} = \boldsymbol{0} \tag{16.122}$$

$$\boldsymbol{M}_k = \boldsymbol{M}_s \tag{16.123}$$

$$\sigma_{0x} = \sigma_{0z} = \sigma_0 \tag{16.124}$$

$$\mu_{kx} = \mu_{kz} = \mu_k \tag{16.125}$$

With these simplifications we get

$$\boldsymbol{z} = \frac{\mu_k}{\sigma_0 \, \|\Delta \boldsymbol{U}\|_2} \, \Delta \boldsymbol{U} \tag{16.126}$$

$$\begin{aligned} \boldsymbol{\tau}_{asp} &= \boldsymbol{\sigma}_0 \, \boldsymbol{z} \, p_{asp} \\ &= \frac{\mu_k \, p_{asp}}{\|\Delta \boldsymbol{U}\|_2} \, \Delta \boldsymbol{U} \end{aligned} \tag{16.127}$$

Equation 16.127 therefore corresponds exactly to the surface of the friction cone in Coulomb's law of friction.

The transition to static friction

For the unsteady one-dimensional case, the simplifications of equation 16.123-16.125:

$$\dot{z}_x = \Delta U_x - |\Delta U_x| \, \frac{\sigma_{0x}}{\mu_k} \, z_x \tag{16.128}$$

At constant velocity ΔU_x, the analytical solution of the differential equation 16.128 and the initial condition $z_x|_{t=0} = 0$:

$$z_x = \left[1 - \exp\left(- |\Delta U_x| \, \frac{\sigma_{0x}}{\mu_k} \, t \right) \right] \, \frac{\mu_k}{\sigma_{0x}} \, \operatorname{sign} \Delta U_x \tag{16.129}$$

$$\tau_x = \left[\mu_k \, \operatorname{sign} \Delta U_x + (\Delta U_x \, \sigma_{1x} - \mu_k \, \operatorname{sign} \Delta U_x) \, \exp\left(- |\Delta U_x| \, \frac{\sigma_{0x}}{\mu_k} \, t \right) \right] \, p_{asp} \tag{16.130}$$

Figure 16.9 shows the course of the shear stresses as a function of the deformation according to equation 16.130. It can be seen from this that the product $\sigma_{0x} \, p_{asp}$ only indicates the gradient of the stress curve at the beginning of the movement (black straight line). After that, the movement changes into a creeping movement.

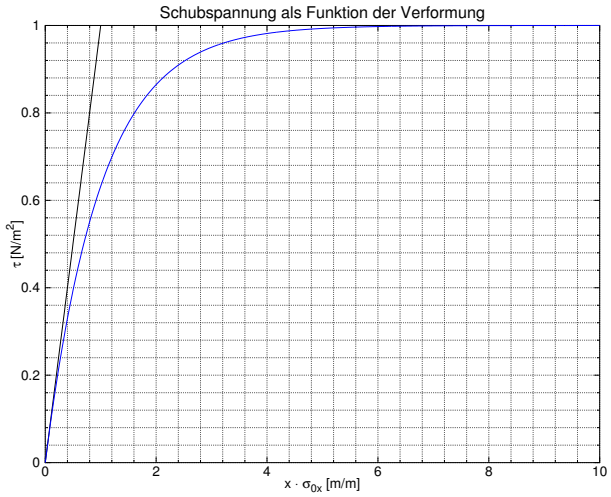


Figure 16.9: Shear stress distribution as a function of deformation in the one-dimensional LuGre model

Numerical integration of the LuGre model

In principle, the linear differential equation for the LuGre model could be solved together with the other equations of the multi-body system. However, this would triple the size of the Jacobian matrix, as the states $\boldsymbol{z}$ for the transition between static friction and dynamic friction would have to be stored for each node in addition to the hydrodynamic pressure p. However, since the differential equation of the LuGre model is linear and the static friction states of the individual nodes are independent, the LuGre model was numerically integrated separately from the other equations. The following integration scheme is used for this purpose:

$$\boldsymbol{z}|_t = \left[\zeta \;\; \dot{\boldsymbol{z}}|_t + (1-\zeta) \;\; \dot{\boldsymbol{z}}|_{t-1}\right] \;\; \Delta t + \boldsymbol{z}|_{t-1} \tag{16.131}$$

Δt time step size

$\zeta = 0$ explicit Euler method (unstable)

$\zeta = \frac{1}{2}$ trapezoidal rule (second order accurate)

$\zeta = 1$ implicit Euler method (first order accurate)

With these assumptions, the following equation for $\dot{\boldsymbol{z}}$ results:

$$\boldsymbol{A}|_t = \kappa|_t \;\; \boldsymbol{M}_k^{-2} \, \boldsymbol{\sigma}_0 \tag{16.132}$$

$$\dot{\boldsymbol{z}}|_t = (\boldsymbol{I} + \zeta \, \Delta t \;\; \boldsymbol{A}|_t)^{-1} \;\; \left\{ \Delta \boldsymbol{U}|_t - \boldsymbol{A}|_t \;\; \left[(1-\zeta) \;\; \dot{\boldsymbol{z}}|_{t-1} \;\; \Delta t + \boldsymbol{z}|_{t-1}\right] \right\} \tag{16.133}$$

16.8 Reaction forces

16.8.1 Frictional forces due to fluid friction

For a Newtonian fluid in laminar flow, the shear stresses τ_{xy} and τ_{yz} apply:

$$\begin{aligned}\tau_{xy} &= \eta \left(\frac{\partial u_x}{\partial y} + \underbrace{\frac{\partial u_y}{\partial x}}_{\approx 0} \right) \\ \tau_{yz} &= \eta \left(\underbrace{\frac{\partial u_y}{\partial z}}_{\approx 0} + \frac{\partial u_z}{\partial y} \right)\end{aligned} \tag{16.134}$$

As in the derivation of the Reynolds differential equation, the derivatives of the velocity in the circumferential direction and axial direction are neglected compared to the derivative in the radial gap height direction. If equation 16.8 is differentiated versus y, the velocity gradients are obtained:

$$\begin{aligned}\frac{\partial u_x}{\partial y} &= \frac{1}{\eta} \frac{\partial p}{\partial x} \left(y - \frac{h}{2} \right) + \frac{\Delta U_{1x} - \Delta U_{2x}}{h} \\ \frac{\partial u_z}{\partial y} &= \frac{1}{\eta} \frac{\partial p}{\partial z} \left(y - \frac{h}{2} \right) + \frac{\Delta U_{1z} - \Delta U_{2z}}{h}\end{aligned} \tag{16.135}$$

Substituting equation 16.135 into equation 16.134 gives the shear stresses at the surface of the components:

$$\tau_{xy}|_{y=0} = -\frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h} \tag{16.136}$$

$$\tau_{xy}|_{y=h} = \frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h} \tag{16.137}$$

$$\tau_{yz}|_{y=0} = -\frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\Delta U_{1z} - \Delta U_{2z}}{h} \tag{16.138}$$

$$\tau_{yz}|_{y=h} = \frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\Delta U_{1z} - \Delta U_{2z}}{h} \tag{16.139}$$

Micro hydrodynamic effects

In order to account for micro hydrodynamic effects also the shear stresses must be corrected[4]. The corrected shear stresses are:

$$\tau_{xy}|_{y=0} = -\phi_{fp_{xy}} \frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h} \left(\phi_f + \phi_{fs_{xy}} \right) \tag{16.140}$$

$$\tau_{xy}|_{y=h} = \phi_{fp_{xy}} \frac{h}{2} \frac{\partial p}{\partial x} + \eta \frac{\Delta U_{1x} - \Delta U_{2x}}{h} \left(\phi_f - \phi_{fs_{xy}} \right) \tag{16.141}$$

$$\tau_{yz}|_{y=0} = -\phi_{fp_{yz}} \frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\Delta U_{1z} - \Delta U_{2z}}{h} \left(\phi_f + \phi_{fs_{yz}} \right) \tag{16.142}$$

$$\tau_{yz}|_{y=h} = \phi_{fp_{yz}} \frac{h}{2} \frac{\partial p}{\partial z} + \eta \frac{\Delta U_{1z} - \Delta U_{2z}}{h} \left(\phi_f - \phi_{fs_{yz}} \right) \tag{16.143}$$

Where $\phi_{fp_{xy}}$ and $\phi_{fp_{yz}}$ are the shear stress factors due to pressure gradient in x and z direction respectively. $\phi_{fs_{xy}}$ and $\phi_{fs_{yz}}$ are the shear stress factors due to sliding and roughness in x and z direction

Table 16.3: Coefficients for the calculation of the shear stress factors ϕ_{fs}[4]

γ_1/γ_2	A_3	α_4	α_5	α_6
1/9	14.1	2.45	2.30	0.10
1/6	13.4	2.42	2.30	0.10
1/3	12.3	2.32	2.30	0.10
1	11.1	2.31	2.38	0.11
3	9.8	2.25	2.80	0.18
6	10.1	2.25	2.90	0.18
9	8.7	2.15	2.97	0.18

Table 16.4: Coefficients for the calculation of the shear stress factors ϕ_{fp}[4]

γ_c	D	s
1/9	1.51	0.52
1/6	1.51	0.54
1/3	1.47	0.58
1	1.40	0.66
3	0.98	0.79
6	0.97	0.91
9	0.73	0.91

respectively. ϕ_f is the mean shear stress factor which accounts for the change in the base shear stress due to the varying gap height. Those factors are defined as[4]:

$$\phi_{fp} = 1 - D\,\exp\left(-s\,H\right) \tag{16.144}$$

$$\phi_{fp_{xy}} = \phi_{fp}\left(H, \gamma_c\right) \tag{16.145}$$

$$\phi_{fp_{yz}} = \phi_{fp}\left(H, \frac{1}{\gamma_c}\right) \tag{16.146}$$

$$\phi_{fs_{xy}} = V_{r1}\,\Phi_{fs}\left(H, \gamma_1\right) - V_{r2}\,\Phi_{fs}\left(H, \gamma_2\right) \tag{16.147}$$

$$\phi_{fs_{yz}} = V_{r1}\,\Phi_{fs}\left(H, \frac{1}{\gamma_1}\right) - V_{r2}\,\Phi_{fs}\left(H, \frac{1}{\gamma_2}\right) \tag{16.148}$$

$$\Phi_{fs} = A_3\,H^{\alpha_4}\,\exp\left(-\alpha_5\,H + \alpha_6\,H^2\right) \tag{16.149}$$

$$\phi_f = \begin{cases} 1 + \frac{0.88}{H^{1.5}} & \text{if} \quad 0.5 \leq H \leq 5 \\ 1 + \frac{1}{H^2} & \text{if} \quad H > 5 \end{cases} \tag{16.150}$$

The coefficients for $\phi_{fp_{xy}}$ and $\phi_{fp_{yz}}$ must be interpolated from table 16.4 whereas the coefficients for $\Phi_{fs_{xy}}$ and $\Phi_{fs_{yz}}$ must be interpolated from table 16.3.

16.8.2 The mesh moves with the bearing shell

The reaction forces on the bearing journal and on the bearing shell result from the integration of the shear stresses and the pressure loads over the surface. The kinematic relationships are shown in Figure 16.10.

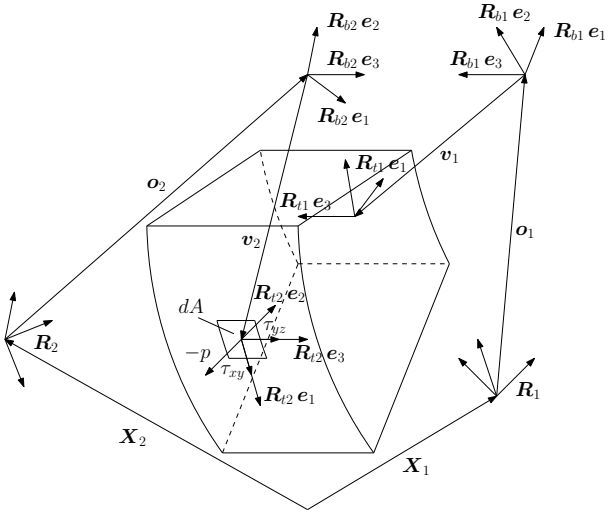


Figure 16.10: Reaction forces with a mesh on the bearing shell

Forces on the bearing shell

The integration of the reaction forces on the bearing shell is conveniently carried out in the coordinate system of the node of the bearing shell.

$$d\boldsymbol{F}_2^{(\boldsymbol{R}_2)} = \boldsymbol{R}_{b2}\,\boldsymbol{R}_{t2}\begin{pmatrix}\tau_{xy}\big|_{y=0} + \tau_{asp_{xy}}\\ -\left(p + p_{asp}\right)\\ \tau_{yz}\big|_{y=0} + \tau_{asp_{yz}}\end{pmatrix} dA_2 \tag{16.151}$$

$$d\boldsymbol{M}_2^{(\boldsymbol{R}_2)} = \langle \boldsymbol{R}_{b2}\,\boldsymbol{v}_2 \rangle\; d\boldsymbol{F}_2^{(\boldsymbol{R}_2)} \tag{16.152}$$

$$\boldsymbol{F}_2 = \boldsymbol{R}_2 \int_{A_2} d\boldsymbol{F}_2^{(\boldsymbol{R}_2)} \tag{16.153}$$

$$\boldsymbol{M}_2 = \langle \boldsymbol{R}_2\,\boldsymbol{o}_2 \rangle\; \boldsymbol{F}_2 + \boldsymbol{R}_2 \int_{A_2} d\boldsymbol{M}_2^{(\boldsymbol{R}_2)} \tag{16.154}$$

Forces on the bearing journal

Since the shear stresses due to fluid friction are different on the bearing journal at $y = h$ and on the bearing shell at $y = 0$, the reaction forces on both sides must be integrated. The integration of the reaction forces on the bearing journal also takes place in the coordinate system of the bearing shell. In case of an axial movement between journal and shell surface, the projected distance λ in equation 16.158 must be considered in the moment equilibrium. This is important, especially for piston to cylinder liner contacts.

$$d\boldsymbol{F}_1^{(\boldsymbol{R}_2)} = \boldsymbol{R}_{b2}\,\boldsymbol{R}_{t2}\begin{pmatrix} -\tau_{xy}\big|_{y=h} - \tau_{asp_{xy}} \\ p + p_{asp} \\ -\tau_{yz}\big|_{y=h} - \tau_{asp_{yz}} \end{pmatrix} dA_2 \tag{16.155}$$

$$d\boldsymbol{M}_1^{(\boldsymbol{R}_2)} = \langle \boldsymbol{R}_{b2}\,\boldsymbol{v}_2 \rangle\; d\boldsymbol{F}_1^{(\boldsymbol{R}_2)} \tag{16.156}$$

$$\boldsymbol{F}_1 = \boldsymbol{R}_2 \int_{A_2} d\boldsymbol{F}_1^{(\boldsymbol{R}_2)} \tag{16.157}$$

$$\boldsymbol{M}_1 = \langle \boldsymbol{R}_1\;(\boldsymbol{o}_1 + \boldsymbol{R}_{b1}\,\boldsymbol{e}_3\,\lambda) \rangle\; \boldsymbol{F}_1 + \boldsymbol{R}_2 \int_{A_2} d\boldsymbol{M}_1^{(\boldsymbol{R}_2)} \tag{16.158}$$

$$\lambda = -\frac{\boldsymbol{e}_3^T\,\boldsymbol{R}_{b2}^T\,\left[\boldsymbol{R}_2^T\;(\boldsymbol{X}_1 + \boldsymbol{R}_1\,\boldsymbol{o}_1 - \boldsymbol{X}_2) - \boldsymbol{o}_2\right]}{\boldsymbol{e}_3^T\,\boldsymbol{R}_{b2}^T\,\boldsymbol{R}_2^T\,\boldsymbol{R}_1\,\boldsymbol{R}_{b1}\,\boldsymbol{e}_3} \tag{16.159}$$

16.8.3 The mesh moves with the bearing journal

In this case, the same procedure is applied as described in section 16.8.2.

Forces on the bearing journal

The following applies to the forces on the bearing journal:

$$d\boldsymbol{F}_1^{(\boldsymbol{R}_1)} = \boldsymbol{R}_{b1}\,\boldsymbol{R}_{t1}\begin{pmatrix} -\tau_{xy}\big|_{y=h} - \tau_{asp_{xy}} \\ p + p_{asp} \\ -\tau_{yz}\big|_{y=h} - \tau_{asp_{yz}} \end{pmatrix} dA_1 \tag{16.160}$$

$$d\boldsymbol{M}_1^{(\boldsymbol{R}_1)} = \langle \boldsymbol{R}_{b1}\,\boldsymbol{v}_1 \rangle\; d\boldsymbol{F}_1^{(\boldsymbol{R}_1)} \tag{16.161}$$

$$\boldsymbol{F}_1 = \boldsymbol{R}_1 \int_{A_1} d\boldsymbol{F}_1^{(\boldsymbol{R}_1)} \tag{16.162}$$

$$\boldsymbol{M}_1 = \langle \boldsymbol{R}_1\,\boldsymbol{o}_1 \rangle\; \boldsymbol{F}_1 + \boldsymbol{R}_1 \int_{A_1} d\boldsymbol{M}_1^{(\boldsymbol{R}_1)} \tag{16.163}$$

Forces on the bearing shell

Also the forces at the bearing shell are calculated analogous to section 16.8.2.

$$d\boldsymbol{F}_2^{(\boldsymbol{R}_1)} = \boldsymbol{R}_{b1}\,\boldsymbol{R}_{t1}\begin{pmatrix} \tau_{xy}\big|_{y=0} + \tau_{asp_{xy}} \\ -p - p_{asp} \\ \tau_{yz}\big|_{y=0} + \tau_{asp_{yz}} \end{pmatrix} dA_1 \tag{16.164}$$

$$d\boldsymbol{M}_2^{(\boldsymbol{R}_1)} = \langle \boldsymbol{R}_{b1}\,\boldsymbol{v}_1 \rangle\; d\boldsymbol{F}_2^{(\boldsymbol{R}_1)} \tag{16.165}$$

$$\boldsymbol{F}_2 = \boldsymbol{R}_1 \int_{A_1} d\boldsymbol{F}_2^{(\boldsymbol{R}_1)} \tag{16.166}$$

$$\boldsymbol{M}_2 = \langle \boldsymbol{R}_2\;(\boldsymbol{o}_2 + \boldsymbol{R}_{b2}\,\boldsymbol{e}_3\,\lambda) \rangle\; \boldsymbol{F}_2 + \boldsymbol{R}_1 \int_{A_1} d\boldsymbol{M}_2^{(\boldsymbol{R}_1)} \tag{16.167}$$

$$\lambda = \frac{\boldsymbol{e}_3^T\,\boldsymbol{R}_{b1}^T\,\left[\boldsymbol{R}_1^T\,(\boldsymbol{X}_1 - \boldsymbol{X}_2 - \boldsymbol{R}_2\,\boldsymbol{o}_2) + \boldsymbol{o}_1\right]}{\boldsymbol{e}_3^T\,\boldsymbol{R}_{b1}^T\,\boldsymbol{R}_1^T\,\boldsymbol{R}_2\,\boldsymbol{R}_{b2}\,\boldsymbol{e}_3} \tag{16.168}$$

16.8.4 Determination of frictional losses

Theoretically, the frictional losses could also be determined from the bearing reaction forces. However, it is not possible to separate dry friction from fluid friction and it is difficult to separate the dissipative components from the conservative components. For this reason, the friction power was determined independently of the reaction forces.

$$P_f = -\int_A \left[(\Delta U_{1x} - \Delta U_{2x})\ \tau_{xy}|_{y=0} + (\Delta U_{1z} - \Delta U_{2z})\ \tau_{yz}|_{y=0} \right] dA \tag{16.169}$$

$$P_{asp} = -\int_A \left[(\Delta U_{1x} - \Delta U_{2x})\ \tau_{asp_{xy}} + (\Delta U_{1z} - \Delta U_{2z})\ \tau_{asp_{yz}} \right] dA \tag{16.170}$$

The negative sign in equation 16.169 and equation 16.170 follows the convention that kinetic energy losses are denoted as negative.

P_f Frictional losses due to fluid friction

P_{asp} Frictional losses due to dry friction

16.9 Alternative solution of the incompressible Reynolds differential equation using the finite element method

The discretization chosen in section 16.4 using finite differences was based on an orthogonal grid. This is completely sufficient for simple geometries such as a cylindrical plain bearing without lubrication grooves. Even a rectangular lubrication groove can still be captured accurately thanks to the variable grid spacing. In the case of a circular lubricating oil bore, however, the method is very inefficient, as a very fine grid is required for accurate resolution of the circular edge, which extends over the entire bearing surface due to the orthogonal grid lines in the circumferential direction and in the axial direction. Using the finite element method, however, makes it much easier to handle complex geometries. The general procedure for the discretization of partial differential equations in this section is essentially based on [11].

16.9.1 The weak formulation of the Reynolds differential equation

The starting point for the finite element formulation is the incompressible Reynolds differential equation. In equation 16.171 it was assumed that the radial velocity of the bearing journal is small compared to the circumferential velocity. This results in the frequently encountered simplification $\frac{\partial}{\partial x}\left(\frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,h\right) \approx \frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,\frac{\partial h}{\partial x}$.

$$\frac{\partial}{\partial x}\left(h^3\,\frac{\partial p}{\partial x}\right) + \frac{\partial}{\partial z}\left(h^3\,\frac{\partial p}{\partial z}\right) = 12\,\eta\left[\frac{\partial h}{\partial t} + \frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,\frac{\partial h}{\partial x} + \frac{\Delta U_{1z}+\Delta U_{2z}}{2}\,\frac{\partial h}{\partial z}\right] \tag{16.171}$$

Equation 16.171 is multiplied by the test function $\bar{p}$ and integrated over the entire solution domain.

$$\int_A \left\{ \bar{p}\left[\frac{\partial}{\partial x}\left(h^3\,\frac{\partial p}{\partial x}\right) + \frac{\partial}{\partial z}\left(h^3\,\frac{\partial p}{\partial z}\right)\right] - 12\,\eta\,\bar{p}\left(\frac{\partial h}{\partial t} + \frac{\Delta U_{1x}+\Delta U_{2x}}{2}\,\frac{\partial h}{\partial x} + \frac{\Delta U_{1z}+\Delta U_{2z}}{2}\,\frac{\partial h}{\partial z}\right)\right\} dA = 0 \tag{16.172}$$

The aim is to eliminate the second derivatives from the partial differential equation. The advantage of this is that it allows lower-order shape functions to be used[11]. For this purpose, the partial differential

equation is transformed using Gauss's integral theorem and the chain rule of differentiation so that only first derivatives appear[11]. This follows from the chain rule of differentiation:

$$\int_A \left\{ \frac{\partial}{\partial x}\left(\bar{p}\,h^3\,\frac{\partial p}{\partial x}\right) - \frac{\partial \bar{p}}{\partial x}\,h^3\,\frac{\partial p}{\partial x} + \frac{\partial}{\partial z}\left(\bar{p}\,h^3\,\frac{\partial p}{\partial z}\right) - \frac{\partial \bar{p}}{\partial z}\,h^3\,\frac{\partial p}{\partial z} \right.$$
$$\left. -12\,\eta\,\bar{p}\left(\frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2}\,\frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2}\,\frac{\partial h}{\partial z}\right)\right\} dA = 0 \tag{16.173}$$

The Gaussian integral theorem reads:

$$\int_A \left(\frac{\partial Q}{\partial x} - \frac{\partial P}{\partial z}\right) dA = \oint_R P\,dx + Q\,dz \tag{16.174}$$

After applying Gauss's integral theorem, the following results:

$$\int_A \left(\frac{\partial \bar{p}}{\partial x}\,h^3\,\frac{\partial p}{\partial x} + \frac{\partial \bar{p}}{\partial z}\,h^3\,\frac{\partial p}{\partial z}\right) dA$$
$$+12\,\eta \int_A \bar{p}\left(\frac{\partial h}{\partial t} + \frac{\Delta U_{1x} + \Delta U_{2x}}{2}\,\frac{\partial h}{\partial x} + \frac{\Delta U_{1z} + \Delta U_{2z}}{2}\,\frac{\partial h}{\partial z}\right) dA$$
$$= \oint_R -\bar{p}\,h^3\,\frac{\partial p}{\partial z}\,dx + \bar{p}\,h^3\,\frac{\partial p}{\partial x}\,dz \tag{16.175}$$

The boundary R of the solution domain can now be divided into two areas:

R_p edge at which the pressure p is prescribed and the pressure gradient can be freely adjusted. Therefore, $\bar{p}|_{R_p} = 0$ applies to this boundary

R_g boundary at which the pressure gradient $\frac{\partial p}{\partial x}$ or $\frac{\partial p}{\partial z}$ is prescribed and the pressure p can be freely adjusted.

With these assumptions, the integrals over the boundaries of the bearing surface can be transformed as follows:

$$\oint_R -\bar{p}\,h^3\,\frac{\partial p}{\partial z}\,dx + \bar{p}\,h^3\,\frac{\partial p}{\partial x}\,dz$$
$$= \underbrace{-\oint_{R_p} \bar{p}\,h^3\,\frac{\partial p}{\partial z}\,dx}_{=0} - \oint_{R_g} \bar{p}\,h^3\,\left.\frac{\partial p}{\partial z}\right|_g dx$$
$$+ \underbrace{\oint_{R_p} \bar{p}\,h^3\,\frac{\partial p}{\partial x}\,dz}_{=0} + \oint_{R_g} \bar{p}\,h^3\,\left.\frac{\partial p}{\partial x}\right|_g dz \tag{16.176}$$

16.9.2 Discretization using isoparametric finite elements

According to [11], the unknown pressures p and the test function $\bar{p}$ inside an element are interpolated using shape or interpolation functions $\boldsymbol{N}$ from the pressures $\boldsymbol{p}_e$ in the nodes of an element. The pressure gradients $\frac{\partial p}{\partial x}$ and $\frac{\partial p}{\partial z}$ are calculated using the derivatives $\boldsymbol{B}_1$ and $\boldsymbol{B}_2$ of those shape functions. The following applies:

$$p = \boldsymbol{N}\,\hat{\boldsymbol{p}}_e \tag{16.177}$$

$$\begin{aligned}\bar{p} &= \boldsymbol{N}\,\bar{\hat{\boldsymbol{p}}}_e \\ &= \bar{\hat{\boldsymbol{p}}}_e^T\,\boldsymbol{N}^T\end{aligned} \tag{16.178}$$

$$\frac{\partial p}{\partial x} = \boldsymbol{B}_1\,\hat{\boldsymbol{p}}_e \tag{16.179}$$

$$\begin{aligned}\frac{\partial \bar{p}}{\partial x} &= \boldsymbol{B}_1\,\bar{\hat{\boldsymbol{p}}}_e \\ &= \bar{\hat{\boldsymbol{p}}}_e^T\,\boldsymbol{B}_1^T\end{aligned} \tag{16.180}$$

$$\frac{\partial p}{\partial z} = \boldsymbol{B}_2\,\hat{\boldsymbol{p}}_e \tag{16.181}$$

$$\begin{aligned}\frac{\partial \bar{p}}{\partial z} &= \boldsymbol{B}_2\,\bar{\hat{\boldsymbol{p}}}_e \\ &= \bar{\hat{\boldsymbol{p}}}_e^T\,\boldsymbol{B}_2^T\end{aligned} \tag{16.182}$$

$$h = \boldsymbol{N}\,\hat{\boldsymbol{h}}_e \tag{16.183}$$

$$\frac{\partial h}{\partial t} = \boldsymbol{N}\,\frac{\partial \hat{\boldsymbol{h}}_e}{\partial t} \tag{16.184}$$

$$\frac{\partial h}{\partial x} = \boldsymbol{B}_1\,\hat{\boldsymbol{h}}_e \tag{16.185}$$

$$\frac{\partial h}{\partial z} = \boldsymbol{B}_2\,\hat{\boldsymbol{h}}_e \tag{16.186}$$

$$\Delta U_{1x} = \boldsymbol{N}\,\Delta\hat{\boldsymbol{U}}_{1x_e} \tag{16.187}$$

$$\Delta U_{2x} = \boldsymbol{N}\,\Delta\hat{\boldsymbol{U}}_{2x_e} \tag{16.188}$$

$$\Delta U_{1z} = \boldsymbol{N}\,\Delta\hat{\boldsymbol{U}}_{1z_e} \tag{16.189}$$

$$\Delta U_{2z} = \boldsymbol{N}\,\Delta\hat{\boldsymbol{U}}_{2z_e} \tag{16.190}$$

$$\left.\frac{\partial p}{\partial x}\right|_{g_e} = \boldsymbol{N}\,\left.\frac{\partial \hat{\boldsymbol{p}}}{\partial x}\right|_{g_e} \tag{16.191}$$

$$\left.\frac{\partial p}{\partial z}\right|_{g_e} = \boldsymbol{N}\,\left.\frac{\partial \hat{\boldsymbol{p}}}{\partial z}\right|_{g_e} \tag{16.192}$$

$\hat{\boldsymbol{p}}_e$ Pressure in the node of the element e

$\bar{\hat{\boldsymbol{p}}}_e$ Test function in the nodes of the element e

$\hat{\boldsymbol{h}}_e$ radial gap height in the nodes of the element e

$\Delta\hat{\boldsymbol{U}}_{1x_e}$ relative velocity of the bearing journal in x-direction in the nodes of the element e.

$\Delta\hat{\boldsymbol{U}}_{1z_e}$ relative velocity of the bearing journal in z-direction in the nodes of the element e

$\left.\frac{\partial \hat{\boldsymbol{p}}}{\partial x}\right|_{g_e}$ prescribed pressure gradient in x-direction in the nodes of the element e

$\left.\frac{\partial \hat{\boldsymbol{p}}}{\partial z}\right|_{g_e}$ prescribed pressure gradient in z-direction in the nodes of the element e

$\boldsymbol{N}$ Matrix for interpolating the pressures within the element e

$\boldsymbol{B}_1$, $\boldsymbol{B}_2$ Matrices for interpolating the pressure gradients in the x- and z-direction

The matrices $\boldsymbol{N}$ and $\boldsymbol{B}$ depend on the selected element type. Isoparametric elements with four or nine nodes from [11] were used. In contrast to finite difference discretization, these elements can be used to approximate complex geometries without additional implementation effort. For example, the mesh can be adapted to circular lubricating oil holes and these can thus be approximated very accurately.

An isoparametric element with four nodes

The following element matrices for the four-node element result from the shape functions from [11]:

$$h_1 = \frac{(r+1)\ (s+1)}{4} \tag{16.193}$$

$$h_2 = \frac{(1-r)\ (s+1)}{4} \tag{16.194}$$

$$h_3 = \frac{(1-r)\ (1-s)}{4} \tag{16.195}$$

$$h_4 = \frac{(r+1)\ (1-s)}{4} \tag{16.196}$$

$$\boldsymbol{N} = \begin{pmatrix} h_1 & h_2 & h_3 & h_4 \end{pmatrix} \tag{16.197}$$

An isoparametric element with nine nodes

The shape functions for the nine-node element are an extension of the shape functions of the four-node element and also originate from [11].

$$h_9 = \left(1-r^2\right)\ \left(1-s^2\right) \tag{16.198}$$

$$h_5 = \frac{\left(1-r^2\right)\ (s+1)}{2} - \frac{h_9}{2} \tag{16.199}$$

$$h_6 = \frac{(1-r)\ \left(1-s^2\right)}{2} - \frac{h_9}{2} \tag{16.200}$$

$$h_7 = \frac{\left(1-r^2\right)\ (1-s)}{2} - \frac{h_9}{2} \tag{16.201}$$

$$h_8 = \frac{(r+1)\ \left(1-s^2\right)}{2} - \frac{h_9}{2} \tag{16.202}$$

$$h_1 = \frac{(r+1)\ (s+1)}{4} - \frac{h_9}{4} - \frac{h_8}{2} - \frac{h_5}{2} \tag{16.203}$$

$$h_2 = \frac{(1-r)\ (s+1)}{4} - \frac{h_9}{4} - \frac{h_6}{2} - \frac{h_5}{2} \tag{16.204}$$

$$h_3 = \frac{(1-r)\ (1-s)}{4} - \frac{h_9}{4} - \frac{h_7}{2} - \frac{h_6}{2} \tag{16.205}$$

$$h_4 = \frac{(r+1)\ (1-s)}{4} - \frac{h_9}{4} - \frac{h_8}{2} - \frac{h_7}{2} \tag{16.206}$$

$$\boldsymbol{N} = \begin{pmatrix} h_1 & h_2 & h_3 & h_4 & h_5 & h_6 & h_7 & h_8 & h_9 \end{pmatrix} \tag{16.207}$$

Determination of the distortion interpolation matrix

The following applies to all two-dimensional isoparametric elements

$$x\,(r,\,s) = \boldsymbol{N}\,\hat{\boldsymbol{x}}_e \tag{16.208}$$

$$z\,(r,\,s) = \boldsymbol{N}\,\hat{\boldsymbol{z}}_e \tag{16.209}$$

$$\boldsymbol{J} = \begin{pmatrix} \frac{\partial x}{\partial r} & \frac{\partial z}{\partial r} \\ \frac{\partial x}{\partial s} & \frac{\partial z}{\partial s} \end{pmatrix} \tag{16.210}$$

$$\begin{aligned} \boldsymbol{B} &= \begin{pmatrix} \boldsymbol{B}_1 \\ \boldsymbol{B}_2 \end{pmatrix} \\ &= \boldsymbol{J}^{-1} \begin{pmatrix} \frac{\partial \boldsymbol{N}}{\partial r} \\ \frac{\partial \boldsymbol{N}}{\partial s} \end{pmatrix} \end{aligned} \tag{16.211}$$

$h_1, h_2, \ldots$ shape functions

$\boldsymbol{J}$ Jacobian matrix of the element

$\hat{\boldsymbol{x}}_e$ x-coordinates of the nodes in the unrolled bearing surface

$\hat{\boldsymbol{z}}_e$ z-coordinates of the nodes in the unrolled bearing surface

Structure of the element matrices

Substituting equation 16.177 to equation 16.192 and equation 16.176 into equation 16.175, yields:

$$\begin{aligned} &\sum_{e=1}^{N_e} \Bigg\{ \bar{\hat{\boldsymbol{p}}}_e^T \underbrace{\left[\int_{A_e} \left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e \right)^3 \left(\boldsymbol{B}_1^T\,\boldsymbol{B}_1 + \boldsymbol{B}_2^T\,\boldsymbol{B}_2 \right) dA_e \right]}_{\boldsymbol{K}_e} \hat{\boldsymbol{p}}_e \\ &+ \bar{\hat{\boldsymbol{p}}}_e^T \underbrace{\left[\int_{A_e} 12\,\eta\,\boldsymbol{N}^T\,\boldsymbol{N} \left(\frac{\partial \hat{\boldsymbol{h}}_e}{\partial t} + \frac{\Delta\hat{\boldsymbol{U}}_{1x_e} + \Delta\hat{\boldsymbol{U}}_{2x_e}}{2}\,\boldsymbol{B}_1\,\hat{\boldsymbol{h}}_e + \frac{\Delta\hat{\boldsymbol{U}}_{1z_e} + \Delta\hat{\boldsymbol{U}}_{2z_e}}{2}\,\boldsymbol{B}_2\,\hat{\boldsymbol{h}}_e \right) dA \right]}_{-\boldsymbol{R}_e} \Bigg\} \\ &= \sum_{e=1}^{N_e} \Bigg\{ \bar{\hat{\boldsymbol{p}}}_e^T \underbrace{\left[\oint_{R_{ge}} \boldsymbol{N}^T\,\boldsymbol{N} \left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e \right)^3 \left. \frac{\partial \hat{\boldsymbol{p}}}{\partial x} \right|_{g_e} dz - \oint_{R_{ge}} \boldsymbol{N}^T\,\boldsymbol{N} \left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e \right)^3 \left. \frac{\partial \hat{\boldsymbol{p}}}{\partial z} \right|_{g_e} dx \right]}_{\boldsymbol{G}_e} \Bigg\} \end{aligned} \tag{16.212}$$

The element matrices $\boldsymbol{K}_e$, $\boldsymbol{R}_e$ and $\boldsymbol{G}_e$ are obtained for isoparametric elements by numerical integration over the natural coordinates r and s. For the surface integrals $dA = \det \boldsymbol{J}\,dr\,ds$.

$$\boldsymbol{K}_e = \int_{r=-1}^{1}\int_{s=-1}^{1} \left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e\right)^3 \left(\boldsymbol{B}_1^T\,\boldsymbol{B}_1 + \boldsymbol{B}_2^T\,\boldsymbol{B}_2\right) \det \boldsymbol{J}\; dr\; ds \tag{16.213}$$

$$\begin{aligned}\boldsymbol{R}_e = -\int_{r=-1}^{1}\int_{s=-1}^{1} 12\,\eta\,\boldsymbol{N}^T\,\boldsymbol{N} \Bigg(& \frac{\Delta\hat{\boldsymbol{U}}_{1x_e} + \Delta\hat{\boldsymbol{U}}_{2x_e}}{2}\boldsymbol{B}_1\,\hat{\boldsymbol{h}}_e \\ & + \frac{\Delta\hat{\boldsymbol{U}}_{1z_e} + \Delta\hat{\boldsymbol{U}}_{2z_e}}{2}\boldsymbol{B}_2\,\hat{\boldsymbol{h}}_e + \frac{\partial\hat{\boldsymbol{h}}_e}{\partial t}\Bigg) \det \boldsymbol{J}\; dr\; ds\end{aligned} \tag{16.214}$$

$$\begin{aligned}\boldsymbol{G}_e = {} & \alpha_1 \int_{r=-1}^{1} \left\{\boldsymbol{N}^T\,\boldsymbol{N}\,\left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e\right)^3 \left[\left.\frac{\partial\hat{\boldsymbol{p}}}{\partial x}\right|_{g_e} \frac{\partial\boldsymbol{N}}{\partial r}\,\hat{\boldsymbol{z}}_e - \left.\frac{\partial\hat{\boldsymbol{p}}}{\partial z}\right|_{e} \frac{\partial\boldsymbol{N}}{\partial r}\,\hat{\boldsymbol{x}}_e\right]\right\}\Bigg|_{s=-1} dr \\ & + \alpha_2 \int_{s=-1}^{1} \left\{\boldsymbol{N}^T\,\boldsymbol{N}\,\left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e\right)^3 \left[\left.\frac{\partial\hat{\boldsymbol{p}}}{\partial x}\right|_{g_e} \frac{\partial\boldsymbol{N}}{\partial s}\,\hat{\boldsymbol{z}}_e - \left.\frac{\partial\hat{\boldsymbol{p}}}{\partial z}\right|_{e} \frac{\partial\boldsymbol{N}}{\partial s}\,\hat{\boldsymbol{x}}_e\right]\right\}\Bigg|_{r=-1} ds \\ & + \alpha_3 \int_{r=-1}^{1} \left\{\boldsymbol{N}^T\,\boldsymbol{N}\,\left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e\right)^3 \left[\left.\frac{\partial\hat{\boldsymbol{p}}}{\partial x}\right|_{g_e} \frac{\partial\boldsymbol{N}}{\partial r}\,\hat{\boldsymbol{z}}_e - \left.\frac{\partial\hat{\boldsymbol{p}}}{\partial z}\right|_{e} \frac{\partial\boldsymbol{N}}{\partial r}\,\hat{\boldsymbol{x}}_e\right]\right\}\Bigg|_{s=1} dr \\ & + \alpha_4 \int_{s=-1}^{1} \left\{\boldsymbol{N}^T\,\boldsymbol{N}\,\left(\boldsymbol{N}\,\hat{\boldsymbol{h}}_e\right)^3 \left[\left.\frac{\partial\hat{\boldsymbol{p}}}{\partial x}\right|_{g_e} \frac{\partial\boldsymbol{N}}{\partial s}\,\hat{\boldsymbol{z}}_e - \left.\frac{\partial\hat{\boldsymbol{p}}}{\partial z}\right|_{e} \frac{\partial\boldsymbol{N}}{\partial s}\,\hat{\boldsymbol{x}}_e\right]\right\}\Bigg|_{r=1} ds\end{aligned} \tag{16.215}$$

In equation 16.215 the following rule was used for the evaluation of the second type of curve integrals:

$$\begin{aligned}&\oint_R P\left(x(t),\,y(t)\right)\,dx + Q\left(x(t),\,y(t)\right)\,dy \\ &= \int_a^b \left(P\left(x(t),\,y(t)\right)\,\frac{\partial x}{\partial t} + Q\left(x(t),\,y(t)\right)\,\frac{\partial y}{\partial t}\right)\,dt\end{aligned} \tag{16.216}$$

α_1, α_2, ... This is a constant which is always equal to one if a boundary condition for the pressure gradient $\left.\frac{\partial p}{\partial x}\right|_{g_e}$ or $\left.\frac{\partial p}{\partial z}\right|_{g_e}$ is specified at the corresponding edge of the element. Otherwise, α is zero.

Numerical integration of the element matrices The numerical integration of the element matrices is carried out using the Gauss Legendre Quadrature. The integration points and the weighting factors were taken from [11]. For an undistorted element with four nodes, a single Gaussian point is sufficient to obtain accurate results, and for an undistorted element with nine nodes, four Gaussian points are sufficient.

16.9.3 Structure of the system of linear equations

The system of linear equations is formally constructed using the Boolean matrices $\boldsymbol{T}_e$. However, an index table is used internally in the program which assigns the corresponding global degrees of freedom to the individual nodes.

$$\hat{\boldsymbol{p}}_e = \boldsymbol{T}_e\,\hat{\boldsymbol{p}} \tag{16.217}$$

$$\bar{\hat{\boldsymbol{p}}}_e = \boldsymbol{T}_e\,\bar{\hat{\boldsymbol{p}}} \tag{16.218}$$

$$\bar{\hat{\boldsymbol{p}}}_e^T = \bar{\hat{\boldsymbol{p}}}^T\,\boldsymbol{T}_e^T \tag{16.219}$$

$\boldsymbol{T}_e$ Boolean matrix for the element e which contains the local degrees of freedom $\hat{\boldsymbol{p}}_e$ to the corresponding global degrees of freedom $\hat{\boldsymbol{p}}$

$\hat{\boldsymbol{p}}$ Global vector of pressures of the finite element system

$\bar{\hat{\boldsymbol{p}}}$ Global vector of test functions of the finite element system

If the expressions from equation 16.217 to equation 16.219 are inserted into equation 16.212, the global equations for the hydrodynamic pressures in the nodes are obtained.

$$\boldsymbol{K} = \sum_{e=1}^{N_e} \boldsymbol{T}_e^T \, \boldsymbol{K}_e \, \boldsymbol{T}_e \tag{16.220}$$

$$\boldsymbol{R} = \sum_{e=1}^{N_e} \boldsymbol{T}_e^T \, \boldsymbol{R}_e \tag{16.221}$$

$$\boldsymbol{G} = \sum_{e=1}^{N_e} \boldsymbol{T}_e^T \, \boldsymbol{G}_e \tag{16.222}$$

$$\bar{\hat{\boldsymbol{p}}}^T \, \boldsymbol{K} \, \hat{\boldsymbol{p}} = \bar{\hat{\boldsymbol{p}}}^T \, (\boldsymbol{R} + \boldsymbol{G}) \tag{16.223}$$

16.9.4 Implementation of Dirichlet boundary conditions

The hydrodynamic pressures in the nodes $\hat{\boldsymbol{p}}$ are now divided into the unknown pressures $\check{\boldsymbol{p}}_1$ and the pressures $\check{\boldsymbol{p}}_2$ known a priori from the boundary conditions. This is done formally using the Boolean matrices $\check{\boldsymbol{T}}_1$ and $\check{\boldsymbol{T}}_2$. However, index tables can be used internally in the program.

$$\hat{\boldsymbol{p}} = \check{\boldsymbol{T}}_1 \, \check{\boldsymbol{p}}_1 + \check{\boldsymbol{T}}_2 \, \check{\boldsymbol{p}}_2 \tag{16.224}$$

$$\bar{\hat{\boldsymbol{p}}} = \check{\boldsymbol{T}}_1 \, \bar{\check{\boldsymbol{p}}}_1 + \check{\boldsymbol{T}}_2 \, \bar{\check{\boldsymbol{p}}}_2 \tag{16.225}$$

The following condition applies to these Boolean matrices:

$$\check{\boldsymbol{T}}_1^T \, \check{\boldsymbol{T}}_2 = \boldsymbol{0} \tag{16.226}$$

Substituting equation 16.224 to 16.225 into equation 16.223 yields:

$$\begin{aligned} &\bar{\check{\boldsymbol{p}}}_1^T \, \check{\boldsymbol{T}}_1^T \, \boldsymbol{K} \, \check{\boldsymbol{T}}_1 \, \check{\boldsymbol{p}}_1 + \check{\boldsymbol{p}}_1^T \, \check{\boldsymbol{T}}_1^T \, \boldsymbol{K} \, \check{\boldsymbol{T}}_2 \, \check{\boldsymbol{p}}_2 + \bar{\check{\boldsymbol{p}}}_2^T \, \check{\boldsymbol{T}}_2^T \, \boldsymbol{K} \, \check{\boldsymbol{T}}_1 \, \check{\boldsymbol{p}}_1 + \bar{\check{\boldsymbol{p}}}_2^T \, \check{\boldsymbol{T}}_2^T \, \boldsymbol{K} \, \check{\boldsymbol{T}}_2 \, \check{\boldsymbol{p}}_2 \\ &= \bar{\check{\boldsymbol{p}}}_1^T \, \check{\boldsymbol{T}}_1^T \, (\boldsymbol{R} + \boldsymbol{G}) + \bar{\check{\boldsymbol{p}}}_2^T \, \check{\boldsymbol{T}}_2^T \, (\boldsymbol{R} + \boldsymbol{G}) \end{aligned} \tag{16.227}$$

16.9.5 Solution of the linear system of equations

$$\check{\boldsymbol{p}}_1 = \left(\check{\boldsymbol{T}}_1^T \, \boldsymbol{K} \, \check{\boldsymbol{T}}_1 \right)^{-1} \left[\check{\boldsymbol{T}}_1^T \, \left(\boldsymbol{R} + \boldsymbol{G} - \boldsymbol{K} \, \check{\boldsymbol{T}}_2 \, \check{\boldsymbol{p}}_2 \right) \right] \tag{16.228}$$

Equation 16.228 was derived without the use of a cavitation model. To obtain the Gümbel boundary condition, the negative pressures in $\check{\boldsymbol{p}}_1$ must be set to zero after solving the linear system of equations 16.228.

16.9.6 The pressure distribution in the cylindrical plain bearing

16.10 Fluid structure interactions

In order to calculate the value of w_{tot} which is needed for equation 16.90, it is necessary to apply the pressure loads due to the hydrodynamic pressure p and due to the contact pressure p_{asp} to a Finite Element model for the bodies attached to the bearing shell and bearing journal respectively. The equations

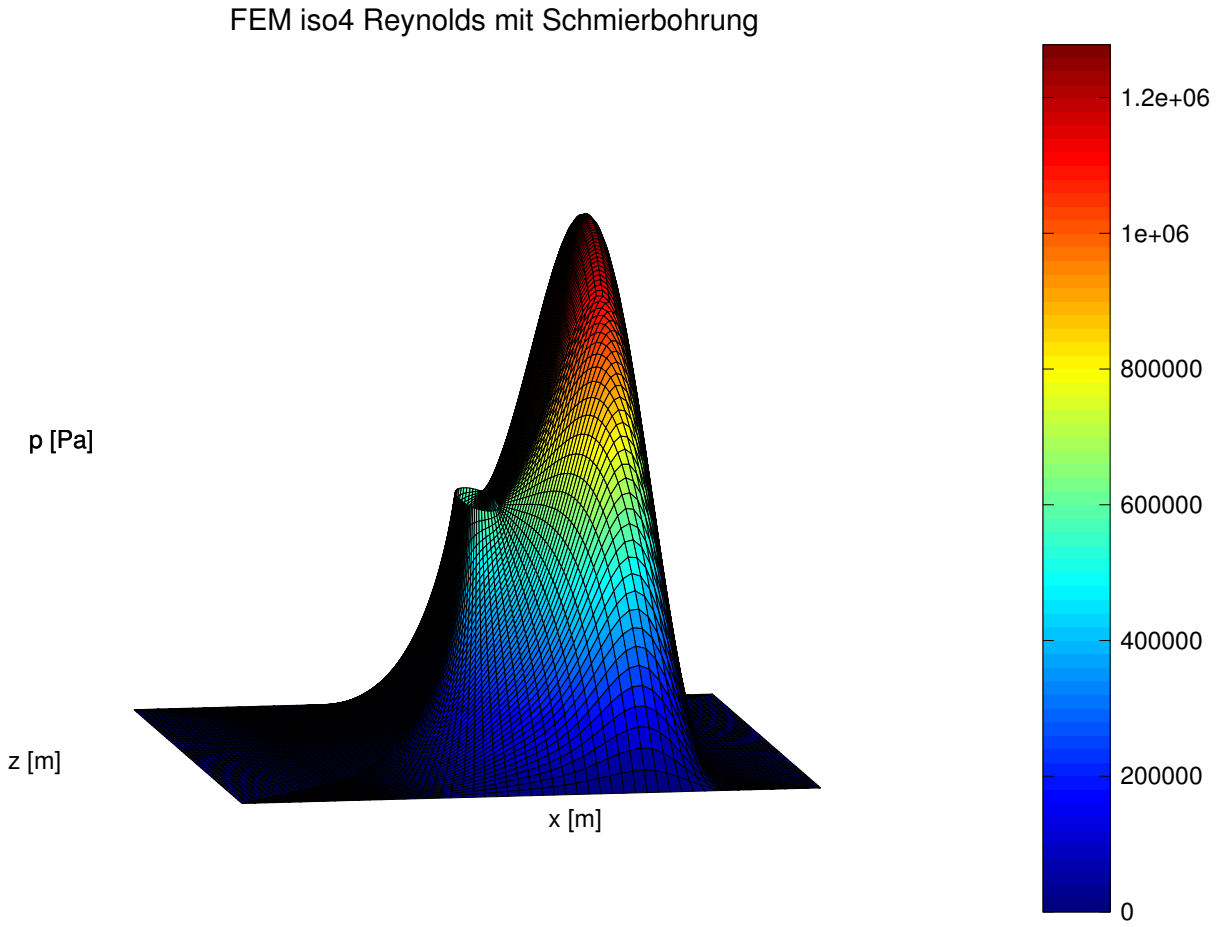


Figure 16.11: Pressure distribution in the bearing with overpressure lubrication through a hole

of motion of the Finite Element models must then be solved, and the resulting displacements can be used to calculate the total deformation w_{tot} and its time derivative $\dot{w}_{tot}$. Since the hydraulic mesh used for the solution of the Reynolds equation can be attached either to the bearing journal or to the bearing shell, it is necessary to interpolate the total pressure $p_{tot} = p + p_{asp}$ from one body to the other. In the same way, it is necessary to interpolate the radial deformation w_2 in order to compute the total deformation $w_{tot} = w_1 + w_2$.

16.10.1 Reduced order models

Because the bodies attached to the bearing shell and journal surface are assumed to undergo large rigid body motions, but the elastic deformations itself are assumed to be small and the material is assumed to be linear elastic, it is possible to apply model order reduction techniques in order to reduce the computational cost of the coupled fluid structure interaction problem. The software mboct-fem-pkg, which is used to generate those reduced order models, implements a combined modal and static reduction based on [28].

Equations of motion with respect to the moving reference frame

Despite the large rigid body motions of the bodies, the linear time invariant equations of motion 16.229 of a representative body attached to the bearing shell or journal surface may be used as the basis of the model order reduction.

$$\boldsymbol{M}_{fem}\ddot{\boldsymbol{U}}_{fem} + \boldsymbol{D}_{fem}\dot{\boldsymbol{U}}_{fem} + \boldsymbol{K}_{fem}\boldsymbol{U}_{fem} = \boldsymbol{R}_{fem} \tag{16.229}$$

$$\boldsymbol{M}_{fem} = \begin{pmatrix} \boldsymbol{M}_{11} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} \end{pmatrix} \tag{16.230}$$

$$\boldsymbol{D}_{fem} = \begin{pmatrix} \boldsymbol{D}_{11} & \boldsymbol{0} \\ \boldsymbol{0} & \boldsymbol{0} \end{pmatrix} \tag{16.231}$$

$$\boldsymbol{K}_{fem} = \begin{pmatrix} \boldsymbol{K}_{11} & \boldsymbol{C}^T \\ \boldsymbol{C} & \boldsymbol{0} \end{pmatrix} \tag{16.232}$$

$$\boldsymbol{U}_{fem} = \begin{pmatrix} \boldsymbol{U}_1 \\ \boldsymbol{\lambda} \end{pmatrix} \tag{16.233}$$

$$\boldsymbol{R}_{fem} = \begin{pmatrix} \boldsymbol{R}_1 \\ \boldsymbol{U}_{pre} \end{pmatrix} \tag{16.234}$$

$\boldsymbol{M}_{fem}$ Global mass matrix

$\boldsymbol{D}_{fem}$ Global damping matrix

$\boldsymbol{K}_{fem}$ Global stiffness matrix

$\boldsymbol{R}_{fem}$ Global load vector

$\boldsymbol{U}_{fem}$ Global displacement vector

$\boldsymbol{M}_{11}$ Portion of the mass matrix related to all flexible degrees of freedom

$\boldsymbol{D}_{11}$ Portion of the damping matrix related to all flexible degrees of freedom

$\boldsymbol{K}_{11}$ Portion of the stiffness matrix related to all flexible degrees of freedom

$\boldsymbol{C}$ Matrix of constraint equations

$\boldsymbol{U}_1$ Portion of the displacement vector containing all flexible degrees of freedom

$\boldsymbol{\lambda}$ Lagrange multipliers related to the constraint equations

$\boldsymbol{R}_1$ Portion of the right hand side vector applied to all flexible degrees of freedom

$\boldsymbol{U}_{pre}$ Portion of the right hand side vector related to imposed displacements and imposed rotations

Constraint equations

In order to perform a model order reduction, it is necessary to impose prescribed displacements at the surface of the bearing journal or bearing shell. This is achieved by means of load distributing coupling elements based on [29]. All the constraint equations are assembled to the global $\boldsymbol{C}$ matrix.

Static mode shapes

The static mode shapes, needed for the model order reduction, are obtained by solving the linear system of equations 16.235. In equation 16.235, the identity matrix $\boldsymbol{I}_{pre}$ imposes unit displacements and rotations at the center of each bearing surface. However, it must be ensured that the resulting mode shapes $\boldsymbol{\varphi}_s$ do not contain any rigid body motions of the flexible body. Otherwise the modal stiffness matrix would become singular.

$$\boldsymbol{\varphi}_s = \boldsymbol{K}_{fem}^{-1} \begin{pmatrix} \boldsymbol{0} \\ \boldsymbol{I}_{pre} \end{pmatrix} \tag{16.235}$$

Normal mode shapes

In addition to the static mode shapes $\boldsymbol{\varphi}_s$, the dynamic mode shapes $\boldsymbol{\varphi}_n$ of the constrained flexible body are computed from the undamped general symmetric eigenvalue problem equation 16.236.

$$\left(\boldsymbol{K}_{fem} - \lambda^2 \boldsymbol{M}_{fem}\right) \boldsymbol{\varphi}_n = \boldsymbol{0} \tag{16.236}$$

Pressure related mode shapes

It is important to include additional mode shapes, in order to get a better representation of the deformations within the bearing surface. For that purpose the general symmetric eigenvalue problem 16.237 is solved. See also [30].

$$\left(\boldsymbol{K}_{fem} - \lambda \boldsymbol{A}_{diag}\right) \boldsymbol{\varphi}_p = \boldsymbol{0} \tag{16.237}$$

In order to get the diagonal matrix $\boldsymbol{A}_{diag}$, a load vector $\boldsymbol{R}_p$ is assembled with a uniform pressure load at the respective bearing surface. Then the components of the pressure load vector $\boldsymbol{R}_p$ are summed up and are stored at the diagonal of the matrix $\boldsymbol{A}$. All the nodes which are not within the respective bearing surface have zero entries at the diagonal of matrix $\boldsymbol{A}$. Typical mode shapes are shown in figure 16.12 and figure 16.13.

$$\boldsymbol{R}_p = \begin{pmatrix} F_{x1} \\ F_{y1} \\ F_{z1} \\ \vdots \end{pmatrix} \tag{16.238}$$

$$\boldsymbol{A}_{ii} = \sqrt{F_{xi}^2 + F_{yi}^2 + F_{zi}^2} \tag{16.239}$$

Model order reduction

Finally, all the different mode shapes $\boldsymbol{\varphi}_n$, $\boldsymbol{\varphi}_s$ and $\boldsymbol{\varphi}_p$ are combined in the model reduction matrix $\boldsymbol{T}_{red}$. It is important to note that the matrix $\boldsymbol{\varphi}_p$ is not necessarily orthogonal to $\boldsymbol{\varphi}_n$ and $\boldsymbol{\varphi}_s$. For that reason, it is necessary to apply a re-orthogonalization equation 16.241.

$$\boldsymbol{T}_{red} = \begin{pmatrix} \boldsymbol{\varphi}_n & \boldsymbol{\varphi}_s & \boldsymbol{\varphi}_p^\star \end{pmatrix} \tag{16.240}$$

$$\boldsymbol{\varphi}_p^\star = \boldsymbol{\varphi}_p - \boldsymbol{\varphi}_{ns} \left(\boldsymbol{\varphi}_{ns}^T \boldsymbol{M}_{fem} \boldsymbol{\varphi}_{ns}\right)^{-1} \boldsymbol{\varphi}_{ns}^T \boldsymbol{M}_{fem} \boldsymbol{\varphi}_p \tag{16.241}$$

$$\boldsymbol{\varphi}_{ns} = \begin{pmatrix} \boldsymbol{\varphi}_n & \boldsymbol{\varphi}_s \end{pmatrix} \tag{16.242}$$

Now, the reduced set of degrees of freedom $\boldsymbol{q}$ is defined and the model order reduction can be performed. The reduced order matrices $\boldsymbol{M}_{red}$, $\boldsymbol{D}_{red}$ and $\boldsymbol{K}_{red}$ can be used directly for MBDyn's modal joint element

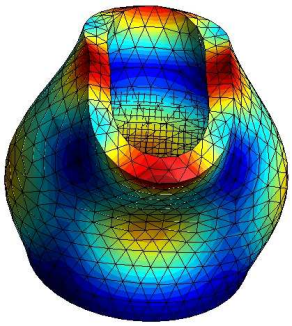


Figure 16.12: Typical mode shape of a sleeve

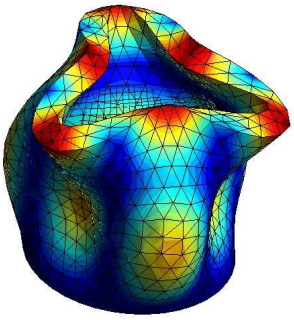


Figure 16.13: Typical mode shape of a sleeve

described in section 9.4.

$$\boldsymbol{U}_{fem} \approx \boldsymbol{T}_{red}\,\boldsymbol{q} \tag{16.243}$$

$$\underbrace{\boldsymbol{T}_{red}^T\,\boldsymbol{M}_{fem}\,\boldsymbol{T}_{red}}_{\boldsymbol{M}_{red}}\,\ddot{\boldsymbol{q}} + \underbrace{\boldsymbol{T}_{red}^T\,\boldsymbol{D}_{fem}\,\boldsymbol{T}_{red}}_{\boldsymbol{D}_{red}}\,\dot{\boldsymbol{q}} + \underbrace{\boldsymbol{T}_{red}^T\,\boldsymbol{K}\,\boldsymbol{T}_{red}}_{\boldsymbol{K}_{red}}\,\boldsymbol{q} = \underbrace{\boldsymbol{T}_{red}^T\,\boldsymbol{R}_{fem}}_{\boldsymbol{R}_{red}} \tag{16.244}$$

16.10.2 Fluid structure interaction coupling matrices

As described in section 16.10, it is necessary on one hand to apply the pressure loads at the bearing surface to the flexible body, and on the other hand to get the radial deformation from the flexible body in order to solve the Reynolds equation. This is achieved by means of the coupling matrices $\boldsymbol{D}$ and $\boldsymbol{E}$.

$$\boldsymbol{w}_i = \boldsymbol{D}_i\,\boldsymbol{q} \tag{16.245}$$

$$\boldsymbol{R}_{red} = \boldsymbol{R}_{red}^{\star} + \sum_{i=1}^{n} \boldsymbol{E}_i\,\boldsymbol{p}_{tot_i} \tag{16.246}$$

$$\boldsymbol{D}_{ij} = \boldsymbol{n}_{ij}^T\,\boldsymbol{T}_{red_{ij}} \tag{16.247}$$

$$\boldsymbol{E}_i = \boldsymbol{D}_i^T\,\boldsymbol{A}_i \tag{16.248}$$

$\boldsymbol{w}_i$ Vector of radial displacements at the surface of bearing i

$\boldsymbol{p}_{tot_i}$ Vector of the total pressure acting at the surface of bearing-i

$\boldsymbol{D}_i$ Displacement coupling matrix for the surface of bearing i

$\boldsymbol{E}_i$ Pressure load coupling matrix for the surface of bearing i

$\boldsymbol{R}^{\star}_{red}$ Modal loads contributed by other elements including the modal joint itself.

$\boldsymbol{n}_{ij}$ Surface normal vector at bearing surface i and node j

$\boldsymbol{A}_i$ Diagonal matrix of equivalent surface areas at bearing surface i

The global system of equations

Equation 16.249 to equation 16.260 are showing an example for the global system of equations of motion of two flexible bodies connected with a hydrodynamic plain bearing. All the terms marked with "a" are contributions from the hydrodynamic bearing element whereas the terms marked with "c" are contributions from the modal joint element. The additional terms "b" are contributions from the automatic modal element. It is important to note that the pressure loads $\boldsymbol{E}_1\,\boldsymbol{p}_{tot}$ and $\boldsymbol{E}_2\,\boldsymbol{f}\,(\boldsymbol{p}_{tot})$ do not contribute to the rigid body motion of the flexible bodies, but they contribute only to the deformations of the flexible bodies with respect to the moving reference frame. This moving reference frame is represented by a so called "modal node" and the equations of motion for the moving reference frame are equation 16.253 - 16.260. Since the reaction forces according to equation 16.153 - 16.154, 16.157 - 16.158, 16.162 - 16.163 and 16.166 - 16.167 must contribute to the rigid body motion of the flexible bodies, these loads must be applied to the respective "modal nodes" attached to the modal joint elements.

$$\underbrace{-\boldsymbol{M}_{red_1}\,\ddot{\boldsymbol{q}}_1 - \boldsymbol{D}_{red_1}\,\dot{\boldsymbol{q}}_1 - \boldsymbol{K}_{red_1}\,\boldsymbol{q}_1 + \boldsymbol{R}^{\star}_{red_1}}_{c} + \underbrace{\boldsymbol{E}_1\,\boldsymbol{p}_{tot}}_{a} = \boldsymbol{0} \tag{16.249}$$

$$\underbrace{-\boldsymbol{M}_{red_2}\,\ddot{\boldsymbol{q}}_2 - \boldsymbol{D}_{red_2}\,\dot{\boldsymbol{q}}_2 - \boldsymbol{K}_{red_2}\,\boldsymbol{q}_2 + \boldsymbol{R}^{\star}_{red_2}}_{c} + \underbrace{\boldsymbol{E}_2\,f\,(\boldsymbol{p}_{tot})}_{a} = \boldsymbol{0} \tag{16.250}$$

$$\underbrace{\boldsymbol{w}_{tot} - \boldsymbol{D}_1\,\boldsymbol{q}_1 - \boldsymbol{f}\,(\boldsymbol{w}_2)}_{a} = \boldsymbol{0} \tag{16.251}$$

$$\underbrace{\boldsymbol{w}_2 - \boldsymbol{D}_2\,\boldsymbol{q}_2}_{a} = \boldsymbol{0} \tag{16.252}$$

$$\underbrace{\boldsymbol{v}_1 - \dot{\boldsymbol{x}}_1}_{b} = \boldsymbol{0} \tag{16.253}$$

$$\underbrace{\boldsymbol{\omega}_1 - \boldsymbol{G}_1\,\dot{\boldsymbol{g}}_1 - \Delta\boldsymbol{R}_1\,\boldsymbol{\omega}_{1_0}}_{b} = \boldsymbol{0} \tag{16.254}$$

$$\underbrace{-\dot{\boldsymbol{v}}_1\,m_1 + \boldsymbol{S}_1 \times \dot{\boldsymbol{\omega}}_1 - \boldsymbol{\omega}_1\ \times \boldsymbol{\omega}_1 \times \boldsymbol{S}_1 + \boldsymbol{F}^{\star}_1}_{c} + \underbrace{\boldsymbol{F}_1}_{a} = \boldsymbol{0} \tag{16.255}$$

$$\underbrace{-\boldsymbol{J}_1\,\dot{\boldsymbol{\omega}}_1 - \boldsymbol{S}_1 \times \dot{\boldsymbol{v}}_1 - \boldsymbol{\omega}_1 \times \boldsymbol{J}_1\,\boldsymbol{\omega}_1 + \boldsymbol{M}^{\star}_1}_{c} + \underbrace{\boldsymbol{M}_1}_{a} = \boldsymbol{0} \tag{16.256}$$

$$\underbrace{\boldsymbol{v}_2 - \dot{\boldsymbol{x}}_2}_{b} = \boldsymbol{0} \tag{16.257}$$

$$\underbrace{\boldsymbol{\omega}_2 - \boldsymbol{G}_2\,\dot{\boldsymbol{g}}_2 - \Delta\boldsymbol{R}_2\,\boldsymbol{\omega}_{2_0}}_{b} = \boldsymbol{0} \tag{16.258}$$

$$\underbrace{-\dot{\boldsymbol{v}}_2\,m_2 + \boldsymbol{S}_2 \times \dot{\boldsymbol{\omega}}_2 - \boldsymbol{\omega}_2\ \times \boldsymbol{\omega}_2 \times \boldsymbol{S}_2 + \boldsymbol{F}^{\star}_2}_{c} + \underbrace{\boldsymbol{F}_2}_{a} = \boldsymbol{0} \tag{16.259}$$

$$\underbrace{-\boldsymbol{J}_2\,\dot{\boldsymbol{\omega}}_2 - \boldsymbol{S}_2 \times \dot{\boldsymbol{v}}_2 - \boldsymbol{\omega}_2 \times \boldsymbol{J}_2\,\boldsymbol{\omega}_2 + \boldsymbol{M}^{\star}_2}_{c} + \underbrace{\boldsymbol{M}_2}_{a} = \boldsymbol{0} \tag{16.260}$$

$\boldsymbol{R}^{\star}_{red}$ Additional contributions from the modal joint. See section 9.4.

$\boldsymbol{x}$ Position vector of a modal node

$\boldsymbol{v}$ Velocity vector of a modal node

$\Delta\boldsymbol{R}$ Rotation increment of a modal node. See section 5.1.

$\boldsymbol{\omega}$ Angular velocity vector of a modal node

$\boldsymbol{G}$ A tensor related to rotation handling of the modal node. See section 5.1.

m Total mass of the flexible body

$\boldsymbol{S}$ Static moment of the flexible body

$\boldsymbol{J}$ Inertia tensor of the flexible body

$\boldsymbol{F}^{\star}$ Additional force contributions from the modal joint element. See section 9.4

$\boldsymbol{M}^{\star}$ Additional moment contributions form the modal joint element. See section 9.4.

Implementation

It must be emphasized that the process of generating the matrices $\boldsymbol{M}_{red}$, $\boldsymbol{D}_{red}$, $\boldsymbol{K}_{red}$, $\boldsymbol{T}_{red}$, $\boldsymbol{D}$ and $\boldsymbol{E}$ is not built into MBDyn. For that purpose it is necessary to use the toolkit mboct-fem-pkg. The related function call to generate those matrices is "fem_ehd_pre_comp_mat_linear_mesh". Furthermore, the functions "fem_ehd_pre_comp_mat_export" and "fem_cms_export" can be used to export all those matrices to a file format which can be read by MBDyn. See also MBDyn's *input-manual*.

16.10.3 Interpolation from the bearing journal to the bearing shell and vice versa

It was mentioned in section 16.10, that the hydraulic mesh must be attached either to the bearing journal or to the bearing shell. Therefore, there remains the question of how to interpolate the total pressure p_{tot} and the radial deformation w_1 from the bearing journal to the bearing shell for instance. Actually MBDyn uses the interpolation according to R.J. Renka[31].

Construction of polynomials

For each node at the hydraulic mesh, a polynomial function C_{kl} is defined.

$$\begin{aligned} C_{kl} = f\left(x_{m_{kl}}, z_{m_{kl}}\right) &+ a_1\,\Delta x_{kl}^3 + a_2\,\Delta x_{kl}^2\,\Delta z_{kl} + a_3\,\Delta x_{kl}\,\Delta z_{kl}^2 \\ &+ a_4\,\Delta z_{kl}^3 + a_5\,\Delta x_{kl}^2 + a_6\,\Delta x_{kl}\,\Delta z_{kl} + a_7\,\Delta z_{kl}^2 + a_8\,\Delta x_{kl} + a_9\,\Delta z_{kl} \end{aligned} \tag{16.261}$$

$$\boldsymbol{a} = \begin{pmatrix} a_1 & a_2 & a_3 & a_4 & a_5 & a_6 & a_7 & a_8 \end{pmatrix}^T \tag{16.262}$$

C_{kl} Polynomial function at the hydraulic node kl of the source mesh

$f\left(x_{m_{kl}}, z_{m_{kl}}\right)$ Function (e.g. total pressure p_{tot} or radial deformation at the moving mesh w_1) to be interpolated.

$\boldsymbol{a}$ Coefficients of the polynomial

The coefficients $\boldsymbol{a}$ of the polynomial are fitted to the data to be interpolated.

$$\boldsymbol{a} = \boldsymbol{A}^{+}\,\Delta\boldsymbol{f} \tag{16.263}$$

$$\Delta f_{klm} = f_{klm} - f\left(x_{m_{kl}}, z_{m_{kl}}\right) \tag{16.264}$$

$$A_{mn} = \Delta x_m^{p_{x_n}}\,\Delta z_m^{p_{z_n}} \tag{16.265}$$

$\boldsymbol{A}$ A constant 16x9 matrix which is a function of the distances Δx_m and Δz_m between the central node, where the polynomial is constructed, and its neighbor nodes

$\boldsymbol{A}^+$ The Moore-Penrose pseudo-inverse matrix of $\boldsymbol{A}$

p_x Exponents of the polynomial in x direction

p_z Exponents of the polynomial in z direction

Interpolation

According to [31], the interpolated function f is computed as a weighted average from several polynomials.

$$f\left(x_{f_i}, z_{f_j}\right) = \frac{fs_{ij}}{ws_{ij}} \tag{16.266}$$

$$fs_{ij} = \sum_{k=1}^{M}\sum_{l=1}^{N} \left(w_{kl}\right)^3 C_{kl} \tag{16.267}$$

$$ws_{ij} = \sum_{k=1}^{M}\sum_{l=1}^{N} \left(w_{kl}\right)^3 \tag{16.268}$$

$$w_{kl} = \frac{R - d_{kl}}{R\, d_{kl}} \tag{16.269}$$

$$d_{kl} = \sqrt{\Delta x_{kl}^2 + \Delta z_{kl}^2} \tag{16.270}$$

$$\Delta x_{kl} = x_{f_i} - x_{m_{kl}} \tag{16.271}$$

$$\Delta z_{kl} = z_{f_j} - z_{m_{kl}} \tag{16.272}$$

f Interpolated function

fs Weighted sum of the polynomial function

ws_{ij} Weighting factor

d_{kl} Total distance between the location of interpolation and the location where the polynomial is constructed

Δx_{kl} Distance in x-direction

Δz_{kl} Distance in z-direction

Extrapolation

In case of a piston to cylinder liner contact, the axial movement of the piston is large compared to the size of the mesh, and it is necessary to evaluate the pressure outside the physical surface of the piston in order to apply a pressure load at the surface of the cylinder liner. For such a situation, the respective pressure boundary conditions at the boundaries of the bearing surface are used for the surface of the cylinder liner outside the physical surface of the piston. Since it is important to have a smooth transition of the boundary conditions, a transition region with an axial extent of $2\,\epsilon$ is defined. Within the transition region, an interpolation between the boundary condition and the data from the mesh is performed.

$$f^\star\left(x_{f_i}, z_{f_j}\right) = \alpha\, f\left(x_{f_i}, z_{f_j}\right) + (1-\alpha)\; f_{bc} \tag{16.273}$$

$$\tag{16.274}$$

$f^\star$ Modified interpolation function

α Interpolation coefficient

ϵ Transition area

f_{bc} Function value provided by the boundary condition

The interpolation coefficient is defined as:

$$\alpha = \left| \begin{array}{cll} 1 & \text{if} & -\frac{1}{2}\,B + \epsilon \leq z_{f_i} \leq \frac{B}{2} - \epsilon \\ 0 & \text{if} & z_{f_i} > \frac{B}{2} + \epsilon \quad \text{or} \quad z_{f_i} < -\frac{B}{2} - \epsilon \\ \frac{z_{f_j} + \frac{B}{2} + \epsilon}{2\,\epsilon} & \text{if} & -\frac{B}{2} - \epsilon \leq z_{f_i} \leq -\frac{B}{2} + \epsilon \\ \frac{\frac{B}{2} + \epsilon - z_{f_i}}{2\,\epsilon} & \text{if} & \frac{B}{2} - \epsilon \leq z_{f_i} \leq \frac{B}{2} + \epsilon \end{array} \right. \tag{16.275}$$

Chapter 17

Module MFtire

The source code of the module described in this document can be found at the following GitHub repository: `https://github.com/andreafontana99/MBDyn-MFtire`

17.1 Introduction

This document provides an overview of the MFtire module for MBDyn, which implements a single contact point Pacejka tire model intended for full-vehicle handling simulations in a multibody environment. This is the second iteration of the module (effectively v0.2), where a complete refactoring of the slip calculation has allowed to remove some simplifying assumptions, improving the slip accuracy under high camber rates.

Some aspects to keep in mind:

- It's still a work in progress
- The formulation is intentionally simple for three main reasons:
  - Low computational cost is mandatory for real-time simulations
  - The number of required parameters (e.g. tire data) must be low
  - The development of the jacobian matrix, necessary to guarantee stability and fast convergence, is straightforward but quite involved. As the number of calculations in the residual grows, the Jacobian components may become cumbersome to develop, debug, and maintain (as the process is still not automated).
- Most of the effort has been focused on the proper formulation of tire input quantities—such as slip angle, slip ratio, camber angle, and loaded radius—while less emphasis has been placed on the definition of forces and moments. This makes the module a solid starting point for users interested in implementing their own force and moment formulas.

Section 17.6 calculations are based on [32]. Note that both the sign conventions for the reference frame vectors and the notation are substantially different.

17.2 Model capabilities

The module calculates the forces and moments and applies them to the connected rim node. For now, pure longitudinal and lateral forces are directly computed as function of slips and vertical load while

tire moments are still to be implemented. Combined effects and camber dependency of the forces and rolling radius are neglected as well as relaxation effects. The vertical load is obtained by computing the difference between the instant and the undeformed loaded radius, which is then multiplied by a constant stiffness.

17.3 TODO

- Self-aligning moment
- Combined effects
- Non-linear vertical stiffness and damping
- Relaxation effects (hopefully this removes the need for low speed handling)
- Rolling resistance
- Ground mesh
- Handling of wheel detachment
- NetCDF output

17.4 I/O and module interface

17.5 Notation

Identity matrix

$$\mathbf{I}_{3\times 3} = \begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix} \tag{17.1}$$

Cross product

$$\mathbf{a} \times \mathbf{b} = \det \begin{bmatrix} \mathbf{e}_1 & \mathbf{e}_2 & \mathbf{e}_3 \\ a_1 & a_2 & a_3 \\ b_1 & b_2 & b_3 \end{bmatrix} = a_i b_i \epsilon_{ijk} \mathbf{e}_k \tag{17.2}$$

where ϵ_{ijk} is the permutation symbol (Levi-Civita) and $\mathbf{e}_i$ for $i = 1, 2, 3$ are the cartesian base vectors.

Skew-symmetric matrix

A matrix resulting from the application of the cross-product operator to a three-dimensional vector

$$\mathbf{v}\times = \begin{bmatrix} 0 & -v_z & v_y \\ v_z & 0 & -v_x \\ -v_y & v_x & 0 \end{bmatrix} \tag{17.3}$$

Dyadic product

$$\mathbf{v} \otimes \mathbf{v} = \mathbf{v}\mathbf{v}^T \tag{17.4}$$

17.6 Residual assembly

17.7 Ground

The ground surface is defined by mapping to each (x, y) coordinate a position vector and a unit normal vector, denoted as $\mathbf{q}$ and $\mathbf{n}$, respectively. To simplify the derivation, a flat and constant plane is assumed; therefore, $\mathbf{q}$ and $\mathbf{n}$ are constant vectors given by:

$$\mathbf{q} = \mathbf{0} \qquad \mathbf{n} = \begin{bmatrix} 0 & 0 & 1 \end{bmatrix}^T \tag{17.5}$$

17.8 Hub carrier and rim kinematics

Two nodes are required to fully describe the contact point kinematics: the wheel hub node and the rim node. The wheel hub and the rim must be constrained to rotate around the wheel spindle axis, denoted by $\tilde{s}$, which is constant in the local reference frame of the wheel hub. Both nodes must be coincident with the wheel centre. The position, velocity, and orientation matrix of the wheel hub node are denoted by $\mathbf{w}_H$, $\dot{\mathbf{w}}_H$, and $\mathbf{R}_H$, respectively, while the angular velocity of the rim is $\boldsymbol{\omega}_R$.

17.9 Reference frame

The following vectors, following the ISO sign convention, define the directions along which the forces act and enable the computation of the contact point position and velocity. The wheel spin axis representation in the global reference frame is:

$$\mathbf{s} = \mathbf{R}_H \tilde{\mathbf{s}} \tag{17.6}$$

$\mathbf{s}$ is a unit length vector as the input local spin axis is normalized. The local forward ($\mathbf{l}$) and transverse ($\mathbf{t}$) directions can be obtained as follows:

$$\begin{aligned} \mathbf{l} &= \frac{\mathbf{s} \times \mathbf{n}}{||\mathbf{s} \times \mathbf{n}||} \\ \mathbf{t} &= \mathbf{n} \times \mathbf{l} \end{aligned} \tag{17.7}$$

The radial direction $\mathbf{r}$ is perpendicular both to $\mathbf{s}$ and $\mathbf{l}$:

$$\mathbf{r} = \mathbf{l} \times \mathbf{s} \tag{17.8}$$

The time derivatives of the unit vectors are:

$$\begin{aligned} \dot{\mathbf{s}} &= \boldsymbol{\omega}_R \times \mathbf{s} \\ \dot{\mathbf{l}} &= \frac{\mathbf{I}_{3\times 3} - \mathbf{l} \otimes \mathbf{l}}{||\mathbf{s} \times \mathbf{n}||} (\dot{\mathbf{s}} \times \mathbf{n}) \\ \dot{\mathbf{t}} &= \mathbf{n} \times \dot{\mathbf{l}} \\ \dot{\mathbf{r}} &= \dot{\mathbf{l}} \times \mathbf{s} + \mathbf{l} \times \dot{\mathbf{s}} \end{aligned} \tag{17.9}$$

These expressions rely on the assumption that $\dot{\mathbf{n}} = \mathbf{0}$, as the road plane is constant, and must be modified accordingly in case a general rigid/deformable surface is considered.

Note that the lateral direction points to the left and the radial direction is positive upwards.

17.10 Loaded radius

To obtain the magnitude of the loaded radius, ρ, let's first define the position of the contact point:

$$\mathbf{c} = \mathbf{w}_H + \rho\mathbf{r} \tag{17.10}$$

The contact point and the road point must lie on the same plane perpendicular to $\mathbf{n}$, which translates in the following equation:

$$\mathbf{c} \cdot \mathbf{n} = \mathbf{q} \cdot \mathbf{n} \tag{17.11}$$

As $\mathbf{q} = \mathbf{0}$, this expression can be simplified to:

$$\begin{aligned} \mathbf{0} &= \mathbf{c} \cdot \mathbf{n} \\ \mathbf{0} &= (\mathbf{w}_H + \rho\mathbf{r}) \cdot \mathbf{n} \end{aligned} \tag{17.12}$$

Therefore,

$$\rho = -\frac{\mathbf{w}_H \cdot \mathbf{n}}{\mathbf{r} \cdot \mathbf{n}} \tag{17.13}$$

The derivative of the loaded radius is the following:

$$\dot{\rho} = -\frac{(\dot{\mathbf{w}}_H + \rho\dot{\mathbf{r}}) \cdot \mathbf{n}}{\mathbf{r} \cdot \mathbf{n}} \tag{17.14}$$

Note that as $\rho\mathbf{r}$ is a vector from the wheel center to the contact point and $\mathbf{r}$ points up, ρ is always negative in normal operating conditions (e.g. unless you are driving upside down).

17.11 Slip Quantities

The velocity of the contact point $\mathbf{c}$ is:

$$\begin{aligned} \mathbf{v}_C &= \dot{\mathbf{w}}_H + \frac{d(\rho\mathbf{r})}{dt} \\ &= \dot{\mathbf{w}}_H + \dot{\rho}\mathbf{r} + \rho\mathbf{r} \end{aligned} \tag{17.15}$$

The speed of propagation of the point $\mathbf{c}^*$ is:

$$\begin{aligned} \mathbf{v}_C^* &= \dot{\mathbf{w}}_H - \frac{r_e}{\rho}\frac{d(\rho\mathbf{r})}{dt} \\ &= \dot{\mathbf{w}}_H - \frac{r_e}{\rho}\dot{\rho}\mathbf{r} - r_e\mathbf{r} \end{aligned} \tag{17.16}$$

Note that scaling the second term by $\frac{r_e}{\rho}$ also requires a change in sign due to the fact that ρ is negative. The velocity of point $\mathbf{s}$ that is fixed to the wheel body reads:

$$\begin{aligned} \mathbf{v}_S &= \dot{\mathbf{w}}_H - \frac{r_e}{\rho}\boldsymbol{\omega}_R \times (\rho\mathbf{r}) \\ &= \dot{\mathbf{w}}_H - r_e\boldsymbol{\omega}_R \times \mathbf{r} \end{aligned} \tag{17.17}$$

The following velocity components allow for an easier definition of the slip quantities:

$$\begin{aligned} v_x &= \mathbf{v}_C^* \cdot \mathbf{l} \\ v_y &= \mathbf{v}_C \cdot \mathbf{t} \\ v_s &= \mathbf{v}_S \cdot \mathbf{l} \end{aligned} \tag{17.18}$$

r_e is the (constant, for now) effective rolling radius. Longitudinal and lateral theoretical slips require particular care to avoid numerical instability as longitudinal speed approaches zero. As frequently found in vehicle dynamics literature, ad hoc definitions of slip quantities are adopted below a given speed threshold ($v_{x,\mathrm{LOW}}$), denoted as α_L and κ_L, to avoid division by zero. Above that threshold, the standard definitions are applied, α_H and κ_H.

$$\begin{aligned} \alpha_H &= \arctan\left(\frac{v_y}{v_x}\right) \\ \kappa_H &= -\frac{v_s}{v_x} \end{aligned} \tag{17.19}$$

$$\begin{aligned} \alpha_L &= v_y \\ \kappa_L &= -v_s \end{aligned} \tag{17.20}$$

Where the $\arctan(x)$ function is implemented as $atan2$.

The two functions

$$\kappa = \begin{cases} \kappa_L & \text{if } |v_x| \leq v_{x,\mathrm{LOW}}, \\ \kappa_H & \text{if } |v_x| > v_{x,\mathrm{LOW}}, \end{cases} \tag{17.21}$$

$$\alpha = \begin{cases} \alpha_L & \text{if } |v_x| \leq v_{x,\mathrm{LOW}}, \\ \alpha_H & \text{if } |v_x| > v_{x,\mathrm{LOW}}, \end{cases} \tag{17.22}$$

are not continuous at $v_x = v_{x,\mathrm{LOW}}$. To smoothly transition between the two definitions, a function χ is introduced. This also allows to obtain a single continuous function which can be differentiated and easily included in the model Jacobian matrix. The parameter $v_{x,\mathrm{DMP}}$ allows to tune how quickly the transition between low speed and high speed state happens.

$$\chi = \frac{1}{2}\left[\tanh\left(\frac{|v_x| - v_{x,\mathrm{LOW}}}{v_{x,\mathrm{DMP}}}\right) + 1\right] \tag{17.23}$$

The expression for the derivative of χ, needed in the Jacobian matrix, is reported in 17.21 Finally, slip angle and slip ratio are expressed as:

$$\begin{aligned} \alpha &= \chi\alpha_H + (1-\chi)\alpha_L \\ \kappa &= \chi\kappa_H + (1-\chi)\kappa_L \end{aligned} \tag{17.24}$$

17.12 Tire forces

At this point, the forces (which must be applied on the wheel hub) can be calculated:

$$\begin{aligned} F_z &= k_t\,(r_0 + \rho) \\ F_x &= F_z\mu_x(\kappa) \\ F_y &= F_z\mu_y(\alpha) \end{aligned} \tag{17.25}$$

Where

$$\begin{aligned} \mu_x(\kappa) &= D_x \sin(C_x \arctan(B_x\kappa - E_x(B_x\kappa - \arctan(B_x\kappa)))) \\ \mu_y(\alpha) &= D_y \sin(C_y \arctan(B_y\alpha - E_y(B_y\alpha - \arctan(B_y\alpha)))) \end{aligned} \tag{17.26}$$

The total tire force can be obtained as:

$$\mathbf{F} = F_z\mathbf{n} + F_x\mathbf{l} + F_y\mathbf{t} \tag{17.27}$$

And finally, the transport moments

$$\mathbf{M} = \rho\mathbf{r} \times \mathbf{F} \tag{17.28}$$

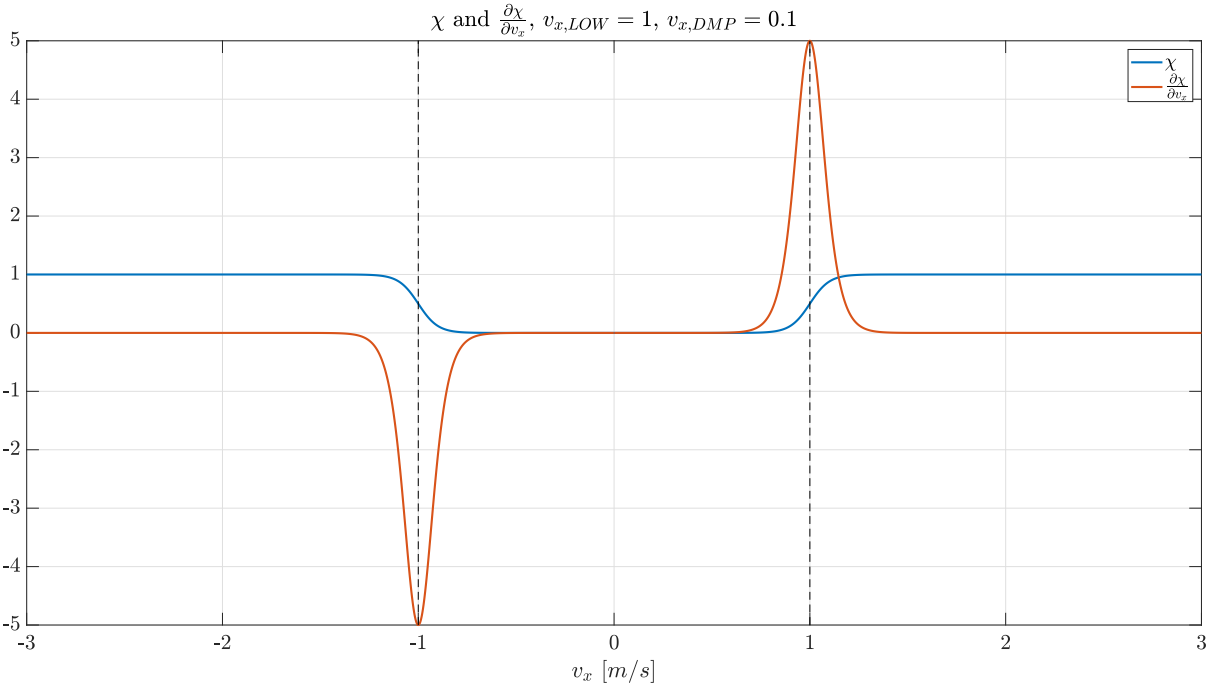


Figure 17.1: χ and $\frac{\partial \chi}{\partial v_x}$

17.13 Jacobian Assembly

Some of the most straightforward algebraic manipulations have been skipped in the documentation for brevity. Please refer to the *AssJac* function of the module for the full expressions for the partial jacobians.

17.14 Vectors Perturbations

$$\begin{aligned}\Delta\mathbf{s} &= \boldsymbol{\theta}_{\Delta H} \times \mathbf{s} \\ &= \left[\mathbf{s}\times^T\right] \boldsymbol{\theta}_{\Delta H} \\ &= \mathbf{J_s}\boldsymbol{\theta}_{\Delta H}\end{aligned} \tag{17.29}$$

$$\begin{aligned}\Delta\mathbf{l} &= \left[\frac{\left(\mathbf{I}_{3\times 3} - \mathbf{l}\otimes\mathbf{l}\right)\mathbf{n}\times}{||\mathbf{s}\times\mathbf{n}||}\mathbf{J_s}\right]\boldsymbol{\theta}_{\Delta H} \\ &= \mathbf{J_l}\boldsymbol{\theta}_{\Delta H}\end{aligned} \tag{17.30}$$

$$\begin{aligned}\Delta\mathbf{t} &= \mathbf{n}\times\Delta\mathbf{l} \\ &= \left[\mathbf{n}\times\mathbf{J_l}\right]\boldsymbol{\theta}_{\Delta H} \\ &= \mathbf{J_t}\boldsymbol{\theta}_{\Delta H}\end{aligned} \tag{17.31}$$

$$\begin{aligned}\Delta\mathbf{r} &= \Delta\mathbf{l}\times\mathbf{s} + \mathbf{l}\times\Delta\mathbf{s} \\ &= \left[\mathbf{s}\times^T\mathbf{J_l} + \mathbf{l}\times\mathbf{J_s}\right]\boldsymbol{\theta}_{\Delta H} \\ &= \mathbf{J_r}\boldsymbol{\theta}_{\Delta H}\end{aligned} \tag{17.32}$$

17.15 Vector derivatives perturbation

$$\begin{aligned}\Delta\dot{\mathbf{s}} &= \left[\boldsymbol{\omega}_R \times \mathbf{J}_s\right]\boldsymbol{\theta}_{\Delta H} + \left[\mathbf{s}\times^T\right]\Delta\boldsymbol{\omega}_R \\ &= \mathbf{J}_{\dot{\mathbf{s}}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\dot{\mathbf{s}}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R\end{aligned} \tag{17.33}$$

$$\begin{aligned}\Delta\dot{\mathbf{l}} = &\left[\left(\left(\mathbf{l}^T\left(\mathbf{n}\times\dot{\mathbf{s}}\right)\right)\mathbf{I}_{3\times3} + \mathbf{l}\otimes\left(\mathbf{n}\times\dot{\mathbf{s}}\right)\right)\frac{\mathbf{J}_{\mathbf{l}}}{\|\mathbf{s}\times\mathbf{n}\|}\right. \\ &- \left(\left(\mathbf{I}_{3\times3} - \mathbf{l}\otimes\mathbf{l}\right)\left(\left(\mathbf{n}\times\dot{\mathbf{s}}\right)\otimes\mathbf{l}\right)\mathbf{n}\times\right)\frac{\mathbf{J}_{\mathbf{s}}}{\|\mathbf{s}\times\mathbf{n}\|^2} \\ &\left.- \left(\left(\mathbf{I}_{3\times3} - \mathbf{l}\otimes\mathbf{l}\right)\mathbf{n}\times\boldsymbol{\omega}_R\times\right)\frac{\mathbf{J}_{\mathbf{s}}}{\|\mathbf{s}\times\mathbf{n}\|}\right]\boldsymbol{\theta}_{\Delta H} \\ &+ \left[\frac{\left(\mathbf{I}_{3\times3} - \mathbf{l}\otimes\mathbf{l}\right)\mathbf{n}\times\mathbf{s}\times}{\|\mathbf{s}\times\mathbf{n}\|}\right]\Delta\boldsymbol{\omega}_R \\ &= \mathbf{J}_{\dot{\mathbf{l}}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\dot{\mathbf{l}}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R\end{aligned} \tag{17.34}$$

$$\begin{aligned}\Delta\dot{\mathbf{r}} = &\left[\mathbf{s}\times^T\mathbf{J}_{\dot{\mathbf{l}}_{\boldsymbol{\theta}_{\Delta H}}} + \dot{\mathbf{l}}\times\mathbf{J}_{\mathbf{s}} + \dot{\mathbf{s}}\times^T\mathbf{J}_{\mathbf{l}} + \mathbf{l}\times\mathbf{J}_{\dot{\mathbf{s}}_{\boldsymbol{\theta}_{\Delta H}}}\right]\boldsymbol{\theta}_{\Delta H} \\ &+ \left[\mathbf{s}\times^T\mathbf{J}_{\dot{\mathbf{l}}_{\boldsymbol{\omega}_R}} + \mathbf{l}\times\mathbf{J}_{\dot{\mathbf{s}}_{\boldsymbol{\omega}_R}}\right]\Delta\boldsymbol{\omega}_R \\ &= \mathbf{J}_{\dot{\mathbf{r}}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\dot{\mathbf{r}}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R\end{aligned} \tag{17.35}$$

17.16 Loaded radius perturbation

$$\begin{aligned}\Delta\rho &= -\frac{\rho}{\mathbf{r}\cdot\mathbf{n}}\mathbf{n}^T\mathbf{J}_{\mathbf{r}}\boldsymbol{\theta}_{\Delta H} - \frac{1}{\mathbf{r}\cdot\mathbf{n}}\mathbf{n}^T\Delta\dot{\mathbf{w}}_H \\ &= \mathbf{J}_{\rho_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\rho_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H\end{aligned} \tag{17.36}$$

$$\begin{aligned}\Delta\dot{\rho} = &\left[-\frac{\mathbf{n}^T}{\mathbf{r}\cdot\mathbf{n}}\right]\Delta\dot{\mathbf{w}}_H \\ &+ \left[-\frac{\mathbf{n}^T}{\mathbf{r}\cdot\mathbf{n}}\left(\dot{\mathbf{r}}\mathbf{J}_{\rho_{\boldsymbol{\theta}_{\Delta H}}} + \rho\mathbf{J}_{\dot{\mathbf{r}}_{\boldsymbol{\theta}_{\Delta H}}} + \dot{\rho}\mathbf{J}_{\mathbf{r}}\right)\right]\boldsymbol{\theta}_{\Delta H} \\ &+ \left[-\frac{\mathbf{n}^T}{\mathbf{r}\cdot\mathbf{n}}\left(\dot{\mathbf{r}}\mathbf{J}_{\rho_{\mathbf{w}_H}}\right)\right]\Delta\mathbf{w}_H \\ &+ \left[-\frac{\mathbf{n}^T}{\mathbf{r}\cdot\mathbf{n}}\left(\rho\mathbf{J}_{\dot{\mathbf{r}}_{\boldsymbol{\omega}_R}}\right)\right]\Delta\boldsymbol{\omega}_R \\ &= \mathbf{J}_{\dot{\rho}_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\dot{\rho}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\dot{\rho}_{\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\dot{\rho}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R\end{aligned} \tag{17.37}$$

17.17 Velocities Perturbations

$$\begin{aligned}\Delta\mathbf{v}_C &= \Delta\dot{\mathbf{w}}_H + \Delta\dot{\rho}\mathbf{r} + \dot{\rho}\Delta\dot{\mathbf{r}} + \rho\Delta\dot{\mathbf{r}} \\ &= \ldots \\ &= \mathbf{J}_{\mathbf{v}_{C\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\mathbf{v}_{C\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\mathbf{v}_{C\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\mathbf{v}_{C\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R\end{aligned} \tag{17.38}$$

$$
\begin{aligned}
\Delta \mathbf{v}_C^* &= \Delta \dot{\mathbf{w}}_H + \Delta\left(\frac{r_e}{\rho}\dot{\rho}\mathbf{r}\right) - r_e\Delta\dot{\mathbf{r}} \\
&= \Delta \dot{\mathbf{w}}_H - \frac{r_e\mathbf{r}}{\rho}\Delta\dot{\rho} - \frac{r_e\dot{\rho}}{\rho}\Delta\mathbf{r} + r_e\frac{\dot{\rho}\mathbf{r}}{\rho^2}\Delta\rho - r_e\Delta\mathbf{r} \\
&= \dots \\
&= \mathbf{J}_{\mathbf{v}^*_{C\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\mathbf{v}^*_{C\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\mathbf{v}^*_{C\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\mathbf{v}^*_{C\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned}
\tag{17.39}
$$

$$
\begin{aligned}
\Delta \mathbf{v}_S &= \Delta \dot{\mathbf{w}}_H - r_e\left(\Delta\boldsymbol{\omega}_R \times \mathbf{r} + \boldsymbol{r} \times \Delta\mathbf{r}\right) \\
&= \Delta \dot{\mathbf{w}}_H - r_e\mathbf{r} \times^T \Delta\boldsymbol{\omega}_R - r_e\boldsymbol{\omega}_R \times \Delta\mathbf{r} \\
&= \dots \\
&= \mathbf{J}_{\mathbf{v}_{S\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\mathbf{v}_{S\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\mathbf{v}_{S\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\mathbf{v}_{S\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned}
\tag{17.40}
$$

$$
\begin{aligned}
\Delta v_x &= \mathbf{l}^T\Delta\mathbf{v}_C^* + \mathbf{v}_C^*\Delta\mathbf{l} \\
&= \dots \\
&= \mathbf{J}_{v_{x\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{v_{x\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{v_{x\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{v_{x\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned}
\tag{17.41}
$$

$$
\begin{aligned}
\Delta v_y &= \mathbf{t}^T\Delta\mathbf{v}_C + \mathbf{v}_C\Delta\mathbf{t} \\
&= \dots \\
&= \mathbf{J}_{v_{y\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{v_{y\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{v_{y\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{v_{y\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned}
\tag{17.42}
$$

$$
\begin{aligned}
\Delta v_s &= \mathbf{l}^T\Delta\mathbf{v}_S + \mathbf{v}_S\Delta\mathbf{l} \\
&= \dots \\
&= \mathbf{J}_{v_{s\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{v_{s\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{v_{s\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{v_{s\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned}
\tag{17.43}
$$

17.18 Slip Quantities Perturbations

$$
\begin{aligned}
\Delta\alpha_H &= \left[\frac{v_x}{v_x^2+v_y^2}\mathbf{J}_{v_{y\boldsymbol{\theta}_{\Delta H}}} - \frac{v_y}{v_x^2+v_y^2}\mathbf{J}_{v_{x\boldsymbol{\theta}_{\Delta H}}}\right]\boldsymbol{\theta}_{\Delta H} \\
&+ \left[\frac{v_x}{v_x^2+v_y^2}\mathbf{J}_{v_{y\dot{\mathbf{w}}_H}} - \frac{v_y}{v_x^2+v_y^2}\mathbf{J}_{v_{x\dot{\mathbf{w}}_H}}\right]\Delta\dot{\mathbf{w}}_H \\
&+ \left[\frac{v_x}{v_x^2+v_y^2}\mathbf{J}_{v_{y\boldsymbol{\omega}_R}} - \frac{v_y}{v_x^2+v_y^2}\mathbf{J}_{v_{x\boldsymbol{\omega}_R}}\right]\Delta\boldsymbol{\omega}_R \\
&- \left[\frac{v_y}{v_x^2+v_y^2}\mathbf{J}_{v_{x\mathbf{w}_H}}\right]\Delta\mathbf{w}_H \\
&= \mathbf{J}_{\alpha_{H\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\alpha_{H\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\alpha_{H\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R + \mathbf{J}_{\alpha_{H\mathbf{w}_H}}\Delta\mathbf{w}_H \\
\Delta\kappa_H &= \frac{\Delta v_s}{v_x} - \frac{v_s}{v_x^2}\Delta v_x \\
&= \dots \\
&= \mathbf{J}_{\kappa_{H\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\kappa_{H\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R + \mathbf{J}_{\kappa_{H\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\kappa_{H\mathbf{w}_H}}\Delta\mathbf{w}_H
\end{aligned}
\tag{17.44}
$$

$$
\begin{aligned}
\Delta\alpha_L &= \Delta v_y \\
\Delta\kappa_L &= \Delta v_s
\end{aligned}
\tag{17.45}
$$

$$
\begin{aligned}
\Delta\kappa &= \frac{\partial\kappa}{\partial\chi}\Delta\chi + \frac{\partial\kappa}{\partial\kappa_L}\Delta\kappa_L + \frac{\partial\kappa}{\partial\kappa_H}\Delta\kappa_H \\
&= \cdots \\
&= \mathbf{J}_{\kappa_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\kappa_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R + \mathbf{J}_{\kappa_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\kappa_{\mathbf{w}_H}}\Delta\mathbf{w}_H
\end{aligned} \tag{17.46}
$$

$$
\begin{aligned}
\Delta\alpha &= \frac{\partial\alpha}{\partial\chi}\Delta\chi + \frac{\partial\alpha}{\partial\alpha_L}\Delta\alpha_L + \frac{\partial\alpha}{\partial\alpha_H}\Delta\alpha_H \\
&= \cdots \\
&= \mathbf{J}_{\alpha_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\alpha_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\alpha_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R + \mathbf{J}_{\alpha_{\mathbf{w}_H}}\Delta\mathbf{w}_H
\end{aligned} \tag{17.47}
$$

17.19 Tire Forces and Moments Perturbation

$$
\begin{aligned}
\Delta F_z &= k_t\Delta\rho \\
&= \cdots \\
&= \mathbf{J}_{F_{z\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{F_{z\mathbf{w}_H}}\Delta\mathbf{w}_H \\
\Delta F_x &= \Delta F_z\mu_x(\kappa) + F_z\Delta\mu_x(\kappa) \\
&= \cdots \\
&= \mathbf{J}_{F_{x\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{F_{x\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{F_{x\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{F_{x\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R \\
\Delta F_y &= \Delta F_z\mu_y(\alpha) + F_z\Delta\mu_y(\alpha) \\
&= \cdots \\
&= \mathbf{J}_{F_{y\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{F_{y\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{F_{y\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{F_{y\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned} \tag{17.48}
$$

$$
\begin{aligned}
\Delta\mathbf{F} &= \Delta F_z\mathbf{n} + \Delta F_x\mathbf{l} + F_x\Delta\mathbf{l} + \Delta F_y\mathbf{t} + F_y\Delta\mathbf{t} \\
&= \cdots \\
&= \mathbf{J}_{\mathbf{F}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\mathbf{F}_{\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\mathbf{F}_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\mathbf{F}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned} \tag{17.49}
$$

$$
\begin{aligned}
\Delta\mathbf{M} &= \Delta(\rho\mathbf{r}) \times \mathbf{F} + \rho\mathbf{r} \times \Delta\mathbf{F} \\
&= \Delta\rho\mathbf{r} \times \mathbf{F} + \rho\Delta\mathbf{r} \times \mathbf{F} + \rho\mathbf{r} \times \Delta\mathbf{F} \\
&= \cdots \\
&= \mathbf{J}_{\mathbf{M}_{\boldsymbol{\theta}_{\Delta H}}}\boldsymbol{\theta}_{\Delta H} + \mathbf{J}_{\mathbf{M}_{\mathbf{w}_H}}\Delta\mathbf{w}_H + \mathbf{J}_{\mathbf{M}_{\dot{\mathbf{w}}_H}}\Delta\dot{\mathbf{w}}_H + \mathbf{J}_{\mathbf{M}_{\boldsymbol{\omega}_R}}\Delta\boldsymbol{\omega}_R
\end{aligned} \tag{17.50}
$$

17.20 Updated-updated approximation

The Jacobian matrix is the following:

$$
\begin{bmatrix}\Delta\mathbf{F} \\ \Delta\mathbf{M}\end{bmatrix} = \begin{bmatrix}\mathbf{J}_{\mathbf{F}_{\mathbf{w}_H}} & \mathbf{J}_{\mathbf{F}_{\dot{\mathbf{w}}_H}} & \mathbf{J}_{\mathbf{F}_{\boldsymbol{\theta}_{\Delta H}}} & \mathbf{J}_{\mathbf{F}_{\boldsymbol{\omega}_R}} \\ \mathbf{J}_{\mathbf{M}_{\mathbf{w}_H}} & \mathbf{J}_{\mathbf{M}_{\dot{\mathbf{w}}_H}} & \mathbf{J}_{\mathbf{M}_{\boldsymbol{\theta}_{\Delta H}}} & \mathbf{J}_{\mathbf{M}_{\boldsymbol{\omega}_R}}\end{bmatrix} \begin{bmatrix}\Delta\mathbf{w}_H \\ \Delta\dot{\mathbf{w}}_H \\ \boldsymbol{\theta}_{\Delta H} \\ \Delta\boldsymbol{\omega}_R\end{bmatrix} \tag{17.51}
$$

The following approximations are introduced:

$$
\begin{aligned}
\Delta\mathbf{w} &= \mathrm{dCoef}\Delta\dot{\mathbf{w}} \\
\boldsymbol{\theta}_\Delta &= \mathrm{dCoef}\Delta\dot{\mathbf{g}} \\
\Delta\boldsymbol{\omega} &= (\mathbf{I}_{3\times3} - \mathrm{dCoef}\boldsymbol{\omega}\times)\,\Delta\dot{\mathbf{g}}
\end{aligned} \tag{17.52}
$$

Finally,

$$\begin{bmatrix}\Delta\mathbf{F}\\ \Delta\mathbf{M}\end{bmatrix} = \begin{bmatrix}\mathbf{J}_{\mathbf{F}_{\mathbf{w}_H}} + \mathrm{dCoef}\mathbf{J}_{\mathbf{F}_{\dot{\mathbf{w}}_H}} & \mathrm{dCoef}\mathbf{J}_{\mathbf{F}_{\boldsymbol{\theta}_{\Delta H}}} & \mathbf{J}_{\mathbf{F}_{\boldsymbol{\omega}_R}}\left(\mathbf{I}_{3\times 3} - \mathrm{dCoef}\boldsymbol{\omega}_R\times\right)\\ \mathbf{J}_{\mathbf{M}_{\mathbf{w}_H}} + \mathrm{dCoef}\mathbf{J}_{\mathbf{M}_{\dot{\mathbf{w}}_H}} & \mathrm{dCoef}\mathbf{J}_{\mathbf{M}_{\boldsymbol{\theta}_{\Delta H}}} & \mathbf{J}_{\mathbf{M}_{\boldsymbol{\omega}_R}}\left(\mathbf{I}_{3\times 3} - \mathrm{dCoef}\boldsymbol{\omega}_R\times\right)\end{bmatrix}\begin{bmatrix}\Delta\dot{\mathbf{w}}_H\\ \Delta\dot{\mathbf{g}}_H\\ \Delta\dot{\mathbf{g}}_R\end{bmatrix} \tag{17.53}$$

17.21 Addendum: χ and μ derivatives

$$\frac{\partial\chi}{\partial v_x} = \frac{v_x\cosh\left(\frac{|v_x|-v_{x,\mathrm{LOW}}}{v_{x,\mathrm{DMP}}}\right)^{-2}}{2v_{x,\mathrm{DMP}}|v_x|} \tag{17.54}$$

$$\frac{\partial\mu_x}{\partial\kappa} = -C_xD_x\left(E_x\left(B_x - \frac{B_x}{B_x^2\kappa^2+1}\right) - B_x\right)\frac{\cos\left(C_x\arctan\left(E_x\left(B_x\kappa - \arctan(B_x\kappa)\right) - B_x\kappa\right)\right)}{(E_x(B_x\kappa - \arctan(B_x\kappa)) - B_x\kappa)^2+1} \tag{17.55}$$

$$\frac{\partial\mu_y}{\partial\alpha} = -C_yD_y\left(E_y\left(B_y - \frac{B_y}{B_y^2\alpha^2+1}\right) - B_y\right)\frac{\cos\left(C_y\arctan\left(E_y\left(B_y\alpha - \arctan(B_y\alpha)\right) - B_y\alpha\right)\right)}{(E_y(B_y\alpha - \arctan(B_y\alpha)) - B_y\alpha)^2+1} \tag{17.56}$$

17.22 Jacobian Validation

Given the amount of calculations involved in the Jacobian matrix assembly, a validation process has been carried out to ensure the correctness of the resulting terms.

Two MATLAB functions have been written to accomplish the task.

TestJac implements the formulas to verify their validity by checking that the Jacobian terms effectively appoximate the nonlinear functions over small increments of each degree of freedom. Figure 17.22 shows how the comparison is carried out.

ValidJac is meant to check that the implementation of the formulas in the module yields the correct numeric values of the jacobian terms. A few timesteps are simulated in MBDyn, the values of the degrees of freedom are passed to the function which returns the jacobian components, which are directly compared with the ones calculated by the module.

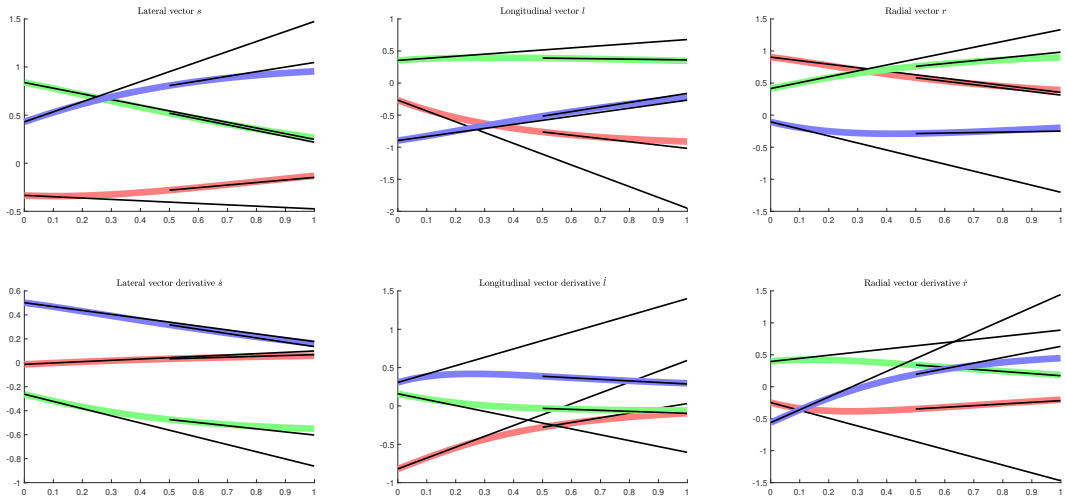


Figure 17.2: Validation of each component of the unit vectors

Bibliography

[1] Richard L. Bielawa. *Rotary Wing Structural Dynamics and Aeroelasticity*. AIAA, Washington, DC, 1992.

[2] J. Gordon Leishman. *Principles of helicopter aerodynamics*. Cambridge University Press, 2 edition, 2006.

[3] Nadir Patir and H. S. Cheng. An average flow model for determining effects of three-dimensional roughness on partial hydrodynamic lubrication. *Journal of Lubrication Technology*, 100(1):12–17, 01 1978.

[4] Nadir Patir and H. S. Cheng. Application of average flow model to lubrication between rough sliding surfaces. *Journal of Lubrication Technology*, 101(2):220–229, 04 1979.

[5] Marco Morandini and Paolo Mantegazza. Using dense storage to solve small sparse linear systems. *ACM Trans. Math. Softw.*, 33(1, Article 5), March 2007. doi:10.1145/1206040.1206045.

[6] Huimin Zhang, Runsen Zhang, Yufeng Xing, and Pierangelo Masarati. On the optimization of n-sub-step composite time integration methods. *Nonlinear Dynamics*, 102(3):1939–1962, November 2020.

[7] Huimin Zhang, Runsen Zhang, Andrea Zanoni, and Pierangelo Masarati. Performance of implicit A-stable time integration methods for multibody system dynamics. *Multibody System Dynamics*, 54(3):263–301, March 2022.

[8] Pierangelo Masarati and Marco Morandini. An ideal homokinetic joint formulation for general-purpose multibody real-time simulation. *Multibody System Dynamics*, 20(3):251–270, October 2008. doi:10.1007/s11044-008-9112-8.

[9] Pierangelo Masarati and Marco Morandini. Intrinsic deformable joints. To be published.

[10] Richard Schwertassek and Oskar Wallrapp. *Dynamik flexibler Mehrkörpersysteme*. Friedrich Vieweg und Sohn, Braunschweig/Wiesbaden, 1998.

[11] Klaus-Jürgen Bathe. *Finite Element Procedures*. K.J. Bathe, Watertown, MA, 2016.

[12] Lars Kübler. *Simulation und Sensitivitätsanalyse flexibler Mehrkörpersysteme mit großen Deformationen*. 2005.

[13] Guido Dhondt. *The Finite Element Method for Three-Dimensional Thermomechanical Applications*. Wiley, 2004.

[14] EDF R&D. *Code_Aster - Shape functions and integration points of finite elements*. Electricite de France, 2001.

[15] Jeremy Bleyer. *Numerical Tours of Computational Mechanics with FEniCS*, 2018.

[16] I. C. Cheeseman and N. E. Bennett. The effect of ground on a helicopter rotor in forward flight. TR 3021, NASA, 1955.

[17] A. R. S. Bramwell. *Helicopter Dynamics*. Edward Arnold, London, 1976.

[18] Dale M. Pitt and David A. Peters. Theoretical prediction of dynamic-inflow derivatives. *Vertica*, 5:21–34, 1981.

[19] Hans Jürgen Butenschön. *Das hydrodynamische, zylindrische Gleitlager endlicher Breite unter instationärer Belastung*. Karlsruhe, 1976.

[20] Dirk Bartel. *Simulation von Tribosystemen*. Vieweg+Teubner Research, Wiesbaden, 2010.

[21] Guy Bayada. From a compressible fluid model to new mass conserving cavitation algorithms. 2013.

[22] H. G. Elrod. A cavitation algorithm. 1981.

[23] Luis San Andres. Modern lubrication theory. 2010.

[24] Francisco Carrusca Pimenta de Brito. Thermodynamic performance of twin groove journal bearings considering realistic lubricant supply conditions: A theoretical and experimental study. 2009.

[25] J. H. Tripp J. A. Greenwood. The contact of two nominal flat rough surfaces. 1970.

[26] E. Tomanik. A simple numerical procedure to calculate the input data of greenwood-williamson model of asperity contact for actual engineering surfaces. 2003.

[27] Efstathios Velenis et al. Dynamic tire friction models for combined longitudinal and lateral vehicle motion. 2003.

[28] Klaus Knothe Robert Gasch. *Strukturdynamik Band 2 Kontinua und ihre Diskretisierung*. 1989.

[29] EDF R&D. *Code_Aster - Linear relations kinematics of type RBE3*. Electricite de France, 2017.

[30] J. F. Booker S. Boedo. Surface roughness and structural inertia in a mode-based mass-conserving elastohydrodynamic lubrication model. 1997.

[31] Robert J. Renka. Multivariate interpolation of large sets of scattered data. 1988.

[32] Hans Pacejka. *Tire and Vehicle Dynamics*, chapter 2, pages 68–70. Elsevier, 2012. https://doi.org/10.1016/C2010-0-68548-8.

Appendix A

On the optimization of n-sub-step composite time integration methods

This appendix includes a verbatim copy of the paper "On the optimization of n-sub-step composite time integration methods", written by Huimin Zhang, Runsen Zhang, Yufeng Xing and Pierangelo Masarati and published in Nonlinear Dynamics.

The paper reports some of MBDyn's integrators coefficients.

The paper is licensed under a Creative Commons Attribution 4.0 International License, which permits use, sharing, adaptation, distribution and reproduction in any medium or format, as long as you give appropriate credit to the original author(s) and the source, provide a link to the Creative Commons licence, and indicate if changes were made. The images or other third party material in this article are included in the article's Creative Commons licence, unless indicated otherwise in a credit line to the material. If material is not included in the article's Creative Commons licence and your intended use is not permitted by statutory regulation or exceeds the permitted use, you will need to obtain permission directly from the copyright holder. To view a copy of this licence, visit https://creativecommons.org/licenses/by/4.0/ .

Appendix B

Performance of implicit A-stable time integration methods for multibody system dynamics

This appendix includes a verbatim copy of the paper "Performance of implicit A-stable time integration methods for multibody system dynamics", written by Huimin Zhang, Runsen Zhang, Andrea Zanoni and Pierangelo Masarati and published in Multibody System Dynamics.

The paper gives the most recent description of MBDyn's different integrators properties.

The paper is licensed under a Creative Commons Attribution 4.0 International License, which permits use, sharing, adaptation, distribution and reproduction in any medium or format, as long as you give appropriate credit to the original author(s) and the source, provide a link to the Creative Commons licence, and indicate if changes were made. The images or other third party material in this article are included in the article's Creative Commons licence, unless indicated otherwise in a credit line to the material. If material is not included in the article's Creative Commons licence and your intended use is not permitted by statutory regulation or exceeds the permitted use, you will need to obtain permission directly from the copyright holder. To view a copy of this licence, visit https://creativecommons.org/licenses/by/4.0/ .

Pierangelo Masarati
Dipartimento di Ingegneria Aerospaziale, Politecnico di Milano
via La Masa 34, 20156 Milano, Italy
Tel.: ++39 02 2399 8309
Fax: ++39 02 2399 8334
E-mail: pierangelo.masarati@polimi.it
Web: https://www.mbdyn.org/
Web: https://www.aero.polimi.it/en/staff/pierangelo-masarati