



9. DISASSEMBLY INSTRUCTIONS

* Be sure to unplug the machine out of the outlet before disassembling and repairing the parts.


CONTROL PANEL

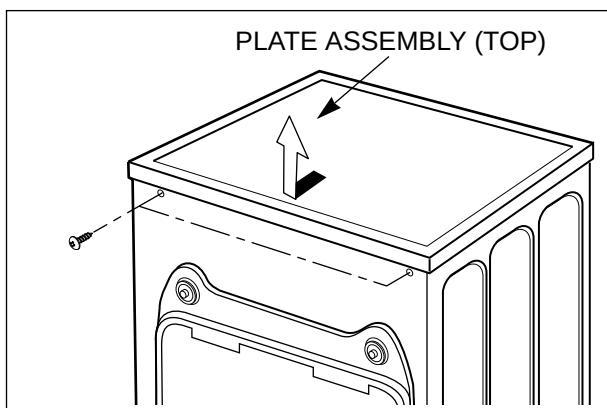

- ① Unscrew 2 screws on the back of the top plate.
- ② Pull the top plate backward and upward as shown.

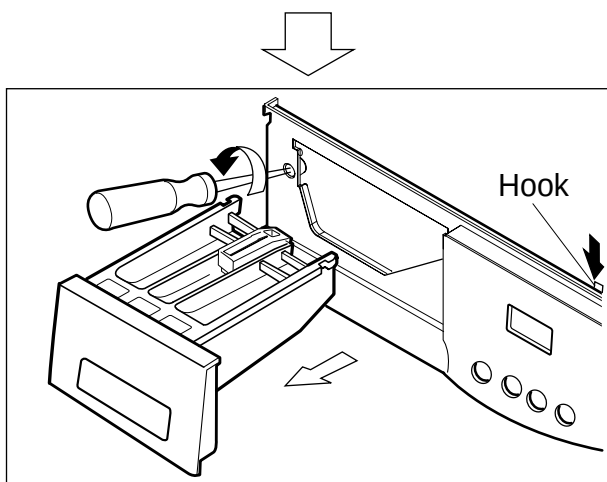


- ① Disconnect the PWB Assembly connector from Main lead wire Assembly.
- ② Pull out the drawer and unscrew 2 screws.
- ③ Push upper hooks down on the top and pull the control panel.

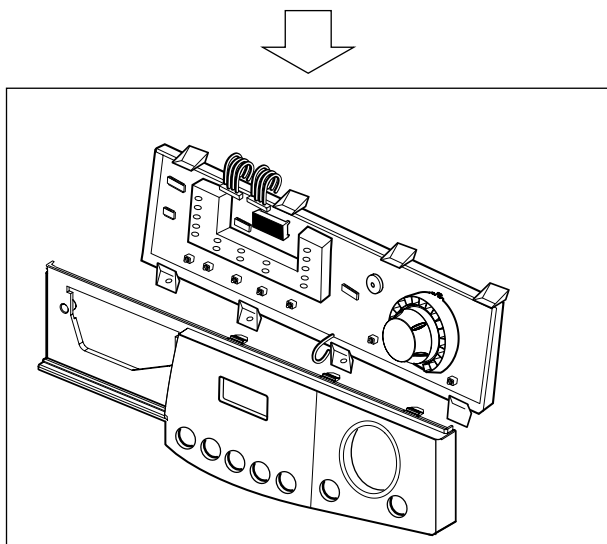


- ① Disconnect the PWB assembly from the control panel by unscrewing 5 screws.

DISPENSER ASSEMBLY

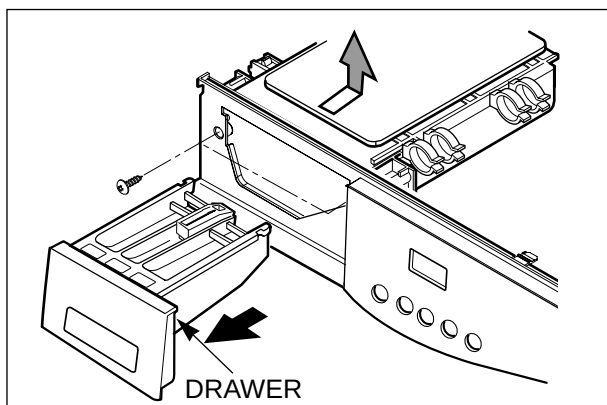


- ① Disassemble the top plate assembly.
- ② Pull out the drawer to arrow direction.
- ③ Unscrew 2 screws.

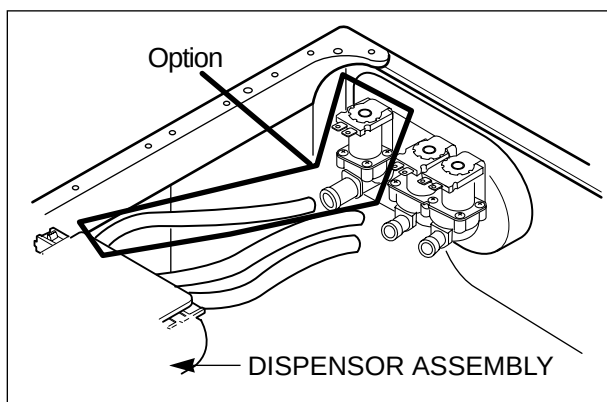

- ① Disassemble hose and its clamps.
- ② Disassemble ventilation bellows and water inlet bellows on the tub.

INLET VALVE

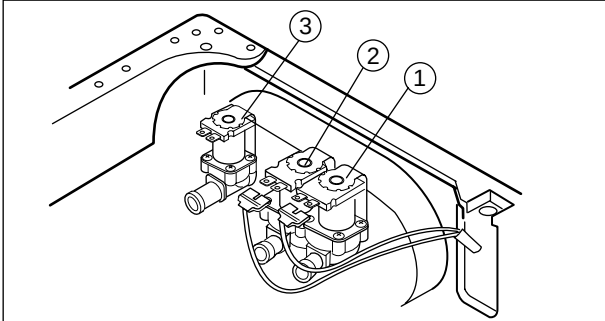


① Disconnect the wiring receptacle.

② Unscrew 2 screws from the back.

※When reconnecting the connector


VALVE #1 (MAIN)	White/Black-Black
VALVE #2 (PRE)	Black - Gray
VALVE #3 (HOT)	Blue/White - Black

LOWER COVER

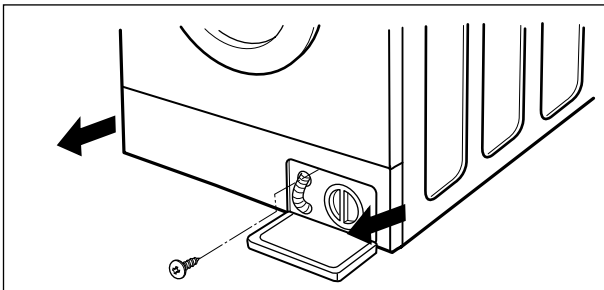

■ Open the lower cover cap by using coin and pull out the lower cover to the arrow direction after a screw is unscrewed.

DOOR



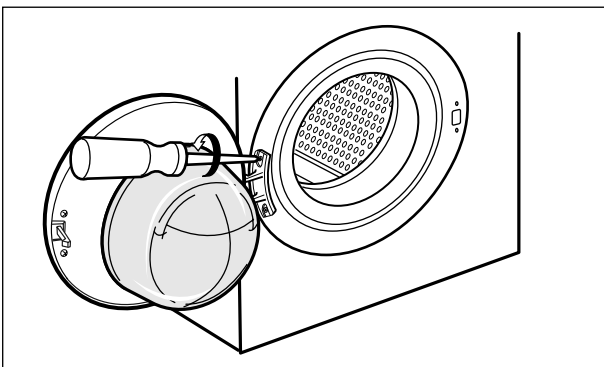


① Open the door completely.

② Remove the two screws from the hinge.

※When removing the door assembly, it is necessary to hold the bracket that is inner of the cabinet cover.

GASKET ASSEMBLY

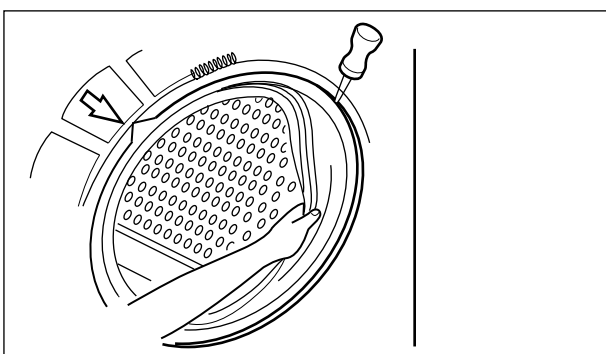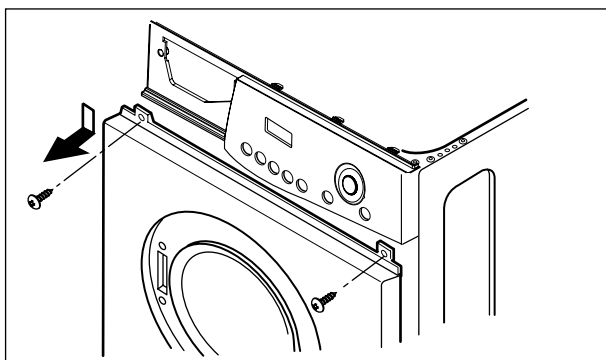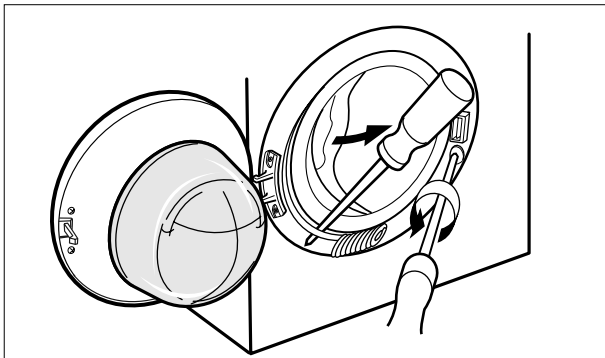


- ① Take apart the cabinet gasket clamp.
- ② Unscrew 2 screws from the cabinet cover.
- ③ Open the lower cover cap and unscrew 1 screw inside.
- ④ Take apart the lower cover.

- ① Disassemble the control panel. (refer to the page 25)
- ② Unscrew all the screws on the upper and lower sides of the cabinet cover.


- ① Take apart the tub gasket clamp.
 - ② Make sure that the drain hole of the gasket is put beneath when reassembling the gasket.
- ※Refer to the arrow mark on the tub cover.

PULLEY, MOTOR, DAMPER

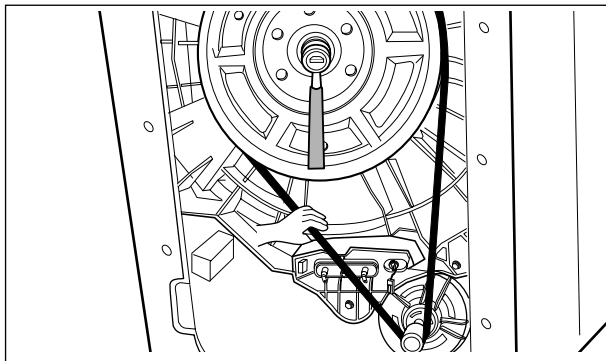


(PULLEY)

- ① Remove the back cover.
- ② Take off the belt turning the pulley.
- ③ Unscrew the bolt to pull out the pulley.

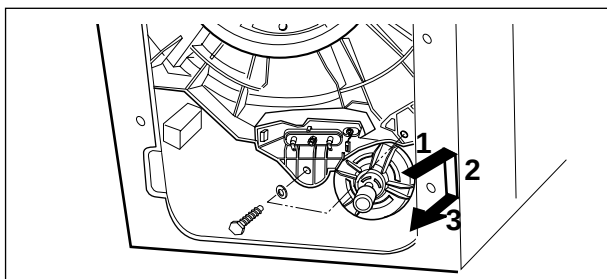

(MOTOR)


- ① Unscrew 2 screws from the bracket.
- ② Push the motor in the arrow direction for disassembling.
- ③ When reassembling the motor, make sure that motor mounting bushings are not taken off from the bracket.

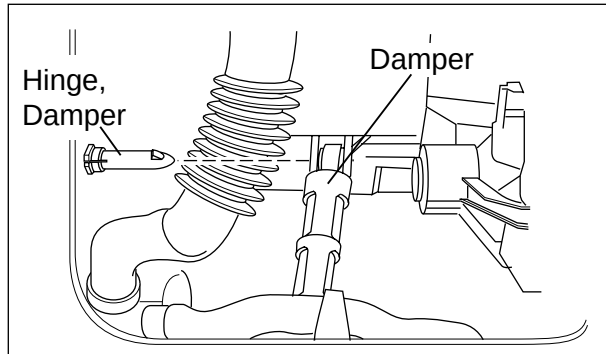


(DAMPER)

- ① Pull out the hinge, pressing its snap.
- ② Do not use the pulled - out hinge again. It may be taken off during operation.


■ Clean the drain pump filter

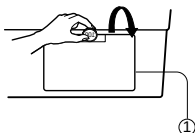

Open the lower cover cap (①) by using a coin. Turn the drain plug (②) to pull out the hose.

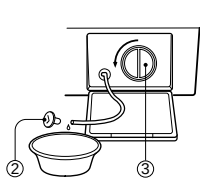


Unplug the drain plug (②), then the water flows out, At this time use a vessel To prevent water from flowing on the floor. If the water does not flow any more, turn the pump filter (③) open to the left.

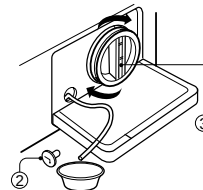


Take out any foreign material from the pump filter (③). After cleaning, turn the pump filter (③) clockwise and insert the drain plug (②) to the original place. close the lower cover cap.

PUMP

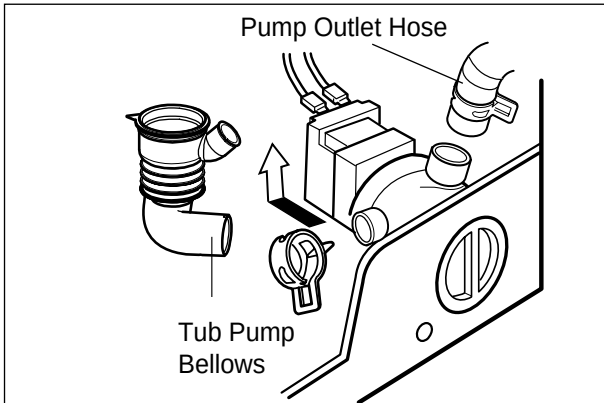

- ① Remove pump outlet hose.
- ② Remove tub pump bellows.
- ③ Remove cap (Remaining Hose.)
- ④ Disconnect the wiring.
- ⑤ Unscrew 2 screws.
- ⑥ Remove the pump.

HEATER

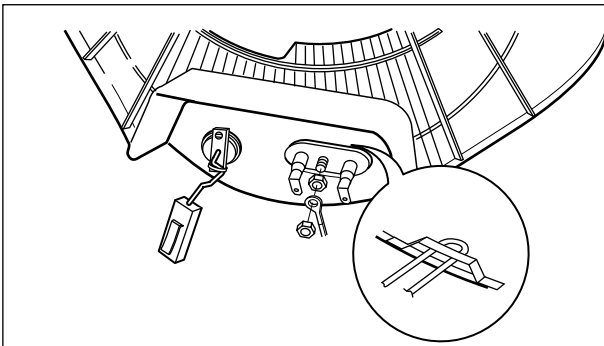


- ① Loosen the M6 heater nut to pull out the heater.

CAUTION


When mounting the heater, be sure to insert the heater into the heater clip on the bottom of the tub.

THERMISTOR

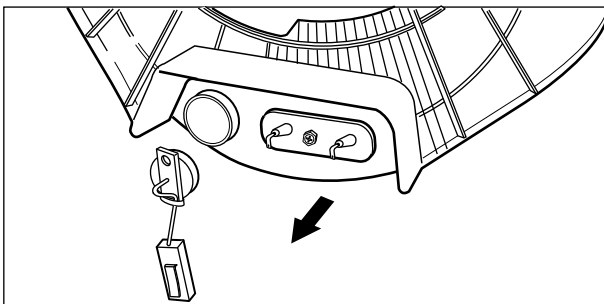


- ① Pull it out by holding the thermistor bracket.
* If it is pulled by the wire, it may be broken.
- ② When mounting the thermistor again, make sure that it is got back tight to the bushing.

SWITCH ASSEMBLY, DOOR LOCK

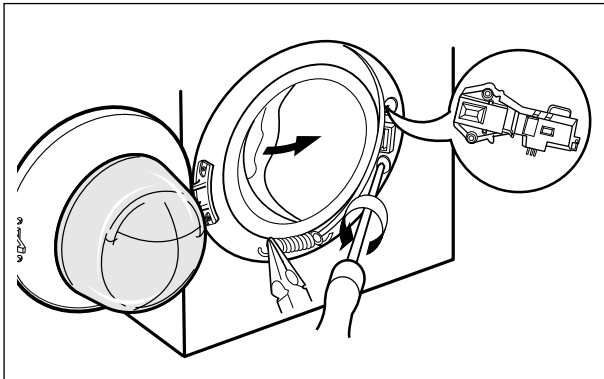

- ① Take apart the cabinet cover clamp and release the gasket.
- ② Unscrew 2 screws holding the door lock.
- ③ Disconnect the door lock from the wiring connector.

WHEN FOREIGN MATERIAL IS STUCK BETWEEN DRUM AND TUB

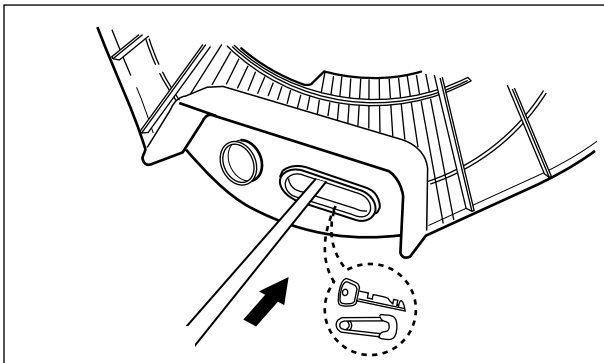

- ① Remove the heater.
- ② Remove the foreign material (wire, coin and others) by inserting a long bar through the hole.