



Set up Intructions

1

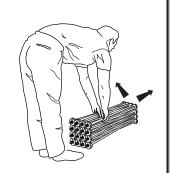


Remove frame from case and place on floor. Stand in front of unit with the yellow dots on bottom and facing you. Grasp the upper ends of the frame and pull up and outward.

2

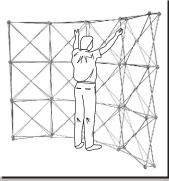


Continue pulling up and outward until the frame is fully expanded. The Spacer bars should be close enough to each other to allow for a connection.

3

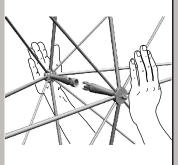


With the frame fully expanded, begin to lock the grey spacer bars. Start with the spacer bars in center area of the frame, then work toward the outer spacer bars. Ensure that the spacer bars are fully engaged and locked.

4

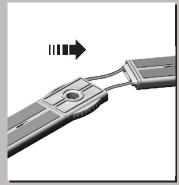


Connect each three-section channel bar assembly by inserting the sections that are pre-attached with bungie cords.

5

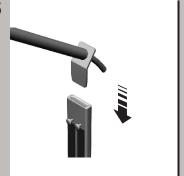

Attach a light fixture to the top of channel bar assembly before placing on the frame. Push fixture down into top of the channel bar to engage.


6

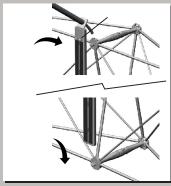

Place the channel bar assembly onto the frame by first attaching to the top hub. Slide onto top hub, then lower the channel bar assembly onto the bottom hub. Slide gently downward to engage. Drape light fixture cords over the back of the frame.


7

11

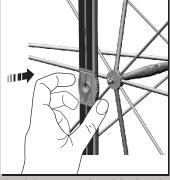


Attach the center sections of the channel bar assembly to the middle two hubs by pushing channel bar assembly onto hub. Peg on hub should engage through hole in the channel bar. To remove the channel bar, squeeze connector with thumb and forefinger and pull away from the hub.

8

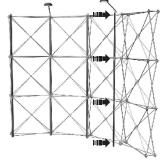


Repeat channel bar assembly to frame attachment for each row of hubs that will have panels, including the rear hubs at each end of frame (for curved end panels). To remove the channel bars, first remove from middle two, then the bottom hub and the ton hub

9

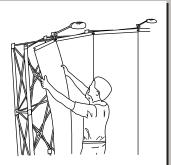

Grasp front panel 1/3 from top. Lift panel and guide notches of plastic plate over pegs in top of channel bar. Release panel, allowing it to attach magnetically to the channel bar assy. Straighten each panel by aligning it to center of channel bar slots.


10

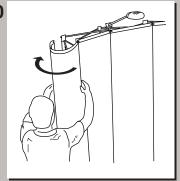

Lift end panel, guide front notch of over front peg at top of channel bar. Hook the other side on the panel peg at the back of the frame. Slowly run your hands down the sides of panel, attaching magnetic strips to channel bars, straightening as you go.

To convert the empty case into a counter, stretch nylon wrap over the case as shown and pull to the side and down.

12

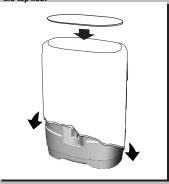

Continue pulling nylon wrap down over case until fully concealed. Place counter top onto wrapped case.