

ADDING NEW INCLUDE PATH TO TOOLCHAIN.

ABSTRACT


A Step By Step Guide For Adding Include Path To Toolchain.

Muhammad Fawzi

AVR Interfacing Course


Adding New Include Path To Toolchain

1- Right Click on project -> properties.

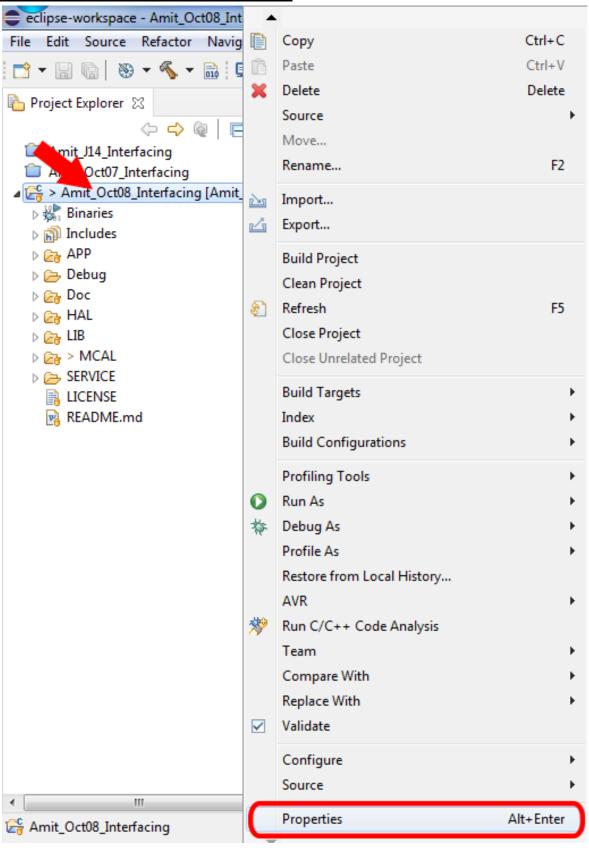


2- C/C++ Build->Settings->Directories.

3- Press add... 🦸

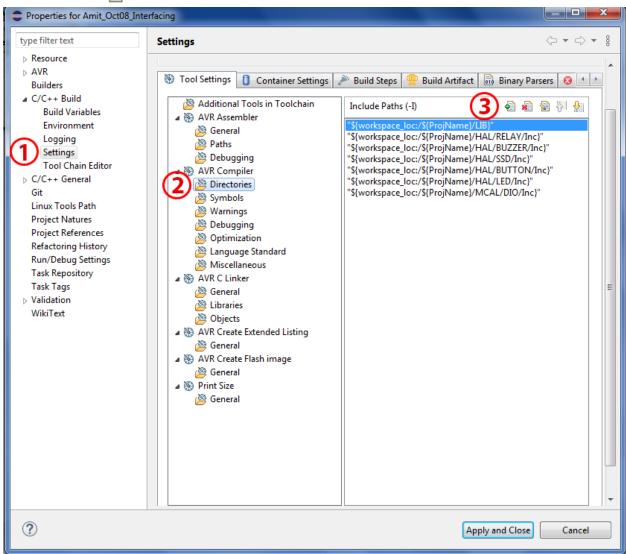

4- Press Workspace...

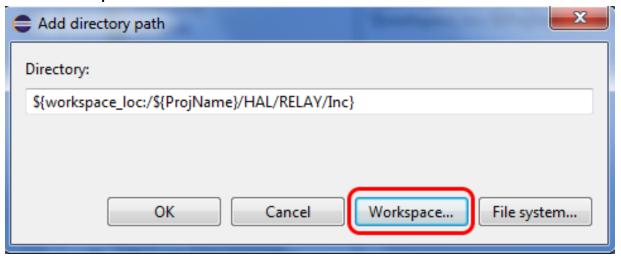

5- Navigate Your Workspace, then Choose the Desired Include Folder.

