

# 802.15.4 MAC Application Programming Interface

Document Number: SWRA192

**Texas Instruments, Inc.** San Diego, California USA

Version	Description	Date
1.0	Initial release.	07/25/2006
1.1	Updated for v1.2.0 release.	06/13/2007
1.2	Added changes for autopend description.	06/11/2008
1.3	Modified autopend description.	04/03/2009
1.4	Updated for v1.3.0 release.	06/12/2009
1.5	Added signed TX power PIB attribute.	12/29/2009
1.6	Updated for enhanced beacon request.	09/19/2011
1.7	Updated for v1.4.0 release.	09/25/2011
1.8	Updated associate request, associate response, disassociate request, orphan response data structures. Removed unused MAC_InitSecurity().	11/09/2011
1.9	Updated Extension Interface Section title and the MAC_MLME_POLL_IND description	11/27/2012
2.0	Added description of the API for MAC_ResumeReq and MAC_YieldReq.	12/03/2012
2.1	Added description for MAC_CbackQueryRetransmit(), macUpdatePanId (). Updated MAC_SrcMatchEnable() and MAC_MLME_POLL_IND	03/20/2012
2.2	Added/Updated Scan Type, MAC_FRAME_COUNTER, Proprietary Attributes, MAC_McpsDataReq, Compile-Time Configuration. Removed PHY_TRANSMIT_POWER. Updated macMlmeSyncReq_t.	03/27/2012
2.3	Updated for v1.5.0 release.	04/18/2013
2.4	Added Non Volatile functions	01/26/2015

# TABLE OF CONTENTS

1.	INT	RODUCTION	, 1
	1.1	Purpose	. 1
	1.2	References	
	1.3	ACRONYMS AND DEFINITIONS	. 1
2.	ΔPI	OVERVIEW	2
2.			
	2.1	INTERFACE MECHANISMS	
	2.1.1	3	
	2.1.2		
	2.1.3		
		ZERO COPY DATA INTERFACES	
		COMMON CONSTANTS AND STRUCTURES	
	2.3.1	ν <sub>Γ</sub>	
	2.3.2	2 Status	
		3.2.2 Proprietary Status Values	
	2.3.3		
	2.3.4	·	
	2.3.5		
	2.3.6	* **	
2	7377	· ·	
3.	INII	TIALIZATION INTERFACE	.0
	3.1	INTRODUCTION	6
	3.2	MAC_INIT()	6
	3.2.1		
	3.2.2	V1	
	3.2.3		
	3.2.4		
		MAC_INITDEVICE()	
	3.3.1	T	
	3.3.2	V1	
	3.3.3		
	3.3.4		
		MAC_INITCOORD()	
	3.4.1	T	
	3.4.2	- · · · · · /r ·	
	3.4.3 3.4.4		7
	2	MAC INITBEACONCOORD()	7
	3.5.1		
	3.5.2	1	
	3.5.3	V1	
	3.5.4		
		MAC_INITBEACONDEVICE()	
	3.6.1		
	3.6.2	*	
	3.6.3	- · · · · · / r ·	
	3.6.4		
	3.7	Example Configurations	
1	D 4.7		
4.		TA INTERFACE	
	4.1	INTRODUCTION	9

4.2 CO	MMON CONSTANTS AND STRUCTURES	••••••
4.2.1	Data header type	9
4.2.2	Data Constants	
4.3 Fun	NCTION CALLS	9
4.3.1	MAC_McpsDataReq ( )	
4.3.1.1		
4.3.1.2	•	
4.3.1.3	Parameter Details	10
4.3.1.4	Return	12
4.3.2	MAC_McpsPurgeReq ( )	12
4.3.2.1	Description	12
4.3.2.2	Prototype	12
4.3.2.3	Parameter Details	12
4.3.2.4		
4.3.3	MAC_McpsDataAlloc()	
4.3.3.1	1	
4.3.3.2	71	
4.3.3.3		
4.3.3.4		
	LBACK FUNCTION EVENTS	
4.4.1	MAC_MCPS_DATA_IND	
4.4.1.1		
4.4.1.2		
4.4.2	MAC_MCPS_DATA_CNF	
4.4.2.1	* · · · · · · · · · · · · · · · · · · ·	
4.4.2.2		
4.4.3	MAC_MCPS_PURGE_CNF	
4.4.3.1 4.4.3.2	* · · · · · · · · · · · · · · · · · · ·	
	Farameter Details	
5. MANAG	SEMENT INTERFACE	17
5. <b>MANA</b> G	RODUCTION	17
5. <b>MANAG</b> 5.1 INT 5.2 CON	RODUCTION	17 17
5. <b>MANAG</b> 5.1 INT 5.2 CON 5.2.1	RODUCTION	
5. MANAG 5.1 INT 5.2 Con 5.2.1 5.2.2	RODUCTION	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3	RODUCTION	
5. MANAG 5.1 INT 5.2 Con 5.2.1 5.2.2 5.2.3 5.2.4	RODUCTION	
5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5	RODUCTION  MMON CONSTANTS AND STRUCTURES  Channel Masks  Channels  Channel Page  Capability Information  Get and Set Attributes	
5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes	
5. MANAG 5.1 INT 5.2 Con 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes	
5. MANAG 5.1 INT 5.2 Con 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.5.2	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes Standard Security Attributes	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes Standard Security Attributes Proprietary Security Attributes Proprietary Security Attributes	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks  Channels  Channel Page  Capability Information  Get and Set Attributes  Standard Attributes  Proprietary Attributes  Get and Set Security Attributes  Standard Security Attributes  Proprietary Security Attributes  Disassociate Reason	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes Standard Security Attributes Standard Security Attributes Proprietary Security Attributes Disassociate Reason Scan Type	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes Standard Security Attributes Standard Security Attributes Disassociate Reason Scan Type Special Address Values	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.8 5.2.9 5.2.10	RODUCTION MMON CONSTANTS AND STRUCTURES.  Channel Masks.  Channels.  Channel Page  Capability Information  Get and Set Attributes  Standard Attributes  Proprietary Attributes.  Get and Set Security Attributes  Standard Security Attributes  Proprietary Security Attributes  Disassociate Reason  Scan Type.  Special Address Values  Superframe Specification	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11	RODUCTION	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12	RODUCTION MMON CONSTANTS AND STRUCTURES Channel Masks Channels Channel Page Capability Information Get and Set Attributes Standard Attributes Proprietary Attributes Get and Set Security Attributes Standard Security Attributes  Froprietary Security Attributes Standard Security Attributes Proprietary Security Attributes Disassociate Reason Scan Type Special Address Values Superframe Specification PAN Descriptor. Pending Address Specification	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3 FUN	RODUCTION	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1	RODUCTION	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1 5.3.1.1	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1 5.3.1.1 5.3.1.1	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks  Channels  Capability Information  Get and Set Attributes  Standard Attributes  Proprietary Attributes  Get and Set Security Attributes  Standard Security Attributes  Proprietary Security Attributes  Disassociate Reason  Scan Type  Special Address Values  Superframe Specification  PAN Descriptor  Pending Address Specification  SCTION CALLS  MAC_MImeAssociateReq()  Description  Prototype	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1 5.3.1.1 5.3.1.2 5.3.1.3	RODUCTION MMON CONSTANTS AND STRUCTURES  Channel Masks  Channels  Channel Page  Capability Information  Get and Set Attributes  Standard Attributes  Proprietary Attributes  Standard Security Attributes  Standard Security Attributes  Proprietary Security Attributes  Proprietary Security Attributes  Proprietary Security Attributes  Disassociate Reason  Scan Type  Special Address Values  Superframe Specification  PAN Descriptor  Pending Address Specification  NCTION CALLS.  MAC_MImeAssociateReq()  Description  Prototype  Parameter Details	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1 5.3.1.1 5.3.1.2 5.3.1.3 5.3.1.4	RODUCTION	
5. MANAG 5.1 INT 5.2 CON 5.2.1 5.2.2 5.2.3 5.2.4 5.2.5 5.2.5.1 5.2.5.2 5.2.6 5.2.6.1 5.2.6.2 5.2.7 5.2.8 5.2.9 5.2.10 5.2.11 5.2.12 5.3.1 5.3.1.1 5.3.1.2 5.3.1.3	RODUCTION	

	5.3.2.2 Prototype	
	5.3.2.3 Parameter Details	
	5.3.2.4 Return	26
5	3.3 MAC_MlmeDisassociateReq ( )	26
	5.3.3.1 Description	
	5.3.3.2 Prototype	26
	5.3.3.3 Parameter Details	
	5.3.3.4 Return	
	3.4 MAC_MlmeGetReq ( )	
	5.3.4.1 Description	
	5.3.4.2 Prototype	
	5.3.4.3 Parameter Details	
	5.3.4.4 Return	
5	3.5 MAC_MlmeGetSecurityReq ( )	
٥	5.3.5.1 Description	
	5.3.5.2 Prototype	
	5.3.5.3 Parameter Details	
	5.3.5.4 Return	
	3.6 MAC_MlmeOrphanRsp ()	
٥		
	*	
	5.3.6.2 Prototype	
	5.3.6.3 Parameter Details	
_	5.3.6.4 Return	
٥	3.7 MAC_MlmePollReq ( )	
	5.3.7.1 Description	
	5.3.7.2 Prototype	
	5.3.7.4 Parameter Details	
	5.3.7.4 Return	
5	3.8 MAC_MlmeResetReq ( )	
	5.3.8.1 Description	
	53.8.2 Prototype	
	5.3.8.3 Parameter Details	
_	5.3.8.4 Return	
5	3.9 MAC_MlmeScanReq ( )	
	5.3.9.1 Description	
	5.3.9.2 Prototype	
	5.3.9.3 Parameter Details	
_	5.3.9.4 Return	
5	3.10 MAC_MlmeSetReq ( )	
	5.3.10.1 Description	
	5.3.10.2 Prototype	
	5.3.10.3 Parameter Details	
_	5.3.10.4 Return	
5	3.11 MAC_MlmeSetSecurityReq ( )	
	5.3.11.1 Description	
	5.3.11.2 Prototype	
	5.3.11.3 Parameter Details	
	5.3.11.4 Return	
5	3.12 MAC_MlmeStartReq ( )	
	5.3.12.1 Description	
	5.3.12.2 Prototype	
	5.3.12.3 Parameter Details	
	5.3.12.4 Return	
5	3.13 MAC_MlmeSyncReq ( )	
	5.3.13.1 Description	
	5.3.13.2 Prototype	
	5.3.13.3 Parameter Details	
	5.3.13.4 Return	
5.4	CALLBACK FUNCTION EVENTS	35

5.4.1	MAC_MLME_ASSOCIATE_IND	35
5.4.1.1	Description	
5.4.1.2		
5.4.2	MAC_MLME_ASSOCIATE_CNF	35
5.4.2.1	Description	
5.4.2.2		
5.4.3	MAC_MLME_DISASSOCIATE_IND	
5.4.3.1	Description	
5.4.3.2		
5.4.4	MAC_MLME_DISASSOCIATE_CNF	
5.4.4.1	Description	3 <i>6</i>
5.4.4.2		
5.4.5	MAC_MLME_BEACON_NOTIFY_IND	
5.4.5.1	Description	
5.4.5.2		
5.4.6	MAC_MLME_ORPHAN_IND	
5.4.6.1	Description	
5.4.6.2		
5.4.7	MAC_MLME_SCAN_CNF	
5.4.7.1	Description	
5.4.7.2		
5.4.8	MAC_MLME_START_CNF	
5.4.8.1	Description	
5.4.8.2		
5.4.9	MAC_MLME_SYNC_LOSS_IND	
5.4.9.1		
5.4.9.2		
5.4.10	MAC_MLME_POLL_CNF	
5.4.10.	±	
5.4.10.		
5.4.11	MAC_MLME_COMM_STATUS_IND	
5.4.11.	I	
5.4.11.		
5.4.12	MAC_MLME_POLL_IND	
5.4.12.	1 Description	41
EXTENS	SION INTERFACE	42
	RODUCTION	
	MMON CONSTANTS AND STRUCTURES	
6.2.1	Power Mode	
	ICTION CALLS	
6.3.1	MAC_PwrOffReq()	
6.3.1.1	Description	
6.3.1.2	Prototype	
6.3.1.3	Parameter Details	
6.3.1.4	Return	
6.3.2	MAC_PwrOnReq ( )	
6.3.2.1	Description	
6.3.2.2	Prototype	
6.3.2.3 6.3.2.4	Parameter Details	
	Return	
6.3.3	MAC_PwrMode ( )	
6.3.3.1 6.3.3.2	Description	
6.3.3.2	PrototypeParameter Details	
6.3.3.4	Return	
6.3.4	MAC_PwrNextTimeout ( )	
6.3.4.1		
0.3.4.1	Descripti∪II	43

6.

6.3.4.2 Prototype	
6.3.4.3 Parameter Details	
6.3.4.4 Return	
6.3.5 <i>MAC_RandomByte</i> ( )	
6.3.5.1 Description	
6.3.5.2 Prototype	
6.3.5.3 Parameter Details	
6.3.5.4 Return	
6.3.6.1 Description	
6.3.6.2 Prototype	
6.3.6.3 Parameter Details	
6.3.6.4 Return	
6.3.7 MAC_SrcMatchAddEntry	
6.3.7.1 Description	
6.3.7.2 Prototype	
6.3.7.3 Parameter Details	
6.3.7.4 Return	44
6.3.8 MAC_SrcMatchDeleteEntry	
6.3.8.1 Description	
6.3.8.2 Prototype	
6.3.8.3 Parameter Details	
6.3.8.4 Return	
6.3.9 MAC_SrcMatchAckAllPending	
6.3.9.1 Description	
6.3.9.2 Prototype	
6.3.9.4 Return	
6.3.10 MAC_SrcMatchCheckAllPending	
6.3.10.1 Description	
6.3.10.2 Prototype	
6.3.10.3 Parameter Details	
6.3.10.4 Return	
6.3.11 MAC_ResumeReq ( )	
6.3.11.1 Description	
6.3.11.2 Prototype	46
6.3.11.3 Parameter Details	4 $\epsilon$
6.3.11.4 Return	
6.3.12 MAC_YieldReq ( )	46
6.3.12.1 Description	
6.3.12.2 Prototype	
6.3.12.3 Parameter Details	
6.3.12.4 Return	
6.3.13 macUpdatePanId()	
6.3.13.1 Description	
6.3.13.2 Prototype	
6.3.13.3 Parameter Details	
6.4 Non Volatile Functions	
6.4.1 MAC_NvDeviceStartup()	
6.4.1.1 Description	
6.4.1.2 Prototype	
6.4.1.3 Parameter Details	
6.4.1.4 Return	
6.4.2 MAC_NvDeviceSave ( )	
6.4.2.1 Description	
6.4.2.2 Prototype	
6.4.2.3 Parameter Details	
6.4.2.4 Return	47

	6.4.3	MAC_NvDeviceRestore ( )	
	6.4.3.1	Description	
	6.4.3.2	Prototype	
	6.4.3.3	Parameter Details	
	6.4.3.4		
		MAC_NvCoordStartup()	
	6.4.4.1	Description	
	6.4.4.2	Prototype	
	6.4.4.3	Parameter Details	
	6.4.4.4	Return	
	6.4.5	MAC_NvCoordSave ( )	
	6.4.5.1	Description	
	6.4.5.2	Prototype	
	6.4.5.3	Parameter Details	
	6.4.5.4		
		MAC_NvCoordRestore ( )	
	6.4.6.1	Description	
	6.4.6.2	Prototype	
	6.4.6.3 6.4.6.4		
		LBACK FUNCTION EVENTS	
	6.5.1		
		MAC_PWR_ON_CNF	
	6.5.1.1	Description	49
7.	CALLBA	.CK INTERFACE	50
	7.1.1	MAC_CbackEvent()	5.0
	7.1.1.1 7.1.1.2	DescriptionPrototype	
	7.1.1.2	Parameter Details	
	7.1.1.3		
		MAC_CbackCheckPending ( )	
	7.1.2.1	Description	
	7.1.2.1		51 51
	7.1.2.3	Parameter Details	
	7.1.2.4	Return	
	7.1.3	MAC_CbackQueryRetransmit(void);	
	7.1.3.1	Description	
	7.1.3.2		
	7.1.3.3	Parameter Details	
	7.1.3.4	Return	
	7.2 CON	IFIGURATION CONSTANTS	53
		IPILE-TIME CONFIGURATION	
8.	SCENAR	RIOS	55
	8.1 Non	N BEACON-ENABLED NETWORK START	55
	8.2 Non	N BEACON-ENABLED NETWORK SCAN AND ASSOCIATE	56
		CON-ENABLED NETWORK SCAN AND SYNC	
		HAN PROCEDURE	58
	8.5 DIRE		58

## 1. Introduction

## 1.1 Purpose

This document describes the application programming interface for the 802.15.4 MAC software. The API provides an interface to the management and data services of the 802.15.4 stack.

#### 1.2 References

1. IEEE Std 802.15.4-2006, Part 15.4: Wireless Medium Access Control (MAC) and Physical Layer (PHY) Specifications for Low-Rate Wireless Personal Area Networks (WPANs), September 8, 2006.

2. SWRA194, Z-Stack OS Abstraction Layer Application Programming Interface, Texas Instruments.

## 1.3 Acronyms and Definitions

AES Advanced Encryption Standard encryption algorithm.

API Application Programming Interface.

CAP Contention Access Period

CBC-MAC Cipher Block Chaining Message Authentication Code.

CCM Encryption using CTR with CBC-MAC.

Coordinator A full function device that accepts associations and transmits beacons.

CSMA-CA Carrier Sense Multiple Access with Collision Avoidance.

CTR Counter mode encryption.

DSN Data Sequence Number

FFD Full Function Device.

LNA Low Noise Amplifier.

LQI Link Quality Indication.

MAC Medium Access Control.

MCPS MAC Common Part Sublayer (data interface).

MIC Message integrity code.

MLME MAC Sublayer Management Entity (management interface).

MSDU MAC Service Data Unit.

OSAL Operating System Abstraction Layer.

PA Power Amplifier.

PAN Personal Area Network.

PHY Physical layer.

PIB PAN Information Base.
RFD Reduced Function Device.

RSSI Received Signal Strength Indicator

SFD Start of Frame Delimiter

## 2. API Overview

#### 2.1 Interface Mechanisms

The following interface mechanisms are used in the MAC API.

## 2.1.1 Message Passing Function Calls

These API functions provide a message passing interface to the MAC by sending an OSAL message to the MAC event handler. Unless otherwise noted, the API functions described in this document are message passing functions. These functions do not contain critical sections and do not directly access MAC data.

#### 2.1.2 Direct Execute Function Calls

These API functions directly execute code that performs a MAC operation. The function executes in the context of the caller. These functions may have critical sections and may directly access MAC data.

## 2.1.3 Callback Functions

These functions must be implemented by the application and are used to pass events and data from the MAC to the application. Data accessed through callback function parameters (such as a pointer to data) are only valid for the execution of the function and should not be considered valid when the function returns. These functions execute in the context of the MAC. The callback function implementation should avoid using critical sections and CPU intensive operations.

## 2.2 Zero Copy Data Interfaces

The interfaces for sending and receiving data between the MAC and the application are designed to not require a data copy, i.e. they are "zero copy". This results in a more CPU-efficient implementation. However the application must follow certain rules on when to allocate and deallocate data buffers, as described in Section 0.

## 2.3 Common Constants and Structures

## 2.3.1 Address Type

The following data types and values are used for the MAC address:

addr.shortAddr – The short 16-bit MAC address.

addr.extAddr - The extended 64-bit MAC address.

**addrMode** – The address mode using the following values:

NAME	DESCRIPTION
SADDR_MODE_NONE	Address not present.
SADDR_MODE_SHORT	Short 16-bit address is used.
SADDR_MODE_EXT	Extended 64-bit address is used.

# 2.3.2 Status

The following status values are used in various API functions and callback function events.

# 2.3.2.1 Standard Status Values

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_AUTOACK_PENDING_ALL_ON	The AUTOPEND pending all is turned on.
MAC_AUTOACK_PENDING_ALL_OFF	The AUTOPEND pending all is turned off.
MAC_BEACON_LOSS	The beacon was lost following a synchronization request.
MAC_CHANNEL_ACCESS_FAILURE	The operation or data request failed because of activity on the channel.
MAC_COUNTER_ERROR	The frame counter purportedly applied by the originator of the received frame is invalid.
MAC_DENIED	The MAC was not able to enter low power mode.
MAC_DISABLE_TRX_FAILURE	Unused.
MAC_FRAME_TOO_LONG	The received frame or frame resulting from an operation or data request is too long to be processed by the MAC.
MAC_IMPROPER_KEY_TYPE	The key purportedly applied by the originator of the received frame is not allowed.
MAC_IMPROPER_SECURITY_LEVEL	The security level purportedly applied by the originator of the received frame does not meet the minimum security level.
MAC_INVALID_ADDRESS	The data request failed because neither the source address nor destination address parameters were present.
MAC_INVALID_GTS	Unused.
MAC_INVALID_HANDLE	The purge request contained an invalid handle.
MAC_INVALID_INDEX	Unused.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_LIMIT_REACHED	The scan terminated because the PAN descriptor storage limit was reached.
MAC_NO_ACK	The operation or data request failed because no acknowledgement was received.
MAC_NO_BEACON	The scan request failed because no beacons were received or the orphan scan failed because no coordinator realignment was received.
MAC_NO_DATA	The associate request failed because no associate response was received or the poll request did not return any data.
MAC_NO_SHORT_ADDRESS	The short address parameter of the start request was invalid.
MAC_ON_TIME_TOO_LONG	Unused.
MAC_OUT_OF_CAP	Unused.
MAC_PAN_ID_CONFLICT	A PAN identifier conflict has been detected and communicated to the PAN coordinator.
MAC_PAST_TIME	Unused.
MAC_READ_ONLY	A set request was issued with a read-only identifier.
MAC_REALIGNMENT	A coordinator realignment command has been received.
MAC_SCAN_IN_PROGRESS	The scan request failed because a scan is already in progress.
MAC_SECURITY_ERROR	Cryptographic processing of the received secure frame failed.
MAC_SUPERFRAME_OVERLAP	The beacon start time overlapped the coordinator transmission time.
MAC_TRACKING_OFF	The start request failed because the device is not tracking the beacon of its coordinator.
MAC_TRANSACTION_EXPIRED	The associate response, disassociate request, or indirect data transmission

	failed because the peer device did not respond before the transaction expired or was purged.
MAC_TRANSACTION_OVERFLOW	The operation failed because MAC data buffers are full.
MAC_TX_ACTIVE	Unused.
MAC_UNAVAILABLE_KEY	The operation or data request failed because the security key is not available.
MAC_UNSUPPORTED_ATTRIBUTE	The set or get request failed because the attribute is not supported.
MAC_UNSUPPORTED_LEGACY	The received frame was secured with legacy security which is not supported.
MAC_UNSUPPORTED_SECURITY	The security of the received frame is not supported.

# 2.3.2.2 Proprietary Status Values

NAME	DESCRIPTION
MAC_UNSUPPORTED	The operation is not supported in the current configuration.
MAC_BAD_STATE	The operation could not be performed in the current state.
MAC_NO_RESOURCES	The operation could not be completed because no memory resources were available.

# 2.3.3 MAC Security Level

The following values indicate the MAC security level. The security level defines the encryption and/or authentication methods used on a message frame.

NAME	DESCRIPTION
MAC_SEC_LEVEL_NONE	No security is used.
MAC_SEC_LEVEL_MIC_32	MIC-32 authentication is used.
MAC_SEC_LEVEL_MIC_64	MIC-64 authentication is used.
MAC_SEC_LEVEL_MIC_128	MIC-128 authentication is used.
MAC_SEC_LEVEL_ENC	AES encryption is used.
MAC_SEC_LEVEL_ENC_MIC_32	AES encryption and MIC-32 authentication are used.
MAC_SEC_LEVEL_ENC_MIC_64	AES encryption and MIC-64 authentication are used.
MAC_SEC_LEVEL_ENC_MIC_128	AES encryption and MIC-128 authentication are used.

# 2.3.4 Key Identifier Mode

The following values indicate the key identifier mode. The key identifier mode defines how the key is determined from the key index.

NAME	DESCRIPTION
MAC_KEY_ID_MODE_NONE	Key is not used.
MAC_KEY_ID_MODE_IMPLICIT	Key is determined implicitly.
MAC_KEY_ID_MODE_1	Key is determined from the 1-byte key index.
MAC_KEY_ID_MODE_4	Key is determined from the 4-byte key index.
MAC_KEY_ID_MODE_8	Key is determined from the 8-byte key index.

## 2.3.5 Security Type

The following data type is used for MAC security.

**keySource** – This array identifies the originator of a key, as described in [1]. This parameter is ignored if keyIdMode is MAC\_KEY\_ID\_MODE\_IMPLICIT or securityLevel is MAC\_SEC\_LEVEL\_NONE.

**securityLevel** – The security level. See 2.3.3. When set to MAC\_SEC\_LEVEL\_NONE security is not used and all other parameters are ignored.

```
keyIdMode – The key ID mode. See 2.3.4. This parameter is ignored if keyIdMode is MAC_KEY_ID_MODE_IMPLICIT or securityLevel is MAC_SEC_LEVEL_NONE.
```

**keyIndex** — The key index, as described in [1]. This parameter is ignored if keyIdMode is MAC KEY ID MODE IMPLICIT or securityLevel is MAC SEC LEVEL NONE.

# 2.3.6 MAC Timing Values

The 802.15.4 specification describes timing values based on the symbol period of the physical layer. This document adopts these same values as they relate to the MAC API. These values are shown in italic text in this document. These values are described below with their timing values converted to millisecond or microsecond units for the 2.4 GHz physical layer, which uses a 16 microsecond symbol period.

NAME	DESCRIPTION	SYMBOLS	2.4 GHz TIMING
aBaseSuperframeDuration	The number of symbols forming a superframe when the superframe order is zero.	960	15.36 ms
aUnitBackoffPeriod	The number of symbols forming the basic time period used by the CSMA-CA algorithm.	20	320 us

# 3. Initialization Interface

## 3.1 Introduction

The initialization interface is used to configure the MAC for support of certain optional features. Additional features are enabled by using the following API functions. All functions in the initialization interface are direct execute functions.

# 3.2 MAC\_Init()

## 3.2.1 Description

This function initializes the MAC subsystem. It must be called once when the software system is started and before any other function in the MAC API is called.

# 3.2.2 Prototype

```
void MAC Init(void)
```

#### 3.2.3 Parameter Details

None.

## 3.2.4 Return

None.

## 3.3 MAC\_InitDevice()

## 3.3.1 Description

This function initializes the MAC to associate with a non beacon-enabled network. This function would be used to initialize a device as an RFD. If this function is used it must be called during application initialization before any other function in the data or management API is called.

# 3.3.2 Prototype

```
void MAC InitDevice(void)
```

## 3.3.3 Parameter Details

None.

## 3.3.4 Return

None.

# 3.4 MAC\_InitCoord()

#### 3.4.1 Description

This function initializes the MAC for operation as a coordinator. A coordinator can start a network, accept associate requests from other devices, send beacons, send indirect data, and other operations. This function would be used to initialize a device as an FFD. If this function is used it must be called during application initialization before any other function in the data or management API is called.

## 3.4.2 Prototype

```
void MAC InitCoord(void)
```

## 3.4.3 Parameter Details

None.

#### 3.4.4 Return

None.

## 3.5 MAC\_InitBeaconCoord()

## 3.5.1 Description

This function initializes the MAC for operation as a coordinator in a beacon-enabled network. If this function is used it must be called during application initialization before any other function in the data or management API is called.

# 3.5.2 Prototype

```
void MAC InitBeaconCoord(void)
```

## 3.5.3 Parameter Details

None.

## 3.5.4 Return

None.

# 3.6 MAC\_InitBeaconDevice()

## 3.6.1 Description

This function initializes the MAC to allow it to associate with and track a beacon-enabled network. If this function is used it must be called during application initialization before any other function in the data or management API is called.

## 3.6.2 Prototype

```
void MAC InitBeaconDevice (void)
```

## 3.6.3 Parameter Details

None.

## 3.6.4 Return

None.

# 3.7 Example Configurations

Non beacon-enabled network or Zigbee configurations:

802.15.4 DEVICE FOR NON BEACON-ENABLED NETWORKS or	802.15.4 COORDINATOR FOR NON BEACON-ENABLED NETWORKS	802.15.4 PAN COORDINATOR FOR NON BEACON-ENABLED NETWORKS
ZIGBEE END DEVICE	ZIGBEE ROUTER	ZIGBEE COORDINATOR
<pre>MAC_InitDevice();</pre>	<pre>MAC_InitDevice(); MAC_InitCoord();</pre>	<pre>MAC_InitCoord();</pre>

802.15.4 Beacon-enabled network configurations:

802.15.4 DEVICE FOR	802.15.4 COORDINATOR FOR	802.15.4 PAN COORDINATOR
BEACON-ENABLED	BEACON-ENABLED	FOR BEACON-ENABLED
NETWORKS	NETWORKS	NETWORKS
<pre>MAC_InitDevice(); MAC_InitBeaconDevice();</pre>	<pre>MAC_InitDevice(); MAC_InitCoord(); MAC_InitBeaconDevice(); MAC_InitBeaconCoord();</pre>	<pre>MAC_InitCoord(); MAC_InitBeaconCoord();</pre>

## 4. Data Interface

## 4.1 Introduction

This API provides interfaces to send and receive data between the MAC and the application.

## 4.2 Common Constants and Structures

#### 4.2.1 Data header type

The following data type is used by the data interface to facilitate the zero copy mechanism.

```
typedef struct
{
  uint8     *p;
  uint8     len;
} sData t;
```

**p** – Pointer to data.

len – Length of data in bytes.

#### 4.2.2 Data Constants

The following constants are used to set up data buffers for  ${\tt MAC\_McpsDataReq}$  ().

NAME	VALUE	DESCRIPTION
MAC_MAX_FRAME_SIZE	116	Maximum application data length without security.
MAC_DATA_OFFSET	24	Data offset required for MAC header.
MAC_SEC_CONTROL_FIELD_LEN	1	Security control field length.
MAC_FRAME_COUNTER_LEN	4	Frame counter length.
MAC_KEY_ID_IMPLICIT_LEN	0	Key source length for Key identifier mode 0x00.
MAC_KEY_ID_1_LEN	1	Key source length for Key identifier mode 0x01.
MAC_KEY_ID_4_LEN	5	Key source length for Key identifier mode 0x02.
MAC_KEY_ID_8_LEN	9	Key source length for Key identifier mode 0x03.
MAC_MIC_32_LEN	4	Length required for 32-bit authentication code.
MAC_MIC_64_LEN	8	Length required for 64-bit authentication code.
MAC_MIC_128_LEN	16	Length required for 128-bit authentication code.

## 4.3 Function Calls

## 4.3.1 MAC\_McpsDataReq()

## 4.3.1.1 Description

This function sends application data to the MAC for transmission in a MAC data frame.

The MAC can only buffer a certain number of data request frames. When the MAC is congested and cannot accept the data request it sends a MAC\_MCPS\_DATA\_CNF with status MAC\_TRANSACTION\_OVERFLOW. Eventually the MAC will become uncongested and send a MAC\_MCPS\_DATA\_CNF for a buffered request. At this point the application can attempt another data request. Using this scheme, the application can send data whenever it wants but it must queue data to be resent if it receives an overflow status.

The data buffer passed to this function is allocated by the application. The application must not deallocate this buffer after calling this function; it must wait until it receives the MAC MCPS DATA CNF for the frame.

The application sets data pointer msdu.p to point to a buffer containing the data the application is sending. Figure 1 shows how a buffer containing the data can be constructed.

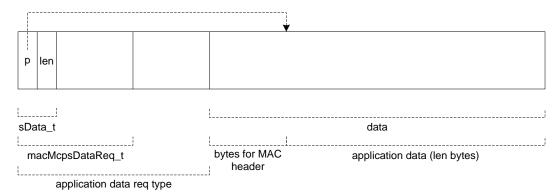


Figure 1.

As shown in the figure, the application must allocate a certain number of bytes before msdu.p to contain the MAC header. This number is MAC\_DATA\_OFFSET plus the MAC security header length if an encryption security suite is used.

Function MAC\_McpsDataAlloc() can be used to simplify allocation and preparation of the data buffer. This function allocates a buffer of the correct size to contain the parameters, MAC header, and application data and prepares it as described in Figure 1.

The maximum data frame length is MAC\_MAX\_FRAME\_SIZE bytes. This is reduced by the MAC security header length if encryption is used. If authentication is used, the data frame length is additionally reduced by the length of the authentication tag length, as shown in Section 4.2.2. For example, if KEY\_ID\_MODE\_8 and AES-MIC-128 are used the maximum length is:

## 4.3.1.2 Prototype

```
void MAC McpsDataReq(macMcpsDataReq t *pData)
```

# 4.3.1.3 Parameter Details

Parameters are passed using the following data structures.

```
typedef struct
                   dstAddr;
  sAddr t
  uint1\overline{6}
                    dstPanId;
                    srcAddrMode;
  uint8
  uint8
                   mdsuHandle;
  uint16
                   txOptions;
  uint8
                    channel;
  uint8
                    power;
                    gpOffset;
  uint8
  uint8
                    gpDuration;
} macDataReq t;
```

**dstAddr** – The address of the destination device.

**dstPanId** – The PAN ID of the destination device.

srcAddrMode - The source address mode.

msduHandle - Application-defined handle value associated with this data request.

**txOption** – TX options bit mask.

**channel** – Transmit the data frame on this channel.

**power** – Transmit the data frame at this power level.

gpOffset; - Transmit delay for Green Power. This can be used only if FEATURE\_GREEN\_POWER is defined.

gpDuration - Transmit window for Green Power. Can be used only if FEATURE\_GREEN\_POWER is defined.

```
typedef struct
{
  macEventHdr_t hdr;
  sData_t msdu;
  macTxIntData_t internal;
  macSec_t sec;
  macDataReq_t mac;
} macMcpsDataReq t;
```

**hdr** – For internal use only.

msdu.p - Pointer to application data.

msdu.len - Length of data in bytes.

**internal** – For internal use only.

**sec** – Security parameters. See 2.3.5.

mac.dstAddr – The address of the destination device.

mac.dstPanId - The PAN ID of the destination device.

mac.srcAddrMode - The source address mode.

mac.mdsuHandle - Application-defined handle value associated with this data request.

mac.txOptions – TX options bit mask, a combination of the following values:

NAME	DESCRIPTION
MAC_TXOPTION_ACK	Acknowledged transmission. The MAC will attempt to retransmit the frame until it is acknowledged.
MAC_TXOPTION_GTS	GTS transmission (unused).
MAC_TXOPTION_INDIRECT	Indirect transmission. The MAC will queue the data and wait for the destination device to poll for it. This can only be used by a coordinator.
MAC_TXOPTION_NO_RETRANS	No frame retransmission. This proprietary option prevents the frame from being retransmitted.
MAC_TXOPTION_NO_CNF	No confirm. This proprietary option prevents a MAC_MCPS_DATA_CNF event from being sent for this frame.
MAC_TXOPTION_ALT_BE	Use PIB value MAC_ALT_BE for the minimum backoff exponent.
MAC_TXOPTION_PWR_CHAN	Use the power and channel values in macDataReq_t instead of the PIB values.

MAC_TXOPTION_GREEN_PWR	Special transmit for Green Power for CC2530 only. Must be direct. This value can only be used if FEATURE_GREEN_POWER has been defined.
------------------------	--

mac.channel – Transmit the data frame on this channel. This value is ignored if MAC\_TXOPTION\_PWR\_CHAN is not used.

mac.power – Transmit the data frame at this power level. This value is ignored if MAC\_TXOPTION\_PWR\_CHAN is not used.

mac.gpOffset – Transmit Delay for Green Power. This value is ignored if MAC\_TXOPTION\_GREEN\_PWR is not used. This can only be used if FEATURE\_GREEN\_POWER has been defined.

**mac.gpDuration** – Transmit Window for Green Power. This value is ignored if MAC\_TXOPTION\_GREEN\_PWR is not used.

#### 4.3.1.4 Return

None.

# 4.3.2 MAC\_McpsPurgeReq()

## 4.3.2.1 Description

This function purges and discards a data request from the MAC data queue. When the operation is complete the MAC sends a MAC MCPS PURGE CNF.

## 4.3.2.2 Prototype

void MAC McpsPurgeReq(uint8 msduHandle)

#### 4.3.2.3 Parameter Details

msduHandle – The application-defined handle value associated with the data request.

## 4.3.2.4 Return

None.

## 4.3.3 MAC\_McpsDataAlloc()

#### 4.3.3.1 Description

This direct-execute function simplifies the allocation and preparation of the data buffer  $\texttt{MAC\_McpsDataReq}()$ . The function allocates a buffer and prepares the data pointer as described in Section 4.3.1.

If the application allocates a buffer using this function and does use the buffer to call MAC\_McpsDataReq() it must deallocate the buffer by calling mac\_msg\_deallocate((uint8 \*\*)&pBuffer).

This function is a proprietary function and not defined in the 802.15.4 specification.

## 4.3.3.2 Prototype

#### 4.3.3.3 Parameter Details

**len** – Length of application data in bytes.

**securityLevel** – Security level used for this frame. See Section 2.3.3. Set to MAC\_SEC\_LEVEL\_NONE if security is not used.

## 4.3.3.4 Return

Returns a pointer to the allocated buffer. If the function fails for any reason it returns NULL. The following parameters in the returned macMcpsDataReq t structure are set by the function:

msdu.p – Points to the start of the application data area of the buffer.

**msdu.len** – Set to the len parameter passed to the function.

#### 4.4 Callback Function Events

These events are sent to the application via the MAC callback function described in Section 7.1.1.

## 4.4.1 MAC\_MCPS\_DATA\_IND

## 4.4.1.1 Description

This event sends data from the MAC to the application.

The parameters for this event point to a dynamically allocated memory buffer. When the application is finished using the data it must deallocate the buffer by calling mac msg deallocate ((uint8 \*\*) &pData).

#### 4.4.1.2 Parameter Details

Parameters are passed using the following data structures.

```
typedef struct
          srcAddr;
 sAddr t
 sAddr t
 uint3\overline{2}
                timestamp;
 uint16
                timestamp2;
 uint16
                srcPanId;
 uint16
                dstPanId;
               mpduLinkQuality;
 uint8
 uint8
                correlation;
 uint8
                rssi;
 uint8
                dsn;
} macDataInd t;
typedef struct
 macEventHdr t hdr;
 sData t
                msdu;
 macRxIntData t internal;
 macSec t
                 sec;
 macDataInd t
                mac;
} macMcpsDataInd t;
```

**hdr** – For internal use only.

msdu.p – Pointer to data received by the MAC.

msdu.len - Length of data in bytes.

**internal** – For internal use only.

sec – Security parameters. See 2.3.5.

mac.srcAddr - The address of the sending device.

mac.dstAddr – The address of the destination device.

mac.timestamp – The time, in aUnitBackoffPeriod units, at which the frame was received.

mac.timestamp2 - The time, in internal MAC timer units, at which the frame was received.

mac.srcPanId - The PAN ID of the sending device.

mac.dstPanId - The PAN ID of the destination device.

mac.mpduLinkQuality – The link quality of the received data frame. The value is based on the energy detect calculation, with values ranging linearly from 0x00 to 0xFF with the higher value indicating higher link quality.

**mac.correlation** – The raw correlation value of the received data frame. This value depends on the radio. See the chip data sheet for details.

mac.rssi – The received RF power in units of dBm.

**dsn** – The data sequence number of the received frame.

## 4.4.2 MAC\_MCPS\_DATA\_CNF

## 4.4.2.1 Description

This event is sent to the application every time MAC\_McpsDataReq() is called. The event returns the status of the data request. The event also passes back a pointer to the data buffer. The application can use this pointer to deallocate the buffer.

## 4.4.2.2 Parameter Details

Parameters are passed in the following structure:

```
typedef struct
 macEventHdr_t
                     hdr;
                     msduHandle;
  uint8
  macMcpsDataReq_t
                     *pDataReq;
  uint32
                     timestamp;
  uint16
                     timestamp2;
  uint8
                     retries;
                     mpduLinkQuality;
  uint8
  uint8
                     correlation;
  int8
                     rssi;
} macMcpsDataCnf t;
```

hdr.status – The status of the data request operation, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_CHANNEL_ACCESS_FAILURE	Data transmission failed because of congestion on the channel.
MAC_FRAME_TOO_LONG	Data is too long to be processed by the MAC.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_ACK	No acknowledgement was received from the peer device.
MAC_TRANSACTION_EXPIRED	Indirect data transmission failed because the peer device did not respond before the transaction expired or was purged.
MAC_TRANSACTION_OVERFLOW	MAC data buffers are full.
MAC_COUNTER_ERROR	The outgoing secured frame has a frame counter value 0xffffffff.

msduHandle - Application-defined handle value associated with the data request.

**pDataReq** – Pointer to the data request buffer for this data confirm.

**msduHandle** – Application-defined handle value associated with the data request.

timestamp – The time, in aUnitBackoffPeriod units, at which the frame was transmitted.

timestamp2 – The time, in internal MAC timer units, at which the frame was transmitted.

**retries** – The number of retries required to transmit the data frame.

mpduLinkQuality - The link quality of the received ack frame.

**correlation** – The raw correlation value of the received ack frame.

rssi – The RF power of the received ack frame in units dBm.

# 4.4.3 MAC\_MCPS\_PURGE\_CNF

# 4.4.3.1 Description

This event is sent to the application when MAC\_McpsPurgeReq() is called. The event returns the status of the purge request.

# 4.4.3.2 Parameter Details

Parameters are passed in the following structure.

```
typedef struct
{
  macEventHdr_t hdr;
  uint8 msduHandle;
} macMcpsPurgeCnf t;
```

**hdr.status** – The status of the purge request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_INVALID_HANDLE	The purge request contained an invalid handle.

**pDataReq** – Pointer to the data request buffer for this purge confirm.

msduHandle - Application-defined handle value associated with the data request.

# 5. Management Interface

## 5.1 Introduction

The following interfaces are used for 802.15.4 network management.

## 5.2 Common Constants and Structures

## 5.2.1 Channel Masks

The following mask values are used in combination to indicate a set of channels. For example, to use channels 11, 12, and 23 do:

NAME	DESCRIPTION
MAC_CHAN_11_MASK - MAC_CHAN_28_MASK	Channel 11 through 28 mask.

Channels 27 and 28 are not defined by [1]. These channels may be outside the 2.4 GHz ISM band in some countries.

#### 5.2.2 Channels

These values indicate a particular logical channel.

NAME	DESCRIPTION
MAC_CHAN_11 - MAC_CHAN_28	Channel 11 through 28.

Channels 27 and 28 are not defined by [1]. These channels may be outside the 2.4 GHz ISM band in some countries.

## 5.2.3 Channel Page

These values indicate the channel page.

Note: Only channel page 0 in the 2.4 GHz band is supported.

NAME	DESCRIPTION
MAC_CHANNEL_PAGE_0	2.4 GHz band using O-QPSK.
MAC_CHANNEL_PAGE_1	868 and 915 MHz bands using ASK.
MAC_CHANNEL_PAGE_2	868 and 915 MHz bands using O-QPSK.

# 5.2.4 Capability Information

This bit mask indicates the capability information of the device. This information is used during the association procedure.

NAME	DESCRIPTION
MAC_CAPABLE_PAN_COORD	Device is capable of becoming a PAN coordinator.
MAC_CAPABLE_FFD	Device is an FFD.
MAC_CAPABLE_MAINS_POWER	Device is mains powered rather than battery powered.
MAC_CAPABLE_RX_ON_IDLE	Device has its receiver on when idle.
MAC_CAPABLE_SECURITY	Device is capable of sending and receiving secured frames.
MAC_CAPABLE_ALLOC_ADDR	Request allocation of a short address in the associate procedure.

## 5.2.5 Get and Set Attributes

The following values are used to get and set MAC attributes using functions  $\texttt{MAC\_MlmeGetReq}()$  and  $\texttt{MAC\_MlmeSetReq}()$ . The default values for an attribute, if any, are shown in bold text. Read-only attributes are indicated by a  $\bullet$  symbol in the "R" column.

## 5.2.5.1 Standard Attributes

NAME	TYPE	RANGE	R	API Number	DESCRIPTION
MAC_ACK_WAIT_DURATION	uint8	54	•	0x40	The maximum number of symbols to wait for an acknowledgment frame.
MAC_ASSOCIATION_PERMIT	bool	TRUE, FALSE		0x41	TRUE if a coordinator is currently allowing association.
MAC_AUTO_REQUEST	bool	TRUE, FALSE		0x42	TRUE if a device automatically sends a data request if its address is listed in the beacon frame
MAC_BATT_LIFE_EXT	bool	TRUE, FALSE		0x43	TRUE if battery life extension is enabled.
MAC_BATT_LIFE_EXT_PERIOD S	uint8	6	•	0x44	The number of backoff periods during which the receiver is enabled following a beacon in battery life extension mode.
MAC_BEACON_PAYLOAD	uint8 *	pointer		0x45	The contents of the beacon payload.
MAC_BEACON_PAYLOAD_LENGT	uint8	0-52		0x46	The length in bytes of the beacon payload
MAC_BEACON_ORDER	uint8	0-15		0x47	How often the coordinator transmits a beacon. See Section 5.3.12.3.
MAC_BEACON_TX_TIME	uint32	0x000000 – 0xffffff	•	0x48	The time the device transmitted its last beacon frame, in aUnitBackoffPeriod units.
MAC_BSN	uint8	0x00 - 0xff		0x49	The beacon sequence number.
MAC_COORD_EXTENDED_ADDRE SS	sAddrE xt_t	64-bit address		0x4A	The extended address of the coordinator with which the device

				is associated.
MAC_COORD_SHORT_ADDRESS	uint16	0x0000 – <b>0xffff</b>	0x4B	The short address assigned to the coordinator with which the device is associated. A value of MAC_ADDR_USE_EXT indicates that the coordinator is using its extended address.
MAC_DSN	uint8	0x00 – 0xff	0x4C	The data or MAC command frame sequence number.
MAC_GTS_PERMIT	bool	TRUE, FALSE	0x4D	TRUE if the PAN coordinator accepts GTS requests.
MAC_MAX_CSMA_BACKOFFS	uint8	0-5, 4	0x4E	The maximum number of backoffs the CSMA-CA algorithm will attempt before declaring a channel failure.
MAC_MIN_BE	uint8	0-8, 3	0x4F	The minimum value of the backoff exponent in the CSMA-CA algorithm.
MAC_PAN_ID	uint16	0x0000 – <b>0xffff</b>	0x50	The PAN identifier. If this value is 0xffff, the device is not associated.
MAC_PROMISCUOUS_MODE	bool	TRUE, FALSE	0x51	TRUE if the MAC is in promiscuous mode.
MAC_RX_ON_WHEN_IDLE	bool	TRUE, FALSE	0x52	TRUE if the MAC enables its receiver during idle periods.
MAC_SHORT_ADDRESS	uint16	0x0000 – 0xffff	0x53	The short address that the device uses to communicate in the PAN. If the device is a PAN coordinator, this value shall be set before calling MAC_StartReq(). Otherwise the value is allocated during association. Value MAC_ADDR_USE_EXT indicates that the device is associated but not using a short address.
MAC_SUPERFRAME_ORDER	uint8	0-15	0x54	This specifies the length of the active portion of the superframe. See Section 5.3.12.3.
MAC_TRANSACTION_PERSISTE NCE _TIME	uint16	0x0000 – 0xffff, <b>0x01f4</b>	0x55	The maximum time in beacon intervals that a transaction is stored by a coordinator and indicated in the beacon.
MAC_ASSOCIATED_PAN_COORD	bool	TRUE, FALSE	0x56	TRUE if the device is associated to the PAN coordinator.
MAC_MAX_BE	uint8	3-8, 5	0x57	The maximum value of the backoff exponent in the CSMA-CA algorithm.
MAC_MAX_FRAME_TOTAL_WAIT _TIME	uint16	143-25776, <b>1220</b>	0x58	The maximum number of CAP symbols in a beacon-enabled PAN, or symbols in a non beaconenabled PAN, to wait for a frame intended as a response to a data request command frame.
MAC_MAX_FRAME_RETRIES	uint8	0-7, 3	0x59	The maximum number of retries allowed after a transmission failure.

MAC_RESPONSE_WAIT_TIME	uint8	2-64, <b>32</b>		0x5A	The maximum number of aBaseSuperframeDuration intervals a device shall wait for an associate response after transmitting an associate request.
MAC_SYNC_SYMBOL_OFFSET	uint8	0	•	0x5B	The timestamp offset from SFD in symbols.
MAC_TIMESTAMP_SUPPORTED	bool	TRUE, FALSE	•	0x5C	TRUE if the MAC supports RX and TX timestamps.
MAC_SECURITY_ENABLED	bool	TRUE, FALSE		0x5D	TRUE if security is enabled.

# 5.2.5.2 Proprietary Attributes

NAME	TYPE	RANGE	R	API Number	DESCRIPTION
MAC_PHY_TRANSMIT_POWER	uint8				Deprecated and removed from PIB attributes
MAC_PHY_TRANSMIT_POWER_SIGNED	int8	-25- <b>0</b> -19 0- <b>11</b> (CC2590 PA/LNA) 0- <b>19</b> (CC2591 PA/LNA)		0xE0	The transmit power in units of 1 dBm. This attribute allows signed dBm value.
MAC_LOGICAL_CHANNEL	uint8	11-26		0xE1	The logical channel.
MAC_EXTENDED_ADDRESS	sAddr Ext_t	64-bit address		0xE2	The extended address of the device.
MAC_ALT_BE	uint8	0-8, 1		0xE3	The alternate minimum value of the backoff exponent in the CSMA-CA algorithm.
MAC_DEVICE_BEACON_ORDER	uint8	0-15, <b>15</b>		0xE4	How often the device tracks a beacon. Must be equal to or larger than the received beacon in order to track effectively.
MAC_RF4CE_POWER_SAVINGS	Uint8	0/1		0xE5	0 to disable RF4CE power savings and 1 to enable the power savings. Valid only on cc2530 and cc2533 platforms.

# 5.2.6 Get and Set Security Attributes

The following values are used to get and set MAC attributes using functions  $\texttt{MAC\_MlmeGetSecurityReq()}$  and  $\texttt{MAC\_MlmeSetSecurityReq()}$ . The default values for an attribute, if any, are shown in bold text. Read-only attributes are indicated by a  $\bullet$  symbol in the "R" column.

# 5.2.6.1 Standard Security Attributes

NAME	TYPE	RANGE	R	API	DESCRIPTION
				Number	

MAC KEY TABLE	keyDescriptor	pointer	0x61	A table of KeyDescriptor
	_t *			entries, each containing keys and related information required for secured communications
MAC_KEY_TABLE_ENTRIES	uint8	0-2	0x71	The number of entries in macKeyTable.
MAC_DEVICE_TABLE	<pre>deviceDescrip tor_t *</pre>	pointer	0x62	A table of Device-Descriptor entries, each indicating a remote device with which this device securely communicates.
MAC_DEVICE_TABLE_ENTRIES	uint8	0-8	0x72	The number of entries in macDeviceTable.
MAC_SECURITY_LEVEL_TABLE	securityLevel Descriptor_t *	pointer	0x63	A table of SecurityLevel- Descriptor entries, each with information about the minimum security level expected depending on incoming frame type and subtype.
MAC_SECURITY_LEVEL_TABLE_ ENTRIES	uint8	0-1	0x73	The number of entries in macSecurityLevelTable.
MAC_FRAME_COUNTER	uint32		0x74	Currently an unsupported attribute
MAC_AUTO_REQUEST_SECURITY _LEVEL	uint8	0-7, 6	0x75	The security level used for automatic data requests.
MAC_AUTO_REQUEST_KEY_ID_M ODE	uint8	0-3	0x76	The key identifier mode used for automatic data requests.
MAC_AUTO_REQUEST_KEY_SOUR	uint8[8]	[0-255, 0-255]	0x77	The originator of the key used for automatic data requests.
MAC_AUTO_REQUEST_KEY_INDE X	uint8	1-255	0x78	The index of the key used for automatic data requests.
MAC_DEFAULT_KEY_SOURCE	uint8[8]	[0-255, 0-255]	0x79	The originator of the default key used for key ID mode 0x01
MAC_PAN_COORD_EXTENDED_AD DRESS	sAddrExt_t	64-bit address	0x7A	The 64-bit address of the PAN coordinator.
MAC_PAN_COORD_SHORT_ADDRE SS	uint16	0x0000 – <b>0xffff</b>	0x7B	The 16-bit short address assigned to the PAN coordinator.

# **5.2.6.2 Proprietary Security Attributes**

NAME	TYPE	RANGE	R	API Number	DESCRIPTION
MAC_KEY_ID_LOOKUP_ENTR Y	array of keyDescripto r_t	n/a		0xD0	The key lookup table entry, part of an entry of the key table.
MAC_KEY_DEVICE_ENTRY	array of deviceDescri ptor_t	n/a		0xD1	The key device entry, part of an entry of the key table.

MAC_KEY_USAGE_ENTRY	array of keyUsageDesc riptor_t	n/a	0xD2	The key usage entry, part of an entry of the key table.
MAC_KEY_ENTRY	array of keyDescripto r_t	n/a	0xD3	The MAC key entry, an entry of the key table.
MAC_DEVICE_ENTRY	array of deviceDescri ptor_t	n/a	0xD4	The MAC device entry, an entry of the device table.
MAC_SECURITY_LEVEL_ENT RY	array of securityLeve lDescriptor_ t	n/a	0xD5	The MAC security level entry, an entry of the security level table.

# 5.2.7 Disassociate Reason

This value indicates whether the coordinator or the device itself is the reason for the disassociate procedure.

NAME	DESCRIPTION
MAC_DISASSOC_COORD	The coordinator wishes the device to disassociate.
MAC_DISASSOC_DEVICE	The device itself wishes to disassociate.

## 5.2.8 Scan Type

The following values indicate the type of scan.

NAME	DESCRIPTION
MAC_SCAN_ED	Energy detect scan. The device will tune to each channel and perform and energy measurement. The list of channels and their associated measurements will be returned at the end of the scan.
MAC_SCAN_ACTIVE	Active scan. The device tunes to each channel, sends a beacon request and listens for beacons. The PAN descriptors are returned at the end of the scan.
MAC_SCAN_PASSIVE	Passive scan. The device tunes to each channel and listens for beacons. The PAN descriptors are returned at the end of the scan.
MAC_SCAN_ORPHAN	Orphan scan. The device tunes to each channel and sends an orphan notification to try and find its coordinator. The status is returned at the end of the scan.
MAC_SCAN_ACTIVE_ENHANCED	Enhanced Active scan. In addition to Active scan, this command is also used by a device to locate a subset of all coordinators within its POS during an active scan. To use this value FEATURE_ENHANCED_BEACON has to be defined.

# 5.2.9 Special Address Values

The following special address values are used by the MAC.

NAME	DESCRIPTION
MAC_ADDR_USE_EXT	Short address value indicating extended address is used.
MAC_SHORT_ADDR_BROADCAST	Broadcast short address.
MAC_SHORT_ADDR_NONE	Short address when there is no short address.

# 5.2.10 Superframe Specification

The superframe specification is an unsigned 16-bit integer with the following contents:

Bits: 0-3	4-7	8-11	12	13	14	15
Beacon order	Superframe order	Final CAP slot	Battery life extension	Reserved	PAN coordinator	Association permit

The following macros are provided to help parse the superframe specification:

 ${\tt MAC\_SFS\_BEACON\_ORDER}$  (s) returns the beacon order.

MAC SFS SUPERFRAME ORDER(s) returns the superframe order.

MAC SFS FINAL CAP SLOT(s) returns the final CAP slot.

MAC SFS BLE(s) returns the battery life extension bit.

MAC SFS PAN COORDINATOR(s) returns the PAN coordinator bit.

 ${\tt MAC\_SFS\_ASSOCIATION\_PERMIT(s)} \ \ returns \ the \ association \ permit \ bit.$ 

## 5.2.11 PAN Descriptor

The PAN descriptor contains information about a network as received in a beacon frame. The PAN descriptor uses the following structure.

**coordAddress** – The address of the coordinator sending the beacon.

coordPanId - The PAN ID of the network.

**superframeSpec** – The superframe specification of the network. See Section 0.

logicalChannel – The logical channel of the network.

channelPage - The current channel page occupied by the network.

gtsPermit - TRUE if coordinator accepts GTS requests.

**linkQuality**— The link quality of the received beacon. The value ranges from 0x00 to 0xFF with the higher value indicating higher link quality. The distribution of link quality values is specific to the hardware implementation. See the chip data sheet for details.

timestamp – The time at which the beacon was received, in aUnitBackoffPeriod units.

securityFailure – Set to TRUE if there was an error in the security processing.

sec – Security parameters. See 2.3.5.

# 5.2.12 Pending Address Specification

The pending address specification is an 8-bit integer with the following format:

Bits: 0-2	3	4-6	7
Number of short addresses pending	Reserved	Number of extended addresses pending	Reserved

The following macros are provided the parse the pending address specification:

MAC\_PEND\_NUM\_SHORT (pendAddrSpec) returns the number of short addresses.

MAC PEND NUM EXT (pendAddrSpec) returns the number of extended addresses.

MAC\_PEND\_FIELDS\_LEN (pendAddrSpec) returns the length in bytes of the pending address fields in the beacon.

#### 5.3 Function Calls

## 5.3.1 MAC\_MImeAssociateReq()

## 5.3.1.1 Description

This function sends an associate request to a coordinator device. The application shall attempt to associate only with a PAN that is currently allowing association, as indicated in the results of the scanning procedure. In a beaconenabled PAN the beacon order must be set by using MAC\_MlmeSetReq() before making the call to MAC MlmeAssociateReq().

When the associate request is complete the MAC sends a MAC MLME ASSOCIATE CNF to the application.

## 5.3.1.2 Prototype

```
void MAC MlmeAssociateReq(macMlmeAssociateReq t *pData)
```

## 5.3.1.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macSec_t sec;
  uint8 logicalChannel;
  uint8 channelPage;
  sAddr_t coordAddress;
  uint16 coordPanId;
  uint8 capabilityInformation;
} macMlmeAssociateReq t;
```

sec – The security parameters for this message. See 2.3.5.

**logicalChannel** – The channel on which to attempt association. See Section 5.2.2.

**channelPage** – The channel page on which to attempt association. See Section 5.2.3.

coordAddress – Address of the coordinator with which to associate. See Section 2.3.1.

**coordPanId** – The identifier of the PAN with which to associate.

**capabilityInformation** – The operational capabilities of this device. See Section 5.2.3.

## 5.3.1.4 Return

None.

# 5.3.2 MAC\_MImeAssociateRsp()

#### 5.3.2.1 Description

This function sends an associate response to a device requesting to associate. This function must be called after receiving a MAC\_MLME\_ASSOCIATE\_IND. When the associate response is complete the MAC sends a MAC\_MLME\_COMM\_STATUS\_IND to the application to indicate the success or failure of the operation.

## 5.3.2.2 Prototype

```
uint8 MAC MlmeAssociateRsp(macMlmeAssociateRsp t *pData)
```

#### 5.3.2.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
 macSec t
                   sec;
 sAddrExt t
                 deviceAddress;
 uint16
                  assocShortAddress;
 uint8
                   status;
} macMlmeAssociateRsp t;
```

**sec** – Security parameters. See 2.3.5.

deviceAddress - The address of the device requesting association.

assocShortAddress - The short address allocated to the device. This value is only set if association is successful and the device requested a short address.

**status** – The status of the association attempt. See Section 2.3.2.

#### 5.3.2.4 Return

The status of the request, as follows:

NAME	DESCRIPTION	
MAC_SUCCESS	Operation successful.	
MAC_NO_RESOURCES	Memory allocation failure.	

# 5.3.3 MAC\_MImeDisassociateReq ()

# 5.3.3.1 Description

This function is used by an associated device to notify the coordinator of its intent to leave the PAN. It is also used by the coordinator to instruct an associated device to leave the PAN. When the disassociate procedure is complete the MAC sends a MAC\_MLME\_DISASSOCIATE  $\,$  CNF to the application.

# 5.3.3.2 Prototype

```
void MAC MlmeDisassociateReq(macMlmeDisassociateReq t *pData)
```

# 5.3.3.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
  macSec t
  sAddr t
                    deviceAddress;
  uint1\overline{6}
                    devicePanId;
  uint8
                    disassociateReason;
  bool
                     txIndirect;
} macMlmeDisassociateReq t;
```

**sec** – The security parameters for this message. See 2.3.5.

**deviceAddress** – The address of the device with which to disassociate.

**devicePanId** – The PAN ID of the device.

26

**disassociateReason** – The disassociate reason. See Section 0.

**txIndirect** – Set to TRUE if the disassociation notification command is to be sent indirectly.

#### 5.3.3.4 Return

None.

## 5.3.4 MAC\_MImeGetReq()

## 5.3.4.1 Description

This direct execute function retrieves an attribute value from the MAC PIB.

## 5.3.4.2 Prototype

uint8 MAC MlmeGetReq(uint8 pibAttribute, void \*pValue)

#### 5.3.4.3 Parameter Details

**pibAttribute** – The attribute identifier. See Section 0.

**pValue** – pointer to the attribute value. The data type for each attribute value is shown in Section 0.

## 5.3.4.4 Return

The status of the request, as follows:

NAME	DESCRIPTION	
MAC_SUCCESS	Operation successful.	
MAC_UNSUPPORTED_ATTRIBUTE	Attribute not found.	

## 5.3.5 MAC\_MImeGetSecurityReq()

# 5.3.5.1 Description

This direct execute function retrieves an attribute value from the MAC Secutity PIB. This function only exists when FEATURE\_MAC\_SECURITY is defined.

## 5.3.5.2 Prototype

uint8 MAC MlmeGetSecurityReq(uint8 pibAttribute, void \*pValue)

# 5.3.5.3 Parameter Details

**pibAttribute** – The attribute identifier. See Section 5.2.6.

**pValue** – pointer to the attribute value. The data type for each attribute value is shown in Section 5.2.6.

## 5.3.5.4 Return

The status of the request, as follows:

NAME	DESCRIPTION	
MAC_SUCCESS	Operation successful.	
MAC_UNSUPPORTED_ATTRIBUTE	Attribute not found.	

## 5.3.6 MAC\_MImeOrphanRsp()

## 5.3.6.1 Description

This function is called in response to an orphan notification from a peer device. This function must be called after receiving a MAC\_MLME\_ORPHAN\_IND. When the orphan response is complete the MAC sends a MAC MLME COMM STATUS IND to the application to indicate the success or failure of the operation.

## 5.3.6.2 Prototype

```
void MAC MlmeOrphanRsp(macMlmeOrphanRsp t *pData)
```

#### 5.3.6.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macSec_t sec;
  sAddrExt_t orphanAddress;
  uint16 shortAddress;
  bool associatedMember;
} macMlmeOrphanRsp t;
```

**sec** – The security parameters for this message. See 2.3.5.

orphanAddress – The extended address of the device sending the orphan notification.

**shortAddress** – The short address of the orphaned device. This value is only used if associatedMember is TRUE. The value MAC\_ADDR\_USE\_EXT indicates the extended address is used instead of the short address.

**associatedMember** – Set to TRUE if the orphaned device is associated with this coordinator.

## 5.3.6.4 Return

None.

## 5.3.7 MAC\_MImePollReq()

## 5.3.7.1 Description

This function is used to request pending data from the coordinator. When the poll request is complete the MAC sends a MAC\_MLME\_POLL\_CNF to the application. If a data frame of nonzero length is received from the coordinator the MAC sends a MAC\_MLME\_POLL\_CNF with status MAC\_SUCCESS and then sends a MAC\_MCPS\_DATA\_IND with the data.

#### 5.3.7.2 Prototype

```
void MAC_MlmePollReq(macMlmePollReq_t *pData)
```

## 5.3.7.3 Parameter Details

Parameters are passed using the following structure:

**coordAddress** – The address of the coordinator device to poll.

coordPanId - The PAN ID of the coordinator.

**sec** – The security parameters for this message. See 2.3.5.

#### 5.3.7.4 Return

None.

### 5.3.8 MAC\_MImeResetReq()

This direct execute function resets the MAC. This function must be called once at system startup with setDefaultPib set to TRUE before any other function in the management API is called.

## 5.3.8.1 Description

### 5.3.8.2 Prototype

uint8 MAC MlmeResetReq(bool setDefaultPib)

#### 5.3.8.3 Parameter Details

**setDefaultPib** – Set to TRUE to reset the MAC PIB to its default values.

#### 5.3.8.4 Return

Returns MAC\_SUCCESS always.

## 5.3.9 MAC\_MImeScanReq()

## 5.3.9.1 Description

This function initiates an energy detect, active, passive, or orphan scan on one or more channels. An energy detect scan measures the peak energy on each requested channel. An active scan sends a beacon request on each channel and then listening for beacons. A passive scan is a receive-only operation that listens for beacons on each channel. An orphan scan is used to locate the coordinator with which the scanning device had previously associated. When a scan operation is complete the MAC sends a MAC MLME SCAN CNF to the application.

For active or passive scans the application sets the maxResults parameter the maximum number of PAN descriptors to return. If maxResults is greater than zero then the application must also set result.panDescriptor to point to a buffer of size maxResults \* sizeof(macPanDesc\_t) to store the results of the scan. The application must not access or deallocate this buffer until it receives a MAC MLME SCAN CNF. The MAC will store up to maxResults PAN descriptors and ignore duplicate beacons.

An alternative way to get results for an active or passive scan is to set maxResults to zero or set PIB attribute MAC\_AUTO\_REQUEST to FALSE. Then the MAC will not store results but rather send a MAC\_MLME\_BEACON\_NOTIFY\_IND for each beacon received. The application will not need to supply any memory to store the scan results but the MAC will not filter out duplicate beacons.

For energy detect scans the application must set result.energyDetect to point to a buffer of size 18 bytes to store the results of the scan. The application must not access or deallocate this buffer until is receives a MAC MLME SCAN CNF.

An energy detect, active or passive scan may be performed at any time if a scan is not already in progress. However a device cannot perform any other MAC management operation or send or receive MAC data until the scan is complete.

### 5.3.9.2 Prototype

```
void MAC MlmeScanReq(macMlmeScanReq t *pData)
```

#### 5.3.9.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
 uint32
                   scanChannels;
 uint8
                   scanType;
 uint8
                   scanDuration;
 uint8
                   channelPage;
 uint8
                   maxResults;
                  permitJoining;
 bool
 uint8
                   linkQuality;
 uint8
                   percentFilter;
 macSec t
                   sec;
 union
    uint8
                  *pEnergyDetect;
    macPanDesc t *pPanDescriptor;
  } result;
} macMlmeScanReq t;
```

scanChannels – Bit mask indicating which channels to scan. See Section 5.2.1.

scanType - The type of scan. See Section 0.

scanDuration – The exponent used in the scan duration calculation. The scan duration is calculated as follows:

```
scan duration (ms) = (aBaseSuperframeDuration ms) * (2 scanDuration + 1)
```

Valid range is 0-14.

**channelPage** – The channel page on which to perform the scan. See Section 5.2.3.

**maxResults** – The maximum number of PAN descriptor results to return for an active or passive scan. This parameter is ignored for energy detect and orphan scans.

**permitJoining** – For enhanced beacon request, only devices with permitJoining attribute set will respond to the enhanced beacon request if the request contains permitJoining set to 1. This can only be used if FEATURE\_ENHANCED\_BEACON is defined.

**linkQuality** – For enhanced beacon request, the receiving device, shall respond (if supporting enhanced beacon request/ enhanced beacon) to the enhanced beacon request if the mpduLinkQuality is equal or higher than this value (where higher values represent higher quality links). This can only be used if FEATURE\_ENHANCED\_BEACON has been defined.

**percentFilter** – For enhanced beacon request, if the Include Percent filter bit (b2) is set, a 1-octet Percent Filter follows the Link Quality field (if present). It contains a scaled value from 0x00 to 0x64 representing zero to 100 percent probability for a given device to respond to the enhanced beacon request. The receiving device shall then randomly determine if it is to respond to the enhanced beacon request (if supporting enhanced beacon request/enhanced beacon) based on meeting this probability. For example if the probability is set to 10% then 1 of 10 devices would randomly be expected to respond. This can only be used if FEATURE\_ENHANCED\_BEACON has been defined.

sec – The security parameters for orphan scan. See 2.3.5.

**result.pEnergyDetect** – Pointer to a buffer to store energy detect measurements. This value is only used for energy detect scans.

**result.pPanDescriptor** – Pointer to a buffer to store PAN descriptors. This value is only used for active and passive scans.

# 5.3.9.4 Return

None.

## 5.3.10 MAC\_MImeSetReq()

This direct execute function sets an attribute value in the MAC PIB.

## 5.3.10.1 Description

## 5.3.10.2 Prototype

uint8 MAC MlmeSetReq(uint8 pibAttribute, void \*pValue)

### 5.3.10.3 Parameter Details

**pibAttribute** – The attribute identifier. See Section 0.

**pValue** – pointer to the attribute value. The data type for each attribute value is shown in Section 0.

#### 5.3.10.4 Return

The status of the request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_UNSUPPORTED_ATTRIBUTE	Attribute identifier unsupported.
MAC_INVALID_PARAMETER	Value out of range.
MAC_READ_ONLY	Attribute is read-only.

### 5.3.11 MAC\_MImeSetSecurityReq()

This direct execute function sets an attribute value in the MAC Security PIB. This function only exists when FEATURE\_MAC\_SECURITY is defined.

## 5.3.11.1 Description

### **5.3.11.2 Prototype**

uint8 MAC MlmeSetSecurityReq(uint8 pibAttribute, void \*pValue)

### 5.3.11.3 Parameter Details

pibAttribute – The attribute identifier. See Section 5.2.6.

**pValue** – pointer to the attribute value. The data type for each attribute value is shown in Section 5.2.6.

#### 5.3.11.4 Return

The status of the request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_UNSUPPORTED_ATTRIBUTE	Attribute identifier unsupported.
MAC_INVALID_PARAMETER	Value out of range.

## 5.3.12 MAC\_MImeStartReq()

## 5.3.12.1 Description

This function is called by a coordinator or PAN coordinator to start or reconfigure a network. Before starting a network the device must have set its short address. A PAN coordinator sets the short address by setting the attribute MAC SHORT ADDRESS. A coordinator sets the short address through association.

When parameter panCoordinator is TRUE, the MAC automatically sets attributes MAC\_PAN\_ID and MAC\_LOGICAL\_CHANNEL to the panId and logicalChannel parameters. If panCoordinator is FALSE, these parameters are ignored (they would already be set through association).

The parameter beaconOrder controls whether the network is beacon-enabled or non beacon-enabled. For a beacon-enabled network this parameter also controls the beacon transmission interval.

When the operation is complete the MAC sends a MAC MLME START CNF to the application.

## **5.3.12.2 Prototype**

```
void MAC MlmeStartReq(macMlmeStartReq t *pData)
```

#### 5.3.12.3 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
                  startTime;
 uint32
 uint16
                  panId;
                  logicalChannel;
 uint8
                  channelPage;
 uint8
                 beaconOrder;
 uint8
                superframeOrder;
 uint8
 bool
                  panCoordinator;
                  batteryLifeExt;
 bool
 bool
                  coordRealignment;
                  realignSec;
 macSec t
                  beaconSec;
 macSec t
} macMlmeStartReq_t;
```

**startTime** – The time to begin transmitting beacons relative to the received beacon. This parameter is ignored if the device is a PAN coordinator or when starting a non beacon-enabled network. The time is specified in symbol periods and is rounded to the nearest *aUnitBackoffPeriod* symbol periods.

panId - The PAN ID to use. This parameter is ignored if panCoordinator is FALSE.

**logicalChannel** – The logical channel to use. See Section 5.2.2. This parameter is ignored if panCoordinator is FALSE.

**channelPage** — The channel page to use. See Section 5.2.3. This parameter is ignored if panCoordinator is FALSE.

**beaconOrder** – The exponent used to calculate the beacon interval. The beacon interval is calculated as follows:

interval (ms) = (aBaseSuperframeDuration ms) \* 2 beaconOrder

Valid range is 0-14. For a non beacon-enabled network set to 15.

**superframeOrder** – The exponent used to calculate the superframe duration. The superfame duration is calculated with the same equation as the beacon interval. The superframeOrder must be less than or equal to the

beaconOrder. It can also be set to 15 to configure a network that sends a beacon but has no CAP. For a non beacon-enabled network this value is ignored.

**panCoordinator** – Set to TRUE to start a network as PAN coordinator.

**batteryLifeExt** – If this value is TRUE, the receiver is disabled after MAC\_BATT\_LIFE\_EXT\_PERIODS full backoff periods following the inter frame spacing period of the beacon frame. This parameter is ignored for non-beacon enabled networks.

**coordRealignment** – Set to TRUE to transmit a coordinator realignment prior to changing the superframe configuration.

**realignSec** – Security parameters for the coordinator realignment frame. See 2.3.5. This parameter is ignored if coordRealignment is FALSE.

**beaconSec** – Security parameters for the beacon frame. See 2.3.5.

#### 5.3.12.4 Return

None.

## 5.3.13 MAC\_MImeSyncReq()

#### 5.3.13.1 Description

This function requests the MAC to synchronize with the coordinator by acquiring and optionally tracking its beacons. Synchronizing with the coordinator is recommended before associating in a beacon-enabled network. If the beacon could not be located on its initial search or during tracking, the MAC sends a MAC\_MLME\_SYNC\_LOSS\_IND to the application with status MAC\_BEACON\_LOSS.

Before calling this function the application must set PIB attributes MAC\_BEACON\_ORDER, MAC\_PAN\_ID and either MAC\_COORD\_SHORT\_ADDRESS or MAC\_COORD\_EXTENDED\_ADDRESS to the address of the coordinator with which to synchronize.

The application may wish to set PIB attribute MAC\_AUTO\_REQUEST to FALSE before calling this function. Then when the MAC successfully synchronizes with the coordinator it will send the application a MAC\_MLME\_BEACON\_NOTIFY\_IND. After receiving the event the application may set MAC\_AUTO\_REQUEST to TRUE to stop receiving beacon notifications.

This function is only applicable to beacon-enabled networks.

## **5.3.13.2 Prototype**

```
void MAC MlmeSyncReq(macMlmeSyncReq t *pData)
```

#### 5.3.13.3 Parameter Details

Parameters are passed using the following structure:

logicalChannel – The logical channel to use. See Section 5.2.2.

channelPage - The channel page to use. See Section 5.2.3.

**trackBeacon** – Set to TRUE to continue tracking beacons after synchronizing with the first beacon. Set to FALSE to only synchronize with the first beacon. If already tracking beacons, set to FALSE to stop tracking.

#### 5.3.13.4 Return

None.

#### 5.4 Callback Function Events

### 5.4.1 MAC\_MLME\_ASSOCIATE\_IND

### 5.4.1.1 Description

This event is sent to the application when the MAC receives an associate request from another device. The application must call MAC\_MlmeAssociateRsp() after receiving this event. This event will only be sent to FFD applications which set PIB attribute MAC ASSOCIATION PERMIT to TRUE.

### 5.4.1.2 Parameter Details

Parameters are passed in the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddrExt_t deviceAddress;
  uint8 capabilityInformation;
  macSec_t sec;
} macMlmeAssociateInd t;
```

**hdr** – The event header.

**deviceAddress** – The address of the device requesting association.

capabilityInformation – The operational capabilities of the device requesting association. See Section 5.2.3.

**sec** – The security parameters for this message. See 2.3.5.

## 5.4.2 MAC\_MLME\_ASSOCIATE\_CNF

#### 5.4.2.1 Description

This event is sent to the application in response to a MAC\_MlmeAssociateReq(). The event indicates the status of the associate attempt. If the associate was successful and a short address was requested then the short address is included in the event. Otherwise the short address parameter is not valid.

#### 5.4.2.2 Parameter Details

Parameters are passed in the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  uint16 assocShortAddress;
  macSec_t sec;
} macMlmeAssociateCnf_t;
```

hdr.status – The status of the associate attempt. Set to MAC\_SUCCESS if successful. Otherwise, the status parameter indicates an error code received from the peer device (see Section 2.3.2) or one of the following error codes generated internally by the MAC:

NAME	DESCRIPTION
MAC_CHANNEL_ACCESS_FAILURE	Data transmission failed because of congestion on the channel.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_ACK	No acknowledgement was received from the peer device.
MAC_NO_DATA	No associate response was received from the peer device.

assocShortAddress – If successful, the short address allocated to this device.

sec – The security parameters for this message. See 2.3.5.

### 5.4.3 MAC\_MLME\_DISASSOCIATE\_IND

### 5.4.3.1 Description

This event is sent to the application to indicate that the device has been disassociated from the network.

#### 5.4.3.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddrExt_t deviceAddress;
  uint8 disassociateReason;
  macSec_t sec;
} macMlmeDisassociateInd t;
```

deviceAddress – The address of the device sending the disassociate command.

**disassociateReason** – The disassociate reason. See Section 0.

sec – The security parameters for this message. See 2.3.5.

### 5.4.4 MAC MLME DISASSOCIATE CNF

### 5.4.4.1 Description

This event is sent to the application in response to a MAC\_MlmeDisassociateReq(). The event indicates the status of the disassociate attempt.

### 5.4.4.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddr_t deviceAddress;
  uint16 panId;
} macMlmeDisassociateCnf_t;
```

**hdr.status** – The status of the disassociate attempt, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_CHANNEL_ACCESS_FAILURE	Data transmission failed because of congestion on the channel.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_ACK	No acknowledgement was received from the peer device.
MAC_TRANSACTION_EXPIRED	Transmission failed because the peer device did not respond before the transaction expired.
MAC_TRANSACTION_OVERFLOW	MAC data buffers are full.

**deviceAddress** – The address of the device that has either requested disassociation or been instructed to disassociate by its coordinator.

**panId** – The PAN ID of the device that has either requested disassociation or been instructed to disassociate by its coordinator.

## 5.4.5 MAC MLME BEACON NOTIFY IND

### 5.4.5.1 Description

This event is sent to the application when the MAC receives a beacon frame and the beacon contains payload data or attribute MAC\_AUTO\_REQUEST is set to FALSE. The event also contains an LQI measurement and the time the beacon was received in addition to the beacon information.

#### 5.4.5.2 Parameter Details

Parameters are passed in the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  uint8 bsn;
  macPanDesc_t *pPanDesc;
  uint8 pendAddrSpec;
  uint8 *pAddrList;
  uint8 sduLength;
  uint8 *pSdu;
} macMlmeBeaconNotifyInd t;
```

**bsn** – The beacon sequence number.

**pPanDesc** – The PAN descriptor for the received beacon. See Section 0.

**pendAddrSpec** – The beacon pending address specification. See Section 5.2.12.

**pAddrList** – The list of device addresses for which the sender of the beacon has data. The length of the list can be determined with macro MAC PEND FIELDS LEN(), see Section 5.2.12.

**sduLength** – The number of bytes in the beacon payload of the beacon frame.

**pSdu** – The beacon payload.

## 5.4.6 MAC\_MLME\_ORPHAN\_IND

### 5.4.6.1 Description

This event is sent to the application when the MAC receives an orphan notification from another device. The application must call MAC\_MlmeOrphanRsp() after receiving this event. This event will only be sent to FFD applications.

#### 5.4.6.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddrExt_t orphanAddress;
  macSec_t sec;
} macMlmeOrphanInd_t;
```

orphanAddress – The address of the orphaned device.

**sec** – Security parameters for this message. See 2.3.5.

## 5.4.7 MAC MLME SCAN CNF

# 5.4.7.1 Description

This event is sent to the application in response to a MAC\_MlmeScanReq() when the scan operation is complete. The event indicates the status of the scan. For an energy detect scan a list of energy measurements is returned. For an active or passive scan a list of PAN descriptors is returned.

#### 5.4.7.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
 macEventHdr t hdr;
 uint8
                scanType;
 uint8
                channelPage;
 uint32
                 unscannedChannels;
 uint8
                 resultListSize;
 union
                 *pEnergyDetect;
   uint8
   macPanDesc t *pPanDescriptor;
 } result;
} macMlmeScanCnf t;
```

hdr.status – The status of the scan request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_BEACON	The active or passive scan failed because no beacons were received or the orphan scan failed because no coordinator realignment was received.

**scanType** – The type of scan requested. See Section 0.

**channelPage** – The channel page of the scan. See Section 5.2.3.

unscannedChannels – Bit mask of channels that were not scanned. See Section 5.2.2.

resultListSize — The number of elements returned in the results list. This value is not used if scanType is MAC SCAN ORPHAN.

**result.pEnergyDetect** – The list of energy measurements, one for each channel scanned. This value is only used if scanType is MAC\_SCAN\_ED. The distribution of energy values is specific to the hardware implementation. See the hardware data sheet for details.

**result.pPanDescriptor** – The list of PAN descriptors, one for each beacon found. See Section 0. This value is only used if the scanType is MAC\_SCAN\_ACTIVE or MAC\_SCAN\_PASSIVE.

### 5.4.8 MAC\_MLME\_START\_CNF

#### 5.4.8.1 Description

This event is sent to the application in response to a  $MAC\_MlmeStartReq()$ . The event indicates the status of the start request.

#### 5.4.8.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
   macEventHdr_t hdr;
} macMlmeStartCnf t;
```

**hdr.status** – The status of start request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_SHORT_ADDRESS	The device does not have a short address.
MAC_SUPERFRAME_OVERLAP	The beacon start time overlapped the coordinator transmission time.

## 5.4.9 MAC\_MLME\_SYNC\_LOSS\_IND

# 5.4.9.1 Description

This event is sent to the application when the MAC loses synchronization with the coordinator or has a PAN ID conflict. The status indicates the reason for the event.

## 5.4.9.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  uint16 panId;
  uint8 logicalChannel;
  uint8 channelPage;
  macSec_t sec;
} macMlmeSyncLossInd t;
```

hdr.status – The reason that synchronization was lost, as follows:

NAME	DESCRIPTION
MAC_BEACON_LOSS	The beacon was lost following a synchronization request.
MAC_PAN_ID_CONFLICT	A PAN identifier conflict has been detected.
MAC_REALIGNMENT	A coordinator realignment command has been received.

**panId** – The PAN ID of the realignment.

logicalChannel – The logical channel of the realignment.

**channelPage** – The channel page of the realignment.

**sec** – Security parameters for this message. See 2.3.5.

### 5.4.10 MAC\_MLME\_POLL\_CNF

#### 5.4.10.1 Description

This event is sent to the application in response to a MAC\_MlmePollReq(). If the poll request was successful and data was received the status is set to MAC\_SUCESS. If the poll request was successful and no data was received the status is set to MAC\_NO\_DATA. Other status values indicate failure as described below.

### 5.4.10.2 Parameter Details

Parameters are passed using the following structure: typedef struct

```
{
  macEventHdr_t hdr;
} macMlmePollCnf t;
```

hdr.status – The status of the poll request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_CHANNEL_ACCESS_FAILURE	Failed because of congestion on the channel.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_ACK	No acknowledgement was received from the peer device.
MAC_NO_DATA	No data was received from the peer device.

## 5.4.11 MAC\_MLME\_COMM\_STATUS\_IND

## 5.4.11.1 Description

This event is sent to the application for various reasons. It indicates the status of a MAC\_MlmeAssociateRsp() or MAC\_MlmeOrphanRsp(). It also indicates the MAC has received a secure frame that generated an error during security processing.

## 5.4.11.2 Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddr_t srcAddr;
  sAddr_t dstAddr;
  uint16 panId;
  uint8 reason;
  macSec_t sec;
} macMlmeCommStatusInd_t;
```

**hdr.status** – The status for this event, as follows:

NAME	DESCRIPTION
MAC_CHANNEL_ACCESS_FAILURE	The response frame failed because of activity on the channel.
MAC_FRAME_TOO_LONG	The response frame or received frame is too long to be processed by the MAC.
MAC_INVALID_PARAMETER	The API function parameter is out of range.
MAC_NO_ACK	The response frame failed because no acknowledgement was received.

MAC_TRANSACTION_EXPIRED	The response frame failed because the peer device did not respond before the transaction expired or was purged.
MAC_TRANSACTION_OVERFLOW	The response frame failed because MAC data buffers are full.

**srcAddr** – The source address associated with the event.

**dstAddr** – The destination address associated with the event.

**panId** – The PAN ID associated with the event.

**reason** – The reason the event was generated. This parameter is not defined in [1] but may be used to distinguish between the different uses of the event. Values are as follows:

NAME	DESCRIPTION
MAC_COMM_ASSOCIATE_RSP	Event sent in response to MAC_AssociateRsp().
MAC_COMM_ORPHAN_RSP	Event sent in response to MAC_OrphanRsp().
MAC_COMM_RX_SECURE	Event sent as a result of receiving a secure frame.

**sec** – Security parameters for this message. See 2.3.5.

## 5.4.12 MAC\_MLME\_POLL\_IND

## 5.4.12.1 Description

This event is sent to the application whenever a data Request is received. If the frame was ack'ed with pending, the indirect frame is searched and frame sent to the requester. If no frame is found, a zero length data frame is sent. The MAC\_MLME\_POLL\_IND is sent regardless of acknowledge pending status. The upper layer can use the noRsp flag to determine whether to respond to the poll indication with MAC\_McpsDataReq() or not. If noRsp is set to FALSE, the upper layer can respond to the poll indication with MAC\_McpsDataReq(). Parameter Details

Parameters are passed using the following structure:

```
typedef struct
{
  macEventHdr_t hdr;
  sAddr_t srcShortAddr;
  uint16 srcPanId;
  uint8 noRsp;
} macMlmePollInd t;
```

srcShortAddr - The short address of the device requesting data.

srcPanId - The PAN ID of the device requesting data.

**noRsp** — The noRsp flag is set, when MAC\_MLME\_POLL\_IND is generated, to simply indicate that a received data request frame was acknowledged and the indirect frame was already sent to the requester. When noRsp is cleared, the received data request frame was acknowledged with pending bit set and the upper layer needs to respond to the poll indication with MAC\_McpsDataReq().

## 6. Extension Interface

### 6.1 Introduction

The extension interface provides an API for additional software features that are not defined by the 802.15.4 specification, such as power management.

### 6.2 Common Constants and Structures

### 6.2.1 Power Mode

The following values indicate the power mode of the MAC. The difference between "lite" and "deep" sleep modes is dependent on the hardware being used. In general, the wakeup time for deep sleep is longer than lite sleep. See the chip data sheet for details.

NAME	DESCRIPTION
MAC_PWR_ON	MAC and radio hardware is powered on.
MAC_PWR_SLEEP_LITE	MAC and radio hardware are partially powered off.
MAC_PWR_SLEEP_DEEP	MAC and radio hardware are fully powered off.

#### 6.3 Function Calls

# 6.3.1 MAC\_PwrOffReq()

### 6.3.1.1 Description

This function requests the MAC to power off the radio hardware and go to sleep. If the MAC is able to power off it will execute its power off procedure and return MAC\_SUCCESS. If the MAC is unable to sleep it will return MAC\_DENIED. The MAC is unable to sleep when it is executing certain procedures, such as a scan, data request, or association. If this function is called when the MAC is already in sleep mode it will return MAC\_SUCCESS but do nothing.

When the MAC is in sleep mode the application must not call any MAC API function besides power management functions until the MAC is awake.

#### 6.3.1.2 Prototype

uint8 MAC PwrOffReq(uint8 mode)

#### 6.3.1.3 Parameter Details

mode – The desired low power mode, either MAC\_PWR\_SLEEP\_LITE or MAC\_PWR\_SLEEP\_DEEP. See Section 6.2.1.

### 6.3.1.4 Return

The status of the request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful; the MAC is powered off.
MAC_DENIED	The MAC was not able to power off.

# 6.3.2 MAC\_PwrOnReq()

## 6.3.2.1 Description

This function requests the MAC to power on the radio hardware and wake up. The function powers on the radio hardware, blocking until completion.

### 6.3.2.2 Prototype

void MAC PwrOnReq(void)

#### 6.3.2.3 Parameter Details

None.

### 6.3.2.4 Return

None.

# 6.3.3 MAC\_PwrMode()

# 6.3.3.1 Description

This function returns the current power mode of the MAC.

## 6.3.3.2 Prototype

uint8 MAC PwrMode(void)

#### 6.3.3.3 Parameter Details

None.

# 6.3.3.4 Return

NAME	DESCRIPTION
MAC_PWR_ON	MAC and radio hardware is powered on.
MAC_PWR_SLEEP_LITE	MAC and radio hardware are partially powered off.
MAC_PWR_SLEEP_DEEP	MAC and radio hardware are fully powered off.

# 6.3.4 MAC\_PwrNextTimeout()

## 6.3.4.1 Description

This function returns the next MAC timer expiration in *aUnitBackoffPeriod* units. If no timer is running it returns zero.

# 6.3.4.2 Prototype

uint32 MAC PwrNextTimeout(void)

# 6.3.4.3 Parameter Details

None.

#### 6.3.4.4 Return

The next MAC timer expiration in *aUnitBackoffPeriod* units or zero if no timer is running.

## 6.3.5 MAC\_RandomByte()

### 6.3.5.1 Description

This function returns a random byte from the MAC random number generator.

## 6.3.5.2 Prototype

uint8 MAC RandomByte(void)

#### 6.3.5.3 Parameter Details

None.

#### 6.3.5.4 Return

A random byte.

#### 6.3.6 MAC SrcMatchEnable

### 6.3.6.1 Description

This function enables/disables Autopend and source address matching.

### 6.3.6.2 Prototype

```
uint8 MAC SrcMatchEnable ( void )
```

#### 6.3.6.3 Parameter Details

None.

### 6.3.6.4 Return

None.

### 6.3.7 MAC\_SrcMatchAddEntry

### 6.3.7.1 Description

This function adds a short or extended address to source address table which can be used to configure the frame pending subfield of the acknowledgment frame.

## 6.3.7.2 Prototype

```
uint8 MAC_SrcMatchAddEntry ( sAddr_t *addr, uint16 panID )
```

### 6.3.7.3 Parameter Details

**addr** – A pointer to sAddr\_t which contains addrMode and a union of a short 16-bit MAC address or an extended 64-bit MAC address to be added to the source address table.

**panID** – Device PAN ID. It is only used when the addr is using short address.

#### 6.3.7.4 Return

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful
MAC_NO_RESOURCES	Address table is full.
MAC_DUPLICATED_ENTRY	The address is already in the source address table
MAC_INVALID_PARAMETER	Invalid parameter

### 6.3.8 MAC SrcMatchDeleteEntry

### 6.3.8.1 Description

This function deletes a short or extended address from source address table which can be used to configure the frame pending subfield of the acknowledgment frame.

## 6.3.8.2 Prototype

```
uint8 MAC SrcMatchDeleteEntry ( sAddr t *addr, uint16 panID )
```

#### 6.3.8.3 Parameter Details

**addr** – A pointer to sAddr\_t which contains addrMode and a union of a short 16-bit MAC address or an extended 64-bit MAC address to be added to the source address table.

**panID** – Device PAN ID. It is only used when the addr is using short address.

#### 6.3.8.4 Return

NAME	DESCRIPTION
MAC_SUCCESS	Operation successful.
MAC_INVALID_PARAMETER	Address to be deleted cannot be found in the source address table

## 6.3.9 MAC\_SrcMatchAckAllPending

## 6.3.9.1 Description

This function enables/disables acknowledging all packets with pending bit set. The application normally enables it when adding new entries to the source address table fails due to the table is full, or disables it when more entries are deleted and the table has empty slots.

### 6.3.9.2 Prototype

```
void MAC SrcMatchAckAllPending ( uint8 option )
```

### 6.3.9.3 Parameter Details

**option** – acknowledging all packets with pending field set (TRUE) or acknowledging all packets with pending field cleared (FALSE).

### 6.3.9.4 Return

None.

# 6.3.10 MAC\_SrcMatchCheckAllPending

### 6.3.10.1 Description

This function checks if acknowledging all packets with pending bit set is enabled.

### **6.3.10.2** Prototype

```
uint8 MAC SrcMatchCheckAllPending ( void )
```

## 6.3.10.3 Parameter Details

None

#### 6.3.10.4 Return

NAME	DESCRIPTION
MAC_AUTOACK_PENDING_ALL_ON	Pending all is enabled
MAC_AUTOACK_PENDING_ALL_OFF	Pending all is disabled

# 6.3.11 MAC\_ResumeReq()

### 6.3.11.1 Description

This function requests the MAC to restore a previous radio configuration and to resume operations after they may have been suspended by a call to MAC\_YieldReq().

## 6.3.11.2 Prototype

void MAC\_PwrOffReq(void)

#### 6.3.11.3 Parameter Details

None

#### 6.3.11.4 Return

None

# 6.3.12 MAC\_YieldReq()

### 6.3.12.1 Description

This function requests the MAC to yield and suspend radio operations so that another 802.15.4 MAC can use it. If the MAC is able to yield, it will execute its radio suspend procedure and return MAC\_SUCCESS. If the MAC is unable to yield, it will return MAC\_DENIED. The MAC is unable to yield when it is executing certain procedures, such as a scan, data request, or association. If this function is called after the MAC has already suspended radio operations, it will return MAC SUCCESS.

After the MAC has yielded, the application should not call any MAC API function before calling MAC\_ResumeReq() or the radio configuration may not be as expected. If the radio will be used by a non-802.15.4 MAC, then the other MAC must restore the 802.15.4 configuration of the radio after using it.

#### **6.3.12.2** Prototype

uint8 MAC\_PwrOffReq(void)

#### 6.3.12.3 Parameter Details

None

### 6.3.12.4 Return

The status of the request, as follows:

NAME	DESCRIPTION
MAC_SUCCESS	The MAC has suspended radio operation.
MAC_DENIED	The MAC was not able to yield.

## 6.3.13 macUpdatePanId()

# 6.3.13.1 Description

This function updates device table entry and PIB with the new PAN ID.

### **6.3.13.2** Prototype

uint8 macUpdatePanId(uint16 panId)

#### 6.3.13.3 Parameter Details

panId - the new Pan Id

#### 6.3.13.4 Return

None

### 6.4 Non Volatile Functions

When the compiler option NV\_RESTORE is turned on, the coordinator and end device over the air and securioty settings are stored to non-volatile memory. This section describes the API details.

### 6.4.1 MAC\_NvDeviceStartup()

# 6.4.1.1 Description

This function saves over the air specific End Device parameters at device Startup in non volatile memory.

## 6.4.1.2 Prototype

void MAC NvDeviceStartup( void )

#### 6.4.1.3 Parameter Details

None.

#### 6.4.1.4 Return

None.

## 6.4.2 MAC\_NvDeviceSave()

### 6.4.2.1 Description

This function saves over the air specific End Device parameters once the device has associated with a parent. At this point macNvInitializedFlag is also set in non-volatile memory to indicate that the end device was associated with a coordinator once.

### 6.4.2.2 Prototype

void MAC NvDeviceSave(void \*pMacDeviceTable, void \*pMacKeyTable )

### 6.4.2.3 Parameter Details

NAME	DESCRIPTION
pMacDeviceTable	Pointer to device table
pMacKeyTable	Pointer to key table

### 6.4.2.4 Return

None.

## 6.4.3 MAC\_NvDeviceRestore()

## 6.4.3.1 Description

This function restores the previous end device parameters from nonvolatile memory.

# 6.4.3.2 Prototype

uint16	*pmacDevShortAddress,
uint8	*pmacNumSecuredDevices,
void	*pdeviceDescriptor,
void	*pkeyDescriptor)

### 6.4.3.3 Parameter Details

None.

### 6.4.3.4 Return

NAME	DESCRIPTION
pmacExtAddr	Pointer to the Extended Address
pmacPanID	Pointer to the PAN ID
pmacCoordShortAddress	Pointer to the Coordinator Short Address
pmacDevShortAddress	Pointer to the Device Short Address
pmacNumSecuredDevices	Pointer to the mumber of secured devices
pdeviceDescriptor	Pointer to the device descriptor
pkeyDescriptor	Pointer to the key descriptor
pmacExtAddr	Pointer to the Extended Address

# 6.4.4 MAC\_NvCoordStartup()

## 6.4.4.1 Description

Save the network specific Coordinator parameters at device Startup in NV.

### 6.4.4.2 Prototype

void MAC NvCoordStartup( void )

## 6.4.4.3 Parameter Details

None.

#### 6.4.4.4 Return

None.

# 6.4.5 MAC\_NvCoordSave()

# 6.4.5.1 Description

This function saves over the air specific parameters of the Coordinator in nonvolatile memory.

#### 6.4.5.2 Prototype

# 6.4.5.3 Parameter Details

NAME	DESCRIPTION
pDeviceRecord	Pointer to the device Record

numofDevices	Number of devices associated with the coordinator
maxNumofDevices	Maximum number of devices supported
pMacDeviceTable	Pointer to device table
pMacKeyTable	Pointer to key table

#### 6.4.5.4 Return

None.

## 6.4.6 MAC\_NvCoordRestore()

### 6.4.6.1 Description

This function restores the Coordinator from NV

## 6.4.6.2 Prototype

```
6.4.6.2 Prototype
void MAC_NvCoordRestore(sAddrExt_t uint16 *pmacExtAdd *pmacPanID,
                                          *pmacExtAddr,
                          deviceRecord *pDeviceRecord,
                                    *pnumofDevices,
                          uint8
                          uint32
                                          maxNumofDevices,
                          uint8
                                          *pmacNumSecuredDevices,
                           void
                                          *pdeviceDescriptor,
                          void
                                          *pkeyDescriptor )
```

## 6.4.6.3 Parameter Details

NAME	DESCRIPTION
maxNumofDevices	Number of devices supported by the Application

#### 6.4.6.4 Return

NAME	DESCRIPTION	
pmacExtAddr	Pointer to the extended Address	
pmacPanID	Pointer to the PAN ID	
pDeviceRecord	Pointer to the device record table	
pnumofDevices	Pointer to the Number of devices	
pmacNumSecuredDevices	Pointer to the number of secured devices	
pdeviceDescriptor	Pointer to the device descriptor	
pkeyDescriptor	Pointer to the key descriptor	

### 6.5 Callback Function Events

# 6.5.1 MAC\_PWR\_ON\_CNF

## 6.5.1.1 Description

This event is currently unused.

## 7. Callback Interface

# 7.1.1 MAC\_CbackEvent()

## 7.1.1.1 Description

This callback function sends MAC events to the application.

The application must implement this function. A typical implementation of this function would allocate an OSAL message, copy the event parameters to the message, and send the message to the application's OSAL event handler. This function may be executed from task or interrupt context and therefore must be reentrant.

## 7.1.1.2 Prototype

```
void MAC_CbackEvent(macCbackEvent_t *pData)
```

#### 7.1.1.3 Parameter Details

Parameters are passed using the following union. There is a data type for each event.

```
typedef struct
 uint8
         event;
 uint8
         status;
} macEventHdr t;
typedef union
 macEventHdr t
                         hdr;
 macMlmeDisassociateInd t disassociateInd;
 macMlmeDisassociateCnf t disassociateCnf;
 macMlmeBeaconNotifyInd t beaconNotifyInd;
 macMlmeDedotModeTryTima_b
macMlmeOrphanInd_t
macMlmeScanCnf_t
macMlmeScanCnf_t
macMlmeStartCnf_t
macMlmeSyncLossInd_t
macMlmePollCnf_t
pollCnf;
 macMcpsDataCnf t
                          dataCnf;
 macMcpsDataInd t
                         dataInd;
 macMcpsPurgeCnf t
                         purgeCnf;
} macCbackEvent t;
```

The hdr.event field is set to the following values:

NAME	DESCRIPTION
MAC_MLME_ASSOCIATE_IND	Associate indication.
MAC_MLME_ASSOCIATE_CNF	Associate confirm.
MAC_MLME_DISASSOCIATE_IND	Disassociate indication.
MAC_MLME_DISASSOCIATE_CNF	Disassociate confirm.
MAC_MLME_BEACON_NOTIFY_IND	Beacon notify indication.
MAC_MLME_ORPHAN_IND	Orphan indication.
MAC_MLME_SCAN_CNF	Scan confirm.
MAC_MLME_START_CNF	Start confirm.
MAC_MLME_SYNC_LOSS_IND	Sync loss indication.
MAC_MLME_POLL_CNF	Poll confirm.
MAC_MLME_COMM_STATUS_IND	Communication status indication.
MAC_MLME_POLL_IND	Poll indication.
MAC_MCPS_DATA_CNF	Data confirm.
MAC_MCPS_DATA_IND	Data indication.
MAC_MCPS_PURGE_CNF	Purge confirm.
MAC_PWR_ON_CNF	Power on confirm.

### 7.1.1.4 Return

None.

## 7.1.2 MAC\_CbackCheckPending()

### 7.1.2.1 Description

This callback function returns the number of pending indirect messages queued in the application. Most applications do not queue indirect data and can simply always return zero. The number of pending indirect messages only needs to be returned if macCfg.appPendingQueue to TRUE.

The application must implement this function if it chooses not to use the Autopend feature. When Autopend is enabled, the return value of this function is ignored in low level TIMAC. Otherwise, it is critical that the application implement this function to be as fast as possible; for example, just returning the value of a global variable.

# 7.1.2.2 Prototype

uint8 MAC CbackCheckPending(void)

### 7.1.2.3 Parameter Details

None.

## 7.1.2.4 Return

The number of indirect messages queued in the application or zero.

## 7.1.3 MAC\_CbackQueryRetransmit(void);

## 7.1.3.1 Description

This callback function returns whether or not to continue MAC retransmission. A return value '0x00' will indicate no continuation of retry and a return value '0x01' will indicate to continue retransmission. This callback function shall be used to stop continuing retransmission for RF4CE. MAC shall call this callback function whenever it finishes transmitting a packet for macMaxFrameRetries times.

# 7.1.3.2 Prototype

uint8 MAC\_CbackCheckPending(void)

### 7.1.3.3 Parameter Details

None.

# 7.1.3.4 Return

Returns 0 to stop re-transmission or 1 to continue re-transmission.

Configuration

# 7.2 Configuration Constants

The MAC uses a structure containing various user-configurable parameters. This structure is called macCfg and is in file  $mac\_cfg.c$ . The structure is defined as follows.

```
typedef struct
{
  uint8   txDataMax;
  uint8   txMax;
  uint8   rxMax;
  uint8   dataIndOffset;
  bool   appPendingQueue;
} macCfg t;
```

NAME	DESCRIPTION	RANGE	DEFAULT
txDataMax	Maximum number of data frames queued in the transmit data queue.	1-255	2
txMax	Maximum number of frames of all types queued in the transmit data queue.	1-255	5
rxMax	Maximum number of frames queued in the receive data queue.	1-255	2
dataIndOffset	Allocate additional bytes in the data indication for application-defined headers.	0-127	0
appPendingQueue	When TRUE, a MAC_MLME_POLL_IND will be sent to the application when a data request command frame is received from another device.	TRUE- FALSE	FALSE

# 7.3 Compile-Time Configuration

The MAC source code has certain compile-time configurable parameters. To use these parameters most effectively the full source code release of the MAC is recommended.

NAME	DESCRIPTION	RANGE	DEFAULT
MAC_NO_PARAM_CHECK	When FALSE, parameters to API functions are checked as required by [1]. When TRUE the parameter checking code is compiled out. Code size can be reduced slightly by setting to TRUE.	TRUE, FALSE	FALSE
MACNODEBUG	When defined, MAC_ASSERT() run-time error checking is enabled. When undefined this code is compiled out. Code size can be reduced slightly when defined.	N/A	undefined
MAC_RX_ONOFF_DEBUG_LED	When TRUE, an LED is turned on and off when the receiver is turned on and off	TRUE, FALSE	FALSE
FEATURE_MAC_SECURITY	When defined Security is enabled, else security is disabled	N/A	undefined
FEATURE_ENHANCED_BEACO	When defined Security is enabled, else security is disabled	N/A	defined
FEATURE_GREEN_POWER	When defined Security is enabled, else security is disabled	N/A	defined

FEATURE_RESET_MACRO	CC2538 Chip only when connected to debugger cannot reset peripherals. Reset MACRO is a software fix to reset the peripheral when debugger is connected. This has to be defined and used in conjunction with enabling this feature with IAR Project Options. For production code this should be disabled along with disabling the Project Options in IAR.	N/A	defined
FEATURE_8MHZ_HYBRID_PO WER_SAVING	For MAC running on CC2538 the sweet spot for power consumption is at 8MHZ system clock. The Mac Timer's sync start and sync stop functionality will only work (used during sleep), if the system clock is at 32MHz. The '8Mhz hybrid running sequence', divides system clock down to 8MHz but switches to 32MHz for the Sync functionality and then goes back to 8MHz.	N/A	undefined
FEATURE_PACKET_FILTER_ STATS	Gives the Packet Filter statistic i.e. number of CRC successes and failures	N/A	undefined
FEATURE_MAC_RADIO_HARD WARE_OVERFLOW_NO_ROLLO VER	Extra processing is required if the radio has a special hardware overflow count feature. Unfortunately this feature does not provide for setting a rollover value. This must be done manually.	N/A	defined
NV_RESTORE	When defined the Coordinator and End Device over the air and security parameters are stored in Non Volatile memory. So when turned off and on, the device will come up the same parameters as before being switched off. In order to factory reset the device, erase the flash memory of the device.	N/A	undefined

## 8. Scenarios

This section contains scenarios that provide additional information about the operation of the API. Each scenario had a ladder diagram that illustrates how API functions and callback events operate.

#### 8.1 Non beacon-enabled network Start

This scenario shows a PAN coordinator device starting a non beacon-enabled network. It first resets the MAC on device startup. Then it performs an energy detect scan to find an unused channel. Then it performs an active scan to find the channel with the lowest number of active networks. After the scan it sets the MAC attributes it needs to start a network: the short address, beacon payload, and associate permit flag. Then it starts a non beacon-enabled network.

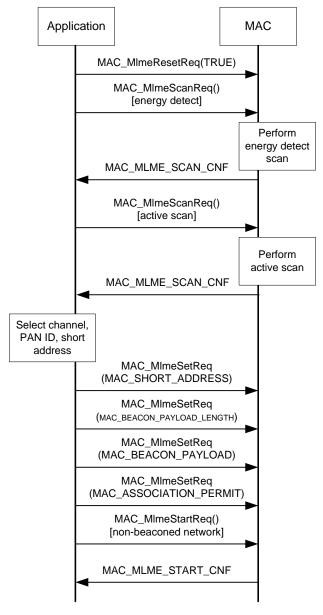


Figure 2. Non beacon-enabled network start.

#### 8.2 Non beacon-enabled network Scan and Associate

This scenario shows a device connecting to a non beacon-enabled network. The device performs an active scan, broadcasting a beacon request on each channel. When the coordinator receives the beacon request it sends a beacon. When the scan is complete the MAC sends a MAC\_MLME\_SCAN\_CNF with the PAN descriptors it has received during the scan. The device application examines the PAN descriptors and selects a coordinator. The coordinator application receives a MAC\_MLME\_ASSOCIATE\_IND and calls MAC\_MlmeAssociateRsp() allowing the device to associate. The device application receives a MAC\_MLME\_ASSOCIATE\_CNF indicating success. The device application then sets the MAC short address attribute.

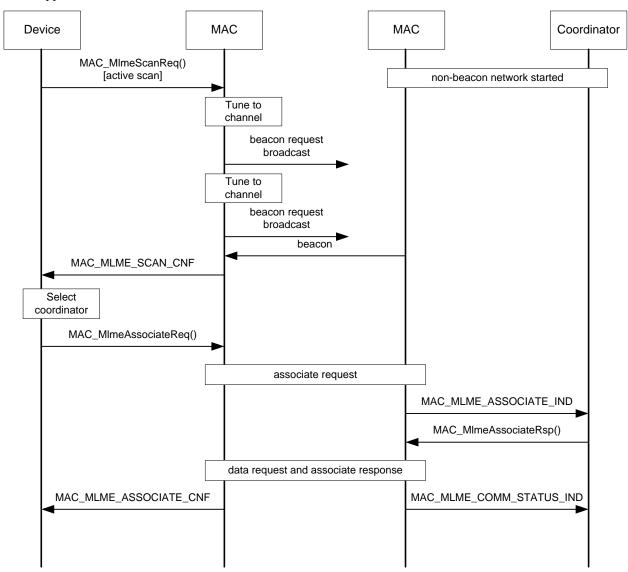


Figure 3. Device connecting to a non beacon-enabled network.

## 8.3 Beacon-enabled network Scan and Sync

This scenario shows a device synchronizing to a beacon-enabled network. First the device performs a passive scan, tuning to each channel and listening for beacons. When a beacon is received the MAC sends a MAC\_MLME\_BEACON\_NOTIFY\_IND. When the scan is complete the MAC sends a MAC\_MLME\_SCAN\_CNF. The application examines the PAN descriptors, selects a coordinator and sets the coordinator short address, beacon order, and PAN ID. Then the application attempts to synchronize with the coordinator. When the MAC has successfully received the coordinator's beacon and synchronized it sends a MAC\_MLME\_BEACON\_NOTIFY\_IND. At this point the application sets PIB attribute MAC\_AUTO\_REQUEST to TRUE to prevent further beacon notify indications. After a while the MAC loses synchronization and after four beacon periods it sends a MAC\_MLME\_SYNC\_LOSS\_IND to the application.

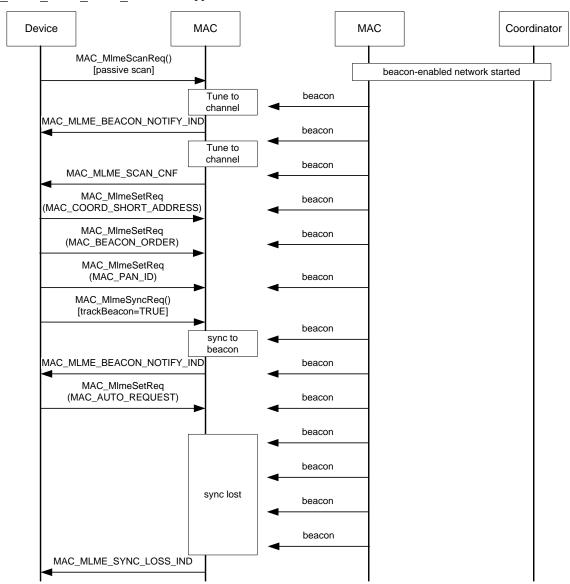


Figure 4. Beacon-enabled network scan and sync.

## 8.4 Orphan Procedure

This scenario shows a device performing an orphan scan and successful orphan procedure the coordinator. The device performs an orphan scan, broadcasting an orphan notification on each channel. When the orphan notification is received by the coordinator the MAC sends a MAC\_MLME\_ORPHAN\_IND to the application. The application allows the orphan and calls MAC\_MlmeOrphanRsp(). The coordinator sends a coordinator realignment message to the device. Upon receiving the message the orphan procedure is complete and the MAC sends a MAC\_MLME\_SCAN\_CNF to the application. The application then sets the short address attribute.

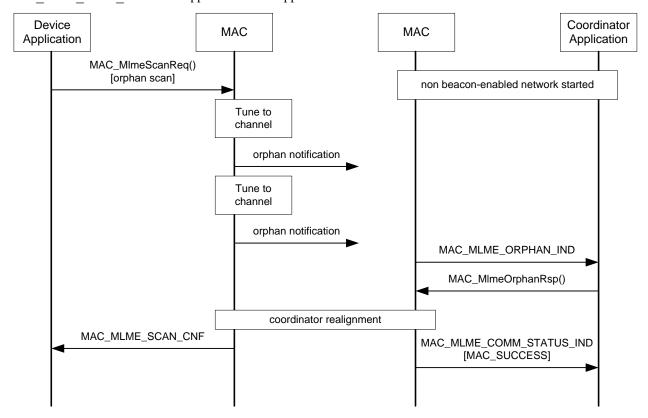


Figure 5. Orphan procedure.

#### 8.5 Direct Data Transactions

This scenario shows various direct data transactions between an FFD device and a coordinator. A basic data transaction is as follows: The device application calls MAC\_McpsDataReq() to send a data frame. The MAC transmits this frame and receives an acknowledgement. The MAC sends the device application a MAC\_MCPS\_DATA\_CNF with status indicating success. On the receiving side, the MAC sends the coordinator application A MAC MCPS\_DATA\_IND containing the received data frame.

In the next part of the scenario the application calls MAC\_McpsDataReq() three times without waiting for a MAC\_MCPS\_DATA\_CNF. After the third call the MAC sends a MAC\_MCPS\_DATA\_CNF with status indicating it is congested and could not send the third data frame. The MAC then transmits the first data frame successfully. Upon receiving the MAC\_MCPS\_DATA\_CNF, the application calls MAC\_McpsDataReq() to send the third frame again. The MAC then attempts to transmit the second frame; the frame is not acknowledged so MAC send a MAC MCPS\_DATA\_CNF with failure status MAC\_NO\_ACK. The MAC then transmits the third frame successfully.

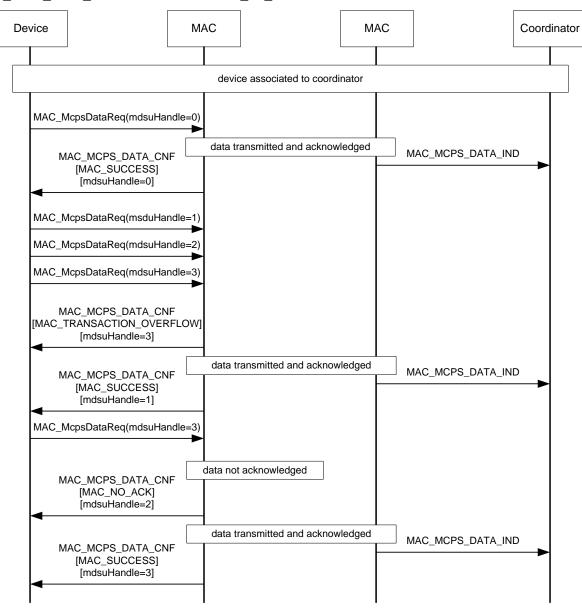


Figure 6. Data transactions.

## 8.6 Indirect Data Transactions, Data Poll and Purge

This scenario shows data poll and purge operations. The coordinator application calls MAC\_McpsDataReq() to send data to the device using indirect transmission. Since the data is indirect it is queued inside the MAC. The device calls MAC\_McpsPollReq() to poll for data. The coordinator sends the data to the device. The MAC on the device side sends a MAC\_MCPS\_POLL\_CNF with status indicating success and a MAC\_MCPS\_DATA\_IND containing the data packet. The MAC on the coordinator side sends a MAC\_MCPS\_DATA\_CNF with status success.

In the next part of the scenario the coordinator calls  $\texttt{MAC\_McpsDataReq}()$  and then  $\texttt{MAC\_McpsPurgeReq}()$ . The data frame queued inside the MAC is successfully purged. The MAC sends a  $\texttt{MAC\_MCPS\_PURGE\_CNF}$  with status indicating success.

In the next part of the scenario the device polls for data again. There is no data available so the MAC sends a MAC MCPS POLL CNF with status MAC NO DATA.

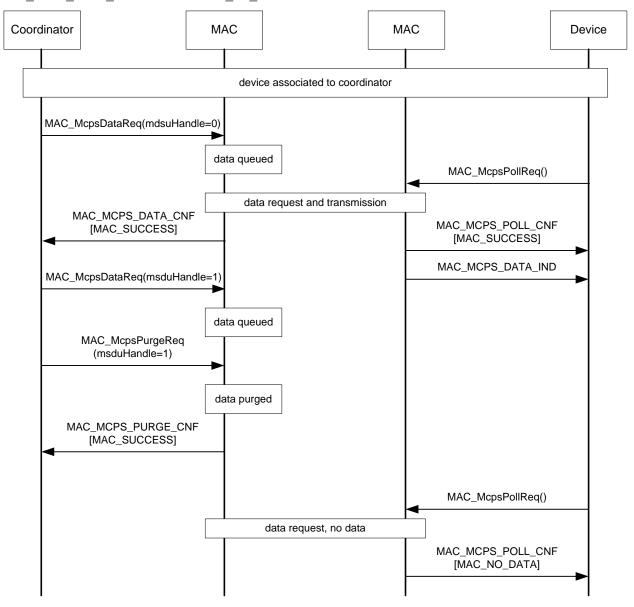


Figure 7. Data poll and purge.