

AND ALL OF THEIR SUBSIDIARIES

REVISED 08-18-2021

Table of Contents

COMPANY POLICY
- Environmental, Health & Safety Policy....1
- Management/Supervisor Responsibilities....2
- Employee Responsibilities....2
- Contractor Responsibilites....3

GENERAL SAFETY RULES....4

SAFETY STANDARDS
- Confined Space Entry....6
- Excavating and Trenching....15
- Fall Protection....21
- Hazard Communication....25
- Hot Work Permit....31
- Lockout/Tagout....37
- Personal Protection Equipment....42

RECOMMENDED PRACTICES
- Compressed Gases....48
- Compressors....49
- Drilling and Well Service....50
- Drugs, Intoxications, Weapons....54
- Electrical Safety....55
- Fire Protection....57
- Hydrogen Sulfide (H_2S)....60
- NORM....63
- Perforating Safety....66
- Respiratory Protection Program....68
- Rigging Safety....69
- Welding and Burning....70

OPERATING EQUIPMENT SAFETY
- Automobiles....72
- Cranes....74
- Forklifts....75
- Winch, Trucks, Hoists....76

INCIDENT REPORTING
- Injuries....77
- Vehicle Incidents....77
- Property Damage....77
- Spills, Releases, Fires, & Explosions....77

ENVIRONMENTAL, HEALTH & SAFETY POLICY

The Company is committed to protecting the environment and the health and safety of employees, contractors, local communities, and others who may be impacted by its business activities. To accomplish this the Company will:

- conduct its operations in a manner that protects human health and safety, minimize adverse environmental impacts, and mitigates unavoidable impacts on the environment;
- comply with all applicable environmental, health and safety laws and regulations, and apply responsible standards where law or regulations do not exist;
- advise/train line managers in environmental, health and safety requirements, and hold each line manager accountable for compliance with this policy in the performance of his/her job;
- provide its employees with adequate training in environmental, health and safety matters, and hold each employee accountable for compliance with this policy;
- provide technical and legal support to those line managers responsible for compliance with this policy;
- require timely communication between employees and their supervisors regarding environmental, health and safety issues;
- require employees to communicate their concerns to management about any unresolved environmental, health and safety risks they might have identified in the Company's operations;
- monitor, evaluate and report performance in environmental, health and safety protection; provide a copy of this policy to the Company's contractors and notify them that they and their subcontractors will be expected to perform all work for the Company in compliance with this policy;
- report all work-related fatalities within 8 hours and all in-patient hospitalizations, amputations, and losses of an eye within 24 hours of finding out about the incident.

- emphasize the importance of maintaining safety and environmental standards in economically competitive situations;
- conduct an environmental review when evaluating a significant facility or property for acquisition or sale.

MANAGER/SUPERVISOR RESPONSIBILITIES

Each manager/supervisor is responsible for all safety and environmental activities within their area of supervision. These responsibilities include:

- Setting a good example and promoting safety and environmental initiatives.
- Communicating and strictly enforcing safety and environmental policies.
- Assuring accountability through performance reviews, counseling, and disciplinary action.
- Performing safety and environmental assessments and promptly correcting substandard conditions; holding and documenting safety and environmental meetings.
- Reporting, tracking, and investigating injuries and potentially dangerous incidents.
- Reporting and investigating spills and releases and communicating any other environmental risks or exposures.
- Planning construction activities with consideration for permitting requirements and timelines.

EMPLOYEE RESPONSIBILITIES

Each employee shall demonstrate a positive attitude toward injury prevention, environmental protection and company property. Each employee is responsible for:

- Performing their job safely, for their personal safety, the safety of fellow workers, and the protection of the environment and company property, including the proper use of safety equipment and strict adherence to safe work practices;
- Understanding all safety and environmental policies pertinent to their job responsibilities;

- Performing safety and environmental assessments;
- Actively participating in safety and environmental meetings;
- Reporting promptly all unsafe conditions and practices (including those of contractors), to their supervisor;
- Reporting spills to their supervisor.

CONTRACTOR RESPONSIBILITIES

As a condition of being hired to perform services, contractors must take all necessary precautions for the safety of all personnel at the work site. Contractors will comply with all Company safety and environmental policies, as well as federal, state, and local safety and environmental laws, rules, and regulations. Contractors will have in place an active injury and loss prevention program. In addition, contractors must:

- Perform all work in a safe, environmentally sensitive, and workmanlike manner and provide necessary safety equipment for their employees.
- Report all injuries and incidents, (including property damage) immediately to the Company supervisor or designated alternate.
- Report all spills and releases immediately to the Company supervisor or designated alternate.
- Obtain approval from the Company supervisor or designated alternate prior to operation of valves or equipment except in a life threatening situation.
- Instruct their employees in the applicable Company standards and practices.

GENERAL SAFETY RULES

1. Immediately report all injuries and/or incidents, no matter how slight, to your supervisor. If necessary, treat the injury at the nearest appropriate medical facility.
2. Immediately report all fires and spills, no matter how small, to your supervisor.
3. Immediately report any unsafe condition or practice to your supervisor. Unsafe equipment must be tagged to prevent use.
4. Horseplay or fighting on Company premises is prohibited.
5. All passengers in Company vehicles, including rental cars, must wear seat belts. The driver is responsible for ensuring that all passengers are wearing seat belts prior to putting the vehicle in motion.
6. The illegal use, possession, transportation, or sale of drugs, alcoholic beverages, firearms, deadly weapons, or explosives while on Company premises or in Company vehicles is prohibited. The use of drugs that might impair your ability to work safely must be reported in advance to your supervisor. The type of drug does not have to be disclosed to protect confidentiality.
7. Smoking is permitted in designated areas only.
8. Whenever a safety device is removed from service and/or defeated, the appropriate supervisor shall be notified, the device tagged, and the action properly documented. If equipment is still operating and a safety device has been taken out of service, you must monitor such equipment continuously.
9. No work may be started in any area or on any equipment, without the knowledge and consent of the person in charge. Do not operate equipment on which you are not trained.
10. Operation of equipment having a, “DANGER, DO NOT OPERATE” tag is prohibited.
11. Under normal operations, all operating machinery and electrical switch gear must have all safety guards, switches, and alarms in place and functional.
12. All block valves on pressure relief systems must be locked or sealed open.
13. Finger rings, loose clothing, unsecured long hair, wristwatches, and other loose accessories should not be worn when within arm’s reach of any unguarded operating machinery or electrical equipment.

14. When ascending or descending stairways, use the handrail and take only one step at a time. Running in work areas is prohibited except in emergency situations.
15. Use only proper tools and equipment maintained in good working condition.
16. Erect barricades around areas of hazardous work such as holes in decking and work areas, trenches, overhead hazardous work, open unattended vessels, or hazardous storage.
17. Do not walk or stand on storage tanks or piping unless they are equipped with properly designed walkways.
18. Fire extinguishers, alarm boxes, fire doors, airpacks, eyewash stations, first aid kits, and all other emergency equipment must be kept in good condition, inspected regularly and kept clear of any obstructions.
19. Do not use plastic cups/buckets while drawing samples of pressurized hydrocarbons. Sample containers shall be clearly labeled.
20. Walking on top of production tanks is prohibited except when necessary; in such event, the integrity of the tank should be carefully checked and proper fall protection must be in place before going on top of the tank.
21. Use proper lifting techniques (such as bending of knees), obtain assistance for heavier loads, and use mechanical lifting aids when available.

CONFINED SPACE ENTRY

CONFINED SPACE ENTRY All employees, contractors, and subcontractors who are expected to enter, or work in or around a confined space, must be trained in confined space entry procedures and must use the required equipment. Below are examples of confined spaces**:**

1. Storage tanks, process vessels, boilers, and other tank like compartments, usually with only a manhole for entry.

2. Open-topped spaces of more than four feet in depth such as pits, vaults, trenches, tanks and vessels, large valve boxes, and large electrical pull boxes not subject to good natural ventilation.

3. Septic tanks, sewers, underground utility tunnels, pipelines, and similar structures.

Risks associated with confined spaces are: a hazardous atmosphere, engulfment, or entrapment due to equipment configuration.
Prior to work or entry into a confined space, the employee(s) or contractor(s) must obtain a confined space entry permit issued by the Company's Site Supervisor.

Company employees are not allowed to enter any permit required confined space. Only contractors who are properly trained should be allowed into permit-required confined spaces due to the training and equipment requirements. No work may be performed in a permit-required confined space until the Company's Operations Supervisor is notified and a permit has been issued for the work.

DEFINITIONS

(Attendant) Standby Personnel: One or more properly equipped and trained (First Aid/CPR) person(s) stationed OUTSIDE the Permit Space. The Attendant shall protect the entrants by continuously monitoring all activities within and outside of the Permit Space. At no time may the Attendant enter the Permit Space. If an emergency situation arises, the Attendant shall actively participate in a non-entry rescue by requesting emergency services, providing accurate information to rescue personnel (number of entrants, possible problems, atmospheric conditions, time of last contact etc.) and also assist in directing the emergency situation. These shall be his only job duties while posted as a standby.

Confined Space: A confined space is any space large enough for human occupancy, but having limited or restricted means of entry or exit and not designed for continuous human occupancy.

Emergency Evacuation Equipment:
That equipment which is located outside the permit space that would be needed to rescue or extract a worker from the permitted space. The equipment includes but is not limited to the following: Self Contained Breathing Apparatus or approved hose line with escape feature, lifelines, harness and other equipment, such as hoist where rescuing workers from deep excavations (4 feet or more in depth), and/or where large vessels would be difficult. A First Aid Kit shall also be located at the work site.

Entrants (Authorized Workers):
One or more properly equipped and trained person(s) who have been authorized by the Company Site Supervisor to enter a permitted space. These workers will be made aware of any known hazards, be properly trained in the use of Personal Protective Equipment, and be versed in visual and/or hand communication signals to enhance the monitoring of the entrant's status by the attendant while within the Permit Space.

Entry:
The action by which a person passes through an opening into a Permit Space. Entry is considered to have occurred as soon as any part of the entrant's body breaks the plane of an opening into the space. Entry does not include part of any employee's body passing through an opening too small to accommodate the entire body.

Hazardous Atmosphere:
An atmosphere containing flammable vapors, oxygen deficiency or oxygen enrichment, or any air contaminant measured by instrumentation to be in excess of the limits outlined in Section I B.5(b) - Atmospheric checks. (see later in this Safety Manual).

Immediately Dangerous to Life or Health (IDLH):
A condition that poses an immediate or delayed threat to life could result in irreversible adverse health effects or could interfere with an individual's ability to escape unaided from the confined space. Examples could include, but are not necessarily limited to, oxygen deficiency, explosive or flammable atmospheres and/or concentrations of toxic substances (i.e., carbon monoxide, hydrocarbons, hydrogen sulfide, etc.).

Isolation:

Action taken to prevent the entry of hazardous materials or the creation of hazardous conditions in a permitted confined space.

Permit-Required Confined Space (Permit Space):

A confined space that has any one of the following characteristics: (i) contains or could contain a hazardous atmosphere; (ii) contains a material that could engulf a person; (iii) has an internal configuration which could trap a person inside; (iv) contains any other recognized serious safety or health hazard.

Rescue Service:

One or more properly equipped and trained person(s) designated by the Company Site Supervisor to rescue or remove injured entrants from permitted spaces. This service should be stationed on site and may be a designated employee or outside contractor who is trained in this procedure.

Company Site Supervisor:

The Company Site Supervisor is responsible for proper identification and preparation of the confined space to be entered. He/she should know the proper procedure for testing and monitoring the confined space to determine if acceptable or prohibitive conditions exist. In preparation for entry, a Confined Space Entry Permit, must be initiated and completed according to the following procedures.

STANDARDS

1. **Before Beginning Work**

   A. Permit Space Preparation

   The Permit Space must be properly isolated prior to entry. This isolation shall incorporate the Lockout/Tagout of pressurized vessels/piping, electrical sources, valves & hydraulic equipment, and the installation of blinds. Disconnection and blinding should take place as close as possible to the permit space. The Company Lockout/Tagout standard should be reviewed to insure proper procedures are followed.

2. The Permit Space must be purged, steamed, washed, or otherwise cleaned to sufficiently free the Permit Space of all possible contaminants. All resulting waste shall be disposed of properly.

3. The Permit Space shall be screened for the presence of NORM in areas where NORM is known to exist.

4. The required duties of all employees/contractors will be reviewed prior to opening the permit space. This shall include, but is not limited to, the Company Site Supervisor, Authorized Workers, Stand-by Personnel and Rescue Services.

5. Upon opening the Permit Space, a **"DO NOT ENTER"** sign shall be posted at the entrance. This sign shall stay in place until the Confined Space Permit is completed and signed. **"DANGER CONFINED SPACE ENTRY IN PROGRESS, NO UNAUTHORIZED ENTRANTS"** sign must be in place before any occupant enters Permit Space. .

B. Atmosphere Checks and Preparation

1. If tests indicate a hazardous atmosphere, efforts to control the condition are to be made utilizing ventilation controls. Natural ventilation is considered inadequate. Mechanical ventilation must be established to ensure movement of fresh air in the Permit Space. Mechanical ventilation should be started prior to and after testing.The ventilation shall be continued during the entry process to help reduce and/or eliminate atmospheric hazards. An approved breathing air line and escape air cylinder may be used only as an additional precaution for entry after attempts to normalize the atmosphere have failed.

   a. Air driven or explosion proof electric fans shall be used to pull air from the Permit Space to ensure proper ventilation. Internal combustion engines (with non-explosive proof power sources) may be utilized for forced air ventilation of the Permit Space when the work-site has all potential hazards secured and the air intake of the ventilation system is placed in an area that prevents contaminants from entering the fans' intake and being discharged into the Permit Space.

2. Atmospheric checks should be taken at various levels of the Permit Space and recorded on the Permit. Ventilation shall be discontinued during this process. In some cases it may be necessary to enter the Permit Space to properly check the atmospheric conditions. If this is required, a Self-Contained Breathing Apparatus or an approved hose line unit with an escape pack must be worn while the worker is attached to a lifeline or other rescue device during this initial entry.

3. The atmosphere within a Permit Space shall be tested:

   a. Prior to entry
   b. After each break or interruption of work
   c. At each shift change
   d. At predetermined intervals
   e. Following an employee complaint or concern

4. Test instruments shall be calibrated in accordance with manufacturers' instructions. Each instrument shall be tested prior to its use for the completion of a Confined Space Permit.

5. Atmospheric checks shall include the following:

   a. Oxygen Safe test for entry
      - Minimum 19.5%, Maximum 23.5%

NOTE: Care should be taken while entering a Permit Space that has been purged by an inert gas.

   b. Flammable or Explosive Vapors (% of LEL)
      - Safe test for entry: 10% of LEL without respiratory equipment,
      - Maximum 20% of LEL with respiratory equipment,
      - Above 20% of LEL, rescue purpose only with respiratory equipment.
      - Safe test for Hot Work Permit in a Permit Required Confined Space: less than 10% of LEL.

NOTE: Any exception shall be approved by the Operations Supervisor after consulting with the EH&S Representative.

   c. NORM: Reference shall be made to the current NORM Recommended Practice. The Worker Protection Plan will be implemented for work within a Permit Space if NORM is present above 50 uR/Hr.

d. Temperature: Safe test for entry: Maximum air temperature 125°F, Maximum wall temperature 140°F

e. Toxic Gases: (Examples) Permissible Exposure Limit, maximum concentration that is safe for entry without PPE, based on spot readings.
Safe test for entry: allowed without PPE, spot readings
Hydrogen Sulfide: 10 ppm 8-hour TWA - inbreathing zone
Carbon Dioxide: 5,000 ppm 8-hour TWA - in breathing zone
Mercaptans: 0.5% - in breathing zone

C. Site Preparation

1. A safe means of entry and exit shall be provided at all times when the Permit Space is entered/exited from above or below grade. This could include a portable ladder or scaffolding that is properly installed and secured for climbing.
2. All lighting equipment that is required for working within the Permit Space shall be explosion proof and have a ground fault circuit interrupter. Explosion proof flashlights are permitted for use within the Permit Space only when work will be limited to a short time period.
3. All equipment (such as air movers and vacuum truck hoses) shall be properly grounded or bonded to prevent static sparks.
4. Fire extinguisher(s) and other fire fighting equipment shall be available at the work site if flammable or combustible materials are present. The extinguisher shall be inspected to confirm that it is in good working order prior to starting hot work at the facility.
5. Emergency Evacuation Equipment shall be available at the worksite. The rescue and extraction equipment will be inspected to ensure that it is in proper working condition.

D. Permit Issuance.

Upon completion of the above requirements, the Company Site Supervisor shall review the preparations and the Permit Space. If all requirements are met, the supervisor may sign the Permit and shall post it conspicuously at the work site.

II. Entry into the Permit Space

A. Prior to Entry, the Company Site Supervisor shall review the following with all authorized workers (employee/ contractor): known hazards within the permit space, the responsibility of each authorized worker (Supervisor, Workers, Standby Personnel and Rescue Services), and the location and procedures for calling for outside Emergency Services.

B. Authorized workers may enter the Permit Space only after a Confined Space Entry Permit has been signed and issued.

C. Unauthorized personnel shall not be allowed entry.

D. If the Permit Space is left unattended, the entrance shall be blocked or secured.

E. The Permit Space atmosphere shall be **RECHECKED** as often as necessary while entrants are within the Permit Space to ensure a safe work environment.

F. If conditions require, a Hot Work Permit should be issued in accordance with the Hot Work Standard.

G. NORM levels in excess of 5OuR/Hr require implementation of the Worker Protection Plan which is part of the NORM Recommended Practice.

H. Standby personnel must remain in contact (visual, hand signals, etc.) with the personnel in the Permit Space at all times.

I. Authorized Workers shall wear a full body harness with attached retrieval line while working within the Permit Space. In spaces that require a vertical descent of 4 feet or greater, the retrieval line shall be connected to a hoist.

J. Rescue Services shall be on location while a Permit Space Entry is in progress.

K. The Company Site Supervisor and/or the attendant shall terminate the permit and instruct all entrants to evacuate the Permit Space: (1) if an unauthorized worker enters the Permit Space, (2) when operations covered by the Permit have been completed or (3) if conditions not allowed under the Permit arise in or near the Permit Space.

III. RESTORATION OF THE PERMIT SPACE

When all work is completed, the Permit Space must be restored to normal service conditions. Use the Permit as a checklist for proper restoration. The site supervisor will review the work and the restoration of the Permit Space. The Permit should be kept with other records pertaining to the work done.

RESPONSIBILITIES

Employees will:

1. Be responsible for accurate completion of all applicable sections of the confined space worksheet/permit.
2. Attend appropriate training.
3. Immediately stop any confined space job on Company property which does not meet safety requirements.
4. Report all noncompliance activities to location supervisor.

Management will:

1. Maintain compliance with the Confined Space Standard.
2. Ensure employees are appropriately trained in Confined Space and maintain documentation.
3. Identify and communicate potential confined space hazards to contractors and employees.
4. Notify EH&S Rep if the confined space cannot be downgraded.
5. Audit and evaluate contractor performance during confined space entry.
6. Ensure employee safety training records are maintained.
7. Retain completed confined space permits for two years.

EH&S will:

1. Provide technical support for interpretation and implementation of the Confined Space Standard.
2. Review and update the Company Confined Space Procedures.
3. Review and audit the Company Confined Space program effectiveness.
4. Develop, conduct and/or approve Company confined space training programs.

CONFINED SPACE ENTRY

TRAINING

1. Employees must be trained to identify, and address confined space issues as per the Company Training Plan.
2. Training will be conducted before an employee is initially assigned any confined space duties.
3. Refresher training will be conducted at an interval not to exceed every three years, or when the need for more frequent refresher training is recognized.
4. Training will be provided by a qualified Contractor, EH&S Rep, and/or Operations Personnel.

DOCUMENTATION

1. Original training records and documentation must be retained for each Company employee at that employee's reporting work location.
2. Copies of training records and documents will be maintained.
3. Confined Space Permits must be retained for each entry at the local field office for two years.

EXCAVATING & TRENCHING

EXCAVATIONS When work requires excavation or trenching, special consideration must be given to the stability of the soil prior to allowing personnel to enter the excavation or trench.
These special precautions are to protect workers from:

- presence of buried underground installations including sewer, water, fuel, electrical conduits, etc.
- presence of toxic and/or flammable vapors.
- cave-in or slippage of side walls.
- persons, materials, tools or other objects falling into excavation.

This standard applies to all excavations 4 feet in depth or more which are intended for worker occupancy. In addition to the following steps, a Confined Space Entry Permit may be required for personnel entry into such excavations that have the potential for hazardous atmospheres which cannot be controlled for serious safety hazards which cannot be eliminated.

DEFINITIONS

Benching: A method of protecting employees from cave-ins by excavating the sides of an excavation to form one or a series of horizontal levels, or steps, usually with vertical or near-vertical surfaces between levels.

Competent Person: One who is capable of identifying existing and predictable hazards, soil types in the surroundings, and working conditions that are unsanitary, hazardous or dangerous to employees, and who has authorization to take prompt corrective measures to eliminate them.

Excavation: Any man-made hole, cavity, trench or depression in an earth surface formed by earth removal.

Shoring/Trench Box: A structure such as a metal, hydraulic, mechanical or timber shoring system that supports the sides of an excavation and which is designed to prevent cave-ins.

Sloping: A method of protecting employees from cave-ins by excavating to form sides of an excavation that are inclined away from the excavation so as to prevent cave-ins. The angle of incline required to prevent a cave-in varies with differences in such factors as the soil type, environmental conditions of exposure and application of surface loads.

Soil Classification System: Denotes classification used by the National Bureau of Standards. *Classifications include:*

1. **Stable Rock:** Natural solid mineral matter that can be excavated with vertical sides and remain intact while exposed.
2. **Type A Soil:** A **cohesive soil with** an unconfined compressive strength of 1.5 ton/sqft (tsf) (14.6 Mg/m2) or greater. Examples: clay, silty clay, sandy clay, clay loam, silty clay loam, sandy clay loam, caliche and hardpan. (If a soil is fissured, subject to vibrations or previously disturbed, it is considered Type B or C.)
3. **Type B Soil: A less cohesive soil with an unconfined compressive strength greater than 0.5 tsf (4.9 Mg/m2) but less than** 1.5 tsf (14.6 Mg/m2). Examples: angular gravel or crushed rock, silt, silt loam, sandy loam, and dry rock that is not stable.
4. **Type C Soil:** The least cohesive soil with an unconfined compressive strength of 0.5 tsf (4.9 Mg/m2) or less. Examples: gravel, sand, loamy sand, submerged soils or freely seeping soils, and submerged rock that is **not stable.**

NOTE: The thumb penetration test can be performed by a Competent Person to estimate the unconfined compressive strength of cohesive soils.

- Type A soils can be readily indented by thumb only with great effort.
- Type B soils can be penetrated by thumb approximately halfway.
- Type C soils can be easily penetrated several inches by the thumb and can be molded by light finger pressure.

STANDARDS

1. Each excavation must have someone designated as a Competent Person.
2. No individual(s) will be permitted to enter an excavation unless it is deemed necessary.
3. Before opening any excavations, determine the location of utility installations, such as sewer, telephone, fuel, power lines, water lines, pipelines or any other underground installations. Utilize the “one-call” or appropriate notification system to contact utility companies and other affected parties. Advise of proposed work prior to the start of actual excavation. Municipalities or other regulatory agencies may require permits.
4. Excavations involving entry require ladders, steps or ramps located so that no more than 25 feet (7.6 m) of lateral travel is required to exit the excavation.
5. The walls of the excavation are to be protected from caving in by one of the following:
    a. Shoring
    b. Sloping or benching (Note: Benching is only allowed on Types A and B Soil.)
    c. Trench boxes (shields)
    d. Some other equivalent means approved by a Registered Professional Engineer from the state where the excavation is located. Note: Sloping or benching for excavations greater than 20 feet (6 m) deep must be designed by a Registered Professional Engineer.

NOTE: If the excavation is less than 4 feet in depth and personnel entry is necessary cave-in protection may nevertheless be required if the soil exhibits unstable soil characteristics.

Maximum Allowable Slopes for Excavations:

Soil or Rock Type	**Horizontal/ Vertical**	**Less than 20 ft (6m)**
Stable Rock	0 : 1	90°
Type A	3/4 : 1	53°
Type B	1 : 1	45°
Type C	1.5: 1	34°

6. Excavations more than 4 feet (1.2 m) deep are considered confined spaces and may require a permit in accordance with the Confined Space Entry Safety Standard. The following provisions should be reviewed
   - Water prevention/removal;
   - Atmospheric conditions (presence of combustibles, toxic gases or low oxygen, etc.).
7. Excavated soil or other material or equipment that could pose a hazard by falling or rolling into an excavation shall be stored and/or retained at least 2 feet from the edge of the excavation. If excavations endanger the stability of adjacent structures (building, walls, or other structures), support systems shall be provided. If the excavated soil is heavily contaminated with hydrocarbons, store at a distance so the hydrocarbons do not pose an additional risk, especially during Hot Work.
8. A Competent Person shall make daily inspections of excavations prior to the start of the work shift. This person has authority/responsibility to modify shoring/ trenching or work methods as necessary to provide greater safety. If evidence of possible cave-ins or slides (such as accumulating water or seepage) is apparent, all work in the excavation shall cease until necessary precautions have been taken to safeguard employees.
9. Guardrails or barricades should be used to mark the limits of the work area. Any time a trench is left unattended in populated areas, guardrails or barricades sufficient in size to prevent unintentional entry shall be used.
10. An employee shall not be directly underneath the operating equipment while it is being lowered or raised in an excavation or trench when there is a potential for operating equipment to come in contact with the worker.
11. Employees exposed to public vehicular traffic must wear reflective/high visibility vests.

EXCAVATING & TRENCHING

RESPONSIBILITIES

Employees will:

1. Not enter an excavation until safety devices and precautions are safely in place and only then when absolutely necessary.
2. Immediately halt all unsafe activities and report to location supervisor.
3. Attend required excavation and trenching training.

Management will:

1. Ensure proper training/certification of personnel.
2. Ensure employee safety training records are maintained.

EH&S will:

1. Develop, conduct and/or approve excavation safety training programs.
2. Review and audit excavation program effectiveness.
3. Provide technical support and assistance when requested.

Registered Professional Engineer will:

1. Design all excavations 20 feet deep or greater.
2. Design and/or approve alternative excavation safety designs.

Competent Person will:

1. Be responsible for all facets of personnel safety for the duration of the excavation.

TRAINING

1. Selected employees will be trained using an approved Trenching and Excavation training program to the “Competent Person” level to recognize trenching and excavation hazards and hazard control techniques.
2. Refresher training to be conducted every 3 years or when skill mastery is recognized as inadequate.

DOCUMENTATION

1. Original training records and documents, including any written test or other form of competency certifications, must be retained for each Company employee at that employee's reporting work location.

2. Copies of training records and documentation of certificates will be maintained in the training database.

References

OSHA 29 CFR 1926.650-652

FALL PROTECTION

PURPOSE: The company has established a written Fall Protection Program that includes the following minimum requirements when performing work tasks at heights greater than 4 feet from the walking/working surface. Employees shall be trained in the Fall Protection Program. Fall Arrest Systems are to be used when other fall protection systems are impractical or insufficient (i.e. *scaffold work requiring top and midrails to be removed).*

Fall Arrest Systems shall include:

- A full-body harness with D-ring in the middle of the back situated between the shoulders.
- An appropriate anchorage attachment capable of supporting at least 5,000 lbs.
- Connectors.

The system may include a lanyard deceleration device, lifeline, or suitable combination of these.

NOTE: The use of waist belts for fall arrest and nonlocking snap hooks is prohibited.

Before donning the fall arrest system the employee shall:

1. Inspect Fall Arrest components prior to each use.
2. Remove from service and destroy damaged components or equipment.
3. Do not use fall Arrest equipment to hoist equipment materials.

Ladder Safety - General

1. All portable ladders will be a minimum of Class 1A rated for 300 lbs.
2. When climbing up or down any ladder, face the ladder and maintain a 3-point contact with hands free of materials.
3. All ladders must be inspected before each use. Damaged ladders must be removed from service until repaired or they must be replaced.

4. If work from a ladder is long term in nature or requires heavy physical exertion, other methods such as scaffolds or personnel lifts should be used.
5. All metal ladders should be labeled **"NOT FOR ELECTRICAL USE."**

Non-Self-Supporting Ladders (Portable Extension Ladders)

1. Ladder shall be positioned at a safe angle, which is typically a 4:1 vertical to horizontal ratio.
2. The ladder shall be secured at the point of support to prevent movement. To accomplish this, a person will stabilize the ladder at the bottom while the climber climbs and secures the ladder at the top.
3. A portable extension ladder must extend 3 feet (1 m) past the point of support when accessing a working surface (i.e. roof).

Self-Supporting Ladders (Portable Step Ladders)

1. A stepladder must be used with the spreader bars in the locked down position, never as a straight ladder.
2. Never stand on the top two steps of a self-supporting ladder.

Personnel Lifts

1. Written operating procedures are to be attached to the personnel lift.
2. A second person should be used as a "spotter" if working in a limited work area.
3. Only equipment that has been load rated and designed by the manufacturer for personnel lifting shall be utilized.
4. Personnel must work with both feet securely on the floor of the platform. Working with feet on a rail, or working from a ladder placed in the personnel lift is prohibited.
5. All entrance gates or chains must be in their fully closed position before moving the lift.

FALL PROTECTION

Scaffolds

1. A “Competent Person” must be appointed to oversee scaffolding erection and disassembly.
2. Use only heavy-duty pole/tube and coupler scaffolds.
3. Footing shall be sound, rigid, and capable of carrying the maximum intended load. Unstable objects such as bricks, blocks or boxes must not be used.
4. Scaffold heights greater than 4 times the base must be properly secured to the working structure.
5. When working under a scaffold, overhead protection (hard hats) is required.
6. Working from portable ladders on the scaffold platform is prohibited.
7. Guardrails shall be utilized at any height. Toeboards must be installed on platforms that are 10 feet above ground level or walkways that are 6 feet above ground level.
8. Fixed or secured portable extension ladders must be used to access scaffolding if no built-in ladders are present.
9. When reinforcing the scaffold, construction must be in accordance with the manufacturer’s instructions or standards.

RESPONSIBILITIES

Employees will:

1. Attend and participate in mandatory Fall Protection safety training.
2. Wear the appropriate PPE as required according to the hazard assessment.
3. Immediately report any noncompliance activities to location management.

Management will:

1. Provide appropriate PPE, and equipment i.e. (ladders, personnel lifts, and scaffolds)
2. Ensure employees are appropriately trained and maintain necessary documentation.
3. Ensure employee safety training records are maintained.

EH&S will:

1. Develop, conduct and/or approve fall protection safety training programs.
2. Provide technical support as requested.
3. Ensure that all approved PPE and or fall equipment used by employees complies with the appropriate standard.
4. Review and audit the effectiveness of the Fall Protection Program.

TRAINING

1. Each employee must be trained in PPE and Fall Protection.
2. Refresher training will be conducted at an interval not to exceed every three years, or when the need for more frequent refresher training is recognized.

DOCUMENTATION

1. Original training records and documentation must be retained for each Comapny employee at that employee's reporting work location.

REFERENCES

OSHA 1910.68 Manlifts
OSHA 1910.21 - 1910.30 Walking-Working Surfaces

HAZARD COMMUNICATION

PURPOSE: The Company has established a standard to ensure that all employees exposed to hazardous chemicals are aware of the specific hazards presented by the chemicals and are trained to protect themselves from the dangers that these chemicals might pose.

Chemicals must be handled with caution and should not be permitted on the skin or in the mouth. Contractor should consult the Company Energy representative if there is any doubt about how to handle a specific chemical. a Safety Data Sheet (SDS) must be available for all chemicals in the workplace. These SDS's should be read and understood by personnel handling the chemicals.

DEFINITIONS

Chemical: Any element, compound, or mixture of elements and/or compounds. This includes solids and gases as well as liquids; e.g., crude oil, condensate, and drilling mud additives.

Hazardous Chemical: One which poses a physical or health hazard.

Health Hazard: A chemical for which there is statistically significant evidence, based on at least one study conducted in accordance with established scientific principles, that acute or chronic health effects may occur from exposure.

Label: Written, printed, or graphic material displayed on or affixed to a container.

Safety Data Sheet (SDS): A document containing chemical hazards and safe handling information that is prepared in accordance with the requirements of the OSHA standard for that SDS.

Personal Protective Equipment: Protective equipment worn to prevent occupational injury or illness such as; safety glasses, gloves, respirators, steel-toed boots, etc.


Physical Hazard: A chemical for which there is scientifically valid evidence that a physical hazard exists, e.g. a combustible liquid, a compressed gas, an explosive, an organic peroxide, an oxidizer, a pyrophoric, or something that is flammable, unstable (reactive), or reacts violently when in contact with water.

STANDARDS

I. REQUIRED LABELS

A. Each chemical container on Company property shall have a "Hazard Communication" label on it. Subject to state law, the Hazard Communication label may have either a basic hazard index or NFPA (National Fire Protection Association) label.

B. OSHA has updated the requirements for labeliing of hazardous chemicals under its Hazard Communication Standard (HCS). As of June 1, 2015, all labels will be required to have pictograms, a signal word, hazard and precautionary statements, the product identifier, and supplier identification. A sample revised HCS label, identifying the required label elements, is shown below:

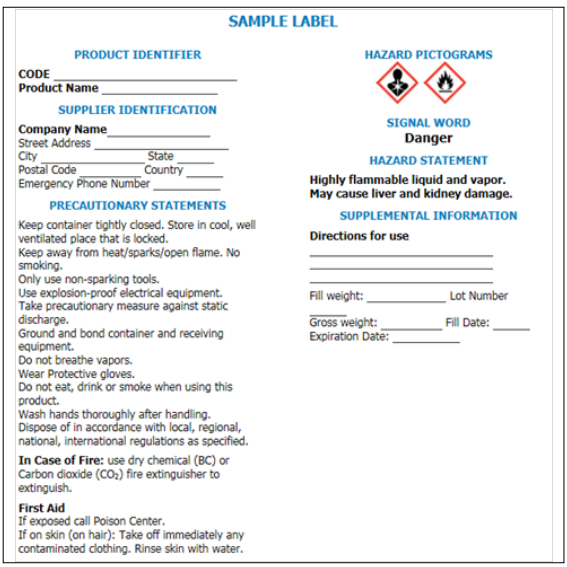

SAMPLE LABEL

PRODUCT IDENTIFIER

CODE _____
Product Name _____

SUPPLIER IDENTIFICATION

Company Name_____
Street Address _____
City _____ State _____
Postal Code _____ Country _____
Emergency Phone Number _____

PRECAUTIONARY STATEMENTS

Keep container tightly closed. Store in cool, well ventilated place that is locked.
Keep away from heat/sparks/open flame. No smoking.
Only use non-sparking tools.
Use explosion-proof electrical equipment.
Take precautionary measure against static discharge.
Ground and bond container and receiving equipment.
Do not breathe vapors.
Wear Protective gloves.
Do not eat, drink or smoke when using this product.
Wash hands thoroughly after handling.
Dispose of in accordance with local, regional, national, international regulations as specified.

In Case of Fire: use dry chemical (BC) or Carbon dioxide (CO_2) fire extinguisher to extinguish.

First Aid
If exposed call Poison Center.
If on skin (on hair): Take off immediately any contaminated clothing. Rinse skin with water.

HAZARD PICTOGRAMS

SIGNAL WORD

Danger

HAZARD STATEMENT

Highly flammable liquid and vapor.
May cause liver and kidney damage.

SUPPLEMENTAL INFORMATION

Directions for use

_____
_____
_____

Fill weight: _____ Lot Number _____
Gross weight: _____ Fill Date: _____
Expiration Date: _____

C. "Hazard Communication" labels must be legible and in English.

D. Exceptions to required labeling:

1. When an employee transfers a chemical to a portable container which is intended for use only during that employee's workshift, a hazard communication label is not required. The container must, however, remain under the control of the employee who made the transfer, and the product content must be identified on the container.

2. Piping is also exempt (with the exception of some states).

II. CHEMICAL INVENTORY LIST: Each field office under, advisement of the Area EH&S Representative, shall compile and maintain an active inventory list of hazardous chemicals used or stored in the workplace. The inventory shall be modified as new chemicals are received.

III. Safety Data Sheet (SDS)

A. Company employees or representatives shall not accept chemicals without a SDS.
B. The Company representative who initially takes delivery of the chemical shall be responsible for obtaining and forwarding the SDS to the field office and EH&S Rep.
C. If any information is missing on the SDS, the supervisor shall notify the EH&S Rep. If the required information cannot be obtained, a revised SDS must be requested from the vendor by the appropriate supervisor.

D. The site supervisor, assisted by the EH&S Rep, shall review all SDS sheets.
E. The supervisor is responsible for distribution of SDS to his personnel and ensuring the SDS book is updated.
F. SDS shall be kept in the SDS Book, easily accessible to each work location. When material is transported, the binder will be kept with the chemical manifest if required and within easy reach of the driver.
G. The following summary describes SDS according to 29 CFR 1910.

1. Each SDS must be in English.
2. Each SDS must identify the chemical name, the common name, components, and the following data:
    a. Physical/chemical characteristics of the chemical.
    b. Acute and chronic health effects and related health and physical hazards.
    c. Exposure time.
    d. Carcinogen classification by NTP (annual report on carcinogens published by National Toxicology Program), IARC (monographs on evaluations of carcinogenic risk of chemicals to man), or OSHA.
    e. Safe handling and control measures.
    f. Emergency and first aid procedures.

g. Identification of the organization responsible for preparing the SDS.

h. Date of preparation of the SDS or date of last revisions. importer, employer or other responsible party preparing or distributing the Safety Data Sheet. This must be someone who can provide additional information for the hazardous chemical, including appropriate emergency procedures, if any.

i. GulfTex Company Products: Each district's SDS book should contain an SDS sheet for each Company product produced in the district. The EH&S Department is responsible for the development, revision (update), transmittal, and distribution of SDS for Company products.

j. SDS are specifically identified as exposure records under OSHA Reg. 29 CFR 1910.20(c)(5)(iii). A retention file of each SDS shall be maintained in the district. Each SDS in the retention file must be maintained for at least 30 years.

IV. INFORMING CONTRACTORS OF HAZARDS

A. The Company Supervisor on location or Company Field Employee will inform the Contract Employee Supervisor of any hazardous chemicals to which contractors may be exposed to during their service on Company properties.
Information must include the following:
   1. Precautions to lessen risk of exposure to contractors.
   2. Preventative measures taken by Company to lessen total risk of exposure.
   3. Location of SDS.
   4. Emergency procedure to follow if exposed.
   5. Product labeling.

B. Contractor supervisors' responsibilities under this policy include:
   1. Providing Company Supervisor with the manufacturers' SDS for each hazardous chemical brought on location.
   2. An explanation of work practices and personal protective equipment necessary to safely handle each of the contractor's chemicals or substances used on location by any personnel.

HAZARD COMMUNICATION

RESPONSIBILITIES

Employees will:

1. Attend and participate in mandatory HAZCOM safety training.
2. Follow HAZCOM guidelines in the Employee Safety Handbook.
3. Follow Material Safety Data Sheet (SDS) Guidelines.
4. Not use any chemicals for which a SDS is not available.
5. Report any unsafe practices or plan deficiencies to their supervisor.

Management will:

1. Ensure employees are properly trained and employee safety training records are maintained.
2. Ensure chemical inventory list is accurate and a SDS is available for each chemical.
3. Provide appropriate information to employees about the chemicals to which they are exposed.
4. Minimize employee exposure to hazardous chemicals by substitution with less hazardous products when possible.

EH&S will:

1. Review and audit the effectiveness of the Hazard Communication program.
2. Conduct and/or approve hazard communication safety training program and ensure training program follows guidelines set by OSHA for HAZCOM training requirements.
3. Assist management in selecting and procuring substitute products having less hazardous or toxic characteristics when requested.
4. Ensure the written Hazard Communication plan meets regulatory requirements.

TRAINING

A. Employees will be trained in the use of hazardous chemicals on an annual basis, or whenever a new chemical is introduced. Training for new employees will be conducted within 30 days of employment. Further, new employees must be trained prior to being allowed to work on field facilities unless working under the direct supervision of another employee who has been trained and who is able to communicate the requirements of the standards applicable to hazardous chemicals.

B. Training will include the Basic Hazard Communication Training Program.

1. Company's written Hazard Communication Standard.
2. Federal Hazard Communication Standard, 29 C.F.R. 1910.1200 (or state standards, where applicable.
3. Hazardous material and hazardous waste, if generated (hazard determination).
4. Physical and health hazards (acute, chronic, corrosive, flammability, etc.)
5. Safety Data Sheets (explanation, review and where to find, etc.)
6. Labels and other forms of warning.
7. Particular substances encountered, including hazardous materials found in the home.
8. Personal protective equipment.
9. Detail of requirements for transportation (DOT rules, markings, shipping papers, etc.)
10. Contractors' obligations: theirs and ours.
11. Applicable SDS.

DOCUMENTATION

1. Written Hazard Communication program.
2. Chemical/Inventory List
3. All SDS and labels must be in English. SDS and labels of a second language may also be added where appropriate.
4. The Company will rely upon suppliers and chemical manufacturer/importers to provide hazard evaluations and SDS for all raw materials or products purchased by the Company.

REFERENCES **29 CFR 1910.12**

HOT WORK PERMIT

PURPOSE: Employees and contractors shall not engage in "hot work" without an approved hot work permit issued by the Company representative responsible for the worksite. Normally, the hot work permit will be task specific. Since atmospheric conditions change, it will require testing of the atmosphere prior to work and periodically to minimize the risk of fire.

The Company has established safety precautions to be taken when any work within a Classified Area requires an open flame or results in a spark.

DEFINITIONS

Classified Areas: shall consist of the following:

1. Open flame. Areas within 100 feet of production facilities, pipeline connections and valves; wellhead; rig floor; and substructure, mud pumps, mud pits, degasser, and stored flammables.
2. Spark producing devices. Areas within 10 feet of production facilities; pipeline connections and valves; tanks or vehicles that transport hydrocarbons such as vacuum trucks or fuel tanks; or wellheads; or any other area deemed necessary by supervision.

Note: The Operations Supervisor must approve any exception to a Classified Area.

Fire Watch: The person(s) and associated fire protection equipment assigned to stand by during welding, cutting, or open flame conditions. This is the only function of this assignment.

Lower Explosive Limit: The lower limit of flammability of a gas or vapor at ordinary ambient temperatures expressed in the percent of the gas or vapor in air by volume.

Spark Producing Devices: electrical hand tools, the opening of energized electrical junction boxes in Classified Areas, but not vehicle engines, pumping unit starters or lighting process heaters.

Company Site Supervisor: A Company Supervisor or Company employee or consultant designated as the Site Supervisor by an Company Supervisor.

Welder's Qualifications: Welder's Qualifications are set out in Exhibit I.

STANDARDS

I. Permit Procedures

A. Determine if a Hot Work Permit is necessary.

1. Permit (Exhibit II) is required in all Company operations for any work that requires an open flame, welding, hot tapping, burning, grinding, blasting, opening energized electrical junction boxes, or portable spark producing devices, including heaters, and electrical hand tools within a Classified Area. No work covered by these guidelines may be started before a Permit is issued.
2. Permit is not required when lighting process heaters.

B. Fill out the permit. The Permit must be completely filled out and signed.

C. Review the Permit Conditions. The Company Site Supervisor must verify that the following steps are completed before signing a Hot Work Permit:

1. The production/process equipment has been properly prepared and isolated as outlined in the Lock Out/Tag Out and Confined Space Entry Standard.
2. The Permit has been reviewed by the operating personnel, the party responsible for the job, lease pumper, and the operator or consultant in charge of the facility or area. Operating personnel must physically review the area and operating conditions before signing the Permit.
3. Welder qualifications have been met (see Exhibit I).
4. Provisions have been made, if required, for:
   a. Scaffolding.
   b. Drains and sewers covered with proper vapor barrier.
   c. Isolation of hot work area from other equipment or areas using fireproof tarps or water fog.
   d. Proper ventilation of equipment.
   e. Trained personnel for fire watch equipped with the proper fire extinguisher and safety equipment.
   f. Emergency response.
   g. Shoring and benching for excavation.

1. A pre-job meeting has been conducted to ensure all safety and health precautions are understood by the person(s) who will perform the work. Person(s) performing the work should sign the Permit. A completely filled out Job Safety Analysis (JSA) shall accompany the permit.
2. Necessary gas tests have been performed for explosiveness, toxicity or other hazardous conditions with readings recorded on the Permit. (Consult your Area EH&S Representative for assistance if needed).
   a. Only direct reading instruments capable of LEL measurement shall be used for the atmospheric testing needed for Hot Work Permits.
   b. Maximum allowable LEL reading for Hot Work Permits shall never exceed 20%. Levels in excess of 20% will cause all hot work to be halted immediately. The permit will be cancelled and declared null and void. A new permit must be reissued prior to the restart of work.
   c. If hot work is being performed in a Confined Space, LEL levels cannot exceed 10%.
7. The welding equipment has been inspected for the following:
   a. Cracks, splits, or loose connections in welding leads (If any found, must be repaired).
   b. Exhaust spark arrester and drip pans on machines used offshore.
   c. Leaks in connection to oxygen or acetylene bottles, hoses, and valves.
   d. Installation of back flow valves.

D. Approve the Permit. The Company Site Supervisor, after verifying that all Permit requirements have been met, may sign the Hot Work Permit.

II. Operations Under Permit

A. All work shall comply with the Permit.

B. Review the work in progress. Make periodic checks with an approved gas detector. If combustible gases are found, the job must be shut down. Work will not continue until a new Permit has been issued.

C. Immediately after the work is completed, the work area and adjacent areas will be inspected to ensure there has been no spread of sparks or heat. The Permit will be returned to the supervisor after the job is complete and the area is secure.

RESPONSIBILITIES

Employees will:

1. Attend and participate in mandatory Hot Work Permit training.
2. Follow Hot Work Permit guidelines in the Company Safety Handbook.
3. Ensure a copy of the Hot Work Permit is retained at the job site.
4. Notify the Company Supervisor upon completion of the job or cancellation of the permit.

Company Site Supervisor will:

1. Be responsible for accurate completion of all applicable sections of the Hot Work Permit.
2. Review key considerations as they relate to the control of fire or explosion.
3. Notify personnel in other areas, which may be affected during the job.
4. Determine the absence or concentration of any flammables.
5. Issue Hot Work Permit after an on-site inspection.
6. Retain their copy of the Hot Work Permit until the job is completed.
7. Sign and date permit.

Management will:

1. Ensure employee Hot Work Permit safety training records are maintained.
2. Retain Hot Work Permits for 2 years.

EH&S will:

1. Review and audit Hot Work Permit program effectiveness.
2. Provide technical support as needed.
   Develop, conduct and/or approve Hot Work Permit training programs.

HOT WORK PERMIT

TRAINING

1. Prior to issuing a Hot Work Permit, employees must be trained.
2. The EH&S Rep, in conjunction with operations personnel, will provide training.
3. Supplemental training will be conducted when new hazards are introduced.
4. To ensure competency, refresher training will be conducted on a frequency not to exceed every 3 years.

DOCUMENTATION

1. Original training records and documentation must be retained for each Company employee at that employee's reporting work location.
2. The worker's copy of the Hot Work Permit will be retained at the job site and submitted to the Company Supervisor upon completion of hot work.
3. Completed Hot Work Permits will be retained for at least 2 years.

EXHIBIT I

Welder's Qualifications. Work on any of the items listed below may be done only by personnel who meet the associated requirements. Current certifications shall be collected and maintained by the Company Site Supervisor. Welding should be performed in accordance with qualified welding procedures per API 1104. Engineering Department should be consulted for welding procedures for piping with outside diameters larger than 12.75 inches, wall thickness greater than 0.75 inches or yield strengths greater than 42,000 psi.

1. **Vessels:** Welders on Section S of API - 1104, or on ASME Section or Section IV boilers, or ASME Section VIII hydrocarbon vessels must meet ASME Boiler and Pressure Vessel Code, Section IX specifications.
2. **Gas Plants:** Welders on all gas plant or offshore platform process piping (ANSI B31.3 piping) must meet ASME Boiler and Pressure Vessel Code, Section IX specifications.
3. **Flowlines:** Welders on field liquid transmission piping or flowlines (ANSI B 31.4 piping) or field gas transmission piping or flowlines (ANSI B 31.8 piping) must meet ASME- Boiler and Pressure Vessel Code, Section IX, or API 1104 specifications.
4. **Wellheads, Casing, and Tubing:** Welders on wellheads, casings, and tubing must meet ASME Section IV for pressure containing components. Welders on surface casing must at a minimum be qualified to API 1104 or AWS D1.1, or be a competent welder, acceptable to the Company supervisor.
5. **Main Structural Welding:** Welders on major structural members must meet API 1104 or AWS D1.1 specifications. (Examples include: Deck beams, deck extensions, boat landings, and structural supports such as vent boom supports).
6. **Other Welding:** Any burning or welding on anything other than main structural or process equipment as defined in Sections 1 through 5) above shall be performed by personnel acceptable to the Company supervisor. "Other Welding" should be limited to minor structural welding.

PURPOSE: Lockout/Tagout procedures must be followed prior to work on equipment or processes where the unexpected energizing of such equipment could cause injury to an employee. Energy sources must be identified and energy control devices locked out and/or tagged out before working on the equipment. Sources of stored energy include electrical, mechanical, hydraulic, pneumatic or stored pressure. Typical equipment/process in oil field operations are pumping units, electric motors, compressors, pumps, engines, vapor recovery units, water filtration processes, and electrical control equipment.

The Company has established minimum standards for controlling energy sources during repair and/or maintenance of machines and equipment, and to aid in preventing injury to personnel, damage to property, and damage to the environment due to unexpected energization, start-up, or release of stored energy.
Contractors must follow Lockout/Tagout procedures equal to or safer than The Company's procedure. The Contractor is responsible for ensuring that its personnel and subcontractors are trained in Lockout/Tagout procedures.

STANDARDS

I. These guidelines shall be followed when performing repair and/or maintenance on all equipment including electrically driven machinery and equipment; mechanical equipment such as gas compressors, fire pumps, or cranes; hydraulic equipment; equipment operated by pneumatic, thermal, or chemical energy sources; and pressurized equipment. Detailed written LO/TO procedures are required and made available at each Operating Area. It is the responsibility of Operations personnel to develop and maintain all site specific LO/TO procedures.

Remember: The key to safe equipment repair and maintenance is good communication between all parties involved and adherence to approved lockout/tagout procedures.

II. LOCKS AND TAGS

A. All locks, tags, and other hardware required by this guideline will:
   - be provided by the Company.
   - be available to all employees at all times.
   - have only one key for a lock or a set of locks.

B. Each tag shall give the name of the person applying the lockout device and the date the tag was put on the device. Each tag shall indicate the condition to be avoided by the lockout/tagout, i.e., ***Do Not Start, Do Not Open, Do Not Close, Do Not Energize, Do Not Operate,*** etc.
C. Only the person who placed the lock and tag in service shall be permitted to remove it.
D. Locks and tags shall not be used for any purpose other than lockout/tagout.

III. LOCK AND TAG PREPARATION AND INSTALLATION

A. Survey the work area and equipment to verify that all equipment can be locked out or secured.
B. Shut down or turn off the machine or equipment to be worked on.
C. Physically locate all valves and switches and close, turn off, or blind to isolate any energy source from the machine or equipment to be worked on.
D. Render safe any stored hazardous energy by relieving, disconnecting or restraining it.
E. Place a lock and tag on each energy-isolating device. The one key will be held by the locking party until completion of the job or until authorized relief personnel complete the job.
F. Verify that the equipment is not operable.

IV. LOCK AND TAG REMOVAL - TEMPORARY OR PERMANENT

A. Reinstall all guards.
B. Return all exposed electrical wiring to a conformity with electrical code requirements.
C. Remove all blind flanges or skillets and properly connect piping.

D. Remove tools, materials, and other nonessential items.
E. Inspect and verify that all machine or equipment components are operationally intact.
F. Notify all employees in the area that lockout/tagout devices are ready to be removed.
G. Ensure that all employees are safely positioned or removed from the area.
H. Remove each lock and tag device from each energy isolating device.

Note: Temporary removal of lock out devices and reenergization is permitted only during the limited time necessary for the testing and positioning of machinery.

V. PERSONNEL

A. Only qualified personnel are allowed to start up machinery or equipment after it has been determined that no personnel are exposed to any hazards and all safety checks have been satisfied.

B. In the event shift or personnel changes occur during maintenance and/or repair activities, the designated Company representative in charge shall take necessary steps to maintain the continuity of the lockout/tagout protection. This shall ensure that all provisions in this procedure are adhered to, and transfer of lockout/ tagout devices between affected employees is accomplished properly.

RESPONSIBILITY

Employees will:

1. Identify when LO/TO procedures are required.

LOCKOUT/TAGOUT

Management will:

1. Prepare and maintain site-specific LO/TO procedures.
2. Ensure all locks, tags and other hardware are available to all employees at all times.
3. Ensure only one key for a lock or set of locks.
4. Maintain continuity in the event of shift or personnel changes.
5. Provide Lockout/Tagout training to employees.
6. Maintain appropriate documentation.

EH&S will:

1. Provide technical support.
2. Review and audit the effectiveness of the Lockout/Tagout program.
3. Develop, conduct and/or approve Lockout/Tagout training programs.
4. Perform and document annual audits.

Contractor will:

1. Maintain their own program to meet the Company Standard and OSHA, 29 CFR 1910.147.
2. Identify when LO/TO procedures are required for their employees.
3. Implement procedures during repair and maintenance activity including using their own locks and tags.
4. Ensure continuity in the event of shift or personnel changes.
5. Conduct pre-construction meetings to resolve any Company/ Contractor Lockout/Tagout differences or conflicts that may create a hazard.

TRAINING

1. Each employee must be trained in Lockout/Tagout prior to initial assignment at an Company's facility or location. Untrained workers may work under direct supervision of an employee who has been trained and can communicate the requirements of Lockout/Tagout to the untrained worker.

2. Training for any alternative Lockout/Tagout method must be presented to all employees and contractors who have any potential exposure to the affected system(s).

3. Refresher training will be conducted at an interval not to exceed every three years, or when the need for more frequent refresher training is recognized.

4. Supplemental training will be conducted when new hazards are introduced.

DOCUMENTATION

1. Original training records and documentation must be retained for each Company employee at that employee's reporting work location.

2. All site-specific Lockout/Tagout procedures will be kept on file locally.

3. All alternative method Hazardous Energy Control procedures must be documented, endorsed, and kept on file for the duration of the project for which they are intended.

REFERENCE

29 CFR 1910.147

PERSONAL PROTECTION EQUIPMENT

PURPOSE: OSHA standards require employers to furnish and require employees to use suitable protective equipment where there is a “reasonable probability” that injury can be prevented by such equipment. The standards also establish requirements for specific equipment.
While use of personal protective equipment is important, it is only a supplementary form of protection, necessary where all hazards have not been controlled through other means such as engineering controls. This standard outlines personal protection requirements for Company employees, contractors (and their agents, etc.) and visitors. Loaner equipment may be available for visitors at the location. Call the location in advance to check if available.

DEFINITIONS

Don/Doff: To put on or take off.
Hazard Assessment: A survey of work areas to determine what types of Personal Protective Equipment are necessary in order to prevent injury from any potential hazard sources.
Personal Protective Equipment (PPE): Equipment designed to protect from injury to the eyes, hands, feet, face, head, and other parts of the body from hazardous substances or conditions. Depending on the type of work, some or all of such equipment may be necessary.

STANDARDS

I. COMPANY REQUIREMENTS

A. Appropriate PPE shall be worn by all employees, visitors,contractors, and their agents, etc. when working on or around a Company field location.
B. PPE, provided by either the Company, the individual, or the contractor, must meet standards established by recognized governmental and/or industry groups.
C. Employees are responsible for the sanitary condition of their PPE.
D. A Hazard Assessment will be conducted by the Supervisor (with help from the EHS Coordinator) for his operating area. The assessment must identify the task evaluated, the date(s) of the assessment, and the person making the assessment. The Hazard Assessment shall be documented on Company’s Hazard Assessment Checklist.

II. HEAD PROTECTION

A. All personnel working on or around Company field locations, when not in a vehicle or the living quarters/office, shall wear an ANSI Z89.1 hard hat.

B. Company will provide head protection (hard hat) that conforms to current ANSI Z89.1 to its employees and agents. Contractors are required to supply their own head protection to their own employees, visitors, and agents, etc.

III. HEARING PROTECTION

A. All personnel working in an area where the noise level is 85 dBA or greater shall wear hearing protection.

B. Appropriate warning signs must be posted in high noise areas: (areas of 85 dBA or greater). Suspected high noise areas should be reported to a Company Supervisor or EH&S Rep for testing.

C. Annual hearing conservation training will be given to employees who are exposed to noise levels of 85 dBA (8 hour time weighted average) during a regular work assignment.

D. The Company will provide hearing protection to its employees and agents. Contractors must supply hearing protection to their own employees, visitors, and agents, etc.

IV. FOOTWEAR

A. All personnel working on or around Company field locations must wear current ANSI Z41 approved safety-toed shoes/boots.

B. The Company will provide an annual stipend of $100 to it's employees for the purchase required safety-toed shoes/boots. Contractors must supply safety-toed shoes/boots for their own employees, visitors, agents, etc.

V. EYE PROTECTION

A. All personnel working on or around Company field locations shall wear current ANSI Z87.1 approved safety glasses when not in a vehicle or the living quarters/office.

B. Safety glasses do not replace other types of eye protection currently required for performing specific job tasks. Other required types of eye protection include: splash goggles when working with chemicals; face shields when grinding, chipping, striking metal or other objects; filter-type lenses when welding or cutting.

C. Company will provide its employees with safety glasses meeting current ANSI Z87.1 standards: either plain spectacle-type safety glasses or prescription safety glasses for employees needing vision correction. Contractors must provide eye protection for their own employees, visitors, and agents.

D. The Company will reimburse an employee for the actual cost of prescription safety glasses (up to a maximum benefit, as stated below) for those employees who wear prescription lenses and whose job involves potential eye hazards as determined by a Facility Hazard Assessment. Typically, personnel with field operation responsibilities are eligible for reimbursement under this procedure. Eligibility for office employees will be determined based on exposure.

Prescription safety glasses shall be provided to eligible employees provided that:

a. The employee receives advance approval from his supervisor;

b. The employee uses a Company approved provider and

c. The safety glasses meet Company requirements.

The employee is responsible for the cost of eye examinations. The maximum benefit is $150 per pair of glasses.

New prescription safety lenses, and if necessary, frames, will be provided for eligible employees on a frequency of up to two pairs, (one each of clear and tinted lenses, and a maximum benefit of $300 for two pairs) every two years with the following provisions:

a. Each employee will provide a current prescription (no more than two years old) when the eyewear is ordered.

b. Fixed or detachable side shields must be obtained at the time of purchase.

c. Employees may order company approved safety eyewear with clear or tinted lenses, including prescription sunglasses.

d. Replacements shall be provided when an employee's lenses and/or frames are damaged during a work-related activity or when a prescription change warrants replacement.

e. Employees shall use side shields on their prescrition eyewear when there is a hazard from flying objects.

For employees required to wear prescription safety glasses under this procedure, the Company will reimburse an employee for actual cost of prescription safety glasses up to $150 per pair ($300 for the initial 2 pair). Again, in order to receive reimbursement, the employee must receive advanced supervisor approval. Reimbursement shall be made via expense check, with the employee providing proof of purchase or receipt.

VI. HAND PROTECTION

A. All personnel working on or around Company field locations shall wear hand protection appropriate for the potential hazards.
B. Company will provide hand protection to its employees. Contractors will be required to supply hand protection for their own employees , visitors, and agents, etc.

VII. RESPIRATORY PROTECTION

A. All personnel working on or around Company locations, including offices, shall wear respiratory protection where there is anticipated exposure to dust, fogs, fumes, gases and smoke.
B. Company will provide its employees with respiratory protection equipment as needed. Contractors will provide their own employees, visitors, and agents, etc. with respiratory protection equipment as may be required under the circumstances.
C. Personnel who are issued respiratory protection equipment must receive prior training in the care, use, and limitations of the equipment. Records of training will be kept in the district office.

VIII. Flame-Resistant Clothing (FRC)

GulfTex Energy has determined that to comply with OSHA require-

ments it will require all employees and third party service providers who perform work on GulfTex Energy's locations to wear FRC.

GulfTex Energy will not prescribe which style, manufacturer, or fabric type of FRC to wear, however, it must be compliant with NFPA 2112 and be labeled as such. Some FR clothing in the market is designed for and meets the specifications of the NFPA 70E, OSHA 1910.269, ASTMF1506 which are all for electrical arc flashing, not flash fire.

All employees/contractors must wear FRC at all active locations. Below is a list of some job duties that will require FRC:

A. Immediately upon arrival on all active drilling locations;
B. Immediately after drilling the surface casing shoe until rig down operations begin;
C. When independently gauging or witnessing gauging operations on any storage tank or pit;
D. When witnessing the transfer of liquids between tanks, trucks, pits, or pipelines;
E. When witnessing gas meter calibrations, orifice plate inspections, primary element inspections, or collection and analysis of gas samples;
F. When witnessing meter provings;
G. Immediately upon arrival of all active locations where well servicing/workover, completion or plugging operations are occurring;
H. Immediately upon arrival on any location where venting or flaring operation are occurring;
I. Immediately upon arrival any location to inspect, witness, or investigate any oil spill; and
J. During any other hazardous operations.

The FRC must cover the upper and lower body, and the outer most layer of clothing must always be flame resistant

Anyone working on a GulfTex Energy location not wearing FRC compliant with NFPA 2112 will be asked to leave the location.

RESPONSIBILITIES

Employees will:

1. Attend and participate in mandatory Personal Protective Equipment safety training.
2. Wear the appropriate PPE as required according to the hazard assessment.

3. Inspect and verify PPE is in good working condition prior to use. Equipment not in good working condition will be immediately removed from service and repaired before use or it must be replaced.
4. Immediately report any noncompliance activities to location management.

Management will:

1. Provide appropriate Personal Protective Equipment.
2. Ensure that PPE protection will be utilized only when engineering and administrative controls are not practical.
3. Ensure location hazard assessments are performed and documented.
4. Ensure employees are appropriately trained and maintain necessary documentation.
5. Ensure employee safety training records are entered info the training record database.

EH&S will:

1. Develop, conduct and/or approve personal protective equipment safety training programs.
2. Provide technical support as requested.
3. Ensure that all approved PPE used by employees complies with the appropriate ANSI standard.
4. Review and audit the effectiveness of the Personal Protective Equipment program.

TRAINING

1. Employees will be trained in the provisions determined by the location hazard assessment.
2. Each employee must be trained in Personal Protective Equipment prior to their initial assignment or must work under direct supervision of an employee who has been trained and can communicate the requirements of Personal Protective Equipment to the untrained worker. All new employees will be trained in Personal Protective Equipment within 90 days of employment.
3. Refresher training will be conducted at an interval not to exceed every three years, or when the need for more frequent refresher training is recognized.
4. Supplemental training will be conducted when new hazards are introduced.

5. Competency certification will be conducted and documented as necessary.

DOCUMENTATION

1. Original training records and documentation must be retained for each Company employee at that employee's reporting work location.
2. Copies of training records and documentation of certificates will be maintained in the district file.
3. Completed PPE hazard assessment form will be kept on file.

REFERENCES

Location Hazard Assessment Form.

29 CFR 1910.94, .219, .1001, .137, .268 (f), .133, .136, .132, 120,.95(b) (1), .134,.252-.257, (Subpart M), ANSI A14.31992, ANSI Z87.1-1989, ANSI Z24.22-57, ANSI Z41.1-67, ANSI Z88.2-69, ANSI Z89.1-71

Handling Cylinders:

1. Do not accept damaged cylinders.
2. Keep protective caps on cylinders not in use.
3. Keep cylinders away from direct flame, heat and sources of ignition.
4. Properly secure cylinders at all times. During movement, avoid rough handling and the striking of cylinders.
5. Cylinder contents must be properly labeled; do not rely on color of the cylinder, return to vendor if not properly labeled.
6. Close all valves when not in use.
7. Cylinder valves must have a handle or other shutoff mechanism in place while in use.
8. Regulators are to be removed from cylinders when not in use unless the regulator is designed to be capped or the cylinders are in an approved welding cart.
9. Discharge leaking cylinders outdoors by opening the discharge valve slowly - only one fourth of a turn at a time.
10. Use proper lifting cradles for cylinders. Do not lift by the valve or protective cap. Ropes and slings are not to be used for lifting cylinders.

Using Cylinders:

1. Never use a cylinder of compressed gas without a

pressure-reducing regulator connected to the cylinder valve.
2. Always close the cylinder valve before attempting to stop leaks.
3. Do not use oil or grease as a lubricant on valves or attachments to oxygen cylinders.
4. Threads on fittings must correspond to cylinder valve outlets. Check valves/flame arrestors are to be utilized on fuel gas/ oxygen systems.

Storing Cylinders:

1. Store cylinders in an upright, secured position.
2. Do not store oxygen cylinders within 20 feet (6 m) of combustible materials or fuel gases unless divided by a 5-ft. (1.75 m) fire resistant wall rated for one-half hour.
3. Store empty and full cylinders separately.

COMPRESSORS can be dangerous if not operated and maintained properly. If your work involves compressors, you should remember these precautions:

1. Check the position of suction, discharge, bypass, and vent valves before starting and loading the compressor. Do not take it for granted that the previous operator left the valves in the proper position(s). Check fluid levels in suction scrubbers and be sure that other people are clear of the unit.
2. Make sure, during the warm-up period before the suction valves are opened and before the engine is loaded, that no air can be pulled into the cylinder suction through the open vent or flare valves or through missing valve covers, bolts, etc. Pulling air into a compressor can result in an explosive mixture, which, when compressed to a high enough pressure, may result in auto-ignition and detonation. **Note: All compressors should be purged prior to starting.**
3. Follow the local Lockout/Tagout procedure before beginning work.

Other guidelines are:

1. Do not leave tools in walkways or places where vibration could cause them to fall.
2. Clean up oil spills and leaks as soon as possible.
3. Be sure to replace and securely fasten all guards in their proper positions after a job is completed.

4. Check to be sure that vibration is not causing excessive wear on lines, braces, etc., or loosening welds or bolts.
5. Replace any broken gauges and indicators.
6. Make sure the compressor skid is properly grounded. Be sure all relief valves and other safety devices are functioning properly.

PURPOSE: The intent of this policy is to provide Company supervisors, consultants or local field personnel with a general set of guidelines to reference when drilling, workover, well servicing, and when stimulation operations are being conducted on Company properties. The key to assuring contractors' compliance with the Company safety and environmental policies is the EXAMPLE set by the Company supervisor and the local field employees. The Company consultant or supervisor shall ensure that the rig crew and all service personnel are familiar with the Company standards, rules, policies, and procedures. The secondary intent is to provide well site contractors with a set of minimum safety standards for their operations while on Company properties.

Contractors are solely responsible for the safety of their employees while on Company properties. Contractors are fully responsible for providing applicable personal protective equipment (PPE) and adequate safety training to assure compliance with all state and federal regulations, industry standards, and Company's safety policies. Further, contractors must strive to ensure their equipment is maintained in a safe working order and inspected regularly.

The Company requires that each drilling/well-servicing contractor provide a copy of the contractor's Safety Manual as part of the terms and conditions of the contract.

The drilling/well-servicing contractor is responsible for implementing the safety requirements of their company and those of the Company. Any conflict with Company standards or policies shall be immediately brought to the attention of the Company's supervisor or drillsite consultant.

GENERAL PRECAUTIONS

1. The drilling/well-servicing contractor is responsible for the complete installation of all equipment prior to spudding or well work.

2. For critical or unusual operations, hold a pre-job safety meeting to review procedures, equipment locations, and emergency plans.

3. Park vehicles outside the guy line perimeter.
4. Contractors must provide adequately sized and properly located fire extinguishers.
5. Any open flames within 100 feet of flammables require a Hot Work Permit (See Hot Work Permit Standard).
6. Secure rig pump and lines and test before use. Install a check valve as close to the well as possible.
7. Where necessary, place barriers and signs to ensure unauthorized personnel will not enter high exposure areas.
8. Equipment should be tested to the rated working pressure of the lowest rated component of the system.
9. Special precaution and protective equipment may be required due to the chemicals being used on location including spent acids, drilling mud and caustics. SDS for all chemicals being used on location must be maintained and when appropriate should be covered at the pre-job meeting (i.e. stimulation work).
10. All onsite engines must be either located or equipped to prevent ignition sources.
11. Equipment and personnel should be located as far as is practical from the wellhead during stimulation treatments or other critical well work.
12. During critical lifts such as pulling stuck rods, tubing, drill pipe, clear the derrick and floor of personnel not specifically required.
13. Park all vehicles, other than authorized service vehicles, in a predesignated area or as far upwind as possible (preferably not less than 100 feet from the wellbore).
14. A survey should be conducted to identify electric lines before move in and rig up. When erecting a rig, maintain a clearance of at least 10 feet from high voltage lines. This clearance allows for wind guys, tubing, etc.
15. Any time work is performed on a Company pumping unit, the equipment must be properly isolated. All drilling and well servicing companies shall use Lockout/Tagout procedures on any company location. If necessary, refer to Company Lockout/Tagout Standard for guidance on energy isolation.
16. All high pressure lines should be staked, chained or otherwise secured. Proper precaution should be taken to minimize access to these areas (signs, tailgate meetings, barriers, etc.).

17. During high winds, lightning, or other severe weather, the well servicing operations should be suspended and the well secured until conditions allow safe operations.

18. No trash may be put in reserve pit or flow back pit.

WELL SERVICING

1. Attach guy wires and safety slide lines to approved anchors and flag at head level for notification.
2. Each well servicing unit should be leveled and properly guyed before work on the well begins.
3. Set and test anchors according to the manufacturer or regulatory guidelines.
4. When necessary, use backpressure valves or tubing plugs when removing the Christmas tree or master valve.
5. Do not operate well servicing units near any power line (See Electrical Safety section).
6. A heat fusible cap should be placed on the surface safety valve (if applicable) during well servicing operations.

BLOWOUT PREVENTORS

1. Use blow out preventors (BOPs) and test BOP accumulators after initial rig up and periodically during operations.
2. Whenever possible, pressure test BOPs, lubricators, and coil tubing prior to use and document. Use methanol or glycol/water where cold or hydrate conditions exist.
3. Consider using a stripping type annular preventor for situations where hydrocarbon releases may be anticipated. Situations that should be reviewed are well operations that may be hampered by the inability to fully circulate out hydrocarbon or excessive fluid losses.
4. Before installing BOPs over tubulars, check pipe ram for proper size.
5. Optional: After installation and secured torque, test annulus volume or tubing/casing annulus with pump to desired pressure. If applicable, a donut seal can be installed to test set screws and BOP.
6. Closure: Shut in operation, remove slips and wiper plate and visually inspect closure around tubulars.
7. A BOP shall not be moved from well to well without properly cleaning and testing rubber goods and seals.

HOT OIL

1. Where practical, locate hot oil units no closer than 50 feet upwind from the wellbore, flowline, tank, vessel, or other equipment. A Hot Work Permit is required if the hot oil unit is located less than 100 feet from the wellbore. Hot oil units should be equipped with a flame arrester.
2. When pumping heated oil under high pressure, install a check valve as close to the well or flowline as possible to prevent spraying hot oil in case of a line rupture.
3. Swabbing or hot oiling operations should only be performed in daylight or where adequate lighting is provided.

FLOOR SAFE PRACTICES

1. Drillers are responsible for their crew and should take every step to ensure a safe work environment. Drillers will observe their crew's actions and take all appropriate steps to avoid injuries and property damage, especially long operations during trips.
2. A kill valve will be accessible on rig floor while pulling and running tubing.
3. Rig floor must be kept clean and clear, with all tools orderly racked.

DRUGS, INTOXICANTS, WEAPONS

The use, possession, sale, purchase, transfer or being under the influence of alcoholic beverages, illegal drugs or other intoxicants while on Company business or premises is strictly forbidden.

The possession of firearms (including firearms carried under a concealed handgun or other permit, or any other types of weapons or explosives) on Company premises, including vehicles, or while conducting Company business, is strictly forbidden unless the employee has written permission from an officer of the Company.

Entry onto Company premises constitutes consent to, and recognition of, the right of the Company to conduct searches for intoxicants, illegal drugs, deadly weapons, and/or explosives.

Violation of these policies, or failure to cooperate with a search request, may, for a Company employee, result in disciplinary action and possibly termination, and, for a contract employee, result in removal from the premises.

Precautions

1. Only qualified or authorized personnel should repair or install electrical equipment. All electrical circuits should be de-energized whenever possible before an employee works on or near the electrical equipment.
2. All personnel are to be trained in the hazards of working on or near electrically related equipment.
3. Consider all electrical conductors energized. Utilize the Lockout/Tagout standard to isolate any electrical sources. (See Lockout/Tagout Safety Standard).
4. Use suitable protective equipment and tools including lineman's gloves, mats and blankets to provide insulation from other elements that are energized or grounded.
5. Uninsulated metallic items, such as rings, neck chains, watches, eyewear, etc. are not to be worn while working on open energized electrical equipment.
6. Do not render electrical interlocks inoperative by removal, modification or destruction.
7. Blown fuses shall be replaced only with the proper fuses.
8. Replacement of fuses requires the use of fuse pliers or proper personal protective equipment rated for use in high voltage areas.
9. Use non-conductive ladders when working on or near electrical equipment or conductors. The use of metal ladders is prohibited.
10. Defective electrical equipment or extension cords are to be tagged and immediately removed from service until repaired, or must be replaced.
11. Portable cord and plug connected equipment shall be inspected prior to each use and shall be equipped with a cord which has ground fault protection or is double insulated.
12. Extension cord sets are not to be considered permanent installations.
13. Electrical power tools and cords are to be checked for continuity/conductivity.

ELECTRICAL SAFETY

Power Lines

1. All power lines should be considered energized. When work is being performed near energized overhead power lines, the power company shall be contacted to determine the voltage present.

2. No part of a crane, boom, mast, gin poles or machinery should be permitted to be within 10 feet (3 m) of power lines rated 50 KV or below.

3. For energized lines rated above 50 KV, the minimum distance between power lines and the boom, mast, crane or its load, must be 10 feet (3 m) plus one - half inch (1 cm) for each KV over 50 KV.

Response Procedures: In case of fire, the following procedure should be used:

1. SUMMON HELP. Do not fight a fire before alerting someone else.
2. Analyze the situation, considering:
   - Is it a threat to life?
   - Is there damage to public property?
   - Is evacuating or extinguishing the fire possible?
   - Is notification and assistance from outside authorities appropriate?
   - Are hazardous or toxic chemicals present?
3. Isolate all fuel sources and/or threatened facilities.
4. Fighting a fire in the initial stages is considered incipient fire fighting. DO NOT FIGHT FIRES BEYOND THE INCIPIENT STAGE UNLESS YOU ARE TRAINED AND EQUIPPED TO DO SO AS A PART OF A FIRE BRIGADE OR EMERGENCY RESPONSE TEAM. Such fire fighting should be limited to trained personnel using fire extinguishers and water streams at long range.
5. Locate the fire fighting equipment and approach the fire FROM THE UPWIND SIDE. In the case of a gas fire, extinguish the fire by shutting off the fuel source.
6. NEVER ENERGIZE AN EXTINGUISHER WHEN ANY PART OF THE BODY IS DIRECTLY IN FRONT OF THE FILL CAP.
7. After the fire is extinguished, stand by to ensure there are no flashbacks.
8. Assess the damage and complete the necessary documentation. Do not discuss the fire with anyone other than your supervisor or the local EH&S Rep. If necessary, someone will be specifically assigned to relate the facts of the incident to the news media.

FIRE PROTECTION

PREVENTION IS THE BEST FIRE PROTECTION MEASURE!
Fire Prevention Guidelines

1. Class “A” fire materials (paper, wood, combustibles) should not be stored in or used as construction materials in process areas.
2. Buildings where solvents or chemicals are handled must be kept well ventilated at all times.
3. Report and repair all hydrocarbon liquid or gas leaks immediately. If immediate repairs are not possible, post an adequate warning sign, isolate the area, and take extra precautions against fire.
4. In the event of a hydrocarbon liquid or gas leak, extinguish all fires and remove other sources of ignition immediately. Shut down engines and other potential sources of ignition and extinguish such pilot lights. Report the leak promptly to the supervisor in charge. Shut off fuel supply or process if possible.
5. Use soapsuds when testing for gas leaks on connections. Never use an open flame.
6. Use gasoline as a motor fuel only. Using gasoline as a cleaning agent on Company property is strictly forbidden. A high flash point (140°F) safety solvent or citrus-based cleaner should be used to clean tools, machinery, and other similar equipment. Wear gloves made of hydrocarbon-resistant rubber to protect hands.
7. Transport gasoline only in approved, clearly marked containers. Never place gasoline containers inside car or truck passenger compartments.
8. Follow proper procedures when lighting direct-fired heaters.
9. Properly maintain flame arrestors and keep inspection port covers in place.
10. When transferring hydrocarbon (especially “flashing” liquids) from a line or vessel to another container, the source container and the receiving container should be electrically bonded to prevent ignition due to static electricity.

Fire Extinguisher Inspection and Maintenance

Fire extinguishers are an important segment of any fire protection program. Fire extinguishers should be:

1. Accessible

2. Properly maintained.

3. Inspected monthly by Company personnel and annually by trained personnel; all inspections must be documented.

4. Hydrostatically tested as required.

The supervisor is responsible for ensuring that all extinguishers are properly maintained and inspected. Each employee should know how to identify and report extinguishers needing recharging and/or maintenance.

HYDROGEN SULFIDE (H2S)

Hydrogen Sulfide (H_2S) in certain concentrations can be a safety hazard. The Company has developed a set of guidelines designed to protect its personnel and third parties from the harmful effects of H_2S.

It is Company policy that all employees, visitors, contractors, and their agents located at an H_2S site be trained in the recognition of danger and safe-operating procedures when working with H_2S. Employees and contractors are required to have read and be familiar with the H_2S Site Contingency Plan working in areas containing H_2S. Records reflecting the training and acknowledgment of training, will be kept by the Company district responsible for the site.

The following is a brief compilation of the properties and effects of H_2S, the detection devices, and safety precautions to be used in the presence of H_2S.

H_2S occurs in a variety of natural and industrial settings. It is generated as an unwanted by-product in industrial operations. It is also produced by bacterial action and decomposition of organic matter. Regardless of the origin, H_2S is very dangerous due to its explosive nature and toxicity. The principal concern from inhalation of H_2S is acute toxicity. H_2S causes paralysis of the respiratory center in the brain and can result in immediate collapse and death.

Properties of H_2S

1. It is a highly toxic, colorless gas.
2. H_2S can travel some distance close to the ground and may accumulate in low areas, if the gaseous hydrocarbon/H_2S or $C0_2$/H_2S mixture is heavier than air.
3. H_2S has an offensive odor like rotten eggs at low concentrations. However, THE SENSE OF SMELL IS A POOR INDICATOR OF H_2S since the olfactory section of the brain quickly becomes desensitized and can no longer detect the H_2S odor.

The explosive range for H_2S is extremely wide, from 4.3% to 46 by volume. The auto ignition temperature of H_2S is 500°F

1. H_2S is highly soluble in water and liquid hydrocarbons at elevated pressures and will come out as a gas at ambient conditions.
2. H_2S burns with a blue flame and produces sulfur dioxide (SO_2), another toxic gas.
3. H_2S is highly corrosive to metals and can also lead to hydrogen embrittlement and sulfide stress cracking.

Effects of H_2S Low levels of exposure may cause the following individual symptoms or a combination of these symptoms with longer exposure:

- Skin irritation
- Headache
- Dryness in nose, throat
- Loss of appetite
- Nausea
- Loss of consciousness or death
- Coughing
- Eye irritation
- Fatigue
- Dizziness
- Irrational behavior

Effects of H_2S

Concentration in parts per million (PPM)	Effect on the body:
0.003-.02	Odor Threshold.
Above 10	Toxic to personnel; wear respiratory protection equipment.
100 (NIOSH IDLH)	Quickly deadens the sense of smell. (olfactory fatigue or paralysis
Above 300	Considered Immediately Dangerous to Life or Health (IDLH). Respiratory equipment approved for this level must be used.
Above 500	Attacks respiratory center in brain causing loss of consciousness within 15 minutes.
Above 700	Rapid loss of consciousness, death.
Above 1000	Immediate unconsciousness and death if not revived promptly.

ALL H_2S EXPOSURE VICTIMS SHOULD BE TREATED BY A PHYSICIAN BEFORE RETURNING TO WORK.

HYDROGEN SULFIDE (H_2S)

H_2S Detection Devices

1. **Colorimetric tube detectors:** Generally used for screening purposes, but (if used in conjunction with the proper respiratory protection) can be used to test atmospheres for safe entry or work.
2. **Personal monitors:** Portable electronic units designed to alert personnel who may encounter H_2S levels beyond permissible exposure levels.
3. **Fixed monitors:** In areas where H_2S is present in high concentrations and can affect company or contractor personnel or the public, fixed monitor systems can be used to detect H_2S.

H_2S Respiratory Equipment

1. **Escape units:** Designed strictly for escape from an H_2S Atmosphere.
2. **Supplied air unit:** Generally used as a work unit. Such units must have a positive pressure feature and must be equipped with an escape cylinder, in case the air supply is interrupted.
3. **Self-Contained Breathing Apparatus (SCBA):** Can be used as work unit, but is the preferred standby & rescue unit.

H_2S Safety Precautions

1. DO NOT RELY ON YOUR SENSE OF SMELL TO DETECT H_2S.
2. Use detection equipment when working in an area where there is a possibility of H_2S gas, especially in enclosed or below grade areas.
3. Do not enter an H_2S area without proper training *(including CPR)* and authorization.
4. In atmospheres immediately dangerous to life or health *(IDLH level of 100 ppm or greater),* a standby person(s), with suitable self-contained breathing apparatus, must be available for purposes of rescue.
5. Never attempt to rescue an H_2S victim without proper respiratory protection in the form of a SCBA or an approved hose line unit.
6. Employees working in H_2S areas are required to be clean shaven to ensure a proper respirator mask-to-face seal.
7. Iron sulfide deposits are generally found in H_2S areas in tanks, vessels, and piping. Iron sulfide scale open to air should always be kept wet to prevent auto-ignition.

For additional information, contact your area EH&S Representative or the Corporate EH&S Department.

Naturally Occurring Radioactive Materials (NORM) are present in oil and gas operations at some locations and can deposits which usually in the form of scale, in well tubulars, surface piping, vessels, pumps and other processing equipment. The presence of NORM in equipment above regulatory levels can be determined by external radiation measurements. Although external radiation is seldom at levels considered to be of concern for personnel, when equipment is opened for inspection or repair, personnel can be exposed to radioactivity by inhaling or ingesting NORM. To prevent exposure to internal radiation, Company employees and contractors must follow the **Worker Protection Plan when opening NORM-contaminated equipment or piping.**

NORM WORKER PROTECTION PLAN

There are several precautions workers must take to safely work around NORM contaminated equipment and areas**.** *These include:*

1. Do not eat, drink, smoke, chew, dip snuff, or apply sunscreen or lip balm in the immediate work area where NORM-contaminated equipment or soil is being handled.
2. Where maintenance activities can be planned in advance, survey the equipment to measure the internal radiation exposure.
3. Avoid direct skin contact with NORM scale and sludge to the extent reasonably possible.
4. To the extent possible, contaminated equipment that is to be opened should be removed from service and vented for four hours before work commences. If the equipment cannot be left idle for four hours, shield the source by placing lead, steel, or iron between the NORM scale or sludge and personnel.
5. Keep NORM scale or sludge wet during maintenance or dismantling activities when vessels or piping will be opened to minimize dust generation during handling.
6. When moving or handling open equipment that has been identified as NORM-contaminated, wear plastic gloves at a minimum. If there is any likelihood that NORM scale or sludge will become loose or airborne, wear coveralls, safety glasses and an approved respirator for radionuclides. This applies even if the material is wet. Such work may include cutting, grinding, drilling, polishing or welding.

At a minimum, the respiratory protection should consist of a half-face piece respirator with High Efficiency Particulate Air (HEPA) rated cartridges approved for radionuclide dust. These cartridges have a magenta or hot pink color.

7. The number of personnel in the work area will be kept to a minimum.
8. After working on contaminated equipment, personnel will thoroughly wash their hands and face before eating, drinking, smoking, and chewing, and at the end of the day to prevent ingestion of NORM-contaminated material.
9. Where there is potential for significant dust containing radionuclides to be generated from material deposited on the ground, temporary plastic ground covers should be used when or where possible to contain any displaced NORM contamination.
10. If possible, openings on NORM-contaminated equipment should be capped, sealed or wrapped in plastic to minimize the generation of any dust or the displacement of scale or sludge that may contaminate the surrounding soil.
11. Contaminated protective clothing should be segregated in a drum until it can be scanned with a meter. If it exceeds regulatory limits, it will be handled as NORM waste.
12. Company personnel may not enter a NORM-contaminated vessel; only contractors with a specific license from the Texas Department of Health or another State may enter a vessel or perform decontamination work.

REMOVAL OF NORM-CONTAMINATED EQUIPMENT FROM SERVICE

When a piece of equipment or piping is removed from service and has been identified through external radiation surveys as NORM-contaminated:

1. To the extent possible, the openings will be covered with plastic to prevent soil contamination, and the equipment will be labeled as required.
2. The EH&S Department should be contacted so that plans can be made for decontaminating the equipment or disposing of it, and so that the combined external radiation levels of the stored equipment can be determined.

3. Decontamination will be contracted out to service companies who hold specific licenses for NORM removal. All NORM removal operations will be performed under the direction of a Radiation Safety Officer.

TRANSPORTATION OF NORM

The Department of Transportation (DOT) regulates the transportation of hazardous materials, including radioactive materials. Call the EH&S Department for instructions on how to fill out the shipping forms.

PERFORATING SAFETY

Before any work is done, the Company representative and service company operator should review the service company's written precautions, and identify and eliminate specific hazards that can be present. The following general safety procedures should be followed to minimize hazards.

Implementing this safe work practice is the responsibility of the drilling or production supervisor initiating the perforating operation.

Precautions

1. Signs or designated personnel should be posted at entrances to location to notify visitors that explosives are in use.
2. Before starting work, hold a meeting to review safety procedures with all rig crews and other personnel working on the location.
3. All personnel not involved in handling the explosives must be alerted to stay away from the work area and out of the perforator's line of fire.
4. Turn off radio and telephone transmitters, cell phones, welding machines and other electrical power sources located within 500 feet of perforation operations and not required for handling the explosives and other necessary operations. Prior to loading the gun, the Company supervisor should notify the supervisors of surrounding facilities that all radio transmitting equipment including remote monitoring and control devices (RMC) have been turned OFF.
5. Hazards from static electricity that can be present from approaching electrical storms or blowing dust, should be evaluated and proper precautions taken.
6. All equipment should be electrically grounded as specified by service company procedures and checks should be made for stray currents. The source of any hazardous stray currents should be located and eliminated.
7. These procedures should remain in effect until the job is complete and explosives are safely stored.
8. In offshore perforating jobs, the dispatcher must inform all boats and helicopters of the location of the perforating job and request radio silence for that location during the perforating operation.

9. The circuit breaker switch on the unit electrical panel must be locked in the open or off position until the perforating gun is in place downhole and ready to be fired. After firing, the switch must be returned to the open or off position and remain there.

RESPIRATORY PROTECTION

RESPIRATORY PROTECTION PROGRAM Respiratory protection should be provided to Company employees on the basis of hazard exposure**.** ***The supervisor's responsibility is to ensure that:***

1. Only approved respiratory protection equipment is used. NIOSH-approved breathing equipment is required.
2. All employees using respirators are properly trained and physically able to use the equipment. Employees should be trained in the proper selection, use and limitations of respirators.
3. Employees who are required to wear respirators remain clean shaven to ensure a proper equipment fit.
4. Where practical, respirators are assigned to individual workers for their exclusive use.
5. Respirators are regularly cleaned and disinfected. Those used by more than one worker are thoroughly cleaned and disinfected after each use.
6. Respirators are stored in a convenient, clean, and sanitary location and protected against dust, sunlight, heat, extreme cold, excessive moisture or damaging chemicals.
7. Respirators used routinely must be inspected and maintained. Respirators for emergency use should be thoroughly inspected monthly and after each use, and such inspections must be properly documented.

   Each employee requiring respiratory protection is given an annual physical to ensure that the employee has no physical restrictions for using respiratory protection equipment.

Rigging Practices

1. Designate a storage area for slings and implement an inspection program.
2. Do not damage machines and soft surfaces with the lifting apparatus.
3. Avoid sharp bends in slings and protect slings from sharp edges and abrasions.
4. Set loads down on proper blocking — never directly on a sling.
5. Do not side load.
6. Maintain an angle between the sling and the horizontal greater than forty-five (45°) degrees to reduce stress on the sling.
7. Attach cable clips properly. The saddle should be on the load cable, the U-bolt on the dead end. Remember: “You can’t put a saddle on a dead horse.”
8. Do not stand or walk under suspended loads.
9. Do not leave loads unattended at any time. Use tag lines of sufficient length to control the lift.
10. Personnel must be trained to know and use proper hand signals at all times.

Rigging Equipment

1. Know the safe carrying capacity of sling chains, wire rope, and other lifting apparatus and do not overload them. Contractors are responsible for their rigging equipment on any Company location.
2. Immediately discard defective lifting equipment.
3. Inspect all rigging equipment before each use.
4. Do not tie knots in sling chains, rope slings, or wire cables to shorten them.
5. Do not place bolts or other materials between links of chain to shorten or splice it.
6. Do not exceed the hoist load ratings and check the general condition before using the hoist.
7. Do not use rope for rigging or lifting loads except where it is impractical to use other materials.
8. Modify lifting equipment only after engineering approval.
9. Do not lift or hoist any object of unknown weight.

WELDING/BURNING

1. Keep welding leads and burning hose clear of passageways.
2. Inspect all leads, grounds, clamps, welding machines, hoses, gauges, torches, and cylinders each day before use. Contractors are responsible for their equipment while located on Company property.
3. Be sure all fittings, couplings, and connections are tight.
4. Avoid breathing fumes. Use the exhaust system in the shop, a blower, or a respirator when necessary.
5. No welding or burning is to be done on a closed vessel or tank, or on any vessel or tank which has not been decontaminated (steamed cleaned if hydrocarbon).
6. Before striking an arc or lighting a torch, check with the Company representative to see if a Hot Work Permit or Lockout/Tagout is required. This permit is required in most welding and burning operations.
7. Each welder is responsible for containing sparks and slag and or removing combustibles to prevent fire.
8. A dry chemical fire extinguisher must be within close proximity of the welding or burning operation.
9. A fire watch is required whenever welding is performed around combustible materials.
10. Hoses and welding leads should not be run through high traffic areas.
11. Grounding lead should not be grounded further than 15 feet from welding operations when possible.
12. On offshore platforms, do not attach ground cable near deck drains.

Welders Qualifications Work on any of the items listed below may be performed only by personnel who meet the associated requirements. Current certifications shall be collected and maintained by the Comapny Site Supervisor. Welding should be performed in accordance with qualified welding procedures per API 1104. Engineering should be consulted for welding procedures for piping with outside diameters larger than 12.75 inches, wall thickness greater than 0.75 inches or yield strengths greater than 42,000 psi.

1. Vessels: Welders on Section 5 of API - 1104, or on ASME Section or Section IV boilers, or ASME Section VIII hydrocarbon vessels must meet ASME Boiler and Pressure Vessel Code, Section IX specifications.
2. Gas Plants: Welders on all gas plant or offshore platform process piping (ANSI B31.3 piping) must meet ASME Boiler and Pressure Vessel Code, Section IX specifications.
3. Flowlines: Welders on field liquid transmission piping or flowlines (ANSI B 31.4 piping) or field gas transmission piping flowlines (ANSI B 31.8 piping) must meet ASME Boiler and Pressure Vessel Code, Section IX, or API 1104 specifications.
4. Wellheads, Casing, and Tubing: Welders on wellheads, casings, and tubing must meet ASME Section IV for pressure containing components. Welders on surface casing must at a minimum be qualified to API 1104 or AWS D1.1, or be a competent welder, acceptable to the Company supervisor.
5. Main Structural Welding: Welders on major structural members must meet API 1104 or AWS D1.1 specifications.

(Examples include: Deck beams, deck extensions, boat landings, and structural supports such as vent boom supports).

6. Other Welding: Any burning or welding on anything other than main structural or process equipment as defined in A and B above shall be performed by personnel acceptable to the Company supervisor. “Other Welding” should be limited to minor structural welding. *(Examples include: handrails, grating, pipe supports, fire tubes).*

AUTOMOBILES

General Safety Requirements

1. When, in the opinion of the driver, conditions for driving are unsafe, it shall be the driver's responsibility to stop driving.

2. No person shall ride on a vehicle except within the passenger compartment.

3. Avoid backing whenever possible. Never back around a corner or into an area with poor visibility. Never attempt to back using the rear-view mirrors.

4. Any automobile incident, major or minor, involving a Company-owned, rented, or leased vehicle must be reported as soon as possible to the supervisor, and required Company, federal, and state accident forms must be completed.

5. Attend regularly scheduled drivers training.

6. Alcoholic beverages are not permitted in Company vehicles. Also, do not drive "under the influence" of alcohol or other substances which might impair your judgment or reaction time , this includes for example both prescription and non-perscriptiopn drugs.

7. Firearms are not permitted in Company vehicles unless prior approval has been obtained from an officer of the Company.

8. Employees are expected to drive in accordance with the law and in a manner consistent with weather and road conditions. Any stationary or moving violations and resulting fines or penalties are the driver's personal responsibility. Drive defensively at all times.

9. You must have a valid driver's license in your possession while operating a Company vehicle. Employees must notify the appropriate supervisor of any suspension of his/her license immediately. If you drive a Company vehicle in the day-to-day performance of your job duties, loss or suspension of your driver's license due to either job-related or non job-related activity may result in your being suspended or terminated by the Company.

10. Seat belts must be worn by all passengers in Company vehicles, including rental cars. The driver is responsible for ensuring that all passengers are wearing seat belts prior to putting the vehicle in motion.
11. If you have an assigned Company vehicle, you are responsible for the appearance and mechanical maintenance of the vehicle, as well as all routine reporting, license renewals, inspections, etc., at the Company's expense.
12. Radar detectors are not permitted in Company vehicles.

Automobile Equipment, Maintenance, & Inspection

1. Company vehicles shall be inspected daily by the driver to assure that the vehicle is in good mechanical condition and properly equipped. The driver of a Company vehicle is responsible for the condition of the vehicle, which is to be maintained at Company expense.

2. Company vehicles in field operations shall be equipped with a fire extinguisher. Each operation's employee assigned a Company vehicle will ensure that the extinguisher and first-aid kit are properly maintained.

3. Exhaust systems must be properly maintained to prevent carbon monoxide poisoning.

4. Vehicles equipped with catalytic converters present hazards due to potentially excessive temperatures of the converter. Care should be exercised so that fires are not ignited due to improper parking or standing in grassy or bushy areas.

5. Flammables such as gasoline and methanol must be stored in approved containers for transportation. Certain regulations apply when transporting flammables and other hazardous chemicals. Contact your local EH&S Rep for specific information on transporting chemicals and flammables.

CRANES

If your job assignment has you working in the area of crane operations, such as a rigger for the crane, you should keep the following precautions in mind:

1. The crane shall be inspected daily prior to operation, to be sure all components are functioning properly. This applies to the slings and other riggings as well.
2. The crane shall never be overloaded. Be sure the proper load chart and master weight manifest is posted in clear view of the operator and never attempt to pick up a load about which you are unsure.
3. Never ride the "headache" ball *(connected to the fast line).* If personnel lifting is required, an approved personnel-carrying device shall be used.
4. The hook should be positioned directly over the load to avoid a side thrust *on* the boom and to prevent the load from swinging.
5. All running hooks shall have keepers or safety latches. When possible, use shackles instead of hooks.
6. Lift cables shall not be wrapped around the load. Slings or chokers should be used instead.
7. Tag lines will be used when the situation dictates. The lines shall be free of knots.
8. Sharp corners of the load should be padded where they contact slings.
9. Loads shall not be moved above personnel.
10. All personnel must be clear before a load is lifted or landed.
11. The crane operator shall designate one signal man. However, all persons working in the immediate area must know the signals.
12. The crane operator shall respond to signals only from the appointed signal man, but shall obey a **"STOP"** signal at any time, no matter who gives it.
13. No one shall ride on the load being lifted by the crane.

Forklifts are indispensable tools for moving heavy objects and require special care in operation and proper maintenance. An inexperienced operator can unexpectedly lose control and cause injuries or damage the load being moved. Use of forklifts is restricted to trained personnel authorized by the supervisor. Information and training may be obtained from the area EH&S Representative.

Precautions

1. Inspect forklifts before and after use, including warning and safety devices. Report any deficiency to the supervisor in charge of the forklift.
2. Set brakes and block the wheels on trailers or trucks being loaded or unloaded to prevent movement.
3. Never handle loads above the rated capacity of the forklift.
4. Carry loads low, forks just off the floor and tilted back.
5. Do not allow any person to stand or walk under elevated forks, whether loaded or empty.
6. Move all 55 gallon drums on a pallet, drum rack, in a basket or with a drum handling extension. No drums should be moved by “sandwiching” them between the forks.
7. Do not use forklifts to raise personnel for overhead work without an approved platform equipped with forklift shutdown controls.
8. Do not make turns on a ramp or grade.
9. Do not carry passengers or riders on forklifts.
10. When a job is complete, make sure that:

    •Forks are fully lowered,

    •Controls are neutralized,

    •Brakes are set, ..

    •Wheels are blocked if parked on an incline,

    •Power or engine is shut off.

WENCH TRUCKS, HOISTS

The following safety rules apply:

1. When trucking loads are over 12 feet wide, you should ensure that a permit escort has been arranged when required.
2. Do not stand under loads.
3. Attach the winch line to the load, to the satisfaction of the truck driver or operator, then get out of the way. Stay out of the way until the load is lowered and the driver or operator signals you back in.
4. When lifting smooth loads like large diameter pipe, make a double wrap of the winch line to ensure it does not slip during lifting or spotting.
5. Use one or more tail ropes to guide any heavy load into or out of a tight space. Never get under the load. Tail ropes can also be used to control awkward loads like pipe or culverts.
6. To avoid swinging or danger to passing vehicles, secure all loads hanging from the gin poles. This particularly applies when moving pipe over public roads.
7. Attach a red flag to any projecting load when traveling on or crossing a public road.
8. Do not position your body between the back of the truck and the loading dock or other solid obstruction, in case the truck rolls back or is backed up by the driver.
9. If entry into a narrow space behind the winch truck is necessary, be sure the driver is aware and then get out as soon as possible.
10. Watch the gin poles to see that they do not make contact with an overhead power line or obstruction. Minimum clearance of any energized power line should be ten feet. If any part of the truck or crane touches a power line, do not touch the vehicle. Do not touch the line or allow anyone still inside the vehicle to dismount until it is clear of the power line.
11. When handling a wench line, the wearing of appropriate hand protection is required to avoid injuries to the hands.

DOT Notification: If a release from a DOT regulated pipeline results in the death or inpatient hospitalization of any person, the National Response Center and the State Pipeline Safety Agency must be notified as soon as possible.

NRC: Call 1(800) 424-8802
Texas: RRC 24-hour Pipeline Safety: (512) 463-6788.

VEHICLE INCIDENTS All vehicle collisions involving a Company employee or vehicle shall be reported to your supervisor immediately. If possible, a copy of the police report should be forwarded with the first report of incident. If personnel are injured in a vehicle incident, the required injury report shall be completed in addition to the vehicle incident report. A Company Supervisor must be notified of any injury as soon as possible.

PROPERTY DAMAGE/THEFT Property damage in excess of $2,000 or theft shall be reported immediately to your supervisor. In the event of theft, the supervisor should notify the local authorities and file any required governmental reports.

SPILLS, RELEASES, FIRES & EXPLOSIONS must be reported immediately to a Company Supervisor.

The Supervisor will be responsible for:
Written documentation of the incident on an incident report form to be submitted electronically, or by fax, within 2 days of the incident. Also verbal notification to the Supervisor and EH&S Representative immediately for spills, releases, fires and explosions that may require notification to regulatory agencies.

INCIDENT REPORTING

The Supervisor is responsible for ensuring that the following verbal notifications are made:

- Any spill of hydrocarbons into waters of the U.S., including wetlands, that causes a sheen, discoloration, or emulsion in or on the water or on adjoining shorelines must be reported to: **National Response Center (NRC) (800) 424-8802**

Employee Safety Manual

REVISED 08-18-2021

I have been given a copy of this manual for my own use.

_____

Signature

_____

Date

PLACE IN EMPLOYEE PERSONAL FILE