HOCHSCHULE
RAVENSBURG-WEINGARTEN
UNIVERSITY
OF APPLIED SCIENCES

# Embedded Computing

## Slides to the lecture

Prof. Dr. Markus Pfeil

with kind permission of Prof. Dr.-Ing. Franz Brümmer

Winter semester 2026/27

© M. Pfeil and F. Brümmer

# Contents


| | |
|---|---|
| Reference | 7 |
| Introduction | 8 |
| Modeling | 38 |
| Cyber-Physical Systems | 85 |
| Processors | 113 |
| Programming | 182 |
| Peripherals and Interfaces | 230 |
| Networking (TCP/IP) | 284 |
| Operating Systems | 325 |

# Bibliography


[1] Peter Marwedel. **Embedded System Design: Embedded Systems Foundations of Cyber-Physical Systems, and the Internet of Things**. Springer, 4th edition, 2021.

[2] Edward A. Lee and Sanjit A. Seshia. **Introduction to Embedded Systems: A Cyber-Physical Systems Approach**. MIT Press, 2nd edition, 2017.

[3] Edward A. Lee. Cyber physical systems: Design challenges. In **11th IEEE International Symposium on Object Oriented Real-Time Distributed Computing (ISORC)**, pages 363–369, 2008.

[4] David Harel. Statecharts: A visual formalism for complex systems. **Science of Computer Programming**, 8(3):231–274, 1987.

[5] Daniel D. Gajski and Robert H. Kuhn. Guest editors' introduction: New VLSI tools. **Computer**, 16(12):11–14, 1983.

[6] C. L. Liu and James W. Layland. Scheduling algorithms for multiprogramming in a hard-real-time environment. **Journal of the ACM**, 20(1):46–61, 1973.

[7] Peter Fritzson. **Principles of Object-Oriented Modeling and Simulation with Modelica 3.3: A Cyber-Physical Approach**. Wiley-IEEE Press, 2nd edition, 2015.

[8] Joseph Yiu. **The Definitive Guide to ARM Cortex-M0 and Cortex-M0+ Processors**. Newnes, 2nd edition, 2015.

[9] David Patterson and Andrew Waterman. **The RISC-V Reader: An Open Architecture Atlas**. Strawberry Canyon, 2017.

[10] James F. Kurose and Keith W. Ross. **Computer Networking: A Top-Down Approach**. Pearson, 8th edition, 2021.

[11] Raspberry Pi Ltd. RP2040 datasheet. https://datasheets.raspberrypi.com/rp2040/rp2040-datasheet.pdf.

[12] Espressif Systems. ESP32-C3 technical reference manual. https://www.espressif.com/en/support/documents/technical-documents.

[13] Richard Barry. Mastering the FreeRTOS real time kernel – a hands-on tutorial guide. https://www.freertos.org.

[14] Rust Embedded Working Group. The embedded rust book. https://docs.rust-embedded.org/book/.

[15] Embassy project. Embassy book. https://embassy.dev/book/.

[16] Wokwi. Wokwi documentation. https://docs.wokwi.com.

[17] Stack Overflow. 2025 developer survey. https://survey.stackoverflow.co/2025/, 2025. 1.4

[18] DORA / Google Cloud. State of AI-assisted software development. https://dora.dev/research/publications/, 2025. 1.4

[19] METR. Measuring the impact of early-2025 AI on experienced open-source developer productivity. https://metr.org/blog/2025-07-10-early-2025-ai-experienced-os-dev-study/, 2025. 1.4

[20] METR. We are changing our developer productivity experiment design. https://metr.org/blog/2026-02-24-uplift-update/, 2026. 1.4

[21] Veracode. 2025 GenAI code security report. https://www.veracode.com/blog/ai-generated-code-security-risks/, 2025. 1.4

[22] Anthropic. How AI assistance impacts the formation of coding skills. https://www.anthropic.com/news/AI-assistance-coding-skills, 2026. 1.4

[23] M. Babiuch and P. Smutný. Benchmarking large language models for embedded systems programming in microcontroller-driven IoT applications. **Future Internet**, 18(2):94, 2026. 1.4

[24] Ruiyang Xu, Jialun Cao, Mingyuan Wu, Wenliang Zhong, Yaojie Lu, Ben He, Xianpei Han, Shing-Chi Cheung, and Le Sun. EmbedAgent: Benchmarking large language models in embedded system development. In **Proceedings of the 48th International Conference on Software Engineering (ICSE)**, 2026. arXiv:2506.11003. 1.4

[25] World Economic Forum. The future of jobs report 2025. https://www.weforum.org/publications/the-future-of-jobs-report-2025/, 2025. 1.4

[26] PwC. Two futures for jobs in an AI era: 2026 global AI jobs barometer. https://www.pwc.com/gx/en/issues/artificial-intelligence/ai-jobs-barometer.html, 2026. 1.4

[27] E. Brynjolfsson, B. Chandar, and R. Chen. Canaries in the coal mine? six facts about the recent employment effects of artificial intelligence. https://digitaleconomy.stanford.edu/publication/canaries-in-the-coal-mine-six-facts-about-the-recent-employmer 2026. Stanford Digital Economy Lab, revised August 2026. 1.4

[28] Bitkom. Der arbeitsmarkt für IT-fachkräfte 2026. https://www.bitkom.org/Presse/Presseinformation/IT-Fachkraeftemangel-in-den-letzten-drei-Jahren-halbiert, 2026. 1.4

[29] European Union. Regulation (EU) 2024/1689 (artificial intelligence act), article 4: AI literacy. https://eur-lex.europa.eu/eli/reg/2024/1689/oj, 2024. 1.4

[30] ISO. ISO/PAS 8800:2024 road vehicles – safety and artificial intelligence. https://www.iso.org/standard/83303.html, 2024. 1.4

[31] Orrick. EU AI Act update: Digital omnibus finalizes 8 compliance changes. https://www.orrick.com/en/Insights/2026/07/EU-AI-Act-Update-Digital-Omnibus-Finalizes-8-Compliance-Change 2026. 1.4

[32] Rui Pereira, Marco Couto, Francisco Ribeiro, Rui Rua, Jácome Cunha, João Paulo Fernandes, and João Saraiva. Energy efficiency across programming languages: How do energy, time, and memory relate? In **Proceedings of the 10th ACM SIGPLAN International Conference on Software Language Engineering (SLE)**, pages 256–267, 2017. 5.1

[33] Nicolas van Kempen, Hyuk-Je Kwon, Dung Tuan Nguyen, and Emery D. Berger. It's not easy being green: On the energy efficiency of programming languages. https://arxiv.org/abs/2410.05460, 2024. 5.1

[34] National Security Agency. Software memory safety (cybersecurity information sheet). https://media.defense.gov/2022/Nov/10/2003112742/-1/-1/0/CSI_SOFTWARE_MEMORY_SAFETY.PDF, 2022. 5.1

# 1 Introduction

# 1.1 What is an Embedded System?

## Definition

**Definition 1.1** *An **embedded system** is a computer system that is part of a larger technical system and performs dedicated functions in it – usually with requirements on timing, energy, reliability and cost.*

- the user sees the device (a car, a coffee machine), not the computer in it
- interaction with the environment through **sensors** and **actuators**, often without a screen or keyboard
- the software is fixed for the purpose ("firmware"), updates are rare and must be safe

## Embedded systems are everywhere

- tens of billions of microcontrollers are produced every year – many times more than PC and server processors
- a modern car contains 70 to over 100 control units (engine, brakes, airbag, lights, seats, infotainment)
- household: washing machine, heating, smart meter, router, TV, smart speaker
- industry: programmable logic controllers, robots, drives, sensors with network interfaces
- medicine: pacemakers, insulin pumps, ventilators
- communication: smartphones (several processors), base stations, satellites

# Structure of an embedded system

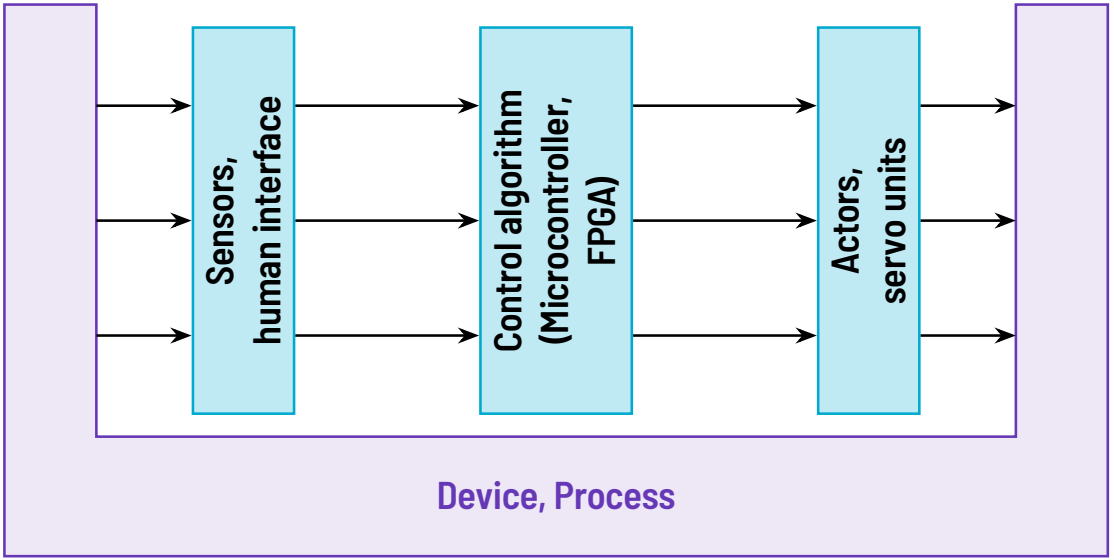



Figure 1.1.1: Block diagram of an embedded system

# A first example: a coffee machine in the simulator

```
void loop() {
  float t = readTemperature();                          // sensor: 10 mV per degC on A0
  if (t < 91.0) digitalWrite(PIN_HEATER, HIGH);         // actuator: two-point control
  if (t > 94.0) digitalWrite(PIN_HEATER, LOW);
  bool ready = t >= 90.0 && !brewing;
  digitalWrite(PIN_READY, ready);                       // user interface
  if (digitalRead(PIN_BUTTON) == LOW && ready) {        // "make coffee"
    brewing = true;  brewStart = millis();  digitalWrite(PIN_PUMP, HIGH);
  }
  if (brewing && millis() - brewStart >= 20000) {       // 20 s = one cup
    brewing = false;  digitalWrite(PIN_PUMP, LOW);
  }
}
```

- the **device** is simulated as well: a Wokwi **custom chip** with a physical model of the boiler, $mc\dot{T} = P_{heater} - k\,(T - T_{room}) - \dot{m}_{pump}\,c\,(T - T_{room})$
- the program knows the machine only through pins – like the real one
- Arduino Uno, runs in the browser: `examples/intro/coffee` (Rust: `coffee-rust`)

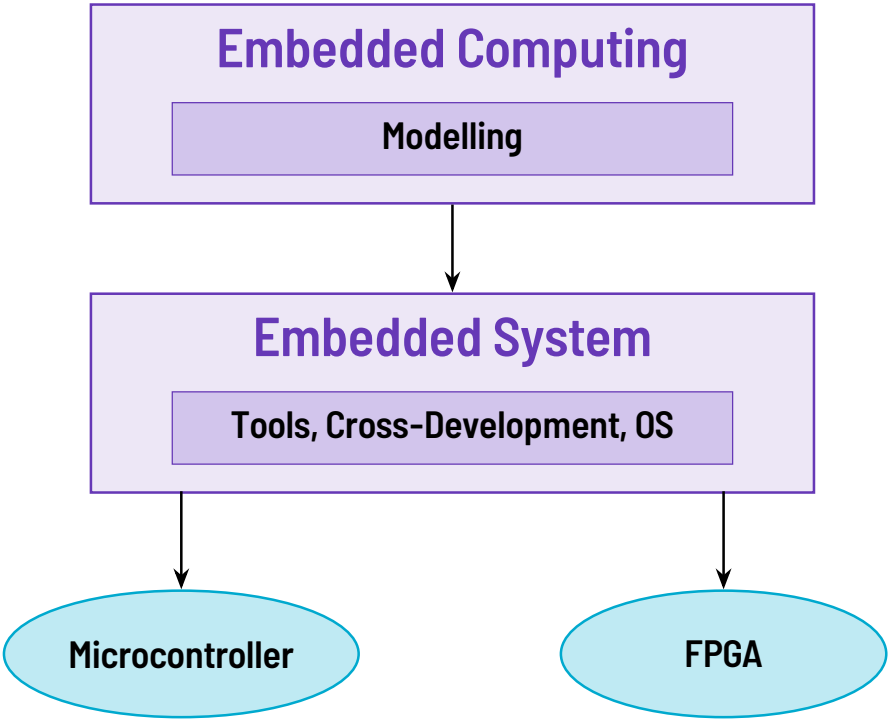



Figure 1.1.2: Embedded computing and the embedded system around it

# 1.2 Historical Background

## From room-sized computers to the microcontroller

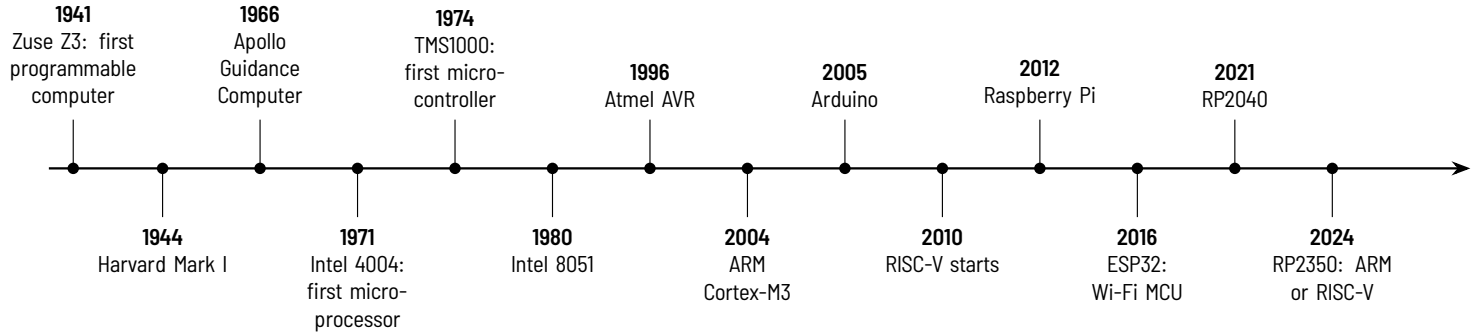



Figure 1.2.1: Milestones on the way to today's embedded systems

- the first computers (Zuse Z3 1941, Mark I 1944) filled rooms; the Apollo Guidance Computer (1966) was one of the first computers built into a vehicle
- the microprocessor (1971) and the microcontroller with memory and I/O on one chip (1974) made embedded systems cheap
- today a 32 bit microcontroller with Wi-Fi costs about one euro

# Computer generations

| generation | period | technology | typical systems |
|---|---|---|---|
| 1 | 1945 – 1955 | vacuum tubes | mainframes |
| 2 | 1955 – 1965 | transistors | mainframes, process control |
| 3 | 1965 – 1975 | integrated circuits | minicomputers |
| 4 | 1975 – | LSI / VLSI, microprocessors | workstations, PCs, microcontrollers |
| today | | systems on chip, many cores | smartphones, IoT, AI accelerators |

- the trend continues: more functions on one chip, less energy per operation, lower price
- **central vs. distributed**: instead of one central computer, many small connected controllers close to the sensors and actuators

# 1.3 Characteristics of Embedded Systems

## Dependability

- **reliability**: probability that the system works correctly for a given time, provided it worked at the start
  - operation for years without restart; recovery from errors by itself (watchdog)
- **maintainability**: how quickly the system works again after an error
- **availability**: probability that the system works at a given time
- **safety**: the system does not endanger people or the environment – even if it fails
- **security**: the system resists attacks; connected devices must be protected and updatable

Even perfectly designed systems can fail if the assumptions about the workload and possible errors turn out to be wrong.
Dependability must be considered from the very beginning – it cannot be added afterwards.

## Efficiency

- **energy**: battery operation for months or years, sleep modes, energy harvesting
- **code size and memory**: kilobytes instead of gigabytes; no hard disk
- **run time**: real-time requirements – a correct answer that arrives too late is wrong
- **size and weight**: the electronics must fit into the device
- **cost**: in a series of millions every cent counts; the development costs are spread over the number of devices

## Further characteristics

- **reactive**: continuous interaction with the environment, at its pace (chapter Modelling)
- **real time**: deadlines are part of the specification (chapter Operating Systems)
- **dedicated**: one purpose, known in advance – hardware and software can be optimised for it
- **heterogeneous**: hardware and software, analog and digital, different processors and networks in one system
- **long lifetime**: industrial devices and cars are used for 10 to 20 years – software must be maintained that long
- **cyber-physical**: computation and physics are coupled in feedback loops (chapter Cyber-Physical Systems)

# 1.4 Software Development and AI

## From code completion to agents

- **code completion** (e.g. GitHub Copilot, 2021): the tool proposes the next lines while you type
- **chat assistants** (since 2022): questions in natural language, explanations, code snippets to copy
- **agents** (since about 2025, e.g. Claude Code, Copilot agent mode, Cursor, OpenAI Codex): the tool reads the repository, changes several files, runs compiler and tests and repairs its own mistakes
- "vibe coding" (A. Karpathy, 2025): accept generated code without reading it; fine for a throw-away prototype, not for a product
- the developer types less and reviews, tests and decides more

## How a language model writes code

- a large language model continues a text with the most probable next words, learned from huge amounts of public code and documentation
- good at frequent patterns: boilerplate, explanations of code, translation between C and Rust, test cases, summaries of documentation
- weak at
  - rare or new things: a specific chip variant, the latest version of a HAL, an erratum in the datasheet
  - things that are not visible in the code: timing, electrical limits, the state of the hardware
  - it cannot tell when it is wrong; an invented function or register looks just as convincing as a real one (“hallucination”)
- the answer is only as good as the context: give it the datasheet section, the existing code, the exact error message and the tool versions

# Where AI is used in embedded development

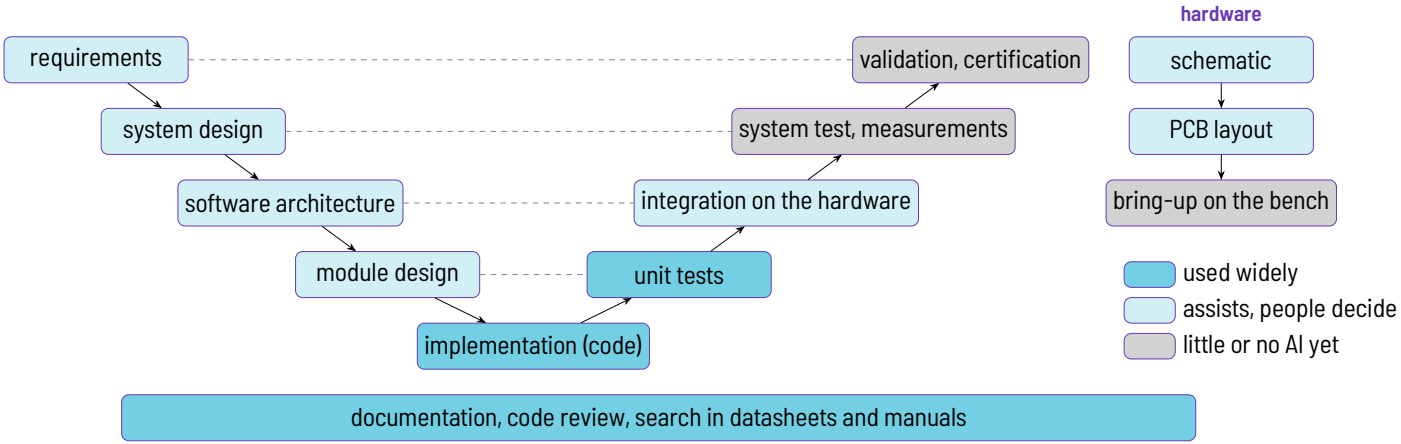



Figure 1.4.1: AI along the V-model of an embedded system (own assessment, 2026)

- AI is strongest where its result can be checked quickly and automatically: code that compiles and passes tests, text that a person reads
- it is weakest where the physical world, measurements or responsibility come in: the right side of the V and the lab bench

## AI in the development process today

- **code**: completion, chat and agents – by far the most common use [17]
- **tests**: unit tests, stubs for hardware drivers, simulation scenarios (like the Wokwi tests in this lecture)
- **reviews and static analysis**: review comments on pull requests, fix proposals for analyzer warnings
- **knowledge**: questions about datasheets and reference manuals, summaries, porting between C and Rust or between SDKs
- **debugging**: explaining crash dumps, logs and traces – the AI proposes hypotheses, the engineer checks them on the target
- **hardware**: schematic assistants (e.g. Flux), AI placement and routing of PCBs (e.g. Cadence Allegro X AI, Quilter); checked by design rules and engineers
- **chip design**: machine learning optimises the physical implementation of chips (e.g. Synopsys DSO.ai, Cadence Cerebrus)
- and **inside the product**: edge AI on microcontrollers – keyword spotting, anomaly detection on motors, small vision models

# What studies show

| study | finding |
|---|---|
| Stack Overflow 2025 [17]<br>49 000 developers | 84 % use or plan to use AI tools<br>46 % distrust the accuracy; 45 % find debugging AI code slow |
| DORA 2025 [18]<br>5 000 professionals | 90 % use AI at work; more changes delivered,<br>but delivery is less stable; AI amplifies a team's habits |
| METR 2025 [19]<br>randomised trial | experienced developers 19 % **slower** with AI,<br>although they felt 20 % faster; 2026: probably faster, uncertain [20] |
| Veracode 2025 [21] | 45 % of generated code samples had security flaws |
| Anthropic 2026 [22]<br>randomised, 52 people | learning with AI: 50 % in a test without AI,<br>without AI: 67 %; largest gap in **debugging** |

- feeling faster is not being faster; measure it

## AI in embedded systems

- embedded code depends on details that are rare in the training data: chip variants, register maps, SDK versions, wiring
- benchmark with 27 language models on the ESP32 [23]
  - simple sensor applications: 19 to 23 models delivered working code
  - complex applications (sensor, cloud database, dashboard): only 3 to 5 models
  - most frequent failure: libraries and functions that do not exist, or wrong use of real APIs
- benchmark EmbedAgent (Raspberry Pi Pico, ESP32, Arduino, 126 tasks) [24]: the best model solved about 56 % of the tasks; porting code from Arduino to ESP-IDF succeeded in fewer than 30 % of the cases
- many errors show up only on the hardware or under real timing; that the compiler accepts the code proves little

## Where AI is not (yet) active

- **on the bench**: bring-up, oscilloscope and logic analyzer, EMC and thermal tests – the AI does not see the hardware, it only sees what we give it
- **timing guarantees**: worst-case execution time and schedulability come from measurements and static analysis tools, not from a language model
- **certified safety software** (ISO 26262, IEC 61508, DO-178C)
  - tools need a confidence or qualification argument; LLM output is not deterministic
  - generated code is treated like hand-written code: same reviews, tests and coverage
  - qualified code generators exist, but they are deterministic and work from models (e.g. SCADE, Simulink Embedded Coder)
- **responsibility**: release decisions, safety cases and liability stay with people and companies – the EU Product Liability Directive (2024) includes software
- **AI inside safety functions** is still rare: ISO/PAS 8800 for AI in road vehicles appeared in 12/2024 [30]; the AI Act obligations for AI in regulated products were postponed to 08/2028 [31]
- and where the data must not leave the company: confidential code, customer projects, export control

## Experience from preparing this lecture

- we wrote the examples of this lecture with an AI assistant, then compiled each of them and ran it in the Wokwi simulator
- the tests found errors in code that compiled without warnings, for example
  - a FreeRTOS demo that could not show the race condition at all, because the first task finished before the second one was created (chapter Operating Systems)
  - an MQTT client that the public test broker sometimes rejected, because a packet was sent in two TCP segments (chapter Networking)
  - a PWM calculation that assumed a 125 MHz system clock, while the Arduino core runs the RP2040 at 200 MHz
  - a delay that took 4 $\mu$s instead of 1 ms in the simulator; the debugger and a measurement found it (chapter Programming)
- to find them we needed to know how the scheduler starts tasks, how TCP splits data and how the clocks are configured, plus one long debugging session; tests that check the behaviour caught what the compiler could not

## How the development environment changes

- more code is **read and reviewed** than written by hand
- specifications, interface descriptions and test cases become the input for the AI, so precise requirements pay off twice
- automatic checks become more important: compiler warnings, static analysis, unit tests, simulation (Wokwi), continuous integration
- projects are organised so that tools find the context: clear structure, documented interfaces, README files
- the engineer stays responsible: safety standards (IEC 61508, ISO 26262) require traceable requirements, reviews and tests, no matter who or what wrote the code
- new questions: confidentiality (company code in external services), licenses of generated code, reproducibility

# AI and the job market

| source | finding |
|---|---|
| WEF Future of Jobs 2025 [25]<br>1 000 employers, 55 economies | AI and big data are the fastest-growing skills,<br>followed by networks and cybersecurity; 39 % of core skills change by 2030 |
| PwC AI Jobs Barometer 2026 [26]<br>over 1 billion job ads | jobs with AI skills pay on average 62 % more;<br>US entry jobs exposed to AI ask 7 times more often for senior skills |
| Stanford, "Canaries" 2026 [27]<br>US payroll data | age 22–25 in AI-exposed jobs: employment 19 % below less-exposed peers;<br>fewer hires, no gap for experienced staff; no general job loss |
| Bitkom 2026 [28]<br>602 companies | 79 000 open IT positions in Germany (2023: 149 000);<br>63 % expect AI skills in **all** IT jobs; 55 % expect classical entry tasks to disappear |

- AI shifts the work more than it removes it: jobs where AI assists people grow, jobs where it replaces routine tasks hire fewer beginners

## What employers ask for

- working with AI tools is a basic requirement, not a speciality: giving context, splitting tasks, reviewing and testing the result
- judgment from the first day: beginners do less routine work and more checking, integrating and deciding
- governance: 74 % of the companies in the Bitkom survey expect steering and controlling AI to become more important [28]
- AI literacy is a legal duty: since 02/2025 the EU AI Act (Art. 4) requires employers to train staff who use AI, supervised since 08/2026 [29]
- in embedded systems in particular
  - security and update processes: the EU Cyber Resilience Act requires vulnerability reporting since 09/2026 (chapter Networking)
  - edge AI: running small neural networks on microcontrollers (TensorFlow Lite Micro, quantisation, memory and timing budgets)
  - functional safety: traceable requirements and tests, also for generated code
- and still: analytical thinking, which 7 of 10 employers in the WEF survey call the most important core skill [25]

## Preparing for your career

- learn the basics so well that you notice when the AI is wrong; this is what distinguishes you from the tool
- build projects that you can explain in an interview line by line, including the bugs you found
- show that you can verify: tests, simulation, measurements, reviews
- learn one agentic tool properly, including its limits, and the rules of your employer on confidential code
- keep learning: 61 % of the companies expect more pressure on IT staff to train continuously [28]

## Critical skills for working with AI

- **specifying**: a precise task with interfaces, limits and acceptance criteria – a good prompt is a good specification
- **giving context**: chip and board, SDK version, datasheet section, memory, timing and power budget
- **verifying**: tests designed independently of the code, simulation, measurement on the target
- **reviewing**: spotting the errors that look right – races, interrupts, missing `volatile` overflow, resource limits
- **knowing the tool**: how language models fail (invented APIs, outdated versions), what an agent may change and run
- **protecting data**: no secrets, no confidential or personal data in external services; licenses of generated code
- **thinking in systems**: hardware, software and the physical process together – as in the case study of chapter Operating Systems

## Skills that must stay active – also with AI

- use it or lose it: practise regularly **without** AI – when the tool is wrong, unavailable or not allowed, you need these skills
- computer architecture, memory, interrupts and concurrency: without them you cannot tell wrong code from right code
- reading datasheets and reference manuals, the only reliable source for registers, timing and electrical limits
- specifying a problem so clearly that a colleague, or an AI, can solve it: requirements, state machines, interfaces
- reading code critically; you commit only what you understand
- testing: designing tests, simulating, measuring, and knowing when something is really done
- debugging with debugger and logic analyzer, step by step; this was the largest gap in the Anthropic study
- asking what happens if the system fails or is attacked
- seeing hardware, software and physics as one system
- explaining and documenting decisions for the team

## Responsible use of AI in this lecture

- **learn first**: try a problem yourself, then use AI to ask **why** – in the Anthropic study, learners who asked conceptual questions learned the most [22]
- **understand**: hand in only code and text that you can explain line by line – we will ask
- **verify**: check every API and register against the documentation, test in Wokwi or on the hardware – "it compiles" is not "it works"
- **be transparent**: state which tool you used and for what (one line in the lab report is enough)
- **protect data**: no personal data, no exam material and no confidential company code in external AI services
- **follow the rules**: what is allowed in graded work is announced with each assignment; the examination rules of the university apply
- **the lecture does the same**: its examples were written with an AI assistant, then compiled and tested in the simulator – report the errors you still find

## Exercises

- Let an AI assistant write the debouncing example of chapter Peripherals and Interfaces in C. Review the code, run it in Wokwi with a bouncing button and list all problems you find.
- Ask an AI for the address of the register `GPIO_OUT_XOR` of the RP2040 and for the meaning of its bits. Check the answer in the datasheet.
- Solve one exercise of chapter Programming without AI and one with AI. Compare time, result and what you can explain afterwards.
- Read five current job advertisements for embedded software engineers. List which AI-related skills they ask for and which of them this lecture covers.

# 1.5 About this Lecture

## Contents

| chapter | topic | platform of the examples |
|---|---|---|
| 2 | Modelling: state machines, data flow | Pico (coffee machine FSM) |
| 3 | Cyber-physical systems, Modelica | OpenModelica, Python |
| 4 | Processors: AVR, Cortex-M, RISC-V | compiler output for 4 processors |
| 5 | Programming: build process, assembly, C, Rust, MicroPython, debugging | Pico, PC |
| 6 | Peripherals and interfaces: GPIO, interrupts, timers, ADC, UART, $I^2C$, SPI | Pico |
| 7 | Networking: Wi-Fi, IP, TCP/UDP, sockets, HTTP, MQTT | ESP32-C3, PC |
| 8 | Operating systems: FreeRTOS, Embassy, embedded Linux | ESP32-C3 |

- every example exists in **C** and in **Rust** (some also in Python); all are in the folder `examples/` of the lecture repository

## Tools

- **Wokwi** (`https://wokwi.com`): simulator for Raspberry Pi Pico, ESP32, Arduino and STM32 in the browser – with LEDs, buttons, sensors, displays, logic analyzer and Wi-Fi
  - C (Arduino core + SDK) and MicroPython run directly in the browser
  - Rust: build locally with `cargo`, simulate with the Wokwi extension for VS Code
- **Replit** (`https://replit.com`) or your own PC: programs for the PC side (sockets, Python, Rust tests)
- **Rust**: `rustup`, `cargo`, targets `thumbv6m-none-eabi` (Pico) and `riscv32imc-unknown-none-elf` (ESP32-C3)
- **git**: all sources of the lecture and the examples are under version control
- real hardware is optional: Raspberry Pi Pico and ESP32-C3 boards cost a few euros, and the same programs run on them

## Exercises

- List ten embedded systems in your home. For each: which sensors, which actuators, which communication?
- Which of the characteristics (dependability, efficiency, real time, cost) is most important for an airbag control unit, a smart light bulb and a heart pacemaker?
- Open `https://wokwi.com`, start a new Raspberry Pi Pico project and let the on-board LED blink.
- Run the coffee machine (`examples/intro/coffee`). Press the button while the water is still cold. Then change the switching points to 85 and 95 °C: how does the temperature curve change, and how often does the heater switch?

# 2 Modeling

# 2.1 General Requirements

- Classification of systems from the point of view of programming

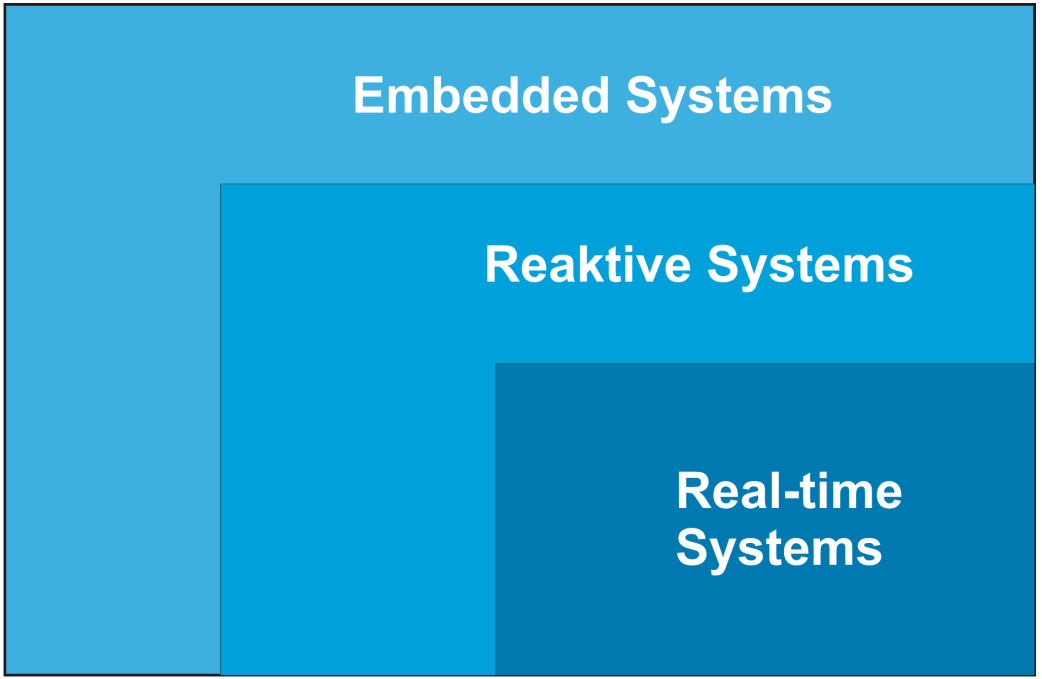



Figure 2.1.1: Classification of embedded systems and real-time systems

**Definition 2.1** *An **embedded system** is a computer system designed to perform a dedicated function within a larger mechanical or electronic system. Unlike a general-purpose computer, it performs one or a few pre-defined tasks, usually with specific requirements on timing, energy and reliability.*

- interaction with the environment through sensors and actuators
- minimum and maximum response times are part of the specification
- the system may consist of parallel and distributed parts (subsystems)

**Definition 2.3** *A **real-time system** must deliver a correct result within a given time (its deadline). The correctness depends not only on the result but also on the time at which it is available.*

- **hard** real time: missing a deadline is a failure of the system
- **soft** real time: missing a deadline reduces the quality of the service
- a real-time operating system helps to build a real-time system, but it is neither necessary nor sufficient (see chapter Operating Systems)

## Requirements for models

- concurrency → real-time systems are usually concurrent
- synchronisation and communication → modelling the communication between distributed parts
- timing → deadlines, periods, response times
- programming elements → arithmetic operations, loops and function calls should be expressible
- non-standard I/O devices → switches, analog and digital I/O
- non-functional properties → e.g. fault tolerance, availability, EMC, usability, extendibility, lifetime, power consumption
- co-design → modelling of hardware and software functions

## but

- models must be readable
- models should be hierarchical → humans can only keep about 5 to 7 objects in mind at the same time

> A model should be as simple as possible, but not simpler. [attributed to A. Einstein]

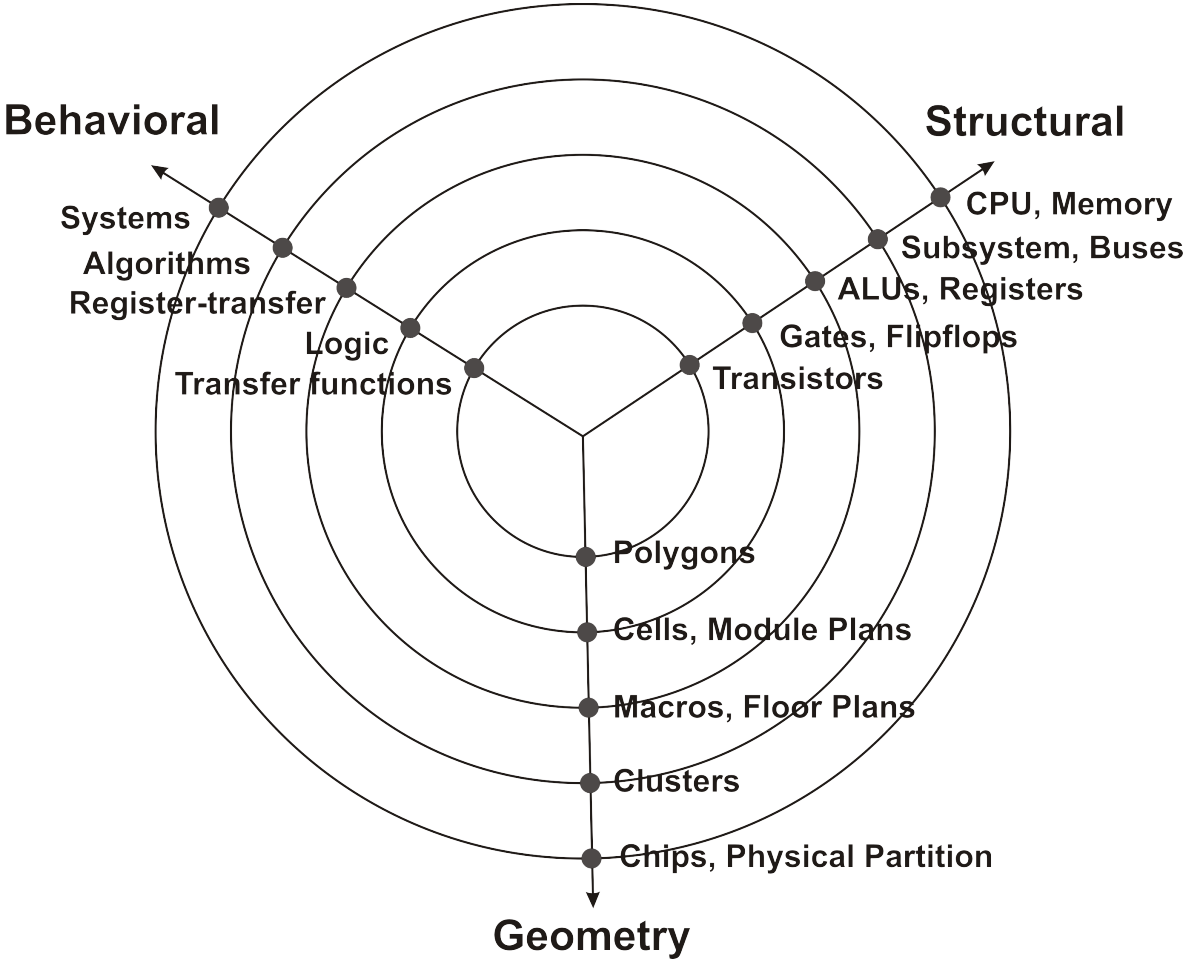



Figure 2.1.2: Y-chart of Gajski and Kuhn

- a model can move between different levels of abstraction in the Y-chart
- the Y-chart (Gajski and Kuhn, 1983) was developed for hardware design
- concurrency and timing are difficult to express in it

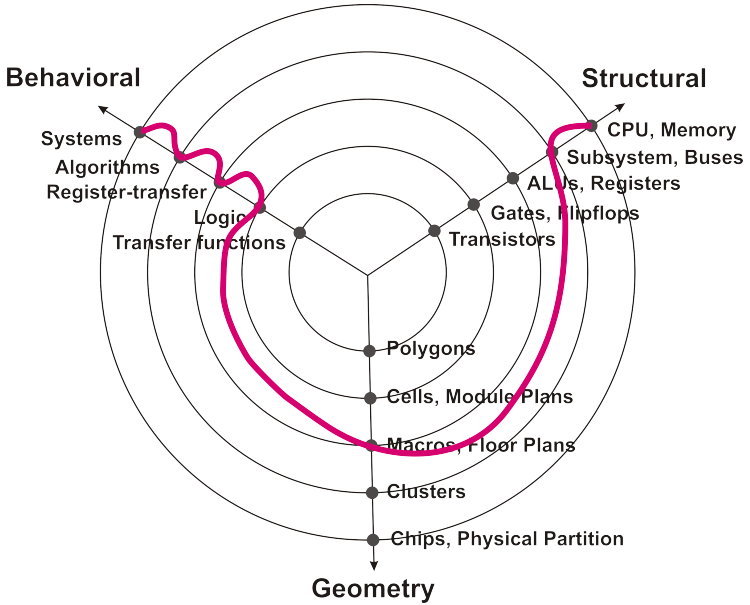



Figure 2.1.3: Different levels in a Y-chart

## Design methods

- capture and simulate
  - specify the system, draw block diagrams (details not yet specified)
  - simulate and verify
- describe and synthesise
  - generate hardware and software from the description with tools
  - logic synthesis from hardware description languages (VHDL, Verilog)
  - code generation from models (e.g. Simulink, state machine tools)
- specify – explore – refine
  - tools support the exploration of alternatives (e.g. which functions in hardware, which in software)
  - the chosen solution is refined step by step

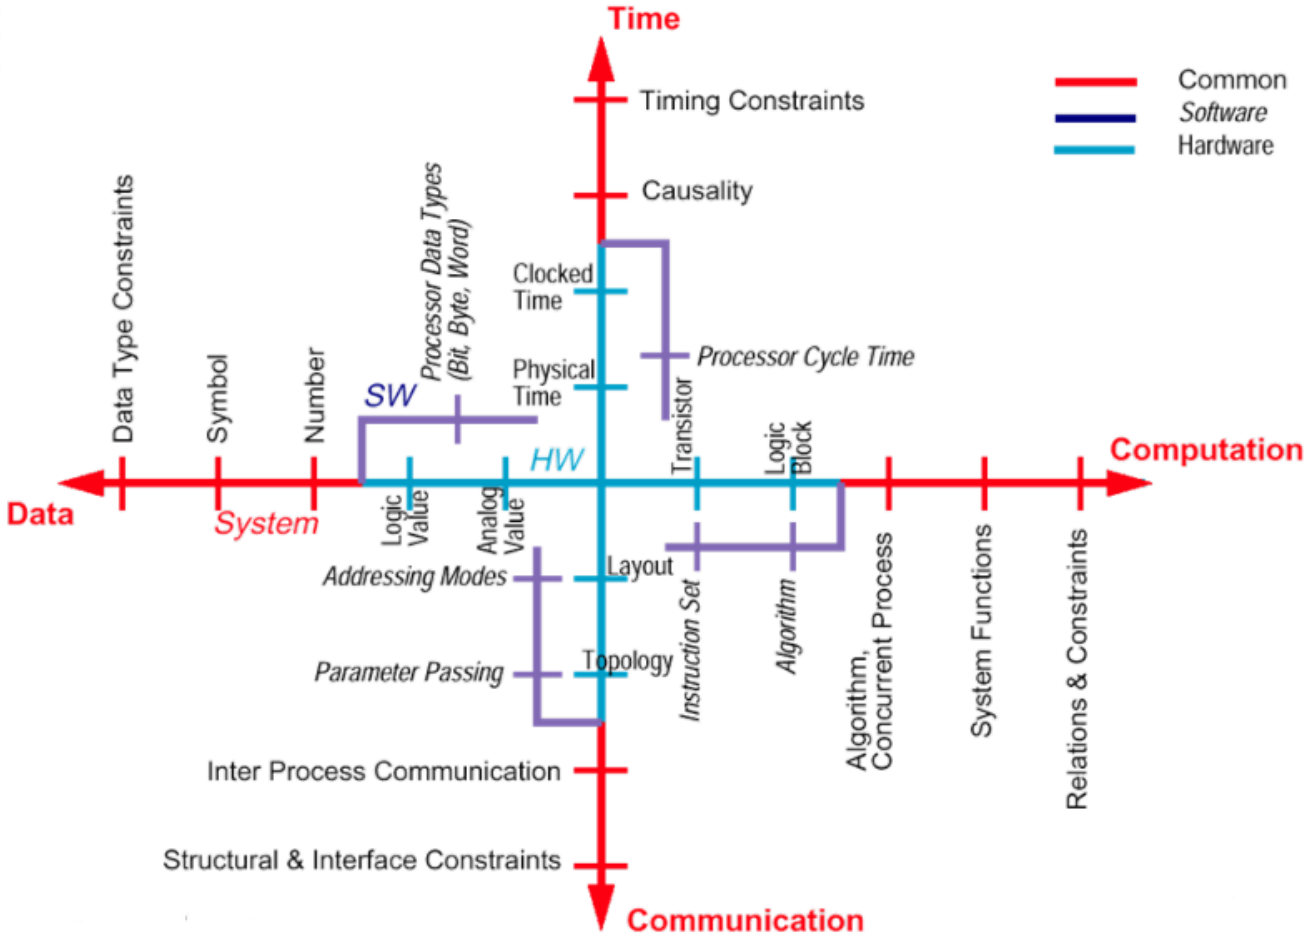



Figure 2.1.4: Hardware and software co-design

## Different views of a model

- behavioural view
  - treats the system or parts of it as black boxes
  - focuses on states, processes, procedures
- structural view
  - shows how the system is built from components and how they are connected
  - processors, boards, modules, buses
- physical view
  - physical properties of the components: size, placement, heat, connections

## Classes of models

- no single model covers all requirements of an embedded system
- each class of models focuses on certain aspects
  - state oriented (state machines, StateCharts)
  - activity oriented (data flow graphs, flow charts, sequence diagrams)
  - structure oriented (block diagrams, component diagrams)
  - data oriented (entity relationship models)
  - heterogeneous (combinations, e.g. UML / SysML)

# 2.2 State Oriented Models

- classical automata (FSM, finite state machine) are state oriented models
- two variants: Moore and Mealy machines

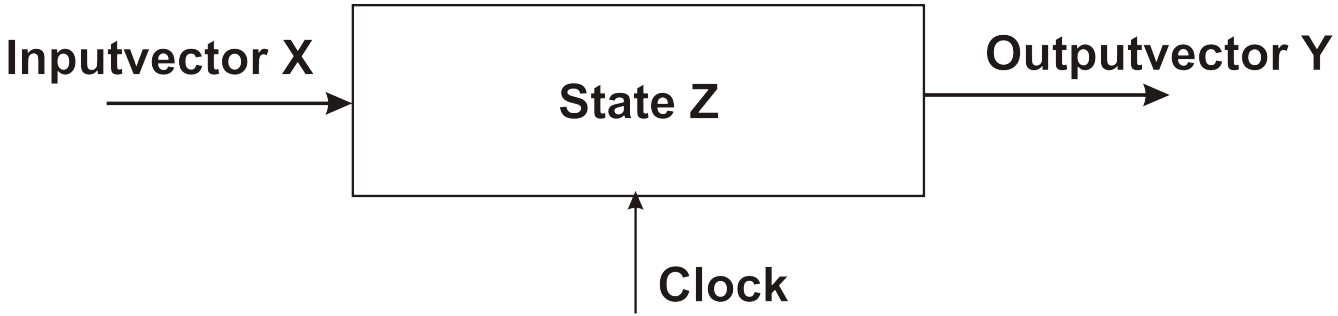



Figure 2.2.1: Block diagram of an FSM

Moore machine: $Y = \lambda(Z), \quad Z^+ = \delta(X, Z)$

Mealy machine: $Y = \lambda(X, Z), \quad Z^+ = \delta(X, Z)$

$\lambda$ : output function

$\delta$ : transition function, computes the next state $Z^+$

- Moore: the output depends only on the state – stable outputs, but one clock later
- Mealy: the output depends on state and input – faster reaction, fewer states

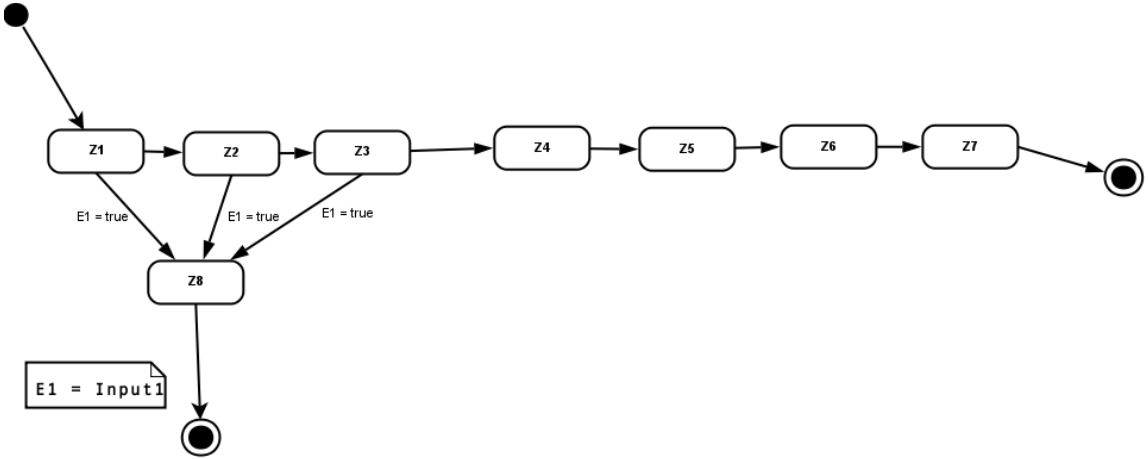



Figure 2.2.2: FSM in more detail

- flat FSMs are not useful for complex systems: too many states and transitions
- hierarchy in state machines $\rightarrow$ StateCharts [Harel, 1987]

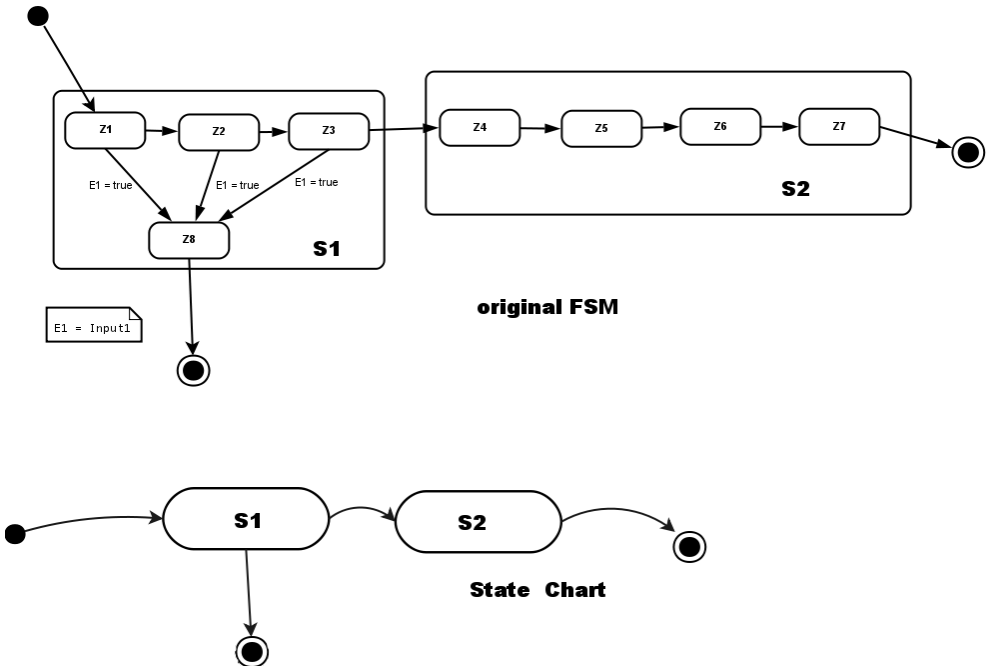



Figure 2.2.3: StateChart

**Definition 2.4** *The current states of FSMs are called* ***active states****.*
*States which are not composed of other states are called* ***basic states****.*
*States containing other states are called* ***super-states****.*
*A super-state S is called an* ***OR-super-state*** *if exactly one of its sub-states is active whenever S is active.*

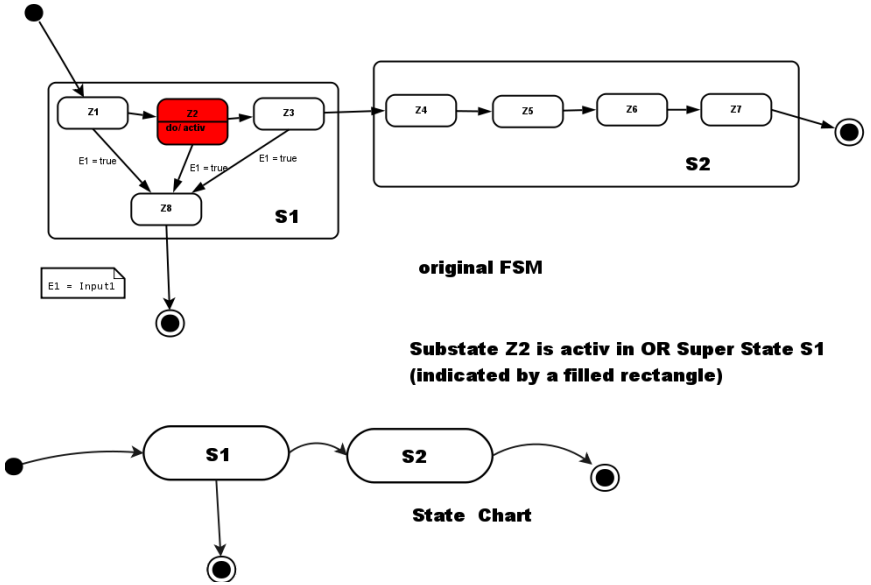



Figure 2.2.4: Active sub-state in a super-state

- in an OR-super-state exactly one sub-state is active

- concurrency cannot be modelled this way

**Definition 2.5** *A super-state S is called an **AND-super-state** if all of its sub-states are active whenever S is active.*

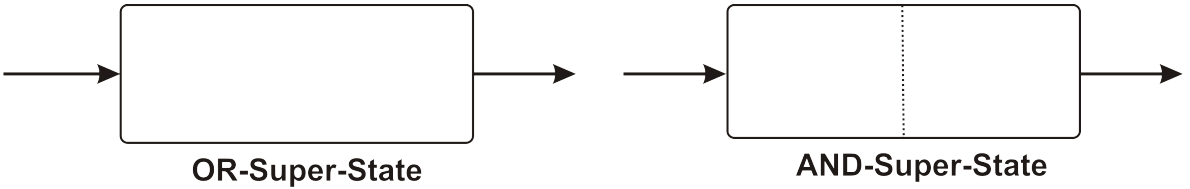



Figure 2.2.5: Concurrency in an AND-super-state

- AND-super-states $\rightarrow$ concurrent state machines
- an AND-super-state is equivalent to the "product" of its sub-machines

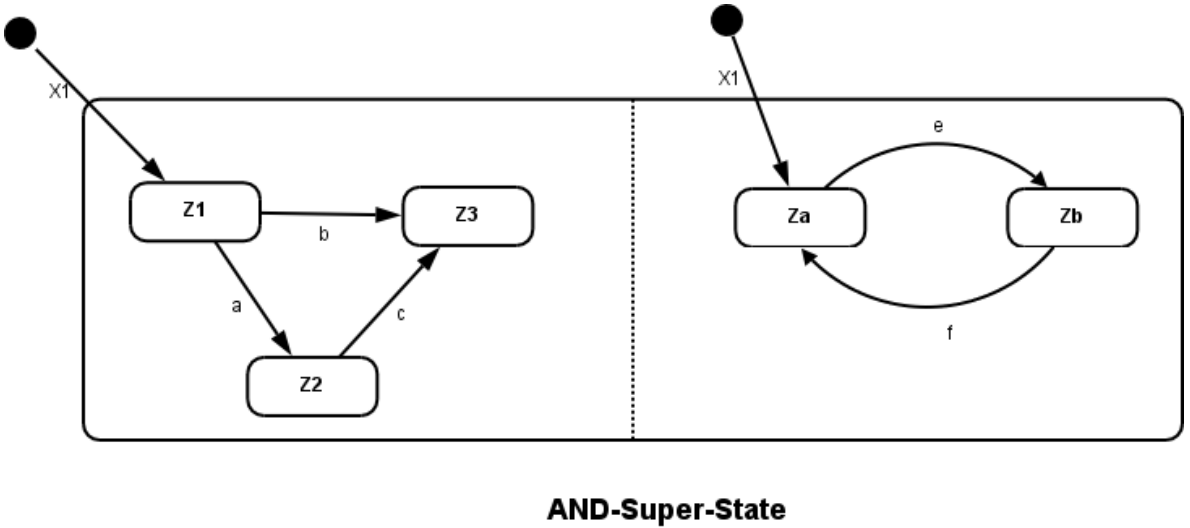



Figure 2.2.6: Example of an AND-super-state

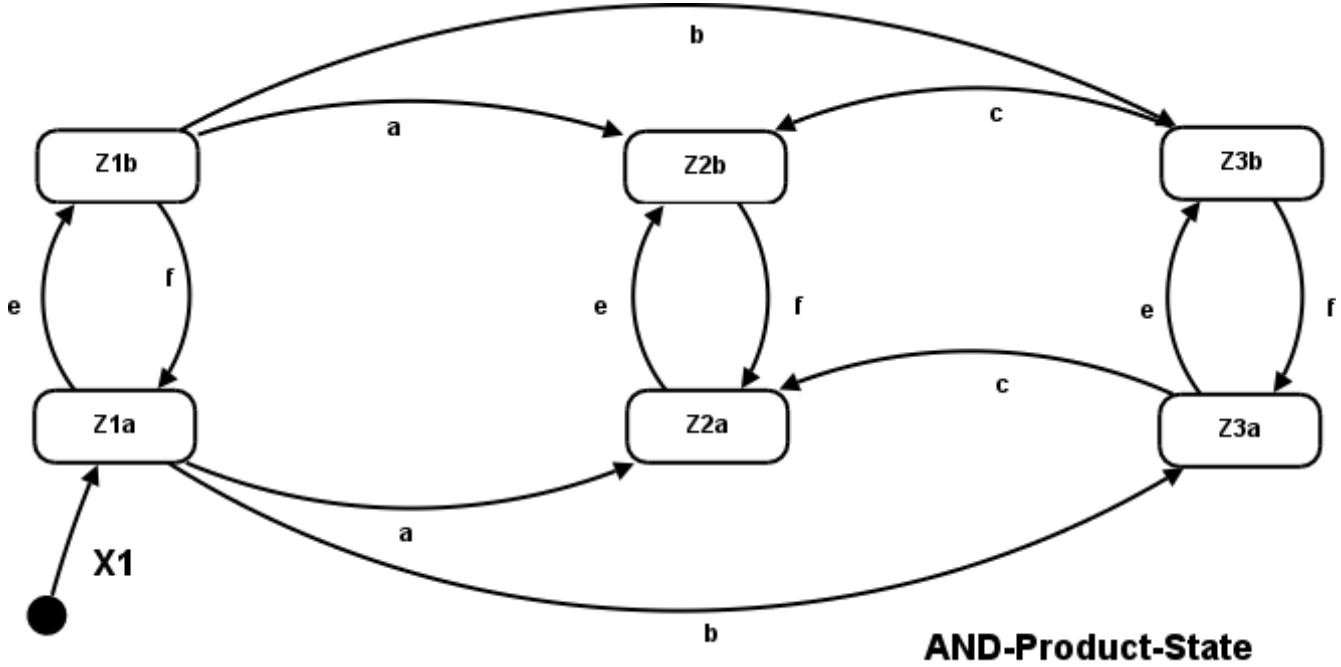



Figure 2.2.7: Decomposition of an AND-super-state into a product machine

- **advantages of StateCharts**
  - hierarchy allows arbitrary nesting of AND- and OR-super-states
  - well-defined semantics; many tools can simulate them
  - code generators produce C, C++ or VHDL
  - today part of UML and SysML (state machine diagrams)
- **disadvantages**
  - generated code is sometimes inefficient
  - not suited for distributed systems
  - no description of non-functional behaviour or of the structure

# 2.3 Implementing a State Machine

## Example: a coffee machine

- inputs: buttons **left** and **right**, event **ready** from a timer 3 s after brewing started (coffee finished)
- outputs: add coffee, milk, sugar – depend only on the state ⇒ Moore machine
- from idle: left = coffee with milk, right = coffee; then left = make it, right = add sugar

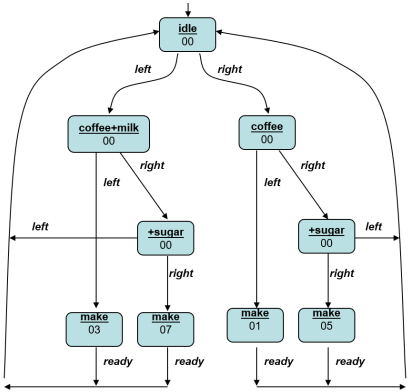



Figure 2.3.1: Coffee machine FSM

# State transition table

| no. | state | left | right | output |
|---|---|---|---|---|
| 0 | idle (initial) | 2: coffee+milk | 1: coffee | 000 |
| 1 | coffee | 5: make coffee | 3: coffee+sugar | 000 |
| 2 | coffee+milk | 6: make coffee+milk | 4: coffee+milk+sugar | 000 |
| 3 | coffee+sugar | 0: idle | 7: make coffee+sugar | 000 |
| 4 | coffee+milk+sugar | 0: idle | 8: make coffee+milk+sugar | 000 |
| | | **ready** (timer, after 3 s) | | |
| 5 | make coffee | 0: idle | | 001 |
| 6 | make coffee+milk | 0: idle | | 011 |
| 7 | make coffee+sugar | 0: idle | | 101 |
| 8 | make coffee+milk+sugar | 0: idle | | 111 |

- output bits: bit 0 = coffee, bit 1 = milk, bit 2 = sugar
- inputs not listed in a row are ignored: the state stays the same
- a table like this is the best check for completeness: every state $\times$ every input

# C: states, outputs and inputs

```
1  // the FSM states
2  enum {
3    FSM_STATE_IDLE, FSM_STATE_COFFEE, FSM_STATE_COFFEE_MILK,
4    FSM_STATE_COFFEE_SUGAR, FSM_STATE_COFFEE_MILK_SUGAR,
5    FSM_STATE_MAKE_COFFEE, FSM_STATE_MAKE_COFFEE_MILK,
6    FSM_STATE_MAKE_COFFEE_SUGAR, FSM_STATE_MAKE_COFFEE_MILK_SUGAR,
7    NUM_FSM_STATES
8  };
9  // the FSM outputs, one per state (Moore machine)
10 // bit0: add coffee, bit1: add milk, bit2: add sugar
11 const uint8_t fsm_output[NUM_FSM_STATES] = {0, 0, 0, 0, 0, 1, 3, 5, 7};
12
13 // the FSM inputs
14 enum { FSM_INP_NONE = 0, FSM_INP_LEFT, FSM_INP_RIGHT, FSM_INP_READY };
15
16 int fsm_state = FSM_STATE_IDLE;
```

- always use enums for states, inputs and outputs: readable names, and `NUM_FSM_S` sizes the table automatically
- define the initial state explicitly

# C: the transition function

```c
int fsm_tic(int fsm_inp) {          // called periodically, every 50 ms
  switch (fsm_state) {
  case FSM_STATE_IDLE:
    if (fsm_inp == FSM_INP_LEFT) fsm_state = FSM_STATE_COFFEE_MILK;
    if (fsm_inp == FSM_INP_RIGHT) fsm_state = FSM_STATE_COFFEE;
    break;
  /* ... COFFEE, COFFEE_MILK, COFFEE_SUGAR, COFFEE_MILK_SUGAR: same pattern ... */
  case FSM_STATE_MAKE_COFFEE:           // wait until the coffee is ready
  case FSM_STATE_MAKE_COFFEE_MILK:
  case FSM_STATE_MAKE_COFFEE_SUGAR:
  case FSM_STATE_MAKE_COFFEE_MILK_SUGAR:
    if (fsm_inp == FSM_INP_READY) fsm_state = FSM_STATE_IDLE;
    break;
  default:
    fsm_state = FSM_STATE_IDLE;         // invalid state: back to a safe state
  }
  return fsm_output[fsm_state];         // Moore FSM: one output per state
}
```

- the period defines the response time; sampling the buttons every 50 ms also filters the contact bounce

# C: a timer creates the event ready

```
const uint32_t BREW_TIME_MS = 3000;   // READY comes 3 s after a MAKE state is entered
uint32_t state_entered_ms;            // time of the last state change

void loop() {
  int inp = FSM_INP_NONE;
  /* ... LEFT or RIGHT from the buttons (edge detection) ... */
  // timer: the brewing time is over -> event READY (only MAKE states react)
  if (fsm_state >= FSM_STATE_MAKE_COFFEE && millis() - state_entered_ms >=
   BREW_TIME_MS)
    inp = FSM_INP_READY;
  int old_state = fsm_state;
  int out = fsm_tic(inp);
  if (fsm_state != old_state) state_entered_ms = millis();   // restart the timer
  /* ... write out to the LEDs, delay(50) ... */
}
```

- a time-out is an event like a button press: `fsm_tic()` is unchanged, only the source of **ready** is new
- StateCharts and UML write this as a **timed transition** `after(3 s)`
- never `delay(3000)` inside the state machine: it must keep reacting to other inputs (e.g. a cancel button) while it waits
- `millis() - start` with `uint32_t` stays correct when `millis()` wraps around after 49 days

# Rust: the same machine with enum and match

```
pub enum State { Idle, Coffee, CoffeeMilk, CoffeeSugar, CoffeeMilkSugar,
                 MakeCoffee, MakeCoffeeMilk, MakeCoffeeSugar, MakeCoffeeMilkSugar }
pub enum Input { Left, Right, Ready }

impl State {
    pub fn next(self, input: Input) -> State {
        use {Input::*, State::*};
        match (self, input) {
            (Idle, Left) => CoffeeMilk,
            (Idle, Right) => Coffee,
            (Coffee, Left) => MakeCoffee,
            (Coffee, Right) => CoffeeSugar,
            (CoffeeMilk, Left) => MakeCoffeeMilk,
            (CoffeeMilk, Right) => CoffeeMilkSugar,
            (CoffeeSugar, Left) | (CoffeeMilkSugar, Left) => Idle,
            (CoffeeSugar, Right) => MakeCoffeeSugar,
            (CoffeeMilkSugar, Right) => MakeCoffeeMilkSugar,
            (MakeCoffee | MakeCoffeeMilk | MakeCoffeeSugar | MakeCoffeeMilkSugar,
   Ready) => Idle,
            (state, _) => state, // all other inputs are ignored
        }
    }
}
```

- a `State` can only hold these values – no “invalid state” as with an `int`

# Rust: output function and tests

```rust
pub fn output(self) -> Output {
    let (coffee, milk, sugar) = match self {
        State::Idle | State::Coffee | State::CoffeeMilk
        | State::CoffeeSugar | State::CoffeeMilkSugar => (false, false, false),
        State::MakeCoffee => (true, false, false),
        State::MakeCoffeeMilk => (true, true, false),
        State::MakeCoffeeSugar => (true, false, true),
        State::MakeCoffeeMilkSugar => (true, true, true),
    };
    Output { coffee, milk, sugar }
}

#[test]
fn coffee_with_everything() {
    let s = run(&[Left, Right, Right]);
    assert_eq!(s, MakeCoffeeMilkSugar);
    assert_eq!(s.output(), Output { coffee: true, milk: true, sugar: true });
}
```

- no wildcard in `output()`: if a state is added later, the compiler reports every `match` that does not handle it
- the library has no hardware access: `cargo test` on the PC, the same code on the Pico

## Recipe for a Moore state machine

- analyse the problem before coding: draw the state diagram, write the transition table
- use enums to encode states, inputs and outputs in a readable form
- define the outputs with a suitable encoding, e.g. as bit fields
- implement a periodically called tick function (or an event handler) for transitions and outputs
- handle invalid states and unexpected inputs explicitly
- test the transition function separately from the hardware
- our example, tested in Wokwi (C and Rust): left, right, right $\rightarrow$ all three LEDs on; 3 s later (ready) $\rightarrow$ all off

## Tools for state machines

- drawing, in the browser
  - diagrams.net (draw.io), free: `https://app.diagrams.net/`
  - Visual Paradigm Online (free version available): UML state machine diagrams
- text-based diagrams that live in the repository next to the code: PlantUML, Mermaid (`https://mermaid.live/`)
- simulation of automata in the browser: `http://ivanzuzak.info/noam/webapps/fsm_simulator/`
- modelling and simulation
  - OpenModelica, library `Modelica.StateGraph` – free, good for co-simulation with physical models (chapter Cyber-Physical Systems)
  - MATLAB/Simulink with Stateflow – commercial, code generation, widely used in automotive
  - UML/SysML tools (e.g. Enterprise Architect, Cameo); SysML v2 was adopted by the OMG in 2025

# 2.4 Implementing StateCharts

## Example: a garage door

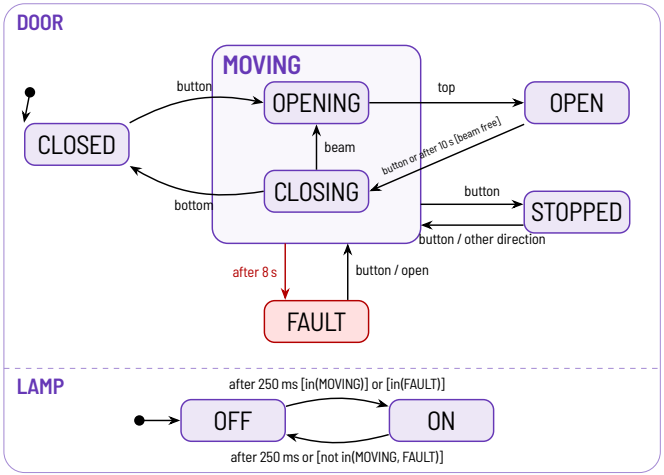



Figure 2.4.1: StateChart of the garage door: super-state MOVING, timed transitions, concurrent region LAMP

- one button for everything (like a remote control): open, stop, close; closes by itself after 10 s
- safety: a light barrier stops and reverses the closing door; a jammed door must not run the motor for ever

# C: one function for every transition

```
enum DoorState { CLOSED, OPENING, OPEN, CLOSING, STOPPED, FAULT, NUM_DOOR_STATES };
DoorState door = CLOSED;
uint32_t door_entered_ms;            // for the timed transitions "after(t)"
bool last_moved_up;                  // what STOPPED remembers

bool in_moving(DoorState s) {        // super-state MOVING = {OPENING, CLOSING}
  return s == OPENING || s == CLOSING;
}

// every transition goes through here: exit actions, then entry actions
void enter(DoorState next) {
  digitalWrite(MOTOR_UP, LOW);       // exit: motor off, so UP and DOWN
  digitalWrite(MOTOR_DOWN, LOW);     // are never on at the same time
  door = next;
  door_entered_ms = millis();
  if (next == OPENING) { digitalWrite(MOTOR_UP, HIGH); last_moved_up = true; }
  if (next == CLOSING) { digitalWrite(MOTOR_DOWN, HIGH); last_moved_up = false; }
}
```

- entry and exit actions live in one place – no transition can forget to switch the motor off
- a super-state needs no own variable: `in_moving()` is a test on the sub-state

# C: the transition function with hierarchy and timers

```
void door_tic(bool button, bool top, bool bottom, bool beam) {
  uint32_t t = millis() - door_entered_ms;
  // transitions of the super-state come first: they leave every sub-state
  if (in_moving(door) && t >= MOTOR_TIMEOUT_MS) { enter(FAULT); return; }

  switch (door) {
  case CLOSED:  if (button) enter(OPENING); break;
  case OPENING: if (top) enter(OPEN);
                else if (button) enter(STOPPED);
                break;
  case OPEN:    if ((button || t >= AUTO_CLOSE_MS) && !beam)    // guard [beam free]
                  enter(CLOSING);
                break;
  case CLOSING: if (beam) enter(OPENING);              // safety first: reverse
                else if (bottom) enter(CLOSED);
                else if (button) enter(STOPPED);
                break;
  case STOPPED: if (button) enter(last_moved_up ? CLOSING : OPENING); break;
  case FAULT:   if (button) enter(OPENING); break;    // acknowledge: try to open
  default:      enter(STOPPED);                       // invalid state: motor off
  }
}
```

- the order of the `if`s is the priority of the transitions: in CLOSING the light barrier wins over everything else

# C: a concurrent region

```
enum LampState { LAMP_OFF, LAMP_ON };
LampState lamp = LAMP_OFF;  uint32_t lamp_entered_ms;    // own state, own timer

void lamp_tic() {
  LampState next = lamp;
  if (door == FAULT) next = LAMP_ON;                    // condition in(FAULT)
  else if (!in_moving(door)) next = LAMP_OFF;           // condition in(MOVING)
  else if (millis() - lamp_entered_ms >= BLINK_MS)
    next = (lamp == LAMP_ON) ? LAMP_OFF : LAMP_ON;
  if (next != lamp) { lamp = next; lamp_entered_ms = millis(); }
  digitalWrite(LAMP, lamp == LAMP_ON);
}
void loop() {                                       // every 20 ms
  /* ... button edge, read TOP, BOTTOM, BEAM ... */
  door_tic(button, top, bottom, beam);
  lamp_tic();                                       // both regions get every tick
}
```

- an AND-super-state = one state variable and one tick function per region, all called in every tick
- regions communicate by reading each other's state (`in(...)`) – read only, never write

# The environment as a model: the door is a custom chip

- the door does not exist: a Wokwi **custom chip** (`door.chip.c`) models it, the controller sees only its pins
- inputs UP, DOWN (motor); outputs TOP, BOTTOM (end switches), BEAM (light barrier); a small display shows the door
- controls on the chip inject situations that are dangerous or expensive to test on a real door: **obstacle** in the door, door **jammed**
- the model checks the controller: both motor lines on ⇒ "short circuit!", door closes onto the obstacle ⇒ "CRASH"

```c
static void on_step(void *user_data) {              // every 10 ms of simulated time
  chip_t *c = user_data;
  bool up = pin_read(c->up), down = pin_read(c->down);
  bool obstacle = attr_read(c->obstacle_attr), jam = attr_read(c->jam_attr);
  if (up && down) printf("motor UP and DOWN at the same time: short circuit!\n");
  else if (!jam) c->pos += (up - down) * 0.01f / TRAVEL_S;    // 5 s from closed to open
  /* ... limit pos to 0..1; obstacle under the door: stop at 15 %, print CRASH ... */
  pin_write(c->top, c->pos >= 1);
  pin_write(c->bottom, c->pos <= 0);
  pin_write(c->beam, obstacle);
}
```

# Testing the StateChart against the model

```
- wait-serial: 'door: closing'                    # after 10 s: auto close
- delay: 2000ms
- set-control: { part-id: door, control: obstacle, value: 1 }
- wait-serial: 'door: opening'                    # beam: reverse
- set-control: { part-id: door, control: obstacle, value: 0 }
  ...
- set-control: { part-id: door, control: jam, value: 1 }
- wait-serial: 'door: FAULT'                      # 8 s without end switch
- expect-pin: { part-id: pico, pin: GP17, value: 0 }     # motor off
- expect-pin: { part-id: pico, pin: GP18, value: 1 }     # lamp steady on
```

- a Wokwi scenario (`door/test/door.yaml`) presses the button, switches the faults on the chip and checks pins and serial output
- the StateChart is the test plan: every transition needs a step that triggers it – which ones does `door.yaml` still miss?
- the same idea at a larger scale: case study in chapter Operating Systems (climate chamber, two custom chips)

# Example: a pedestrian crossing

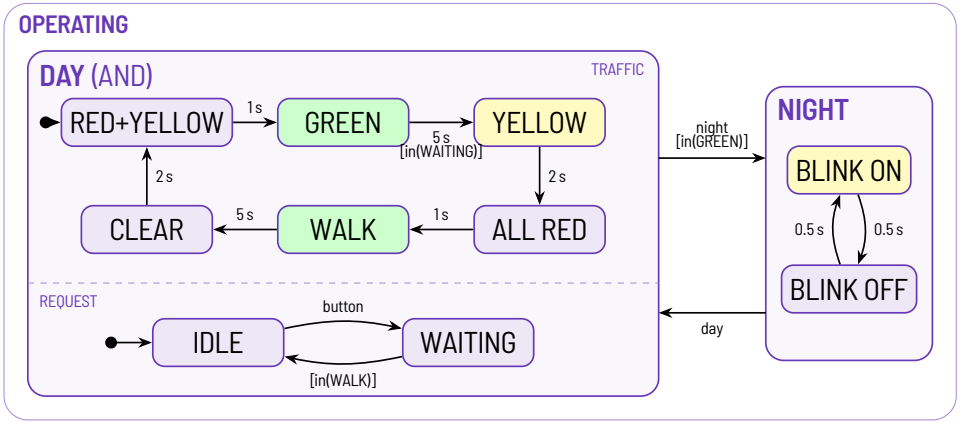



Figure 2.4.2: StateChart of the pedestrian crossing: AND-super-state DAY with two regions, OR-super-state OPERATING

- TRAFFIC (6 states) and REQUEST (2 states) run concurrently and talk only through conditions on each other's state
- the product machine would have $6 \times 2 = 12$ states – and grows with every further region
- NIGHT can be entered only from GREEN: a guard on the super-state transition, never in the middle of a pedestrian phase

# C: AND- and OR-super-states

```
enum Mode { DAY, NIGHT };                                  // OR-super-state OPERATING
// + one enum each for the regions TRAFFIC, REQUEST and for NIGHT (BLINK_ON/OFF)
void crossing_tic(bool button, bool night) {
  switch (mode) {
  case DAY:
    if (night && traffic == GREEN) { mode = NIGHT; return; }   // only from a safe state
    traffic_tic();                                         // AND: both regions run
    request_tic(button);                                   // in every tick
    break;
  case NIGHT:
    if (!night) {
      mode = DAY;                                          // enter DAY in its initial states
      request = IDLE;
      set_traffic(RED_YELLOW);
      return;
    }
    blink_tic();
    break;
  }
}
```

- one variable per OR-super-state, one per region; `traffic_tic()` uses `request == WAITING`, `request_tic()` uses `traffic == WALK`

# Recipe for a StateChart in C

- one `enum` variable per OR-super-state and per concurrent region
- super-states without own variable: a function `in_xxx()` that tests the sub-state
- transitions of a super-state are checked before those of its sub-states
- one function `enter()` for all transitions: exit actions, set the state, store the entry time, entry actions
- timed transitions: compare `millis() - entered_ms` with the time – never block with `delay()`
- one tick function per region; all are called in every tick, regions only read each other's state
- test against a model of the environment: custom chips in Wokwi, scenarios for every transition
- larger machines: a table of function pointers, or a framework (e.g. QP/C with hierarchical state machines) or a code generator (Stateflow, itemis CREATE)

# 2.5 Activity Oriented Models

- modelling the flow of data in an embedded system $\rightarrow$ **DFG** (data flow graph)
- nodes are operations; special nodes for input, output and memory
- edges show the data dependencies on all levels of abstraction
- well suited for the specification and as input for scheduling, because no order is fixed beyond the dependencies
- DFGs can be hierarchical

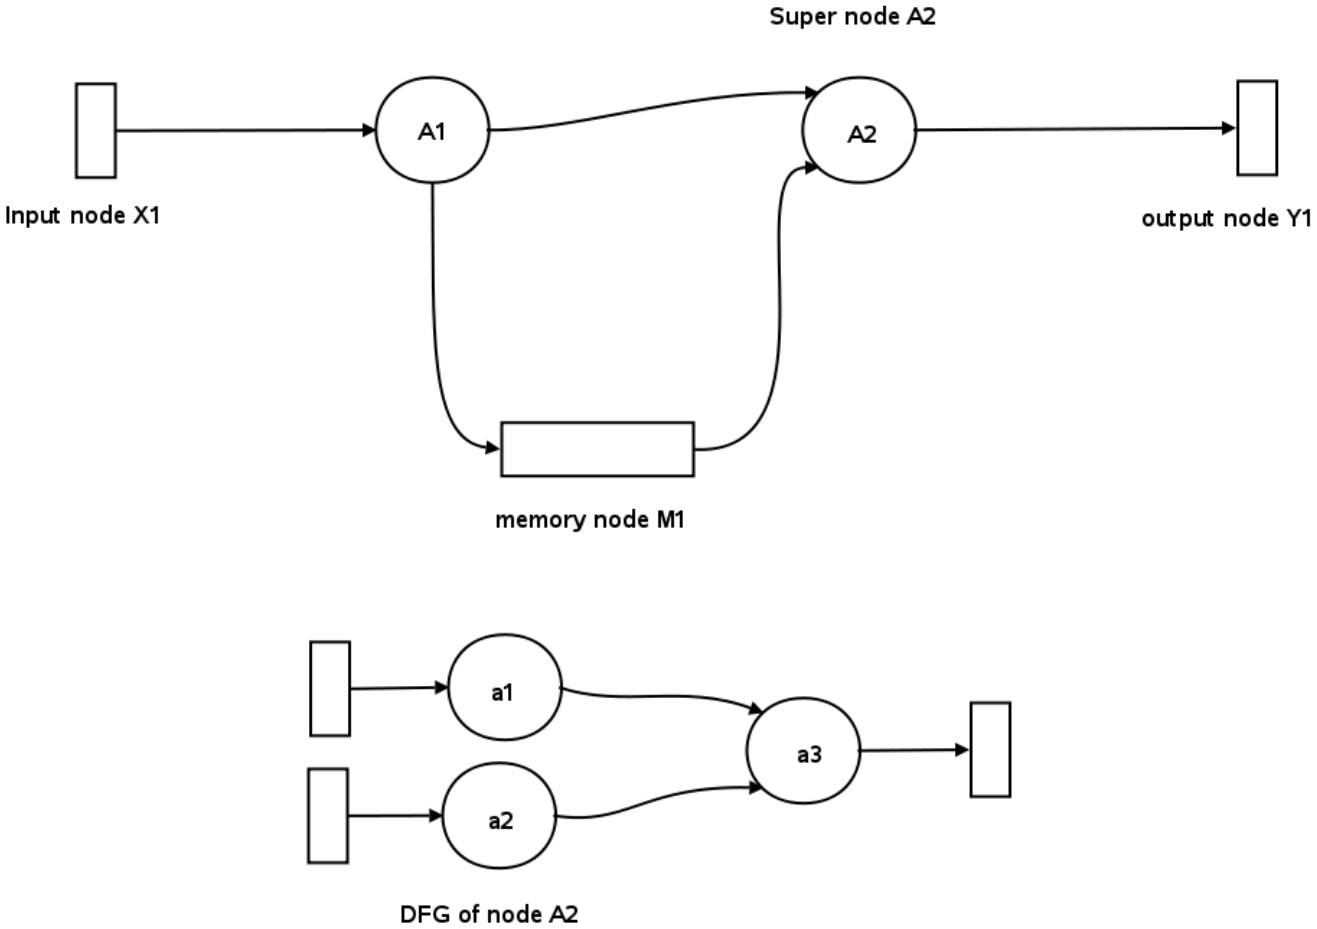



Figure 2.5.1: Data flow graph

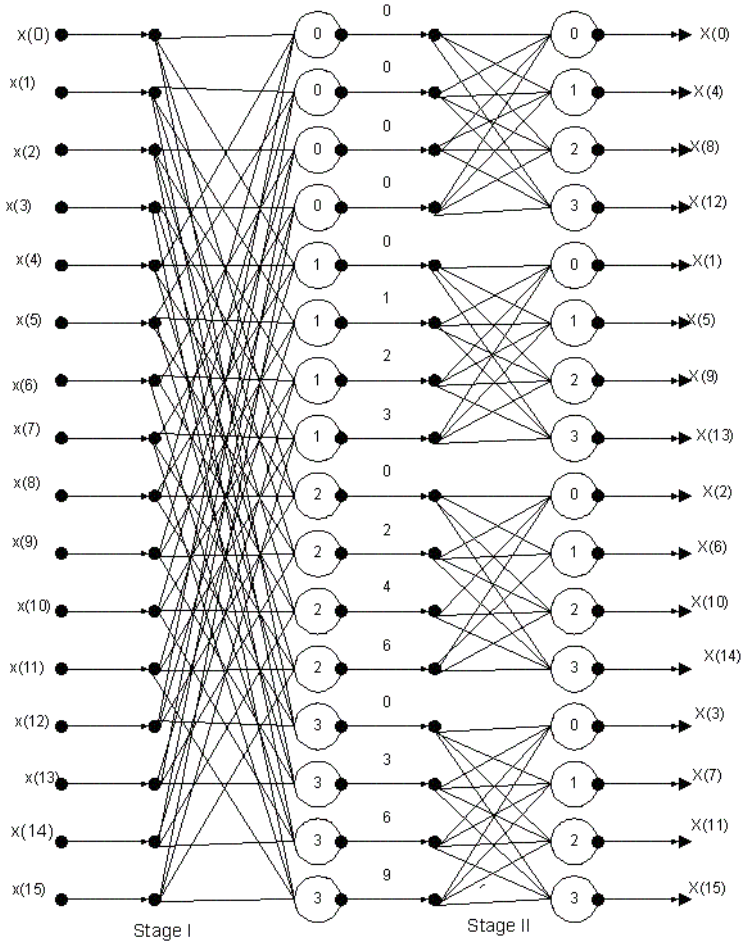



Figure 2.5.2: DFG of an FFT algorithm

- extension of a DFG with control flow $\rightarrow$ **CFG** (control flow graph)
- additional control elements (decisions, loops)
- edges transfer the control
- CFGs are drawn as flow charts


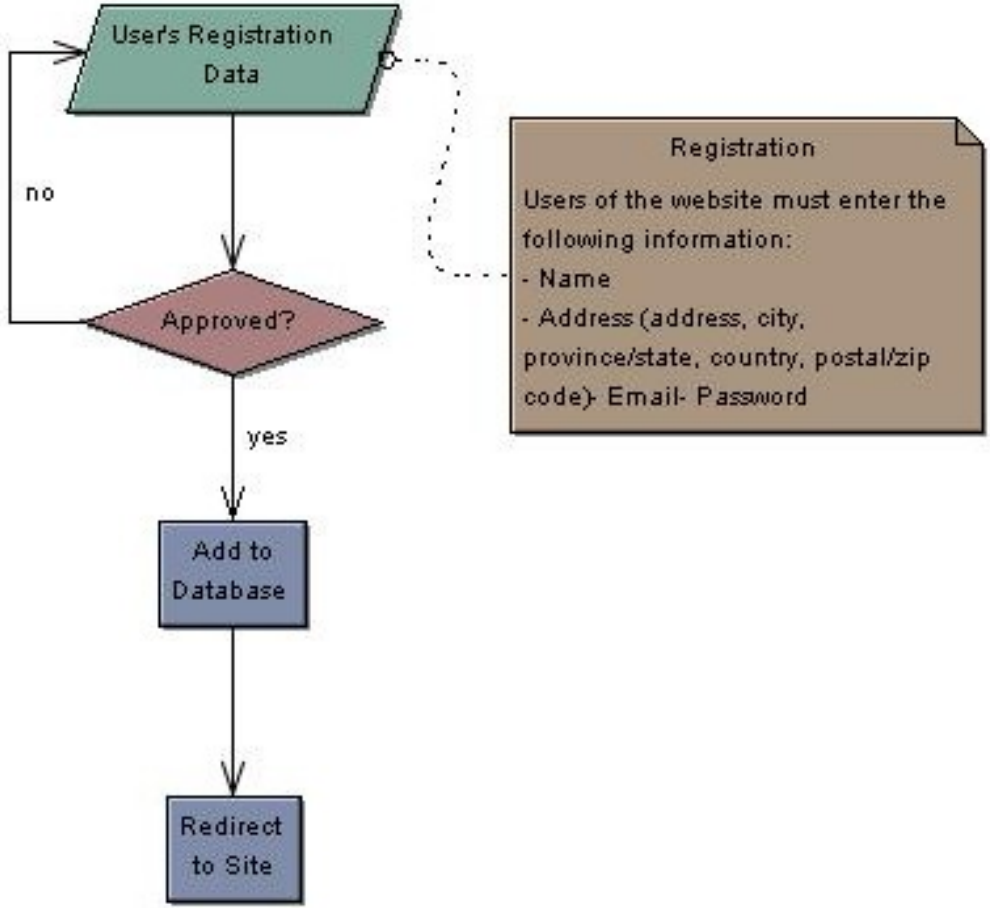



Figure 2.5.3: Flow chart of an algorithm

## Message Sequence Charts (MSC)

- modelling of timing and of the communication between components
- graphical representation of schedules
  - time is a separate axis (vertical): timing is visible explicitly
  - components (activities) on the horizontal axis
- today usually drawn as UML sequence diagrams – the TCP handshake and the DHCP diagram in chapter Networking are examples

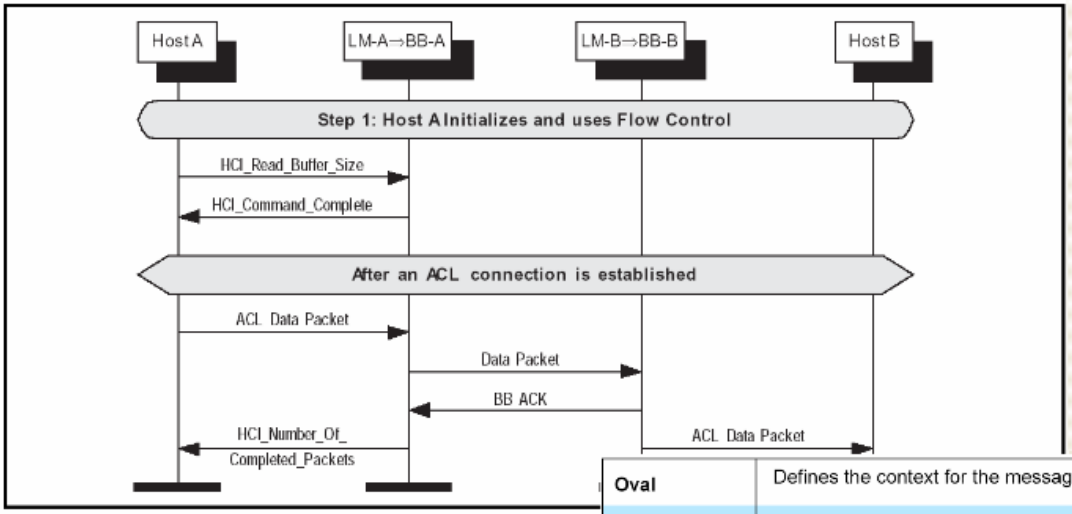


| | |
|---|---|
| **Oval** | Defines the context for the message sequence chart. |
| **Hexagon** | Indicates a condition needed to start the transactions below this hexagon. The location and width of the Hexagon indicates which entity or entities make this decision. |
| **Box** | Replaces a group of transactions. May indicate a user action, or a procedure in the baseband. |
| **Dashed Box** | Optional group of transactions. |
| **Solid Arrow** | Represents a message, signal or transaction. Can be used to show LMP and HCI traffic.<br>Some baseband packet traffic is also shown. These are prefixed by BB followed by either the type of packet, or an indication that there is an ACK signal in a packet. |
| **Dashed Arrow** | Represents a optional message, signal or transaction. Can be used to show LMP and HCI traffic. |

Figure 2.5.4: Message sequence chart

- **advantages of activity oriented models**
  - well suited to visualise schedules and communication
  - DFG and CFG can be hierarchical
- **disadvantages**
  - an MSC shows one scenario only, not all possible behaviours
  - no description of non-functional behaviour
  - no description of the structure (MSC)

## Exercises

- Extend the coffee machine by a “cancel” button that returns to idle from every selection state. Change the table first, then C and Rust. What does the Rust compiler say if you forget a case?
- Convert the coffee machine into a Mealy machine whose outputs are pulses on the transitions. Compare the number of states.
- Give the coffee machine a “cancel” time-out: a selection that is not completed within 10 s returns to idle.
- Garage door: delete the transition CLOSING $\rightarrow$ OPENING on **beam** and run the scenario. What does the door model report? Which other transition of the StateChart protects people, and how would you test it?
- Pedestrian crossing: draw the product machine of TRAFFIC and REQUEST. Which of the 12 states can never be reached?
- Draw the state machine of the button debouncer of chapter Programming.
- Draw a message sequence chart of the MQTT example of chapter Networking (device, broker, smartphone).

# 3 Cyber-Physical Systems

# 3.1 Overview

## What is a cyber-physical system?

**Definition 3.1** ***Cyber-physical systems*** *are integrations of computation with physical processes. Embedded computers and networks monitor and control the physical processes, usually with feedback loops where physical processes affect computations and vice versa. [Edward A. Lee, 2008]*

- combination of mechanical, electrical, thermal, ... components with software and communication
- examples: driver assistance systems, industrial robots, smart grids, medical devices, building automation
- related terms: **Internet of Things** (focus on connectivity), **Industry 4.0** (production), **digital twin** (a model of a real system that is kept up to date with data from the system)

# The feedback loop

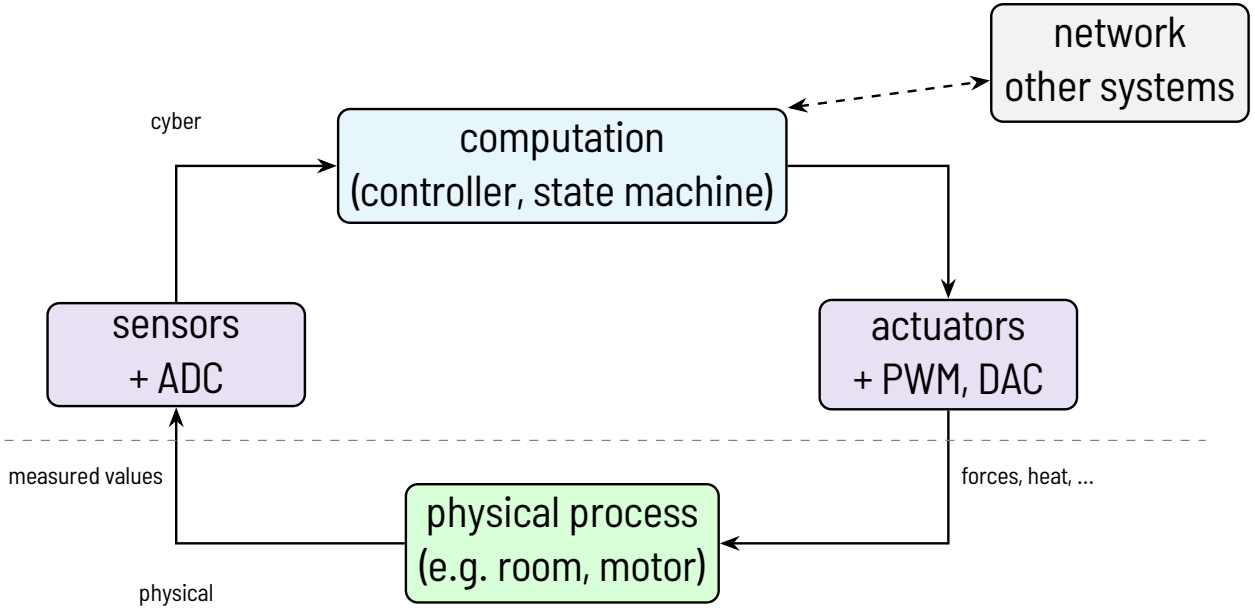



Figure 3.1.1: A cyber-physical system: computation and physical process in a closed loop

- the physical process runs continuously in time; the computer samples and acts at discrete times
- timing is part of the correctness: a controller that reacts too late can make the loop unstable

# From model to product

- the system is developed and tested in steps, replacing models by real parts one after the other

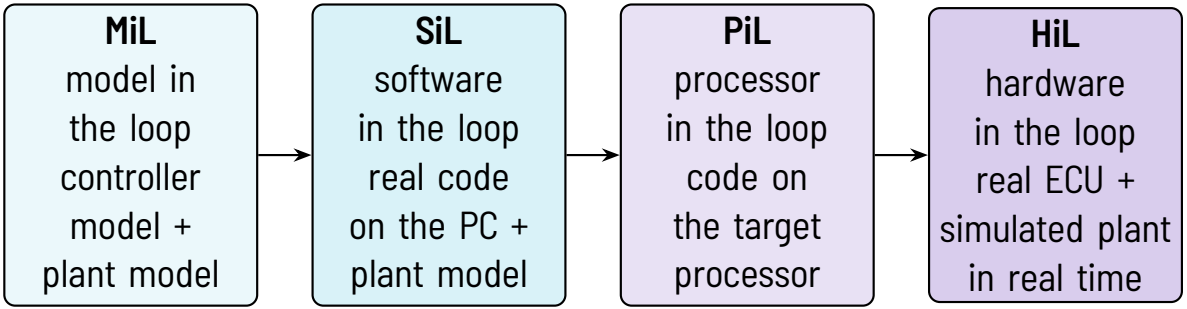



Figure 3.1.2: Test levels from the model to the real hardware

- **HiL**: the real control unit runs against a real-time plant simulator – dangerous or rare situations can be tested safely and repeatably
- our Wokwi simulations are a kind of PiL test: the real firmware on a simulated processor
- **FMI** 3.0 (2022): standard to exchange models between tools as **FMU**s for co-simulation

## Simulation of physical systems

- physical systems are described by **differential equations**, often with algebraic constraints (differential-algebraic equations, DAE)
- models with lumped parameters (masses, springs, resistors) – ordinary differential equations
- continuous-time physics combined with discrete-time controllers and events (hybrid systems)
- tools
  - **block oriented**: MATLAB/Simulink, Xcos (Scilab) – signals flow in one direction from block to block
  - **equation based** (object oriented): Modelica with OpenModelica (free) or Dymola (commercial) – components are described by their physical equations
  - general programming languages: Python with `numpy`/`scipy`, Julia (ModelingToolkit)

# Block oriented modelling

- the system is a diagram of blocks with inputs and outputs: gain, sum, integrator, transfer function
- every connection has a fixed direction (causality): the modeller decides what is computed from what

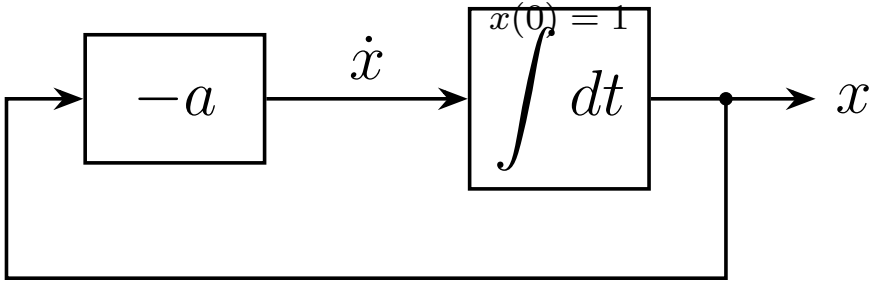



Figure 3.1.3: Block diagram of $\dot{x} = -a\,x$: the output of the integrator is fed back

- natural for control engineering and signal processing
- for physical networks (electrical circuits, mechanics) the modeller must first solve the equations for the right variables by hand – this is what equation-based tools avoid

# 3.2 Modelling with Modelica

## Features of Modelica / OpenModelica

- **equation based** (acausal): equations instead of assignments – the tool decides the order of computation
- **object oriented**: classes, instances, inheritance, packages; parameters separate from the structure (a resistor model, used with different values)
- **multi-domain**: electrical, mechanical, thermal, hydraulic, … components in one model
- **connectors** with potential variables (voltage, temperature) and flow variables (current, heat flow): `connect()` creates the equations "potentials equal, sum of flows zero"
- physical units for all quantities (`unit = "V"`) – the tool checks them
- graphical (drag and drop in OMEdit) and textual modelling of the same model
- export as FMU for co-simulation; code generation for controllers

# OpenModelica: graphical modelling

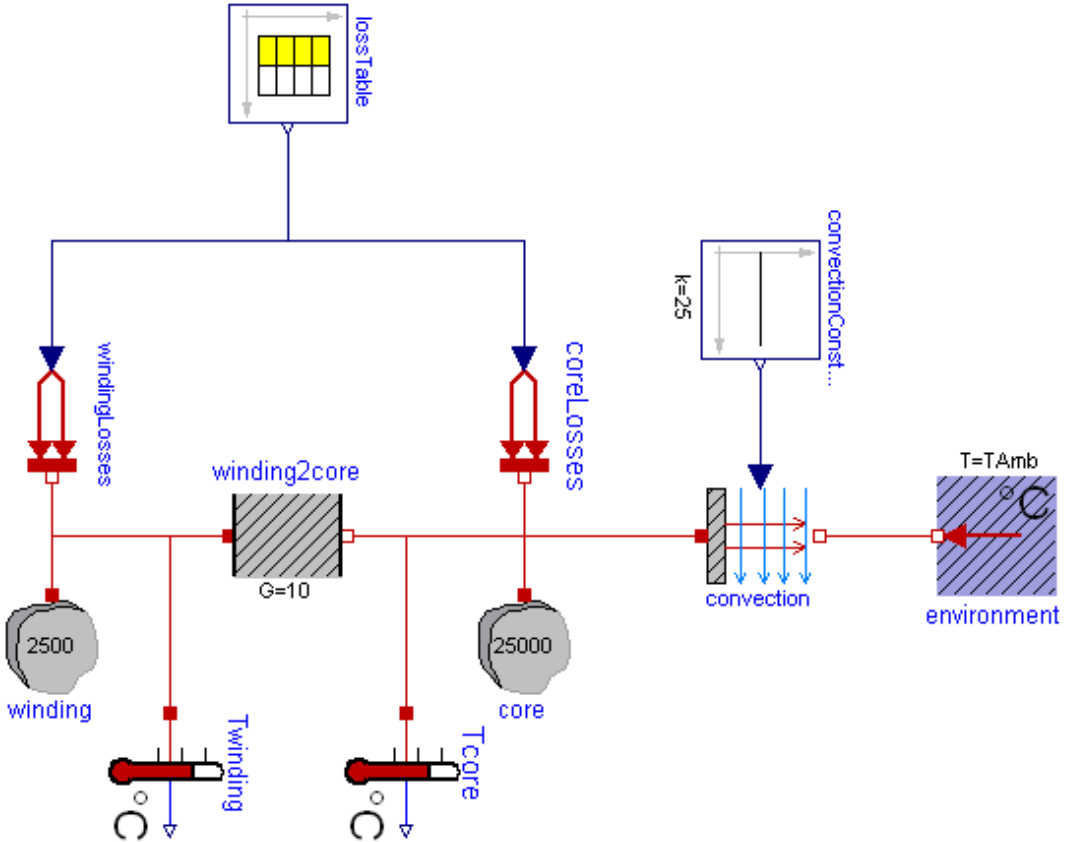



Figure 3.2.1: OpenModelica model of a heat transfer

# First elements of Modelica

- data types: `Real` (64 bit floating point), `Integer`, `Boolean`, `String`, enumerations
- `parameter`: constant during a simulation, can be changed between simulations
- `der(x)`: time derivative $\dot{x}$
- `start`: initial value; `fixed = true`: the initial value must hold exactly
- example: $\dot{x} = -a \cdot x$

```
model HDE
  Real x(start = 1, fixed = true);
  parameter Real a = 1;
equation
  der(x) = -a*x;
end HDE;
```

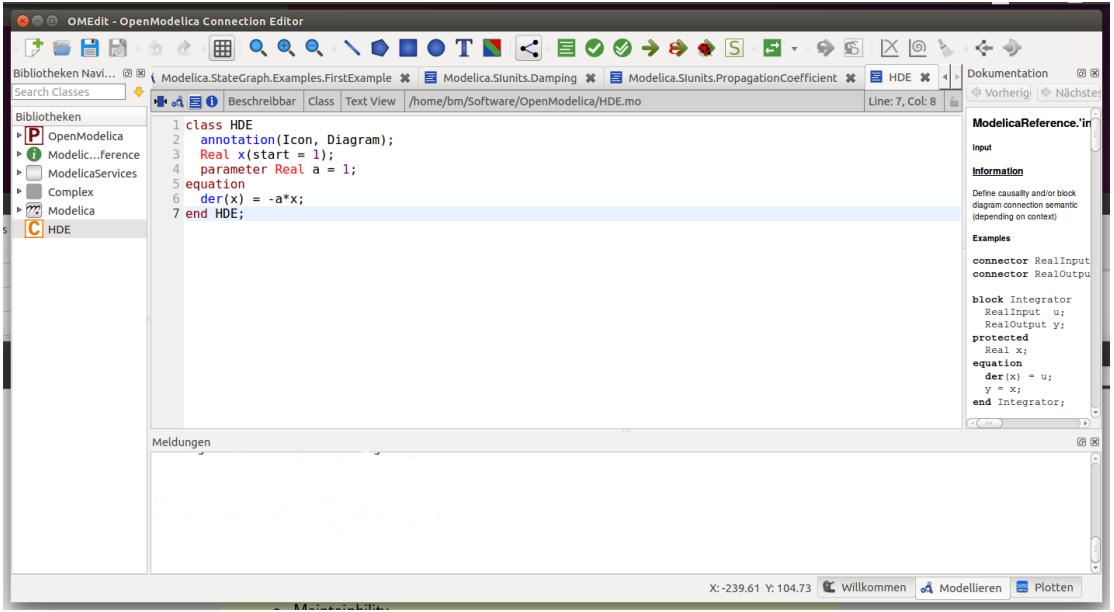



Figure 3.2.2: Model HDE in OMEdit


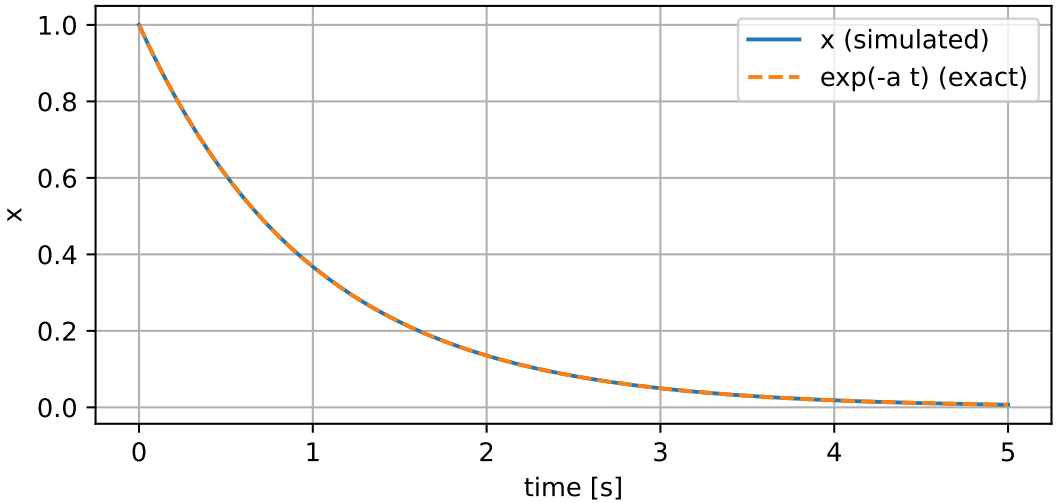



Figure 3.2.3: Solution of the model HDE: simulation and exact solution $x(t) = e^{-at}$

# Differential-algebraic equations: the pendulum

- a model can contain algebraic equations (without derivatives) besides the differential equations
- example: a planar pendulum, a mass $m$ on a rod of length $L$; the rod force $F$ is unknown

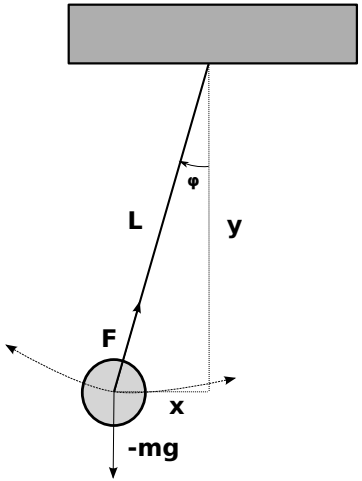


$$
\begin{aligned}
m\,\dot{v}_x &= -\frac{x}{L}\,F \\
m\,\dot{v}_y &= -\frac{y}{L}\,F - m\,g \\
\dot{x} &= v_x \\
\dot{y} &= v_y \\
x^2 + y^2 &= L^2
\end{aligned}
$$

- 5 equations for 5 unknowns ($x, y, v_x, v_y, F$); the last equation is the constraint of the rod

# The pendulum in Modelica

```
model Pendulum "Planar pendulum"
  parameter Real m = 1, g = 9.81, L = 0.5;
  Real F;
  Real x(start = 0.5, fixed = true), y(start = 0);
  Real vx, vy;
equation
  m*der(vx) = -(x/L)*F;
  m*der(vy) = -(y/L)*F - m*g;
  der(x) = vx;
  der(y) = vy;
  x^2 + y^2 = L^2;   // algebraic equation (constraint of the rod)
end Pendulum;
```

- the equations are written as in the physics book; OpenModelica reduces the DAE (index reduction) and chooses the state variables itself

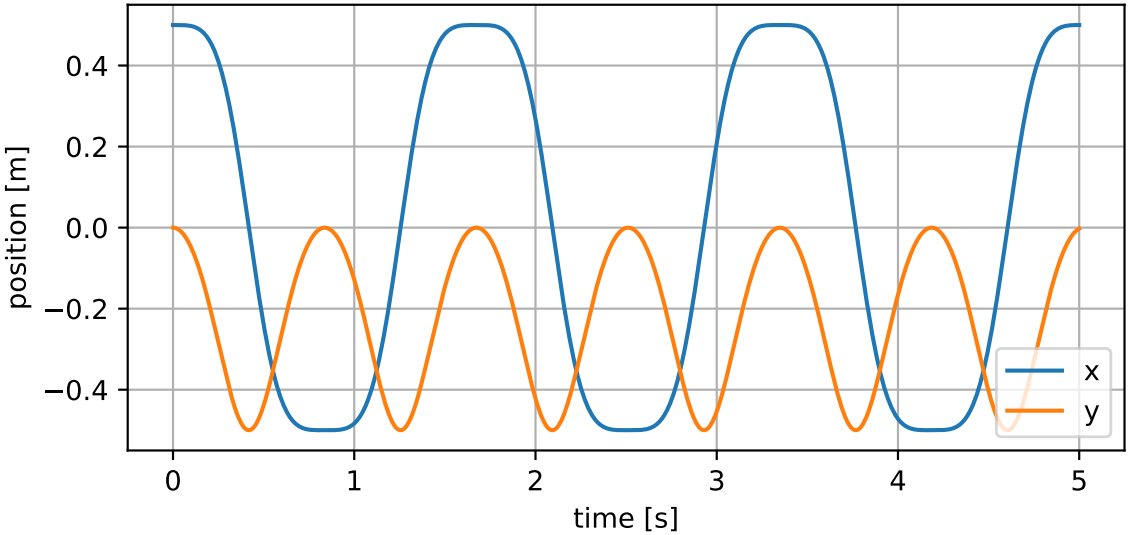



Figure 3.2.4: Horizontal and vertical position of the pendulum, started with the rod horizontal

- $y$ is always $\leq 0$: the mass swings below the pivot; the period is longer than for small angles

# Classes and instances


- every object has a class that defines its data and its behaviour
- a class has variables (constants, parameters, computed values), equations, and can contain instances of other classes

```
class Point "Point in a three-dimensional space"
  Real x;
  Real y;
  Real z;
end Point;

class Triangle
  Point point1;
  Point point2;
  Point point3;
end Triangle;

class Triangle2 "with modification of an instance"
  Point point1(x = 1, y = 2, z = 3);
  Point point2;
  Point point3;
end Triangle2;
```

# An electrical example

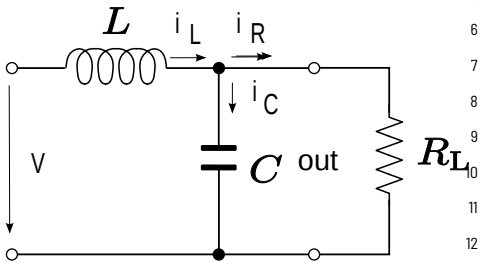


```
model RLC1 "A resistor-inductor-capacitor circuit"
  type Voltage = Real(unit = "V");
  type Current = Real(unit = "A");
  parameter Voltage Vb = 24 "Battery voltage";
  parameter Real L(unit = "H") = 1;
  parameter Real R(unit = "Ohm") = 100;
  parameter Real C(unit = "F") = 1e-3;
  Voltage V;
  Current i_L, i_R, i_C;
equation
  V = i_R*R;
  C*der(V) = i_C;
  L*der(i_L) = Vb - V;
  i_L = i_R + i_C;
end RLC1;
```

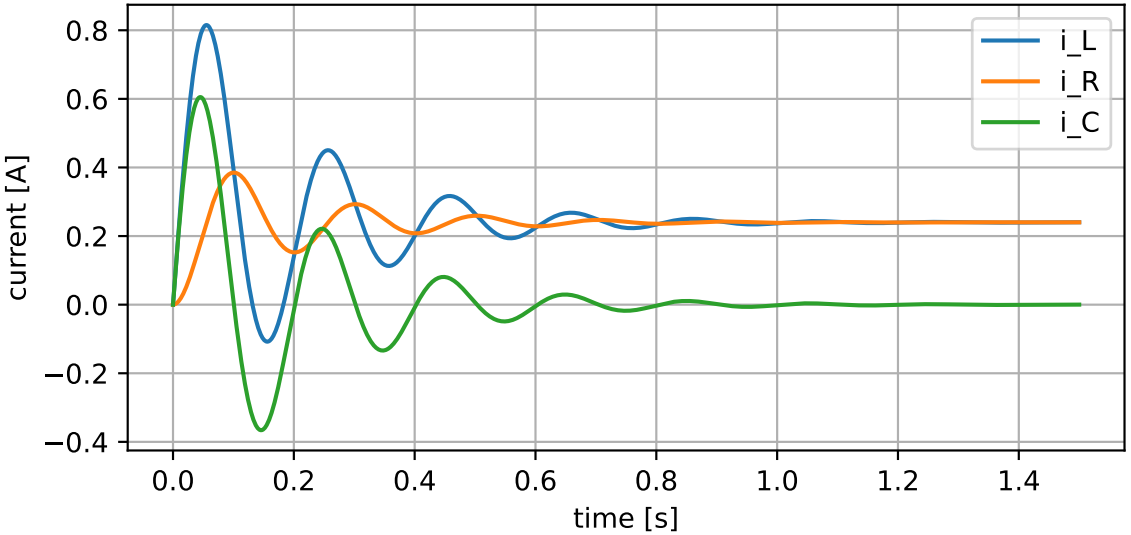



Figure 3.2.5: Currents in the RLC circuit after switching on the battery

- damped oscillation ($\omega_0 = 1/\sqrt{LC} \approx 31.6\,\mathrm{s}^{-1}$, i.e. about 5 Hz); final state $i_L = i_R = V_b/R = 0.24\,\mathrm{A}$, $i_C = 0$

# The same equations in Python

```python
from scipy.integrate import solve_ivp

Vb, L, R, C = 24.0, 1.0, 100.0, 1e-3

def rlc(t, s):              # state: capacitor voltage V, inductor current i_L
    V, iL = s
    return [(iL - V / R) / C,       # C dV/dt   = i_C = i_L - V/R
            (Vb - V) / L]           # L di_L/dt = Vb - V

sol = solve_ivp(rlc, (0, 1.5), [0.0, 0.0], max_step=1e-3)
print("final i_L =", sol.y[1][-1])    # 0.240 A
```

- here the equations had to be solved for the derivatives by hand – for the RLC circuit easy, for the pendulum DAE not (we used the angle as the only state)
- this is exactly the work Modelica does automatically for large models
- the plots of this chapter were created with this script (`examples/cps/simulate` runs on Replit)

## Exercises

- Simulate `HDE`, `Pendulum` and `RLC1` in OpenModelica and compare with the plots of the Python script.
- Change $R$ in the RLC circuit to $10\,\Omega$ and $1000\,\Omega$. When does the circuit stop oscillating? Compare with the condition $R = \frac{1}{2}\sqrt{L/C}$.
- Build the RLC circuit graphically from the Modelica standard library (`Modelica.El`) and compare the generated equations with `RLC1`.
- Add a two-point controller to a heated room model: heating on below 20 °C, off above 21 °C. How does the hysteresis influence the switching frequency?

# 3.3 Case Study: a Digital Twin

## Digital twin

- a **model** of one particular real system that is **kept up to date** with data from it, and that may act back on it
  - model only, no data link: simulation (as in the previous section)
  - data flows from the system to the model: **digital shadow**
  - data flows in both directions: **digital twin**
- uses
  - **virtual sensors**: estimate what is not measured (wear, leak flow, temperature inside a winding)
  - **fault detection**: the system does something the model does not expect
  - **prediction** and what-if: run the model ahead of time, try a setting on the model first
  - **supervision**: setpoints, schedules, alarms for many devices from one place
- examples: wind turbines, aircraft engines (maintenance), production lines, water and power grids

# The setup

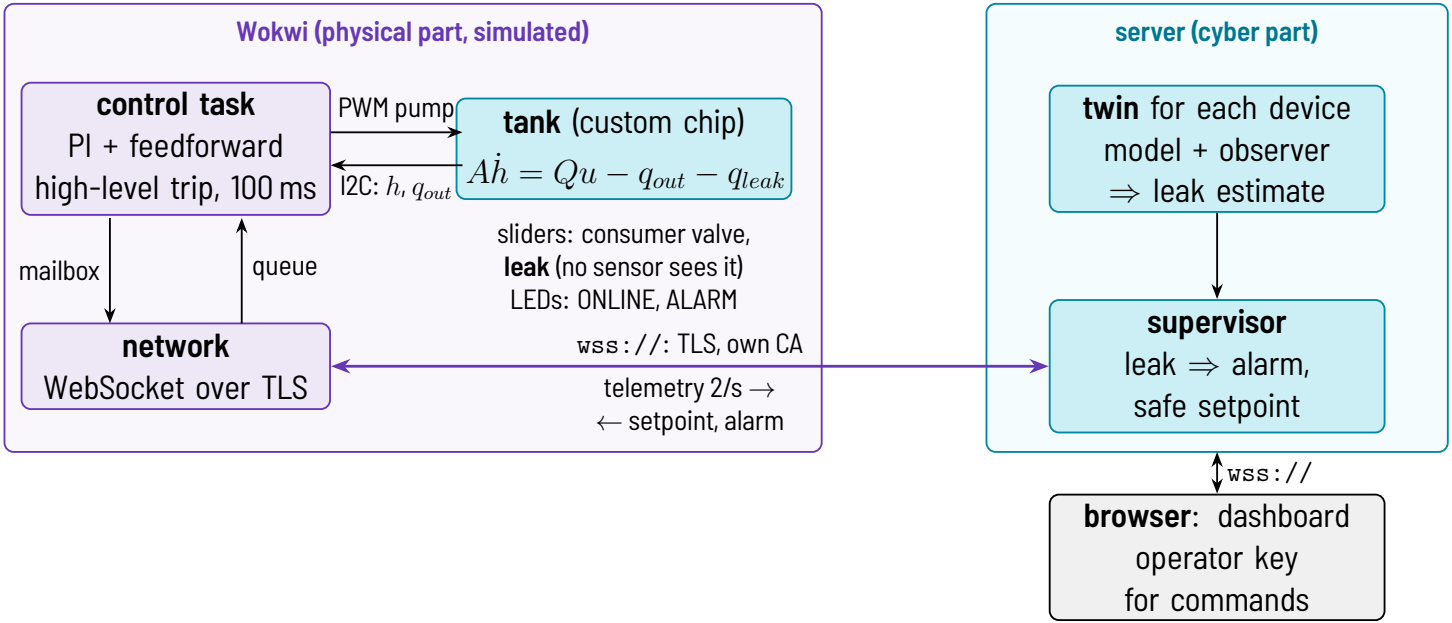



Figure 3.3.1: The physical part runs in Wokwi, the cyber part on a server in the internet

## The physical part: tank and controller

- tank model in the custom chip (10 ms steps), area $A = 0.04\,\mathrm{m}^2$, pump $Q = 2\,\mathrm{L/s}$ at full speed:

$$A\,\frac{dh}{dt} = Q\,u \;-\; \underbrace{v\,k_{out}\sqrt{h}}_{q_{out},\ \text{measured}} \;-\; \underbrace{l\,k_{leak}\sqrt{h}}_{q_{leak},\ \text{not measured}}$$

- consumer valve $v$ and leak $l$ are sliders on the chip; the chip draws the tank
- controller on the ESP32-C3, every 100 ms: feedforward $q_{out}/Q$ (replace what the consumer takes) + PI on the level
- **what stays on the device**: the control loop and the high-level trip ($h > 0.95\,\mathrm{m}$ $\Rightarrow$ pump off)
  - they run in their own FreeRTOS task and never wait for the network
  - TLS handshake, lost Wi-Fi, server down: the tank keeps its level – only the ONLINE LED goes off
- **what the server decides**: the setpoint and the alarm – slow decisions that need the model and the overview

## The cyber part: model and observer

- the twin knows $A$ and $Q$, and gets $h$, $q_{out}$ and $u$ from the device every 0.5 s
- plain model without measurements: $\hat{h}_{k+1} = \hat{h}_k + \Delta t\,(Qu - q_{out})/A$ – drifts away as soon as water goes somewhere unknown
- **observer**: predict with the model, then correct with the measurement; the remaining error is explained by an unknown outflow $\hat{q}_{leak}$

$$h^- = \hat{h}_k + \Delta t\,(Qu - q_{out} - \hat{q}_{leak})/A \qquad r = h_{meas} - h^-$$

$$\hat{h}_{k+1} = h^- + L_1\,r \qquad \hat{q}_{leak} \leftarrow \hat{q}_{leak} - L_2\,r$$

- $L_1 = 0.3$, $L_2 = 0.004$: estimate noise about 0.015 L/s, 90 % of a step after about 5 s (a Kalman filter computes such gains from the noise levels)
- supervisor: $\hat{q}_{leak} > 0.15$ L/s for 3 s $\Rightarrow$ alarm, setpoint 250 mm (less pressure, less leak flow) until the operator acknowledges
- the time base is the **device** clock ($\Delta t$ from the time stamps): network delays and a simulation slower than real time do not disturb the model

# A secure connection

```
const char *CA_CERT = R"(-----BEGIN CERTIFICATE-----
MIIB3zCCAYagAwIBAgIUGvxo7no1ov/HoARhayx7NHtAbGUwCgYIKoZIzj0EAwIw ...
-----END CERTIFICATE-----)";
ws.setExtraHeaders("Authorization: Bearer ec-lecture-2026");
ws.beginSslWithCA("srv2003097.hstgr.cloud", 8443, "/device?id=tank1",
                  CA_CERT, "twin");
```

- **TLS**: telemetry and commands are encrypted and cannot be changed on the way
- **own certificate authority** (`make_pki.sh`, P-256): the device trusts only certificates signed by this CA (pinning) – not anybody with some public certificate; the server certificate can be renewed without new firmware
- the **server** checks the device: token in the HTTP header (here public in the sketch – in a product a secret or a client certificate per device: mutual TLS); commands from the browser need an **operator key**
- JSON up: `{"t":84403,"h":0.242,"q":883,"u":0.62,"sp":0.25}`
  JSON down: `{"sp":0.25,"alarm":1,"leak":0.368}`

# Result: the twin finds the leak

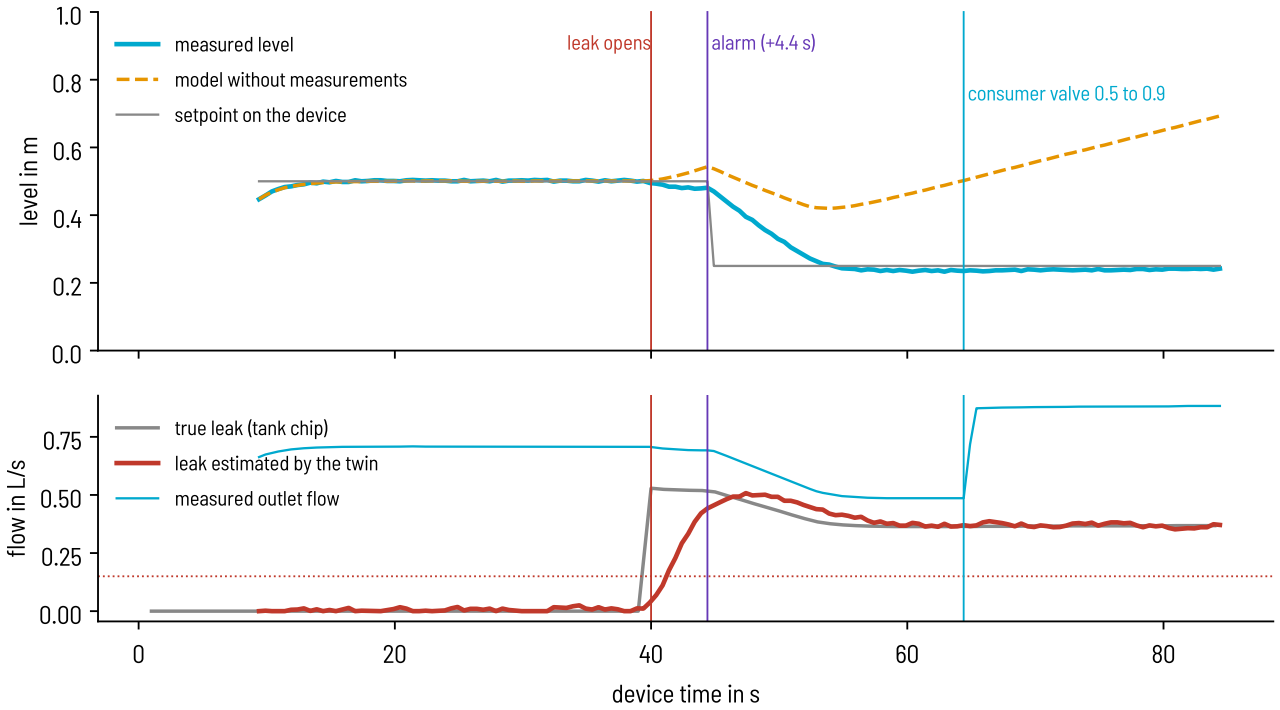



Figure 3.3.2: End-to-end run (Wokwi scenario against the server): the leak opens at 40 s, the twin raises the alarm 4.4 s later and lowers the setpoint. The model without measurements (dashed) drifts away. More consumption at 64 s is measured and causes no false alarm.

## Lessons for cyber-physical systems

- split by time scale and by safety: fast loops and protection on the device, slow decisions with the model and the overview in the cyber part
- the device must have a defined behaviour **without** the cyber part (here: keep the last setpoint, report offline) – the network will fail
- a model alone is not a twin: without measurements it drifts; without a model the measurements cannot tell a leak from a consumer
- a twin is only as good as its parameters: validate $A$, $Q$ and the sensors on the real system, and track slow changes (pump wear)
- security is part of the design: every device on the internet is attacked – encryption, authentication of **both** sides, secrets per device, updates
- test levels again: `test/sil_device.py` tests the server with a tank and controller in Python (SiL), the Wokwi scenario runs the real firmware against the real server (PiL)


## Exercises: digital twin

- run the Wokwi project with your own device name and watch your twin on the dashboard. Open the leak slowly in steps of 0.05. Which is the smallest leak the twin detects? Explain the limit with the noise of the estimate.
- the pump wears and delivers only 80 % of $Q$ (change `Q_PUMP` in the chip). What does the twin conclude? Extend the observer so that it estimates the pump factor as well. Can it tell a weak pump from a leak?
- add a prediction to the server: when will the tank be empty if the pump fails now? Show it on the dashboard.
- stop the server during a run. What does the device do, what should it do after 10 minutes without a server? Implement your choice.
- replace the shared device token by mutual TLS: create a client certificate per device with the CA and let the server check it.

# 4 Processors

# 4.1 Processors for Embedded Systems

## Classes of processors

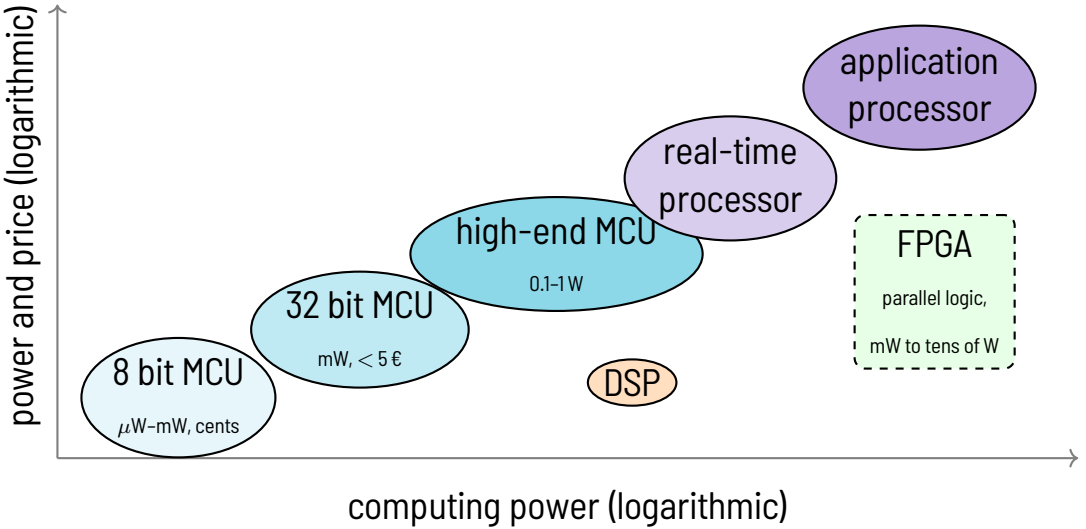


- **MCU**: CPU, flash, RAM and peripherals on one chip; bare metal or RTOS
- **application processor**: MMU, external DRAM, Linux; **real-time processor**: determinism at high clock rates (Cortex-R, TriCore)
- modern chips combine several classes on one die (Cortex-A + Cortex-M + NPU)

# The spectrum of embedded processors

| class | examples | clock | memory | power | price (approx.) | software |
|---|---|---|---|---|---|---|
| 8 bit MCU | ATmega328P, PIC16, 8051 | 1–20 MHz | 1–64 KB flash, $<$ 8 KB RAM | $\mu$W–mW | $<$ 1 € | bare metal |
| 32 bit MCU | STM32G0, RP2040, ESP32-C3, nRF52 | 32–250 MHz | 32 KB–2 MB flash, 8–512 KB RAM | $\mu$W–100 mW | 0.10–5 € | bare metal, RTOS |
| high-end MCU | STM32H7, i.MX RT1170, STM32N6 | 0.4–1 GHz | MBs SRAM, external flash/RAM | 0.1–1 W | 3–20 € | RTOS |
| real-time processor | Cortex-R5/R52, AURIX TriCore | 0.3–1.6 GHz | TCM, ECC, MBs flash | 0.5–5 W | 10–50 € | AUTOSAR, RTOS |
| applica-tion processor | BCM2712 (RPi 5), i.MX 93, AM62x | 1–2.4 GHz, multi-core | 0.5–16 GB DRAM | 1–15 W | 5–100 € | Linux, Android |
| DSP | TI C2000, ADI SHARC | 0.1–1 GHz | on-chip RAM | 0.1–5 W | 2–50 € | bare metal, RTOS |
| FPGA / SoC-FPGA | Lattice iCE40, AMD Zynq | 50–500 MHz | block RAM, DRAM | mW–tens of W | from 2 € | HDL + processor software |

# Use cases: which processor where?

**remote control, smoke detector**
8 bit MCU (PIC, AVR, 8051)
cents; years on a coin cell

**smart plug, thermostat**
Wi-Fi SoC, RISC-V (ESP32-C3/C6)
Matter, cloud connection

**fitness tracker, hearing aid**
Bluetooth LE MCU, Cortex-M33 (nRF54, EFR32)
average current in $\mu$A

**e-bike, drone motor**
Cortex-M4F (STM32G4), TI C2000
field-oriented control at 20 kHz

**brake, steering, airbag**
AURIX TriCore, Cortex-R52 in lock-step
ISO 26262 ASIL D


**SSD controller, 5G modem**
Cortex-R, ARC, RISC-V
real time at GHz

**industrial HMI, gateway**
Cortex-A + Linux (i.MX 93, AM62x, STM32MP2)

**smart camera**
Cortex-A + NPU (i.MX 8M Plus) or Cortex-M55 + NPU (STM32N6)

microcontroller real-time processor application processor

# Use case: processors in a car

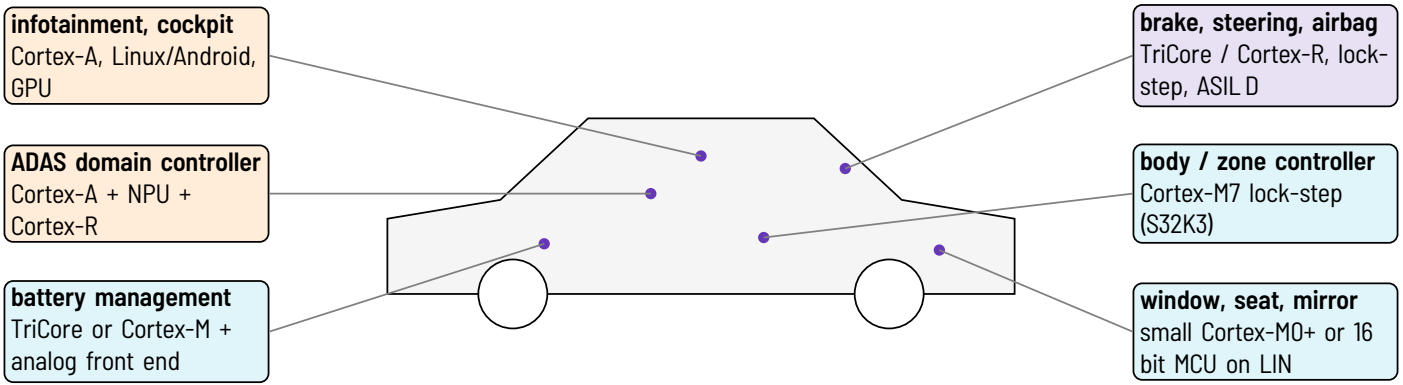


- a modern car contains about 70–150 control units with very different processors
- trend: **zonal architecture** – a few central high-performance computers plus zone controllers instead of one ECU per function


## Key figures: performance

- execution time of a program:

$$T = \underbrace{N_{\text{instr}}}_{\text{ISA, compiler}} \cdot \underbrace{\text{CPI}}_{\text{microarchitecture, memory}} \cdot \underbrace{\frac{1}{f_{\text{clk}}}}_{\text{technology, pipeline depth}}$$


- the clock alone says little: a 200 MHz Cortex-M7 can be faster than a 400 MHz Cortex-M0+
- benchmarks normalised to the clock:
  - **DMIPS/MHz** (Dhrystone): old and easy to fool with compiler tricks
  - **CoreMark/MHz** (EEMBC): today's standard figure for MCU cores
  - application benchmarks: ULPMark (energy), MLPerf Tiny (neural networks), own code on an evaluation board

# Key figures: CoreMark of real chips

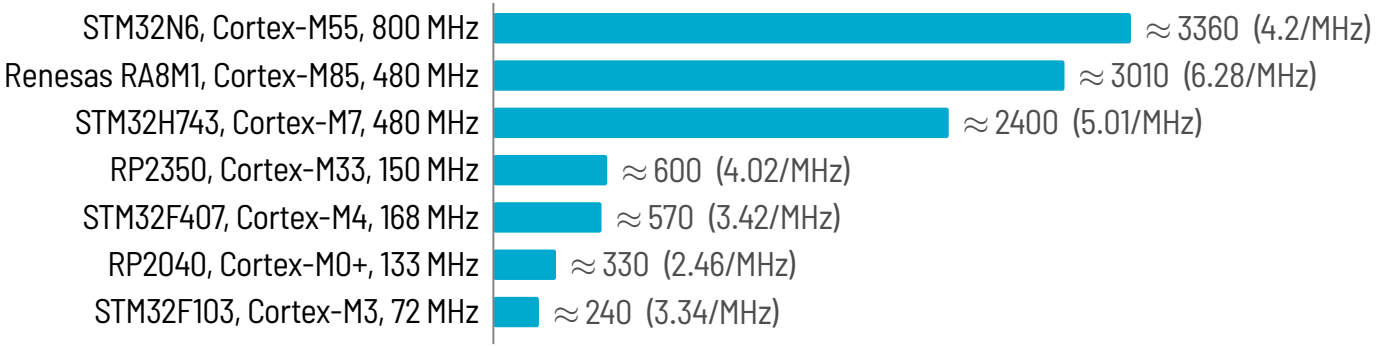


- CoreMark = CoreMark/MHz (published by Arm, ideal memory) × clock – in a real chip wait states and caches cost a part of it
- an 8 bit AVR reaches well below one CoreMark/MHz

# Key figures: everything else that matters

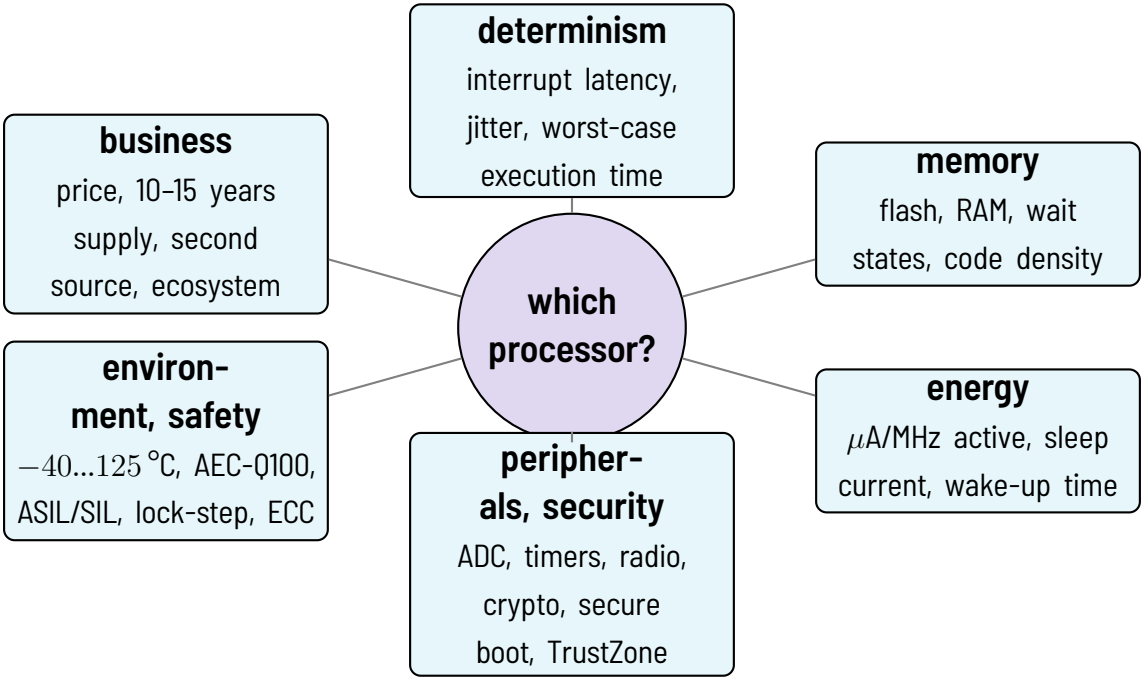


# Processors of this lecture (all simulated in Wokwi)

| | ATmega328P | RP2040 | ESP32-C3 | STM32F103 |
|---|---|---|---|---|
| board | Arduino Uno | Raspberry Pi Pico | ESP32-C3-DevKitM-1 | "Blue Pill" |
| architecture | AVR, 8 bit | ARM Cortex-M0+, 32 bit | RISC-V RV32IMC, 32 bit | ARM Cortex-M3, 32 bit |
| cores, clock | 1, 16 MHz | 2, 125–200 MHz | 1, 160 MHz | 1, 72 MHz |
| program memory | 32 KB flash | external QSPI flash (2 MB) | flash in the package (4 MB) | 64 KB flash |
| RAM | 2 KB | 264 KB | 400 KB | 20 KB |
| special | EEPROM, 5 V | PIO, USB | Wi-Fi, Bluetooth LE | CAN, USB |

- the successor of the RP2040, the RP2350 (Raspberry Pi Pico 2), offers two Cortex-M33 **or** two RISC-V cores on the same chip – selectable at boot
- Wokwi also simulates the ESP32 and ESP32-S3 (Xtensa) and other ESP32 variants

# 4.2 Architecture Fundamentals

## Instruction set and microarchitecture

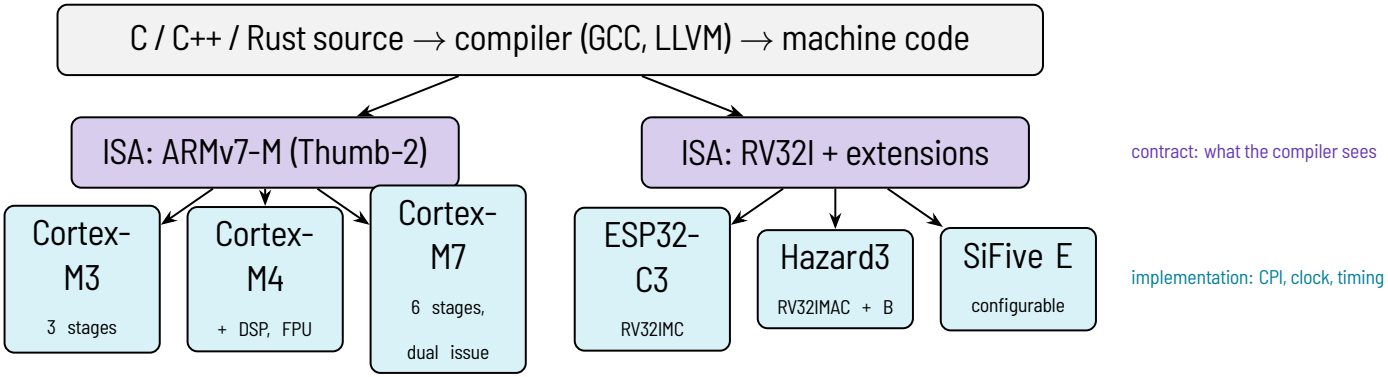


- the same binary runs on all cores of an ISA – only faster or slower
- embedded-relevant ISA properties: code density, interrupt model, determinism, tool support

# Von Neumann and Harvard architecture

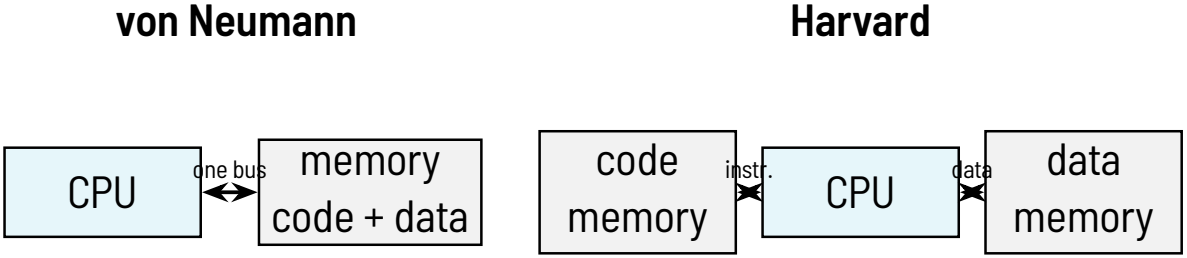



Figure 4.2.1: One bus for code and data, or separate buses

- **Harvard**: fetching the next instruction and accessing data at the same time – higher throughput
  - AVR: pure Harvard; constants in flash need special instructions (`PROGMEM`, `lpm`)
- **modified Harvard** (Cortex-M, RISC-V MCUs): separate instruction and data buses or caches, but **one** common address space – a pointer can point to flash or RAM

# RISC and CISC: the same operation


```
; CISC (x86): counter++
add dword [counter], 1
; memory operand: read, add,
; write in ONE instruction
```

```
@ RISC (Cortex-M): counter++
ldr  r1, =counter   @ address
ldr  r0, [r1]       @ load
adds r0, r0, #1     @ add in register
str  r0, [r1]       @ store
```

- **RISC** = load/store architecture: arithmetic only on registers, simple instructions of (mostly) fixed length $\Rightarrow$ easy to decode and to pipeline
- many registers: AVR 32 $\times$ 8 bit, Cortex-M 13 $\times$ 32 bit + SP, LR, PC, RISC-V 31 $\times$ 32 bit + `zero`
- almost all embedded architectures are RISC; Renesas RX is a CISC exception
- for embedded systems, **code density** matters more than the label: Thumb-2 and RISC-V "C" mix 16 and 32 bit instructions


# Byte order and alignment

`uint32_t x = 0x12345678;` at address 0x100

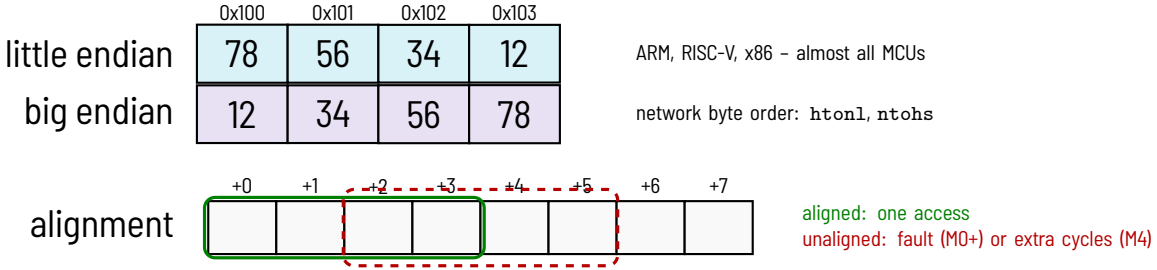



- word width: `int` is 16 bit on AVR and MSP430, 32 bit on ARM and RISC-V ⇒ use `uint16_t`, `int32_t`
- care with communication buffers, casts of byte pointers and `packed` structures

# Pipeline

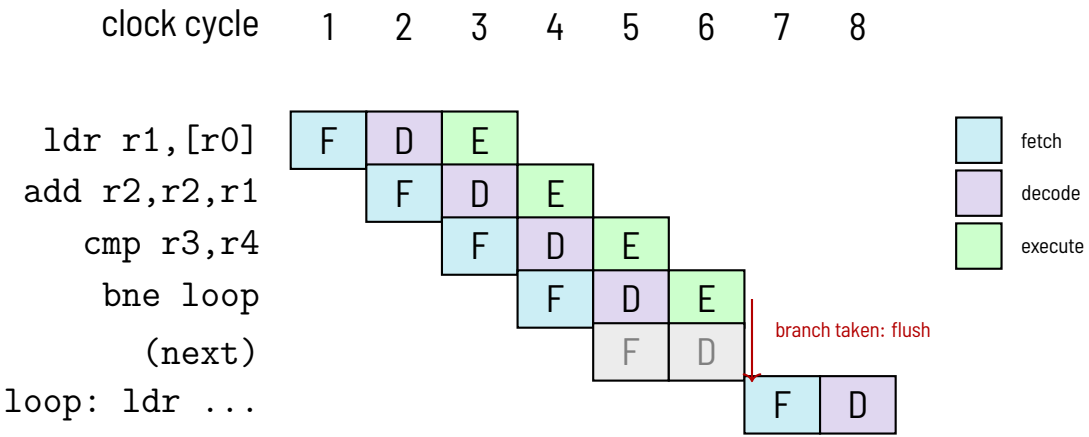



- stages work in parallel on consecutive instructions ⇒ ideally CPI = 1
- a taken branch is known only in execute: the instructions behind it are thrown away (**branch penalty**)
- pipeline depth: AVR 2, Cortex-M0+ 2, M3/M4/M33 3, M7 6 stages

# Pipeline hazards

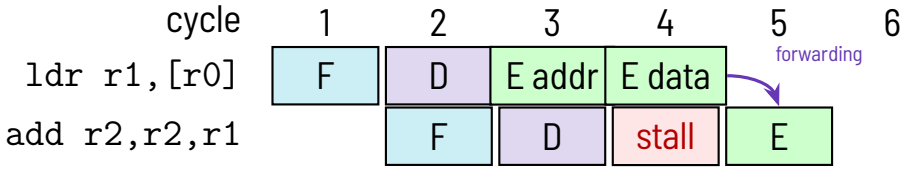



- **data hazard**: `add` needs `r1`, which arrives from memory one cycle late ⇒ stall; forwarding avoids waiting for the register write
- **control hazard**: branches; remedies are branch prediction (Cortex-M7, Cortex-A), loop unrolling, `IT` blocks and **zero-overhead loops** (DSPs, Xtensa, ARMv8.1-M)
- **structural hazard**: two instructions need the same unit, e.g. one memory port ⇒ Harvard buses
- good compilers reorder instructions to fill these slots

# Superscalar and out-of-order execution

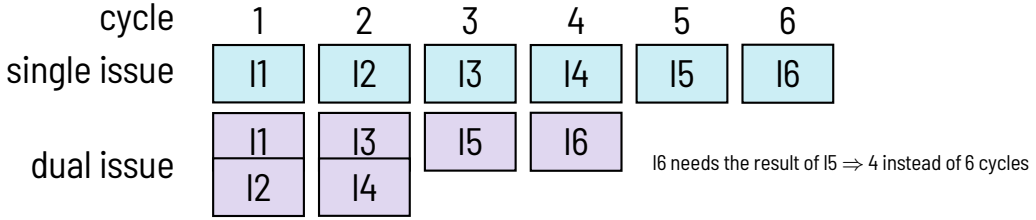



- **superscalar**: Cortex-M7, M85, Cortex-A53/A55, ESP32-P4 – IPC up to about 2
- **out-of-order**: large Cortex-A (A76 in the Raspberry Pi 5), x86 – reorders, renames registers, executes speculatively
- microcontrollers stay **in-order**: small, efficient, and the WCET can be analysed
- speculation opened security holes (Spectre, Meltdown) – another reason for simple cores in security-critical devices

# Memory hierarchy

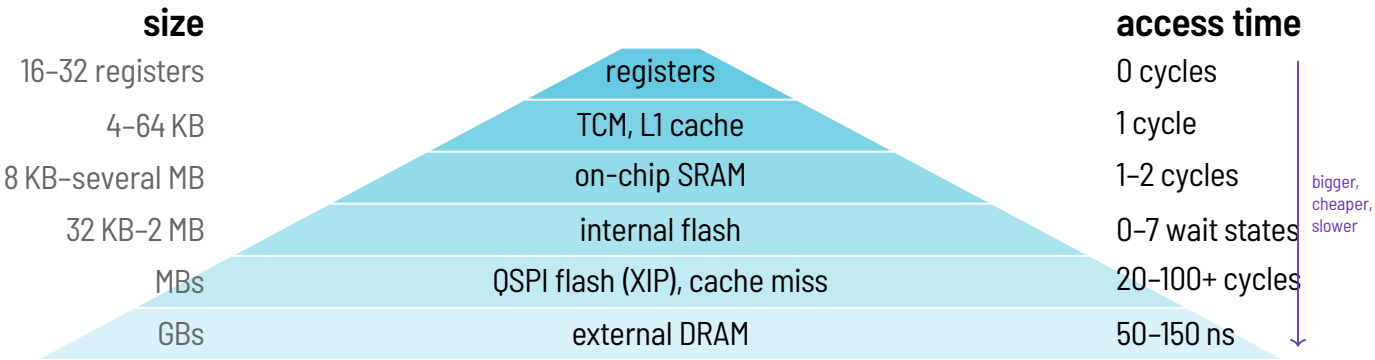


- the CPU is faster than the memory: a 480 MHz core without caches would mostly wait
- caches exploit **locality**: the same addresses again soon (temporal), neighbouring addresses (spatial)

# How a cache works: one load step by step

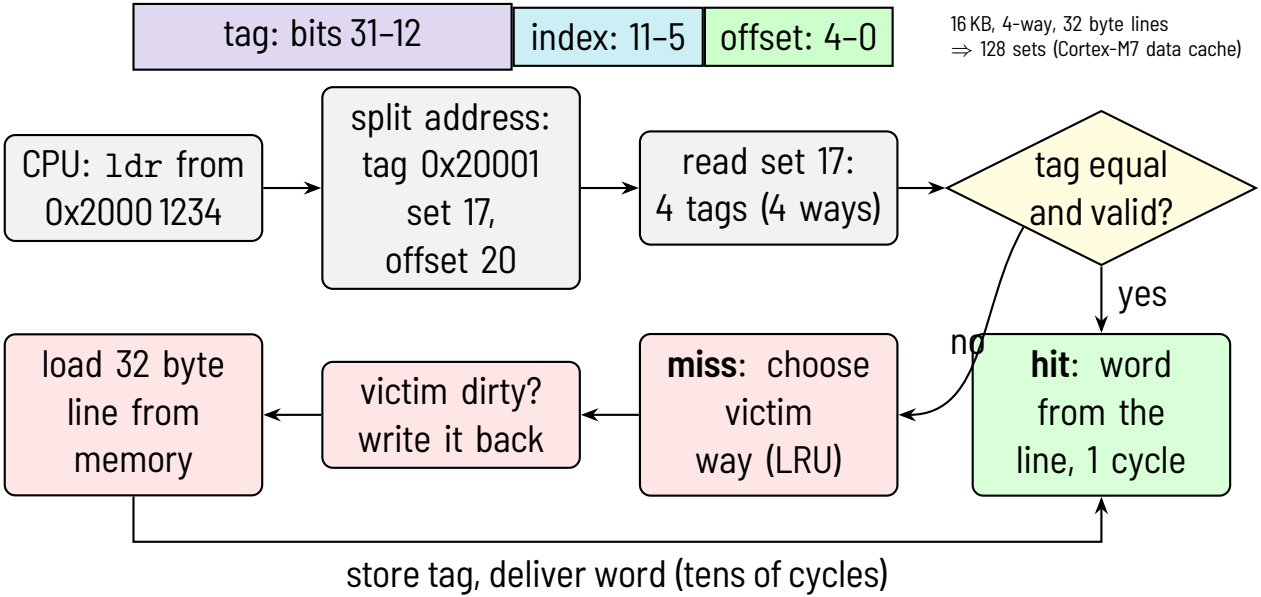


# Cache example: hits, misses, conflicts

| | **direct mapped** (4 sets × 1 way) | | | **2-way** (2 sets × 2 ways) | |
|---|---|---|---|---|---|
| **address** | **set** | **tag** | **result** | **set** | **result** |
| 0x00 | 0 | 0 | miss (cold) | 0 | miss (cold) |
| 0x04 | 0 | 0 | hit (same line: spatial locality) | 0 | hit |
| 0x14 | 1 | 0 | miss (cold) | 1 | miss (cold) |
| 0x40 | 0 | 1 | miss, throws out 0x00–0x0F | 0 | miss, goes into way 2 |
| 0x08 | 0 | 0 | miss (**conflict**) | 0 | hit |
| 0x18 | 1 | 0 | hit | 1 | hit |
| | | | **hit rate 2/6** | | **hit rate 3/6** |

- tiny cache with 4 lines of 16 bytes; direct mapped: set = address bits 5–4, tag = bits 7–6; two arrays 64 bytes apart throw each other out
- associativity removes such conflicts; in real code: watch the layout of arrays that are used together

# Caches and DMA: a classic bug

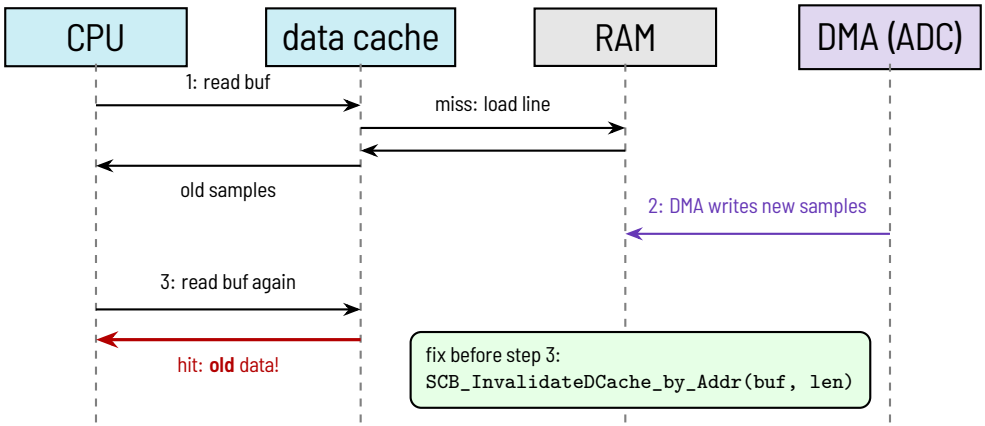


- the other direction: before DMA sends a buffer, **clean** the cache (write dirty lines back)
- alternatives: non-cacheable region via the MPU, or buffers in TCM / non-cached SRAM
- timing: the same code takes different times depending on cache content ⇒ put interrupt handlers and control loops into TCM/SRAM (`IRAM_ATTR` on the ESP32, `__not_in_flash_func` on the RP2040)

# 4.3 Architectures and their Particularities

## Overview of embedded architectures

| architecture | bits | owner, license | particularities | typical use |
|---|---|---|---|---|
| AVR, PIC, 8051 | 8 | Microchip and many others | simple, robust, 5 V, tiny RAM | toys, household devices, sensors |
| MSP430 | 16 | TI | extremely low power | metering, battery sensors |
| ARM Cortex-M | 32 | Arm, licensed core | one ecosystem for thousands of chips | almost all MCU applications |
| ARM Cortex-R | 32 (64) | Arm, licensed core | TCM, lock-step, ECC, fast interrupts | storage controllers, automotive, 5G modems |
| ARM Cortex-A | 64 | Arm, licensed core | MMU, caches, out-of-order (larger cores) | Linux devices, smartphones, infotainment |
| RISC-V | 32/64 | open ISA (RISC-V International) | modular, custom extensions, no license fees | MCUs, coprocessors, AI chips, growing fast |
| Xtensa | 32 | Cadence, configurable | register windows, custom instructions | ESP32/ESP32-S3, audio DSPs |
| TriCore, RH850 | 32 | Infineon, Renesas | safety features, automotive certification | engine and brake control units |
| C2000, SHARC | 32 | TI, ADI | DSP features, fast control loops | motor control, power conversion, audio |

## 8 bit AVR (ATmega328P)

- 32 registers of 8 bit, two-stage pipeline, most instructions in one cycle, 16 MHz on the Arduino Uno
- pure Harvard: 32 KB flash, 2 KB SRAM, 1 KB EEPROM; 5 V, robust pins, power-down well below 1 $\mu$A
- interrupts: hardware saves only the PC, the compiler saves the registers $\Rightarrow$ keep handlers short
- limits: 16/32 bit arithmetic needs several instructions, no division, little RAM
- **use case**: a battery-powered room sensor or a toy – simple control logic, 5 V parts, very cheap; and the chip that made embedded programming popular through Arduino

# ARM: three profiles

| Cortex-M: microcontroller | Cortex-R: real time | Cortex-A: application |
|---|---|---|
| **features**<br>small and efficient<br>NVIC, hardware register saving<br>MPU, optional TrustZone<br>programmed fully in C/Rust<br><br>**used in**<br>sensors, motor control, wearables, IoT, everything with an RTOS | **features**<br>high clock **and** determinism<br>TCM, ECC on all memories<br>dual-core lock-step<br>R52: hypervisor<br><br>**used in**<br>brake and airbag ECUs, SSD and hard disk controllers, 4G/5G modems | **features**<br>64 bit, MMU for Linux<br>multi-level caches, NEON/SVE<br>big.LITTLE (A76 + A55)<br>out-of-order (large cores)<br><br>**used in**<br>smartphones, Raspberry Pi, infotainment, gateways, ADAS |

# ARM Cortex-M family

| core | architecture | features | example chips |
|---|---|---|---|
| Cortex-M0 / M0+ | ARMv6-M | smallest; Thumb subset, no division | RP2040, STM32G0, nRF51 |
| Cortex-M3 | ARMv7-M | full Thumb-2, hardware division | STM32F1, LPC17xx |
| Cortex-M4 | ARMv7E-M | + DSP (SIMD, MAC), optional single precision FPU | STM32F4/G4, nRF52 |
| Cortex-M7 | ARMv7E-M | superscalar, caches, TCM, optional double FPU, up to 1 GHz | STM32H7, i.MX RT1170, S32K3 |
| Cortex-M23 / M33 | ARMv8-M | + TrustZone (M33 also DSP and FPU) | RP2350, STM32U5, nRF54L |
| Cortex-M52/M55/M85 | ARMv8.1-M | + Helium vectors (MVE) for DSP and ML | STM32N6, RA8, Alif Ensemble |


- common to all: NVIC, SysTick, vector table, SWD debug; upward compatible (M0+ code runs everywhere)
- most used today: M0+ (cheap), M4 (DSP + FPU), M33 (security); M55/M85 for edge AI

# Cortex-M instruction set particularities

```
@ if (x >= 0) y = 1; else y = -1;   -- without a branch
      cmp    r0, #0
      ite    ge              @ if-then-else block: next 2 instructions conditional
      movge  r1, #1
      movlt  r1, #-1
```


- **Thumb-2**: 16 and 32 bit instructions mixed – good code density
- `push {r4-r7, lr}`, `ldm`/`stm`, `cbz` (compare and branch if zero)
- **DSP extension** (M4, M7, M33): `smlabb` (MAC), `smlad` (2 MACs), saturation `qadd`, `ssat`
- **ARMv8.1-M**: low-overhead loops `dls`/`le`, Helium on 128 bit vectors, pointer authentication (PACBTI)
- exception entry in hardware: `r0`-`r3`, `r12`, `lr`, `pc`, `xpsr` are stacked $\Rightarrow$ handlers are normal C functions
- AAPCS: arguments in `r0`-`r3`, result in `r0`, `r4`-`r11` preserved

# TrustZone for Cortex-M (ARMv8-M)

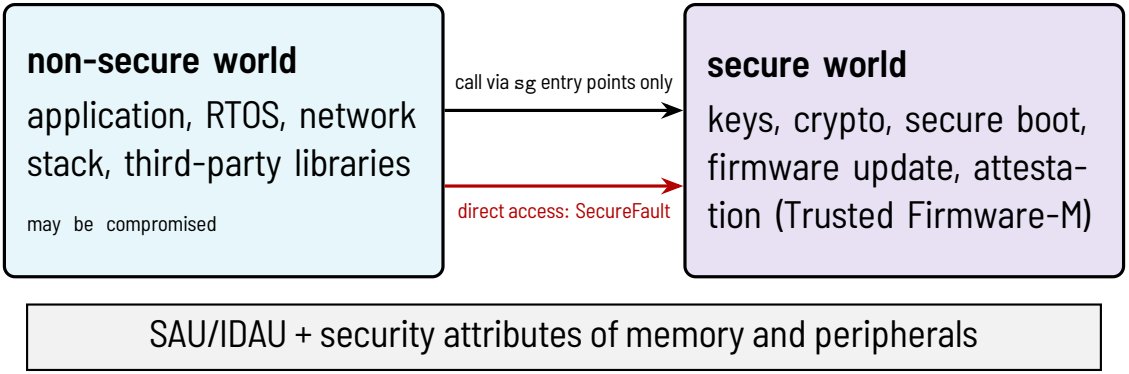


- **use case**: a smart lock – even if the Bluetooth stack has a bug, the key stays in the secure world
- basis for PSA Certified and the EU Cyber Resilience Act; in M23, M33, M55, M85 (RP2350, STM32U5, nRF54L, LPC55)

# RISC-V: a modular ISA

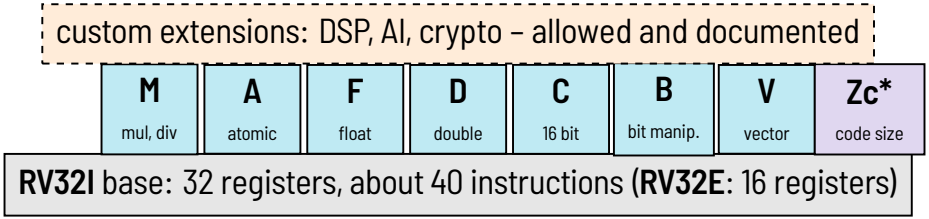


CH32V003: RV32EC
ESP32-C3: RV32IMC
Hazard3 (RP2350): RV32IMAC + B + Zc*
ESP32-P4: RV32IMAFC + custom AI/DSP
Linux SoCs: RVA23 profile (64 bit, V)

- open ISA (UC Berkeley 2010, today RISC-V International) – no license fees
- privilege modes M (machine), S (supervisor, Linux), U (user); embedded: M + U with PMP as memory protection
- profiles (e.g. RVA23) bundle extensions, so that operating systems know what to expect

# RISC-V: chances and challenges

**chances**

+ no license fee, no dependence on one company (EU, China, India)
+ many cores: SiFive, Andes, Codasip, Nuclei; Espressif, WCH, Nordic; open source: Hazard3, Ibex (OpenTitan), CV32E40P, VexRiscv
+ same GCC/LLVM, Rust targets, Zephyr, FreeRTOS
+ ideal small coprocessor: nRF54 (VPR), ESP32-C6 (LP core), management cores in SoCs

**challenges**

− fragmentation: which extensions, which custom instructions?

− interrupt controllers differ (CLINT, CLIC, PLIC, vendor-specific)

− debug, trace and certified safety tools younger than for ARM

− every vendor must verify its core against the ISA

## Xtensa and other architectures

- **Xtensa** (Cadence): configurable cores with own instructions – ESP32 (LX6), ESP32-S3 (LX7 with vector instructions), audio DSPs (HiFi)
  - **register windows**: `entry`/`retw` rotate a window of 16 out of 64 registers – fewer pushes and pops
  - zero-overhead `loop`, MAC16 unit
- **Infineon TriCore** (AURIX): MCU + DSP in one, up to 6 cores, lock-step, HSM – engine and chassis ECUs
- **Renesas RH850** (automotive), **Renesas RX** (CISC, 1–8 byte instructions)
- **TI C2000**: DSP core C28x + control law accelerator – inverters, motor drives, solar
- **Synopsys ARC**: configurable, hidden inside SoCs (sensor hubs, SSD controllers)
- **PIC**, **8051**, **MSP430**: 8/16 bit, cost-sensitive mass products

# Assembly: the same C function on four processors

```c
uint32_t sum(const uint16_t *a, int n) {
    uint32_t s = 0;
    for (int i = 0; i < n; i++) {
        s += a[i];
    }
    return s;
}
```

| processor | instructions in the loop | code size | reason |
|---|---|---|---|
| AVR (8 bit) | 12 | 40 bytes | 32 bit sum and 16 bit index need several 8 bit operations |
| Cortex-M0+ | 7 | 24 bytes | 16 bit Thumb instructions |
| Cortex-M4 | 6 | 24 bytes | load with scaled index: `ldrh r4, [r0, r3, lsl #1]` |
| RISC-V RV32IMC | 7 | 28 bytes | mix of 16 and 32 bit instructions |

- compiled with `-Os` (optimise for size); listings and script in `examples/processor` or try it on `https://godbolt.org`

# The loop in assembly: AVR and Cortex-M0+

```
; AVR: s in r22..r25 (4 x 8 bit), pointer in Z (r31:r30), i in r19:r18
.L3:  ld   r26,Z+            ; low byte of a[i], Z++
      ld   r27,Z+            ; high byte of a[i], Z++
      add  r22,r26           ; s += a[i], byte by byte with carry
      adc  r23,r27
      adc  r24,__zero_reg__
      adc  r25,__zero_reg__
      subi r18,-1            ; i++ (16 bit)
      sbci r19,-1
.L2:  cp   r18,r20           ; i < n ?
      cpc  r19,r21
      brlt .L3
```

```
@ Cortex-M0+: a in r0, n in r1, i in r3, s in r2
.L3:  lsls  r4, r3, #1       @ byte offset = i * 2
      ldrh  r4, [r0, r4]     @ load halfword a[i]
      adds  r3, r3, #1       @ i++
      adds  r2, r2, r4       @ s += a[i]
      b     .L2
.L2:  cmp   r3, r1           @ i < n ?
      blt   .L3
```

# The loop in assembly: RISC-V

```
# RISC-V: a in a4 (copied from a0), n in a1, i in a5, s in a0 (= return value)
.L2:  blt   a5,a1,.L3        # i < n ? compare and branch in one instruction
      ret
.L3:  slli  a3,a5,1          # byte offset = i * 2
      add   a3,a4,a3         # address = a + offset
      lhu   a3,0(a3)         # load halfword unsigned
      addi  a5,a5,1          # i++
      add   a0,a0,a3         # s += a[i]
      j     .L2
```

- RISC-V has no status flags: compare and branch are one instruction (`blt`)
- only one addressing mode (register + 12 bit offset) – the address is computed with normal instructions
- calling convention: `a0`–`a7` arguments and results, `s0`–`s11` preserved, `sp`, `ra` return address, `zero`
- more about assembly programming in chapter Programming

# A DSP kernel: dot product in fixed point

```
int32_t dot_q15(const int16_t *a, const int16_t *b, int n) {
    int32_t s = 0;
    for (int i = 0; i < n; i++)
        s += (int32_t)a[i] * b[i];
    return s;
}
```

| processor | instr. in loop | what the compiler uses (`-O2`) |
|---|---|---|
| Cortex-M0+ | 7 | `ldrsh`, `muls`, `adds`, compare and branch |
| RISC-V RV32IMC | 7 | `lh`, `mul`, `add` – no multiply-accumulate in the base ISA |
| Cortex-M4 / M33 | 5 | `ldrh` with pointer increment, `smlabb`: $16 \times 16 + 32$ bit in one instruction |
| Cortex-M55 | 4 | as M4, plus low-overhead loop `dls`/`le`: no compare, no branch |
| Xtensa LX7 (ESP32-S3) | 5 | zero-overhead `loop`, MAC16 `mula.aa.ll` into the accumulator `ACCLO` |

- **use case**: audio filter, motor current control, vibration analysis – the inner loop is a MAC
- SIMD (`smlad`: two MACs at once) usually needs intrinsics or CMSIS-DSP

# The DSP loop in assembly: Cortex-M4 and Xtensa

```
@ Cortex-M4: r3 -> a, r1 -> b, r2 = end of a, s in r0
.L3:  ldrh    lr, [r3, #2]!     @ load a[i], pointer += 2 (pre-increment)
      ldrh    ip, [r1, #2]!     @ load b[i], pointer += 2
      cmp     r3, r2            @ end reached?
      smlabb  r0, lr, ip, r0    @ s += a[i] * b[i] (bottom halves, signed)
      bne     .L3
```

```
# Xtensa LX7: a8 = iteration count, a9 -> a, a3 -> b
      wsr     a10, ACCLO        # accumulator = 0
      loop    a8, .L3_LEND      # hardware loop: repeat a8 times
.L3:  l16ui   a11, a9, 0        # load a[i]
      l16ui   a10, a3, 0        # load b[i]
      addi.n  a9, a9, 2
      mula.aa.ll a11, a10       # ACC += a[i] * b[i]
      addi.n  a3, a3, 2
.L3_LEND:
      rsr     a2, ACCLO         # result from the accumulator
```

- the compiler schedules `cmp` before `smlabb` so that the flags are ready for `bne` without a stall

# Floating point: software, FPU and vector unit

```
@ Cortex-M0+ (no FPU): every operation is a library call of 30-100 cycles
      bl    __aeabi_fmul        @ a[i] * b[i]
      bl    __aeabi_fadd        @ s + product
@ Cortex-M4F: fused multiply-add in the FPU, 3 cycles
      vfma.f32  s0, s14, s15    @ s0 += s14 * s15
@ Cortex-M55 with -ffast-math: Helium, 4 floats per instruction
.L14: vldrw.32  q3, [ip], #16   @ load a[i..i+3]
      vldrw.32  q1, [r3], #16   @ load b[i..i+3]
      vmul.f32  q3, q3, q1
      vadd.f32  q2, q2, q3      @ 4 partial sums
      le        lr, .L14        @ low-overhead loop end
```

- without `-ffast-math` the M55 adds the products one by one: float addition is not associative, and C requires the source order
- ESP32-C3 (RV32IMC) calls `__mulsf3`/`__addsf3`; ESP32-S3 has an FPU (`madd.s`); RP2040 has fast float routines in its boot ROM

# 4.4 Inside a Microcontroller

## Block diagram of a microcontroller

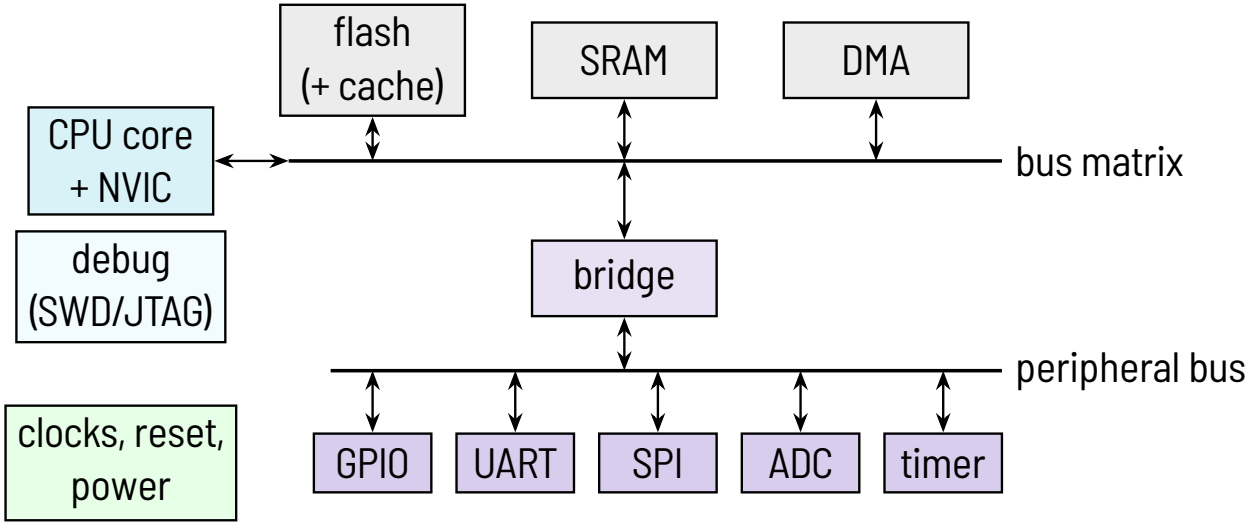




Figure 4.4.1: Typical structure of a 32 bit microcontroller

- the bus matrix lets the CPU and the DMA access different memories at the same time

## Memories


- **flash**: program memory; erased in blocks, 10 000–100 000 write cycles; too slow for high clocks ⇒ wait states, prefetch, cache
- **XIP**: RP2040 and ESP32 execute directly from external QSPI flash through a cache – a miss costs many cycles
- **SRAM**: data, stack, time-critical code
- **EEPROM** or flash emulation: settings, calibration
- **MRAM, RRAM, FRAM**: byte-writable non-volatile memories in recent MCUs (22 nm and below, where embedded flash is hard to build)
- **MPU**: protects memory regions (stack overflow!); an MMU with virtual memory only on application processors

# Memory map of the RP2040

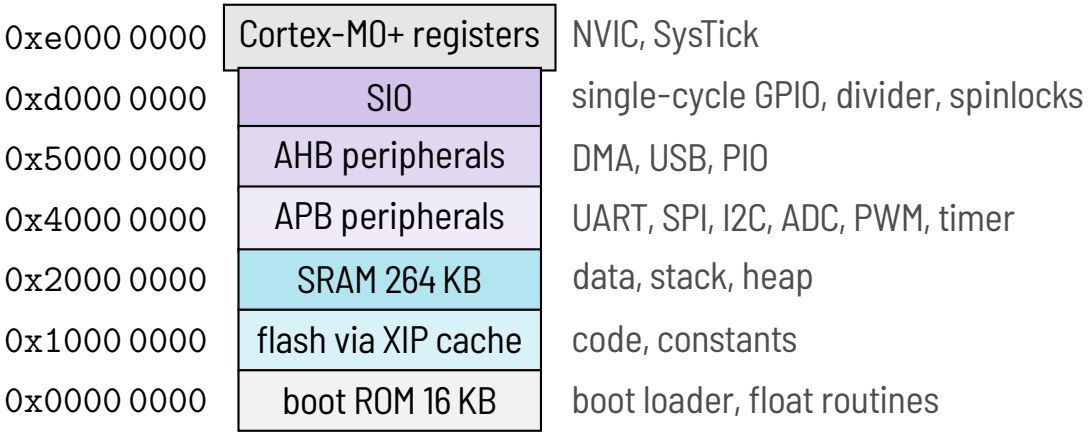



- one 32 bit address space for everything: memory-mapped I/O (chapter Peripherals and Interfaces)
- the linker script (`memory.x` in our Rust examples) places code and data into these regions

# Interrupts: what happens in time

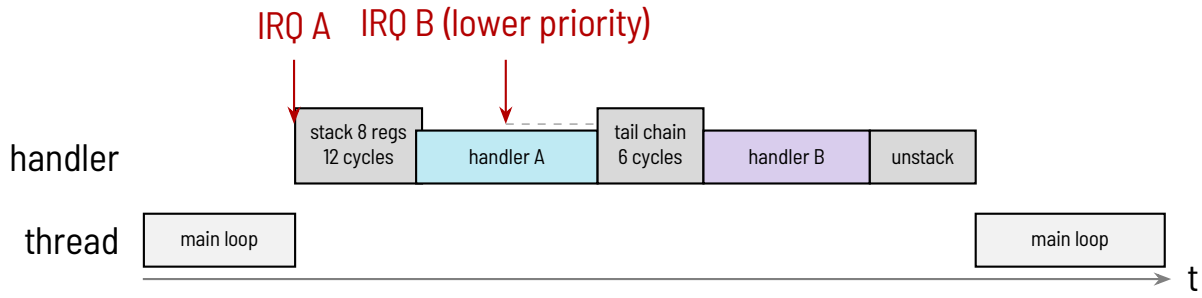


- vector table: initial stack pointer + addresses of all handlers; hardware stacking makes handlers ordinary C/Rust functions
- latency: 12 cycles on Cortex-M3/M4/M33, 15 on M0+; **tail chaining** skips unstacking and stacking between two handlers
- **faults** (HardFault, BusFault, …): log the error, then reset
- RISC-V: interrupt controller depends on the core (CLINT, CLIC, PLIC); CLIC gives NVIC-like nesting

# Clock and power: a battery sensor

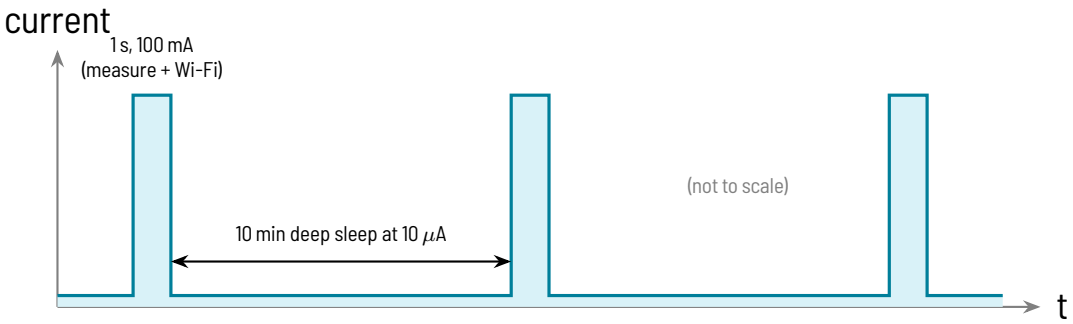


$$I_{\text{avg}} = \frac{100\,\text{mA} \cdot 1\,\text{s} + 0.01\,\text{mA} \cdot 599\,\text{s}}{600\,\text{s}} \approx 0.18\,\text{mA} \Rightarrow \frac{2000\,\text{mAh}}{0.18\,\text{mA}} \approx 15\,\text{months}$$


- the active phase dominates: shorter radio time helps more than a lower sleep current
- dynamic power $P \approx C \cdot U^2 \cdot f$; clock gating; “race to sleep”

## Arithmetic: integer, fixed point, floating point

- without FPU (AVR, Cortex-M0+, ESP32-C3), float is done in software: tens to hundreds of cycles
- **fixed point**: integers with an implied scale, e.g. Q15 = value $\times 2^{15}$ – fast everywhere, but watch range and rounding
- FPU (Cortex-M4F, M7, M33, ESP32-S3): float in one or a few cycles; `double` stays in software on single-precision FPUs
- DSP features: single-cycle MAC, saturation, SIMD; dedicated DSPs add circular addressing and several MAC units
- neural networks run in INT8: SIMD and vector units, or a separate NPU

# 4.5 Peripherals and Accelerators on the Chip

## What is built around the core

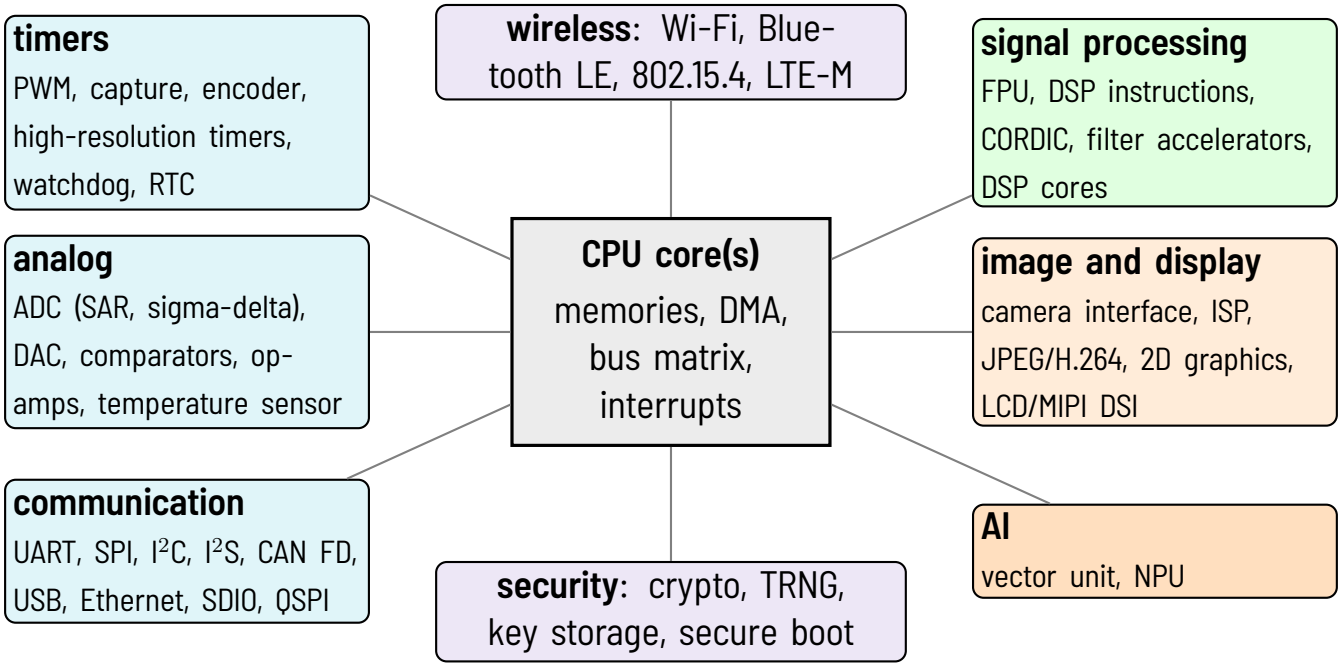

# Interfaces at a glance


| interface | wires | data rate | distance | typical use |
|---|---|---|---|---|
| UART | 2 (TX, RX) | up to a few Mbit/s | board, RS-485: 1 km | debug console, GPS, modems |
| $I^2C$ / I3C | 2 (SDA, SCL) | 0.1–1 / 12.5 Mbit/s | board | sensors, EEPROMs, power management |
| SPI, QSPI/OSPI | 4 / 6–11 | 10–100 Mbit/s / up to 200 MB/s | board | displays, ADCs, external flash and PSRAM |
| $I^2S$ / SAI | 3–4 | audio sample rates | board | microphones, audio codecs |
| CAN FD / CAN XL | 2 (differential) | 5–8 / 10–20 Mbit/s | 40 m bus | vehicles, machines |
| LIN | 1 | 20 kbit/s | vehicle | window lifters, seats, mirrors |
| USB FS / HS | 2 + supply | 12 / 480 Mbit/s | 5 m | PC connection, firmware update, audio |
| Ethernet, 10BASE-T1S | 2–8 | 10 Mbit/s–1 Gbit/s | 15–100 m | industry (EtherCAT, TSN), vehicles, gateways |
| MIPI CSI-2 / DSI | 1–4 lanes | 1–2.5 Gbit/s per lane | 30 cm | cameras, displays |
| PCIe | lanes | 8 GT/s per lane (Gen 3) | board | NVMe, Wi-Fi modules, AI accelerators (application processors) |

# Which interfaces in which class?

| | 8 bit MCU<br>ATmega328P | Cortex-M0+<br>RP2040, STM32G0 | M4/M33<br>STM32G4/U5, nRF54 | M7/M55<br>STM32H7/N6, RT1170 | application<br>i.MX 93, AM62x |
|---|---|---|---|---|---|
| UART, SPI, $I^2C$ | ● | ● | ● | ● | ● |
| USB full speed | – | ● | ● | ● | ● |
| CAN FD | – | ○ | ● | ● | ● |
| $I^2S$ / SAI audio | – | ○ | ● | ● | ● |
| USB high speed, Ethernet | – | – | ○ | ● | ● |
| camera, display controller | – | – | ○ | ● | ● |
| MIPI CSI-2 / DSI, ISP | – | – | – | ○ | ● |
| external DRAM, PCIe | – | – | – | – | ● |


- ● usually present ○ in some families – not available
- missing interfaces can sometimes be emulated: RP2040 PIO (CAN, DVI video), bit banging – or added with an external chip (e.g. Ethernet over SPI)

# Pin multiplexing: many functions, few pins

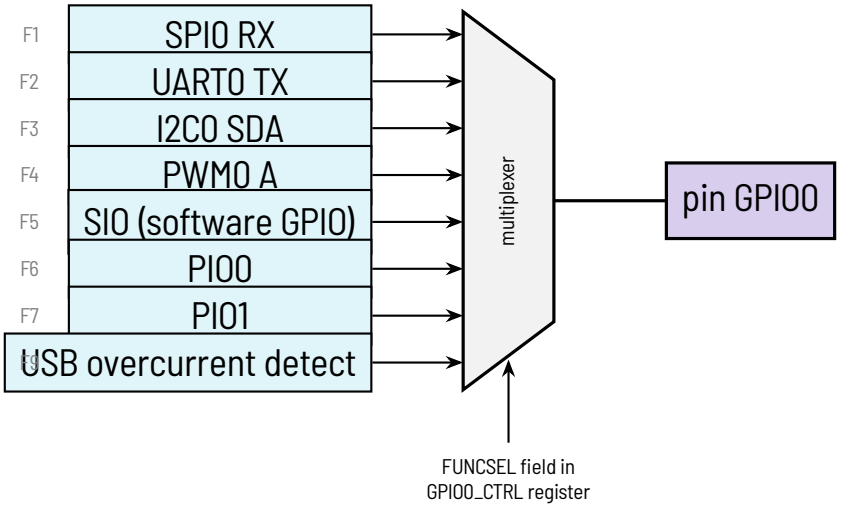


- a 48-pin package cannot bring out all signals of all peripherals ⇒ every pin has several alternate functions (RP2040: up to 9)
- **pin planning** early in the design: STM32CubeMX, TI SysConfig, MCUXpresso Config Tools check conflicts – a wrong pin choice means a new board

# Analog and timers working together: motor control

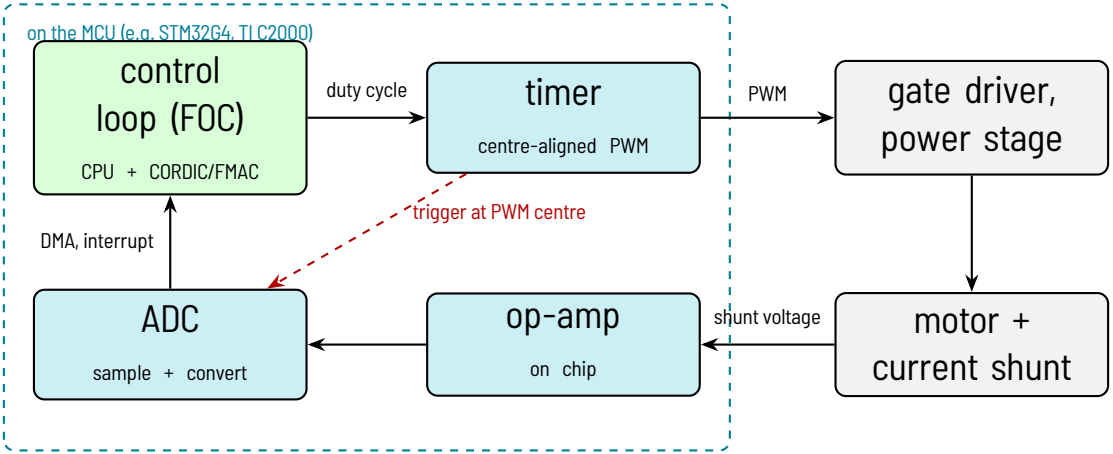



- the timer starts the ADC exactly in the middle of the PWM period (no switching noise) – no software involved
- the CPU only computes the next duty cycle: 20 kHz loop $\Rightarrow$ 50 $\mu$s per cycle
- ADC types: **SAR** (12–16 bit, up to several Msps, control) and **sigma-delta** (16–24 bit, slow, sensors, audio)

# How signal processing is integrated


| DSP instructions | hardware accelerator | separate DSP core |
|---|---|---|
| **examples**<br>MAC, SIMD, saturation in Cortex-M4/M7/M33; Helium in M55/M85; ESP32-S3 vector instructions; RISC-V P (draft)<br><br>**programming**<br>C with CMSIS-DSP, intrinsics<br><br>**for** filters, FFT, control loops | **examples**<br>STM32G4/H7: CORDIC (sin, cos, atan) and FMAC (FIR/IIR filter); TI C2000: TMU, CLA<br><br>**programming**<br>configure registers, feed via DMA<br><br>**for** motor control, power conversion – runs in parallel to the CPU | **examples**<br>Cadence HiFi 4 in i.MX RT600 and i.MX 8M Plus; TI C7x in AM62A/TDA4<br><br>**programming**<br>own toolchain, firmware loaded by the main core<br><br>**for** audio (voice, noise cancelling), radar, vision |

# Data flow for audio processing: double buffering

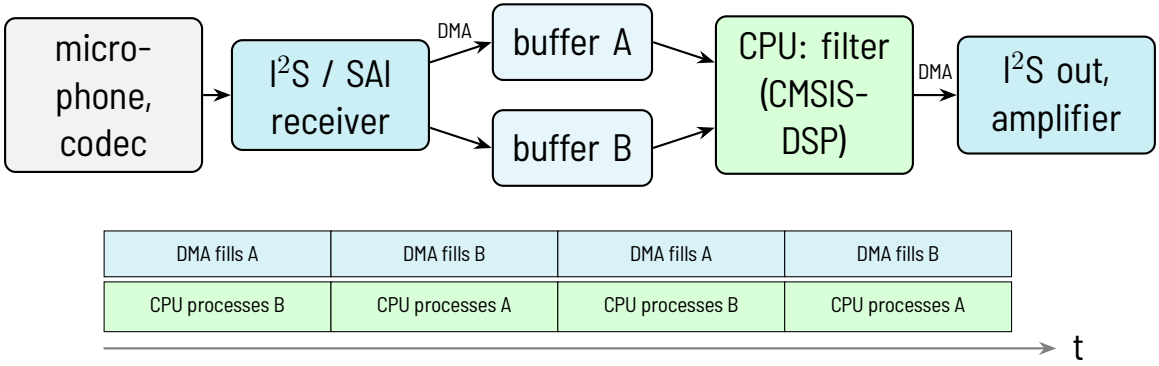


- DMA fills one buffer while the CPU processes the other; the half-transfer interrupt says when to switch
- deadline: one block of $N$ samples must be processed in $N/f_s$ – e.g. 256 samples at 48 kHz $\Rightarrow$ 5.3 ms
- larger blocks give more time per block, but more latency

# Image processing: the pipeline

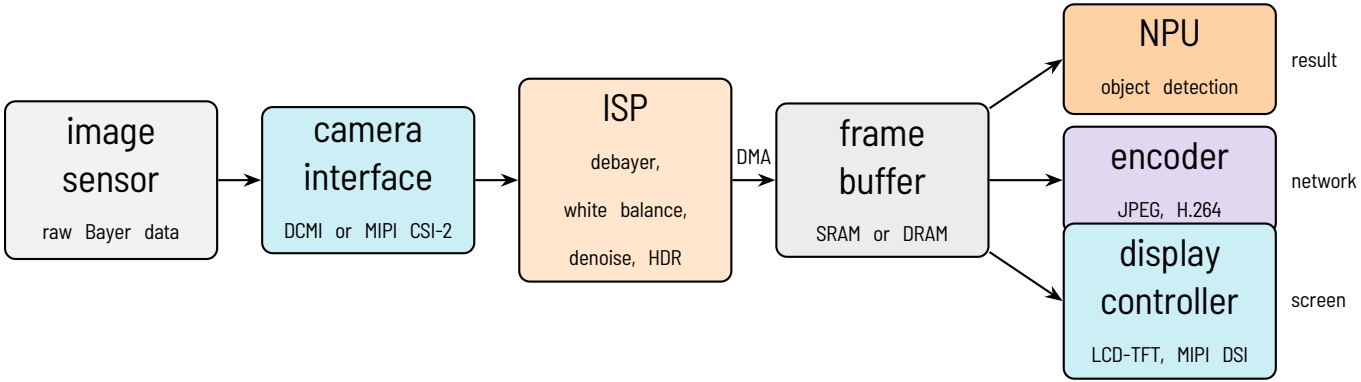



- data rates: QVGA 320 × 240 × 2 B × 15 fps = 2.3 MB/s; 1080p30 = 1920 × 1080 × 2 B × 30 = 124 MB/s
- the CPU does not touch the pixels: interface, ISP, DMA and accelerators move and process them; the CPU configures and reacts to the results

# Image processing: which processor?

| class | examples | what it can do | use case |
|---|---|---|---|
| MCU with camera interface | ESP32-S3 + OV2640, OpenMV (STM32H7) | QVGA/VGA, JPEG, simple vision in software | doorbell, QR code reader, line follower |
| MCU with ISP + NPU | STM32N6, ESP32-P4 | MIPI CSI-2, ISP, H.264, neural networks | smart sensor, people counting |
| application processor | i.MX 8M Plus, RK3588, Raspberry Pi 5 | several cameras up to 4K, GPU, OpenCV, Linux | industrial inspection, robotics |
| FPGA / SoC-FPGA | Zynq UltraScale+, Lattice CrossLink | line-rate processing with fixed latency, sensor bridging | machine vision, medical imaging |


- the bottleneck is usually memory bandwidth and size, not the CPU: a single 1080p frame needs about 4 MB

# AI: where does the inference run?

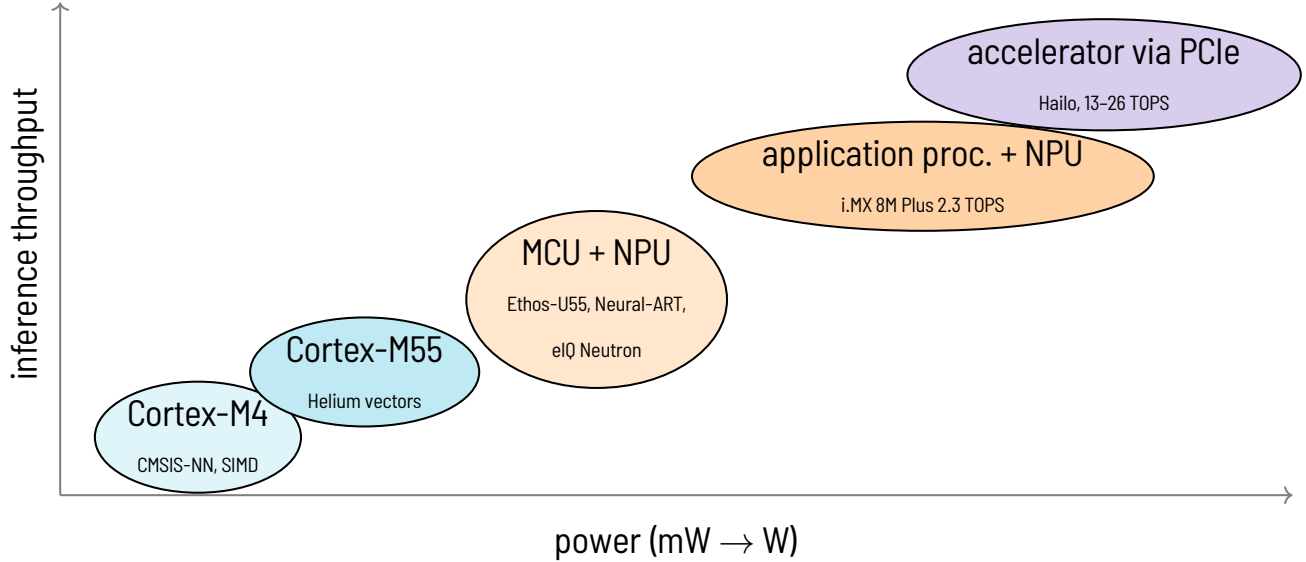



- inference = mostly INT8 multiply-accumulate; an NPU has hundreds to thousands of MAC units
- figures of merit **TOPS** and TOPS/W are peak values – real models reach a fraction, memory often limits first
- **use cases**: keyword spotting or vibration monitoring at a few mW on a Cortex-M; person detection with an MCU NPU; multi-camera robotics on an application processor

# How an NPU is integrated

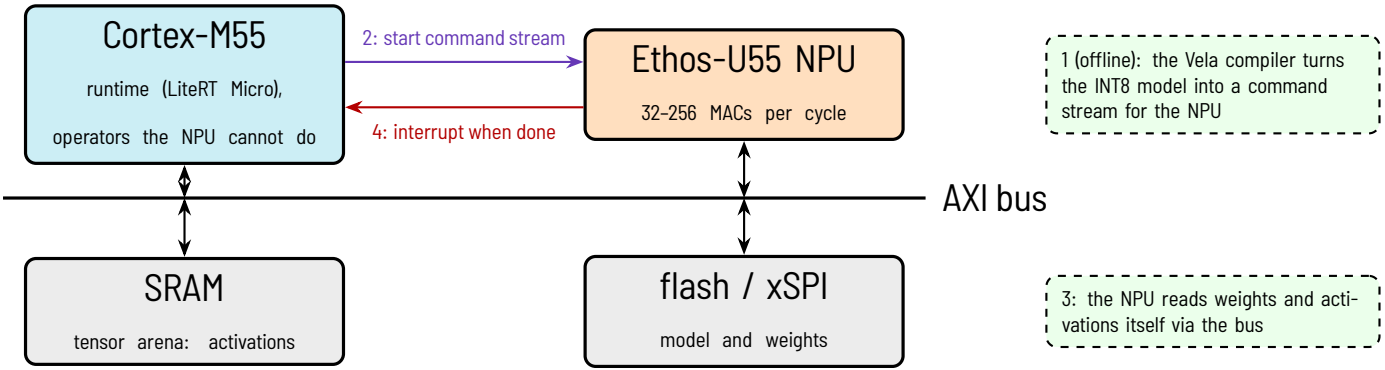


- the NPU is a bus master like a DMA controller; the CPU is free (or sleeps) during the inference
- selection: does the model fit into SRAM (activations) and flash (weights)? which operators does the NPU support?


# AI on the MCU: from model to device

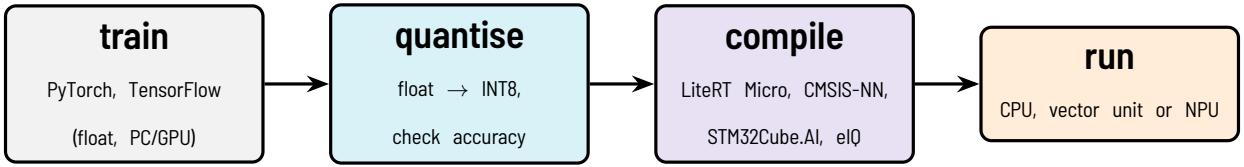


| example | input and preprocessing | model | typical platform |
|---|---|---|---|
| keyword spotting | 1 s audio at 16 kHz → spectrogram (FFT with CMSIS-DSP) | small CNN, about 20 KB INT8 | Cortex-M4/M33, a few mW |
| person detection | 96 × 96 grey image from the camera | MobileNet, about 250 KB INT8 | Cortex-M7, ESP32-S3, MCU with NPU |

- both are standard examples of LiteRT for Microcontrollers – DSP, camera interface and NPU work together


# Security peripherals: secure boot as an example

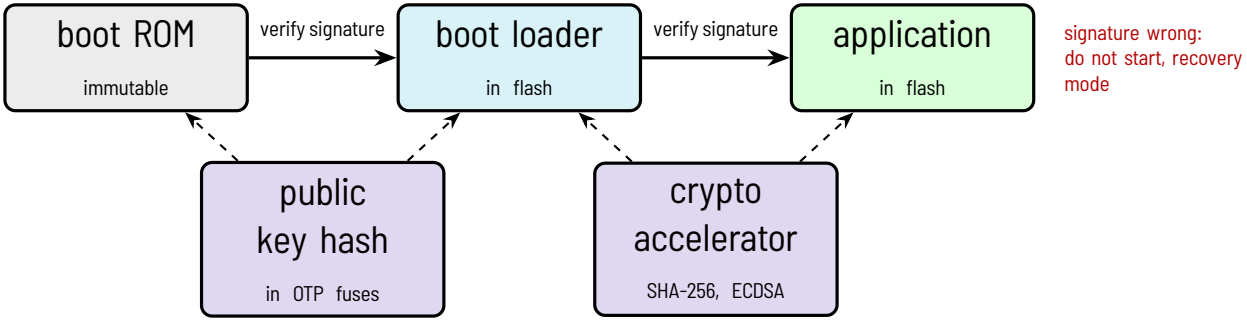


- further blocks: true random number generator (TRNG), AES accelerator, key storage / PUF, tamper detection, debug port lock
- examples: RP2350 (OTP, glitch detectors, secure boot), ESP32 (flash encryption, secure boot), STM32U5/H5 (TrustZone, PKA); dedicated secure elements (e.g. OPTIGA, ATECC) as external chips

# 4.6 Manufacturers and their Product Lines

## From core to product

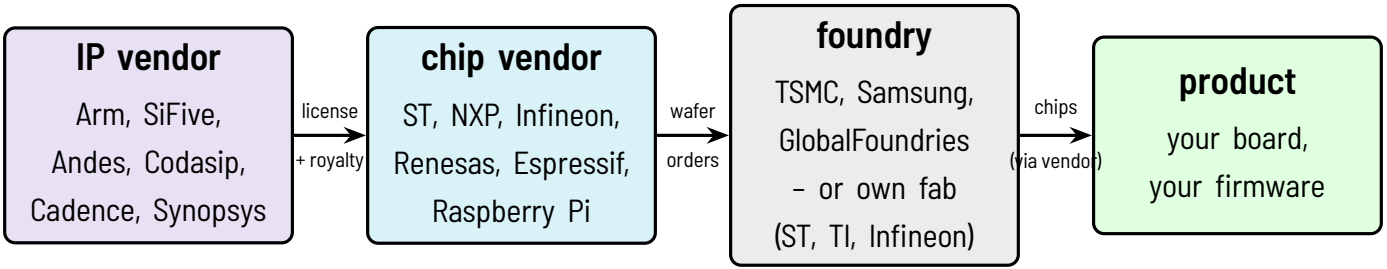


- MCUs mostly in mature processes (90–22 nm) with embedded flash; application processors in 16–3 nm
- chip shortage 2021–2023: more than a year delivery time ⇒ second source and availability became selection criteria


# Who serves which market?

| IoT and wireless | general-purpose MCU | motor control, power | automotive | Linux, application |
|---|---|---|---|---|
| Espressif | ST (STM32) | TI (C2000) | Infineon (AURIX) | NXP (i.MX) |
| Nordic | NXP (MCX) | ST (STM32G4) | NXP (S32) | TI (Sitara) |
| Silicon Labs | Microchip | Infineon (XMC) | Renesas (RH850) | ST (STM32MP) |
| ST (WB/WBA) | Renesas (RA) | Microchip (dsPIC) | ST (Stellar) | Rockchip |
| Raspberry Pi (W) | WCH, GigaDevice | Renesas (RX) | TI (Jacinto) | Broadcom (RPi) |

# Semiconductor manufacturers: what they are known for


| vendor | known for | tools |
|---|---|---|
| ST | broadest Cortex-M portfolio (STM32), pin-compatible families, cheap Nucleo boards | STM32CubeMX/IDE, HAL |
| NXP | i.MX application processors, i.MX RT crossover MCUs, S32 automotive, 10–15 years supply | MCUXpresso, Yocto BSPs |
| Infineon | AURIX automotive safety (ASIL D), power electronics, PSoC (from Cypress) | ModusToolbox |
| Renesas | RA (Cortex-M, first M85), RX, RH850 automotive, RZ application processors | e$^2$ studio, FSP |
| Microchip | widest 8 bit portfolio (AVR, PIC), 5 V parts, decades of availability, FPGAs | MPLAB X, Harmony |
| TI | MSP430/MSPM0 low power, C2000 motor control, Sitara, analog front ends | CCS, SysConfig |
| Espressif | Wi-Fi + Bluetooth for 1–3 €, maker community, Rust supported by the vendor | ESP-IDF, esp-hal |
| Nordic | Bluetooth LE leader, cellular IoT (nRF91) | nRF Connect SDK (Zephyr) |
| Raspberry Pi | cheap, excellent documentation, PIO, ARM or RISC-V selectable (RP2350) | Pico SDK, MicroPython |
| WCH, GigaDevice | very low price (CH32V003 about 0.10 $), STM32-like peripherals | MounRiver, open tools |

# Example: one vendor, one family – STM32

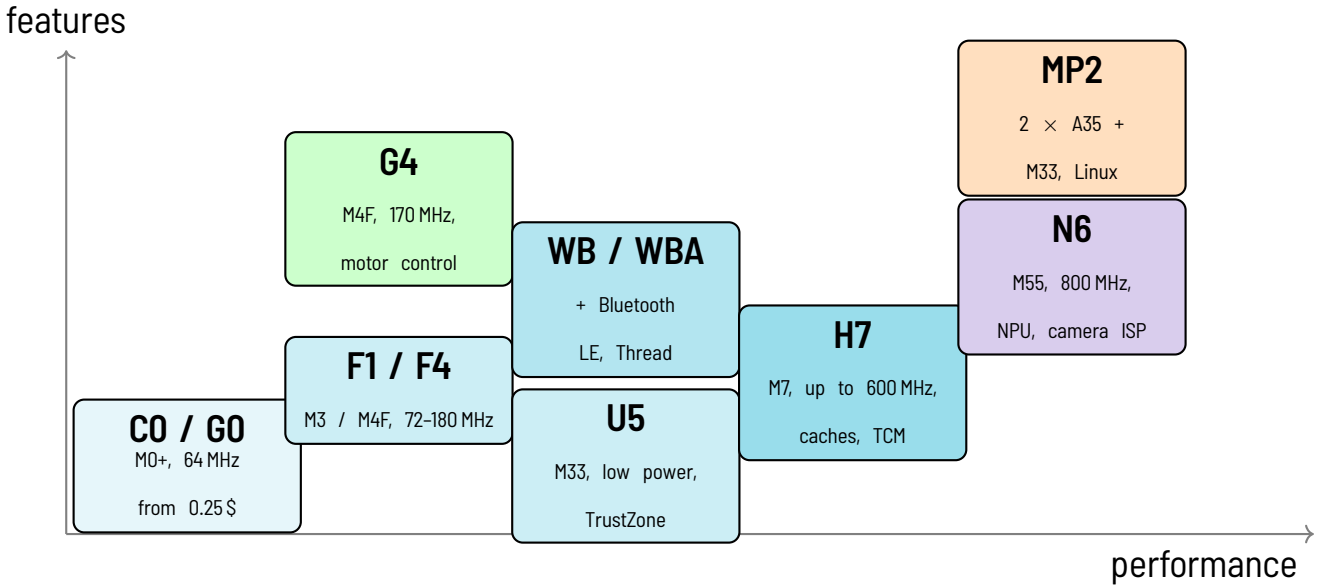


- same tools (CubeMX), same HAL API, often the same pinout ⇒ easy migration up and down; NXP (MCX, i.MX RT) and Renesas (RA) follow the same idea

# Software ecosystem

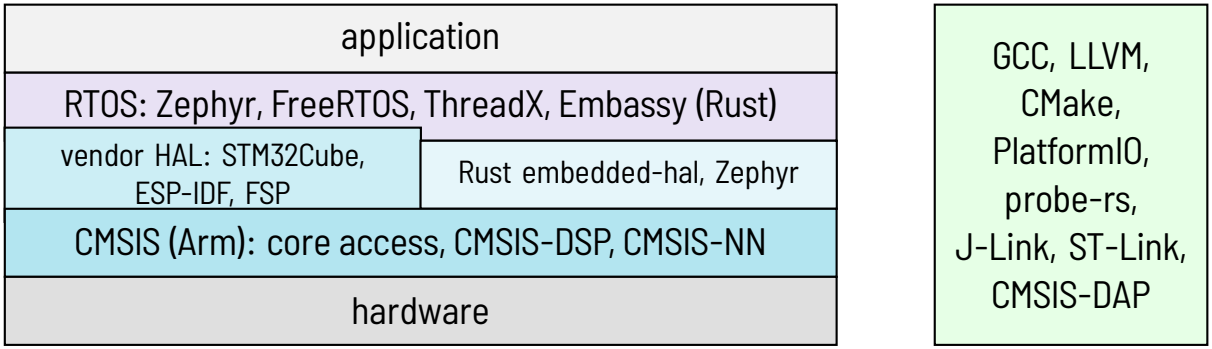


- each vendor has its own IDE and HAL ⇒ lock-in; Zephyr and Rust's embedded-hal are vendor-neutral
- in practice the quality of documentation, errata and examples decides how fast a product is finished

# 4.7 Application Processors and Heterogeneous SoCs

## Application processors

- ARM Cortex-A (and RISC-V application cores) with **MMU** (virtual memory, required by Linux), several cores at GHz, L1/L2/L3 caches, external DRAM
- examples: Raspberry Pi 5 (4 $\times$ Cortex-A76, 2.4 GHz), NXP i.MX 93/95, TI AM62x, STM32MP2, Rockchip RK3588
- RISC-V application cores arriving: SiFive, T-Head, SpacemiT; Linux distributions target RVA23
- GPU, video codecs, image signal processor, NPU on the same chip
- non-deterministic timing (caches, DRAM, OS) $\Rightarrow$ hard real time on a separate core or MCU
- **use case**: a machine HMI with touch display, web server and OPC UA – Linux on Cortex-A, the drive control on a separate MCU core

# Heterogeneous SoC: Linux and real time on one chip

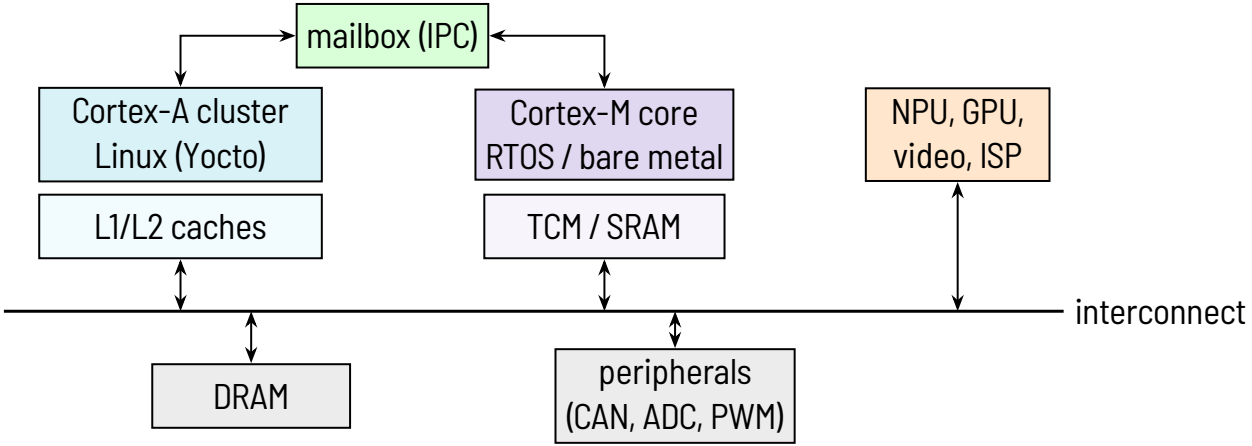



Figure 4.7.1: Asymmetric multiprocessing (AMP), e.g. STM32MP2, i.MX 8M/93/95, TI AM62x

- Linux loads and starts the M-core firmware (`remoteproc`) and talks to it over shared memory (`RPMsg`, OpenAMP)
- the M core keeps control loops running even while Linux boots or crashes

# 4.8 Excursion: Microcontroller or FPGA?

## What is inside an FPGA

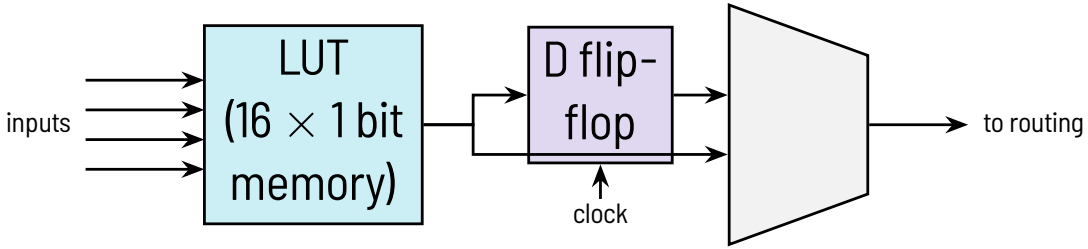



Figure 4.8.1: Basic logic element: look-up table, flip-flop, multiplexer

- a 4- or 6-input **look-up table** (LUT) realises any logic function of its inputs; thousands to millions of them
- plus programmable routing, **block RAM**, **DSP slices**, PLLs, fast transceivers
- configuration loaded from flash at power-up (SRAM-based) or stored on chip (flash-based, e.g. Microchip PolarFire)

# Sequential versus parallel

```c
// microcontroller: the CPU does one thing after the other
while (1) {
    cnt++;
    gpio_put(LED, (cnt >> 23) & 1);
}
```

```c
// FPGA: describes a circuit - a 24 bit counter register and a wire
module blink(input clk, output led);
  reg [23:0] cnt = 0;
  always @(posedge clk) cnt <= cnt + 1;
  assign led = cnt[23];
endmodule
```


- 100 such counters on the MCU: 100 times slower; on the FPGA: 100 copies of the circuit, all at full speed
- Verilog/VHDL is synthesised into LUTs and flip-flops – a hardware description, not a program

# Microcontroller and FPGA compared

| | **microcontroller** | **FPGA** |
|---|---|---|
| execution | sequential instructions | parallel circuits |
| timing | $\mu$s, interrupt latency and jitter | ns, cycle-exact and deterministic |
| throughput | limited by the clock and the core | scales with the chip size (parallelism) |
| languages | C, C++, Rust, MicroPython | VHDL, Verilog, SystemVerilog; HLS from C++; Chisel, Amaranth |
| development time | short; debugging with breakpoints | long; simulation, timing closure, synthesis takes minutes to hours |
| power | $\mu$W in sleep | static power, usually mW to W; no deep sleep (exceptions: iCE40, Lattice CrossLink) |
| price | from 0.10 € | from a few euros; large devices hundreds to thousands of euros |
| change after delivery | firmware update | reconfiguration (also a firmware update) |

- **use cases for FPGAs**: image processing at line rate, high-speed ADC interfaces, many parallel PWM/encoder channels, protocol bridges, EtherCAT/TSN, ASIC prototypes

# Decision: MCU, PIO or FPGA?

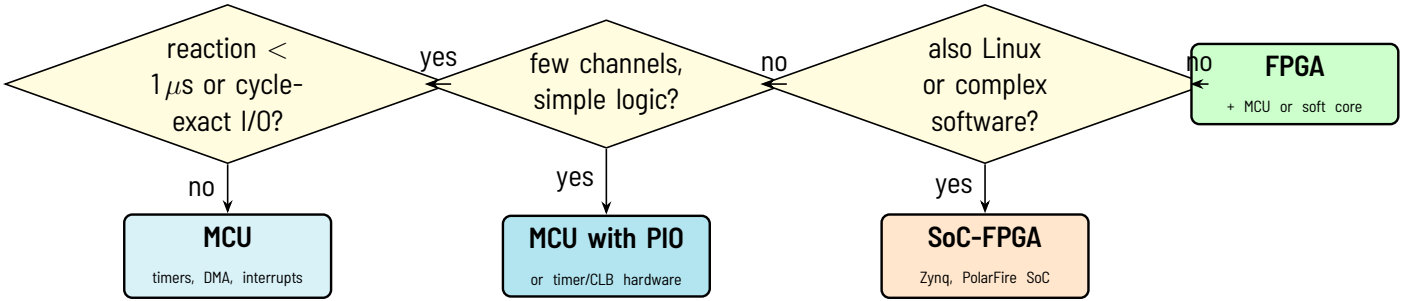



- **example**: 20 kHz motor PWM → MCU; 8 WS2812 LED strips → RP2040 PIO; 64-channel ultrasound at 40 MHz → FPGA

## Where microcontroller and FPGA meet

- **programmable I/O in MCUs**: RP2040/RP2350 PIO state machines (VGA, WS2812, DShot); configurable logic cells (CCL in AVR, CLB in PIC and TI C2000)
- **soft cores**: AMD MicroBlaze V and Altera Nios V (both RISC-V); open source VexRiscv, NEORV32, PicoRV32
- **SoC-FPGAs**: AMD Zynq-7000 (Cortex-A9), Zynq UltraScale+ (A53 + R5F), Versal (AI engines); Altera Agilex 5, Cyclone V SoC; Microchip PolarFire SoC (5 RISC-V cores)
- **small FPGAs with open toolchains**: Lattice iCE40/ECP5, Gowin with Yosys + nextpnr
- rule of thumb: start with an MCU; use an FPGA (or PIO) only for the part the MCU cannot do in time

# 4.9 Choosing a Processor

## A first decision tree

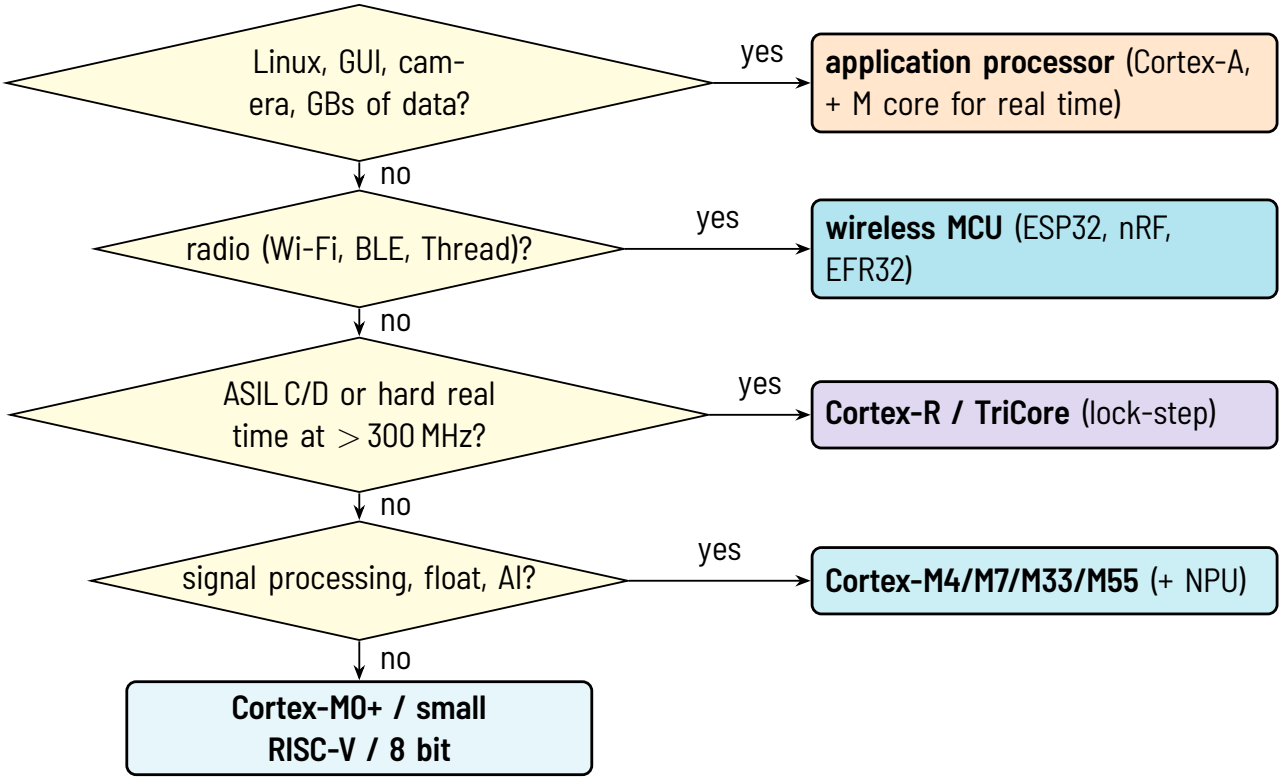

## Choosing a processor: checklist

- **function**: peripherals (UARTs, ADC resolution, CAN, USB, Ethernet, radio)
- **performance**: FPU or DSP? interrupt latency, determinism?
- **memory**: flash and RAM with reserve (start with at most 50 % usage)
- **energy**: battery or mains? sleep current, wake-up time
- **environment and safety**: temperature range, qualification, certification
- **security**: secure boot, TrustZone, crypto, update capability (Cyber Resilience Act)
- **software**: SDK, RTOS and Rust support, examples, community
- **business**: price at the planned quantity, 10+ years availability, second source
- in practice the ecosystem and the availability decide more often than the core


## Exercises

- Compile `sum.c` on https://godbolt.org for the Cortex-M0+ with `-O0`, `-Os` and `-O2`. Compare the number of instructions in the loop.
- Change the type of `s` to `uint16_t`. Which processor profits most, and why?
- Compile `dot.c` for the Cortex-M55 with and without `-ffast-math`. Why does the result of `dot_f32` possibly change in the last bits?
- Rewrite `dot_q15` with the CMSIS intrinsic `__SMLAD` so that two products are computed per instruction on the Cortex-M4. What must be true for the arrays?
- A data cache has 32 KB, 4 ways and 64 byte lines. How many sets does it have, and how many bits are used for tag, index and offset? Continue the cache example table with the addresses 0x44 and 0x00.
- Estimate the battery lifetime of a sensor that wakes up every minute for 50 ms at 20 mA and sleeps at 5 $\mu$A (battery 1000 mAh).
- A camera delivers 640 $\times$ 480 pixels with 2 bytes at 30 fps. Which data rate does this need, how much RAM does one frame need, and which of the processors of this lecture could handle it?
- Plan the pins of an RP2040 for one UART, one I$^2$C bus, one SPI bus and four PWM outputs (use the GPIO function table of the datasheet).
- Use the decision tree for: (a) a weather station with Wi-Fi, (b) a 3-phase inverter with 20 kHz PWM, (c) a camera with person detection, (d) a 64-channel ultrasound front end. Justify with the checklist.

# 5 Programming

# 5.1 Programming Languages: Then and Now

## Seventy years of programming languages

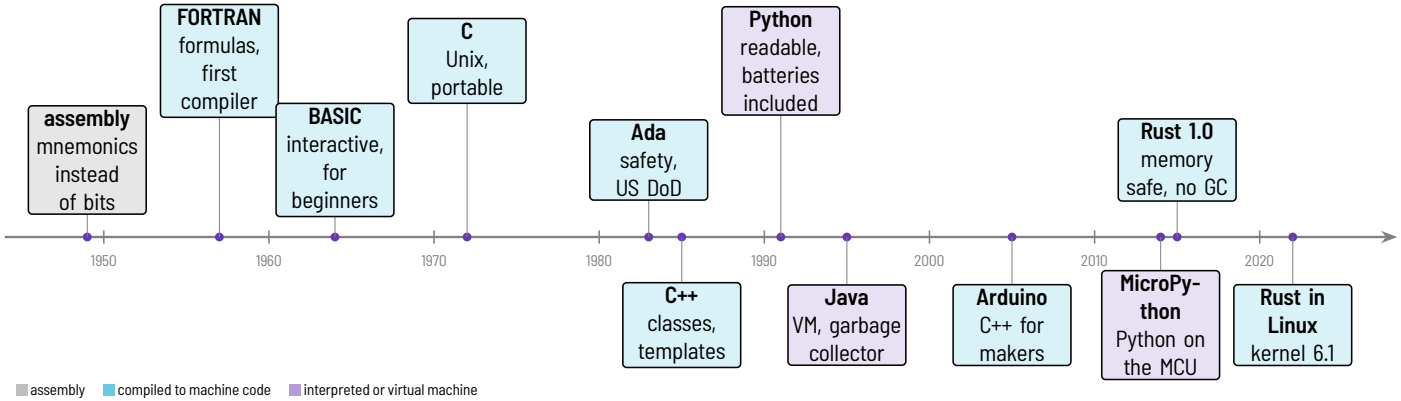



- each new language moved one more task from the programmer to the tool: registers, portability, memory management, memory safety

# What drove the development




- about 70 % of the security vulnerabilities in large C/C++ code bases (Microsoft, Chromium) are memory safety errors
- since 2022 security agencies (NSA 2022, CISA 2023) recommend memory safe languages for new code [34]
- but: on microcontrollers C is still the standard – billions of lines of existing code, vendor SDKs, certified compilers, trained developers

# How a program is executed

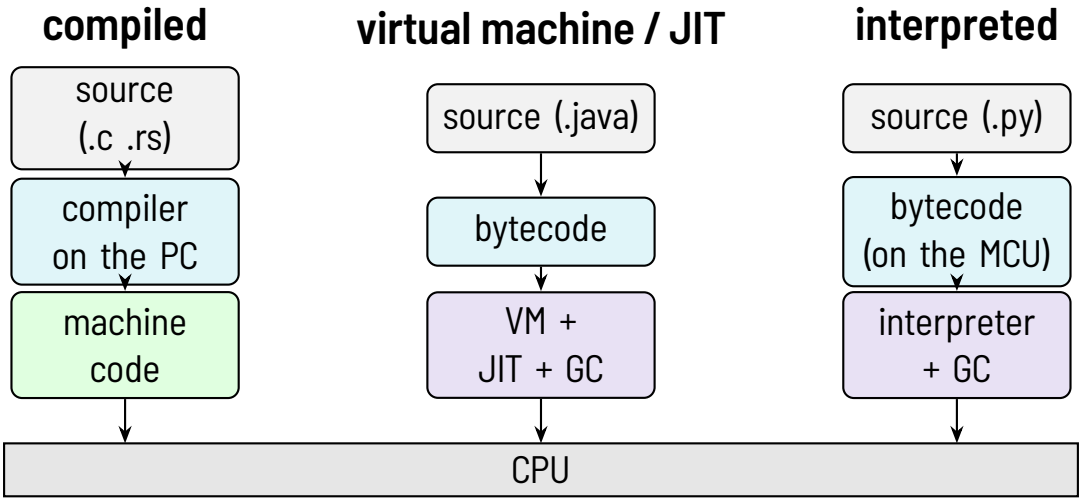


- compiled: no run-time system on the target, fastest code, timing predictable
- VM / interpreter: the program is independent of the CPU and can be changed at run time – but flash, RAM and CPU time for the run-time system, and pauses caused by the garbage collector (GC)

# Languages in embedded systems today

| language | used for | examples |
|---|---|---|
| assembly | start-up code, context switch, special instructions, a few hot loops | vector table, RTOS port, DSP kernels |
| C | firmware on microcontrollers, drivers, RTOS, kernels – **the standard** | Pico SDK, ESP-IDF, STM32Cube, Zephyr, FreeRTOS, Linux |
| C++ | larger firmware, GUIs, applications on embedded Linux | Arduino, AUTOSAR Adaptive, Qt, ROS 2 |
| Rust | new firmware and drivers, security-relevant parts, growing fast | Embassy, esp-hal, Linux and Android drivers, Ferrocene (ISO 26262) |
| Ada / SPARK | avionics, rail, space – SPARK proves the absence of run-time errors | flight control, signalling systems |
| model-based | control algorithms; C code is generated from the model | MATLAB/Simulink, SCADE (automotive, aerospace) |
| Python | tools, test automation, data analysis, AI training on the PC | pytest, pyserial, NumPy, PyTorch |
| MicroPython | prototypes, teaching, simple devices | Pico, ESP32, BBC micro:bit |
| others | scripting in devices, web UIs, smart cards, hardware | Lua, JavaScript, Java Card, VHDL/Verilog (FPGA) |

# Which language for which job?

**battery sensor node**
C or Rust, bare metal or RTOS
every $\mu$A counts
assembly only for start-up

**brake, airbag, flight control**
MISRA C, Ada/SPARK, Rust (Ferrocene), C generated from Simulink

**motor control, audio, DSP**
C with intrinsics, a few lines of assembly in the hot loop

**gateway, HMI on Linux**
C++ or Rust for services, Python for scripts, Qt or web UI

**test bench, production test**
Python: pytest, pyserial, instrument control, reports

**data analysis, AI models**
Python (NumPy, PyTorch) on the PC; the model runs in C/C++ on the device


**prototype, teaching, maker**
MicroPython, Arduino (C++)
results in minutes

**FPGA logic**
VHDL, Verilog, high-level synthesis from C++ describes hardware, not a program

firmware safety-critical embedded Linux on the PC / quick results


- a typical product uses several: C or Rust on the device, Python on the test bench, maybe C++ on the gateway

# Speed, memory, energy: a benchmark

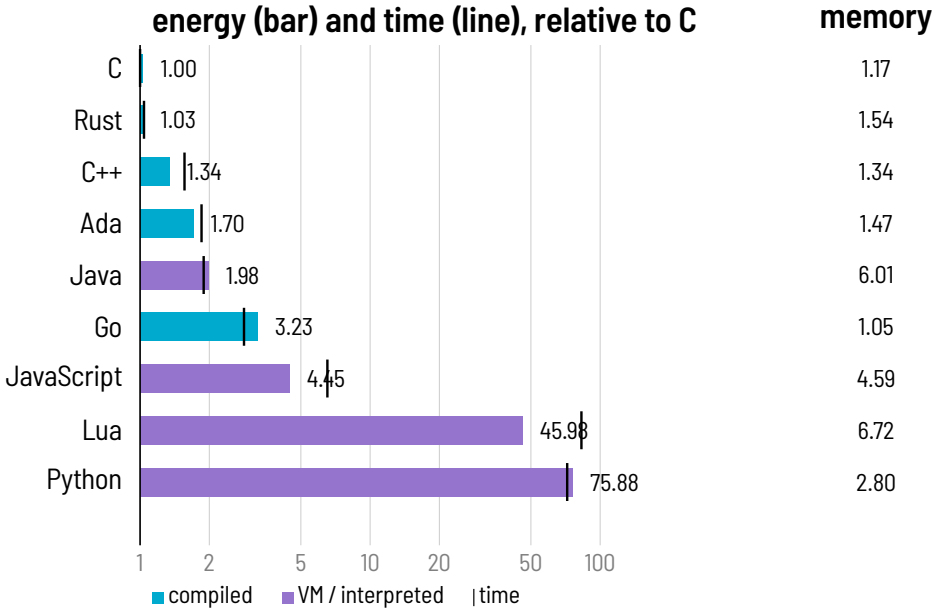


- source: 10 benchmark programs on a PC [32] – a trend, not exact factors; energy follows run time [33]

# On the microcontroller: energy = power × time

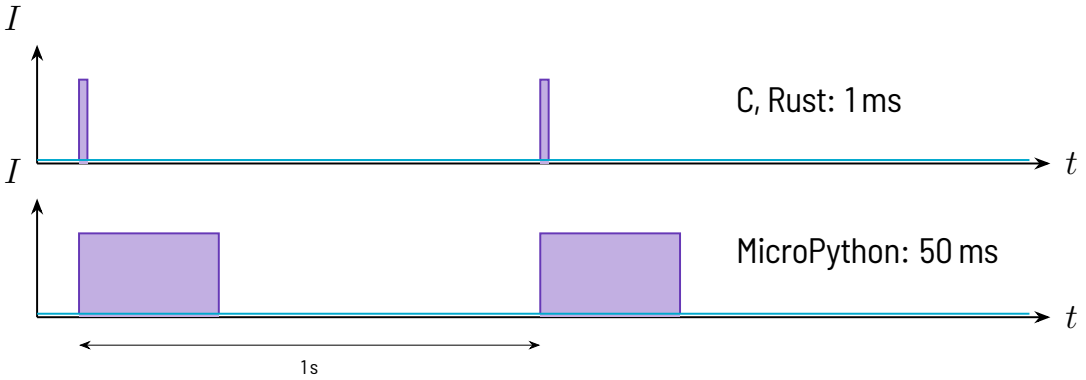


| | active per second | average current | 1000 mAh battery |
|---|---|---|---|
| C / Rust | 1 ms at 10 mA | 10 $\mu$A + 10 $\mu$A sleep = 20 $\mu$A | years (self-discharge limits) |
| MicroPython (50× slower) | 50 ms at 10 mA | 500 $\mu$A + 10 $\mu$A = 0.51 mA | about 80 days |

- slower code = longer active time = more energy (“race to sleep”)
- but: while the CPU waits for a sensor or the radio, the language does not matter

# What a language needs on the target

| language | run-time system | smallest program | timing | memory errors |
|---|---|---|---|---|
| assembly | none | bytes | exactly known | possible everywhere |
| C | start-up code | $<$ 1 KB (blink on the Arduino Uno) | pre-dictable | possible, not detected |
| C++ | start-up code, constructors; often without exceptions and RTTI | a few KB | pre-dictable | possible; fewer with modern C++ |
| Rust (`no_std`) | start-up code, panic handler | 3.7 KB (our blink, next section) | pre-dictable | prevented outside `unsafe` |
| MicroPy-thon | interpreter, compiler, garbage collector | $\approx$ 256 KB flash, 16 KB RAM | GC pauses | detected at run time (exception) |

- the same blink program with the Arduino core on the Pico: about 314 KB – frameworks cost more than the language itself
- memory safety in Rust costs (almost) nothing at run time: most checks are done by the compiler

# Three experiments in VS Code

- open `examples/programming/languages/languages.code-workspace`; the recommended extensions are suggested automatically (C/C++, rust-analyzer, Python, Wokwi)
- Terminal → Run Task:

| folder | shows | tasks |
|---|---|---|
| `1-inline-asm` | one line of assembly: 90× faster | build, run, show machine code |
| `pico` | Pico 2: FIR filter with `smlad`, 1.9× faster | build, Wokwi |
| `2-rust-memory` | a dangling pointer: C runs it, Rust rejects it | C, C with sanitizer, Rust (error), Rust (fixed) |
| `pico/c`, `pico/rust` | Pico: a false alarm in C, rejected in Rust | build, Wokwi |
| `3-python` | vibration analysis with FFT in 10 lines | set up `.venv`, create data, analyse, speed |
| `pico` | Pico: the spectrum in MicroPython, and its price | build `main.uf2`, Wokwi |

- PC: x86-64 and 64 bit ARM (Apple Silicon, Raspberry Pi); Pico: Wokwi in VS Code or on `https://wokwi.com`

# Experiment 1: one line of assembly

```
static uint32_t crc32c_asm(const uint8_t *p, size_t n)       // file crc32c.c
{
    uint64_t crc = 0xFFFFFFFFu;
    for (; n >= 8; p += 8, n -= 8) {
        uint64_t v;
        memcpy(&v, p, 8);
        __asm__("crc32q %1, %0" : "+r"(crc) : "rm"(v));    // x86-64: 8 bytes at once
        // AArch64:  __asm__("crc32cx %w0, %w0, %x1" : "+r"(crc) : "r"(v));
    }
    ...
```

```
$ make run                          # AMD EPYC 9354P, gcc -O2
CRC-32C of a 1 MiB image (mean of 20 runs)
bitwise  crc = 0x75CCF12B      9.855 ms per MiB       106 MB/s
table    crc = 0x75CCF12B      2.303 ms per MiB       455 MB/s     4.3x faster
asm      crc = 0x75CCF12B      0.108 ms per MiB      9728 MB/s    91.4x faster
```

- the compiler must assume the oldest CPU of the family – the CRC instruction is optional there
- cleaner: intrinsic + compiler option (`_mm_crc32_u64()` with `-msse4.2`); on Cortex-M4/M33 the same idea for the DSP instructions (`__SMLAD`, `__USAT`)

# Experiment 1 on the Pico 2: a DSP instruction

```
static int32_t dot_asm(const int16_t *a, const int16_t *b, int n)    // fir_smlad.ino
{
    int32_t s = 0;
    for (int i = 0; i < n; i += 2) {
        uint32_t va, vb;
        memcpy(&va, a + i, 4);     // two samples in one 32 bit register
        memcpy(&vb, b + i, 4);     // two coefficients
        __asm__("smlad %0, %1, %2, %0" : "+r"(s) : "r"(va), "r"(vb));   // 2 MACs
    }
    return s;
}
```

```
FIR filter, 32 taps, 1024 samples, 150 MHz          (Pico 2 in Wokwi)
C        3278 us per block                          compiler: smlabb, 1 MAC per loop
smlad    1735 us per block   1.9x faster            2 MACs per instruction
results identical
```

- RP2040 (Cortex-M0+) has no DSP instructions – the Pico 2 (RP2350, Cortex-M33) does; in Wokwi: board `board-pi-pico-2`

# Experiment 2: C runs it, Rust rejects it

```c
int16_t *first = &log.data[0];           // remember the first reading
for (int i = 0; i < 100; i++)
    log_push(&log, (int16_t)(220 + i)); // buffer full: realloc() moves it
printf("first reading: %d\n", *first);  // use after free
```

- C: no warning, prints `first reading: 10968` instead of 215; only the AddressSanitizer (`make asan`) reports `heap-use-after-free`

```
$ cargo run --example dangling
error[E0502]: cannot borrow `log` as mutable because it is also borrowed as
   immutable
14 |     let first = &log[0];    --- immutable borrow occurs here
18 |         log.push(220 + i);  ^^^ mutable borrow occurs here
21 |     println!("{first}");    --- immutable borrow later used here
```

- Rust: rejected at compile time, marked while typing (rust-analyzer); fix: copy the value (`let first = log[0];`) or keep an index

# Experiment 2 on the Pico: a false alarm

```
first reading: 215 (address 0x20002488)                    <- C
logger running, message at 0x20002498
buffer is now at         0x200024c0
first reading: 19279   <- read through the old pointer (0x4B4F = "OK")
alarm (first reading > 30.0 degC): YES
```

```
$ cargo build --release --example dangling                 <- Rust, as in C
error[E0502]: cannot borrow `log` as mutable because it is also borrowed ...
```

```
first reading: 215 (buffer at 0x20000000)                  <- Rust, corrected
buffer is now at 0x20000108
first reading: 215 (OK)
alarm (first reading > 30.0 degC): no
```

- C on the MCU: no sanitizer, no OS – the wrong value becomes a wrong decision
- Rust: `alloc::vec::Vec` on the Pico with a 16 KB heap, the same compile-time check as on the PC

# Experiment 3: what Python makes easy

```
t_ms, raw = np.loadtxt("vibration.csv", delimiter=",", skiprows=1, unpack=True)
fs = 1000 / np.mean(np.diff(t_ms))              # sample rate from the time stamps
a = raw / 16384                                 # raw -> g (+-2 g range)


spectrum = np.abs(np.fft.rfft(a - a.mean())) * 2 / len(a)    # amplitude in g
freq = np.fft.rfftfreq(len(a), 1 / fs)

for i in np.argsort(spectrum)[-3:][::-1]:       # the three highest peaks
    print(f"{freq[i]:6.1f} Hz   {spectrum[i]:.3f} g")

fig, (ax1, ax2) = plt.subplots(2, 1)
ax1.plot(t_ms[:300], a[:300]);  ax2.plot(freq, spectrum)
```

```
  24.5 Hz   0.301 g          <- imbalance of the motor (1470 rpm)
  50.0 Hz   0.087 g          <- mains hum
 137.0 Hz   0.076 g          <- damaged bearing: invisible in the time signal
```

# Experiment 3: the result and the price

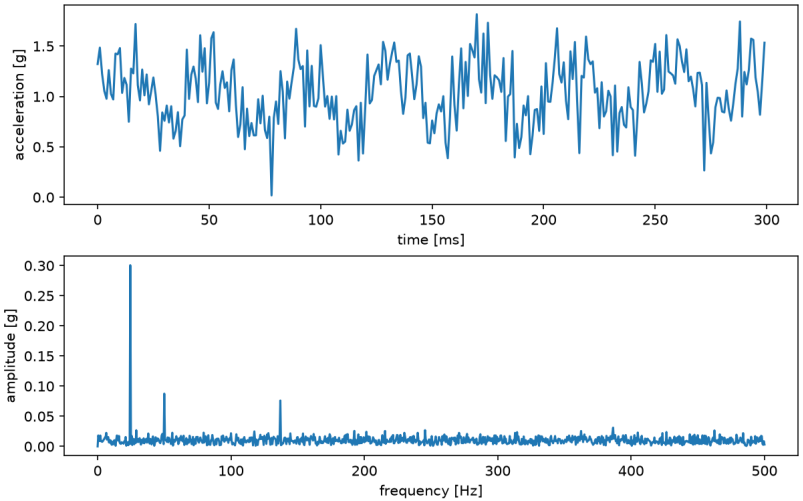


| **mean of 1 million values** (`speed.py`) | **time** | **per value** |
|---|---|---|
| Python loop | 20.4 ms | 20 ns |
| built-in `sum()` | 3.5 ms | 3.5 ns |
| NumPy (loop in C) | 0.9 ms | 0.9 ns |
| C, `gcc -O2` (for comparison) | 0.14 ms | 0.14 ns |

- Python: fast to write, slow to run – the heavy work belongs in libraries written in C (NumPy, PyTorch)

# Experiment 3 on the Pico: MicroPython

```python
def spectrum(x, fmax):                                  # main.py: the DFT in one expression
    w = -2j * cmath.pi / len(x)
    return [abs(sum(v * cmath.exp(w * k * n) for n, v in enumerate(x))) * 2 / len(x)
            for k in range(fmax * len(x) // FS)]

@micropython.viper                                      # machine integers, raw pointer
def mean_viper(d, n: int) -> int:
    p = ptr16(d)
    s = 0
    for i in range(n):
        s += p[i]
    return s // n
```

| spectrum 0–200 Hz, 500 samples | time | mean of 10000 values | time |
|---|---|---|---|
| `spectrum()` (one expression) | 14.4 s | Python loop | 39.6 ms |
| `dft_loop()` (no exp) | 1.9 s | `sum()` / `@native` | 24.4 / 25.8 ms |
| | | `@viper` | 3.8 ms |
| | | C (`-Os`) | 0.65 ms |

- RP2040 at 125 MHz in Wokwi (simulated time, C built for the same clock); all variants find 24, 50 and 138 Hz

# 5.2 From Source Code to Firmware

## The build process

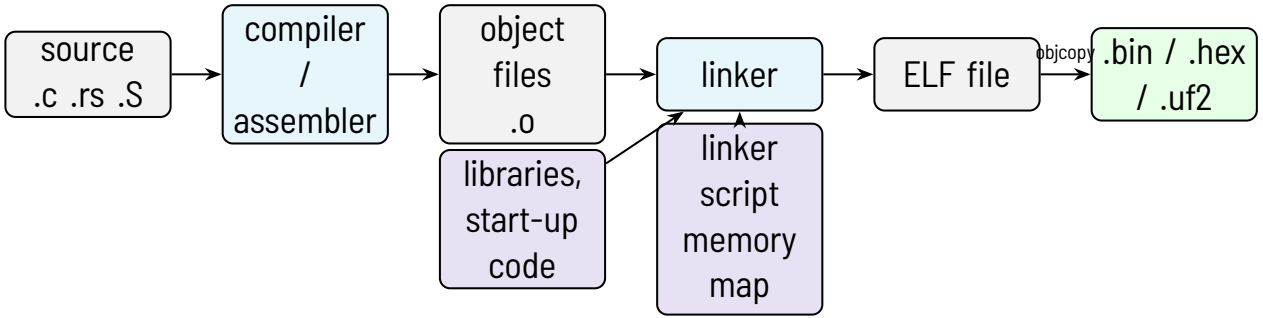



Figure 5.2.1: From source code to the image in the flash

- **cross compiler**, named after the target: `arm-none-eabi-gcc` (ARM, no OS), `riscv32-esp-elf-gcc`; in Rust a target triple such as `thumbv6m-none-eabi`
- the **linker** combines all object files and assigns addresses according to the linker script (`memory.x` in our Rust examples: flash at 0x1000 0000, RAM at 0x2000 0000)
- the **ELF** file contains code, data, symbols and debug information – the debugger needs it; the flash only needs the raw image

## Sections and start-up

- `.text`: machine code (flash); `.rodata`: constants (flash)
- `.data`: initialised variables – the initial values are in flash, the variables in RAM
- `.bss`: variables initialised with zero (RAM only)
- the **start-up code** runs before `main`: set the stack pointer (from the vector table), copy `.data` from flash to RAM, fill `.bss` with zeros, set up clocks, then call `main`
- in Rust `cortex-m-rt` provides this code and the attribute `#[entry]`

```
$ llvm-size -A target/thumbv6m-none-eabi/release/gpio_blink   # addresses in hex
section         size        addr
.vector_table    192   0x10000100
.boot2           256   0x10000000      <- 2nd stage bootloader of the RP2040
.text           2940   0x100001c0
.rodata          360   0x10000b3c
.bss               4   0x20000000
```

- the same blink program with the Arduino core: about 314 KB code – the core always links USB, serial and file system support

## Getting the program onto the chip

- **bootloader in ROM** or flash: receives the image over USB or UART
  - RP2040: hold BOOTSEL, the Pico appears as a USB drive – copy a `.uf2` file onto it
  - ESP32: ROM bootloader via the serial port (`esptool`, `espflash`)
- **debug probe** via SWD or JTAG (see section Debugging): programming and debugging with the same cable
- in production: programming on the panel, in-circuit test, unique keys and serial numbers per device
- **over the air** updates: the running firmware downloads a new image into a second flash partition and switches after a check – needs a bootloader that can roll back

# 5.3 Programming in Assembly

## Registers of the Cortex-M0+

- 16 registers of 32 bit
  - `r0-r12`: general purpose (most 16 bit instructions can only use `r0-r7`)
  - `r13` = `sp`: stack pointer (two of them: main and process stack)
  - `r14` = `lr`: link register, return address of a function call
  - `r15` = `pc`: program counter
- **xPSR** status register with the flags of the last arithmetic instruction
  - **N** negative, **Z** zero, **C** carry (unsigned overflow), **V** overflow (signed)
  - only instructions with an `s` suffix (`adds`, `subs`) and comparisons (`cmp`) set the flags
- all data processing works on registers – memory only via `ldr`/`str` (load/store architecture)

# Instructions (selection)

| group | examples | meaning |
|---|---|---|
| move | `movs r0, #5  mov r1, r2` | r0 = 5 (8 bit immediate), r1 = r2 |
| arithmetic | `adds r0, r1, r2  subs r1, r1, #1  muls r0, r1` | r0 = r1 + r2, r1 = r1 - 1, r0 = r0 · r1 |
| logic, shift | `ands r0, r1  orrs  eors  lsls r0, r0, #2` | bitwise AND, OR, XOR; shift left |
| compare | `cmp r1, #0  cmp r3, r1` | compute r1 - 0, set flags only |
| load | `ldr r0, [r1]  ldrh r3, [r0, #2]  ldrb r2, [r0, r1]` | 32 / 16 / 8 bit from memory |
| store | `str r0, [r1, #4]  strh  strb` | 32 / 16 / 8 bit to memory |
| constant | `ldr r0, =0xd000001c` | 32 bit constant from a literal pool in flash |
| stack | `push {r4, lr}  pop {r4, pc}` | save registers / restore and return |
| branch | `b label  beq  bne  blt  bhs` | jump, conditional on the flags |
| call, return | `bl function  bx lr` | call (return address in lr), return |

- conditions: `eq`/`ne` (Z), signed `lt`/`ge`/`gt`/`le`, unsigned `lo`/`hs`/`hi`/`ls`

## Calling convention (AAPCS)

- the rules that let C, Rust and assembly functions call each other
- arguments in `r0`–`r3`, further arguments on the stack
- return value in `r0` (64 bit values in `r0`+`r1`)
- `r0`–`r3` and `r12` may be changed by the called function (caller-saved)
- `r4`–`r11` must have the same value after the call (callee-saved) – save them with `push` if you use them
- the stack grows downwards and is 8 byte aligned at function calls
- the RISC-V equivalent: arguments in `a0`–`a7`, return value in `a0`, callee-saved `s0`–`s11`, return address in `ra`

# Our own assembly function

```
@ uint32_t asm_sum(const uint16_t *a, int n)    file sum_m0.S
@ AAPCS: a in r0, n in r1, result in r0. Only r0..r3 are used.
    .syntax unified
    .cpu cortex-m0plus
    .thumb
    .global asm_sum
    .type   asm_sum, %function
    .thumb_func
asm_sum:
    movs  r2, #0          @ s = 0
    cmp   r1, #0
    ble   2f              @ n <= 0: nothing to do
1:  ldrh  r3, [r0]        @ r3 = *a
    adds  r0, r0, #2      @ a++ (2 bytes)
    adds  r2, r2, r3      @ s += r3
    subs  r1, r1, #1      @ n--, sets the Z flag
    bne   1b              @ loop while n != 0
2:  movs  r0, r2          @ return s
    bx    lr
```

- 5 instructions in the loop instead of 7 from the compiler (chapter Processors): counting down saves the compare

# Calling it from C and from Rust

```
extern "C" uint32_t asm_sum(const uint16_t *a, int n);    // C linkage

const uint16_t data[] = {1, 2, 3, 1000, 60000, 65535};
Serial1.printf("asm_sum = %lu\n", (unsigned long)asm_sum(data, 6));

uint32_t sp;
asm volatile("mov %0, sp" : "=r"(sp));    // inline assembly (GCC syntax)
```

```
global_asm!(".global asm_sum", /* ... the same instructions ... */);
unsafe extern "C" {
    fn asm_sum(a: *const u16, n: i32) -> u32;
}
let s_asm = unsafe { asm_sum(data.as_ptr(), data.len() as i32) };

let mut x: u32 = 40;
unsafe { asm!("adds {0}, {0}, {1}", inout(reg) x, in(reg) 2u32) };
```

- output in Wokwi (both languages): `asm_sum = 126541`, identical to the C and Rust versions
- Rust marks every call into assembly as `unsafe`: the compiler cannot check it

# 5.4 C for Embedded Systems

## Data types and qualifiers

- `int` has 16 bit on the AVR and 32 bit on ARM ⇒ use the fixed width types of `<stdint.h>`: `uint8_t`, `int16_t`, `uint32_t`, ...
- `volatile`: every access really happens – for hardware registers and variables shared with interrupts
- `const`: read only; on most MCUs `const` data stays in flash and saves RAM
- `static` at file level: visible only in this file – the C way of encapsulation
- integer pitfalls
  - signed overflow is undefined behaviour: the compiler may assume it never happens
  - shifting by the width of the type or more is undefined: `1 << 32`
  - integer promotion: `uint8_t a = 200, b = 100; if (a + b > 255)` is true, because the sum is calculated as `int`

# Registers as structures

```
typedef struct {
    volatile uint32_t cpuid;          /* 0x000 */
    volatile uint32_t gpio_in;        /* 0x004 */
    volatile uint32_t gpio_hi_in;     /* 0x008 */
    uint32_t _reserved;               /* 0x00c */
    volatile uint32_t gpio_out;       /* 0x010 */
    volatile uint32_t gpio_out_set;   /* 0x014 */
    volatile uint32_t gpio_out_clr;   /* 0x018 */
    volatile uint32_t gpio_out_xor;   /* 0x01c */
    volatile uint32_t gpio_oe;        /* 0x020 */
    volatile uint32_t gpio_oe_set;    /* 0x024 */
} sio_hw_t;

#define sio_hw ((sio_hw_t *)0xd0000000u)

/* The compiler checks the offsets for us */
_Static_assert(__builtin_offsetof(sio_hw_t, gpio_out_xor) == 0x01c, "offset");

void led_toggle(unsigned pin) { sio_hw->gpio_out_xor = 1u << pin; }
```

- the style of the Pico SDK and of the CMSIS headers of all ARM vendors; generated from the chip description (SVD file)

# Bit manipulation

```
reg |=  (1u << 5);              // set bit 5
reg &= ~(1u << 5);              // clear bit 5
reg ^=  (1u << 5);              // toggle bit 5
if (reg & (1u << 5)) { }        // test bit 5

/* write a field of several bits (read - modify - write) */
static inline uint32_t set_field(uint32_t reg, unsigned shift, uint32_t mask,
    uint32_t value) {
    return (reg & ~(mask << shift)) | ((value & mask) << shift);
}
ctrl = set_field(ctrl, 4, 0x3u, 2u);    /* bits 5..4 := 2 */
```

- always use unsigned constants (`1u`) – `1 << 31` overflows a signed `int`
- read-modify-write is not atomic: protect it against interrupts, or use SET/CLR registers if the hardware offers them
- C bit fields (`uint32_t mode : 2;`) are not portable for registers: the order of the bits is implementation-defined

## Rules for reliable C

- compile with all warnings and treat them as errors: `-Wall -Wextra -Werror`
- no dynamic memory after start-up (`malloc`/`free`): fragmentation and failing allocations at run time
- no recursion: the stack usage must be known
- check every return value and every array index
- coding standards: **MISRA C** (automotive and industry), CERT C (security) – they forbid the dangerous constructs of the language
- static analysis (e.g. `cppcheck`, `clang-tidy`, commercial tools), sanitizers and unit tests on the PC
- these rules catch many errors – Rust makes most of them impossible by construction (next section)

# 5.5 Rust for Embedded Systems

## Ownership and borrowing in five rules

- every value has exactly one **owner**; when the owner goes out of scope, the value is dropped (memory, peripherals, locks are released)
- assignment or passing to a function **moves** the value: the old variable can no longer be used
- instead of moving, a value can be **borrowed**: `&T` (read, many at a time) or `&mut T` (write, only one at a time)
- a reference can never live longer than the value it points to
- consequence: no use after free, no double free, and no two parts of a program changing the same data at the same time

```
1 let led = pins.gpio15.into_push_pull_output();
2 spawner.spawn(blink(led).unwrap());    // led is moved into the task
3 led.set_high();                        // error[E0382]: borrow of moved value: `led`
```

# Embedded Rust: no_std and the layers

- `#![no_std]`: only the `core` library (no heap, no files, no threads); `alloc` can be added with an allocator
- `#![no_main]` and `#[entry]`: the start-up code calls our function; it never returns (`-> !`)
- a **panic handler** decides what happens on a panic: halt, print a backtrace, reset

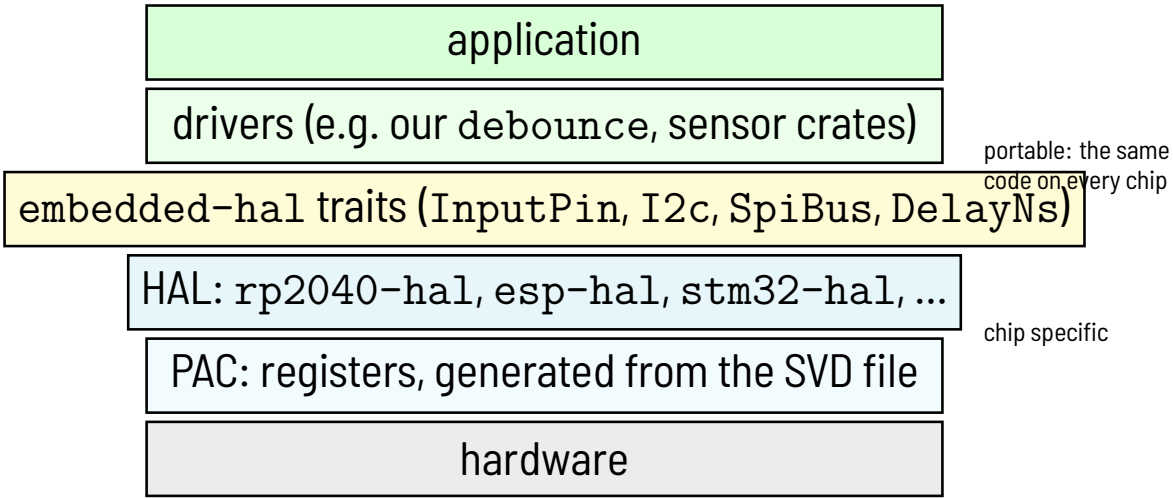



Figure 5.5.1: Layers of the embedded Rust ecosystem

# A hardware independent driver

```rust
#![no_std]
use embedded_hal::digital::InputPin;
pub enum Edge { None, Pressed, Released }
pub struct Debouncer { stable: bool, counter: u8, threshold: u8 }  // threshold = samples

impl Debouncer {
    pub fn update(&mut self, raw: bool) -> Edge {
        if raw == self.stable {
            self.counter = 0;
            return Edge::None;
        }
        self.counter += 1;
        if self.counter < self.threshold {
            return Edge::None;
        }
        self.counter = 0;
        self.stable = raw;
        if raw { Edge::Pressed } else { Edge::Released }
    }

    pub fn poll<P: InputPin>(&mut self, pin: &mut P) -> Result<Edge, P::Error> {
        Ok(self.update(pin.is_low()?))    // any pin type that implements InputPin
    }
}
```

# Testing embedded code on the PC

```rust
#[test]
fn bouncing_gives_one_edge() {
    let mut d = Debouncer::new(3);
    // contact bounce: short pulses before the level is stable
    let samples = [true, false, true, false, true, true, true, true, true];
    assert_eq!(run(&mut d, &samples), (1, 0));
}

/// A fake pin for tests: implements the same trait as a real GPIO pin.
struct FakePin(bool);
impl InputPin for FakePin { /* is_high / is_low return self.0 */ }
```

```
$ cargo test
test tests::bouncing_gives_one_edge ... ok
test tests::clean_press_and_release ... ok
test tests::poll_reads_active_low_pin ... ok
test tests::short_glitch_is_ignored ... ok
test result: ok. 4 passed; 0 failed
```

- the same library runs unchanged on the Pico (`button_lib.rs`) – logic is tested quickly on the PC (or Replit), only the hardware access needs the target

## Rust tools and practices

- `rustup target add thumbv6m-none-eabi` / `riscv32imc-unknown-none-elf`: cross compilation without a separate toolchain
- `cargo`: build, dependencies (`Cargo.toml`, `Cargo.lock` for reproducible builds), tests, documentation
- `cargo clippy` (lints), `cargo fmt` (formatting)
- `probe-rs`: flashing and debugging via SWD/JTAG; `defmt`: compact logging, formatted on the PC
- errors are values: `Result<T, E>` and `Option<T>`, propagated with `?`; `unwrap()` only where an error really cannot occur
- `unsafe` for what the compiler cannot check (registers, assembly, FFI to C) – keep it small and encapsulated in safe functions
- C and Rust can be mixed: `extern "C"` in both directions

# 5.6 Python and MicroPython

## Python 3 on the PC: working with binary data

```python
import struct

# 14 bytes from register 0x3B: accel X/Y/Z, temperature, gyro X/Y/Z
raw = bytes.fromhex("0000 0000 4000 f24c 0000 0083 ff7d")

ax, ay, az, temp, gx, gy, gz = struct.unpack(">7h", raw)    # > = big endian, h = int16

accel_g = [v / 16384 for v in (ax, ay, az)]       # +-2 g range: 16384 LSB/g
temp_c = temp / 340 + 36.53                       # formula from the datasheet
print(f"acceleration: {accel_g} g")               # [0.0, 0.0, 1.0] g
print(f"temperature:  {temp_c:.1f} C")            # 26.2 C

packet = struct.pack("BB", 0x6B, 0x00)            # build an I2C write
```

- typical uses: serial port (`pyserial`), MQTT clients (`paho-mqtt`), test automation (`pytest`), plots (`matplotlib`), Jupyter notebooks for measurements
- always Python 3 – Python 2 has not been maintained since 2020

# MicroPython on the Pico

```
from machine import ADC, PWM, Pin
import time

pot = ADC(26)
pwm = PWM(Pin(15))
pwm.freq(1000)                    # 1 kHz

while True:
    value = pot.read_u16()        # 0 .. 65535 (12 bit ADC, scaled to 16 bit)
    pwm.duty_u16(value)           # duty cycle 0 .. 100 %
    print(f"ADC {value:5d}  ->  duty {value * 100 // 65535:3d} %")
    time.sleep_ms(200)
```

- the module `machine` wraps the peripherals: `Pin`, `ADC`, `PWM`, `I2C`, `SPI`, `UART`, `Timer`
- interrupts: `button.irq(trigger=Pin.IRQ_FALLING, handler=f)`; registers: `machine.mem32[0xd000001c] = 1 << 15`
- runs directly in the browser: new MicroPython Pico project on `https://wokwi.com`
- limits: 10 to 100 times slower than C, garbage collection pauses, more RAM – time-critical parts can be written in C as native modules

# 5.7 Debugging

## A systematic approach

- **reproduce**: find a way to make the error appear reliably – an error that cannot be reproduced cannot be verified as fixed
- **observe**: collect facts (output, signals, register values) instead of guessing
- **hypothesis**: one possible cause that explains all observations
- **experiment**: a test that confirms or refutes the hypothesis – change one thing at a time
- **isolate**: halve the search space (comment out half of the code, `git bisect` to find the commit that introduced the error)
- **fix and secure**: correct the cause, not the symptom; add a test that would have found the error
- write down what you have tried – especially when the error takes days

## A real case: the flaky button

- symptom: the Rust debouncing example (chapter 6) toggled the LED in some simulation runs and not in others; the C version always worked
- observation 1: the debouncer library passes all unit tests ⇒ the logic is probably correct
- observation 2 (GDB): the breakpoint where a new level is accepted is never reached
- observation 3 (diagnostic output with timestamps): dozens of "pressed"/"released" events within **one** millisecond – the loop runs much faster than once per millisecond
- hypothesis: `delay.delay_ms(1)` does not wait 1 ms
- experiment: measure the delays with the RP2040 hardware timer
  - `delay 1 ms: SysTick 4 us, TIMER 1000 us`
  - `delay 500 ms: SysTick 365788 us, TIMER 500001 us`
- cause: the SysTick-based delay does not work correctly in the simulator; fix: use the RP2040 timer as delay provider (it implements the same `DelayNs` trait)

## Tools without a debugger

- **output** via UART or USB (`printf`, `println!`, logging frameworks)
  - simple and powerful, but changes the timing: a line at 115200 baud takes milliseconds
  - faster alternatives: binary logging (`defmt`), RTT (output through the debug probe, no UART needed)
- **GPIO toggles** + logic analyzer or oscilloscope: measure timing in microseconds with almost no influence
- **assertions**: `assert()` / `assert!()` check assumptions and stop early instead of failing later
- **fault handlers**: on a HardFault or panic print the program counter and a backtrace (`esp-backtrace` in our ESP32 examples)
- **watchdog** and reset reason: find out that and why the device restarted

# GDB: the debugger

| command | function |
|---|---|
| `target remote localhost:3333` | connect to the debug server (probe, OpenOCD, probe-rs, Wokwi) |
| `break func` / `break file.rs:42` | breakpoint |
| `continue`, `next`, `step`, `finish` | run, next line, into a function, out of the function |
| `stepi`, `display/i $pc` | one machine instruction, show the next instruction |
| `backtrace` | call stack |
| `print var`, `info registers` | variables and registers |
| `x/6hu addr` | memory: 6 halfwords, unsigned decimal |
| `watch var` | watchpoint: stop when the variable is written |

- GDB needs the ELF file with debug information (`debug = 2` in our `Cargo.toml`)
- graphical front ends: VS Code (Cortex-Debug, probe-rs extension), Eclipse-based IDEs

# GDB session with the Wokwi simulator

```
$ wokwi-cli -g 3333 .                          # simulation waits for GDB
$ arm-none-eabi-gdb target/thumbv6m-none-eabi/release/asm_sum
(gdb) target remote localhost:3333
(gdb) break asm_sum
(gdb) continue
Breakpoint 1, 0x100001fe in asm_sum ()
(gdb) info registers r0 r1
r0             0x2003ffd4          537133012      <- address of the array
r1             0x6                 6              <- n
(gdb) x/6hu $r0
0x2003ffd4:     1       2       3       1000    60000   65535
(gdb) stepi 4
(gdb) display/i $pc
1: x/i $pc
=> 0x10000206 <asm_sum+10>:     adds    r2, r2, r3
(gdb) finish
0x10000354 in asm_sum::__cortex_m_rt_main () at src/bin/asm_sum.rs:67
67      let s_asm = unsafe { asm_sum(data.as_ptr(), data.len() as i32) };
```

- in VS Code: “Wokwi: Start Simulator and Wait for Debugger”, then start a GDB debug session – breakpoints in the source code

# Debugging in the browser: a wrong result

- JSLinux "Alpine Linux" (x86_64) at `https://bellard.org/jslinux/` contains GCC and GDB – nothing to install
- program `examples/jslinux/average.c`: prints `average = 8 (expected 200)`

```
$ gcc -g -O0 -o average average.c && gdb -q ./average
(gdb) set can-use-hw-watchpoints 0       # software watchpoint, safe in an emulator
(gdb) break average
(gdb) run
(gdb) next                               # sum = 0 is now set
(gdb) watch sum                          # stop whenever sum changes
(gdb) continue
Old value = 0 '\000'
New value = 200 '\310'
(gdb) continue
Old value = 200 '\310'
New value = 154 '\232'                   # 200 + 210 = 410 > 255: uint8_t overflows
```

# Debugging in the browser: a crash

- program `examples/jslinux/config.c`: prints two settings, then crashes

```
$ gcc -g -O0 -o config config.c && gdb -q ./config
(gdb) run
rate      = 100
threshold = 42
Program received signal SIGSEGV, Segmentation fault.
0x... in main () at config.c:23
23      printf("limit     = %d\n", find("limit")->value);
(gdb) backtrace
#0  0x... in main () at config.c:23
(gdb) print find("limit")                # GDB can call functions of the program
$1 = (struct setting *) 0x0
(gdb) print *find("rate")
$2 = {key = 0x... "rate", value = 100}
```

- `find()` returns `NULL` for an unknown key, and `main()` uses the result without checking it – the classic null pointer dereference
- fix it, and think about how Rust's `Option` would have prevented it

# Debugging a Linux program without hardware

- on embedded Linux the debugger works on a process, not on the whole chip
- QEMU user mode runs the ARM program on the PC and offers a GDB server (`-g`); the debugger of the Yocto SDK connects to it (chapter Operating Systems, `examples/linux`)

```
$ qemu-aarch64 -L $SDKTARGETSYSROOT -g 1234 ./sensor_avg &      # waits for GDB
$ $GDB ./sensor_avg                                            # aarch64-poky-linux-gdb
(gdb) set sysroot /path/to/sdk/sysroots/cortexa57-poky-linux
(gdb) target remote :1234
(gdb) break sensor_avg.c:18
(gdb) continue
(gdb) display sum
(gdb) continue
1: sum = 200 '\310'           <- after the first value
(gdb) continue
1: sum = 154 '\232'           <- 200 + 210 = 410 does not fit into uint8_t: 410 - 256
(gdb) continue
1: sum = 88 'X'
```

# On a real Linux board: gdbserver

- the program runs on the board under `gdbserver`; GDB runs on the PC with the symbols and the sources

```
board$ gdbserver :1234 ./sensor_avg
pc$    $GDB ./sensor_avg
(gdb)  target remote 192.168.7.2:1234
```

- the board needs `gdbserver` in the image (Yocto: `IMAGE_INSTALL:append = " gdbserver"`; the prebuilt `core-image-sato-sdk` contains it)
- the binary on the board may be stripped; GDB on the PC uses the unstripped copy and the SDK sysroot for the libraries
- crashes after the fact: enable core dumps on the board, analyse them on the PC with `$GDB ./program core`
- kernel problems: messages with `dmesg`, kernel debugging via QEMU's GDB stub (`-s -S`) or JTAG

## Hardware debugging: JTAG and SWD

- on real hardware the debugger talks to the debug unit in the chip through a **debug probe**
- **JTAG** (IEEE 1149.1): signals TCK (clock), TMS (mode), TDI (data in), TDO (data out)
  - originally designed to test soldered boards: **boundary scan** reads and sets every pin of a chip through a shift register chain – without the chip's software
  - a 16-state machine (TAP controller), driven by TMS, selects instruction and data registers
  - several chips can be chained
- **SWD** (serial wire debug, ARM): the same debug functions with only two pins (SWDIO, SWCLK) – RP2040, STM32 and all Cortex-M
- functions: halt, single step, read and write registers and memory, hardware breakpoints and watchpoints, programming the flash
- probes: Raspberry Pi Debug Probe and other CMSIS-DAP probes, SEGGER J-Link, ST-LINK; the ESP32-C3 has a USB-JTAG unit built in
- software: OpenOCD or `probe-rs` as GDB server

## Exercises: the language experiments

- Experiment 1: replace the inline assembly by the intrinsic `_mm_crc32_u64()` (`#include <nmmintrin.h>`, option `-msse4.2`). Is it as fast? Look at the machine code with `make asm`.
- Experiment 1 on the Pico 2: process four samples per loop iteration (two `smlad`). How much faster does the filter get, and why?
- Experiment 2: write a C program that writes one element past the end of an array and a Rust program that does the same. What happens in each case – at compile time and at run time?
- Experiment 3: add a 300 Hz component to `make_data.py` with an amplitude of 0.02 g. Does the analysis still find it? What limits the highest frequency that can be found?

## Exercises

- Look at the sections of one of your programs with `size` or `llvm-size`. Add a global array `int a[100] = {1};` – which section grows? And with `= {0}`?
- Write `asm_max(const int32_t *a, int n)` in Thumb assembly (signed maximum) and call it from C or Rust. Test with negative numbers.
- Step through `asm_sum` with GDB and watch the flags in `xpsr` after `subs`.
- Add a test to the `debounce` crate: a press that is shorter than the threshold must not produce an edge. Run `cargo test` on Replit.
- Port `adc_pwm.py` to C and to Rust (chapter 6 contains all parts). Compare code size and effort.
- In C: why is `(uint8_t)200 + (uint8_t)100 > 255` true? Check it on the PC.
- Linux: debug `examples/linux/sensor_avg.c` with QEMU user mode and the GDB of the Yocto SDK. Fix the bug and check the result on the emulated board.

# 6 Peripherals and Interfaces

# 6.1 Peripherals of a Microcontroller

## The reference platform: RP2040 / Raspberry Pi Pico

- two ARM Cortex-M0+ cores, 125 MHz (up to 200 MHz), 264 KB SRAM, program in external QSPI flash (2 MB on the Pico)
- 30 GPIO pins (26 usable on the Pico), 3.3 V logic, **not** 5 V tolerant
- peripherals
  - $2 \times$ UART, $2 \times$ I$^2$C, $2 \times$ SPI, USB 1.1 (device and host)
  - 8 PWM slices with 2 outputs each (16 PWM channels)
  - 12 bit ADC with 4 external inputs and an internal temperature sensor
  - 64 bit microsecond timer with 4 alarms, watchdog, real-time clock
  - 12 DMA channels, 2 PIO blocks (programmable I/O state machines)

## Memory-mapped I/O

- every peripheral is a block of **registers** in the address space
- the CPU accesses them with normal load/store instructions
- typical kinds of registers
  - **control** registers: mode, enable, speed, …
  - **status** registers: flags like “data received”, “FIFO full”
  - **data** registers: the values transferred to or from the outside world
- a register is not memory: reading may clear a flag, writing may start an action
  - in C every access has to be `volatile`, otherwise the compiler may remove or merge it

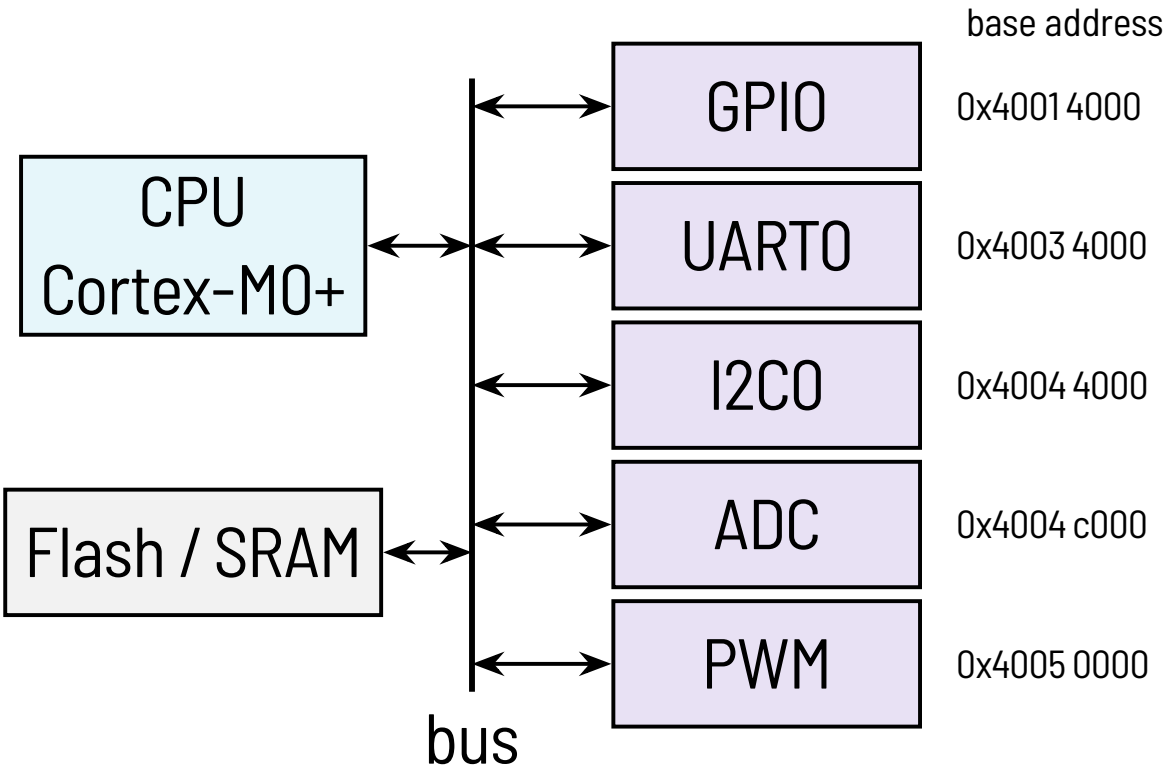



Figure 6.1.1: Peripherals are register blocks in the memory map (RP2040 addresses)

## Before a peripheral can be used

- release it from **reset** (most blocks start in reset to save power)

- make sure it gets a **clock** (e.g. `clk_peri` for UART and SPI)
- connect it to the pins: **pin multiplexing**
  - a pin has many possible functions, but only one at a time
  - on the RP2040: `FUNCSEL` field in the register `GPIOn_CTRL`
  - e.g. GP0 can be SPI0 RX, UART0 TX, I2C0 SDA, PWM0 A, SIO (software GPIO), PIO, …
- configure the peripheral, then enable it
- the SDK (C) and the HAL (Rust) do these steps for us – but they still happen

## Polling, interrupts and DMA

- **polling**: the program checks a status flag in a loop
  - simple and predictable, but the CPU is busy while waiting
- **interrupt**: the peripheral signals an event, the CPU interrupts the running program and executes an interrupt service routine (ISR)
  - the CPU can sleep or do other work in between
  - shared data between ISR and main program needs care
- **DMA** (direct memory access): a separate controller copies data between peripheral and memory
  - the CPU only sets up the transfer and is informed at the end
  - used for fast or continuous data streams (ADC sampling, displays, audio)

# Our simulated circuit (Wokwi)

- one circuit for all examples of this chapter: `examples/interfaces/diagram.j`

| Pico pin | connected to | peripheral |
|---|---|---|
| GP0 / GP1 | serial monitor | UART0 TX / RX |
| GP4 / GP5 | MPU6050 acceleration sensor | I2C0 SDA / SCL |
| GP14 | push button to GND | GPIO input |
| GP15 | LED with 220 Ω resistor | GPIO output, PWM7 B |
| GP17 / GP18 / GP19 | 74HC595 shift register + LED bar | GPIO latch, SPI0 SCK / TX |
| GP26 | potentiometer | ADC0 |

- a logic analyzer records 8 of these signals (export as VCD file)
- C: paste sketch and `diagram.json` into a new Pico project on `https://wokwi.com`
- Rust: `cargo build --release`, then start the simulation with the Wokwi extension in VS Code

# 6.2 Digital Inputs and Outputs (GPIO)

## Structure of a GPIO pin

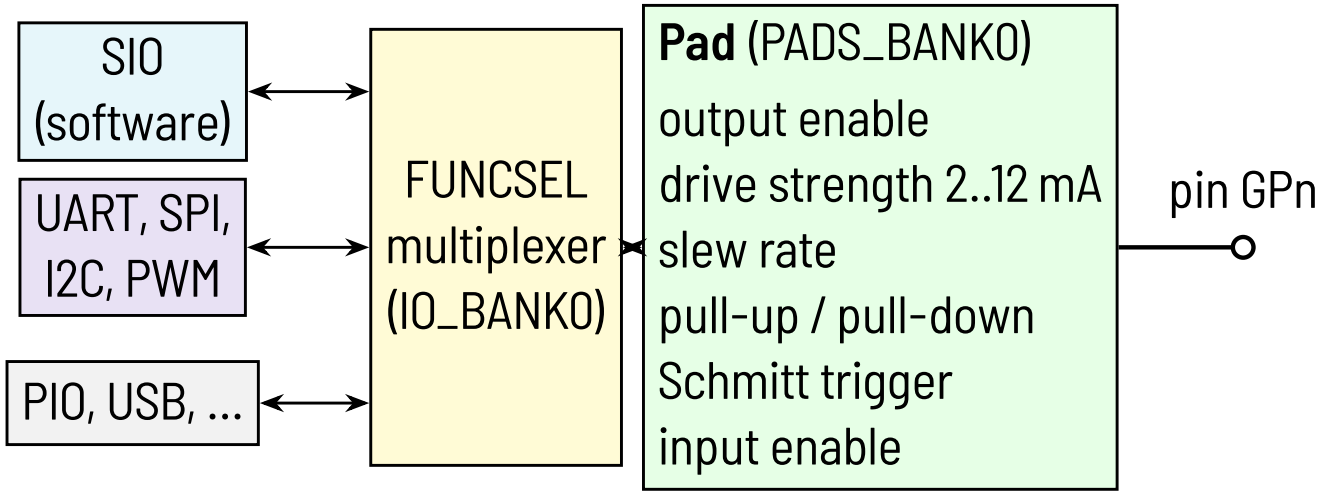



Figure 6.2.1: Path from the peripherals to a GPIO pin of the RP2040

- FUNCSEL = 5 connects the pin to the **SIO** (single-cycle I/O): the CPU controls it directly
- the pad settings are independent of the selected function

# SIO registers for GPIO (base address 0xd000 0000)

| Offset | Register | Meaning (one bit per pin) |
|---|---|---|
| 0x004 | GPIO_IN | input levels |
| 0x010 | GPIO_OUT | output values |
| 0x014, 0x018, 0x01c | GPIO_OUT_SET, _CLR, _XOR | set / clear / toggle output bits |
| 0x020 | GPIO_OE | output enable (1 = output) |
| 0x024, 0x028, 0x02c | GPIO_OE_SET, _CLR, _XOR | set / clear / toggle enable bits |

- why SET, CLR and XOR registers?
  - `GPIO_OUT |= (1 << 15)` is a read-modify-write: three instructions
  - if an interrupt (or the second core) changes another bit in between, that change is lost
  - writing `1 << 15` to GPIO_OUT_SET changes only bit 15, in one bus access
- the other peripherals of the RP2040 offer the same idea for every register: aliases at +0x1000 (XOR), +0x2000 (SET), +0x3000 (CLR)

# Blinking with raw register accesses (C)

```c
#define IO_BANK0_ADDR   0x40014000u
#define SIO_ADDR        0xd0000000u

// GPIOn_CTRL: function select of pin n (8 bytes per pin, CTRL at offset 4)
#define GPIO_CTRL(n)    (*(volatile uint32_t *)(IO_BANK0_ADDR + 0x04u + 8u * (n)))
#define SIO_GPIO_OE_SET (*(volatile uint32_t *)(SIO_ADDR + 0x024u))
#define SIO_GPIO_OUT_XOR (*(volatile uint32_t *)(SIO_ADDR + 0x01cu))

#define FUNCSEL_SIO     5u
#define LED             15u

void setup() {
  GPIO_CTRL(LED)  = FUNCSEL_SIO;    // pin is controlled by software (SIO)
  SIO_GPIO_OE_SET = 1u << LED;      // enable output driver (atomic set)
}

void loop() {
  SIO_GPIO_OUT_XOR = 1u << LED;     // toggle - no read-modify-write needed
  delay(500);
}
```

# The same with the Pico SDK (C)

```c
#include "hardware/gpio.h"

const uint LED = 15;

void setup() {
  gpio_init(LED);                 // FUNCSEL = SIO, output disabled, value 0
  gpio_set_dir(LED, GPIO_OUT);    // enable the output driver
}

void loop() {
  gpio_put(LED, 1);
  sleep_ms(500);
  gpio_put(LED, 0);
  sleep_ms(500);
}
```

- the SDK functions are thin wrappers around the registers shown before
- `gpio_put()` writes to GPIO_OUT_SET or GPIO_OUT_CLR

# The same in Rust (rp2040-hal)

```rust
#[entry]
fn main() -> ! {
    // Take ownership of the peripherals - exactly once.
    let mut pac = pac::Peripherals::take().unwrap();
    // ... clock setup (12 MHz crystal -> PLL -> 125 MHz) ...
    let sio = hal::Sio::new(pac.SIO);
    let pins = rp_pico::Pins::new(pac.IO_BANK0, pac.PADS_BANK0, sio.gpio_bank0, &mut
    pac.RESETS);

    // The type system knows that this pin is now a push-pull output.
    let mut led = pins.gpio15.into_push_pull_output();

    loop {
        led.set_high().unwrap();
        delay.delay_ms(500);
        led.set_low().unwrap();
        delay.delay_ms(500);
    }
}
```

## What Rust adds: ownership and type states

- `Peripherals::take()` returns the peripherals only on the first call
  - there is exactly one owner of each register block, so two parts of the program cannot configure the same peripheral by accident
- the configuration of a pin is part of its **type**
  - `pins.gpio15` has the type `Pin<Gpio15, FunctionNull, PullDown>`
  - `into_push_pull_output()` consumes it and returns `Pin<Gpio15, FunctionSioOutput, PullDown>`
  - `set_high()` only exists for output pins: writing to an input pin is a **compile error**, not a bug found on the hardware
  - after `into_function::<FunctionUart>()` the pin can only be handed to a UART
- all of this is checked by the compiler and costs nothing at run time
- raw register access is still possible, but must be marked `unsafe` (see `gpio_blink`

# Output stages

- **push-pull**: one transistor connects the pin to the supply, the other to GND
  - drives both levels actively, fast edges in both directions
  - never connect two push-pull outputs: if one drives high and the other low, a large current flows and can destroy the pins

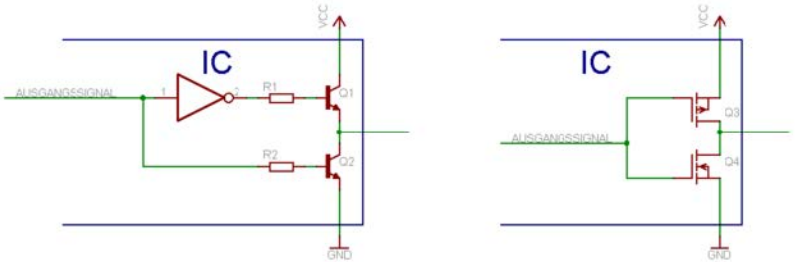



Figure 6.2.2: Push-pull output

- **open drain** (open collector for bipolar transistors): only the transistor to GND exists
  - the pin can only pull the line low; a resistor pulls it high
  - several outputs may share one line: it is low if any output pulls it low ("wired AND")
  - the rising edge is slow, as the pull-up resistor charges the line capacitance ($\tau = RC$)
  - the high level may differ from the chip's supply (level shifting, e.g. 3.3 V to 5 V)
  - used for I$^2$C, interrupt lines, reset lines

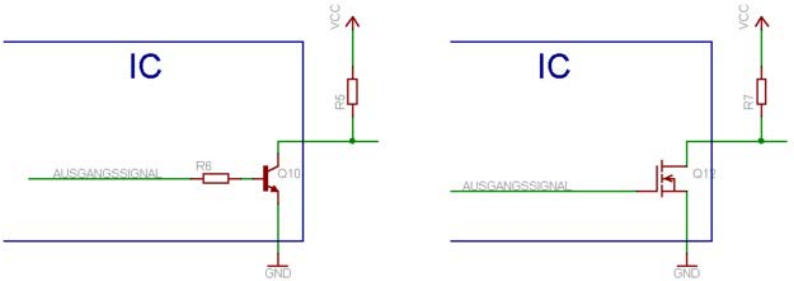



Figure 6.2.3: Open-drain output with external pull-up resistor

- **tri-state**: a push-pull stage with an additional “off” state (high impedance, Z)
  - in state Z the pin neither drives high nor low and behaves as if it were not connected
  - many devices can share a bus as long as only one of them drives at a time
  - on the RP2040: output enable = 0 means Z
  - open drain can be emulated: output value fixed at 0, switch only the output enable

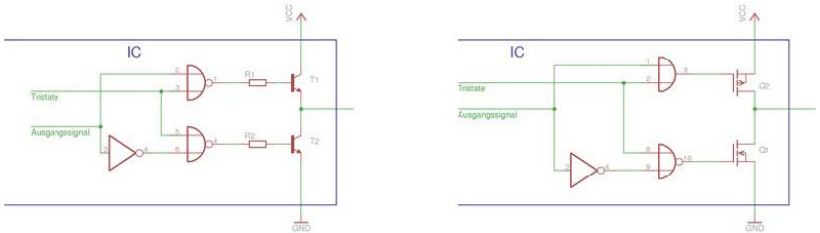



Figure 6.2.4: Tri-state output

# Inputs

- an unconnected (“floating”) input reads random values: it picks up noise
  - always define the idle level with a pull-up or pull-down resistor
  - RP2040: internal pull-up / pull-down of about 50–80 kΩ in the pad
- a typical button connects the pin to GND and uses the pull-up: **pressed = low**
- **Schmitt trigger**: two switching thresholds (hysteresis), so a slowly changing or noisy signal gives one clean edge instead of many
- electrical limits matter
  - 3.3 V maximum on any pin of the RP2040 – a 5 V signal needs a level shifter or voltage divider
  - drive strength 2, 4 (default), 8 or 12 mA per pin – enough for an LED, never for a motor or relay

# Contact bounce

- mechanical contacts do not close cleanly: they bounce for some 100 $\mu$s up to about 20 ms
- the software sees many edges for one press – Wokwi simulates this as well

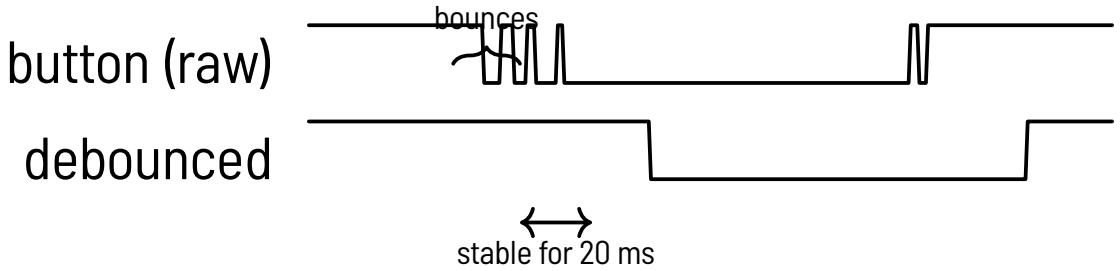



Figure 6.2.5: Bouncing button and debounced signal

- hardware solution: RC low-pass filter followed by a Schmitt trigger
- software solution: accept a new level only if it was stable for a certain time

# Debouncing in software (Rust)

```rust
let mut led = pins.gpio15.into_push_pull_output();
// Button connects the pin to GND -> use the internal pull-up, pressed = low.
let mut button = pins.gpio14.into_pull_up_input();

let mut stable_pressed = false; // debounced state
let mut counter = 0; // how long the raw level differs from the stable state

loop {
    let raw_pressed = button.is_low().unwrap();
    if raw_pressed != stable_pressed {
        counter += 1;
        if counter >= STABLE_MS {
            stable_pressed = raw_pressed;
            counter = 0;
            if stable_pressed {
                led.toggle().unwrap(); // react on the press edge only
            }
        }
    } else {
        counter = 0;
    }
    delay.delay_ms(1); // sample every 1 ms
}
```

- C version: `examples/interfaces/c/button_debounce`

# 6.3 Interrupts

## How an interrupt is handled on a Cortex-M

- the peripheral sets an interrupt flag (e.g. “falling edge on GP14”)
- if enabled, the request goes to the **NVIC** (nested vectored interrupt controller)
  - RP2040: 32 interrupt lines per core, 4 priority levels
  - a higher priority interrupt can interrupt a running ISR (nesting)
- the core pushes registers onto the stack and loads the ISR address from the **vector table**
  - latency on the Cortex-M0+: 15 clock cycles (120 ns at 125 MHz)
- the ISR must **clear the flag**, otherwise it is entered again immediately
- on return the saved registers are restored automatically

## Rules for interrupt service routines

- keep ISRs **short**: set a flag, store a value, wake up a task
- no blocking calls (delays, waiting for a UART, `printf`) inside an ISR
- variables shared with the main program
  - C: declare them `volatile`, so the compiler reads them from memory every time
  - `volatile` does **not** make an access atomic: a 64 bit value or a read-modify-write (`count++`) can still be interrupted in the middle
  - protect such accesses with a critical section (interrupts disabled for a short time)
- Rust enforces this: a `static` shared with an ISR must be wrapped, e.g. in a `Mutex` that can only be opened inside a critical section

# GPIO interrupt (C, Arduino API)

- try it: in Wokwi one press gave more than 30 interrupts – the bouncing is visible again

```
const int LED = 15, BUTTON = 14;
volatile uint32_t irqCount = 0;    // shared with the ISR -> volatile

void onButton() {                  // interrupt service routine: keep it short
  digitalWrite(LED, !digitalRead(LED));
  irqCount++;
}

void setup() {
  Serial1.begin(115200);
  pinMode(LED, OUTPUT);
  pinMode(BUTTON, INPUT_PULLUP);
  attachInterrupt(digitalPinToInterrupt(BUTTON), onButton, FALLING);
}
void loop() {
  static uint32_t last = 0;
  uint32_t now = irqCount;         // 32 bit read is atomic on the Cortex-M0+
  if (now != last) {
    Serial1.printf("interrupts so far: %lu\n", (unsigned long)now);
    last = now;
  }
}
```

# GPIO interrupt (Rust)

```rust
// Hand-over main() -> ISR; the Mutex opens only in a critical section
static SHARED: Mutex<RefCell<Option<(LedPin, ButtonPin)>>> = Mutex::new(RefCell::new
    (None));

    let led = pins.gpio15.into_push_pull_output(); // in main()
    let button = pins.gpio14.into_pull_up_input();
    button.set_interrupt_enabled(EdgeLow, true);
    critical_section::with(|cs| SHARED.borrow(cs).replace(Some((led, button))));
    unsafe { pac::NVIC::unmask(pac::Interrupt::IO_IRQ_BANK0) };
    loop { cortex_m::asm::wfi(); } // sleep until an interrupt arrives

#[interrupt]
fn IO_IRQ_BANK0() {
    static mut PINS: Option<(LedPin, ButtonPin)> = None; // taken from SHARED once
    if PINS.is_none() {
        critical_section::with(|cs| *PINS = SHARED.borrow(cs).take());
    }
    if let Some((led, button)) = PINS {
        if button.interrupt_status(EdgeLow) {
            led.toggle().unwrap();
            button.clear_interrupt(EdgeLow); // otherwise the IRQ fires again at once
        }
    }
}
```

## Ownership across the interrupt boundary

- the pins are **moved** into the ISR: after the hand-over, `main()` cannot touch them any more
- a data race between main program and ISR is therefore impossible – the compiler rejects such code
- the C version compiles even if both sides write `irqCount` without protection; the error shows up only now and then at run time
- in larger programs a framework handles this hand-over, e.g. RTIC or Embassy (see chapter Operating Systems)

# 6.4 Timers, PWM and Watchdog

## Building blocks of a timer

- **prescaler / divider**: reduces the input clock, e.g. 125 MHz / 125 = 1 MHz
- **counter**: counts up (or down) with every divided clock
- **top / reload value**: the counter wraps to 0 when it reaches it $\Rightarrow$ period
- **compare** register: an event (interrupt or pin change) when counter = compare
- **capture** register: the counter value is copied when an external edge arrives
  - the difference of two captures gives period or pulse width with clock accuracy
- RP2040 timer: a 64 bit counter incremented every microsecond, 4 alarms (compare on the lower 32 bits) that raise interrupts
  - `sleep_ms()`, `delay()` and timeouts are built on it
  - 64 bit at 1 MHz overflows after more than 500 000 years

# Pulse width modulation (PWM)

- a digital output switched periodically with a variable **duty cycle**
- after averaging (LED + eye, motor + inertia, RC low-pass) the result behaves like an analog value
- applications: LED brightness, DC motor speed, servo position, simple D/A conversion
- duty cycle $= \mathrm{CC}/(\mathrm{TOP}+1)$, $\quad f_{PWM} = f_{sys}/(\mathrm{DIV} \cdot (\mathrm{TOP}+1))$

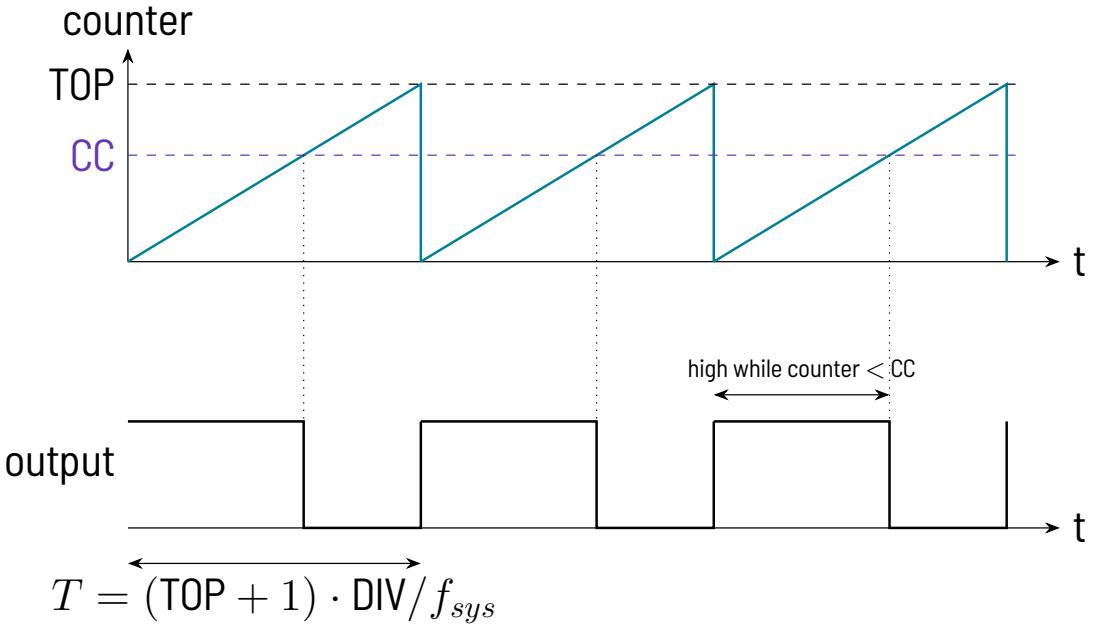



Figure 6.4.1: PWM: the output is high while the counter is below the compare value

## PWM on the RP2040

- 8 slices, each with a 16 bit counter, a fractional divider (8.4 bit) and two outputs A and B
- fixed mapping: GPIO $n \rightarrow$ slice $(n/2)$ mod $8$, channel A for even, B for odd $n$
  - GP15 $\rightarrow$ slice 7, channel B

- both channels of a slice share frequency, but have their own compare value (duty cycle)
- phase-correct mode: count up and down – symmetric pulses, half the frequency
- channel B can also be an input: the counter then counts edges or measures the high time of an external signal

# PWM example: fading LED (C)

```c
// f_PWM = f_sys / (DIV * (TOP + 1)); with DIV = f_sys / 1 MHz -> 1 kHz
#include "hardware/clocks.h"
#include "hardware/pwm.h"

const uint LED = 15;
const uint16_t TOP = 999;
uint slice;

void setup() {
  gpio_set_function(LED, GPIO_FUNC_PWM);   // FUNCSEL = PWM
  slice = pwm_gpio_to_slice_num(LED);      // = 7
  uint32_t div = clock_get_hz(clk_sys) / 1000000;    // e.g. 125 or 200
  pwm_set_clkdiv_int_frac(slice, div, 0); // counter clock = 1 MHz
  pwm_set_wrap(slice, TOP);                // counts 0..TOP
  pwm_set_enabled(slice, true);
}

void loop() {
  for (int duty = 0; duty <= TOP; duty++) {          // fade in
    pwm_set_gpio_level(LED, duty);                    // duty = level / (TOP + 1)
    sleep_ms(1);
  }
  // ... fade out ...
}
```

# PWM example: fading LED (Rust)

```rust
const TOP: u16 = 999;

let slices = hal::pwm::Slices::new(pac.PWM, &mut pac.RESETS);
let mut pwm = slices.pwm7;
pwm.set_div_int(125); // counter clock 125 MHz / 125 = 1 MHz
pwm.set_top(TOP); // counts 0..=999 -> period 1 ms
pwm.enable();

let channel = &mut pwm.channel_b;
channel.output_to(pins.gpio15); // FUNCSEL = PWM

loop {
    // Duty cycle = compare value / (TOP + 1)
    for duty in (0..=TOP).chain((0..=TOP).rev()) {
        channel.set_duty_cycle(duty).unwrap();
        delay.delay_us(1000);
    }
}
```

- `set_duty_cycle()` comes from the `SetDutyCycle` trait of `embedded-hal`: drivers written against this trait work on every microcontroller with a HAL
- look at LED_PWM in the logic analyzer: 1 kHz, changing pulse width

## Watchdog

- a counter that resets the whole chip when it expires
- the software must restart (“feed”, “kick”) it regularly
- if the program hangs in an endless loop or a deadlock, the feeding stops and the system restarts in a defined state
- rules
  - feed it at **one** place in the main loop – never from a timer interrupt (that keeps running when the main loop hangs)
  - check the reset reason at start-up and log or report watchdog resets
  - pause it while the debugger halts the CPU
- RP2040: maximum timeout about 8.3 s; register `WATCHDOG_REASON` tells whether the last reset came from the watchdog

# Watchdog example (Rust)

```rust
// Read the reset reason before the HAL takes the WATCHDOG peripheral.
let by_watchdog = pac.WATCHDOG.reason().read().timer().bit_is_set();
let mut watchdog = hal::Watchdog::new(pac.WATCHDOG);
// ... clocks, pins, UART ...
if by_watchdog {
    writeln!(uart, "Restarted by the WATCHDOG\r").unwrap();
} else {
    writeln!(uart, "Power-on reset\r").unwrap();
}

watchdog.pause_on_debug(true); // do not reset while halted in the debugger
watchdog.start(1_000.millis()); // timeout 1 s

loop {
    while button.is_low().unwrap() {
        // simulated "hang": the watchdog is no longer fed
    }
    watchdog.feed();
    led.toggle().unwrap();
    delay.delay_ms(100);
}
```

- hold the button for more than one second and watch the serial monitor – on a real Pico (the Wokwi simulation did not perform the watchdog reset in our tests)

- C version: `watchdog_enable()`, `watchdog_update()`, `watchdog_caused_r`

# 6.5 Analog Input (ADC)

## Principle and key figures

- **successive approximation** (SAR): the converter compares the input with the output of an internal D/A converter and determines one bit per step, starting with the MSB – $n$ steps for $n$ bits
- **resolution**: $n$ bit $\Rightarrow 2^n$ steps; one step (LSB) $= V_{ref}/2^n$
  - RP2040: 12 bit, $V_{ref} = 3.3\,\text{V} \Rightarrow 1\,\text{LSB} \approx 0.8\,\text{mV}$
  - effective resolution (ENOB) is lower, about 9 bit
- **sampling rate**: RP2040 up to 500 000 samples/s (96 cycles of the 48 MHz ADC clock)
  - sampling theorem: the signal must not contain frequencies above half the sampling rate, otherwise they appear as wrong low frequencies (aliasing) $\Rightarrow$ analog low-pass filter before the ADC
- one converter, an input **multiplexer** selects the channel
  - channels 0–3 = GP26–GP29, channel 4 = internal temperature sensor

# ADC example: potentiometer and chip temperature (C)

```c
#include "hardware/adc.h"

void setup() {
  Serial1.begin(115200);              // UART0, 8N1
  adc_init();
  adc_gpio_init(26);                  // disable digital input buffer on GP26
  adc_set_temp_sensor_enabled(true);
}

void loop() {
  adc_select_input(0);                // multiplexer -> channel 0 (GP26)
  uint16_t raw = adc_read();          // 12 bit: 0 .. 4095
  uint32_t millivolt = raw * 3300u / 4095u;

  adc_select_input(4);                // channel 4 = temperature sensor
  float vSense = adc_read() * 3.3f / 4095.0f;
  float celsius = 27.0f - (vSense - 0.706f) / 0.001721f;    // datasheet formula

  Serial1.printf("ADC0 = %4u (%4lu mV)   chip temperature = %.1f C\n",
                 raw, (unsigned long)millivolt, celsius);
  sleep_ms(500);
}
```

- turn the potentiometer in Wokwi and watch the values; Rust version: `adc_uart.rs`

- Wokwi does not simulate the temperature sensor: it reads 0 and the formula gives 437 °C – always check measured values for plausibility

# 6.6 Serial Interfaces

## Overview

| | UART | $I^2C$ | SPI |
|---|---|---|---|
| clock | none (agreed baud rate) | SCL from controller | SCK from controller |
| wires | TX, RX (+ GND) | SDA, SCL (+ GND) | SCK, COPI, CIPO, CS per device |
| topology | point-to-point | bus, 7 bit addresses | bus, chip select lines |
| direction | full duplex | half duplex | full duplex |
| typical speed | 9.6 k – 1 Mbit/s | 100 k, 400 k, 1 Mbit/s | 1 – 50 Mbit/s |
| typical use | console, GPS, modems | sensors, EEPROM, RTC | displays, flash, SD card |

- "controller" and "peripheral" (or "target") replace the older terms master and slave; for SPI the data lines are called COPI (controller out, peripheral in) and CIPO – older documents use MOSI and MISO

# UART: asynchronous serial transmission

- idle line is high; a frame starts with a **start bit** (low)
- then 5–9 data bits, **LSB first**, optional parity bit, 1 or 2 **stop bits** (high)
- both sides must use the same settings, e.g. “115200 8N1” = 115200 bit/s, 8 data bits, no parity, 1 stop bit
- the receiver synchronises on the falling edge of the start bit and samples each bit in its middle (oversampling with 16 times the baud rate)
  - clocks may differ by a few percent before the last bit is sampled wrongly





Figure 6.6.1: UART frame 8N1 for the character ‘A’ (0x41 = 0100 0001, sent LSB first)

## UART: errors and signal levels

- error detection in the receiver
  - **parity error**: number of 1 bits does not match (detects single bit errors only)
  - **framing error**: stop bit is not high – wrong baud rate or disturbed line
  - **overrun**: new data arrived before the software read the old data
- the UART defines the frame, not the voltages
  - **TTL / CMOS level**: 0 V / 3.3 V directly at the chip pins, a few centimetres to metres
  - **RS-232**: $\pm 3$ to $\pm 15$ V, inverted, point-to-point, up to about 15 m
  - **RS-485**: differential pair, up to 1200 m, several devices on one bus (Modbus, DMX)
  - **USB-to-UART** bridges (CP2102, FT232, CH340): the usual way to a PC today
- RP2040: 2 UARTs (ARM PL011) with 32 byte FIFOs for transmit and receive

# UART example: echo in upper case

```c
#include <ctype.h>
#include "hardware/uart.h"

void setup() {
  uart_init(uart0, 115200);                 // 8N1 is the default format
  gpio_set_function(0, GPIO_FUNC_UART);     // GP0 = TX
  gpio_set_function(1, GPIO_FUNC_UART);     // GP1 = RX
  uart_puts(uart0, "UART echo ready\r\n");
}

void loop() {
  if (uart_is_readable(uart0)) {            // RX FIFO not empty?
    char c = uart_getc(uart0);
    uart_putc_raw(uart0, toupper(c));
  }
}
```

```rust
let mut uart = UartPeripheral::new(pac.UART0, uart_pins, &mut pac.RESETS)
    .enable(
        UartConfig::new(115_200.Hz(), DataBits::Eight, None, StopBits::One),
        clocks.peripheral_clock.freq(),
    )
    .unwrap();
loop {
    // block!() polls the non-blocking read until a byte has arrived
    let byte = block!(uart.read()).unwrap();
```

```
    block!(uart.write(byte.to_ascii_uppercase())).unwrap();
}
```

# I²C: a two-wire bus

- two open-drain lines with pull-up resistors: SDA (data) and SCL (clock)
- the controller generates the clock and starts every transfer
- each peripheral has a 7 bit address (some 10 bit), e.g. MPU6050 = 0x68
- open drain makes the bus safe: nobody drives high, so two devices can never short the line
- speeds: standard mode 100 kbit/s, fast mode 400 kbit/s, fast mode plus 1 Mbit/s
- typical pull-ups: 4.7 kΩ at 100 kHz, 2.2 kΩ at 400 kHz (the bus capacitance limits the rise time)

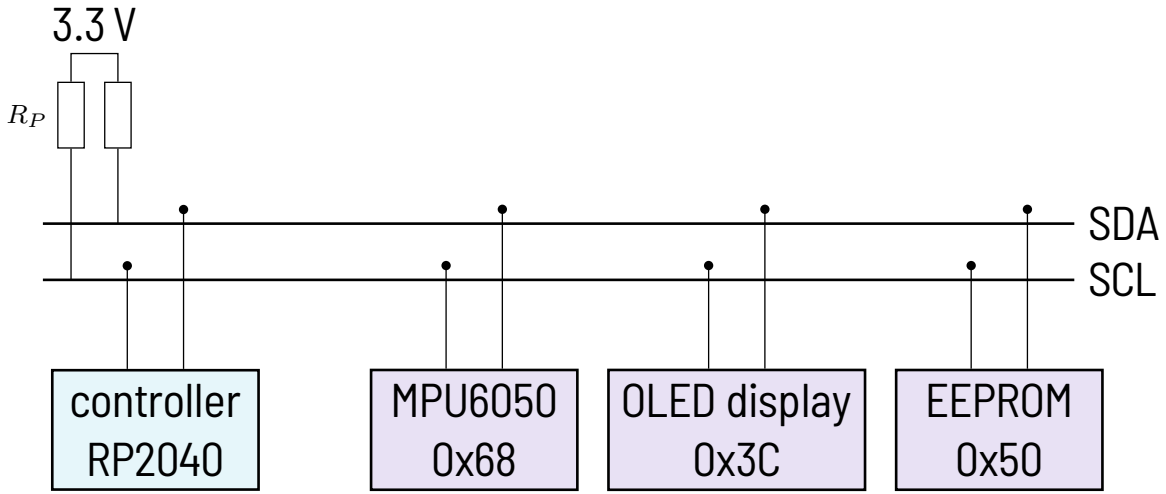



Figure 6.6.2: I$^2$C bus: all devices share SDA and SCL, pull-up resistors $R_P$ define the high level

# I²C: protocol

- SDA may only change while SCL is low – with two exceptions
  - **START**: SDA falls while SCL is high
  - **STOP**: SDA rises while SCL is high
- after START: 7 bit address + R/$\overline{W}$ bit (0 = write, 1 = read)
- every byte is followed by an **acknowledge** bit: the receiver pulls SDA low (ACK) or leaves it high (NACK)
- a peripheral may hold SCL low to make the controller wait (**clock stretching**)

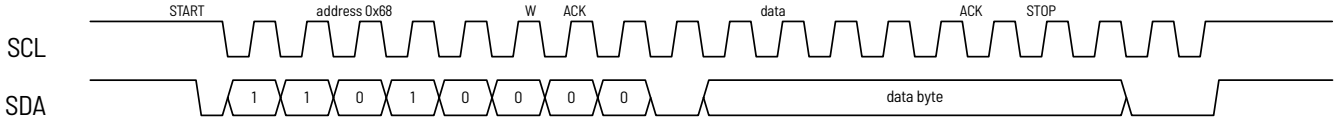



Figure 6.6.3: I²C write: START, address 0x68 with R/$\overline{W}$ = 0, ACK, data byte, ACK, STOP

# Reading a sensor register over I$^2$C

- sensors are organised as a set of registers with an 8 bit register address
- reading a register is a combined transfer
  - START, address + W, **register address**
  - repeated START (no STOP in between, so no other controller can interfere), address + R
  - read one or more bytes; the controller ACKs every byte except the last one (NACK), then STOP
- most sensors increment the register address automatically: one transfer reads a whole block (“burst read”)

```
1 // Register read: write the register address without STOP,
2 // then read with a repeated START.
3 void readRegs(uint8_t reg, uint8_t *buf, size_t len) {
4   i2c_write_blocking(i2c0, MPU6050, &reg, 1, true);    // true = no STOP
5   i2c_read_blocking(i2c0, MPU6050, buf, len, false);
6 }
```

# I²C example: MPU6050 acceleration sensor (Rust)

```rust
// I2C lines are open drain: the pins need pull-up resistors.
let sda = pins.gpio4.reconfigure::<gpio::FunctionI2C, gpio::PullUp>();
let scl = pins.gpio5.reconfigure::<gpio::FunctionI2C, gpio::PullUp>();
let mut i2c = hal::I2C::i2c0(
    pac.I2C0, sda, scl, 400.kHz(), // fast mode
    &mut pac.RESETS, clocks.system_clock.freq(),
);

// Register read = write the register address, then (repeated start) read.
let mut id = [0u8; 1];
i2c.write_read(MPU6050, &[REG_WHO_AM_I], &mut id).unwrap();
writeln!(uart, "WHO_AM_I = 0x{:02X}\r", id[0]).unwrap();

// Leave sleep mode: write 0 to PWR_MGMT_1.
i2c.write(MPU6050, &[REG_PWR_MGMT_1, 0x00]).unwrap();

loop {
    // Burst read: 6 bytes from ACCEL_XOUT_H (X, Y, Z as big endian i16).
    let mut buf = [0u8; 6];
    i2c.write_read(MPU6050, &[REG_ACCEL_XOUT_H], &mut buf).unwrap();
    // ... convert: +-2 g range -> 16384 LSB per g ...
}
```

- `write_read()` is the repeated-start transfer from the previous slide (trait `embedded_hal::i2c::I2c`)

- change the acceleration in Wokwi (click on the sensor) and compare SDA/SCL in the logic analyzer

# SPI: Serial Peripheral Interface

- synchronous, full duplex: with every clock one bit goes out on COPI and one comes in on CIPO
- internally two shift registers that exchange their contents
- each peripheral has its own **chip select** (CS, active low); only the selected one drives CIPO
- push-pull lines and no addressing: much faster than $I^2C$, but one extra wire per device
- no acknowledge, no standard for frame length or commands – each device defines its own protocol in the datasheet

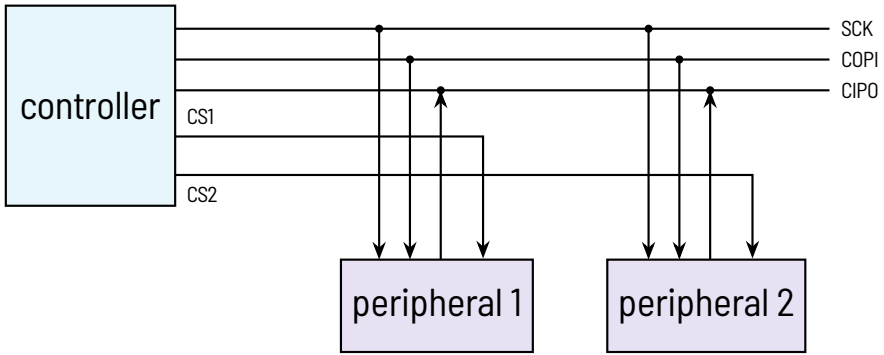



Figure 6.6.4: SPI bus with two peripherals: shared clock and data lines, one chip select each

# SPI modes

- two settings define the timing; controller and peripheral must agree
  - **CPOL**: idle level of the clock (0 = low, 1 = high)
  - **CPHA**: sample on the first (0) or second (1) clock edge

| mode | CPOL | CPHA | data sampled on |
|---|---|---|---|
| 0 | 0 | 0 | rising edge |
| 1 | 0 | 1 | falling edge |
| 2 | 1 | 0 | falling edge |
| 3 | 1 | 1 | rising edge |

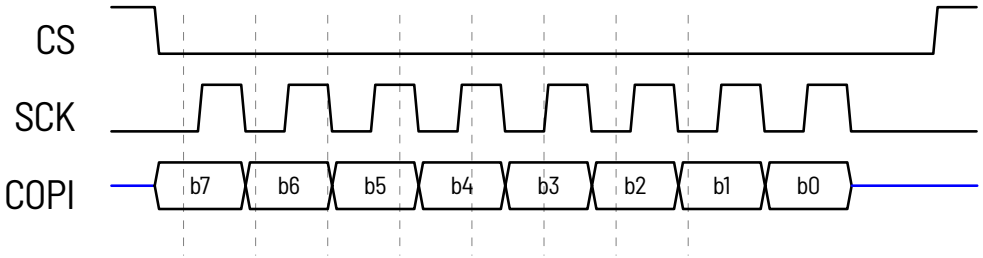



Figure 6.6.5: SPI mode 0: data changes on the falling edge and is sampled on the rising edge (dashed), MSB first

# SPI example: 74HC595 shift register

- the 74HC595 is a simple SPI-like device: 8 bit shift register (DS = data, SHCP = clock) plus an output latch (STCP)
- a rising edge on STCP copies the shifted byte to the outputs Q0–Q7 – classic way to get more output pins

```
#include "hardware/spi.h"

const uint PIN_SCK = 18, PIN_COPI = 19, PIN_LATCH = 17;

void setup() {
  spi_init(spi0, 1000 * 1000);                // 1 MHz
  spi_set_format(spi0, 8, SPI_CPOL_0, SPI_CPHA_0, SPI_MSB_FIRST);    // mode 0
  gpio_set_function(PIN_SCK, GPIO_FUNC_SPI);
  gpio_set_function(PIN_COPI, GPIO_FUNC_SPI);
  gpio_init(PIN_LATCH);
  gpio_set_dir(PIN_LATCH, GPIO_OUT);
}

void show(uint8_t pattern) {
  spi_write_blocking(spi0, &pattern, 1);     // 8 clocks shift the byte in
  gpio_put(PIN_LATCH, 1);                    // rising edge on STCP copies the
  gpio_put(PIN_LATCH, 0);                    // shift register to the outputs
}
```

- Rust version: `spi_shift_register.rs` - `spi.write()` followed by `spi.flus`
  which waits until the last bit has left the FIFO before the latch pulse

## Interfaces beyond the board

- **USB**: differential pair, host-controlled, up to 12 Mbit/s on the RP2040 (full speed)
  - device classes avoid special drivers: CDC (virtual serial port), HID (keyboard, mouse), MSC (mass storage)
  - the RP2040 boot ROM appears as a USB drive – copy a `.uf2` file to flash it
- **CAN**: differential two-wire bus for cars and industrial machines
  - multi-controller: all nodes may send; the message identifier decides by bitwise arbitration (a "dominant" 0 wins over a "recessive" 1), so the most important message always gets through without collisions
  - classic CAN 1 Mbit/s, CAN FD up to 8 Mbit/s in the data phase
  - the RP2040 has no CAN controller: use an external one (MCP2515 via SPI) or emulate it with PIO
- **PIO** (RP2040 specific): small state machines that execute their own I/O programs – for protocols that have no hardware block (WS2812 LEDs, VGA, extra UARTs, CAN)

## Looking at the signals: the logic analyzer

- the Wokwi logic analyzer records up to 8 digital signals during the simulation
- stop the simulation $\rightarrow$ the recording is downloaded as a VCD file (value change dump)
- open it in PulseView (sigrok) or GTKWave
  - PulseView has **protocol decoders**: UART, $I^2C$ and SPI are shown as bytes, addresses, ACK/NACK
- this is the same work flow as with a real logic analyzer on real hardware – and the most efficient way to find errors in serial communication

## Exercises

- GPIO: change `gpio_blink_registers` so that the LED is switched with GPIO_OUT and GPIO_OUT_CLR. Then try to call `set_high()` on an input pin in Rust and read the compiler message.
- Interrupts: count the interrupts of one button press with bouncing enabled and disabled (attribute `"bounce": "0"` in `diagram.json`). Debounce in the ISR using the timer: ignore edges within 20 ms of the last accepted one.
- PWM: use the potentiometer (ADC) to set the LED brightness. Which PWM frequency is needed so that the LED does not flicker?
- UART: record "A" in the logic analyzer, measure the bit time and compare with 1/115200 s.
- $I^2C$: decode one register read of the MPU6050 in PulseView and mark START, address, ACK, repeated START and NACK.
- SPI: change the 74HC595 example to SPI mode 3. What happens and why?

# 7 Networking (TCP/IP)

# 7.1 Networks in Embedded Systems

## Why connect an embedded system?

- send measured data to a server or cloud service (monitoring, analysis)
- remote control and configuration (smartphone app, web interface)
- software updates over the air (OTA) – often the most important reason
- time synchronisation, communication between devices (machine to machine)
- but: a microcontroller has little memory and often a battery
  - a TCP/IP stack needs code and RAM: lwIP (used by ESP-IDF and Arduino) about 40 KB code; buffers for every connection come on top
  - Wi-Fi transmission needs well above 100 mA; Bluetooth Low Energy or LoRa are much more economical
  - every connected device can be attacked – security is part of the design

## The reference platform: ESP32-C3

- 32 bit RISC-V core, 160 MHz, 400 KB SRAM, 4 MB flash on typical modules
- Wi-Fi 802.11 b/g/n (2.4 GHz) and Bluetooth LE 5 on the chip
- the radio is controlled by a driver with closed-source parts supplied by Espressif
- software stacks
  - C: Arduino core or ESP-IDF, both with lwIP as TCP/IP stack and FreeRTOS
  - Rust: `esp-hal` + `esp-radio` (Wi-Fi driver) + `embassy-net` (TCP/IP stack based on smoltcp)
- in Wokwi the device connects to the open access point **Wokwi-GUEST**; the simulator routes its packets to the internet
  - outgoing connections work (DNS, HTTP, MQTT, NTP); ping (ICMP) does not
  - incoming connections to a server on the device need the paid private gateway or port forwarding in VS Code

## Layer models

- communication is split into layers; each layer uses the services of the layer below and offers a service to the layer above
- a layer can be replaced without changing the others (Wi-Fi instead of Ethernet, IPv6 instead of IPv4)
- the **OSI model** (7 layers) is the reference for terminology; the internet uses the simpler **TCP/IP model** (4 layers)

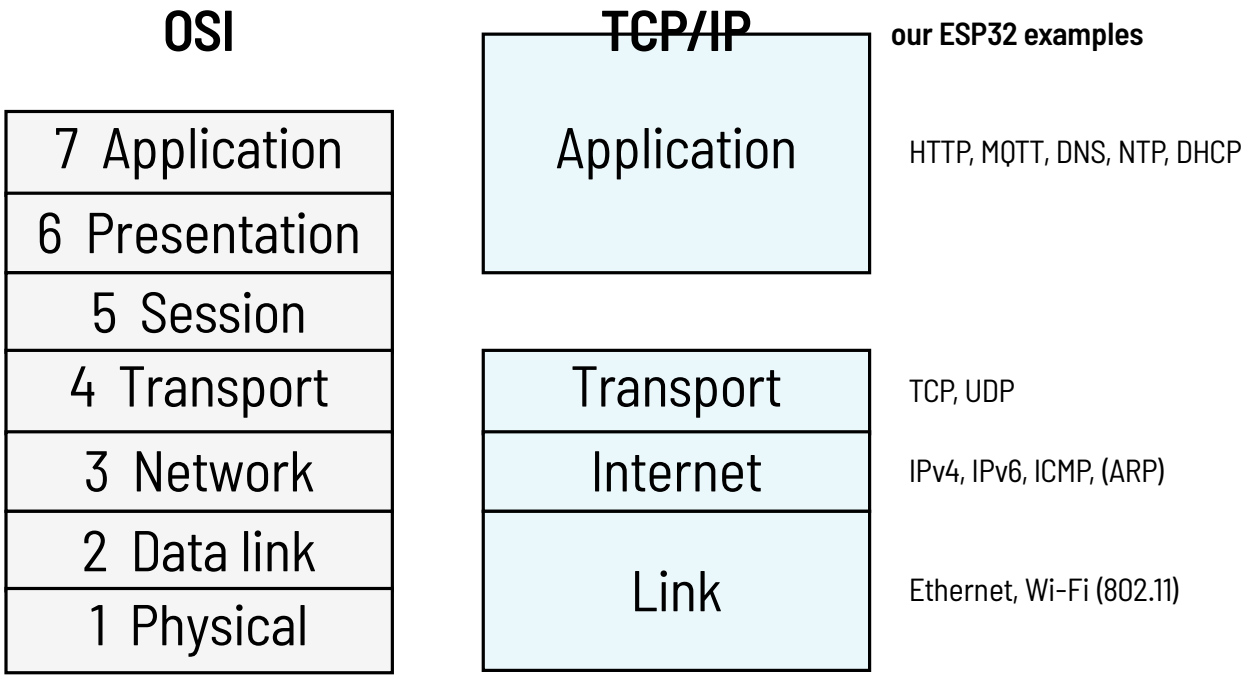



Figure 7.1.1: OSI reference model and the TCP/IP model with the protocols used in this chapter

## Encapsulation

- on the way down, every layer puts its own **header** in front of the data it gets from above
- the receiver removes the headers layer by layer on the way up

- names of the data units: message (application), segment (TCP) or datagram (UDP), packet (IP), frame (link layer)

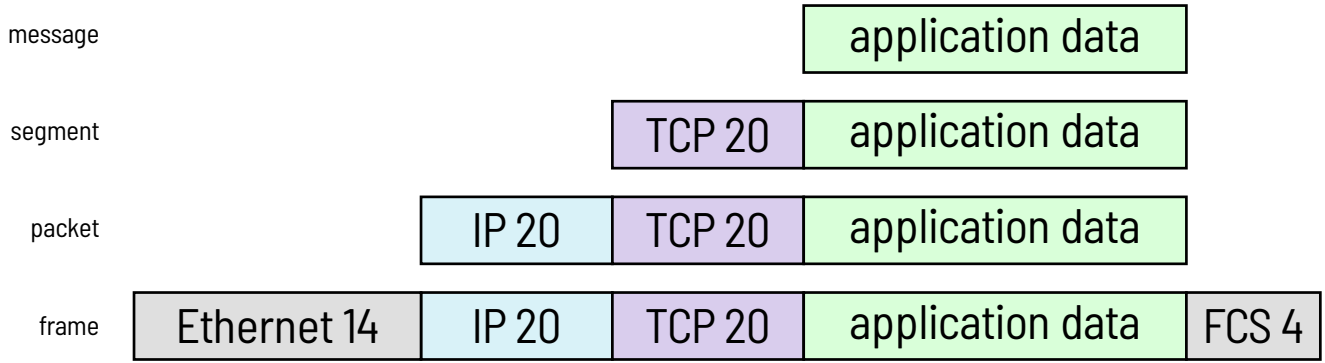



Figure 7.1.2: Encapsulation of application data in TCP, IPv4 and Ethernet (header sizes in bytes, minimum)

- overhead: one byte of payload costs at least $14 + 20 + 20 + 4 = 58$ bytes of headers on Ethernet (plus preamble and gap) – small values should be collected and sent together

# 7.2 Link Layer: Ethernet and Wi-Fi

## MAC addresses

- 48 bit, written as six bytes in hexadecimal: `24:0A:C4:00:01:10`
- the first three bytes (OUI) identify the manufacturer – 24:0A:C4 belongs to Espressif
- stored in the chip (eFuse) and unique worldwide; can be overridden in software
- `FF:FF:FF:FF:FF:FF` is the **broadcast** address: every device in the local network receives the frame
- only valid in the local network – a router replaces the link layer header on every hop

# Ethernet

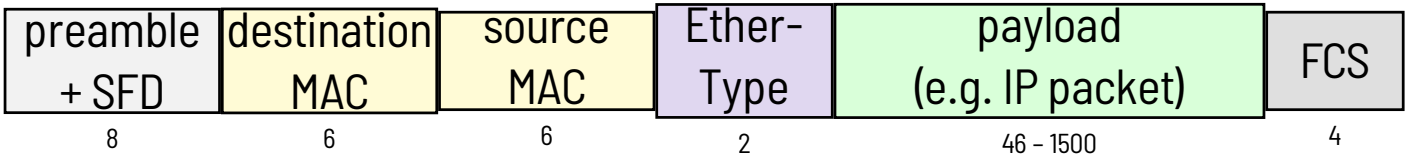



Figure 7.2.1: Ethernet frame (field sizes in bytes)

- **EtherType** tells the receiver what is inside: 0x0800 IPv4, 0x86DD IPv6, 0x0806 ARP
- **FCS**: CRC-32 over the frame; frames with errors are dropped silently – repairing is the job of higher layers (TCP)
- today: twisted pair cables, full duplex, **switches** that learn which MAC address is reachable on which port – no collisions any more
- for embedded systems
  - Power over Ethernet: data and power on one cable (cameras, access points)
  - single pair Ethernet: 10BASE-T1L (up to 1 km, process industry), 10BASE-T1S (several devices on one line, cars)
  - microcontrollers with Ethernet need an external PHY chip (e.g. STM32 + LAN8742)

## Wi-Fi (IEEE 802.11)

- **stations** (our ESP32) connect to an **access point** (AP), identified by its name, the SSID
- frequency bands 2.4 GHz (channels 1–13 in Europe, only 3 do not overlap), 5 GHz and 6 GHz with more channels
- connection set-up: scan, authentication, association, then the key exchange of WPA2 or WPA3 – after that, frames are encrypted on the radio link
- radio cannot detect collisions while sending $\Rightarrow$ **CSMA/CA**: listen before sending, random back-off, every frame is acknowledged by the receiver
- the frames carry three or four MAC addresses (station, AP, final destination); the AP converts them to Ethernet frames for the wired network
- power saving: the station sleeps and wakes up only for selected beacons of the AP; the AP buffers frames meanwhile

# Wireless technologies for embedded systems

| | data rate | range | power | typical use |
|---|---|---|---|---|
| Wi-Fi 4/6 | 10 – 1000 Mbit/s | 50 m | high | cameras, gateways, devices on mains power |
| Bluetooth LE | 1 – 2 Mbit/s | 10 – 50 m | very low | wearables, smartphone accessories |
| IEEE 802.15.4 (Thread, Zigbee) | 250 kbit/s | 30 m, mesh | very low | home automation (Matter) |
| LoRaWAN | 0.3 – 50 kbit/s | 2 – 15 km | very low | sensors in agriculture, cities |
| NB-IoT / LTE-M | 0.1 – 1 Mbit/s | mobile network | low | meters, tracking |

- Thread is based on IPv6; LoRaWAN and Bluetooth LE use their own protocols and need a gateway to reach the internet

# 7.3 Network Layer: IP

## IPv4 addresses

- 32 bit, written as four decimal bytes: `10.13.37.2`
- **prefix length** (CIDR notation): `10.13.37.2/24` – the first 24 bits are the network, the remaining 8 bits the host
  - the same as subnet mask 255.255.255.0
  - network address 10.13.37.0, broadcast address 10.13.37.255, 254 usable host addresses
- the old address classes A, B, C (fixed prefix lengths 8, 16, 24) are no longer used
- **private** address ranges, not routed in the internet: 10.0.0.0/8, 172.16.0.0/12, 192.168.0.0/16
  - the router translates private addresses to its public address (NAT); devices behind it cannot be reached from outside without extra configuration
- special addresses: 127.0.0.1 (own host, loopback), 0.0.0.0 ("any" / not yet known)

# Routing: direct or via the gateway

- before sending, the device compares the destination with its own network
  - same network ⇒ deliver directly to the destination's MAC address
  - other network ⇒ send the frame to the MAC address of the **default gateway**; the IP header still contains the final destination
- every router repeats this decision with its own routing table

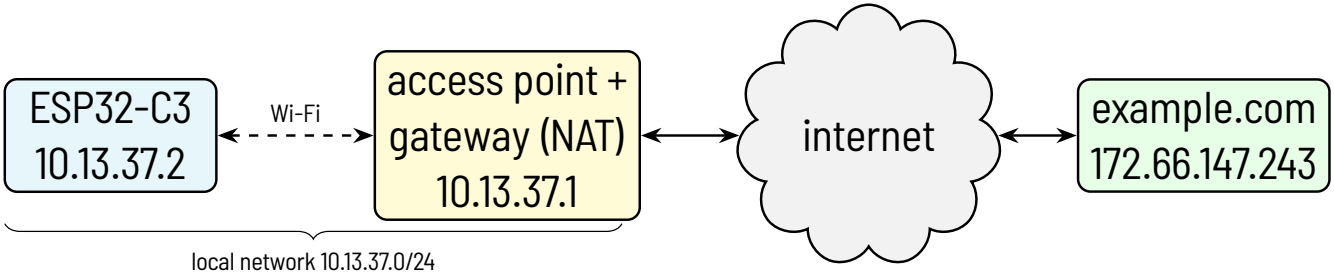



Figure 7.3.1: Our simulated device: everything outside 10.13.37.0/24 goes to the gateway

# ARP: from IP address to MAC address

- to send a frame in the local network the device needs the MAC address that belongs to an IP address (destination or gateway)
- **ARP request** as broadcast: "Who has 10.13.37.1? Tell 10.13.37.2"
- the owner answers with an **ARP reply** directly to the asker
- the result is kept for some minutes in the **ARP cache**
- IPv6 uses neighbour discovery (ICMPv6) for the same purpose

# DHCP: automatic configuration

- a new device has no address yet ⇒ it sends broadcasts (UDP, ports 68 → 67)
- four messages ("DORA")

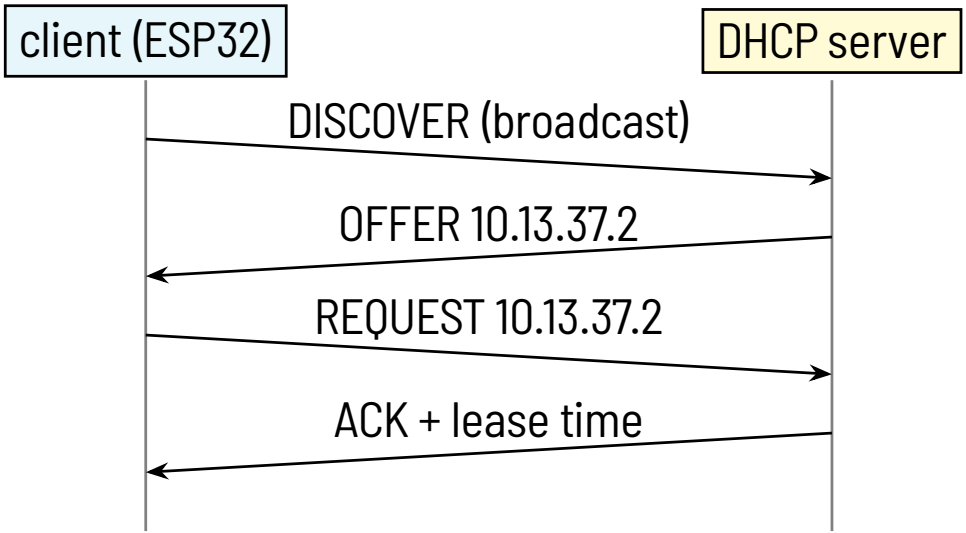



Figure 7.3.2: DHCP: Discover, Offer, Request, Acknowledge

- the ACK contains: IP address and prefix, default gateway, DNS server(s), lease time – the device must renew the lease before it expires

# Example: Wi-Fi and DHCP (C, Arduino)

```
#include <WiFi.h>

void setup() {
  Serial.begin(115200);
  WiFi.begin("Wokwi-GUEST", "", 6);          // open network, channel 6
  while (WiFi.status() != WL_CONNECTED) delay(250);

  // Layer 2: our MAC address. Layer 3: what the DHCP server assigned.
  Serial.printf("MAC address : %s\n", WiFi.macAddress().c_str());
  Serial.printf("IP address  : %s\n", WiFi.localIP().toString().c_str());
  Serial.printf("Subnet mask : %s\n", WiFi.subnetMask().toString().c_str());
  Serial.printf("Gateway     : %s\n", WiFi.gatewayIP().toString().c_str());
  Serial.printf("DNS server  : %s\n", WiFi.dnsIP().toString().c_str());
}
```

```
MAC address : 24:0A:C4:00:01:10
IP address  : 10.13.37.2
Subnet mask : 255.255.255.0
Gateway     : 10.13.37.1
DNS server  : 10.13.37.1
```

# Example: Wi-Fi and DHCP (Rust, embassy-net)

```rust
// examples/networking/esp32-rust/src/lib.rs (shortened)
let station = Config::Station(
    StationConfig::default()
        .with_ssid(SSID.try_into().unwrap())
        .with_authentication(AuthenticationMethodConfig::Open)
        .with_channel(6),
);
let controller =
    WifiController::new(wifi, ControllerConfig::default().with_initial_config(
    station))
        .unwrap();
// The IP stack (embassy-net, based on smoltcp) runs on top of the Wi-Fi interface.
let (stack, runner) = embassy_net::new(
    Interface::station(),
    embassy_net::Config::dhcpv4(Default::default()),
    RESOURCES.init(StackResources::new()),
    seed,
);
spawner.spawn(wifi_task(controller).unwrap()); // keeps the Wi-Fi connected
spawner.spawn(net_task(runner).unwrap());      // processes the packets
stack.wait_config_up().await;                  // until DHCP is done
```

- `async`/`await`: while a task waits (for DHCP, for data) the executor runs other tasks – no threads, no blocking (more in chapter Operating Systems)

# The IPv4 header and ICMP

- important fields of the IPv4 header (20 bytes without options)
  - source and destination address
  - **protocol**: what is inside – 6 = TCP, 17 = UDP, 1 = ICMP
  - **TTL** (time to live): decremented by every router, the packet is dropped at 0 – prevents endless loops
  - header checksum, total length, fragmentation fields
- **MTU**: largest packet a link can carry, 1500 bytes on Ethernet and Wi-Fi; larger packets must be fragmented – TCP avoids this by choosing small enough segments
- **ICMP**: error and diagnostic messages of the network layer
  - `ping`: echo request / echo reply
  - `traceroute`: packets with TTL 1, 2, 3, … – each router on the way answers "time exceeded"
  - not available in the Wokwi simulation

# IPv6

- 128 bit addresses, written in hexadecimal groups: `2001:db8:0:1::2` (`::` = a run of zero groups)
- enough addresses for every device – no NAT necessary, devices can be reachable directly (a firewall decides what is allowed)
- every interface has a **link-local** address (`fe80::/10`) at once, without any server
- addresses can be configured automatically from the router's announcements (SLAAC), DHCPv6 is optional
- simpler header with fixed length (40 bytes), no fragmentation by routers
- mandatory in new IoT standards: Thread and Matter run over IPv6 only
- IPv4 and IPv6 are not compatible: a device that supports both runs two stacks side by side (dual stack)

# DNS: names instead of addresses

- people and programs use names (`example.com`); IP needs addresses
- the device asks its DNS server (address from DHCP) with a small UDP request to port 53
- the answer contains one or more addresses and a lifetime (TTL) for caching
- record types: A (IPv4 address), AAAA (IPv6 address), CNAME (alias), MX (mail server)
- never hard-code server IP addresses in a device: they change, names stay

```rust
// DNS: name -> IPv4 address (UDP request to the DNS server from DHCP)
let addr = stack.dns_query(HOST, DnsQueryType::A).await.unwrap()[0];
println!("{HOST} = {addr}");            // example.com = 172.66.147.243
```

# 7.4 Transport Layer: UDP and TCP

## Ports

- 16 bit number that selects the program (service) on a host
- well-known ports of servers: 53 DNS, 67/68 DHCP, 80 HTTP, 123 NTP, 443 HTTPS, 1883 MQTT, 8883 MQTT over TLS
- the client usually gets a random ("ephemeral") port from its stack
- a TCP connection is identified by four values: source address, source port, destination address, destination port
  - this is how a web server can talk to thousands of clients on the same port 80

# UDP: User Datagram Protocol

- header of only 8 bytes: source port, destination port, length, checksum
- no connection, no acknowledgement, no repetition, no order
- each `send` produces exactly one datagram, each `receive` returns exactly one – message boundaries are kept
- the application must handle loss itself: timeout and repeat, or simply accept it
- used where speed matters more than completeness or where a request fits into one datagram: DNS, NTP, DHCP, audio/video streaming, CoAP (a lightweight protocol for constrained devices), QUIC (the basis of HTTP/3)

# UDP example: time from an NTP server (Rust)

```rust
let mut socket = UdpSocket::new(stack, &mut rx_meta, &mut rx_buf, &mut tx_meta, &mut tx_buf);
socket.bind(12345).unwrap(); // local port
loop {
    // 48 byte NTP packet: first byte = LI 0, version 4, mode 3 (client)
    let mut request = [0u8; 48];
    request[0] = 0b00_100_011;
    socket.send_to(&request, (server, 123)).await.unwrap();

    // UDP gives no guarantee: the answer may never arrive -> timeout
    let mut answer = [0u8; 48];
    match with_timeout(Duration::from_secs(3), socket.recv_from(&mut answer)).await {
        Ok(Ok((48, from))) => {
            // Transmit timestamp: seconds since 1900 in bytes 40..44 (big endian)
            let secs = u32::from_be_bytes(answer[40..44].try_into().unwrap()) as u64;
            println!("unix time {}", secs - NTP_TO_UNIX);
        }
        _ => println!("no answer within 3 s (UDP datagram lost?)"),
    }
    Timer::after(Duration::from_secs(10)).await;
}
```

# TCP: Transmission Control Protocol

- **connection-oriented**: set-up before data, orderly shutdown afterwards
- **reliable byte stream**
  - every byte has a **sequence number**; the receiver acknowledges (ACK) the next byte it expects
  - missing acknowledgement $\Rightarrow$ the sender repeats the data after a timeout
  - the receiver puts segments back into the right order and drops duplicates
- **flow control**: the receiver announces how much buffer space it has left (window); the sender never sends more
- **congestion control**: the sender starts slowly and reduces its rate when packets get lost – protects the network
- header of at least 20 bytes: ports, sequence and acknowledgement number, flags (SYN, ACK, FIN, RST, PSH), window, checksum

# Connection set-up and shutdown

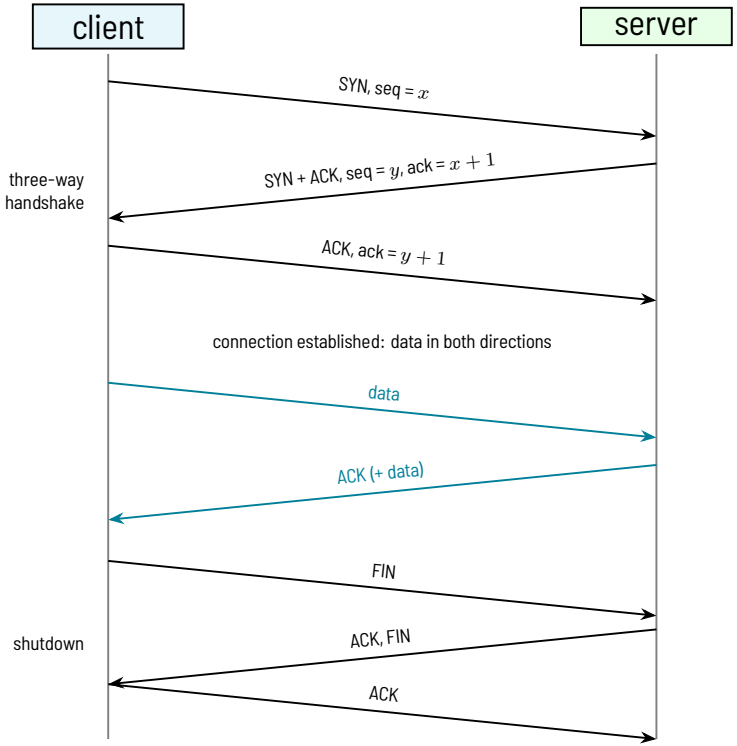



Figure 7.4.1: TCP: three-way handshake, data transfer and shutdown

- both sides choose random initial sequence numbers $x$ and $y$
- `RST` instead of FIN: abort, e.g. when nobody listens on the port

## A byte stream has no message boundaries

- TCP may split one `send()` into several segments, or merge several `send()`s into one segment
- one `recv()` can therefore return half a message or two messages at once
- the application protocol must mark where a message ends
  - a length field in front of the message (MQTT, our own binary protocols)
  - a delimiter such as a line break (HTTP headers, many text protocols)
  - end of the connection (HTTP with `Connection: close`)
- a lesson from the examples: the public MQTT test broker sometimes dropped the connection when a packet arrived split into two TCP segments – correct per standard, but real devices have to live with such servers (our Rust code now sends each packet with one write)

# UDP or TCP?

| | UDP | TCP |
|---|---|---|
| connection | none | set-up and shutdown (3 + 4 segments) |
| reliability | none – loss, duplicates, wrong order possible | complete, in order |
| data unit | datagram, boundaries kept | byte stream |
| header | 8 bytes | 20 – 60 bytes |
| memory on the device | small | buffers per connection (several KB) |
| broadcast / multicast | yes | no |
| typical use | DNS, NTP, DHCP, streaming, CoAP | HTTP, MQTT, file transfer, remote shell |

# 7.5 Socket Programming

## The socket API

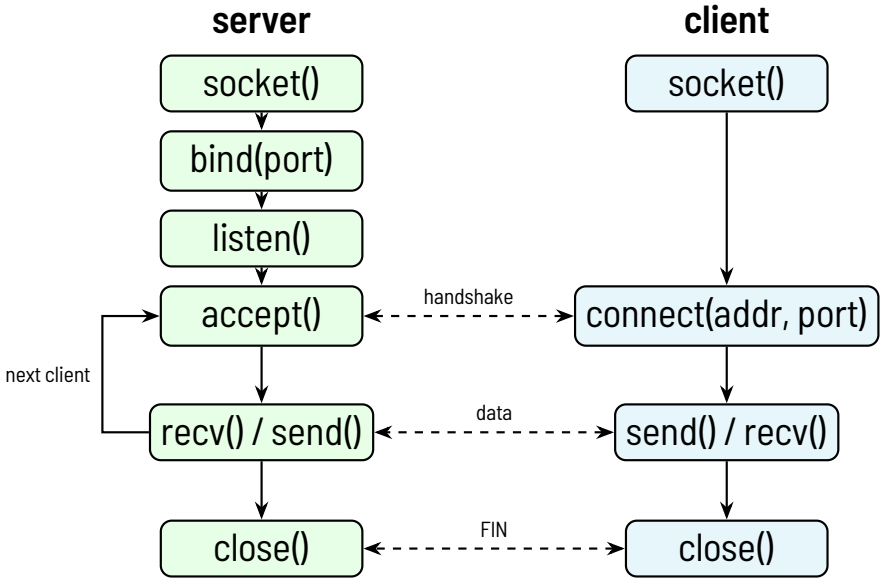



Figure 7.5.1: Order of the socket calls for a TCP server and a TCP client

- `accept()` returns a **new** socket for each connection; the listening socket stays open for further clients

# TCP echo server (C, BSD sockets)

- `htons()`/`htonl()`: the network uses big endian, x86 and ARM (usually) little endian

```c
// 1. socket(): an endpoint for IPv4 (AF_INET) and TCP (SOCK_STREAM)
int server = socket(AF_INET, SOCK_STREAM, 0);

// 2. bind(): local address and port (INADDR_ANY = all interfaces)
struct sockaddr_in addr = {0};
addr.sin_family = AF_INET;
addr.sin_addr.s_addr = htonl(INADDR_ANY);
addr.sin_port = htons(port);              // network byte order = big endian
bind(server, (struct sockaddr *)&addr, sizeof addr);
// 3. listen(): accept connection requests, queue up to 5
listen(server, 5);
for (;;) {
  // 4. accept(): wait for a client; returns a NEW socket for this connection
  int client = accept(server, (struct sockaddr *)&client_addr, &len);
  // 5. recv()/send(): TCP is a byte stream
  while ((n = recv(client, buf, sizeof buf, 0)) > 0) {
    send(client, buf, n, 0);
  }
  close(client);                          // n == 0: the client has closed its side
}
```

# TCP echo server (Rust standard library)

```rust
fn handle(mut stream: TcpStream) -> std::io::Result<()> {
    let mut buf = [0u8; 256];
    loop {
        let n = stream.read(&mut buf)?; // TCP is a byte stream, not messages
        if n == 0 { break; }            // the client has closed its side (FIN)
        stream.write_all(&buf[..n])?;
    }
    Ok(())
}

fn main() -> std::io::Result<()> {
    // bind() + listen() in one step
    let listener = TcpListener::bind(format!("0.0.0.0:{port}"))?;
    for stream in listener.incoming() {
        // accept(): one new stream per connection
        let stream = stream?;
        thread::spawn(move || handle(stream));    // one thread per client
    }
    Ok(())
}
```

- errors are values (`Result`) – `?` passes them on; the C version has to check every return value by hand

# The same on the microcontroller

- C (Arduino): `WiFiClient` wraps a lwIP socket – `connect()`, `print()`, `read()`, `stop()`
- Rust (embassy-net): `TcpSocket` with buffers provided by the caller – no heap needed
  - `connect().await`, `write_all().await`, `read().await`
  - while a socket waits, the executor runs other tasks
- the buffer sizes decide how much RAM a connection costs and how fast it can be (window size)

```rust
// TCP: the socket needs buffers for received and not yet acknowledged data
let mut rx_buf = [0u8; 2048];
let mut tx_buf = [0u8; 512];
let mut socket = TcpSocket::new(stack, &mut rx_buf, &mut tx_buf);
socket.set_timeout(Some(Duration::from_secs(10)));
socket.connect((addr, 80)).await.unwrap(); // three-way handshake
```

# 7.6 Application Protocols: HTTP and MQTT

## HTTP: request and response

- text protocol: request line, header lines, empty line, optional body
- methods: GET (read), POST (create / send data), PUT (replace), DELETE
- status codes: 200 OK, 301 moved, 404 not found, 500 server error
- **REST** APIs: resources addressed by URLs, data usually as JSON
- HTTPS = HTTP over TLS (port 443) – the normal case today

```
GET / HTTP/1.1                          <- request line: method, path, version
Host: example.com                       <- header lines
Connection: close
                                        <- empty line: end of the header
HTTP/1.1 200 OK                         <- status line of the response
Content-Type: text/html; charset=utf-8
Transfer-Encoding: chunked              <- body comes in pieces with length prefix
...
2c9                                     <- next chunk: 0x2c9 = 713 bytes
<!doctype html><html lang=en> ...
0                                       <- chunk of length 0: end of the body
```

# HTTP by hand (Rust, raw TCP)

```rust
// DNS: name -> IPv4 address (UDP request to the DNS server from DHCP)
let addr = stack.dns_query(HOST, DnsQueryType::A).await.unwrap()[0];

let mut socket = TcpSocket::new(stack, &mut rx_buf, &mut tx_buf);
socket.connect((addr, 80)).await.unwrap(); // three-way handshake

// HTTP/1.1 request: request line, header lines, empty line
let request = "GET / HTTP/1.1\r\nHost: example.com\r\nConnection: close\r\n\r\n";
socket.write_all(request.as_bytes()).await.unwrap();

// Read until the server closes the connection (read returns 0).
let mut buf = [0u8; 512];
loop {
    match socket.read(&mut buf).await {
        Ok(0) | Err(_) => break,
        Ok(n) => print!("{}", core::str::from_utf8(&buf[..n]).unwrap_or("<binary>"))
    ,
    }
}
```

- every layer of this chapter appears in these lines: Wi-Fi, DHCP, DNS, TCP, HTTP
- in practice an HTTP client library (C: `HTTPClient`, Rust: `reqwless`) handles chunking, redirects and TLS

# MQTT: publish and subscribe

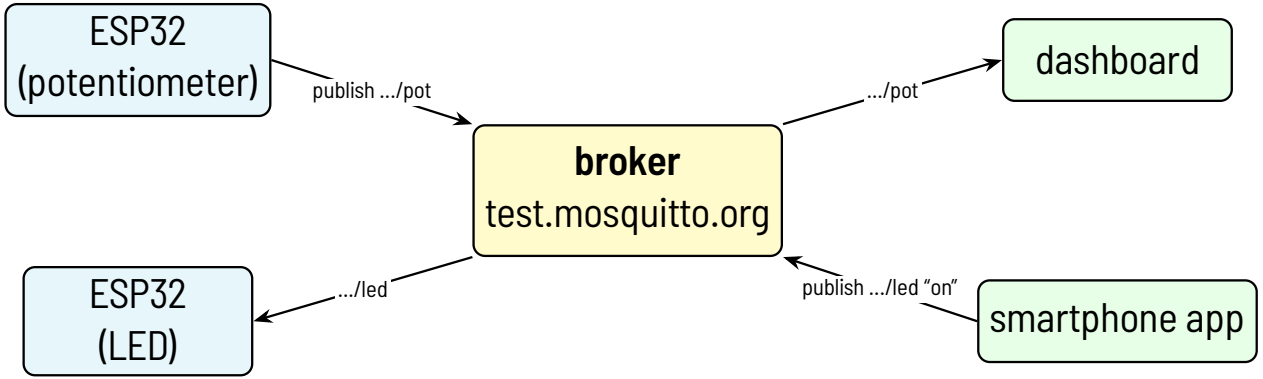



Figure 7.6.1: MQTT: publishers and subscribers only know the broker and the topics

- every client opens **one** TCP connection to the broker (port 1883, with TLS 8883) – also devices behind NAT can receive messages
- **topics** are hierarchical strings: `rwu-ec/device42/pot`
- wildcards for subscriptions: `+` one level (`rwu-ec/+/pot`), `#` all levels below (`rwu-ec/#`)

## MQTT features

- **quality of service** per message
  - QoS 0 “at most once”: send and forget
  - QoS 1 “at least once”: repeated until acknowledged – duplicates possible
  - QoS 2 “exactly once”: four-way handshake, most overhead
- **retained** message: the broker keeps the last message of a topic and sends it to every new subscriber at once (e.g. the current set point)
- **last will**: a message the broker publishes when a client disappears without saying goodbye (“device42/status = offline”)
- **keep alive**: the client sends at least one packet per interval (PINGREQ if nothing else); otherwise the broker assumes the connection is dead
- MQTT 3.1.1 is the most widely supported version; MQTT 5 adds error codes, message expiry, user properties

# The MQTT CONNECT packet byte by byte

- recorded from our Rust example (`src/mqtt.rs` builds it by hand)

| bytes (hex) | field | meaning |
|---|---|---|
| 10 | fixed header | packet type 1 = CONNECT, flags 0 |
| 17 | remaining length | 23 bytes follow (variable length: 7 bits per byte) |
| 00 04 4d 51 54 54 | protocol name | length 4, “MQTT” |
| 04 | protocol level | 4 = MQTT 3.1.1 |
| 02 | connect flags | clean session |
| 00 3c | keep alive | 60 seconds |
| 00 0b 72 77 75 2d … | client identifier | length 11, “rwu-ec-demo” |

- the broker answers with CONNACK `20 02 00 00`: type 2, length 2, no session present, return code 0 = accepted
- every MQTT packet has this structure: 1 byte type and flags, length, then the content – the length solves the “no message boundaries” problem of TCP

# MQTT example: sensor value and LED (C, PubSubClient)

```
WiFiClient tcp;
PubSubClient mqtt(tcp);
// Called by mqtt.loop() for every received PUBLISH packet.
void onMessage(char *topic, byte *payload, unsigned int len) {
  String msg((const char *)payload, len);
  if (msg == "on") digitalWrite(LED, HIGH);
  if (msg == "off") digitalWrite(LED, LOW);
}
void loop() {
  if (!mqtt.connected()) {                    // (re)connect: CONNECT + SUBSCRIBE
    if (mqtt.connect(DEVICE)) mqtt.subscribe(TOPIC_LED);
    else { delay(2000); return; }
  }
  mqtt.loop();                                // receive packets, keep-alive

  static uint32_t last = 0;
  if (millis() - last >= 2000) {
    last = millis();
    char text[8];
    snprintf(text, sizeof text, "%d", analogRead(POT));    // 12 bit: 0..4095
    mqtt.publish(TOPIC_POT, text);
  }
}
```

# MQTT example: sensor value and LED (Rust, async)

```rust
socket.connect((broker, 1883)).await.unwrap(); // MQTT without TLS
mqtt::connect(&mut socket, DEVICE).await.unwrap();
mqtt::subscribe(&mut socket, TOPIC_LED).await.unwrap();

let (mut next_publish, mut packet) = (Instant::now(), [0u8; 256]);
loop {
    match select(mqtt::receive(&mut socket, &mut packet), Timer::at(next_publish)).await {
        Either::First(Ok((header, len))) => {
            if mqtt::packet_type(header) == 3 {            // PUBLISH
                if let Some((_topic, payload)) = mqtt::parse_publish(&packet[..len]) {
                    if payload == b"on" { led.set_high() } else if payload == b"off" { led.set_low() }
                }
            }
        }
        Either::Second(()) => {
            let raw: u16 = nb::block!(adc.read_oneshot(&mut pot)).unwrap();
            mqtt::publish(&mut socket, TOPIC_POT, text.as_bytes()).await.unwrap();
            next_publish += Duration::from_secs(2);
        }
    }
}
```

# HTTP or MQTT?

| | HTTP (REST) | MQTT |
|---|---|---|
| pattern | request / response, client asks | publish / subscribe via broker |
| connection | usually one per request | one permanent connection |
| server → device | difficult (device must poll, or WebSocket) | simple: device subscribes |
| overhead per message | hundreds of bytes of headers | a few bytes |
| infrastructure | any web server | broker needed |
| typical use | web services, configuration pages, OTA downloads | telemetry, commands, many devices |

# 7.7 Security and Analysis

## Securing connected devices

- **TLS** (transport layer security) between TCP and the application
  - encryption: nobody on the way can read the data
  - integrity: changes are detected
  - authentication: the server proves its identity with a certificate; the device checks it against a stored root certificate
  - costs on a microcontroller: several tens of KB of RAM, handshake of up to a few seconds
- authentication of the device: user name/password or a client certificate per device
- never put credentials into the source code or the repository; one secret for all devices means all are broken at once
- no open ports that are not needed; no default passwords
- signed software updates – and a way to install them over the network
- EU Cyber Resilience Act: products with digital elements must meet security requirements (vulnerability reporting from 09/2026, full obligations from 12/2027)

## Looking at the traffic: Wireshark

- Wokwi can record the network traffic of the simulated device as a `.pcap` file – open it in Wireshark
- the same tool is used for real networks (capture on the PC, or with a mirror port on a switch)
- useful display filters
  - `dhcp`, `dns`, `arp` – the start-up of the device
  - `tcp.flags.syn == 1` – connection set-ups
  - `http`, `mqtt` – decoded application protocols
  - `ip.addr == 10.13.37.2` – everything of our device
- "Follow TCP stream" shows the byte stream of a connection as text – the MQTT client id and the LED commands are plainly visible, which is exactly what TLS prevents

## Exercises

- Run `wifi_dhcp`. Which part of the IP address is the network part? How many devices fit into this network?
- Record `http_get` as pcap. Find DHCP (four messages), the DNS query, the three-way handshake, the request and the FIN segments. How many bytes of headers were sent for the request?
- Change `udp_ntp` so that it prints the date as well. Why must the code care about the year 2036?
- MQTT: choose your own device name, switch the LED from MQTT Explorer and publish the potentiometer value only when it changes by more than 50.
- Run the echo server and the client on your PC (or in two Replit shells), also mixing C and Rust. Then ask a fellow student to connect to your server from another network. Why does this fail without port forwarding on your router?
- Extend the Rust MQTT client by PINGREQ so that the connection survives when nothing is published for more than 60 seconds.

# 8 Operating Systems

# 8.1 Why an Operating System?

## Program structures without an operating system

- **super loop**: `for(;;) { read(); control(); show(); }`
  - simple, deterministic, no extra memory
  - the reaction time is the duration of the whole loop – one slow function delays everything
  - waiting ("`delay(500)`") blocks all other jobs
- **foreground / background**: interrupts for urgent events (foreground), super loop for the rest (background)
  - fast reaction to events
  - the ISRs must stay short; shared variables need protection; long work still ends up in the loop
- both are fine for small systems – many products never need more

## What an RTOS adds

- **tasks** (threads): independent functions, each with its own stack and priority
- **scheduler**: decides which ready task runs; preempts a task when a more important one becomes ready
- **time services**: delays, periodic execution, timeouts
- **communication and synchronisation**: queues, semaphores, mutexes, event flags
- **memory management**: task stacks, heap for dynamic objects
- costs: a few KB of code (FreeRTOS kernel about 6–12 KB), RAM for every task stack, some microseconds per task switch, and new kinds of errors (race conditions, deadlocks)

## Real time

- real time means **predictable**, not "fast": the result must be there before its **deadline**
  - **hard** real time: a missed deadline is a failure (airbag, motor control)
  - **soft** real time: a missed deadline reduces the quality (audio dropout, slow display)
- important figures
  - **latency**: time from an event to the start of the reaction
  - **jitter**: variation of this time or of a period
  - **WCET** (worst case execution time): the longest time a piece of code can take – the average is not enough
- an RTOS makes timing analysable: the highest priority ready task always runs, kernel operations have bounded duration
- general purpose systems (Windows, standard Linux) optimise throughput and fairness instead

# 8.2 Tasks and Scheduling

## Task states

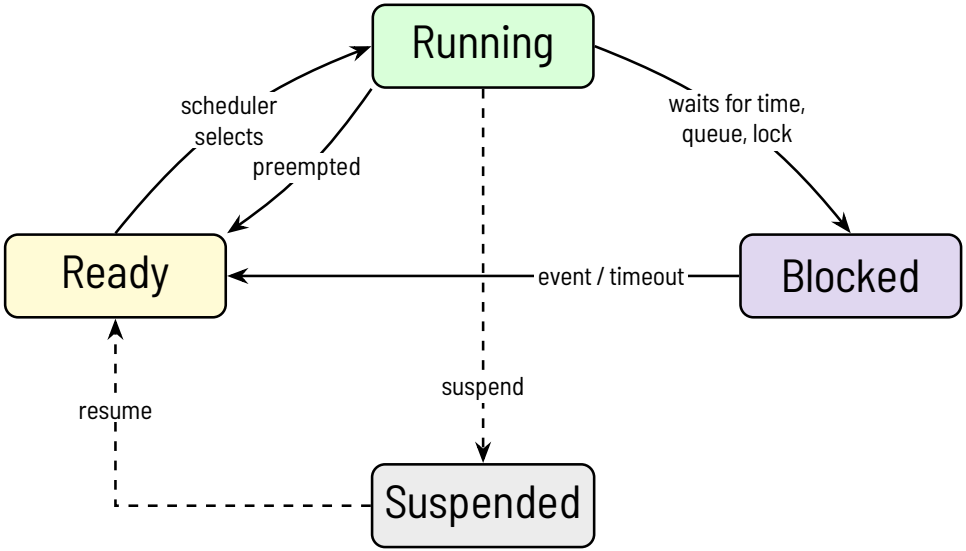



Figure 8.2.1: Task states in FreeRTOS

- on a single core exactly one task is Running; the idle task (lowest priority) runs when nothing else is ready

# Preemptive priority scheduling

- every task has a fixed priority (FreeRTOS: higher number = more important)
- the scheduler always runs the ready task with the highest priority
- when a more important task becomes ready (timeout, message, interrupt), the running task is interrupted at once – **preemption**
- tasks with the same priority share the CPU in turns (time slicing at every tick)
- the **tick** interrupt (1 ms on the ESP32) drives delays and time slicing
- the context switch itself is done in a special low-priority interrupt (on Cortex-M: PendSV), so it never interrupts another ISR

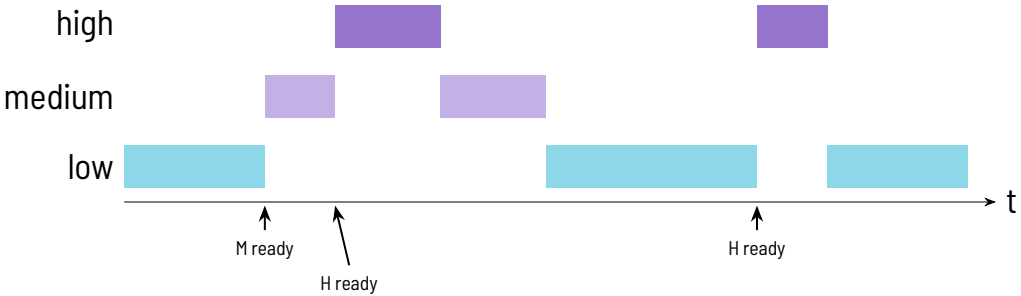



Figure 8.2.2: H preempts M, M preempts L; a task continues where it was interrupted

## Choosing priorities

- priority follows urgency (deadline), not "importance" of the function
- **rate monotonic** assignment for periodic tasks: shorter period $\Rightarrow$ higher priority
  - with $n$ independent periodic tasks all deadlines are met if the CPU utilisation $U = \sum C_i/T_i \leq n(2^{1/n} - 1)$ (about 69 % for large $n$; $C_i$ = execution time, $T_i$ = period)
- long computations get a low priority; reactions to events a high one
- a task that never blocks starves all tasks with lower priority – every task must wait somewhere
- ISRs are always more urgent than any task: keep them short and hand the work to a task

# FreeRTOS: creating tasks

```
void blinkTask(void *param) {
  pinMode(LED, OUTPUT);
  for (;;) {
    digitalWrite(LED, !digitalRead(LED));
    vTaskDelay(pdMS_TO_TICKS(500));            // blocked for 500 ms
  }
}
void heartbeatTask(void *param) {
  TickType_t lastWake = xTaskGetTickCount();
  for (uint32_t n = 0;; n++) {
    Serial.printf("heartbeat %lu at %lu ms\n", (unsigned long)n, (unsigned long)
    millis());
    xTaskDelayUntil(&lastWake, pdMS_TO_TICKS(1000));    // fixed period, no drift
  }
}
void setup() {
  Serial.begin(115200);
  // function, name, stack size (ESP-IDF: in BYTES), parameter, priority, handle
  xTaskCreate(blinkTask, "blink", 2048, NULL, 2, NULL);
  xTaskCreate(heartbeatTask, "heartbeat", 4096, NULL, 1, NULL);
}
```

- `vTaskDelay`: relative, the period drifts; `xTaskDelayUntil`: absolute (Wokwi: 1178, 2178, 3178 ms)

# Embassy: tasks as async functions (Rust)

```rust
/// A task is an async function. It runs until it awaits something and
/// then gives the CPU to the next ready task.
#[embassy_executor::task]
async fn blink(mut led: Output<'static>) {
    let mut ticker = Ticker::every(Duration::from_millis(500));
    loop {
        led.toggle();
        ticker.next().await; // fixed period, does not drift
    }
}

#[esp_rtos::main]
async fn main(spawner: Spawner) -> ! {
    // ... init ...
    let led = Output::new(peripherals.GPIO4, Level::Low, OutputConfig::default());
    spawner.spawn(blink(led).unwrap());
    spawner.spawn(heartbeat().unwrap());
    loop {
        embassy_time::Timer::after_secs(3600).await;
    }
}
```

- the LED is **moved** into the task: no other part of the program can use it any more

## How Embassy differs from FreeRTOS

- the compiler turns every `async fn` into a state machine; `.await` = "save the state, return to the executor"
- **no stack per task**: the state machine contains only the variables that live across an `.await`, and its size is known at compile time ⇒ all memory is static, no stack overflows of tasks
- **cooperative** within one executor: a task runs until its next `.await` – a long computation without `.await` blocks all other tasks
- priorities: several executors, e.g. an `InterruptExecutor` that runs inside an interrupt with higher priority
- when no task is ready, the executor puts the CPU to sleep (`wfi`) – good for battery devices
- hardware events wake tasks directly: the interrupt handler calls the task's **waker**

# 8.3 Communication and Synchronisation

## Queues: passing data between tasks

- a FIFO buffer with a fixed number of elements; the data is **copied** into the queue
- sending to a full queue and receiving from an empty queue **block** the task (with an optional timeout)
- the receiver needs no polling: it sleeps until data arrives
- decouples producer and consumer: different speeds, different priorities

```
QueueHandle_t samples = xQueueCreate(8, sizeof(uint16_t));    // 8 elements

void producerTask(void *param) {                    // every 100 ms
  for (;;) {
    uint16_t raw = analogRead(POT);
    xQueueSend(samples, &raw, portMAX_DELAY);    // waits if the queue is full
    xTaskDelayUntil(&lastWake, pdMS_TO_TICKS(100));
  }
}
void consumerTask(void *param) {                    // average of 10 values
  for (;;) {
    uint32_t sum = 0;
    for (int i = 0; i < 10; i++) {
      uint16_t value;
      xQueueReceive(samples, &value, portMAX_DELAY);    // waits for data
```

```
16        sum += value;
17      }
18      Serial.printf("average of 10 samples: %lu\n", (unsigned long)(sum / 10));
19    }
20  }
```

# Queues in Embassy: channels

```rust
/// Queue for 8 values. A full queue makes send() wait (back pressure),
/// an empty queue makes receive() wait.
static SAMPLES: Channel<CriticalSectionRawMutex, u16, 8> = Channel::new();

#[embassy_executor::task]
async fn consumer() {
    loop {
        let mut sum: u32 = 0;
        for _ in 0..10 {
            sum += SAMPLES.receive().await as u32; // waits for the next value
        }
        println!("average of 10 samples: {}", sum / 10);
    }
}

// in main (producer):
let mut ticker = Ticker::every(Duration::from_millis(100));
loop {
    let raw: u16 = nb::block!(adc.read_oneshot(&mut pot)).unwrap();
    SAMPLES.send(raw).await; // producer
    ticker.next().await;
}
```

## From interrupt to task

- **deferred interrupt handling**: the ISR only acknowledges the hardware and signals a task; the task does the real work
  - the ISR stays short $\Rightarrow$ small latency for all other interrupts
  - the work runs with a task priority and may block, print, use the network
- **semaphore**: a counter; `give` increments, `take` decrements or blocks at 0
  - binary semaphore (0/1) to signal an event; counting semaphore to count events or free resources
- in an ISR only the `...FromISR` functions are allowed: they never block, and they report whether a more important task was woken up
- FreeRTOS also offers direct **task notifications**: faster and smaller than a semaphore when exactly one task waits

# Interrupt to task: C and Rust

```
void IRAM_ATTR onButton() {            // ISR: as short as possible
  BaseType_t woken = pdFALSE;
  xSemaphoreGiveFromISR(buttonSem, &woken);    // never the normal API in an ISR
  portYIELD_FROM_ISR(woken);           // switch at once if a higher task woke up
}
void buttonTask(void *param) {
  for (;;) {
    xSemaphoreTake(buttonSem, portMAX_DELAY);    // sleep until the ISR gives
    // ... toggle LED, print, debounce ...
  }
}
```

```
loop {
    button.wait_for_falling_edge().await; // interrupt wakes the task
    presses += 1;
    led.toggle();
    Timer::after_millis(50).await; // debounce: ignore the bouncing
    button.wait_for_high().await; // wait until released
}
```

- in Rust the interrupt, the flag and the waiting are hidden behind one `.await`; tested in Wokwi with bouncing buttons: two presses → exactly two events

# Race conditions

- two tasks change the same variable with read – modify – write
- a task switch between read and write ⇒ the other task's update is overwritten ("lost update")
- the error appears rarely and randomly – very hard to find by testing

```
for (int i = 0; i < 1000; i++) {      // in two tasks of equal priority
  if (useMutex) xSemaphoreTake(lock, portMAX_DELAY);
  uint32_t value = counter;           // read
  taskYIELD();                        // provoke a task switch right here
  counter = value + 1;                // modify-write
  if (useMutex) xSemaphoreGive(lock);
}
```

```
without mutex: counter = 1001 (expected 2000)
with    mutex: counter = 2000 (expected 2000)
```

- the `taskYIELD()` makes the error certain; in real code an interrupt or the tick causes it from time to time

# Mutual exclusion

- the code between read and write is a **critical section**: only one task at a time may execute it
- ways to protect it
  - disable interrupts / the scheduler: very short sections only (a few instructions), affects the whole system
  - **mutex** (mutual exclusion): a lock that only the task that took it may release; other tasks block while it is taken
- in Rust, data shared between tasks must be wrapped in a type that guarantees exclusive access; writing to a plain global variable requires `unsafe`

```rust
static COUNTER: Mutex<CriticalSectionRawMutex, u32> = Mutex::new(0);

for _ in 0..1000 {
    let mut counter = COUNTER.lock().await; // wait until the mutex is free
    let value = *counter; // read
    Timer::after(Duration::from_micros(10)).await; // other task may run now
    *counter = value + 1; // modify-write
} // guard dropped here -> mutex released
```

- the data is only reachable through the lock, and the lock is released automatically – forgetting it is impossible

## Deadlock

- two tasks wait for each other forever: A holds lock 1 and waits for lock 2, B holds lock 2 and waits for lock 1
- possible only if all four conditions hold: mutual exclusion, hold and wait, no preemption of locks, circular wait
- prevention in practice
  - always take several locks in the same, fixed order
  - hold locks as short as possible; never block (queue, delay) while holding a lock
  - use timeouts instead of waiting forever, and report the timeout
  - better: avoid sharing – let one task own the resource and send it requests through a queue

# Priority inversion

- a low priority task L holds a lock that the high priority task H needs ⇒ H must wait for L (unavoidable, but short)
- a medium priority task M, which does not need the lock, preempts L ⇒ H effectively waits for M: the priorities are inverted
- famous case: Mars Pathfinder (1997) – repeated resets by the watchdog until priority inheritance was switched on remotely
- solution: **priority inheritance** – while L holds a mutex that H waits for, L runs with H's priority, so M cannot preempt it
  - FreeRTOS mutexes do this; binary semaphores do not

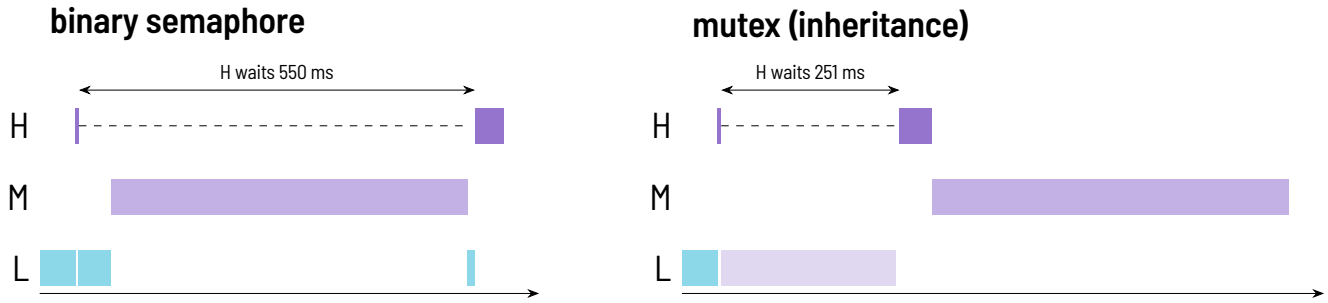



Figure 8.3.1: Measured in Wokwi (`priority_inversion.ino`): L holds the lock 300 ms, M runs 500 ms

## Memory in an RTOS

- every task needs its own stack – too small is the most common RTOS error
  - the stack overflows silently into other data; use the overflow check of the kernel (`configCHECK_FOR_STACK_OVERFLOW`) and measure the high water mark (`uxTaskGetStackHighWaterMark`)
  - `printf` and floating point need much stack – on the ESP32 4 KB are a safe start for such tasks
- kernel objects (tasks, queues, semaphores) can be allocated
  - dynamically from the RTOS heap: simple, but the heap can fragment and allocation can fail at run time
  - statically (`xTaskCreateStatic`, …): all memory is known at link time – preferred in safety-related systems
- FreeRTOS offers several heap implementations: from "allocate only, never free" (heap_1) to a general allocator that merges free blocks (heap_4)
- Embassy: everything static; the size of every task's state is checked by the compiler

# 8.4 Case Study: a Controller and its Simulated Environment

## The embedded paradigm in the simulator

- recall the definition: an embedded system is part of a larger technical system and interacts with it through **sensors** and **actuators**
- the program closes a **loop**: it changes the process, the process changes the measurements, the measurements change the program's next decision
- a test that only feeds fixed values into the program misses this loop – and misses most errors that matter
- in the simulator we can model the environment as well:
  - **custom chips** in Wokwi: own parts written in C, with pins, I2C/SPI/UART, timers and controls on the part
  - the same firmware binary that would be flashed runs against the model – like a hardware-in-the-loop test bench, where the hardware is virtual as well

# The setup: program, interfaces, environment

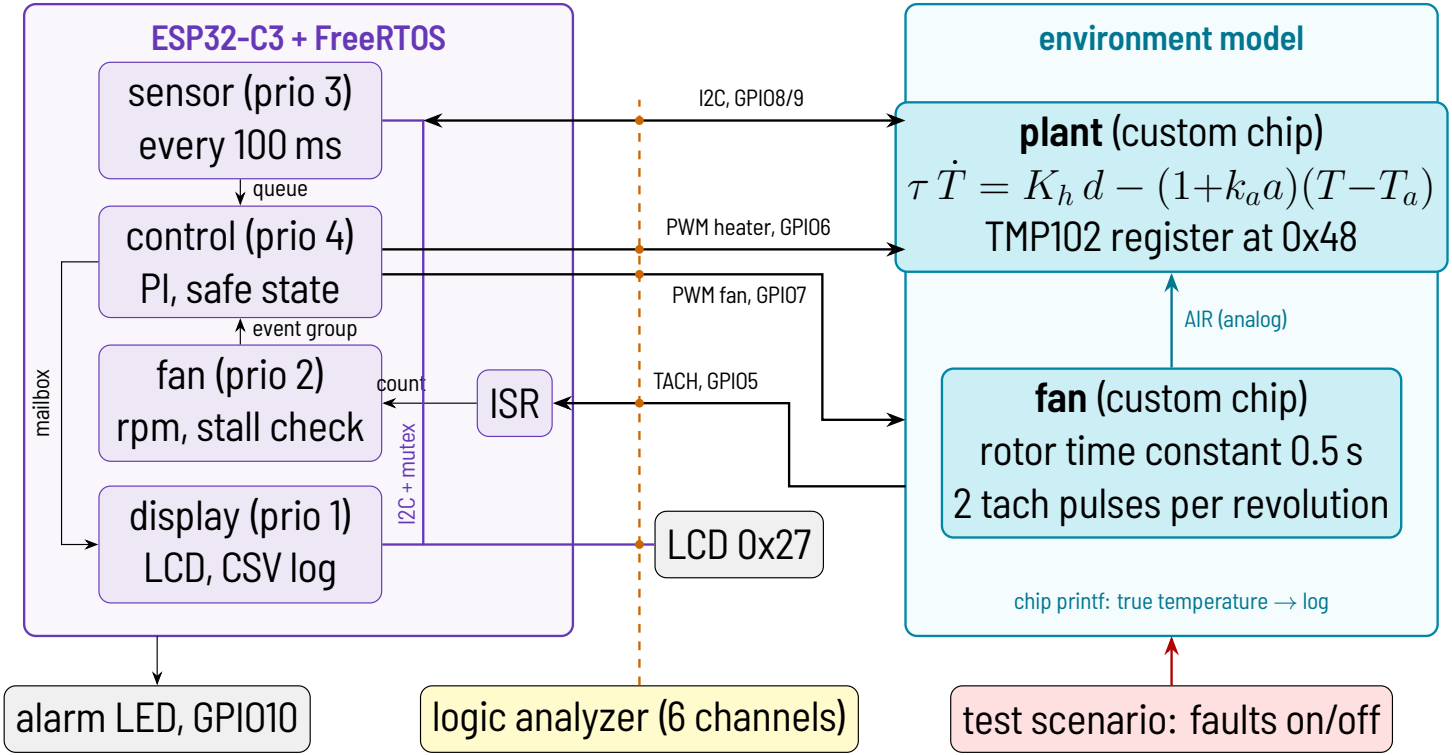



Figure 8.4.1: Climate chamber: the FreeRTOS program on the left knows the environment on the right only through its interfaces

# Custom chips: modelling the environment

- a chip = `name.chip.json` (pins, controls, display) + `name.chip.c`, compiled to WebAssembly – in the browser automatically, locally with `wokwi-cli chip compile`
- the chip API: edges (`pin_watch`), time steps (`timer_start`), analog pins (`pin_adc_read`, `pin_dac_write`), bus devices (`i2c_init`), controls on the part (`attr_read`)

```c
static void on_step(void *user_data) {              // every 10 ms of simulated time
  chip_t *c = user_data;
  float duty = c->high_ns / (STEP_US * 1000.0f);  // heater PWM, measured from the edges
  float air = pin_adc_read(c->air) / 3.3f;         // from the fan chip
  float ambient = attr_read_float(c->ambient_attr);    // slider on the part
  c->temp += dt / TAU_S * (K_HEAT * duty - (1 + K_AIR * air) * (c->temp - ambient));
}
static bool on_connect(void *user_data, uint32_t address, bool read) {    // I2C
  chip_t *c = user_data;
  if (attr_read(c->fault_attr)) return false;      // injected fault: NACK
  c->latched = c->pointer == 0 ? temp_register(c) : 0x60A0;    // as in the TMP102
  return true;
}
```

# The program: four tasks

| task | prio | job | communication |
|---|---|---|---|
| control | 4 | PI controller, safe state on faults | waits on queue (timeout 500 ms) |
| sensor | 3 | reads TMP102 every 100 ms | I2C under mutex, sends to queue |
| fan | 2 | rpm from tach pulses every 500 ms, stall check | ISR counter, event group |
| display | 1 | LCD and CSV log every 500 ms | mailbox (`xQueueOverwrite`), I2C under mutex |

```
if (xQueueReceive(measurements, &m, pdMS_TO_TICKS(500)) == pdTRUE) {
  temp = m.temp;
  xEventGroupClearBits(faults, SENSOR_LOST);
} else {
  xEventGroupSetBits(faults, SENSOR_LOST);    // no value for 500 ms
}
EventBits_t f = xEventGroupGetBits(faults);
if (f) {                                      // safe state: heater off, full air
  heat = 0;  fan = 1.0;  integral = 0;
} else { /* PI controller */ }
```

# The same program in Rust (Embassy)

```rust
static MEASUREMENTS: Channel<CriticalSectionRawMutex, f32, 4> = Channel::new();
type I2cBus = Mutex<NoopRawMutex, I2c<'static, Blocking>>;    // shared by sensor and LCD

loop {    // control loop in main: it owns the PWM channels and the alarm LED
    match with_timeout(Duration::from_millis(500), MEASUREMENTS.receive()).await {
        Ok(t) => { temp = t; set_fault(SENSOR_LOST, false); }
        Err(_) => set_fault(SENSOR_LOST, true),           // no value for 500 ms
    }
    let faults = FAULTS.lock(|f| f.get());    // critical section around a Cell
    let (heat, fan) = if faults != 0 { (0.0, 1.0) } else { /* PI controller */ };
    heater.set_duty_hw((heat * 1023.0) as u32);
    ...
}
```

- one executor, no priorities; the tach pulses are counted by a task that waits for the next edge (`wait_for_rising_edge`)
- own LCD driver (40 lines): an update takes 29 ms instead of 95 ms – and now it overlaps a sensor read: the trace shows the read **waiting 7.5 ms for the mutex**
- found in the simulator: the async I2C driver stopped the whole executor at the first transfer – the blocking driver works (one transfer $\leq$ 0.5 ms)

# Looking at the interfaces: the logic analyzer

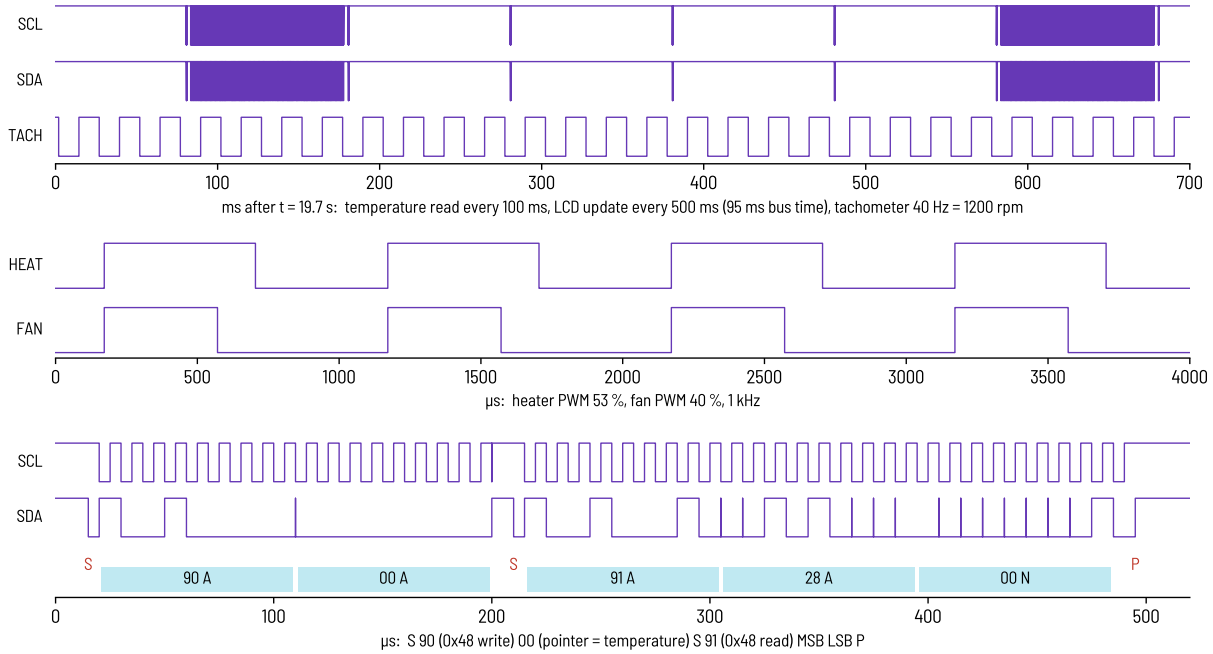



Figure 8.4.2: Recorded with `wokwi-cli --vcd-file`, decoded with `test/figures.py` (PulseView works as well)

## What the trace tells us

- the sensor read comes every 100.0 ms – `xTaskDelayUntil` gives a fixed period, independent of the run time of the task
- one read takes 0.5 ms at 100 kHz: `S 90 00 S 91 28 00 P` = 0x280 · 0.0625 = 40.0 °C
- the LCD occupies the shared bus for 95 ms every 500 ms – without the mutex a sensor read inside this time would mix its bytes with the LCD's
- the LCD update starts 2.8 ms after a sensor read: if it took 3 ms longer, the sensor task would block on the mutex (priority inheritance keeps the delay short)
- heater PWM 53 %, fan 40 %, tach 40 Hz ⇒ 1200 rpm: what the program sets is what the environment receives

# Fault injection with a test scenario

```
steps:
  - wait-serial: 't_ms,temp,heat,fan,rpm,faults'
  - delay: 20000ms
  - set-control: { part-id: fan,   control: stall, value: 1 }   # rotor blocked
  - delay: 10000ms
  - set-control: { part-id: fan,   control: stall, value: 0 }
  - delay: 8000ms
  - set-control: { part-id: plant, control: fault, value: 1 }   # sensor silent
  ...
```

- `wokwi-cli --scenario test/faults.yaml .` runs it without a browser – also in continuous integration
- the plant chip prints the **true** temperature, the program logs what it **measures** – in the simulator we can compare both

# Result: the program reaches the safe state

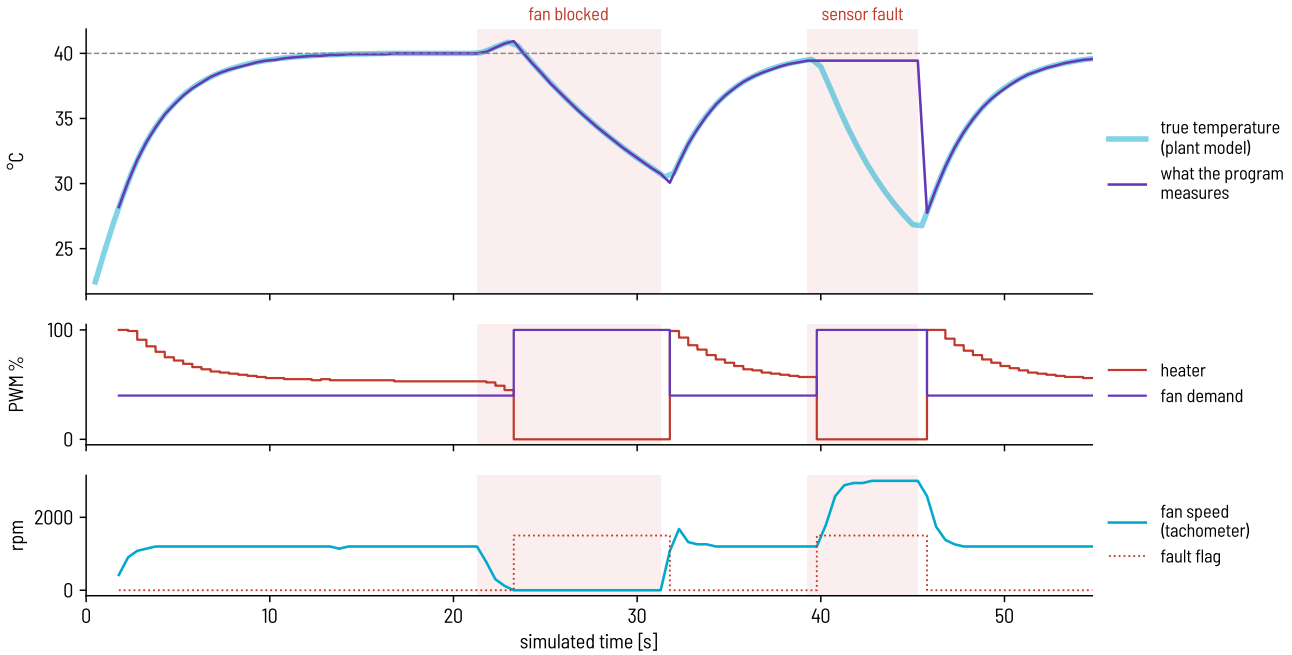



Figure 8.4.3: Blocked fan: alarm after 2.0 s (rotor slows down, then two slow 500 ms windows), heater off. Silent sensor: alarm after 0.5 s (queue timeout), heater off – the program shows the last value, the chamber cools down. Both faults clear by themselves.

# The same fault without a return value check

```
1 Wire.endTransmission(false);                    // results ignored ...
2 Wire.requestFrom(TMP102, (uint8_t)2);
3 int16_t raw = (int16_t)(Wire.read() << 8 | Wire.read());    // no data: -1, -1
```

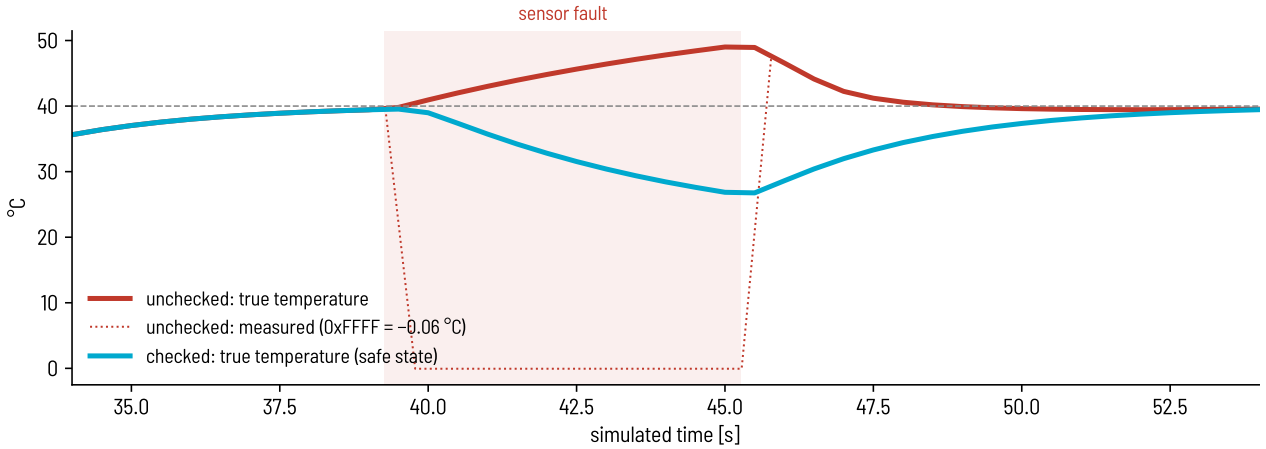



Figure 8.4.4: The program reads 0xFFFF = $-0.06\,^{\circ}\mathrm{C}$, drives the heater at 100 % and overheats the chamber – while its own log shows a cold chamber

## Why simulate the environment?

- the program is only correct **together with** its environment: the second variant compiles, runs and logs plausible values – the error is visible only in the plant
- faults on demand: blocked fan, broken sensor wire, extreme ambient temperature – dangerous or expensive on real hardware, one slider in the simulator
- reproducible: the same scenario gives the same trace, so it can run in every build (regression test)
- ground truth: the model knows the real state, a real test bench needs extra instruments
- early: program and test exist before the hardware does
- but: a model is only as good as its assumptions – here no noise, no electrical faults, no sensor delay, ideal heater
  - validate the model against measurements of the real system, then use it
  - in industry the same idea in steps: model, software, processor and hardware in the loop (MiL, SiL, PiL, HiL)

## Exercises: climate chamber

- set the ambient temperature slider to 0 °C. Why does the chamber stay below 40 °C? Compute the highest reachable temperature from the model equation. What should the program report in this case?
- add a third fault to the plant chip (the heater element breaks: no heating at any duty cycle) and extend the program so that it detects it. What is a sensible time limit?
- print the time the sensor task waits for the I2C mutex. Make the LCD output longer until the sensor read is delayed and find the delay in the logic analyzer.
- make the I2C sensor fail only for single reads (every tenth read NACKs). Does the program raise an alarm? Should it?

# 8.5 Operating Systems for Embedded Systems

## Real-time systems for microcontrollers

| system | characteristics | license |
|---|---|---|
| FreeRTOS | small kernel, very widely used, basis of ESP-IDF | MIT |
| Zephyr | complete OS with drivers, networking, Bluetooth; device tree | Apache 2.0 |
| Embassy | async Rust: executor, HALs, networking, USB, Bluetooth | MIT / Apache 2.0 |
| RTIC | Rust: tasks = interrupt handlers, deadlock-free by design | MIT / Apache 2.0 |
| Eclipse ThreadX | formerly Azure RTOS; certified for safety standards | MIT |
| NuttX | POSIX interface, “small Linux” for microcontrollers | Apache 2.0 |
| commercial | VxWorks, QNX, embOS, SafeRTOS: certified, with support | commercial |

- safety standards (IEC 61508, ISO 26262 for cars) require a certified kernel or a large verification effort

## Embedded Linux

- needs an application processor with **MMU** and typically $\geq$ 64 MB RAM (Raspberry Pi, i.MX, STM32MP, AM62x)
- advantages: complete network stack, file systems, USB, graphics, thousands of existing programs, high level languages, containers
- disadvantages: boot time of seconds, much more memory and energy, larger attack surface, regular security updates necessary
- real time: the standard kernel gives no guarantees; **PREEMPT_RT** (part of the mainline kernel since 6.12, 2024) reduces latencies to some 10 $\mu$s
- common architecture: Linux for user interface and communication, plus a microcontroller (often on the same chip) running an RTOS for the hard real-time part

# Booting embedded Linux

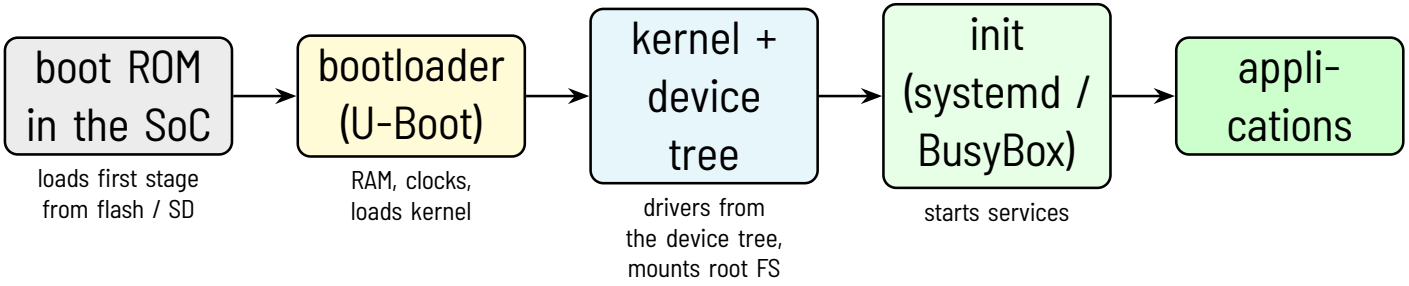



Figure 8.5.1: Boot chain of an embedded Linux system

- the **device tree** describes the hardware (which peripherals at which addresses, which pins) – the same kernel runs on different boards
- the **root file system** contains libraries, programs and configuration

# Building embedded Linux: cross development

- the target is too small (or too slow) to compile its own software ⇒ **cross compiler** on the PC
  - named by the target triple, e.g. `aarch64-linux-gnu-gcc`
  - Rust: `rustup target add aarch64-unknown-linux-gnu` - the same way we built for the RP2040 and the ESP32-C3
- build systems create the complete image (toolchain, bootloader, kernel, root file system) from source
  - **Buildroot**: simple, configuration with `make menuconfig`, small images, quick to learn
  - **Yocto Project**: layers and recipes, reproducible, industry standard for products with long maintenance
- alternative for prototypes: a ready-made distribution (Raspberry Pi OS, Debian) and native compilation
- the output format is the same as on microcontrollers: **ELF** files with sections for code (`.text`), data (`.data`, `.bss`) and debug information

# Embedded Linux without hardware

- Wokwi simulates microcontrollers, not Linux boards – for embedded Linux we use **QEMU**, an emulator for complete computers (ARM, RISC-V, x86)
- QEMU runs on any Linux PC or in a cloud environment such as GitHub Codespaces (free quota: 120 core-hours per month)
- the Yocto Project publishes ready-made images and SDKs for its emulated boards (`qemuarm64`, `qemuriscv64`, `qemux86-64`)

| level | environment | effort |
|---|---|---|
| 1: explore, compile, debug | JSLinux in the browser (Buildroot RISC-V, Alpine x86) | none |
| 2: boot a Yocto image | QEMU + prebuilt image, PC or 2-core Codespace | 30 MB download, 1–2 minutes |
| 3: look inside Yocto | `bitbake-setup` + BitBake without building | 0.5 GB, about 5 minutes |
| 4: cross-compile and debug | Yocto SDK + QEMU + GDB | 1 GB download, 5 GB disk |
| 5: build an image | full Yocto build on a large machine | hours, 100 GB and more |

- levels 1 to 4 were tested for this lecture; the files are in `examples/linux`

# Exercise: an embedded Linux in the browser

- open https://bellard.org/jslinux/ and start "Buildroot Linux" (riscv64, console) – an emulated RISC-V computer in the browser, its software built with Buildroot
- explore the system

```
uname -a                  # kernel version and architecture
cat /proc/cpuinfo         # the emulated CPU (RISC-V, ISA extensions)
cat /proc/meminfo         # memory
ls -l /bin | head -n 15   # most commands are links to one program: BusyBox
ps                        # which processes run after the boot?
df -h                     # file systems and their size
dmesg | head -n 40        # the kernel messages of the boot
```

- questions: how many processes run? Which program is process 1? How large is the complete system compared with a desktop Linux?

# Exercise: programming on the target, in the browser

- the Buildroot system in JSLinux contains GCC 7.3, `make`, `objdump` and `strace` – we compile directly on the (emulated) RISC-V target
- type `cat > procinfo.c`, paste the program from `examples/jslinux`, end with Ctrl-D

```
# gcc -g -O1 -o procinfo procinfo.c
# ./procinfo
uptime: 0 s                        <- wrong: the system has been running for a while
load:   0.13
sum:    126541
# strace ./procinfo 2>&1 | grep proc
openat(AT_FDCWD, "/proc/uptme", O_RDONLY) = -1 ENOENT (No such file or directory)
openat(AT_FDCWD, "/proc/loadavg", O_RDONLY) = 3
# objdump -d procinfo | less      # search for <sum16>: RISC-V code of chapter
   Processors
```

- `strace` shows every system call: here the typo in the file name, which the program hides
- in `objdump` find `lhu` (load halfword unsigned) and the conditional branch of the loop

# Exercise: booting a Yocto image in QEMU

```
$ ./boot-yocto-qemu.sh       # examples/linux: download image, start QEMU
...
[    2.970384] Run /sbin/init as init process
qemuarm64 login: root
root@qemuarm64:~# uname -a
Linux qemuarm64 6.18.39-yocto-standard #1 SMP PREEMPT ... aarch64 GNU/Linux
root@qemuarm64:~# cat /proc/device-tree/model
linux,dummy-virt
root@qemuarm64:~# free
               total        used        free      shared  buff/cache   available
Mem:          231752       15992      201864          76       13896      209372
root@qemuarm64:~# df -h /
Filesystem                Size      Used Available Use% Mounted on
/dev/root                20.2M     13.5M      5.1M  73% /
root@qemuarm64:~# readlink /bin/sh /sbin/init
/bin/busybox.nosuid
/sbin/init.sysvinit
```

- `core-image-minimal`: 13.5 MB files, 16 MB RAM in use; quit QEMU with Ctrl-A, X
- the device tree in `/proc/device-tree` describes the emulated board

# Exercise: looking inside Yocto without building

```
$ python3 -m venv venv && . venv/bin/activate && pip install bitbake-setup
$ bitbake-setup init --non-interactive poky-wrynose poky distro/poky machine/
   qemuarm64
$ . bitbake-builds/poky-wrynose/build/init-build-env
$ bitbake-layers show-layers                  # core, yocto, yoctobsp
$ bitbake -e core-image-minimal | grep -E '^(IMAGE_INSTALL|MACHINE|TUNE_FEATURES|
   DISTRO_VERSION)='
DISTRO_VERSION="6.0.4"
IMAGE_INSTALL="packagegroup-core-boot "
MACHINE="qemuarm64"
TUNE_FEATURES="aarch64 crc cortexa57"
$ bitbake-layers show-recipes busybox        # busybox 1.37.0 in layer meta
$ bitbake -g core-image-minimal               # dependency graph, no build
$ wc -l pn-buildlist
273 pn-buildlist                              # recipes needed for this small image
```

- only parses the recipes: about 5 minutes on 2 cores, 0.5 GB disk
- BitBake needs user namespaces: in a Codespace the provided dev container allows them; on Ubuntu 24.04 an AppArmor setting must be changed (see README)

# Exercise: cross-compiling with the Yocto SDK

```
$ sh poky-glibc-...-cortexa57-qemuarm64-toolchain-6.0.3.sh -d ~/sdk
$ . ~/sdk/environment-setup-cortexa57-poky-linux     # sets CC, GDB, sysroot, ...
$ $CC -g -Og -o sensor_avg sensor_avg.c
$ file sensor_avg
sensor_avg: ELF 64-bit LSB pie executable, ARM aarch64, version 1 (SYSV)
$ qemu-aarch64 -L $SDKTARGETSYSROOT ./sensor_avg    # ARM program on the PC
average = 8 (expected 200)
```

- the SDK contains the cross compiler, GDB and a copy of the target's libraries – exactly matching the image
- **QEMU user mode** (`qemu-aarch64`) runs a single ARM program on the PC; **system mode** (`qemu-system-aarch64`) emulates the whole board
- on the emulated board, image `core-image-full-cmdline` with SSH:

```
$ scp -P 2222 sensor_avg root@localhost:/tmp/
$ ssh -p 2222 root@localhost /tmp/sensor_avg
average = 8 (expected 200)            # the bug: see chapter Programming
```

# Building a complete image

- `bitbake core-image-minimal` builds the cross toolchain, the kernel and every package from source
- requirements from the Yocto documentation: at least 32 GB RAM and 140 GB disk; hours of CPU time
- the **shared state cache** reuses prebuilt results (configuration fragment `core/yoc` `mirror-cdn`)
  - our test with the current branch: 273 of 2 287 tasks came from the mirror (11 %) – most still had to be built
- feasible in a large Codespace (16 cores, 64 GB RAM, 128 GB disk; uses the free quota in about 7 hours) or on a lab machine – a project, not a weekly exercise
- for comparison: Buildroot builds a small image with fewer features much faster – it has no shared state and no package management, but also far less to build

# Choosing the right approach

| approach | suitable for | limits |
|---|---|---|
| super loop + interrupts | small devices, simple timing | long jobs block everything |
| RTOS (FreeRTOS, Zephyr) | several jobs, different deadlines | stack per task, concurrency errors |
| async (Embassy) | event-driven, battery powered | long computations block |
| RTIC | hard real time, provable | interrupt-driven structure |
| embedded Linux | GUI, many protocols, complex software | boot time, memory, real time only with PREEMPT_RT |

## Exercises

- `tasks`: replace `xTaskDelayUntil` by `vTaskDelay` and add a 50 ms busy loop to the heartbeat. What happens to the period?
- `queue`: make the consumer slower than the producer. What happens when the queue is full? Change `portMAX_DELAY` to 0 and count lost samples.
- `race_mutex`: remove the `taskYIELD()`. Is the program correct now? Argue why not.
- `priority_inversion`: predict both waiting times before running the example, then compare with the measurement. Why is it 550 ms and not 750 ms? (Hint: how does `busy()` measure time?)
- Embassy: add a long computation without `.await` to one task of `tasks.rs` and observe the LED. Then split the computation with `embassy_futures::yiel`
- Deadlock: write a FreeRTOS example with two tasks and two mutexes that deadlocks, then fix it with a fixed locking order.
- Embedded Linux: boot `core-image-minimal` and `core-image-full-cmdli` in QEMU and compare the number of processes, the RAM and disk usage and the boot time. Which packages make the difference? (Hint: the image manifests on downloads.yoctoproject.org)
- Yocto: find out with `bitbake -e` which kernel version and which init system `core-image-minimal` uses, and how you would add the package `gdbserver` to the image.