


Getting Started




Standard Accessories

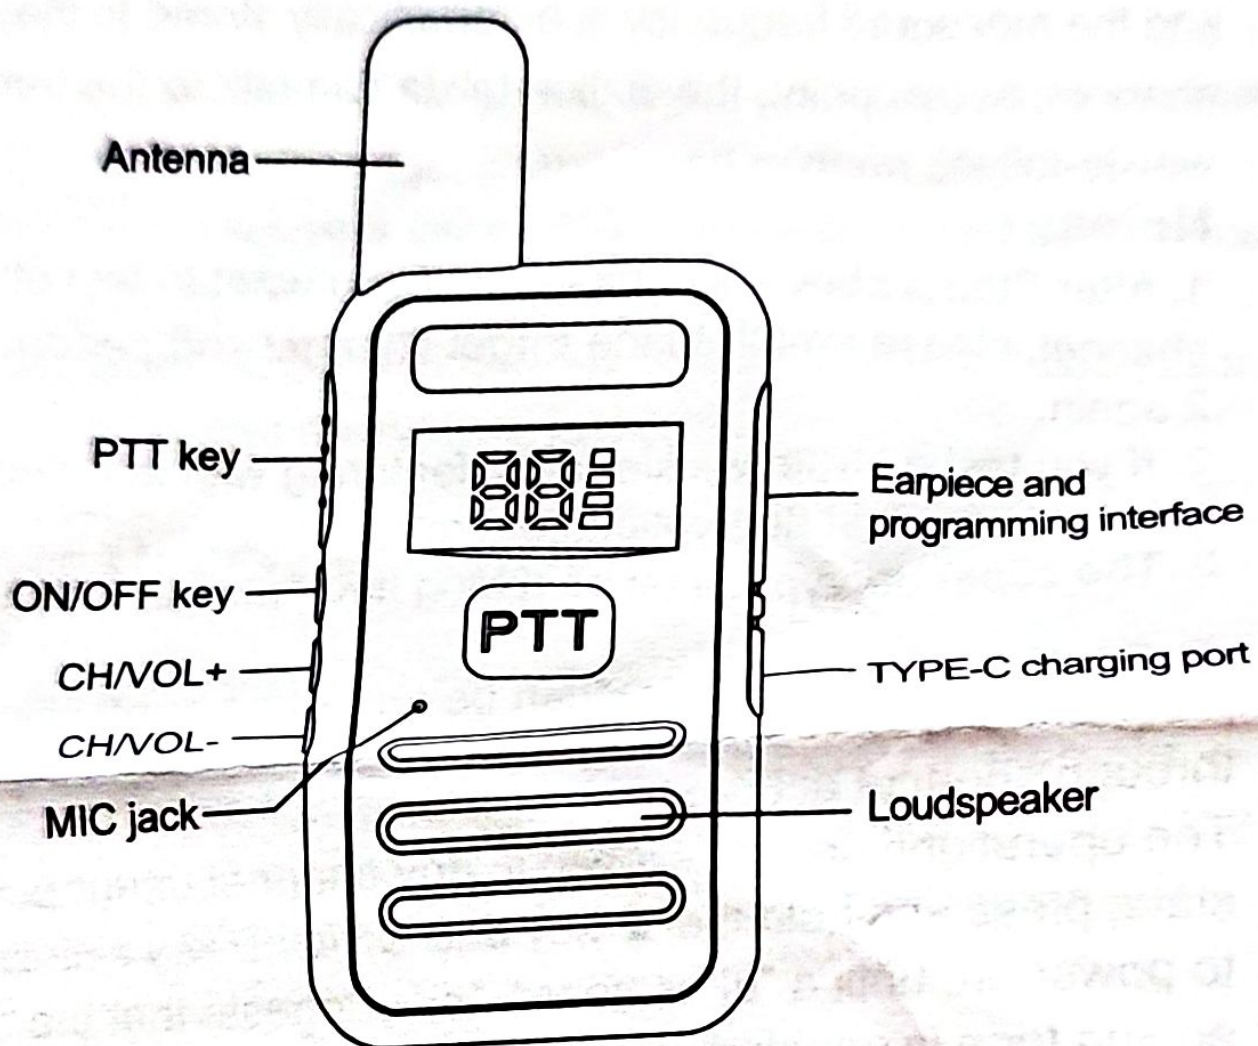

USB Cable (1)



Adapter (1)

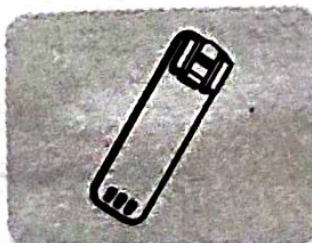

Belt Clip (1)



Hand Strap (1)

One-click Frequency and Code Decryption

This walkie-talkie is featured with one-click frequency and code decryption, and it can match most analog walkie-talkies on the market. The decryption can be divided into ordinary code decryption mode and super code decryption mode. (Please use the ordinary code decryption mode first. If you can't decrypt it, please use the super code decryption mode.)

Ordinary Decryption Mode:

Step 1:

Press and hold the PTT key (transmission key) and ON/OFF key in the power-off state to power on, until three pleasant hints 'dididi' are heard, accompanied by alternate flashing of red and green indicators. Release the key, and the walkie-talkie will enter "Stage 1 of frequency measurement mode" under ordinary decryption.

Step 2:

Under "Stage 1 of frequency measurement mode", if you desire to change the frequency measurement channel, you can switch the channel at will through the encoding switch to enter "Stage 2 of frequency measurement mode".

Step 3:

When you enter "Stage 2 of frequency measurement mode", it means that the frequency measurement officially starts. Transmit with a target walkie-talkie continuously. When you hear a 'da', accompanied by two flashes of the red indicator, then the frequency measurement is completed, and the measured frequency is automatically stored to the current channel. At this point, the walkie-talkie can talk to the target walkie-talkie. (To test anti-decryption frequency hopping, please continue to transmit

with the target walkie-talkie after hearing the first 'da' and wait for the second 'da')

Notes:

1. After Step 3 above is completed, if you want to test other channel, please switch to the target channel and perform Step 2 again.
2. After Step 3 above is completed, if you want to test this channel again, just directly press the MONI key and retest.
3. If you test a target walkie-talkie featuring with anti-decryption, and fail in the first decryption, just retry.

Super Decryption Mode:

Step 1:

Press and hold PTT key (transmission key), MONI key (▲ key) and ON/OFF key in the power-off state to power on, until three pleasant hints 'dididi' are heard, accompanied by alternate flashing of red and green indicators. Release the key, and the walkie-talkie will enter "Stage 1 of frequency measurement mode" under super decryption.

Step 2:

Under "Stage 1 of frequency measurement mode", if you desire to change the frequency measurement channel, you can switch the channel at will by short pressing the encoding switch to enter "Stage 2 of frequency measurement mode".

Step 3:

When you enter "Stage 2 of frequency measurement mode", it means that the frequency measurement officially starts. Transmit with a target walkie-talkie continuously. When the green indicator is on, first stop the transmission of the target walkie-talkie. When the green indicator is off, transmit with the target walkie-talkie

again. When you hear "dada", accompanied by two flashes of the red indicator, then the frequency measurement is completed, and the measured frequency is automatically stored to the current channel. At this point, the walkie-talkie can talk to the target walkie-talkie.

Notes:

1. After Step 3 above is completed, if you want to test other channel, please switch to the target channel and perform Step 2 again.
2. If you test a target walkie-talkie featuring with anti-decryption, and fail in the first decryption, just retry.
3. The super decryption takes a long time, please wait patiently.

Croak ending tone: can be turned on or off using programming software, turned on or off on the walkie-talkie through shortcut actions.

The operations are as follows: in any channel under power-off state, press and hold the ▲ key and ON/OFF key simultaneously to power on, until a "dī" is heard. "dī" suggests that the croak ending tone is enabled, while "dīdī" suggests that the croak ending tone is disabled.