Roof rack drilling template

Print at 100% / "Actual size". Turn OFF "Fit to page" or "Scale to fit".
Then check the scale bars at the bottom with a ruler before you drill anything.
U-bolt: 3/8" rod, 3.625" opening. Drill 7/16". Circles are drawn at the 7/16" drill size; drill on the crosshair.
Cut out a strip along its solid outline, tape it on, and centre-punch both crosshairs.

2x4 (3-1/2" face)

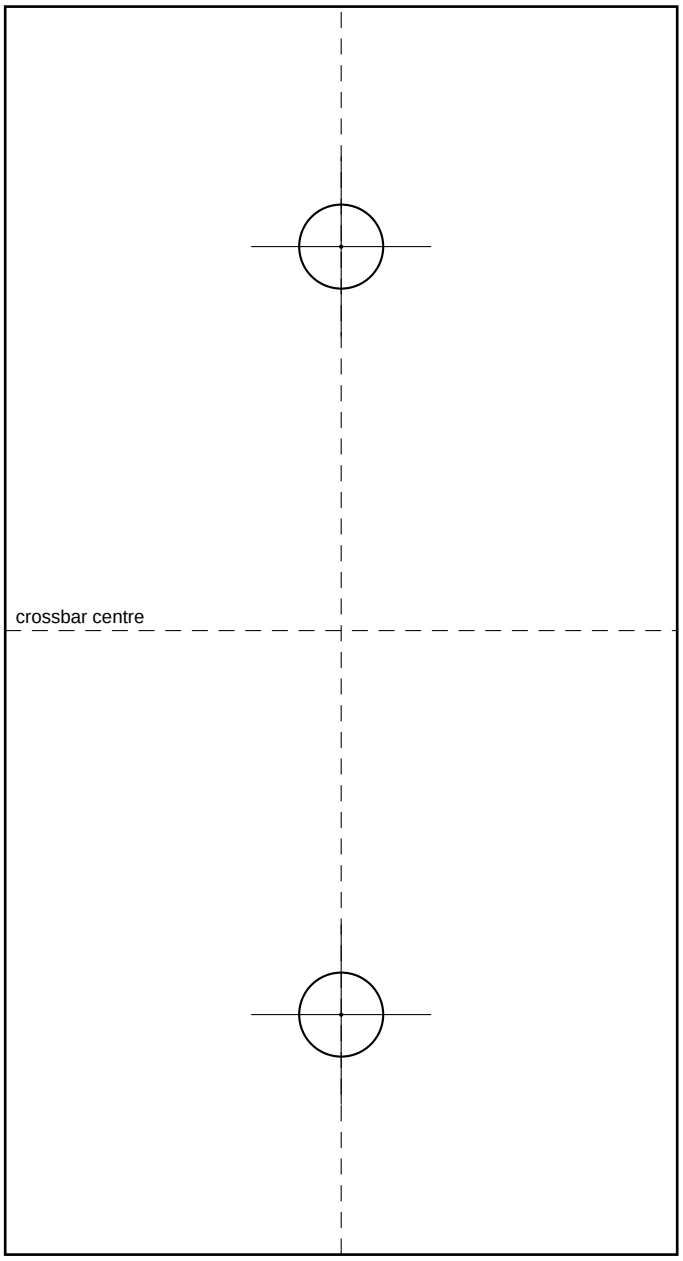

Lay flush with both edges of the board.
Line the middle dashed line up over the crossbar, square across the board.

Steel plate (1-1/2" flat bar)

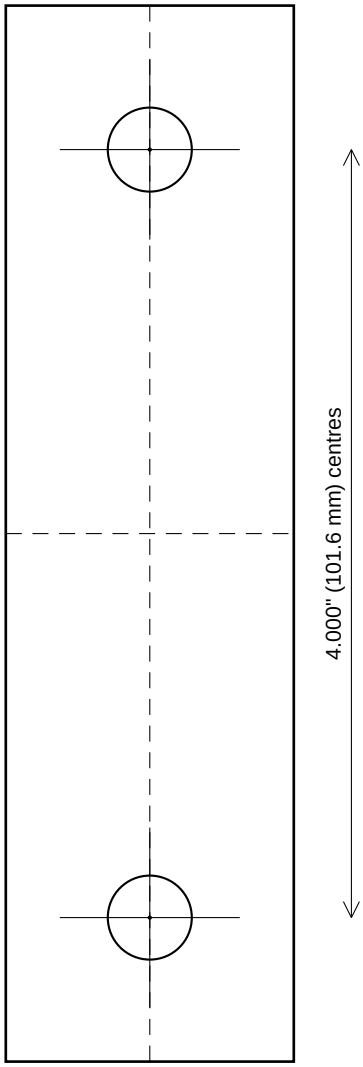

Cut flat bar to 5.5" long.
Optional: replaces the two washers and spreads the nut load on the wood.

SCALE CHECK. These must measure exactly as labelled:

If a scale bar is off, fix the print setting and print again. Hole centres must be 4.000" apart.