


Floor bed, side exit

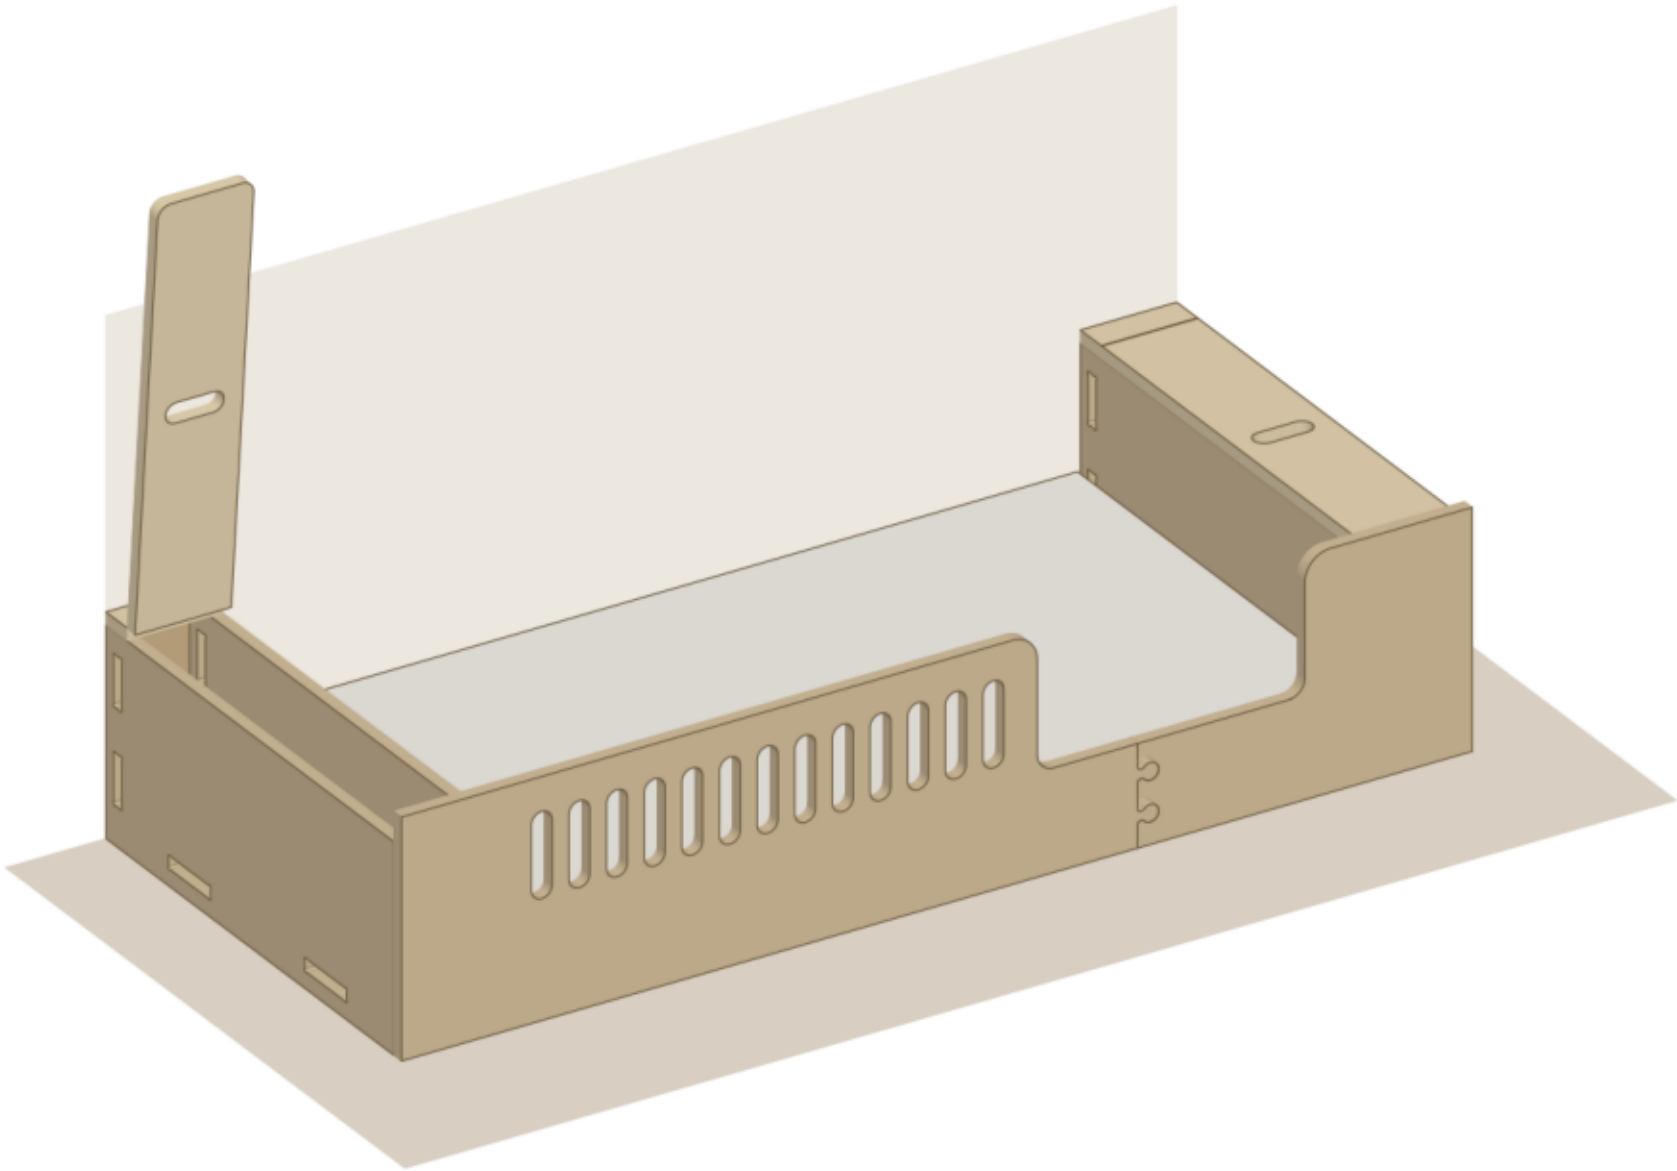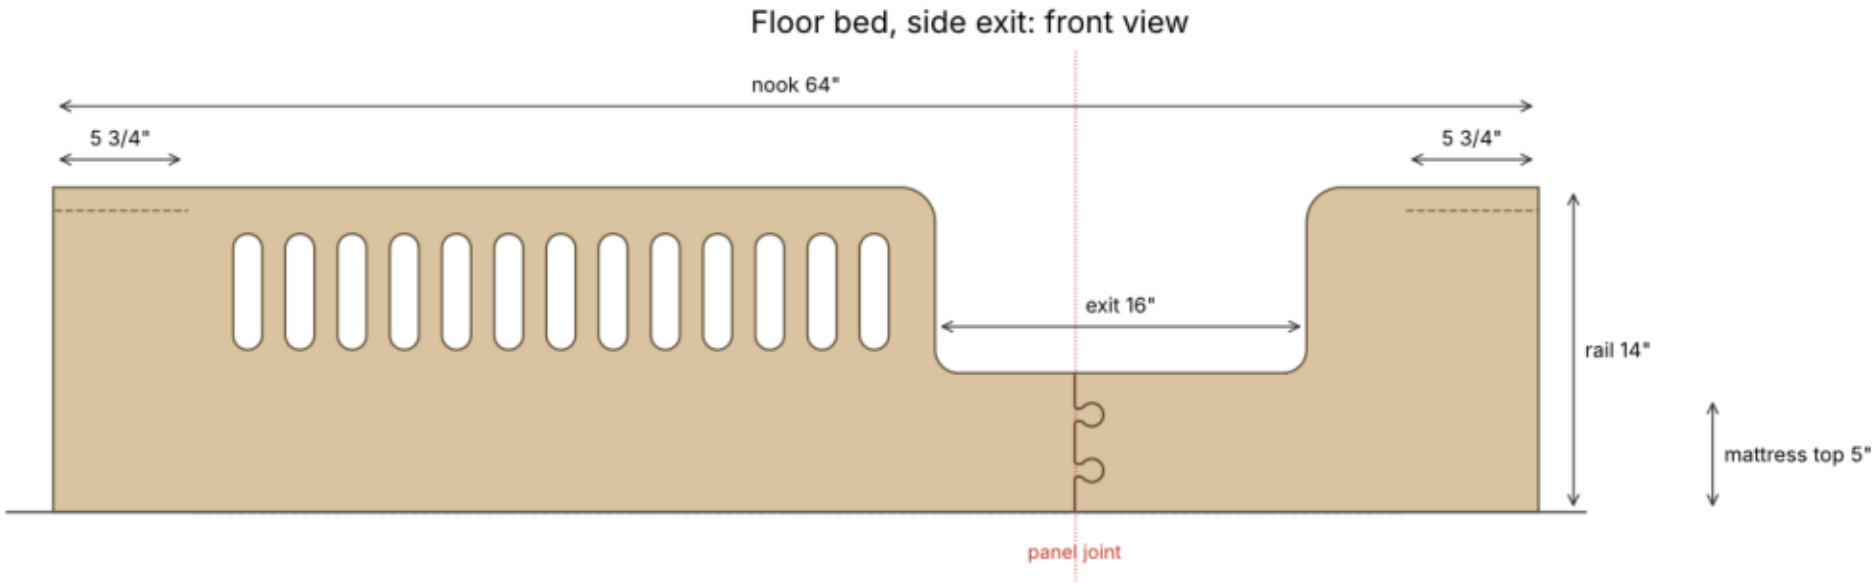



Floor bed, side exit: front view
nook 64"
5 3/4"
5 3/4"
exit 16"
rail 14"
mattress top 5"
panel joint


Plan (front of bed at the bottom)

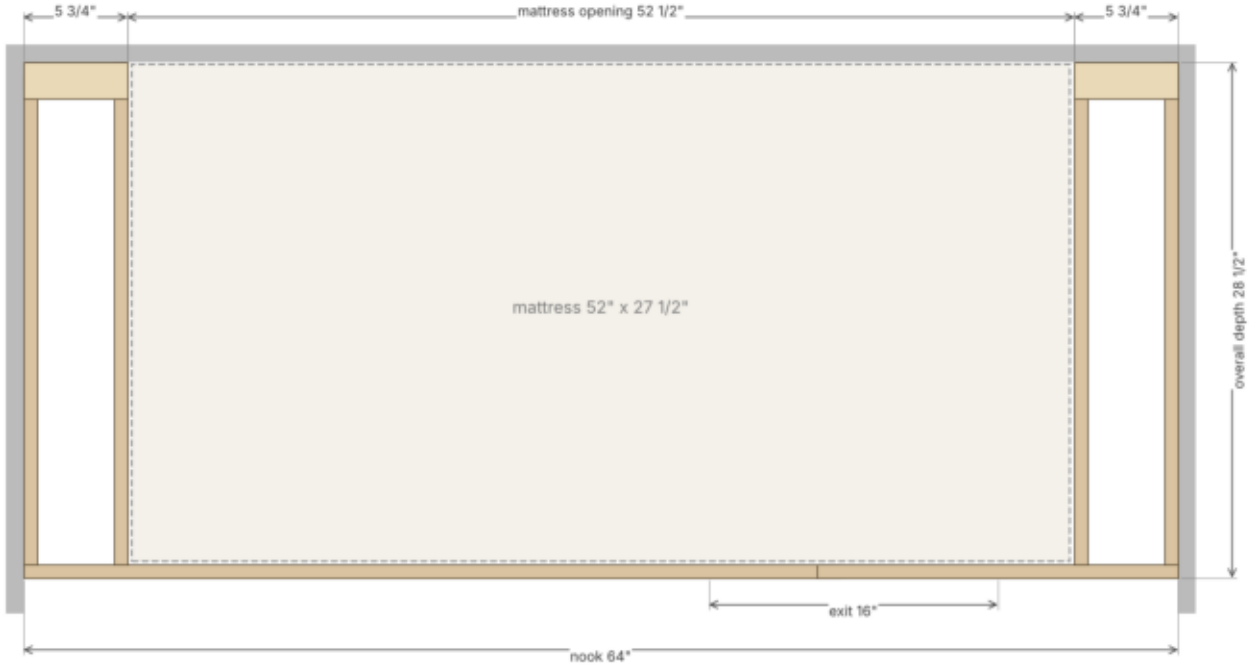

Section through the head box

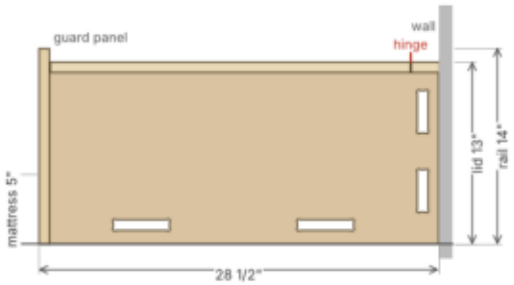


Head box, exploded (tabs pass through the sides)

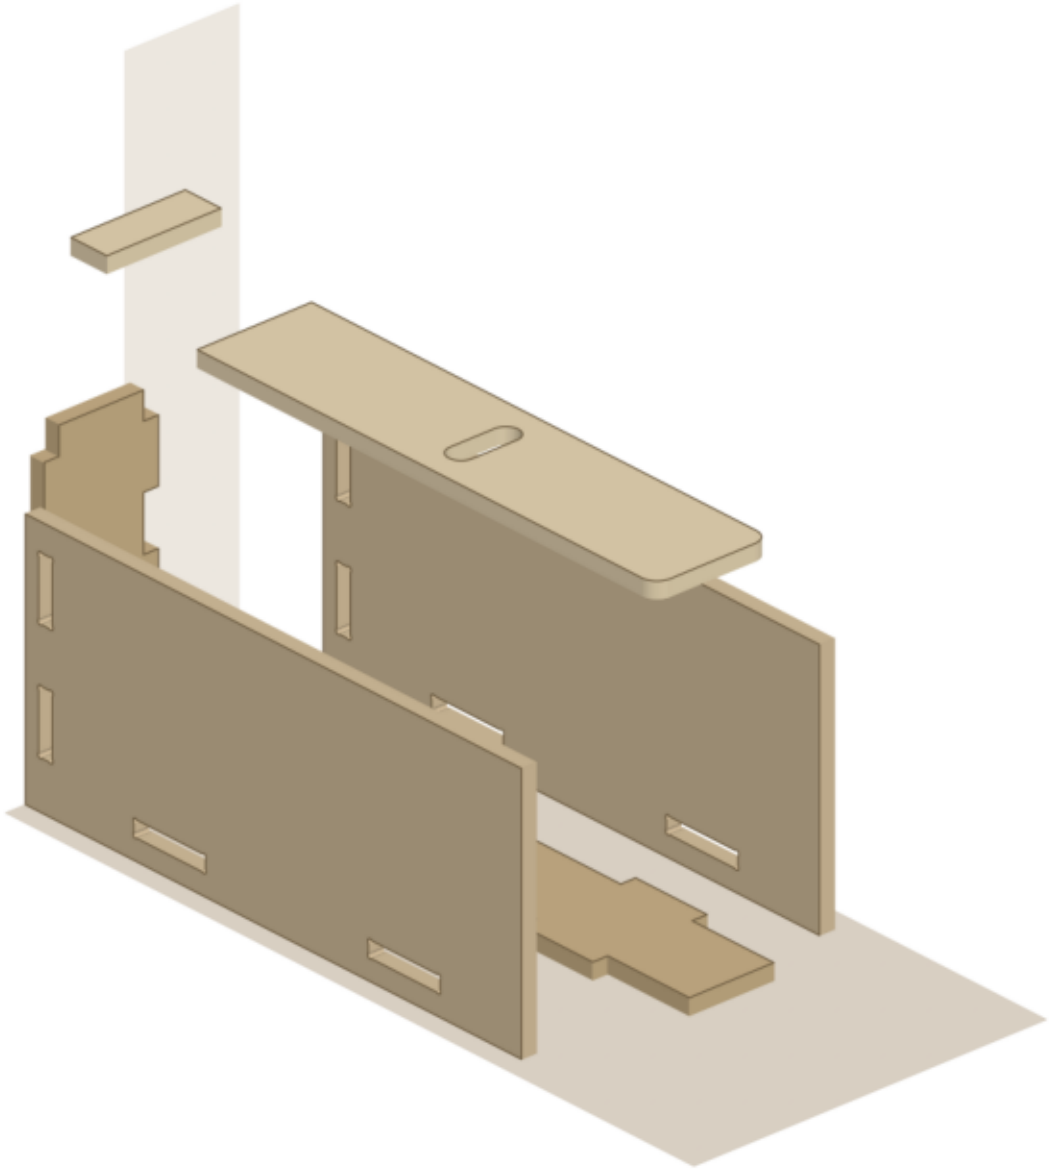


Floor bed, side exit: part drawings (inches, 3/4" plywood)


Front panel A (qty 1)
knob half

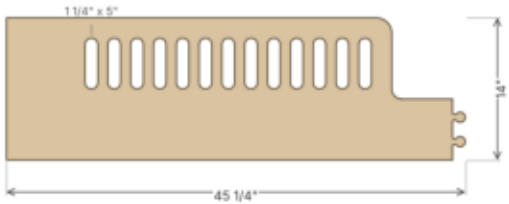


Front panel B (qty 1)
socket half

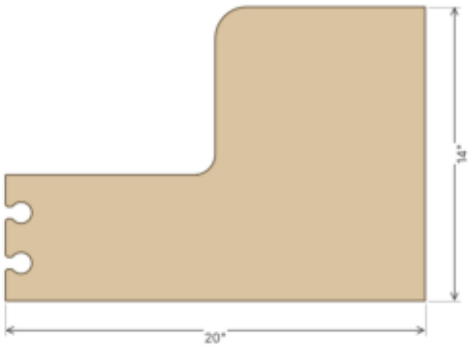


Box side (qty 4)
2 per box; slots face the same way on all four

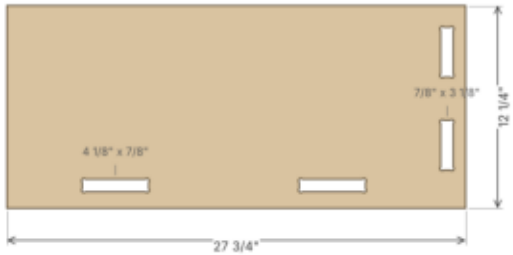

Box back (qty 2)
screw through into wall studs

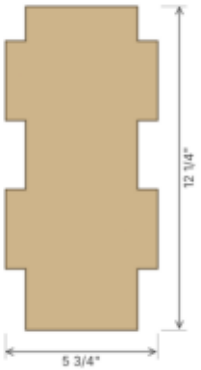

Box floor (qty 2)
sits 1" off the floor




Lid hinge strip (qty 2)
glue + screw to the side tops



Box lid (qty 2)
hand hole centred; 2 hinges to the strip



Floor bed, side exit: nesting on 48" square panels

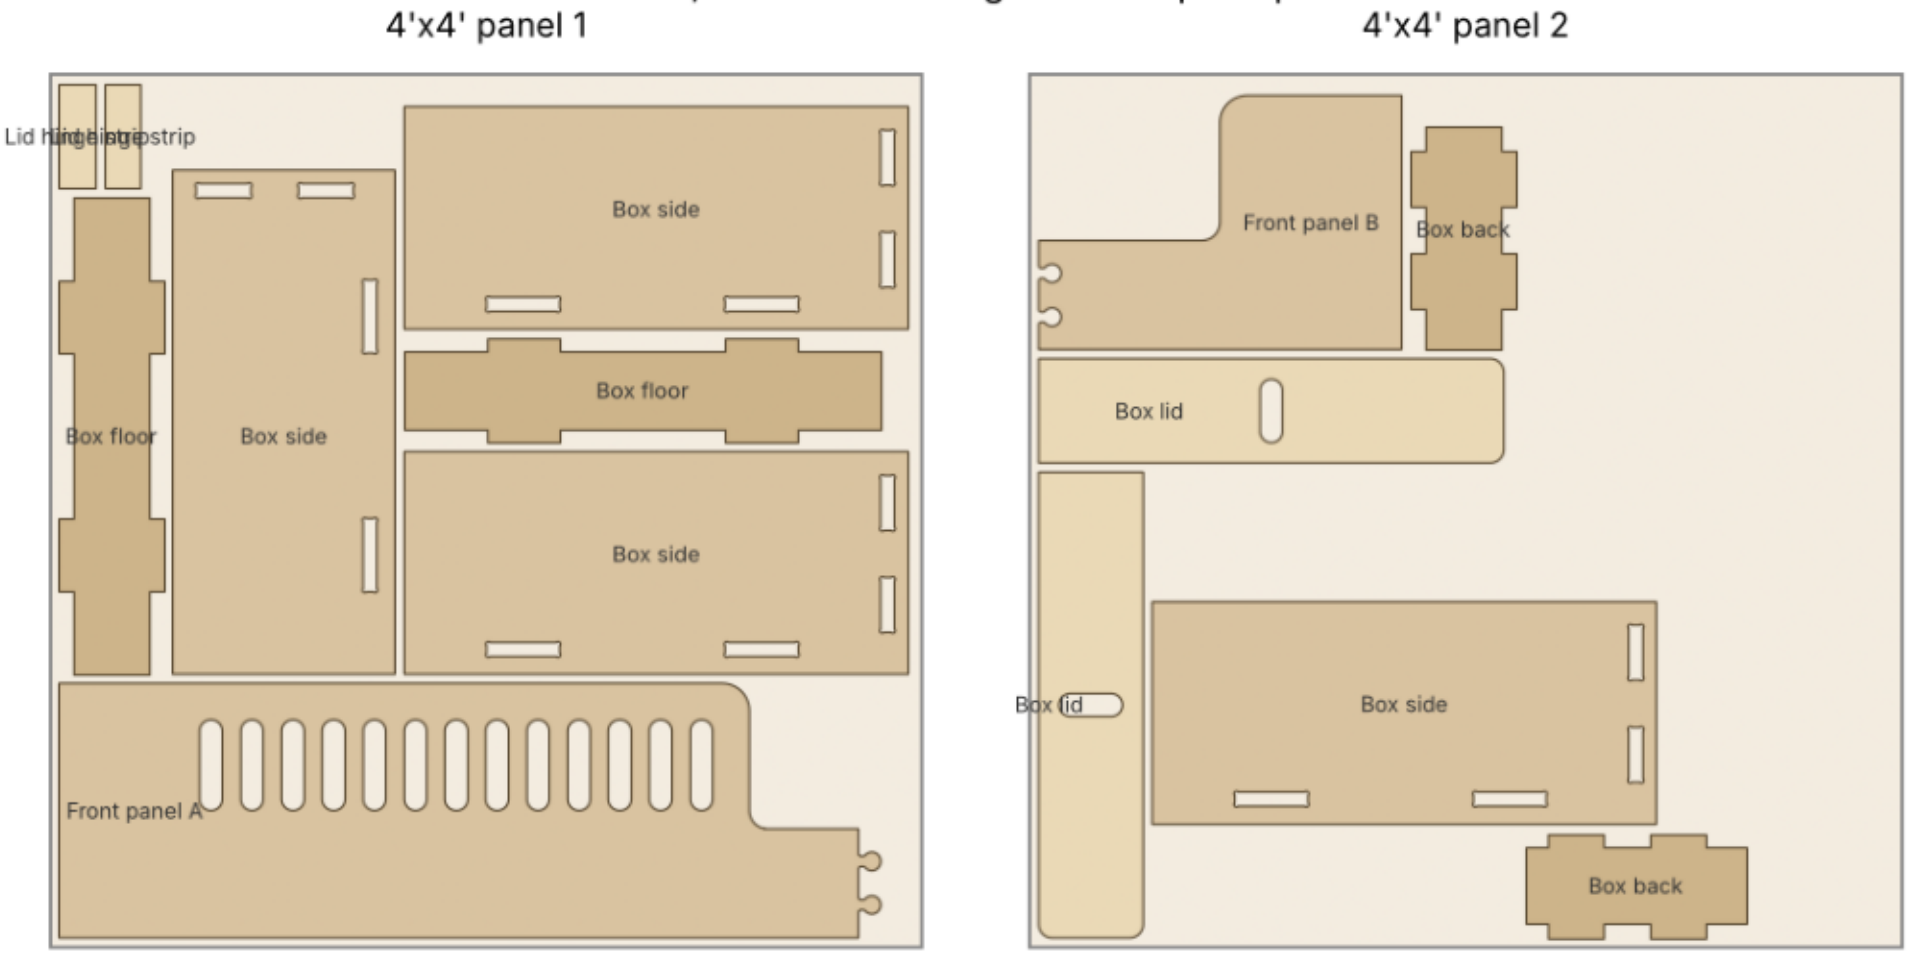

Floor bed, side exit: cut list, hardware, assembly

Cut list

Part	Qty	Size (W x H)	Notes
Front panel A	1	45 1/4" x 14"	knob half
Front panel B	1	20" x 14"	socket half
Box side	4	27 3/4" x 12 1/4"	2 per box; slots face the same way on all four
Box back	2	5 3/4" x 12 1/4"	screw through into wall studs
Box floor	2	5 3/4" x 26 1/4"	sits 1" off the floor
Lid hinge strip	2	5 3/4" x 2"	glue + screw to the side tops
Box lid	2	5 3/4" x 25 5/8"	hand hole centred; 2 hinges to the strip

Key dimensions

Panels: 2 pieces of 4'x4' (1 x 4'x8' sheet(s) of 3/4" plywood, each cut in half)
Heights from floor: mattress top 5", rail top 14", box lids 13", exit sill 6"
Exit opening: 38" to 54" from the head wall; panel halves join at 44"
Head/foot boxes: 5 3/4" wide outside, 4 1/4" inside, 27 3/4" deep

Hardware

- Wood glue (PVA)
- 1-1/4" wood screws x 24 (box joinery, hinge strips)
- 1-1/4" pocket-hole screws x 12 (guard panel to boxes)
- 2-1/2" screws x 4 into studs (box backs)
- No-mortise hinges x 4 (2 per lid)
- Soft-close lid stays x 2 (light-duty toy-box type)
- Shims as needed

Assembly

1. Cut all parts (sheets/panel_*.dxf). Profile CUT_INSIDE before CUT_OUTSIDE, use tabs/onion skin on the small parts, and dry-fit the puzzle joint on scrap first; adjust knob_clearance if needed.
2. Ease every exposed edge with a 1/4" roundover (rail top, slots, exit opening, lid edges and the hand hole). Leave the joinery edges and the faces that meet the wall square.
3. Boxes: glue the back and floor tabs into one side, add the second side, clamp square. Tabs are flush with the outside faces. Pre-drill and screw (1-1/4") through the side into each tab.
4. Set both boxes in the nook, tight to the side walls. Shim level, then screw through each box back into a stud (2-1/2" screws, 2 per box). The 3/4" behind the back lets you scribe the sides to the wall.
5. Glue the two guard-panel halves together on a flat surface (puzzle joint), let it cure.
6. Fix the guard panel to the front edges of the box sides with glue + 1-1/4" pocket screws (3 per