

Piccolo F28027F controlCARD Hardware Guide

Version 1.0.1 Motor Solutions



Texas Instrument's **Piccolo F28027F controlCARD** can be used as a quick evaluation board with control, connectivity signals and ports to F2802xF MCU.

Switch Configuration for use with DRV8312, TMDSHVMTRINSPIN Kits:

SW2: DOWN-UP SW3: UP-DOWN SW4: DOWN-UP BOOT SW1: UP-UP

Switch Configuration for use with DRV8301 Kit:

SW2: DOWN-DOWN SW3: DOWN-DOWN SW4: DOWN-UP BOOT SW1: UP-UP

Also: connect J12-1(GPIO28) to J5-12(OCTW), J12-2(GPIO29) to J5-6(EN_GATE).



Version: 1.0.1

Revision History:

1.0.1	July 11, 2013	First release



1. The controlCARD features: Rev1.0:

- DIMM100 compatible cards for C2000 system application boards
- All GPIO, ADC and other key signals routed to gold connector fingers
- Isolated RS-232 interface for communications
- Single 5V input supply to the controlCARD and external supply pin decoupling with L+C connected close to the device

Each controlCARD includes a "Hardware Developer's Package" through the C2000 controlSUITE, a set of "soft collateral" files which makes deploying this technology very easy, these files include:

- Schematics
- Bill of materials (BOM)
- Gerber files

2. References

LEDs:

LD1	Turns on when controlCARD is powered on (Green)	
LD2	Controlled by Mux-GPIO-12 (Red)	
LD3	Controlled by GPIO-34 (Red)	

DIP Switches

Bold represents the configuration required for use with the InstaSPIN enabled motor kits. Orientation is same as image on page 1.

SW1: Controls the boot options of the F2802x device




		TEXAS INSTRUMENTS
Position 1	Position 2	
(GPIO-34)	(TDO)	
0-DOWN-OFF	0-DOWN-OFF	Parallel I/O
0-DOWN-OFF	1-UP-ON	Wait mode
1-UP-ON	0-DOWN-OFF	SCI
1-UP-ON	1-UP-ON	(default) Get mode; the default get
		mode is boot from FLASH

Switches 2, 3, & 4: Controls the connection of the F28027F pin (Mux-XXXX-XX) to the DIMM pin (GPIO-XX). Switches are oriented in this fashion when viewing the card as in the picture on page 1.



SW2: Mux-GPIO-12 and Mux-GPIO-16

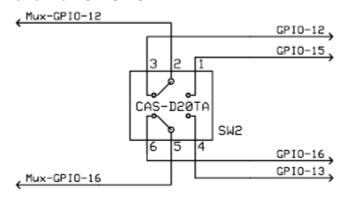

Position1 (Left switch)


UP connects Mux-GPIO-12 to GPIO-15 **DOWN** connects Mux-GPIO-12 to GPIO-12

Position 2 (Right switch)

UP connects Mux-GPIO-16 to GPIO-13 DOWN connects Mux-GPIO-16 to GPIO-16



SW3: Mux-GPIO-17 and Mux-GPIO-19

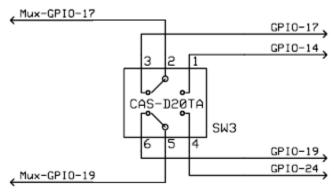


Position1 (Left Switch)

UP connects Mux-GPIO-17 to GPIO-14
DOWN connects Mux-GPIO-17 to GPIO-17

Position 2 (Right Switch)

UP connects Mux-GPIO-19 to GPIO-24 **DOWN** connects Mux-GPIO-19 to GPIO-19

SW4: Mux-GPIO-18 and Mux-ADC-B7

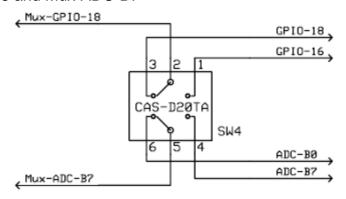

Position1 (Left switch)

UP connects Mux-GPIO-18 to GPIO-16

DOWN connects Mux-GPIO-18 to GPIO-18

Position 2 (Right switch)

UP connects Mux-ADC-B7 to ADC-B0
DOWN connects Mux-ADC-B7 to ADC-B7



R10

Resistor R10 controls whether GPIO-28 is connected to the controlCARD SCI transceiver or not.

R10 populate with 0 Ohm resistor

The F28027F GPIO-28 pin is connected to the on-card transceiver and will be held high when the transceiver is not in use

R10 NOT Populated (default)

The F28027R GPIO-28 can be controlled by the baseboard. This is the preferred configuration for most baseboards.