



01 What It Is

Flux is an analog-style phase shifter with a switchable stage count from 2 to 36, so it can sit anywhere between a subtle two-stage wobble and a dense, metallic sweep.

Blend defaults to 35% rather than the usual middle. An allpass filter alone doesn't change loudness at all, so the notches that make a phaser audible only appear where the phased signal cancels against the dry signal. Leaning dry keeps that cancellation clearly audible instead of washing it out under too much wet.

02 Signal Path


An LFO (Rate, Depth, and Shape, or tempo-synced via Sync) sweeps the Stages chain. Offset and Feedback shape that sweep further before Color and Blend finish the signal.



03 The Panel

LFO STAGES COLOR MIX

LFO

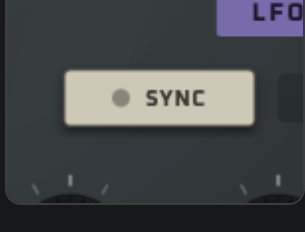

Sync on/off · default off

Locks Rate to a tempo-synced note division instead of a free Hz value. The Division dropdown picks the note value once Sync is on.



Rate 0.02-10 Hz · default 0.50 Hz

LFO speed. Unused while Sync is on.



Depth 0-100% · default 60%

How far the LFO sweeps the phaser's notches.



Shape 0-100% · default 100%

LFO waveform, continuously blended rather than switched: 0% is a square wave, the middle of the range morphs through triangle, and 100% (the default) is a smooth sine.

STAGES



Stages 2 / 4 / 6 / 8 / 12 / 24 / 36 · default 4

Number of allpass filter stages in the phaser chain, from a subtle 2-stage wobble up to a dense, metallic 36-stage sweep. 4 is the classic setting most phasers are built around.

COLOR



Offset -100 to +100% · default 0%

Shifts the sweep's center point up or down without changing its depth.



Feedback 0-100% · default 30%

Resonance feedback around the filter chain. Higher values deepen and sharpen the notches for a more pronounced sweep.



Brightness 0-100% · default 100%

Tone shaping on the phased signal.



Grit 0-100% · default 0%

Added texture and saturation on the phased signal.

MIX



Blend 0-100% · default 35%

Dry/phased mix. Defaults below the halfway point to keep the phaser's notches clearly audible instead of getting washed out.

A Bypass switch sits at the top right of the panel. It mutes the effect entirely, passing dry signal only, for quick A/B comparison.