


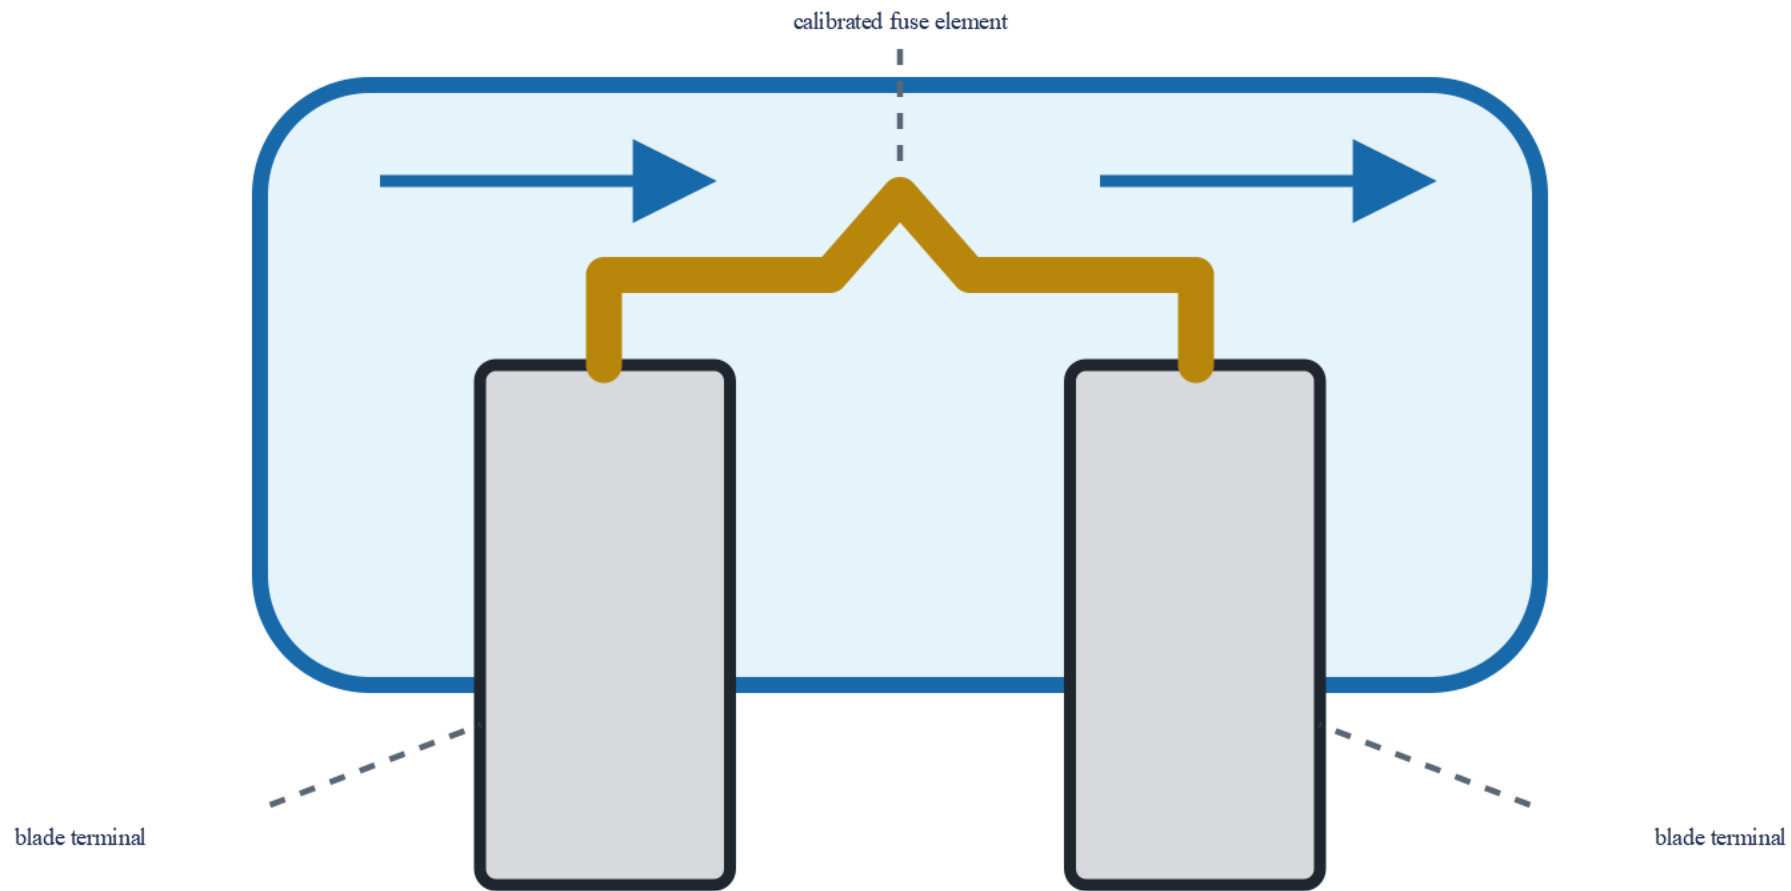

Excess current heats the narrow element until it melts and opens the path.