
# Your PLC data. Clearly in view.

When values are scattered, understanding equipment takes longer.

Connect to your Siemens S7 PLC. Organize tags into named tables. Watch related values and recent trends in one focused workspace.

RepoGen is the S7 communication tool from P QUBE SOLUTIONS, builders of custom industrial dashboards.

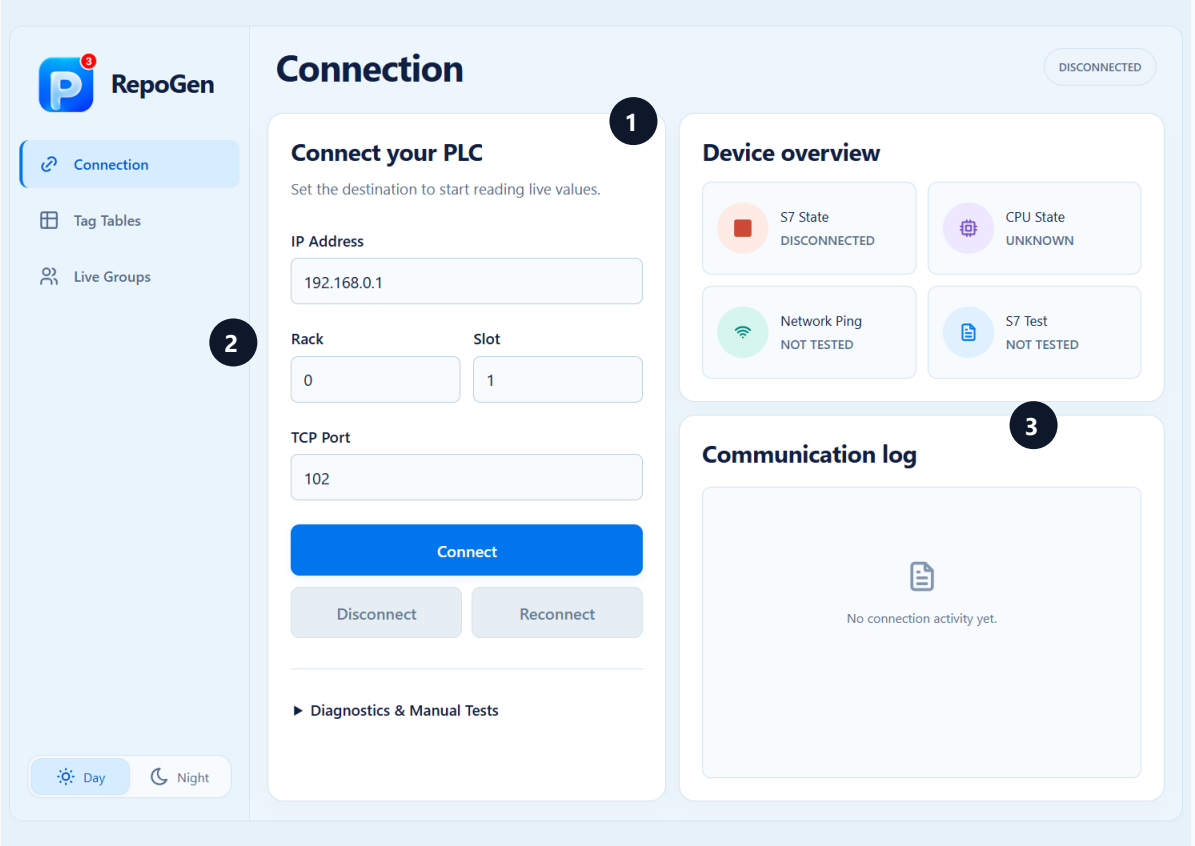


Actual RepoGen interface · day mode

### 01 Set the connection

Enter the PLC address, rack, slot, and port.

### 02 Organize your tags

Use named tables for the values you need.

### 03 Check status & diagnostics


Review device state and communication feedback.



Request a guided demo →

# Group your tags. Watch them live.

Build a view around your equipment or the task at hand.

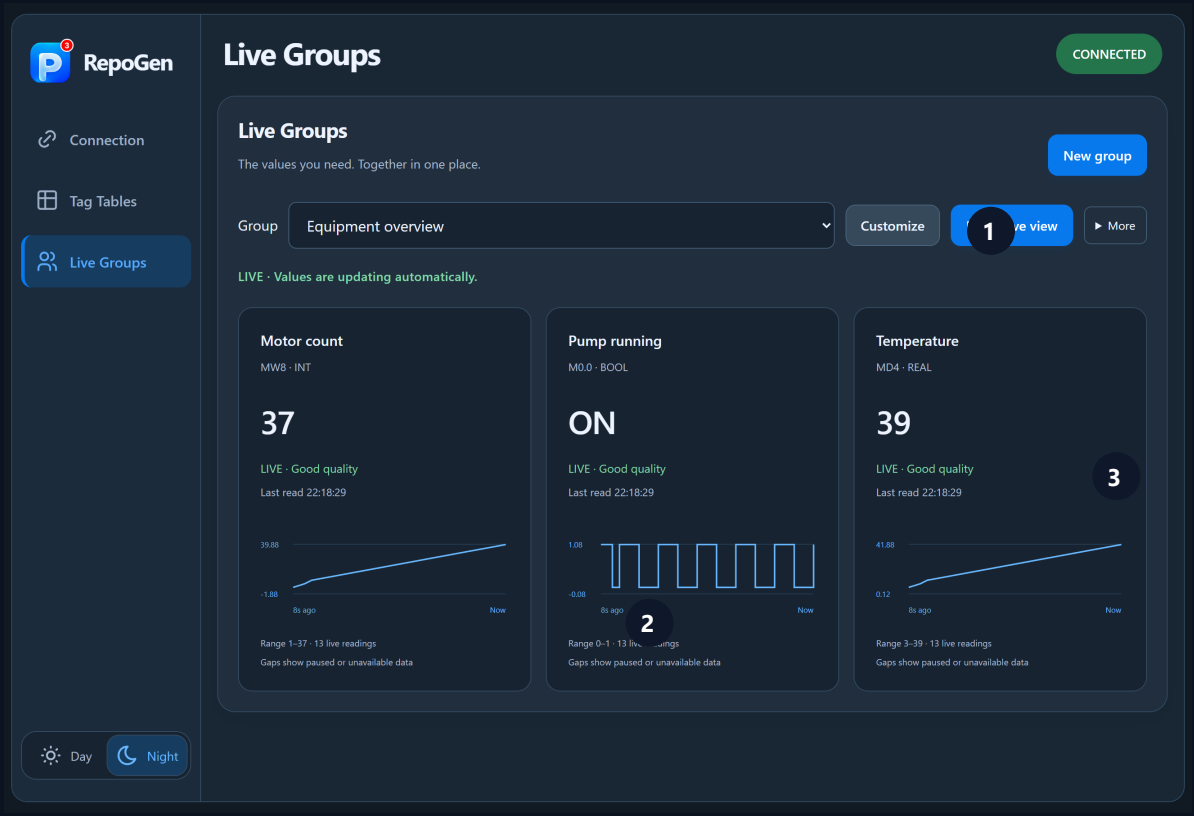


Actual app screen · simulated example readings

## 01 Make it your own

Select tags, name your group, and add or remove values as your needs change.

## 02 See change as it happens

Recent trends show movement alongside the current value.

## 03 Know when data is fresh

Quality labels and last-read times distinguish fresh readings from retained values.

DAY OR NIGHT · Same familiar layout.

## See your tags in RepoGen.

pqubeautomation@gmail.com

**Request a guided demo →**

Scan to explore the demo

# Your process. Your dashboard.

P QUBE SOLUTIONS turns machine data into views your team can use. Tell us what you want to track; we will shape the dashboard around your operation.

## Production overview

ILLUSTRATIVE LAYOUT · SAMPLE DATA

| OEE | TEEP | GOOD OUTPUT | DOWNTIME |
|---|---|---|---|
| 83.79% | 55.86% | 9,800 | 96 min |

**Output by 4-hour period**




| | |
|---|---|
| Availability | 90% |
| Performance | 95% |
| Quality | 98% |

Example layout, adapted to your process and data. Values illustrate the worked example on page 4.

### Production KPIs

Output vs target, throughput, cycle time, and downtime.

### Quality & process KPIs

Reject rate, good counts, temperature, pressure, flow, and speed.

### OEE & TEEP views

Equipment performance and calendar-time capacity in one view.

## Built to fit. Adapted with you.

We tailor layouts, tag groups, KPI definitions, trends, and report formats. Start with one machine or a focused KPI view, then discuss changes as your needs evolve.

# Measure performance. See capacity.

## OEE
Overall Equipment Effectiveness

**Availability × Performance × Quality**

How effectively planned production time is used.

## TEEP
Total Effective Equipment Performance

**OEE × Utilization**

Effectiveness across the full calendar period.

### 1 / INPUTS

Availability 90% · Performance 95% · Quality 98% · Scheduled 16 of 24 hours

Utilization = 16 ÷ 24 = 66.67%. The same operating performance is measured across a full day.

### 2 / EFFECTIVENESS DURING PLANNED PRODUCTION

**83.79%**

OEE = 0.90 × 0.95 × 0.98

### 3 / EFFECTIVENESS ACROSS TOTAL CALENDAR TIME

**55.86%**

TEEP = 83.79% × (16 ÷ 24)

## Let’s discuss your machine and your goals.

We will review the data you have and the views you need.

pqubeautomation@gmail.com

Request a guided demo →

ABOUT THIS BROCHURE · v1.3 · October 2026. App images show the existing interface; readings and KPI values are illustrative. Dashboard features depend on available data and project scope.