
TERMINALS OF ECU

DI3ML-06

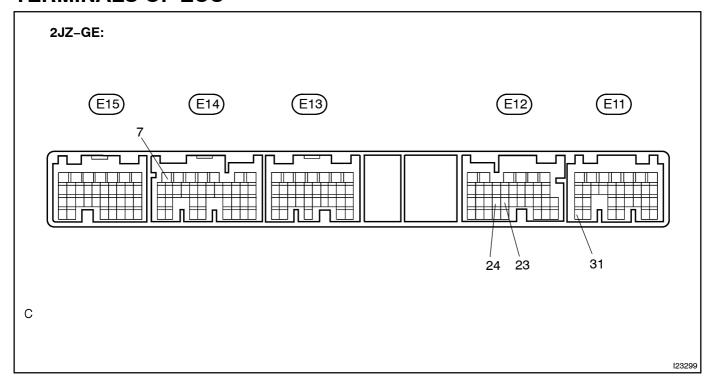

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
CODE – E1 (E11 – 31 ↔ E14 – 17)	LHD: G-B ↔ BR RHD: G ↔ BR	Ignition Switch ON	10 – 14
TXCT - E1 (E12 - 23 ↔ E14 - 17)	LHD: P-B ↔ BR RHD: P ↔ BR	Ignition Switch ON	10 – 14
RXCK – E1 (E12 – 24 ↔ E14 – 17)	V ↔ BR	Ignition Switch ON	10 – 14