

SA1QS-02

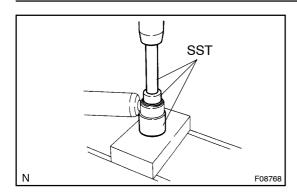

## REPLACEMENT

## 1. REMOVE BUSHING

Using SST and a press, remove the bushing.
SST 09710-28021 (09710-08031),
09710-30021 (09710-03131),
09950-70010 (09951-07100)

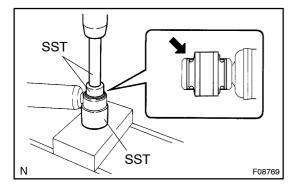

## 2. INSTALL BUSHING

Using SST and a press, install a new bushing.

SST 09710-28021 (09710-08031), 09710-30021 (09710-03131), 09950-70010 (09951-07100)

## HINT:

Install the bushing until it is flush with the bushing bracket of the shock absorber.