


MIDARTO

A two-deck MIDI file DJ for monome norms

User guide · version 2.9

Created by Glenn Jones, Cutie Suzuki & DJ FingaBlasta

Contact: mailmrg@gmail.com · [@mrglennjones](https://twitter.com/mrglennjones) · github.com/mrglennjones/midarto

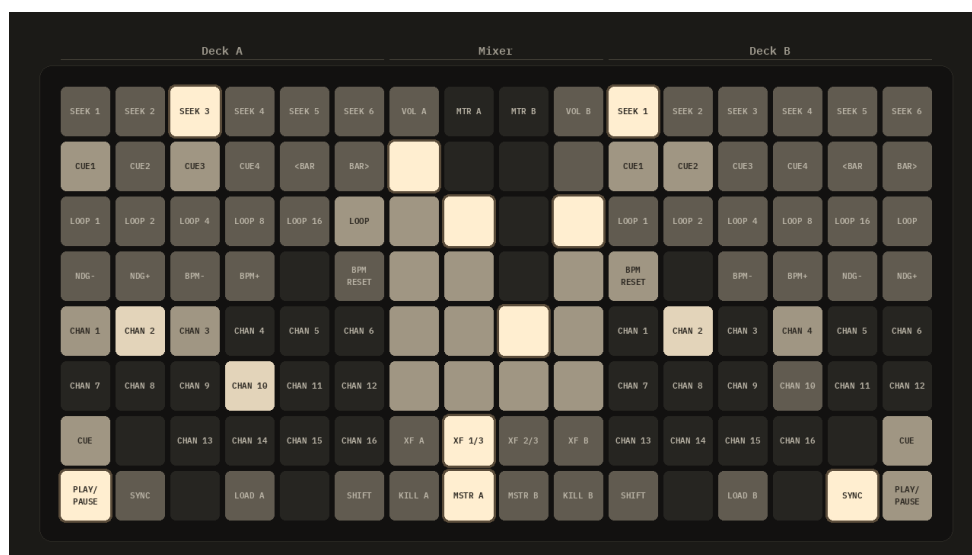

Load .mid files into two decks, mix them with a crossfader and play them to a MIDI sound module or to nb voices. Everything core works from the norms alone; a 16x8 grid adds cues, loops, channel mutes, sync and big transport keys.

Contents

Credits and contact are at the end of this guide.

1	Install
2	First setup
3	Playing from the norns
4	The screen
5	The file browser
6	The grid
7	How volume works
8	Tips for a first mix
9	Troubleshooting and limits

1 Install

You need a norns running a recent system update, and a MIDI sound module connected over USB MIDI. A General MIDI module is ideal, because most MIDI files are written for General MIDI sounds.

- **Unzip** midarto.zip. You get a folder called midarto containing midarto.lua, lib/, demo/ and a README.
- **Copy** the whole midarto folder into dust/code/ on your norns. Either open the norns network share from a computer on the same network (smb://norns.local on macOS, \\norns.local on Windows; user we, password sleep unless you changed it), or use a terminal:

```
scp -r midarto we@norns.local:~/dust/code/
```

- **Run it:** on the norns, go to SELECT and choose MIDARTO. A 5-second splash screen shows an 8-bit DJ at the decks next to the title, then the credits; press any key, knob or grid key to skip it.

The first run creates a songs folder, dust/data/midarto/songs/, and puts two demo songs in it: acid_trk.mid (120 BPM) and breaks.mid (98.5 BPM).

Your own files

Fill the songs folder, dust/data/midarto/songs/, with your own .mid or .midi files. Subfolders are fine, for example one per set or genre. The browser always opens in the songs folder, and you can go up to browse anywhere inside dust. You can delete the demo songs once you've added your own; if the folder is ever empty, Midarto puts them back.

Upgrading from v2.4 or earlier: songs you kept directly in dust/data/midarto/ are moved into the songs folder the first time v2.5 runs.

Optional: nb voices

To play a deck through nb voices instead of MIDI, install the nb library (dust/code/nb) and any nb voice mods, then restart Midarto. An *nb voice* output and a voice selector then appear in each deck's parameters. Without nb, Midarto offers MIDI output only.

2 First setup

Open PARAMS › EDIT and scroll to MIDARTO. Each deck has its own section, followed by the mix settings. Midarto remembers these settings between sessions.

Parameter	What it does
midi outputs	one device (default): both decks play to deck A's MIDI device. two devices : each deck has its own.
output	midi or nb voice (nb only if installed).
midi device	Which MIDI port the deck plays to (1–16, with device names). With one device only deck A's shows; with two, deck B defaults to port 2.
channel shift	Moves the file's channels up by this amount, so two decks don't fight over channels. Deck A defaults to 0, deck B to 8.
drums stay on 10	Keeps channel 10 drums on 10 when shifting; other channels skip 10.
nb voice	The voice used when output is nb voice.
crossfader curve	dj : both decks full at the centre. smooth : constant power.
quantize jumps	Seek, cue and bar jumps wait for the next bar line.
knob sensitivity	How far faders move per encoder step (useful on slow-turning knobs).
end warning	How long before the end of a song its platter outline starts flashing: off, 10, 20, 30 (default) or 60 seconds.
clock follows master	Sets the norns clock tempo from the master deck, so clocked gear follows.
panic: all notes off	Sends note-offs and all-notes-off on both decks' outputs.

Routing: one module or two

One General MIDI module (the default). Plug your GM module into the norns and set deck A's midi device to it; deck B plays to the same device automatically. General MIDI has only 16 channels, so deck B's channel shift (8 by default) moves its parts out of deck A's way: deck B's channels 1–7 play on 9 and 11–16, while deck A keeps 1–8. Both decks share drums on channel 10, because General MIDI has only one drum channel. Files that use more than 8 channels will still overlap; shared channels are handled for you (see How volume works).

Two General MIDI modules. Give each deck its own module, so nothing collides and both files keep all 16 channels.

- Plug both USB MIDI modules (or USB MIDI interfaces) into the norns.
- Go to SYSTEM › DEVICES › MIDI and check which port each one is on.
- In PARAMS › EDIT › MIDARTO, set **midi outputs** to two devices. Deck B's midi device setting appears.
- Set deck A's midi device to the first module and deck B's to the second.
- Set deck B's channel shift to 0.

Upgrading from v2.3–v2.7: your saved settings keep deck B's old channel shift (0). For one device, set it to 8.

3 Playing from the norns

The three knobs and three keys cover mixing and transport, so you can play a full set without a grid.

Control	Normal	Hold K1
E1	Crossfader	Tempo of both decks
E2	Deck A volume	Deck A tempo (0.1% steps)
E3	Deck B volume	Deck B tempo
K2	Deck A play/pause	Open the file browser for deck A
K3	Deck B play/pause	Open the file browser for deck B

A quick tap on K1 still opens the norns system menu, as it does in every script, so K1 only works as a held shift key.

4 The screen



The main screen: deck A on the left, the mixer in the middle, deck B on the right.

Element	Meaning
File names	Top corners. Long names scroll: they pause at the start, scroll to the end, pause, then start again. Shows LOADING while a file is being read.
Platters	Turn once per bar at the deck's tempo. The marker is bright while playing and dims when paused; the tonearm lifts off when a deck stops. Deck B's label is lighter so you can tell them apart.
End warning	When a playing song is near its end, its platter outline flashes: about once a second, then twice as fast in the last 10 seconds. It stays off while the deck is looping. Set the timing with end warning in PARAMS.
MASTER A / B	Which deck is the tempo master.
Faders and meters	Deck A and B volume faders with output meters between them. An X under a fader means that deck is killed.
Crossfader	The horizontal fader below the mixer.
Progress bars	Position in the file. A tall tick marks hot cue 1, and a short line above shows the loop region.
BPM and tempo	Current BPM, and the tempo offset in percent. The offset blinks while the deck is synced.
Time and state	Time remaining, and a play or pause symbol.

Element	Meaning
Status line	MIDARTO normally; SHIFT while K1 is held; SYNC when a deck is synced; short messages such as PANIC.

5 The file browser


Hold K1 and press K2 (deck A) or K3 (deck B), or press LOAD on the grid. The other deck keeps playing while you browse.

Control	In the browser
E1	Switch the target deck
E2	Scroll the list
E3	Scroll a page at a time
K3	Open a folder, or load the selected file
K2	Close the browser

Loading a file stops that deck first. Long files take a moment to read; the name shows *LOADING* until they're ready.

6 The grid

Midarto uses a 16×8 grid. Deck A is on columns 1–6, the mixer on 7–10 and deck B on 11–16. Rows 1–3, 5 and 6 run in the same order on both decks. The tempo row and the bottom two rows are mirrored, so NDG, CUE, PLAY/PAUSE and SYNC sit on the outer edges under each hand; minus/plus pairs still read left to right.

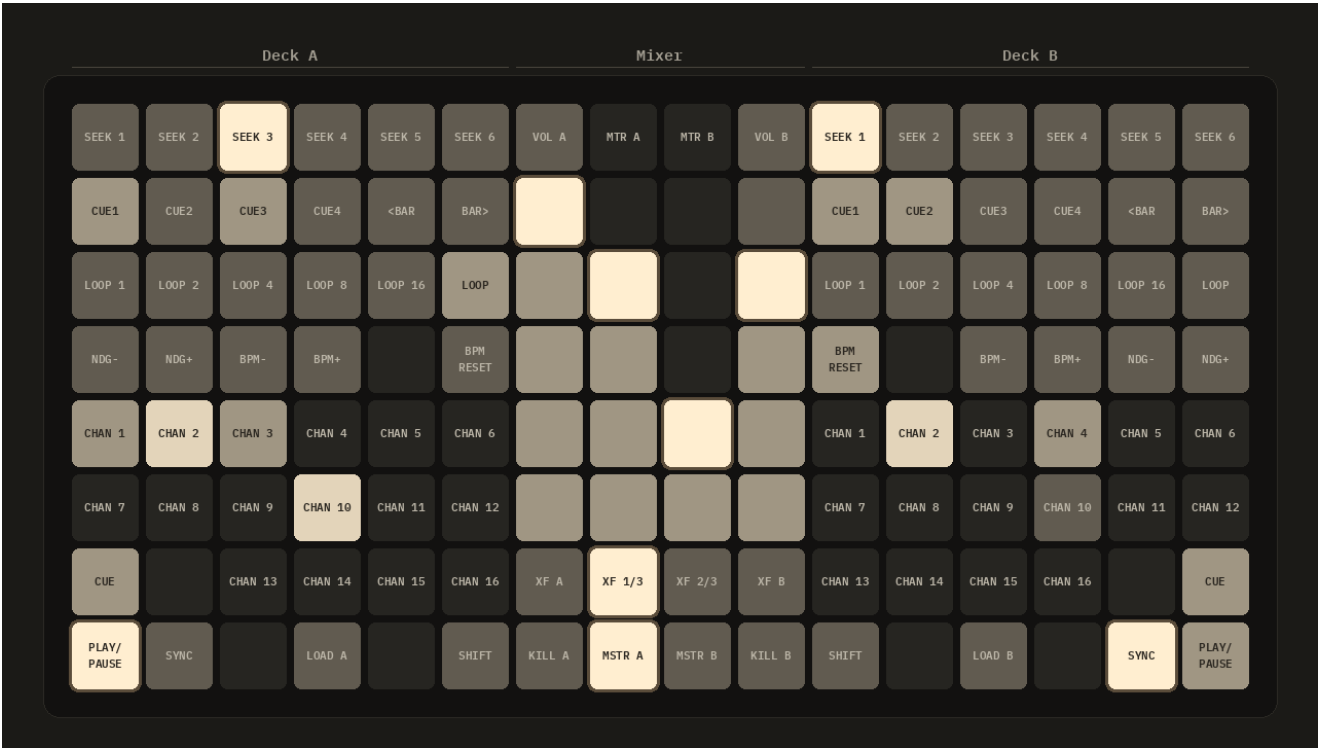

The grid mid-set: deck A playing, deck B synced with its drums muted, crossfader towards A.

Deck keys

Row	Deck A (x1–x6)	Deck B (x11–x16)
1	SEEK 1–6	SEEK 1–6
2	CUE1–4, <BAR, BAR>	CUE1–4, <BAR, BAR>
3	LOOP 1, 2, 4, 8, 16, LOOP	LOOP 1, 2, 4, 8, 16, LOOP
4	NDG-, NDG+, BPM-, BPM+, free, BPM RESET	BPM RESET, free, BPM-, BPM+, NDG-, NDG+
5	CHAN 1–6	CHAN 1–6
6	CHAN 7–12	CHAN 7–12
7	CUE, free, CHAN 13–16	CHAN 13–16, free, CUE
8	PLAY/PAUSE, SYNC, free, LOAD A, free, SHIFT	SHIFT, free, LOAD B, free, SYNC, PLAY/PAUSE

What the deck keys do

- **SEEK 1–6** jumps to that sixth of the file.
- **CUE1–4 (hot cues)**: press an empty one to store the current bar; press a stored one to jump there. SHIFT + hot cue erases it.
- **<BAR / BAR>** jump back or forward one bar.
- **LOOP 1–16** repeats that many bars from the current bar; press the lit one again to release. **LOOP** turns the last loop length back on or off.
- **NDG- / NDG+** nudge slower or faster by 4% while held, to line up beats by ear.
- **BPM- / BPM+** change tempo by 0.5%. With SHIFT held they transpose by a semitone instead (drums are never transposed). **BPM RESET** returns to the file tempo straight away and releases SYNC, or resets the transpose with SHIFT.
- **SYNC** (next to PLAY/PAUSE) matches the other deck's tempo, lines up the bar position and keeps following. Press again to release. The master deck never follows.
- **CUE** returns to hot cue 1 (or the start) and pauses. **SHIFT + CUE** stops the deck and returns to the start.
- **PLAY/PAUSE** starts or pauses the deck, and pulses on each beat.
- **LOAD** opens the file browser for that deck. **SHIFT** is shared by both decks; there's one next to the mixer on each side.
- **free** keys do nothing yet.

Channel mute and solo

Each deck has a key for every MIDI channel, CHAN 1–16. These are the file's own channel numbers, so CHAN 10 is the drums even if you use channel shift.

- **Press a CHAN key** to mute or unmute that channel.
- **SHIFT + CHAN** solos that channel, so only soloed channels play. SHIFT + more channels adds them to the solo, for example drums plus bass.
- **SHIFT + a soloed channel** restores all channels, clearing every solo and mute.
- Every channel key flickers brighter each time its channel plays a note, so you can see which parts are active.

Channel state	Light
Not used in the file	Off
Muted, or silent because others are soloed	Dim
Playing	Medium, flickering brighter on notes
Soloed	Bright, still flickering on notes

Mixer keys

Row	x7	x8	x9	x10
1–6	deck A volume	deck A meter	deck B meter	deck B volume
7	crossfader: A	1/3	2/3	B
8	kill A	master A	master B	kill B

- **Volume:** press a row to set the level (top row = 100%).
- **Meters** show each deck's output after volume, crossfader, kill and mutes. Hold a meter key to cut that deck until you let go.
- **Crossfader:** pressing a lit middle key moves the crossfader to the centre. Use E1 on the norms for smooth fades.
- **Kill** mutes a deck's whole output. **Master** sets the tempo reference for sync and for clock follows master.
- **Panic:** press master A and master B together.

Light levels

Brightness	Meaning
Off	Nothing here
Dim	Available
Medium	Set or stored
Bright	On or active

PLAY pulses on each beat, and a key blinks while its jump waits for the next bar line.

7 How volume works

For MIDI outputs, Midarto sets each channel's volume (MIDI CC7) from the file's own channel volume, multiplied by the deck fader, the crossfader and kill. Moving a fader therefore fades notes that are already

sounding, and each file keeps its own mix balance. Updates are limited to about one every 30 ms per channel so the MIDI line doesn't flood.

For nb voices there's no channel volume, so Midarto scales note velocity instead. That only affects new notes, so long held notes won't fade with the fader.

Instruments

When a file never chooses an instrument for a channel, Midarto sets piano (the General MIDI default), so the part doesn't pick up whatever instrument was left on that channel. Channel shift moves each part's instrument with it.

Shared channels

When both decks use the same channel on the same device (always true for drums on channel 10 with one GM device), the playing deck owns it. Loading, cueing or stopping the other deck sends nothing to that channel: no volume, instrument, controller or all-notes-off messages, so the playing deck carries on untouched.

When both decks play, the louder one owns the channel and sets its volume and instrument, and the quieter deck's notes there play at its own level through velocity. Crossfading therefore hands the drums over from one deck to the other.

8 Tips for a first mix

- Load `acid_trk` into deck A and breaks into deck B, and start deck A.
- Press **sync** on deck B (grid) so it locks to deck A's tempo and bar, then start deck B.
- Turn E1 slowly to crossfade from A to B, watching the meters.
- Try muting deck B's drums (**CHAN 10**), or hold SHIFT and press deck A's bass channel to solo it, to layer the two tracks.
- Set a 4-bar **loop** on the outgoing deck to hold a groove while you bring the next one in.
- Store **hot cues** at the drops you like, so you can jump back to them on the bar.

9 Troubleshooting and limits

Problem	Try this
No sound	Check the deck's midi device in PARAMS, the fader and crossfader, and that the deck isn't killed or cut.
Wrong instruments	Some modules need a General MIDI reset: power-cycle it or enable its GM mode. Midarto re-sends program changes after every jump.
Decks fight over sounds	Both decks are on the same channels of one module. Give deck B a channel shift, or use two modules.
Stuck notes	Run panic from PARAMS, or press master A and master B together on the grid.
A file won't load	The status line shows the reason. Check the file is a standard MIDI file (format 0 or 1).
Errors	Open maiden and look for REPL messages starting with <code>midarto</code> .

Known limits in v2.9

- Reads MIDI file formats 0 and 1 and follows tempo changes inside the file. Files timed in SMPTE frames play at the right speed but show 60 BPM.
- Bars come from the file's first time signature (4/4 if there is none).
- Each deck's nb voice plays every channel of the file on that one voice.
- The grid layout is built for a 16×8 grid; other sizes aren't supported yet.

Credits and contact

Midarto was created by **Glenn Jones, Cutie Suzuki & DJ FingaBlasta**.

Email	mailmrj@gmail.com
Social	@mrjglennjones
GitHub	github.com/mrjglennjones
Project	github.com/mrjglennjones/midarto

Questions, bug reports and mix recordings are welcome. For bugs, include the REPL lines from maiden that start with midarto, and what you pressed.