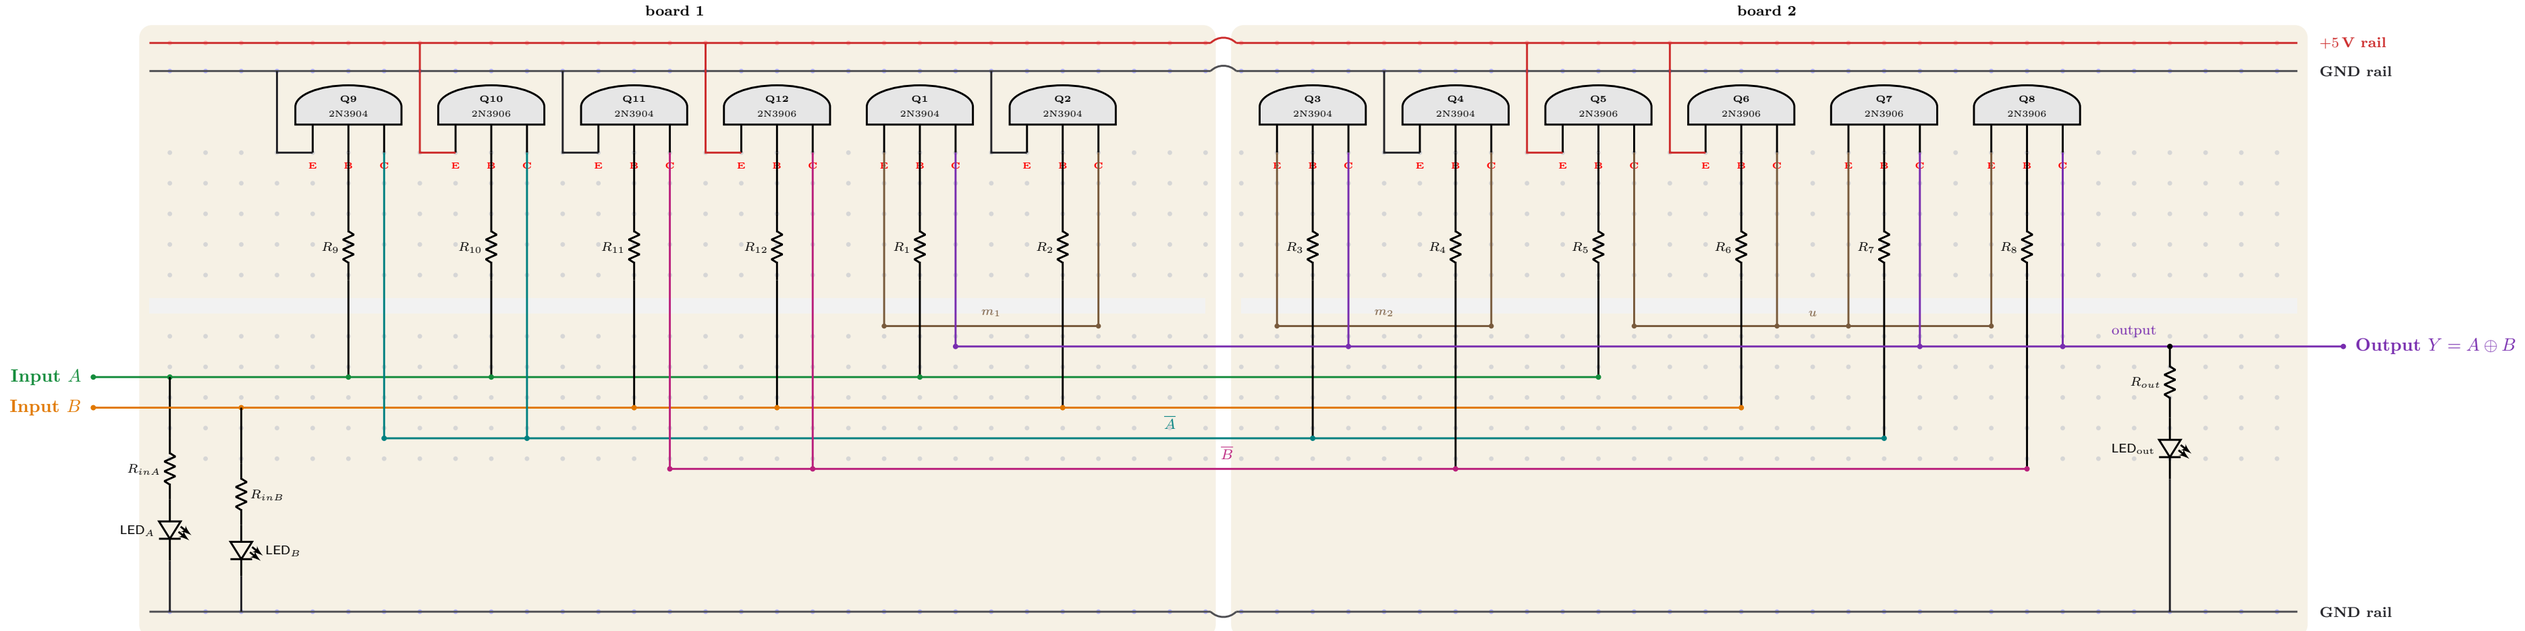

*Each column of five holes in a bank is one node; transistor legs are E B C in **adjacent** holes.*

*Two half-size boards side by side: nothing sits on the seam; signals simply jump across it. Bridge the rails at the seam and bridge **all GND rails into one node**.*