Upgrade the ONU Firmware from GPON OLT in Command Line

Step 01: Download a TFTP server from Google and install. We used **Tftpd64**

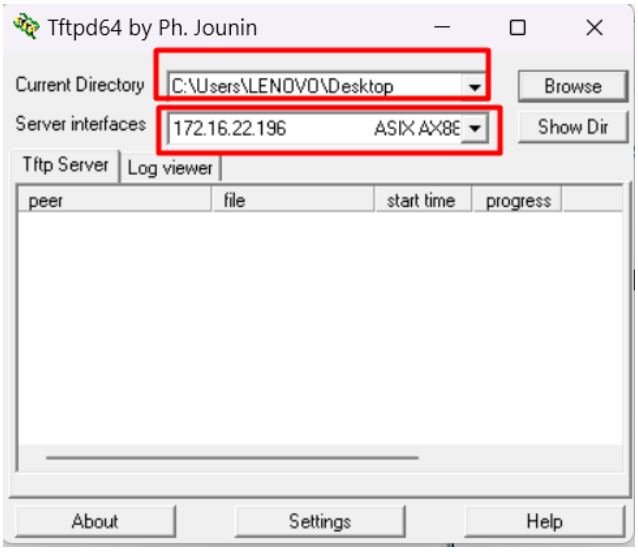

Step 02: Download the latest ONU firmware and save it to the Desktop. Rename the file as "**image.tar**". Before download, **must need to check and confirm the ONU model**. To download the latest firmware please go to below site –

https://sites.google.com/view/bdcom-international/download/firmware/onuont

Step 03: Need to set an IP address to of OLT. Here the OLT IP and subnet are - 172.16.22.26 255.255.255.0

Step 04: Need to connect the PC to OLT any switch port through a UTP cable. Here the PC IP and subnet are - 172.16.22.196 255.255.255.0. Need to ensure ping from OLT to PC and PC to OLT

Step 04: Access to the OLT through telnet. Need to apply below commands in global mode

Copy tftp flash [**Then press enter**]
[Source file name] ? image.tar [**Then press enter**]
[Remote-server ip address [ ] ? 172.16.22.196 [**Then press enter**]
Destination file name [image.tar] ? **[Just press enter]**

The file will be starting to upload to the OLT from PC

```
Switch#Copy tftp flash
Source file name[]?image.tar
Remote-server ip address[]?172.16.22.196
Destination file name[image.tar]?
Jan  7 19:24:38 TID:7e63e10, writing file image.tar
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
#######################################################################
```

After successfully completion the upload a confirmation message will be shown like below –
"TFTP: Successfully receive xxxx blocks, xxxx bytes"

```
#######################################################################
#######################################################################
#######################################################################
#################################################
TFTP:successfully receive 14261 blocks, 7301152 bytes
Switch#Jan  7 19:25:49 file image.tar, successfully wrote
Jan  7 19:25:50 TFTP:successfully receive 14261 blocks, 7301152 bytes
```

Step 05: Use the command "dir" to check if the file (image.tar) is uploaded to the OLT flash memory

```
Switch#dir

Listing Directory /:
     SYS_CORE_DUMP          <FILE>            786432      Jan 01 00:16:22 2000
     switch.bin             <FILE>          10700665      Jan 04 23:43:26 2000
     image.tar              <FILE>           3061760      Jan 01 00:41:16 2000
     startup-config         <FILE>              7029      Jan 01 00:12:04 2000
     config.db              <FILE>            108544      Jan 01 00:12:10 2000
     cfg.hash               <FILE>               172      Jan 01 00:12:24 2000
     ifindex-config         <FILE>                88      Jan 01 00:12:16 2000
free space is 14614528 bytes
```

Step 06: Use the following command to push the firmware to the ONU from OLT

Switch#gpon update-onu image.tar interface gpON 0/1 2

```
Switch#gpon update-onu image.tar interface gpON 0/1 2
Are you sure to update selected ONUs on the PON port(y/n)?y
%ONU-UPDATE: Load image to memory may take some time, please wait...
Loading image.tar.....
++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++
++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++
++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++
++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++++
+++++++++++++++++++++++++++++++++++++++++++++++++++++++
%ONU-UPDATE: File image.tar len 3061760 Byte.
Switch#.....

Switch#
```

Note: It can be upgrade the firmware of a single ONU or it may upgrade multiple ONUs simultaneously. To upgrade the Firmware in multiple ONUs need to use comma (,) or Hyphen (-) to select the range.
Step 07: After successfully push the firmware to the ONU from OLT we need check if the firmware is upgraded by the command "**show gpon onu-image-information interface gpON 0/1:2**"

```
OLT_GP3600-08B#show gpon onu-image-information interface gpON 0/1:2
Image information of GPON0/1:2:
 Image#0  10.0.52B.1209   valid    active    committed
 Image#1  10.0.52B.1209   valid    inactive  uncommitted
```

Step 08: Use the following command to active the firmware on the ONU
gpon commit-image interface gpON 0/1:2

THE END