SETTING SSID/WIFI

1. EDUKASI MSAN

- 1. Koneksikan ke modem pakai LAN ke port 3 (PC/Laptop).
- 2. Ketik alamat IP modem di browser masuk menu, ketik: 192.168.1.1

Jika gagal, cek alamat IP di bawah modem



3. Setelah login ke menu modem, Edukasi setting sesuai merk
/ tipe modem :




Masukan nama wifi

sesuai keinginan di kolom SSID name

contoh : telkomcare

Cara Setting IndiHome

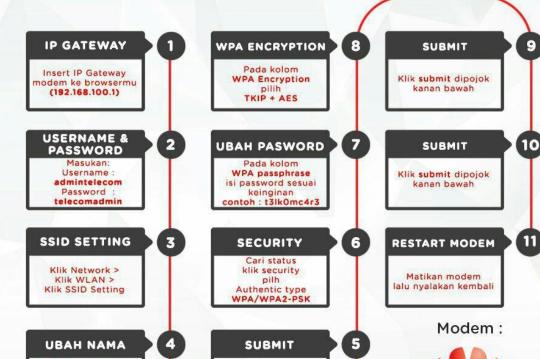

Klik submit dipojok

kanan bawah

HUAWEI

