
Panduan Setting Modem

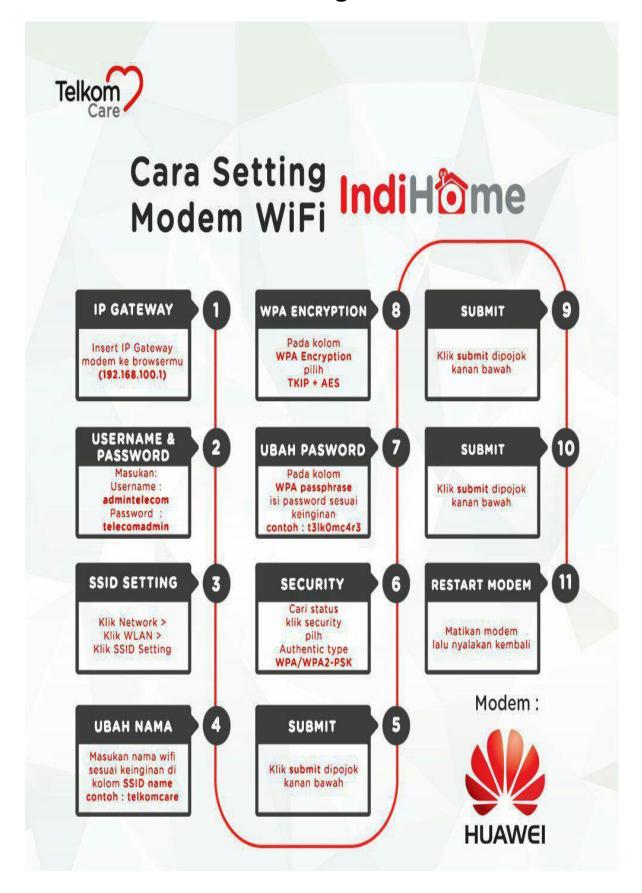



Cara Setting IndiHome Modem WiFi

2

3



8

6

IP GATEWAY

Insert IP Gateway modem ke browsermu (192.168.1.1)

USERNAME & PASSWORD

Masukan: Username: admin Password : admin

SSID SETTING

Klik Network > Klik WLAN > Klik SSID Setting

UBAH NAMA

Masukan nama wifi sesuai keinginan di kolom SSID name contoh: telkomcare

WPA ENCRYPTION

Pada kolom WPA Encryption pilih TKIP + AES

UBAH PASWORD

Pada kolom WPA passphrase isi password sesuai keinginan contoh: t3lk0mc4r3

SECURITY

Cari status klik security pilh Authentic type WPA/WPA2-PSK

SUBMIT

Klik submit dipojok kanan bawah

SUBMIT

9

10

Klik submit dipojok kanan bawah

SUBMIT

Klik submit dipojok kanan bawah

RESTART MODEM

Matikan modem lalu nyalakan kembali

Modem:





Cara Setting IndiHome

2

3

8

6

IP GATEWAY

Insert IP Gateway modem ke browsermu (192.168.1.1)

USERNAME & PASSWORD

Masukan: Username: user Password : user

SSID SETTING

Klik Network > Klik WLAN > Klik SSID Setting

UBAH NAMA

Masukan nama wifi sesuai keinginan di kolom SSID name contoh: telkomcare

WPA ENCRYPTION

Pada kolom WPA Encryption pilih TKIP + AES

UBAH PASWORD

Pada kolom WPA passphrase isi password sesuai keinginan contoh: t3lk0mc4r3

SECURITY

Cari status klik security pilh Authentic type WPA/WPA2-PSK

SUBMIT

Klik submit dipojok kanan bawah

SUBMIT

9

10

Klik submit dipojok kanan bawah

SUBMIT

Klik submit dipojok kanan bawah

RESTART MODEM

Matikan modem lalu nyalakan kembali

Modem:

ZTE中兴