

LINC FEED 22, 24 & 24 PRO

ASSEMBLY PAGE NAME			Machine Assembly	Wire Drive Assembly LF 22	Wire Drive Assembly LF 24 / LF 24 PRO				
CODE NO.:	K NO.:	FIGURE NO.:	A	B	C				
50113	K14024-1	LINC FEED 22	1	1	-				
50114	K14025-1W	LINC FEED 24	2	-	1				
50115	K14026-1W	LINC FEED 24 PRO	3	-	1				

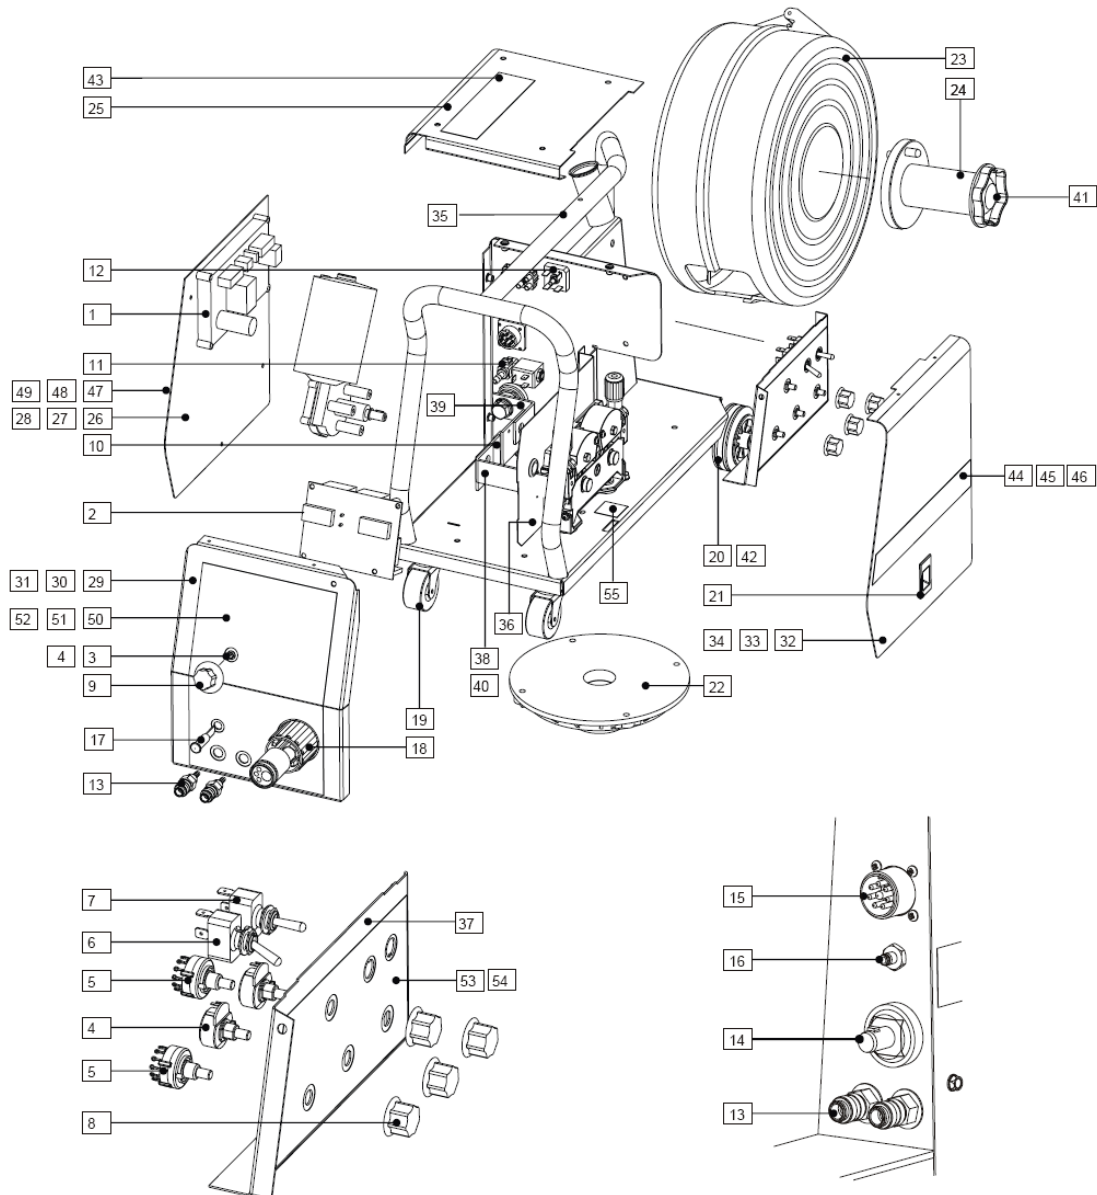


Figure A

Figure A: Machine Assembly

Item	Description	Part Number	QTY	1	2	3	4	5
1	CONTROL P.C. BOARD G4560	C-3731-399-2R	1	X	X	X		
2	CONTROL P.C. BOARD US-67	0918-432-068R	1	•	•	X		
3	CONTROL P.C. BOARD PD-5	0918-432-073R	1	•	•	X		
4	POTENTIOMETERS R11	1158-113-304R	1	X	X	•		
4	POTENTIOMETERS R12, R13	1158-113-304R	2	X	X	X		
5	SWITCH S4, S5	D-4542-012-2R	2	•	•	X		
6	SWITCH S7	1158-650-021R	1	X	X	X		
7	SWITCH S6	1158-650-022R	1	X	X	X		
8	KNOB	9ET13639-3R	4	•	•	X		
8	KNOB	9ET13639-3R	2	X	X	•		
9	KNOB	9ET10491R	1	X	X	X		
10	SHUNT B1	0941-712-025R	1	•	•	X		
11	GAS VALVE K2	0972-423-038R	1	X	X	X		
12	RECTIFIER SET V2	1156-112-044R	1	X	X	X		
13	QUICK CONNECT COUPLING	0744-000-151R	4	•	X	X		
14	SOCKET X5	D-2985-002-1R	1	X	X	X		
15	SOCKET X11	1158-641-008R	1	X	X	X		
16	QUICK CONNECT COUPLING	0744-000-149R	1	X	X	X		
17	LAMP H1	0917-421-024R	1	X	X	X		
18	EURO SLEEVE	1361-599-708R	1	X	X	X		
19	TURNING WHEEL	1029-660-003R	2	X	X	X		
20	WHEEL	1029-660-081R	2	X	X	X		
21	HINGE	0654-610-004R	1	X	X	X		
22	PIVOT PLASTIC PART	1361-598-180R	1	X	X	X		
23	PLASTIC SHROUD ASSEMBLY	0749-901-003R	1	X	X	X		
24	SLEEVE	0744-000-192R	1	X	X	X		
25	TOP PANEL WITH LABELS	R-8040-043-1R	1	X	X	X		
26	LEFT SIDE PANEL WITH LABEL	R-8040-037-8R	1	X	•	•		
27	LEFT SIDE PANEL WITH LABEL	R-8040-037-5R	1	•	X	•		
28	LEFT SIDE PANEL WITH LABEL	R-8040-037-2R	1	•	•	X		
29	FRONT PANEL WITH LABELS	R-8040-077-2R	1	X	•	•		
30	FRONT PANEL WITH LABELS	R-8040-077-3R	1	•	X	•		
31	FRONT PANEL WITH LABELS	R-8040-036-1R	1	•	•	X		
32	RIGHT SIDE PANEL WITH LABEL	R-8040-037-9R	1	X	•	•		
33	RIGHT SIDE PANEL WITH LABEL	R-8040-037-6R	1	•	X	•		
34	RIGHT SIDE PANEL WITH LABEL	R-8040-037-3R	1	•	•	X		
35	RACK	R-3019-023-1/08R	1	X	X	X		
36	DIVIDER PANEL	C-2722-400-1/08R	1	X	X	X		
37	DIVIDER PANEL	R-3019-022-2/08R	1	X	X	X		
38	CONDUCTOR-RAIL	R-1010-008-1R	1	•	•	X		
39	CONDUCTOR-RAIL	R-1010-007-1R	1	•	•	X		
40	CONDUCTOR-RAIL	R-1010-009-1R	1	X	X	•		
41	PLASTIC CAP	B11035-1	1	X	X	X		
42	AXLE	R-2013-021-1R	1	X	X	X		
43	WARNING LABEL	2719-107-728R	1	X	X	X		
44	LABEL LEFT SIDE PANEL	2719-107-982R	1	X	•	•		
45	LABEL LEFT SIDE PANEL	2719-107-984R	1	•	X	•		
46	LABEL LEFT SIDE PANEL	2719-107-986R	1	•	•	X		
47	LABEL RIGHT SIDE PANEL	2719-107-098R	1	X	•	•		
48	LABEL RIGHT SIDE PANEL	2719-107-983R	1	•	X	•		
49	LABEL RIGHT SIDE PANEL	2719-107-192R	1	•	•	X		
50	LABEL FRONT PANEL	2719-107-253R	1	X	•	•		
51	LABEL FRONT PANEL	2719-107-103R	1	•	X	•		
52	LABEL FRONT PANEL	2719-107-105R	1	•	•	X		
53	LABEL PARAMETERS	2719-107-972R	1	X	X	•		
54	LABEL PARAMETERS	2719-107-097R	1	•	•	X		
55	WARNING LABEL (HAND)	2719-107-732R	1	X	X	X		
56	HARNESS	R-7040-012-3R	1	X	•	•		
57	HARNESS	R-7040-012-2R	1	•	X	•		
58	HARNESS	R-7040-012-1R	1	•	•	X		

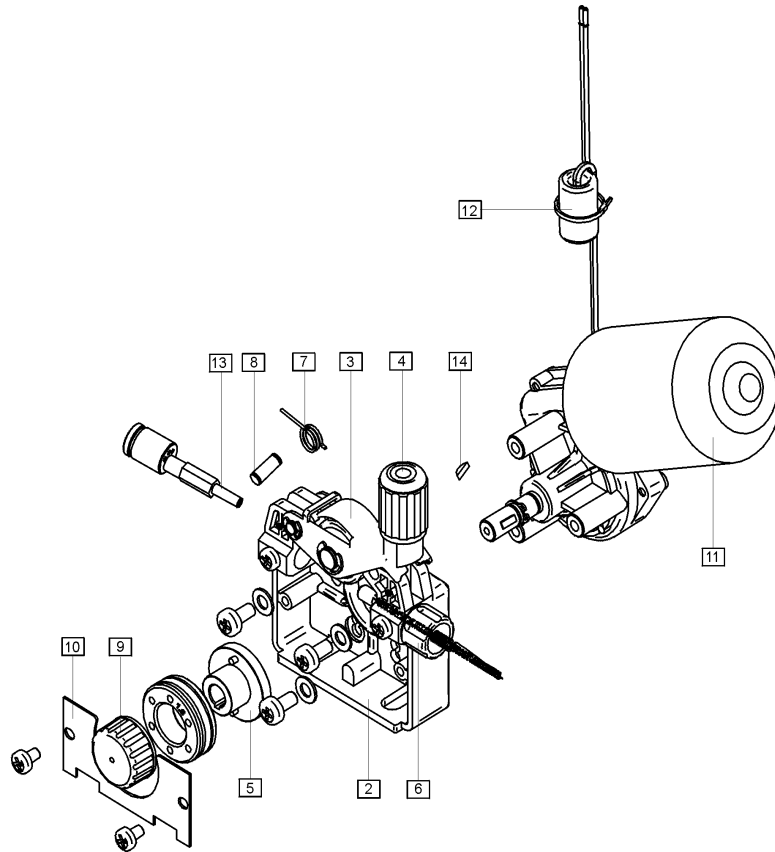


Figure B

Figure B: Wire Drive Assembly LF 22

Item	Description	Part Number	QTY	1	2	3	4	5
1	WIRE FEEDER COMPLETE	0744-000-169R	1	X				
2	FEED PLATE	0646-231-123R	1	X				
3	PRESSURE ARM COMPLETE	0646-231-096R	1	X				
4	FIXING ARM COMPL.	0646-231-097R	1	X				
5	ADAPTER COPL.	0744-000-194R	1	X				
6	INLET GUIDE COMPLETE	0744-000-193R	1	X				
7	SPRING PRESSURE ARM	0646-231-125R	1	X				
8	AXIS PRESSURE ARM	0646-231-120R	1	X				
9	FIXING CAP	0744-000-195R	1	X				
10	METAL COVER	0646-231-127R	1	X				
11	D.C. MOTOR	1111-722-046R	1	X				
12	FERRITE TUBE	1158-290-036R	1	X				
13	WIRE GUIDE TUBE	D-1829-066-4R	1	X				
14	WOODRUFF KEY	0646-231-102R	1	X				


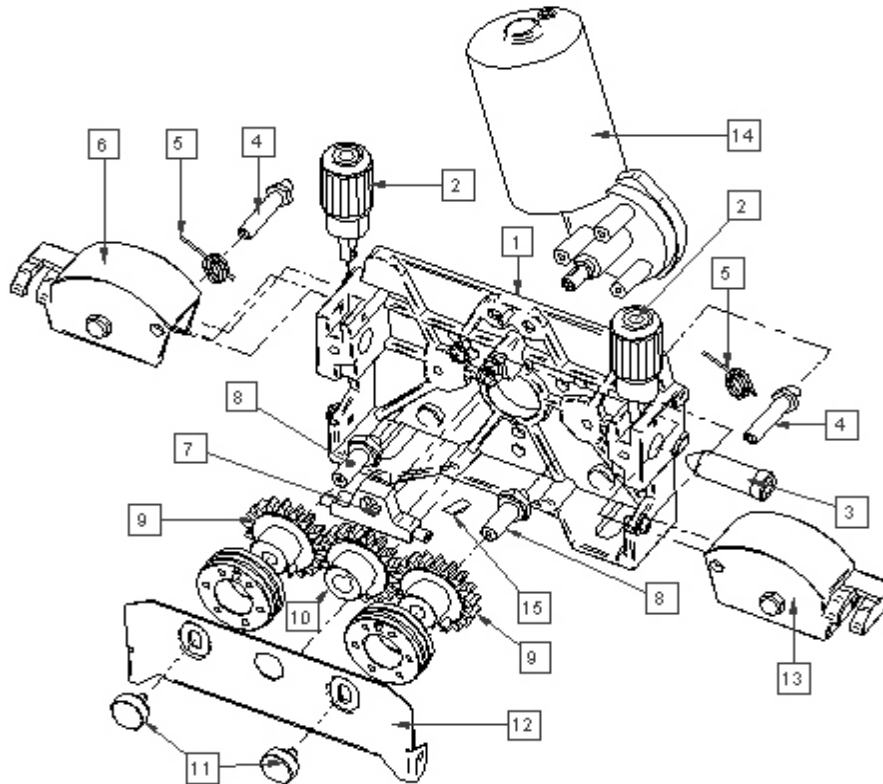


Figure C

Figure C: Wire Drive Assembly LF 24 / LF24 PRO

Item	Description	Part Number	OLD Part Number	QTY	1	2	3	4	5
	WIRE FEEDER COMPL.	0744-000-165R		1	X				
1	FEED PLATE	0646-233-002R	S51997-1	1	X				
2	FIXING ARM COMPL.	0646-233-015R		2	X				
3	INLET GUIDE	0646-233-025R	T51125	1	X				
4	AXIS PRESSURE ARM	0646-233-003R	S51997-2	2	X				
5	SPRING PRESSURE ARM	0646-233-013R	S51997-12	2	X				
6	PRESSURE ARM COMPL.L	0646-233-007R	S51997-5	1	X				
7	INTERMEDIATE GUIDE	0646-233-023R	T51126	1	X				
8	AXIS DRIVE ROLL	0646-233-020R	S51997-19	2	X				
9	GEAR WHEEL ROLL	0646-231-090R	S51889-2	2	X				
10	GEAR WHEEL MOTOR	0646-233-028R	S51888	1	X				
11	FIXING CAP	0646-233-022R	S51997-20	2	X				
12	METAL COVER	0646-233-027R	S51997-23	1	X				
13	PRESSURE ARM COMPL.R	0646-233-005R	S51997-4	1	X				
14	MOTOR -28V	1111-722-047R	L12073	1	X				
15	WOODRUFF KEY	0646-231-102R		1	X				

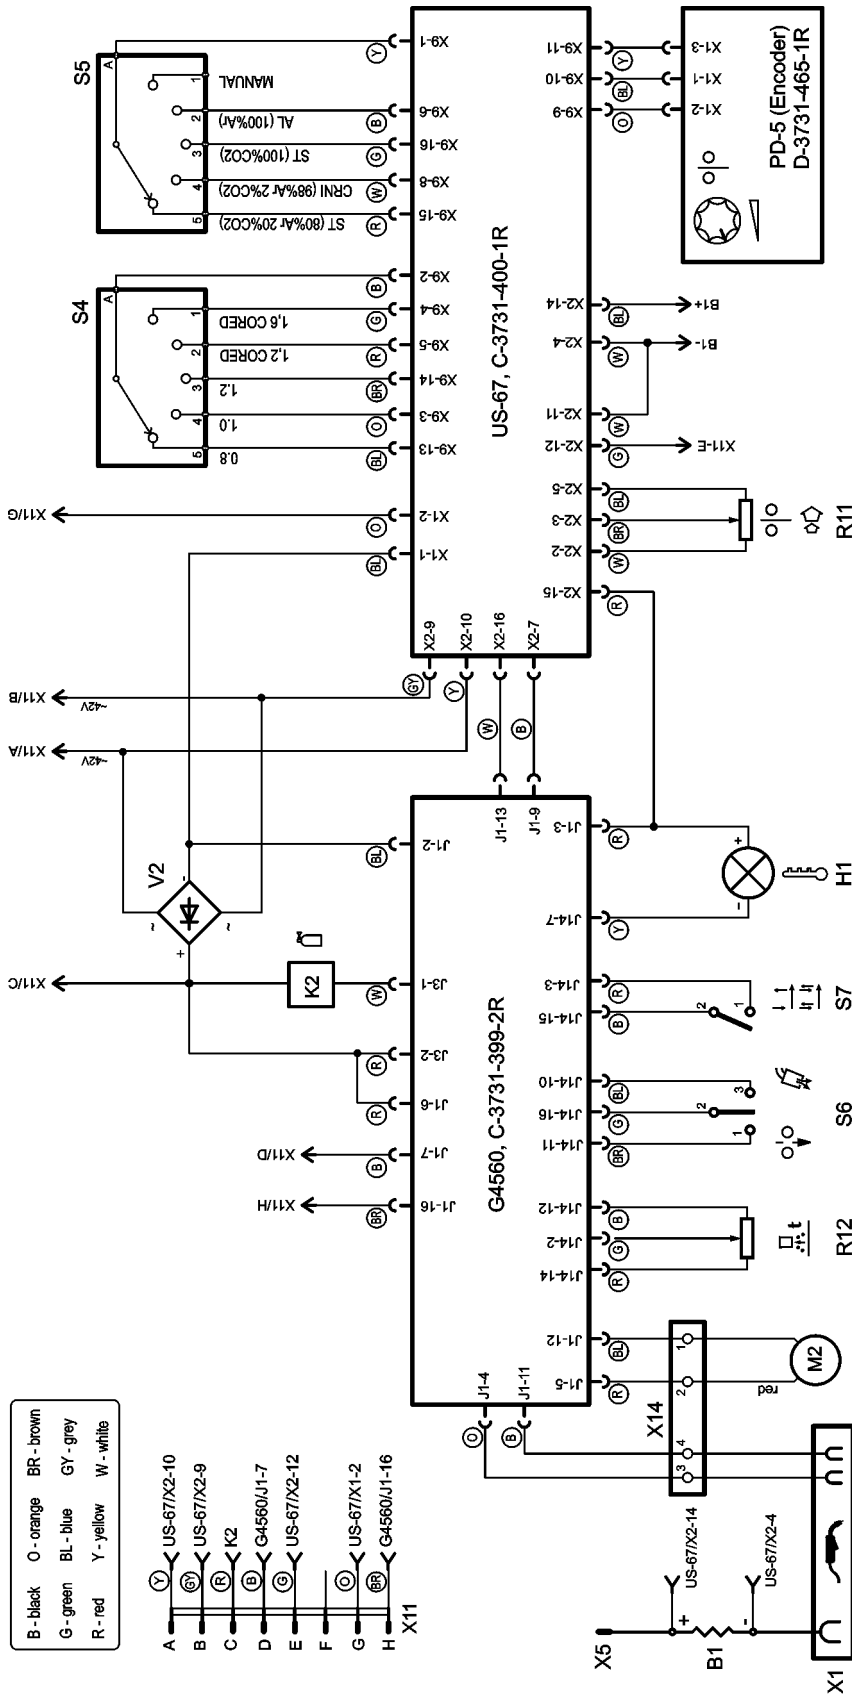

WIRE FEEDER LF 24 PRO

