


SHARP®

KC-F30SA



High-Density 7000 *

“Plasmacluster” and “Device of a cluster of grapes” are trademarks of Sharp Corporation.

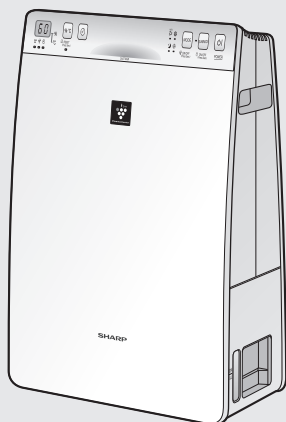

Free standing type

SHARP

SHARP CORPORATION

OSAKA, JAPAN

AIR PURIFIER with Humidifying Function OPERATION MANUAL

ENGLISH

*The number in this technology mark indicates the approximate number of ions supplied into 1 cm³ of air, which is measured around the center of a room (with the “High-Density Plasmacluster 7000” applicable floor area), at a height of 1.2m above the floor, at the MAX wind volume setting in air purifying mode, and when a humidifier & air purifier or an air purifier using the high-density plasmacluster ion evolving device is placed close to a wall. This product is equipped with a device of corresponding capacity.

Before operating your new air purifier, please read the following


The air purifier draws in room air through the air intake, circulates it through a Pre-Filter, a Deodorizing Filter and a HEPA Filter inside the unit, and then discharges it through the air outlet. The HEPA Filter can remove 99.97% of dust particles as small as 0.3 microns that pass through the filter and also helps absorb odors.

The Deodorizing Filter gradually absorbs odors as they pass through the filter.

Some odors absorbed by the filters will break down over time, causing additional odors. Depending on usage conditions, and especially if the product is used in environments significantly more severe than a normal household, these odors may become noticeable sooner than expected. If these odors persist, replace the filters. (Ref. E-14)

NOTE

- The air purifier is designed to remove air-suspended dust and the odors. The air purifier is not designed to remove harmful gases such as carbon monoxide contained in cigarette smoke. The air purifier may not completely remove an odor if the source of the odor is still present.

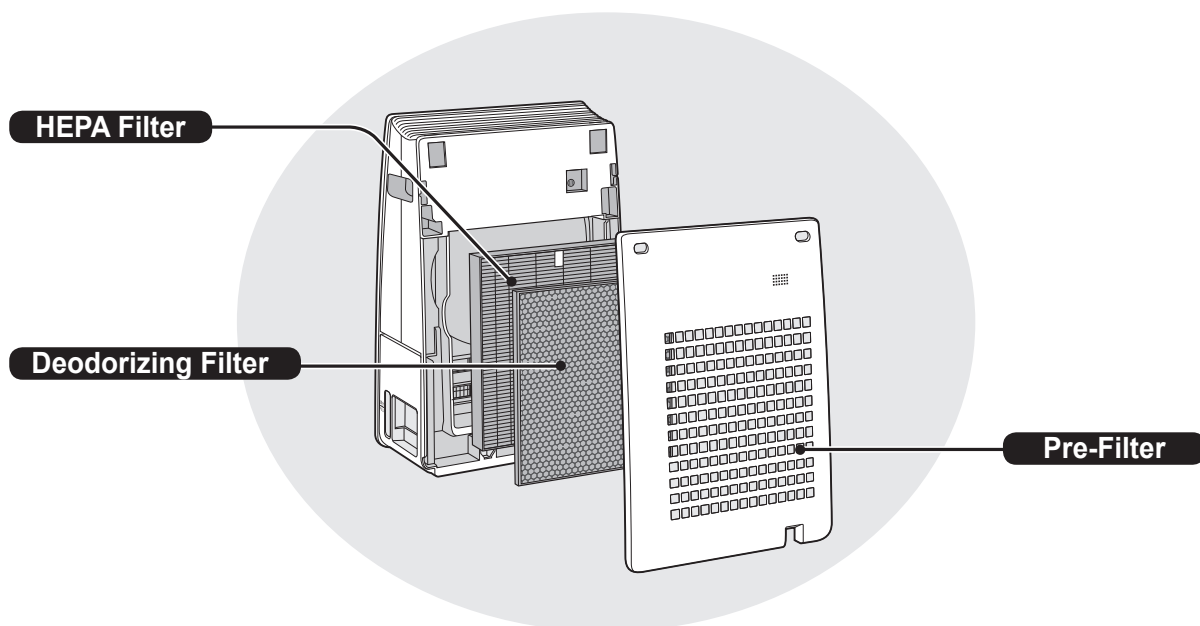

FEATURES

A Unique Combination of Air Treatment Technologies

Triple Filtration System + Plasmacluster + Humidification

TRAPS DUST*

Pre-Filter traps dust and other large airborne particles.

DECREASES ODORS

Deodorizing filter absorbs many common household odors.

REDUCES POLLEN & MOLD*

HEPA filter traps 99.97% of particles as small as 0.3 microns.

FRESHENS

By emitting a balance of positive and negative ions, Plasmacluster air treatment is a natural process.

HUMIDIFIES

Can operate up to 5 hours per filling.**

*When air is circulated through the filter system.

**Room size: up to 16 m²

Sensor technology continuously monitors air quality and automatically adjusts operation based on air purity and humidity level.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	E-2
PART NAMES	E-4
PREPARATION	E-6
OPERATION	E-8
USEFUL FUNCTION	E-9
CARE AND MAINTENANCE	E-11
TROUBLESHOOTING	E-16
SPECIFICATIONS	E-17

Thank you for purchasing this SHARP Air Purifier. Please read this manual carefully before using the air purifier. After reading, keep the manual in a convenient location for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances, including the following:

WARNING - Always observe the following to reduce the risk of electrical shock, fire, or injury:

- Read all instructions before using the unit.
- Use only a 220-240 volt outlet.
- **Do not use the unit if the power cord or plug is damaged or if the connection to the wall outlet is loosened.**
- Periodically remove dust from the power plug.
- **Do not insert fingers or foreign objects into the air intake or air outlet.**
- **When removing the power plug, always hold the plug and never pull the cord.**
Failure to do so can cause a short circuit resulting in electrical shock or fire.
- **Do not remove the plug when your hands are wet.**
- **Do not use this unit near gas appliances or fireplaces.**
- Always unplug the unit when refilling the Humidifying Tray, cleaning the unit, or when the unit is not in use. Failure to do so can cause a short circuit resulting in electrical shock or fire.
- **In order to avoid safety hazards, if the power cord is damaged, it must be replaced by either the manufacturer, a service agent, a Sharp authorized Service Center or a similarly qualified service provider.**
- Only a Sharp Authorized Service Center should service this air purifier. Contact the nearest Service Center for any problems, adjustments, or repairs.
- Do not operate the unit in rooms where aerosol insecticides are present. Do not operate the unit in rooms where there is oily residue, incense, sparks from lit cigarettes, or chemical fumes in the air. Do not operate the unit in places where it may get wet, such as a bathroom.
- Be cautious when cleaning the unit. Strong corrosive cleansers can damage the exterior.
- When carrying / moving the unit, first remove the Humidifying Tray, and then hold the unit by the handles on both sides.
- Carrying / moving the unit when there is water in the Humidifying Tray can cause the following:
 - Electrical shock.
 - Damage to the unit caused by internal spillage.
 - Water spillage.
- Do not drink the water in the Humidifying Tray.
- Replace the water in the Humidifying Tray daily with fresh tap water, and regularly clean it (Ref. E-12 and E-13). When the unit is not in use, dispose of the water in the Humidifying Tray. Leaving water in the Humidifying Tray can cause mold, bacteria, and bad odors. In rare cases, such bacteria can be a health hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, nor by persons with insufficient experience and knowledge of how to operate the unit, unless they are given proper supervision and instruction on how to use the unit by a person responsible for their safety. Do not allow children to play with the unit.

NOTE - What to do if the unit interferes with radio or TV reception

If the air purifier interferes with radio or television reception, try one or more of the following measures:

- Adjust or reposition the receiving antenna.
- Increase the distance between the unit and the radio or TV.
- Connect the equipment into an outlet on a circuit different from that of the radio or TV receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTIONS CONCERNING OPERATION

- Do not operate the unit without the filters and the Humidifying Tray properly installed.
- Keep the unit away from water.
- Do not wash and reuse the HEPA filter and Deodorizing filter.
Doing so will not improve filter performance and can also cause electric shock or operating malfunctions.
- Clean the exterior with a soft cloth only.
Do not use volatile liquids or detergents. Doing so can damage or crack the exterior of the unit.
In addition, doing so can cause sensor malfunctions.
- The frequency of descaling maintenance will depend on the hardness of and the impurities in the water that you use; the harder the water the more often descaling will be necessary.
- Before moving the unit, make sure it is not operating, and remove the Humidifying Tray while holding the side handle of the unit.
- When removing / reattaching the Humidifying Tray, be careful not to get your fingers caught inside the unit.
- When moving the unit, use the handles on both sides.
Do not move the unit when it is in operation.
- Do not block the air intake or air outlet.
- Do not place the unit near or on hot objects, such as stoves or heaters, or where it may come into contact with steam.
- Always operate the unit in an upright position.

INSTALLATION GUIDELINES

- When using the unit, place it at least 2 meters away from equipment that emits electric waves, such as televisions or radios, to avoid electrical interference.
- Avoid locations where the sensors are exposed to direct wind.
Failure to do so can cause the unit to malfunction.
- Avoid locations where furniture, fabrics, or other objects can come in contact with the unit and interfere with the intake and outtake of air.
- Avoid locations where the unit is exposed to condensation or drastic changes in temperature.
Appropriate room temperature is between 0 – 35 °C.
- Place the unit on a level and stable surface with sufficient air circulation.
When placed on heavy carpet, the unit may vibrate slightly.
Place the unit on a level surface to avoid water leakage from the Humidifying Tray.
- Avoid locations that generate grease or oily smoke.
Failure to do so can cause the unit exterior to crack and the sensors to malfunction.
- The dust collecting ability of the unit is effective even when the unit is as close to 3 cm from the wall, the surrounding walls and floor may get dirty. Please place the unit at a distance from the wall.
The wall directly behind the air outlet may become dirty over time. When using the unit for an extended period of time at the same location, periodically clean the walls adjacent to it.


FILTER GUIDELINES

- Follow the instructions in this manual for proper filter care and maintenance.


PART NAMES

FRONT / BACK

FRONT


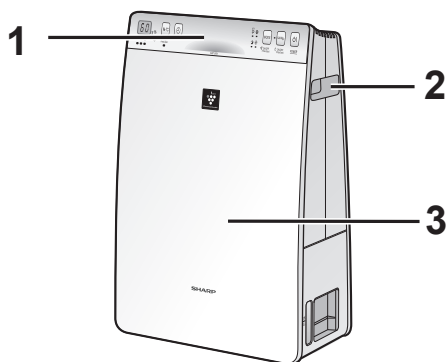


BACK

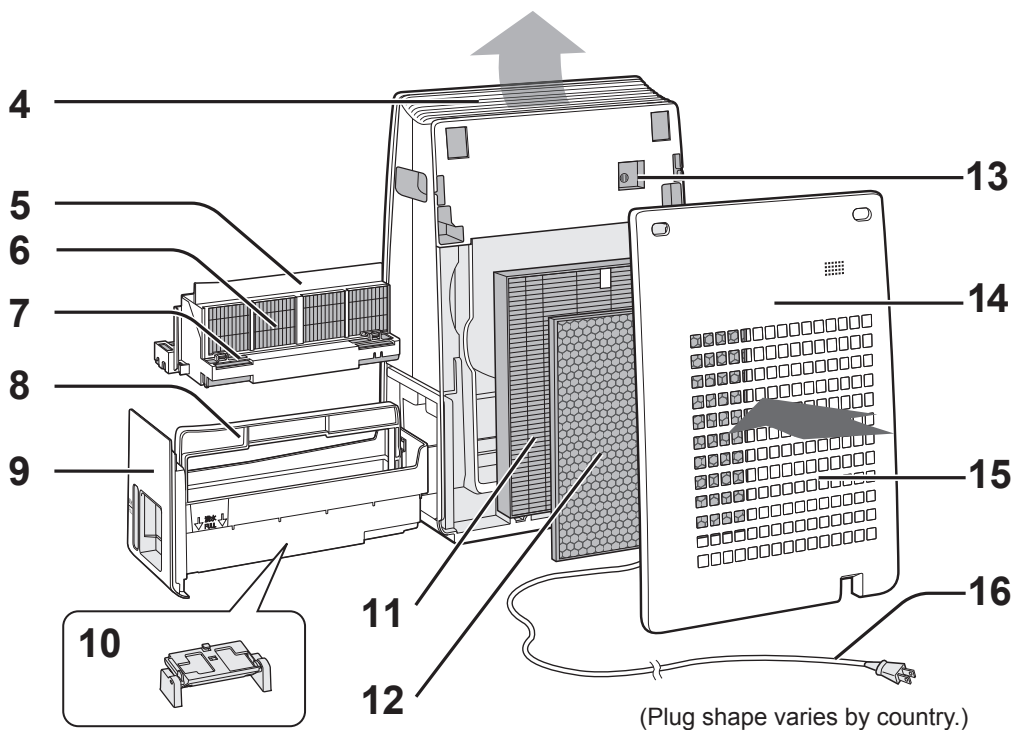


1	Operation Panel / Display (Ref.E-5)	9	Humidifying Tray
2	Handle (2 Locations)	10	Float
3	Main Unit	11	HEPA Filter
4	Air Outlet	12	Deodorizing Filter
5	Filter Frame	13	Sensor (internal)
6	Humidifying Filter	14	Back Panel (Pre-Filter)
7	Float (in Filter Frame)	15	Air Inlet
8	Tray Handle	16	Power Cord / Plug

OPERATION PANEL / DISPLAY

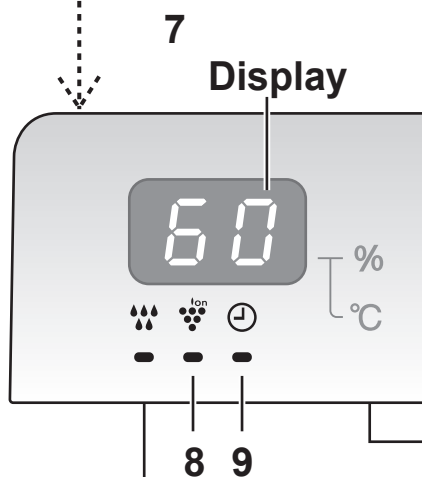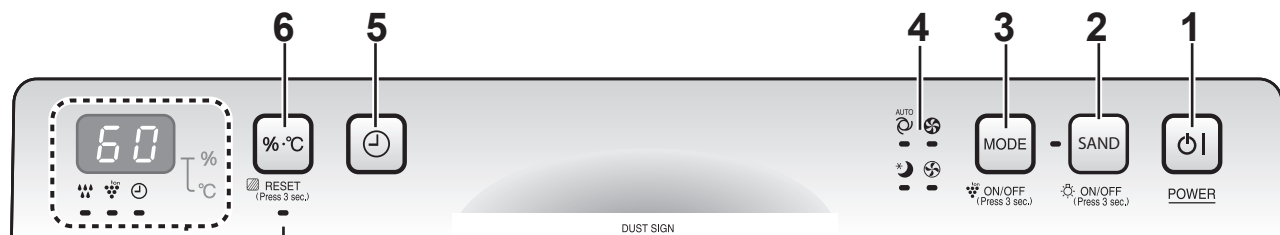

Dust Sign

Indicates the air purify level 3 colors.

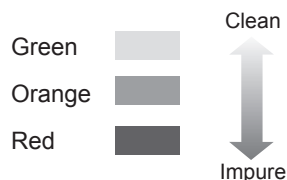

Humidify Light

Green Humidify ON


Green Unit needs water (Flashing)

Off Humidify OFF


Humidity / Temperature monitor

Indicates the approximate humidity / temperature level in the room.

temperature 0 to 50°C is displayed at 1°C-intervals

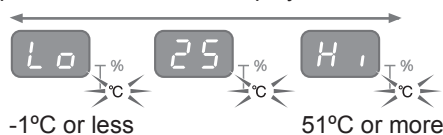

humidity 6 to 99% is displayed at 1%-intervals



1	POWER ON/OFF Button	5	OFF Timer Button
2	SAND Button / Indicator Light (green) (Press 3 sec.) LIGHT ON/OFF Button	6	Display Select Button (Press 3 sec.) FILTER RESET Button
3	MODE Button (Press 3 sec.) Plasmacluster Ion ON/OFF Button	7	Filter Indicator Light (Orange)
4	Fan Speed Indicator Lights (green)	8	Plasmacluster Ion Indicator Light (blue)
		9	OFF Timer Indicator Light (green)


PREPARATION



Always be sure to remove the power plug from the wall outlet.


FILTER INSTALLATION

1

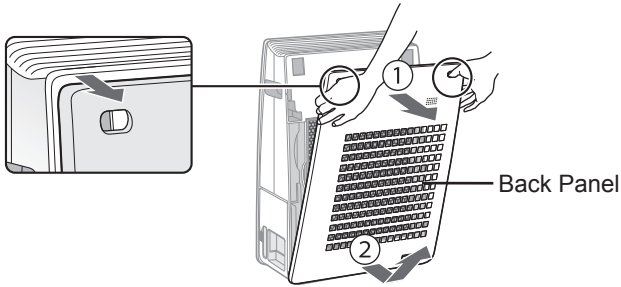


Remove the Back Panel.

2

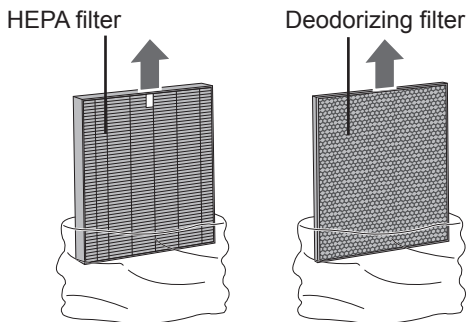


Remove the Filters from the plastic bag.

3

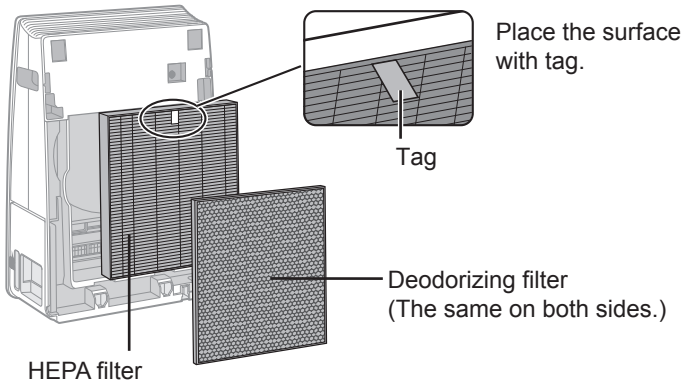

Install the Filters in the correct order as shown.


4

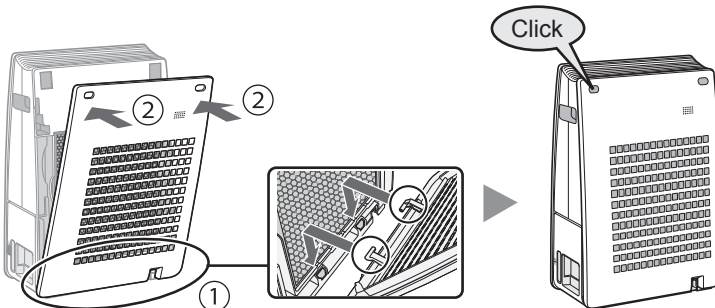

Install the Back Panel.

REFILLING THE HUMIDIFYING TRAY


Humidify air passed through by vaporizing water pumped up from Humidifying Tray.
The unit can be used even without water in the Humidifying Tray.

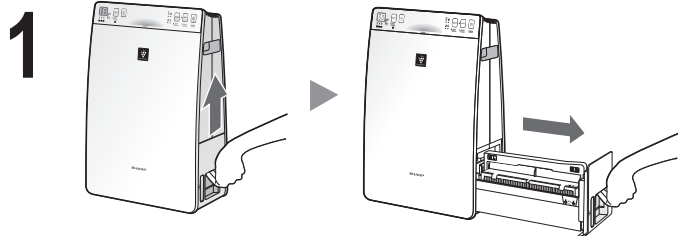

Pull out the Humidifying Tray.

CAUTION

Clean the Humidifying Tray if it becomes dirty or there is a noticeable odor.
(Ref. E-12,E-13)

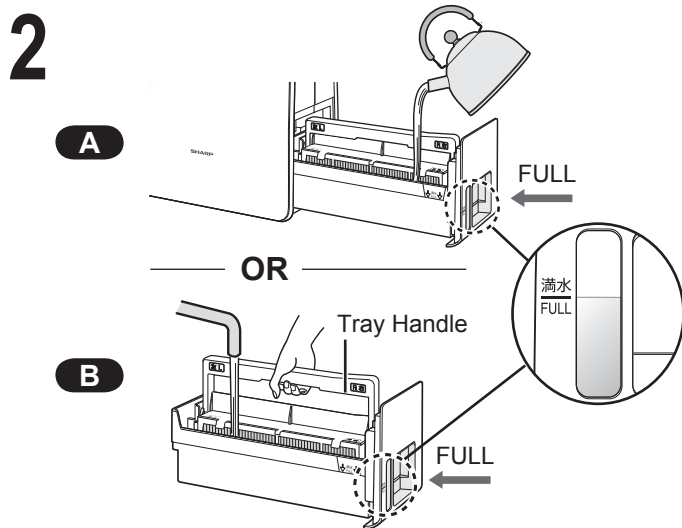


Fill the Humidifying Tray with tap water by method **A or **B**.**

CAUTION



- The Filter Frame is floated up when water is filled.
- When carrying the Humidifying Tray, hold it with both hands or grip the Tray Handle.
- Gently fill it with water to avoid splash water.
- Do not fill beyond the “FULL” indicator. The Humidifying Tray does not get into the unit if water is filled too much.

3 Install the Humidifying Tray.

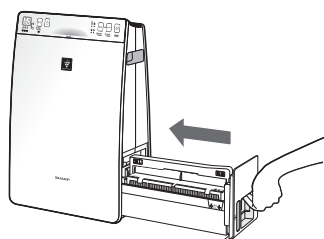

CAUTION

- Return the Tray Handle to its original position before installing.

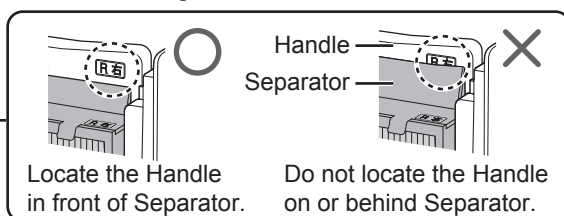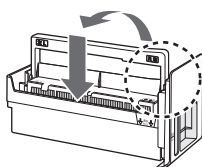


CAUTION

- Do not expose the unit to water. Doing so can cause a short circuit or electrical shock.
- Use only fresh tap water. Using other water sources risks the growth of molds, fungi, or bacteria.
- Do not use hot water (40 °C), chemical agents, aromatic substances. Doing so can deform the unit or cause it to malfunction.
- When removing and installing the Humidifying Tray, be careful not to spill any water.


OPERATION

Power ON / OFF

START

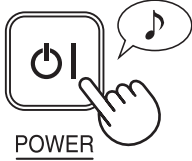

STOP

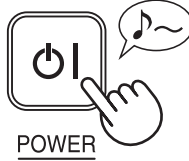


- Select the desired fan speed by **MODE**.
- Unless the power cord has been unplugged, the operation starts in the previous mode it was operated in.

SAND

Removes sand rapidly and delivers fresh healthy air by discharges strong air flow for 60 minutes.

START


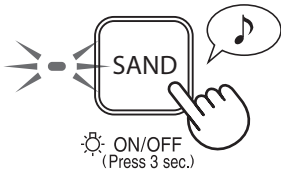


NOTE

- When the operation finishes, the unit will return to the prior operation mode.
It is able to change the other mode during this mode.

FAN SPEED

Select the desired fan speed.

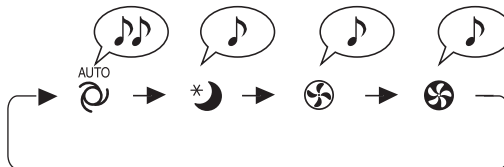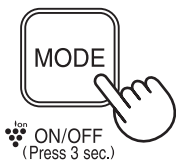

NOTE

SLEEP *

- Front surface Indicators go off automatically.


AUTO

- The fan speed is automatically switched between HIGH and LOW depending on the humidity and the amount of impurities in the room.

USEFUL FUNCTION


LIGHT CONTROL

You can set the front surface Indicators to OFF when the Indicator is too bright.

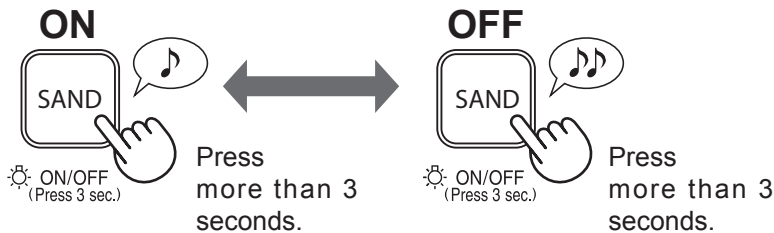

Plasmacluster Ion ON/OFF

When Plasmacluster Ion is ON, the Plasmacluster Ion Indicator Light is on. (blue)

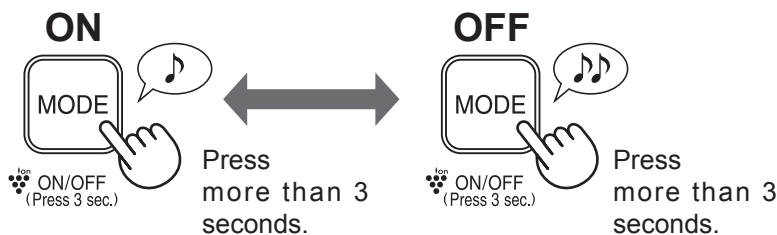


NOTE



ENGLISH

Changing display (humidity / temperature)

You can select either humidity or temperature at the time to be displayed.

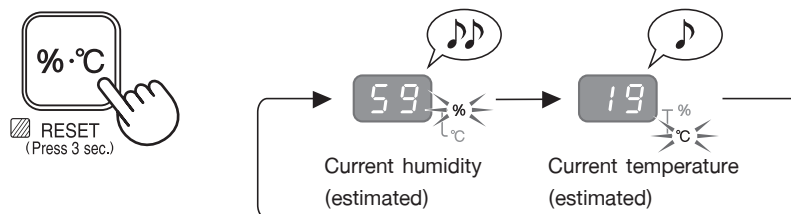

NOTE


Current temperature and current humidity indicate the estimated values.
The values may be different from values indicated by other temperature gauge hygrometer.

- There is no function for adjusting the temperature.
- Humidity setting cannot be adjusted.
- Cannot dehumidify .

USEFUL FUNCTION

Off TIMER

Select the length of time you want. The unit automatically stops once the selected time is reached.

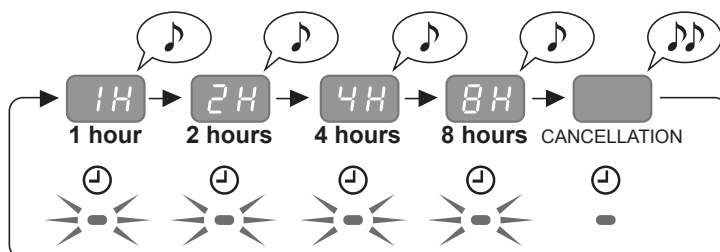

NOTE


- Pressing displays the remaining time.
- To reset the operating time, press while the remaining time is being displayed.

Auto RESTART

If the unit is unplugged or if there is a power failure, the unit will resume operation with the previous settings after power is restored. The default setting is ON.

ON


(with the unit OFF)

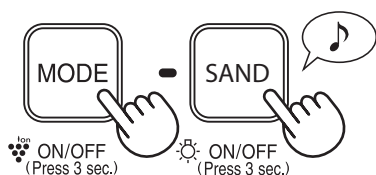

Press both buttons at the same time for 3 seconds or more.


OFF

(with the unit OFF)

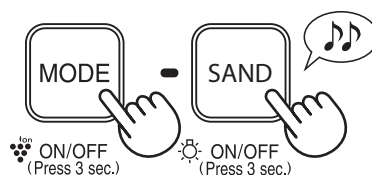

Press both buttons at the same time for 3 seconds or more.

Lighting

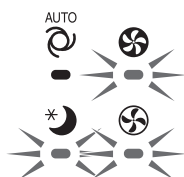


If the , and indicators light up for 10 seconds, the setting is completed.

CARE AND MAINTENANCE



FILTER INDICATOR




The filter Indicator Light will turn on after approximately 720 hours. (30 days × 24 hours = 720 hours)

This is a reminder to perform the maintenance described below. (Ref.E-11,E-12,E-13,E-14)





After performing maintenance, reset the Filter Indicator.

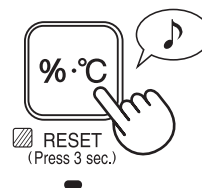

Press more than 3 seconds.

CARE INDEX


In case of using at the location where air pollution and odor are significant, maintain frequently even if Filter Indicator Light is not ON.

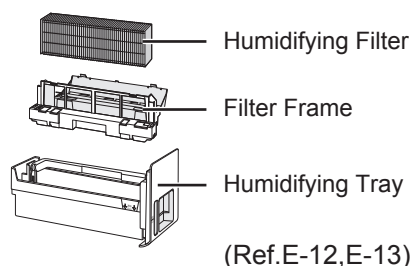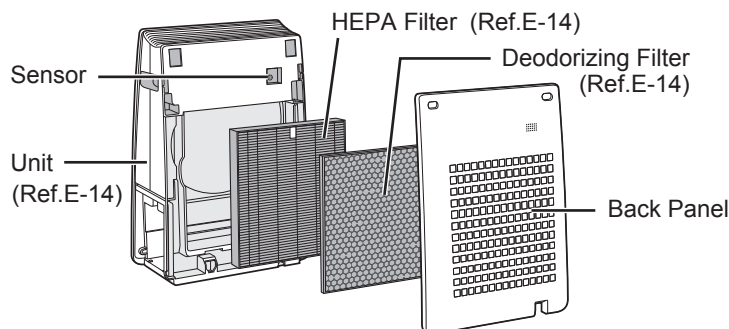

BACK PANEL


SENSOR

Gently remove dust with an appropriate cleaning tool, such as a vacuum cleaner with the proper attachment.

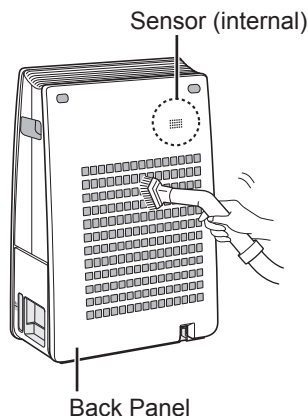

NOTE How to clean when overly dirty

BACK PANEL

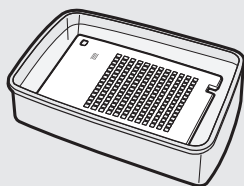


1. Add a small amount of kitchen detergent to water and soak for about 10 minutes.

CAUTION

- DO NOT apply excessive pressure when scrubbing the back panel.
2. Rinse off the kitchen detergent with clean water.
 3. Completely dry the filter in a well-ventilated area.

SENSOR

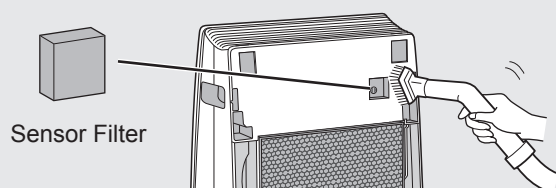

1. Remove the Back Panel and removing the Sensor Filter.
2. Gently remove dust from the Sensor with an appropriate cleaning tool, such as a vacuum cleaner with the proper attachment.
3. If the Sensor Filter is overly dirty, wash it with water and dry it thoroughly.


CARE AND MAINTENANCE




HUMIDIFYING FILTER / TRAY

Odor occurrence may be suppressed when washing Humidifying Filter and Humidifying Tray with water carefully even if the Filter Indicator Light is not ON.


Remove the Humidifying Filter from the Tray.

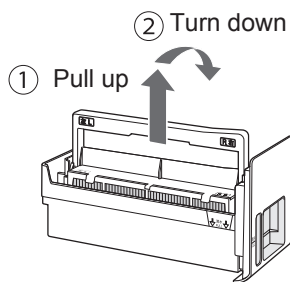

Turn the handle down on the reverse side.

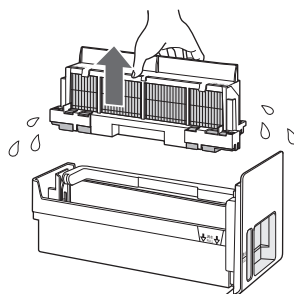

Remove the Filter Frame.



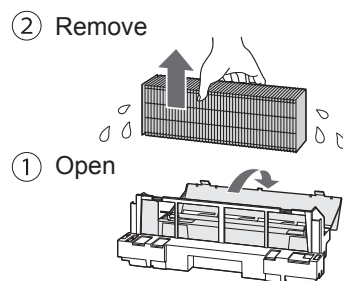


Remove the Humidifying Filter.

CAUTION

- Drops of water may drip from the Humidifying Filter and the Filter Frame.


Rinse the Humidifying Tray, the Filter Frame and the Humidifying Filter.

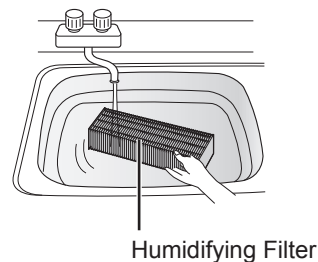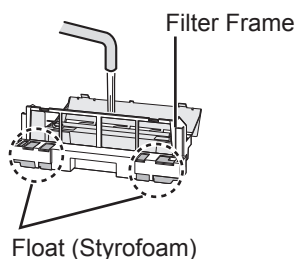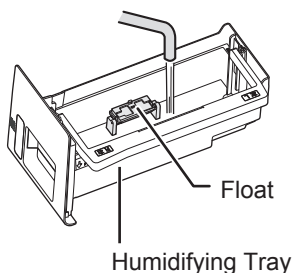

CAUTION

- Do not remove the Floats.
- If the Float comes off from the Humidifying Tray, install it in the order shown below.

Cross-Section view

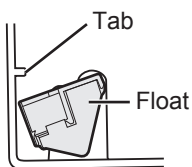

1. Insert the float under this tab.

3. Insert the tab on the other side of the float into the hole.

2. Insert the tab of the float into the hole.

Always be sure to remove the power plug from the wall outlet.

NOTE How to remove the water scale

Recommended descaling solutions

- Citric acid (available at some drugstores)
- 100% bottled lemon juice with no pulp.

<with citric acid>




<with lemon juice>



1. Soak in water with a descaling solution for about more 30 minutes.


CAUTION

- When using lemon juice as your descaling solution, allow for more soak time.
2. Rinse off the descaling solution with plenty of water.


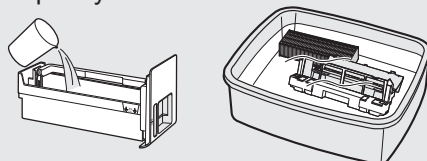


NOTE How to clean the Humidifying Tray and the Filter Frame when overly dirty



1. • Remove the Filter Frame from the Humidifying Tray and fill it with water until the "FULL" indicator.
• Put the Filter Frame in water.
 2. Add a small amount of kitchen detergent to the water.
 3. Soak for 30 minutes.
 4. Rinse off the kitchen detergent with clean water.
- Clean any hard-to-reach parts which with a cotton swab or toothbrush.

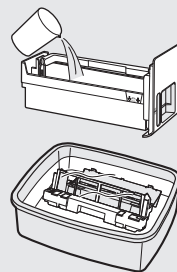

After maintenance, correctly reattach the parts.

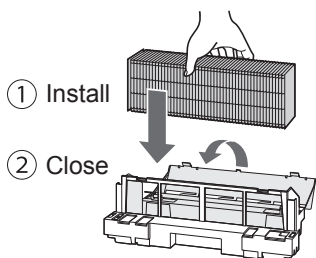


Hook latches of cover (3 positions).

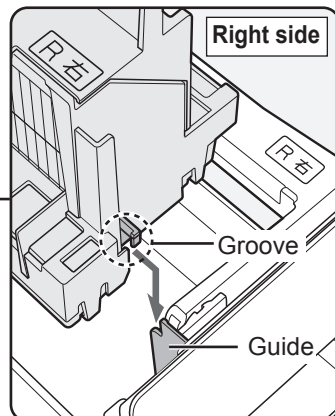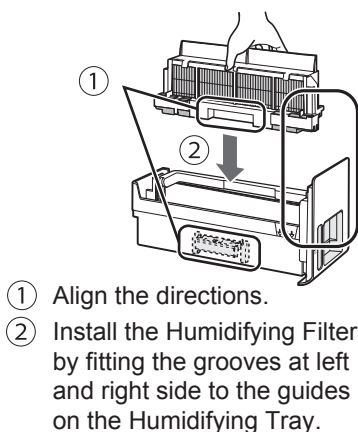

Also in the same left side.

Return the Tray Handle to its original position.

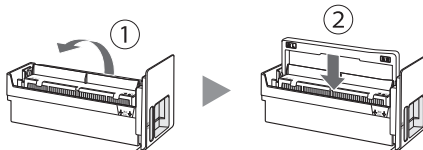

- ① Lift the Tray Handle.
- ② Return it to its original position.

CARE AND MAINTENANCE



UNIT

Wipe with a dry, soft cloth.



CAUTION


- Do not use volatile fluids.
Benzene paint thinner or polishing powder can damage the surface.
- Do not use detergents.
Detergent ingredients can damage the unit.

CLEANING FILTERS

Gently remove dust with an appropriate cleaning tool, such as a vacuum cleaner with the proper attachment.


In case of using at the location where air pollution and odor are significant, maintain frequently even if Filter Indicator Light is not ON.

DEODORIZING FILTER

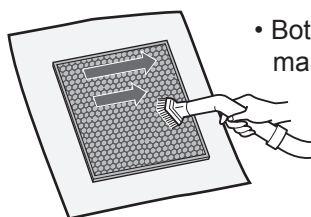

- Both surfaces can be maintained.

HEPA FILTER

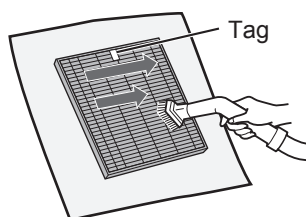

- Maintain only the tagged surface. Do not clean up the opposite surface.

CAUTION

- Do not wash the filters. Do not expose to sunlight.

Some odors absorbed by the filters will break down over time, causing additional odors. Depending on usage conditions, and especially if the product is used in environments significantly more severe than a normal household, these odors may become noticeable sooner than expected.

Replace the filter in those cases or if dust is unable to be removed after maintenance.

Always be sure to remove the power plug from the wall outlet.

FILTER REPLACEMENT

LIFE OF FILTERS

Filter life varies depending on the room environment, usage conditions, and location of the unit. Lifespan of HEPA filter and Deodorizing filter and replacement suggestions are based on purifying a room in which 5 cigarettes are smoked per day and the unit's dust collection and deodorizing performance has declined to half the level of a new filter.

We recommend replacing the filter more frequently if the unit is used in conditions significantly more severe (Sandstorm etc.,) than a normal household.

•HEPA Filter	About 2 years after first use
•Deodorizing Filter	About 2 years after first use
•Humidifying Filter	About 5 years after first use

Replacement Filter Model

Consult your dealer when purchasing a replacement filter.

AIR PURIFIER MODEL	REPLACEMENT FILTER MODEL		
	HEPA Filter : 1 unit	Deodorizing Filter : 1 unit	Humidifying Filter : 1 unit
KC-F30SA	FZ-F30HFE	FZ-F30DFE	FZ-F30MFE

NOTE

Use the date label to remind you when to replace the filter.
There is the date label on the left side of the unit.

Disposing of filters

Dispose of used filters according to local laws and regulations.

HEPA Filter material :

- Filter : Polypropylene
- Frame : Polyester



Deodorizing Filter material :

- Filter : Activated charcoal, Polyethylene terephthalate, Polypropylene
- Frame : Paper


Humidifying Filter material :

- Filter : Rayon, Polyester

Humidifying Filter

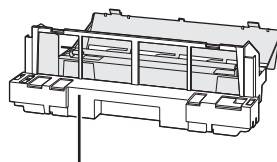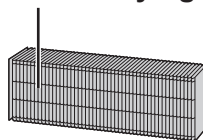

Do not throw away
the Filter Frame (gray)

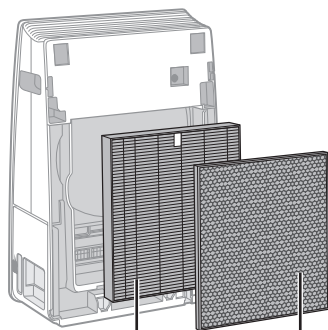

HEPA Filter

Deodorizing Filter

TROUBLESHOOTING

Before calling for service, review the troubleshooting chart below to make sure that the problem is not a unit malfunction.

SYMPTOM	REMEDY (the following are not due to a malfunction)
Odor and smoke persists.	Check the filters. If they appear to be extremely dirty, clean or replace them. (Ref. E-11,E-12,E-13,E-14,E-15)
The Dust Sign light is green even when the air is not clean.	The air may have been dirty when the unit was plugged in. Unplug the unit, wait one minute, and then plug the unit in again.
The Dust Sign light is orange or red even when the air is clean.	Dirty or clogged dust sensor openings interfere with sensor operation. Gently clean the back panel. (Ref. E-11).
The unit makes a clicking or ticking sound.	The unit may make clicking or ticking sounds when it is generating ions.
Air discharged from the unit has an odor.	- Check to see if the filters are extremely dirty. - Clean or replace the filters. - Plasmacluster Air Purifiers emit small traces of ozone that can produce an odor.
The unit does not operate when cigarette smoke is in the air.	- Check to see if the unit is installed in a location that makes it difficult for the sensors to detect cigarette smoke. - Check to see if the dust sensor openings are blocked or clogged. If they are blocked or clogged, clean the back panel. (Ref. E-11)
The Filter Indicator Light is on.	Whenever replacing the filters, connect the power cord to an outlet and then press the Filter Reset Button.
The Dust Sign lights are turned off.	- Check to see if the Lights OFF Mode is selected. If it is selected, press the Light ON/OFF Button to turn the indicator lights on. (Ref. E-9) - Check to see if the SLEEP mode is selected. (Ref. E-8)
The Humidify Light does not light off when the Humidifying Tray is empty.	Clean the Humidifying Tray. Make sure that the unit is on a level surface.
The water level in the Humidifying Tray does not decrease or decreases slowly.	- Check to see if the Humidifying Tray is correctly installed. Check the Humidifying Filter. - If the Humidifying Filter is extremely dirty, clean or replace it. (Ref. E-12, E-13, E-15). - Humidification amount gets lower when humidity reaches to the proper amount (55 ~ 65%) by the actuation of humidity sensor in the case of fan speed automatic.
The Dust Sign lights change color frequently.	The Dust Sign lights automatically change color when the dust sensor detect impurities.
There is a discrepancy between the unit's Humidity Monitor and another hygrometer in the room.	- There is a difference in the humidity level within the same room. - The sensor have different measurement parameters. - If the monitor indicates TEMPERATURE, press the Display Select Button. (Ref. E-9)

ERROR DISPLAY If the error continues to occur, contact a Sharp Service Center.

DIGITAL INDICATION	ERROR DETAILS	REMEDY
	Fan motor error.	Unplug the unit, wait one minute, then plug the unit in again.
	Temperature-humidity sensor error.	

SPECIFICATIONS

Power supply		220-240V 50-60 Hz		
Fan Speed Adjustment		MAX	MED	SLEEP
CLEAN AIR	Fan Speed (m ³ /hour)	180	125	52
	Rated Power (W)	27	12	4.1
	Noise Level (dBA)	48	38	21
CLEAN AIR & HUMIDIFY	Fan Speed (m ³ /hour)	180	125	52
	Rated Power (W)	27	12	4.1
	Noise Level (dBA)	48	38	21
	Humidification (mL/hour)*1	350	280	140
Recommended Room Size (m ²)*2		~21		
High density Plasmacluster ion recommended room size (m ²)*3		~17		
Humidifying Tray Capacity (L)		1.8		
Sensors		Dust / Temperature & Humidity		
Filter type	Dust collection	HEPA *4		
	Deodorization	Deodorizing		
Cord Length (m)		2.0		
Dimensions (mm)		380 (W) × 197 (D) × 570 (H)		
Weight (kg)		7.2		

- *1 • The amount of humidification changes in accordance with indoor and outdoor temperature and humidity.
The amount of humidification increases as temperatures rises or humidity decreases.
The amount of humidification decreases as temperatures decrease or humidity rises.
• Measurement Conditions : 20 °C, 30 % humidity (JEM1426)
- *2 • The recommended room size is appropriate for operating the unit of maximum fan speed.
• The recommended room size is an area in which a given amount of dust particles can be removed in 30 minutes.
- *3 • Room size in which approximately 7000 ions per cubic centimeter can be measured in the center of the room when the unit is placed next to a wall, is running at maximum settings, and is at a height of approximately 1.2 meters from the floor.
- *4 • The filter removes more than 99.97% of particles at least 0.3-microns in size. (JEM1467)

Standby Power

When the unit's power plug is inserted in a wall outlet it consumes about 0.9 watts of standby power in order to operate electrical circuits.

To conserve energy, unplug the power cord when the unit is not in use.

Memo

Memo

الكهربائي ٢٢٠-٢٤٠ فولت ٥٠-٦٠ هرتز			مصدر التيار	
ضبط سرعة المروحة				
نوم	متوسط	عال	سرعة المروحة (م ٣/ساعة)	تنظيف الهواء
٥٢	١٢٥	١٨٠	معدل الطاقة (وات)	
٤,١	١٢	٢٧	مستوى الصوت (ديسيبل)	
٢١	٣٨	٤٨	سرعة المروحة (م ٣/ساعة)	تنظيف الهواء والرطوبة
٥٢	١٢٥	١٨٠	معدل الطاقة (وات)	
٤,١	١٢	٢٧	مستوى الصوت (ديسيبل)	
٢١	٣٨	٤٨	الترطيب (مل/ساعة)*١	
١٤٠	٢٨٠	٣٥٠		
٢١~			المساحة المقترحة للغرفة (م٢)*٢	
١٧~			كثافة أيونات بلازماكلستر العالية للمساحة المقترحة للغرفة (م٢)*٣	
١,٨			سعة خزان الماء (لتر)	
الغبار / درجة الحرارة والرطوبة			المستشعر	
هيبا *٤			جمع الغبار	نوع المرشح
إزالة الروائح الكريهة			إزالة الروائح الكريهة	
٢,٠			طول السلك الكهربائي (م)	
٣٨٠ (عرض) x ١٩٧ (عمق) x ٥٧٠ (ارتفاع)			الأبعاد (مم)	
٧,٢			الوزن (كغ)	

- ١* تختلف نسبة الترطيب مع اختلاف درجة الحرارة والرطوبة الداخلية والخارجية. تزداد نسبة الترطيب بارتفاع درجة الحرارة أو انخفاض الرطوبة. تقل نسبة الترطيب بانخفاض درجة الحرارة أو ارتفاع الرطوبة. ظروف القياس : ٢٠ درجة مئوية، ٣٠ ٪ نسبة الرطوبة (JEM١٤٢٦)
- ٢* حجم الغرفة الموصى به مناسب لتشغيل الوحدة على أقصى سرعة للمروحة. حجم الغرفة الموصى به هو المساحة التي يمكن فيها للجهاز إزالة كمية معينة من الغبار خلال ٣٠ دقيقة.
- ٣* حجم الغرفة الذي يمكن فيه قياس حوالي ٧٠٠٠ أيون لكل سنتيمتر مكعب في وسط الغرفة عند وضع الجهاز بالقرب من جدار، وتشغيله على وضع التشغيل العالي، وعلى ارتفاع حوالي ١,٢ متر من الأرض.
- ٤* يعمل المرشح على إزالة أكثر من ٩٩,٩٧ ٪ من جزيئات الغبار بحجم ٠,٣ ميكرون. (JEM١٤٦٧)

التيار الاحتياطي

لتشغيل الدوائر الكهربائية أثناء إدخال قابس التيار في المخرج الجداري، يستهلك هذا الجهاز حوالي ٠,٩ وات من التيار الاحتياطي من أجل تشغيل الدوائر الكهربائية. لحفظ الطاقة، افصل سلك التيار عند عدم استخدام الجهاز.

تحري الخلل وإصلاحه

قبل الاتصال بخدمة الصيانة، يرجى مراجعة لائحة تحري الخلل وإصلاحه أدناه للتأكد من ان المشكلة الحادثة ليست عطلاً في الجهاز.

الأعراض	التصحيح (ما يلي ليس بسبب عطل)
استمرار الروائح الكريهة والدخان.	افحص المرشحات. إذا ظهر أنها متسخة تماماً، نظفها أو استبدلها. (أرجع إلى Ar-11, Ar-12, Ar-13, Ar-14, Ar-15)
يكون ضوء علامة الغبار أخضر حتى عندما يكون الهواء غير نقي.	قد يكون الهواء قذراً عند فصل قابس الجهاز من مصدر التيار. أخرج قابس الطاقة من المصدر وانتظر لدقيقة واحدة ثم قم بتوصيله بمصدر التيار مرة أخرى.
يكون ضوء علامة الغبار برتقالي أو أحمر حتى عندما يكون الهواء نقي.	فتحات مستشعر الغبار المتسخة أو المسدودة تتداخل مع عمل المستشعر. نظف اللوحة الخلفية بلطف. (أرجع إلى Ar-11).
يصدر الجهاز صوت طقطقة أو تكتكة.	قد يصدر الجهاز صوت طقطقة أو تكتكة عندما يولد الأيونات.
يحتوي الهواء الصادر من الجهاز على رائحة كريهة.	- تأكد من أن المرشحات غير محملة بالأوساخ. - نظف أو استبدل المرشحات. - قد ينبعث من أجهزة تنقية الهواء آثار بسيطة من غاز الأوزون والتي قد تصدر روائح كريهة.
لا يعمل الجهاز حين يتواجد دخان السجائر في الهواء.	- تأكد مما إذا كان الجهاز موضوع في موقع يصعب على المستشعرات كشف دخان السجائر. - تأكد مما إذا كانت فتحات مستشعر الغبار معاقة أو مسدودة. - إذا كانت معاقة أو مسدودة، نظف اللوحة الخلفية. (أرجع إلى Ar-11).
ضوء مؤشر المرشح غير مضيء.	عند استبدال المرشحات، قم بتوصيل سلك الطاقة بالمرخرج ثم اضغط زر إعادة ضبط المرشحات.
أضواء علامة الغبار غير مضيئة.	- تأكد ما إذا تم اختيار وضع إيقاف تشغيل الأضواء. إذا تم اختياره، اضغط زر تشغيل/إيقاف الأضواء لتشغيل الأضواء المؤشر. (أرجع إلى Ar-9) - تأكد من اختيار وضع «نوم». (أرجع إلى Ar-8)
لا يضيء ضوء الرطوبة عندما تكون صينية الترطيب فارغة.	نظف صينية الترطيب. تأكد من وضع الجهاز على أرضية مستوية.
مستوى الماء في صينية الترطيب لا ينخفض أو ينخفض ببطء.	- تأكد من تثبيت صينية الترطيب بشكل صحيح. تأكد من مرشح الترطيب. - إذا ظهر أن صينية الترطيب متسخة تماماً، نظفها أو استبدلها. (أرجع إلى Ar-12, Ar-13, Ar-15). - تقل كمية الترطيب عندما تصل الرطوبة إلى كمية مناسبة (٥٥ ~ ٦٥٪) بتشغيل مستشعر الرطوبة في حالة سرعة المروحة التلقائية.
يتغير لون أضواء علامة الغبار بشكل متكرر.	يتغير لون أضواء علامة الغبار تلقائياً عندما يكتشف مستشعر الغبار شوائب.
هناك تناقض بين شاشة الرطوبة ومقياس الرطوبة الآخر في الغرفة.	- هناك فرق في مستوى الرطوبة داخل نفس الغرفة. - للمستشعر معالم قياس مختلفة. - إذا أظهرت الشاشة درجة حرارة، اضغط على زر اختيار العرض. (أرجع إلى Ar-9)

شاشة عرض الخطأ إذا استمر حدوث الخطأ، اتصل بمركز خدمة شارب.

المؤشر الرقمي	تفاصيل الخطأ	التصحيح
[1]	خطأ في محرك المروحة.	أخرج قابس الطاقة من المصدر وانتظر لدقيقة واحدة ثم قم بتوصيله بمصدر التيار مرة أخرى.
[4]	خطأ في مستشعر درجة الحرارة - الرطوبة	

استبدال المرشح

عمر المرشحات

يتغير العمر الافتراضي للمرشح تبعاً لجو الغرفة وظروف الاستخدام وموقع الجهاز. يعتمد العمر الافتراضي لمرشح هيبا ومرشح إزالة الروائح الكريهة وفترات الاستبدال على تنقية غرفة يتم فيها تدخين ٥ سجائر في اليوم، وتتنخفض قوة جمع الغبار وأداء إزالة الروائح الكريهة إلى نصف مستوى المرشح الجديد.

نوصي باستبدال المرشح مراراً إذا تم استخدام الجهاز في ظروف أشد بكثير (عاصفة رملية، إلخ) من ظروف الاستخدام المنزلي العادية.

- مرشح هيبا
 - مرشح إزالة الروائح الكريهة
 - مرشح الترطيب
- بعد حوالي سنتين من الاستخدام الأول
بعد حوالي سنتين من الاستخدام الأول
بعد حوالي ٥ سنوات من الاستخدام الأول

استبدال موديل المرشح

يرجى استشارة الوكيل الخاص بك لشراء أو استبدال المرشح.

استبدال موديل المرشح			موديل جهاز تنقية الهواء
مرشح إزالة الروائح الكريهة: ١ جهاز	مرشح هيبا: ١ جهاز	مرشح الترطيب: ١ جهاز	KC-F30SA
FZ-F30DFE	FZ-F30HFE	FZ-F30MFE	

ملاحظة

استخدم التاريخ الموجود على الملصق لتذكيرك بموعد استبدال المرشح. يوجد ملصق مدون عليه التاريخ على الجانب الأيسر للجهاز.

التخلص من المرشحات

يرجى التخلص من مرشح الترطيب المستعمل حسب القوانين واللوائح المعمول بها محلياً.

مادة مرشح هيبا :

• المرشح : البولي بروبيلين

• الإطار : البوليستر


• مادة مرشح إزالة الروائح الكريهة :

• المرشح : الفحم النشط، البولي إيثيلين تيرفتالات، البولي بروبيلين


• الإطار : الورق

• مادة مرشح الترطيب :

• المرشح : الحرير الصناعي، البوليستر

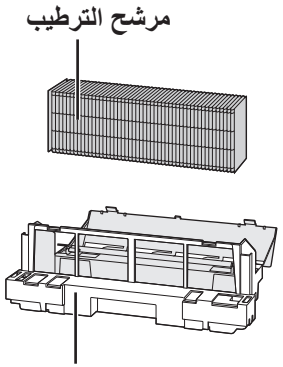

لا ترمي إطار المرشح (رمادي)

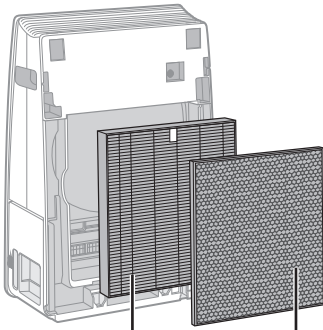

مرشح هيبا

مرشح إزالة الروائح الكريهة



الجهاز بقطعة قماش جافة وناعمة.

امسح

تنبيه

- لا تستخدم السوائل المتطايرة.
- قد يتلف البنزين، أو ثنر الدهان، أو مسحوق الصقل سطح الجهاز.
- لا تستخدم محاليل التنظيف.
- قد تتسبب محاليل التنظيف في تلف الجهاز.




تنظيف المرشحات

قم بإزالة الغبار بلطف بأداة تنظيف مناسبة، مثل المكنسة الكهربائية التي بها أداة ملحقة مناسبة. في حال استخدام موقع به تلوث أو روائح كريهة كثيرة، أجزى الصيانة بشكل متكرر إذا لم يكن مؤشر المرشح في وضع تشغيل.


مرشح هيبا

- يمكن صيانة كلا السطحين.

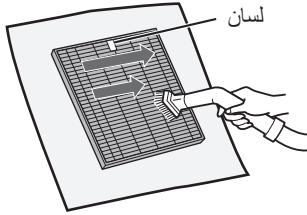

مرشح إزالة الروائح الكريهة

- أجزى صيانة للسطح المرقم فقط. لا تنظف السطح المقابل.

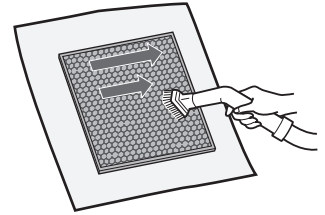

- لا تعتمد إلى غسل المرشحات. لا تعرضه لضوء الشمس.

تنبيه


بعض الروائح الكريهة التي يتم امتصاصها عبر المرشح قد تنكسر مع الوقت لينتج عنها روائح كريهة إضافية. تبعاً لظروف الاستخدام، وخاصة عند استخدام المنتج في بيئات أقصى من استخدامها للأغراض المنزلية الطبيعية، قد تصبح هذه الروائح قوية في فترة زمنية أقل مما كان متوقعاً. استبدل المرشح في هذه الحالات أو في حال عدم إمكانية إزالة الغبار بعد الصيانة.

ملاحظة كيفية إزالة ميزان الماء


١. انقعه بالماء المضاف إليه محلول إزالة الترسبات لمدة حوالي ٣٠ دقيقة.

تنبيه


- عند استخدام عصير ليمون كمحلول إزالة ترسبات، انقعه لوقت أطول.
- ٢. اشطف محلول إزالة الترسبات بكمية كبيرة من الماء.

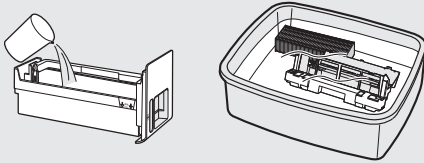

- محلول إزالة الترسبات الموصى بها
- حمض الستريك (متاح في بعض الصيدليات)
- زجاجات عصير الليمون الطبيعي ١٠٠٪ دون اللب.
- مع حمض الستريك

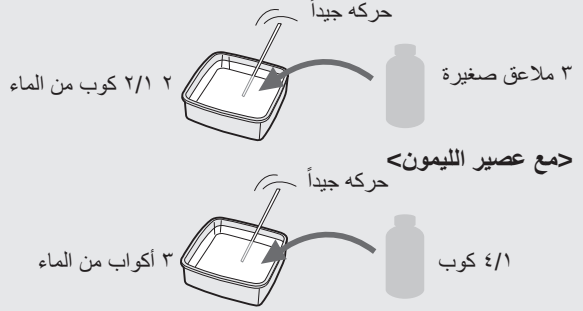


ملاحظة كيفية تنظيف صينية الترطيب وإطار المرشح عندما تكون هناك أوساخ مفرطة

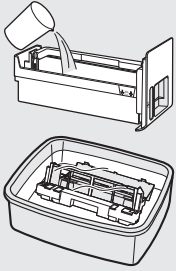


١. قم بإزالة إطار المرشح من صينية الترطيب وقم بتعبئتها بالماء حتى مؤشر «ممتلئ».
- ضع إطار المرشح في الماء.
٢. أضف كمية قليلة من محلول تنظيف المطابخ إلى الماء.
٣. انقعه لمدة ٣٠ دقيقة.
٤. اشطف محلول تنظيف المطابخ بماء نظيف.
- قم بتنظيف الأجزاء التي يصعب الوصول إليها بعود ذي نهاية قطنية أو فرشاة أسنان.

بعد إجراء الصيانة، قم بإعادة تركيب الأجزاء بشكل صحيح.

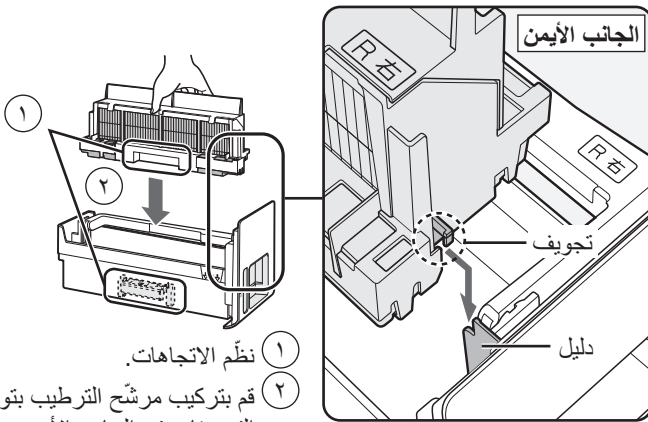


١. نظم الاتجاهات.
٢. قم بتركيب مرشح الترطيب بتوفيق التجويفات في الجانب الأيسر والأيمن مع الأدلة على صينية الترطيب.

أيضا في نفس الجانب الأيسر.

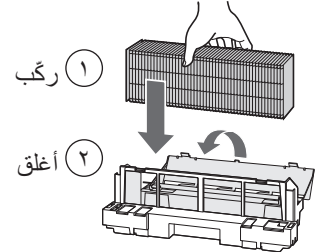

مزالج خطاف الغطاء (٣ مواقع).

١. أرفع مقبض الصينية.
٢. أعده إلى موضعه الأصلي.

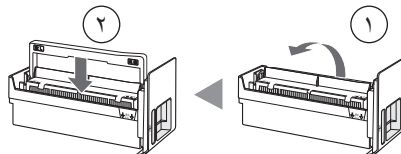


أعد مقبض الصينية إلى موضعه الأصلي.

مرشح إصينية الترطيب

قد يمتنع حدوث رائحة كريهة عند غسل مرشح الترطيب وصينية الترطيب بالماء بعناية حتى لو لم يكن ضوء المؤشر مضاءً.


قم بإزالة مرشح الترطيب من الصينية.

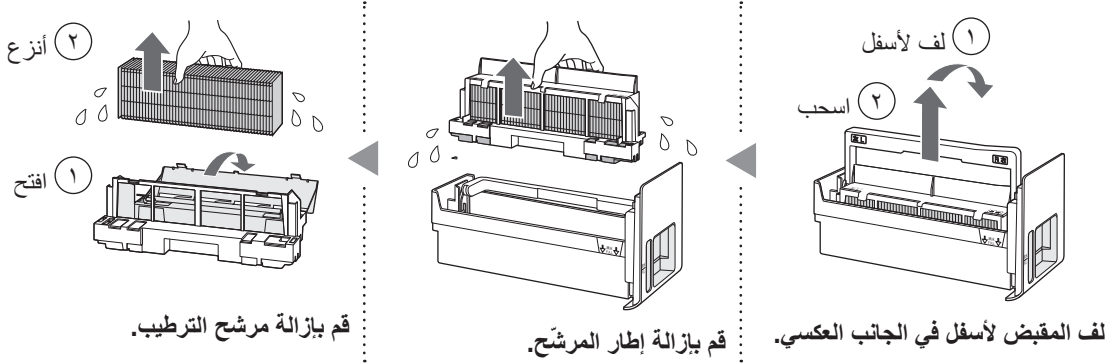

• قد يقطر الماء من مرشح الترطيب وإطار المرشح.

تنبيه


اشطف صينية الترطيب، وإطار المرشح، ومرشح الترطيب.

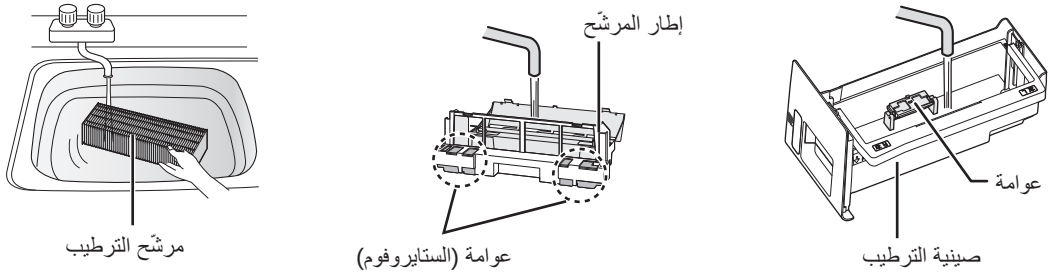


• لا تعتمد على إزالة العوامات.

• إذا خرجت العائمة من صينية الترطيب، ركبها بالترتيب الموضح أدناه.

تنبيه

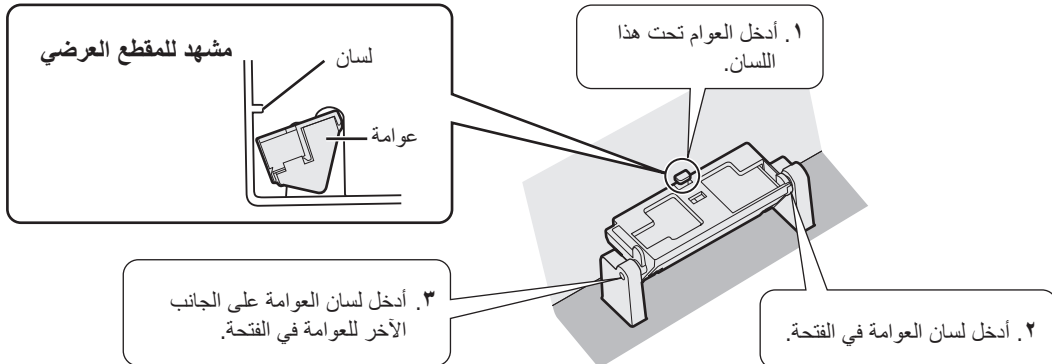

مؤشر المرشح

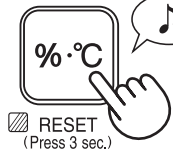

بعد إجراء الصيانة، قم بإعادة ضبط مؤشر المرشح.

اضغط لأكثر من ٣ ثوانٍ.

سيضيء ضوء مؤشر المرشح بعد حوالي ٧٢٠ ساعة.
(٣٠ يوماً × ٢٤ ساعة = ٧٢٠ ساعة)
هذا تذكير لإجراء الصيانة الموصوفة أدناه.
(أرجع إلى Ar-11, Ar-12, Ar-13, Ar-14)



%°C

RESET
(Press 3 sec.)



فهرس العناية

في حال استخدام موقع به تلوث أو روائح كريهة كثيرة، أجري الصيانة بشكل متكرر إذا لم يكن مؤشر المرشح في وضع تشغيل.

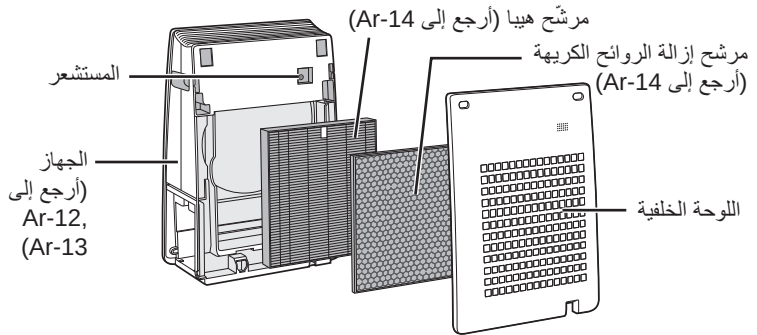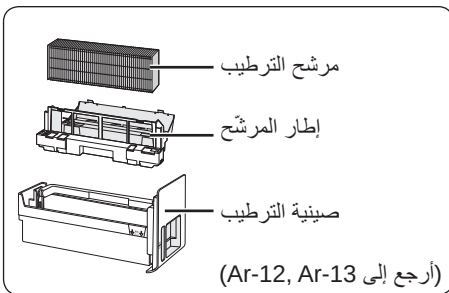

اللوحة الخلفية

قم بإزالة الغبار بلطف بأداة تنظيف مناسبة، مثل المكنسة الكهربائية التي بها أداة ملحقة مناسبة.

المستشعر

ملاحظة

ملاحظة



المستشعر (داخلي)

١. قم بإضافة كمية قليلة من محلول تنظيف المطابخ إلى ماء ثم انقعه لمدة حوالي ١٠ دقائق.

تنبيه


- لا تعتمد على فرك اللوحة الخلفية بقوة.
- اشطف محلول تنظيف المطابخ بماء نظيف.
- قم بتجفيف المرشح بشكل تام في منطقة جيدة التهوية.

اللوحة الخلفية

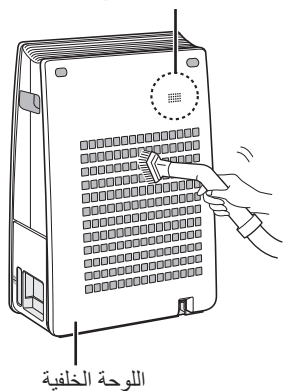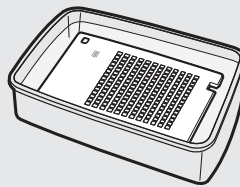

المستشعر


- قم بإزالة اللوحة الخلفية وأزل مرشح المستشعر.
- قم بإزالة الغبار من المستشعر بلطف بأداة تنظيف مناسبة، مثل المكنسة الكهربائية التي بها أداة ملحقة مناسبة.
- إذا كان مرشح المستشعر متسخاً بشكل مفرط، اغسله بماء وجففه تماماً.

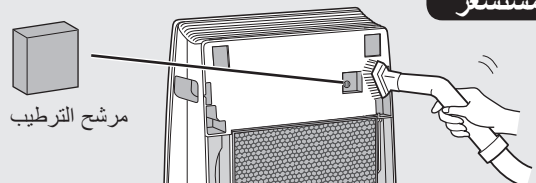

الوظائف المفيدة

مؤقت الإيقاف

اختر طول المدة التي تريدها. يتوقف الجهاز تلقائياً بمجرد الوصول إلى الوقت المختار.

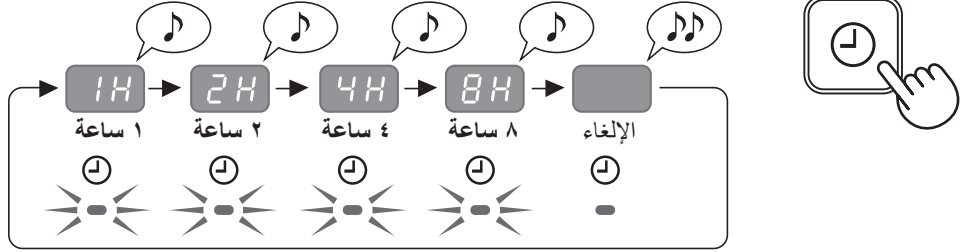


ملاحظة

- يعرض ② الضغط الوقت المتبقي.
- لإعادة ضبط وقت التشغيل، اضغط أثناء عرض الوقت المتبقي.

إعادة التشغيل التلقائية


في حال فصل القابس عن الجهاز أو في حال انقطاع التيار الكهربائي، سوف يستأنف الجهاز التشغيل بإعدادات الوضع السابق بعد عودة التيار الكهربائي. الإعداد الافتراضي في وضع تشغيل

إيقاف
(عندما يكون الجهاز في وضع إيقاف)

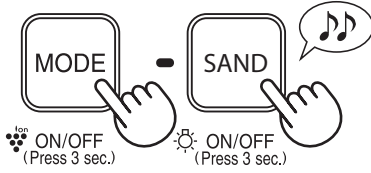


اضغط على كلا الزرين في نفس الوقت
لمدة ٣ ثوانٍ أو أكثر.

تشغيل
(عندما يكون الجهاز في وضع إيقاف)

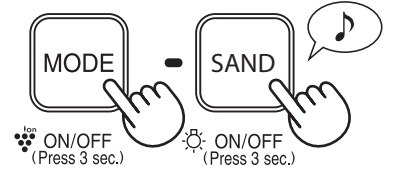

اضغط على كلا الزرين في نفس الوقت
لمدة ٣ ثوانٍ أو أكثر.


مضيء

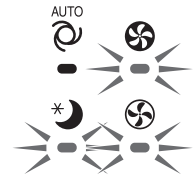

إذا أضاء * و * المؤشرات لمدة ١٠ ثوانٍ.
يكتمل الإعداد.


التحكم بالضوء

يمكنك ضبط مؤشر السطح الأمامي على إيقاف عندما يكون المؤشر لامع جداً.

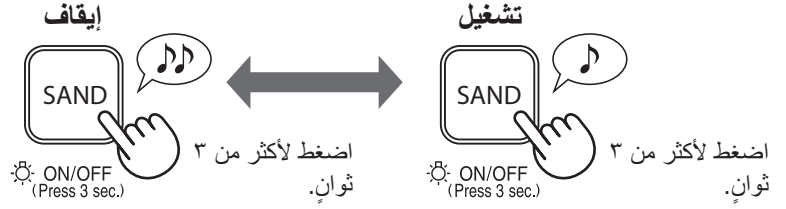

تشغيل/إيقاف أيونات البلازما كلستر

عندما يكون أيون البلازما كلستر في وضع تشغيل، سوف يضيء مؤشر أيون البلازما كلستر. (أزرق)

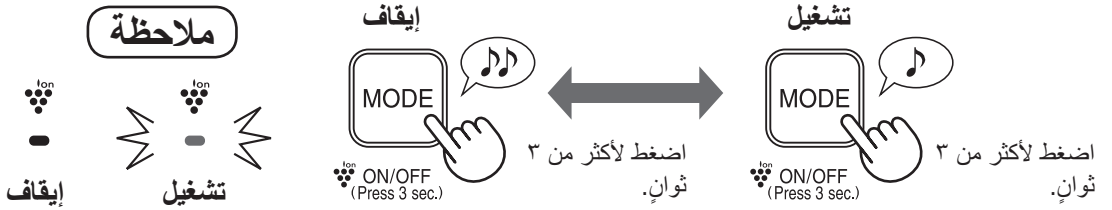

تغيير الشاشة (رطوبة / درجة حرارة)

يمكنك اختيار إما رطوبة أو درجة حرارة في اللحظة لعرضها.




ملاحظة

- تشير درجة الحرارة والرطوبة الحالية إلى القيم المقدرة.
- قد تختلف القيم عن القيم الموضحة بقياس درجة الحرارة أو مقياس الرطوبة الآخر.
- لا توجد وظيفة لضبط درجة الحرارة.
- لا يمكن ضبط إعداد الرطوبة.
- لا يمكن إزالة الرطوبة.


تشغيل / إيقاف الطاقة

- قم باختيار سرعة المروحة المرغوبة .
- إذا لم يتم فصل سلك التيار من القابس, تبدأ عمليات التشغيل في الوضع السابق الذي كان الجهاز يعمل فيه.

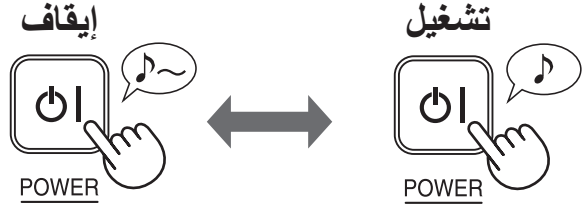

الرمال

يزيل الرمال بسرعة ويقدم هواء صحي منعش بإفراغ تدفق الهواء القوي لمدة ٦٠ دقيقة.


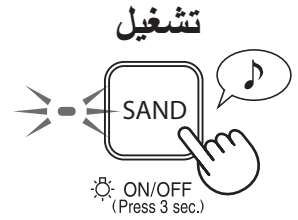


ملاحظة

- عند انتهاء التشغيل, سيعود الجهاز إلى وضع التشغيل السابق.
- فهو قادر على تغيير الوضع الآخر أثناء تشغيل هذا الوضع.

سرعة المروحة

قم باختيار سرعة المروحة المرغوبة.

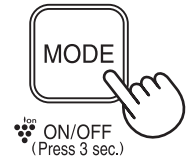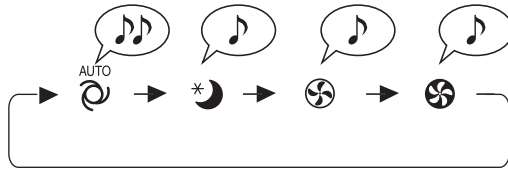

ملاحظة

- نوم*
تتوقف مؤشرات السطح الأمامي تلقائياً.

التشغيل التلقائي

- تتغير سرعة المروحة تلقائياً بين مرتفع ومنخفض بالاعتماد على الرطوبة ومقدار الملوثات الموجودة في الهواء.


إعادة تعبئة صينية الترطيب

ترطب الهواء المار بتبخير الماء الذي يتم ضخه من صينية الترطيب. يمكن استخدام الجهاز حتى بدون ماء في صينية الترطيب.

اسحب صينية الترطيب

تنبيه

قم بتنظيف صينية الترطيب إذا أصبحت متسخة أو إذا كان هناك رائحة كريهة ملحوظة. (أرجع إلى Ar-12, Ar-13)

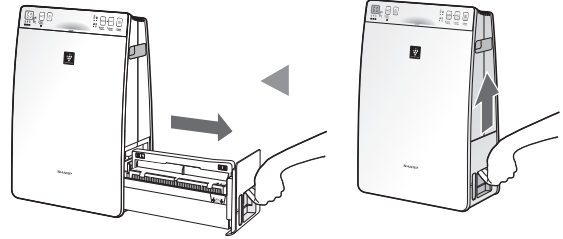


١

قم بتعبئة صينية الترطيب بماء من الحنفية بطريقة **أ** أو **ب**.

تنبيه

- يطفو إطار المرشح عندما يتم تعبئة الماء.
- عند حمل صينية الترطيب، امسكها بكلا اليدين وامسك مقبض الصينية.
- قم بتعبئتها بلطف لتجنب طرشة الماء.
- لا تقم بالتعبئة أعلى من مؤشر «ممتلئ».
- لا تدخل صينية الترطيب في الجهاز إذا كان الماء معبأ بمقدار كبير جداً.

أ

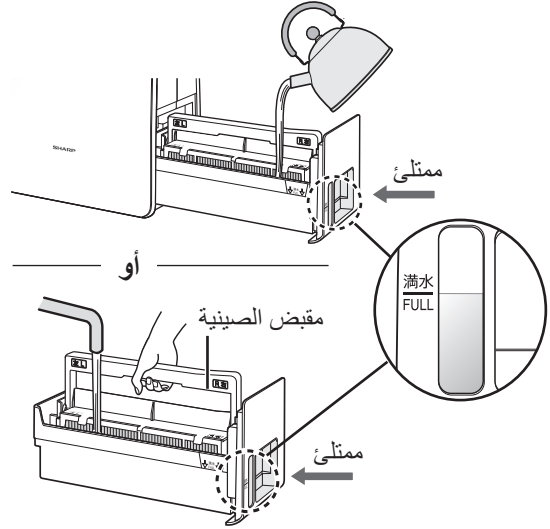



٢

ب

قم بتركيب صينية التركيب

- رد مقبض الصينية إلى موضعه الأصلي قبل التركيب.

تنبيه

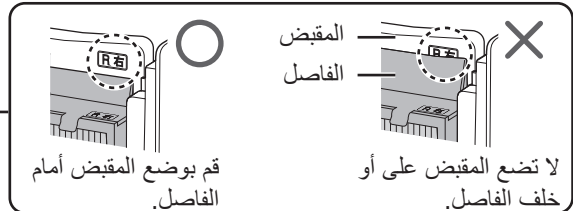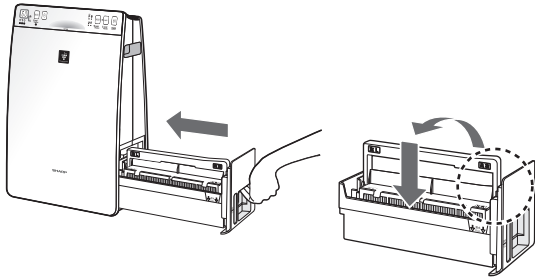

٣


- لا تعرض الجهاز للماء. قد يتسبب القيام بذلك في دائرة قصيرة أو حدوث صدمة كهربائية.
- لا تستخدم سوى ماء حنفية جديد. استخدام ماء من مصادر أخرى قد يتسبب في تحفيز نمو العفن أو الفطريات أو البكتيريا.
- لا تعتمد إلى استخدام ماء ساخن (٤٠ درجة مئوية) أو مواد كيميائية أو مواد عطرية. فقد يتسبب القيام بذلك في حدوث تشوه أو عطل في الجهاز.
- عند إزالة وتركيب صينية الترطيب، احصر على عدم سكب أي ماء.

تنبيه




تركيب المرشح

انزع اللوحة الخلفية.

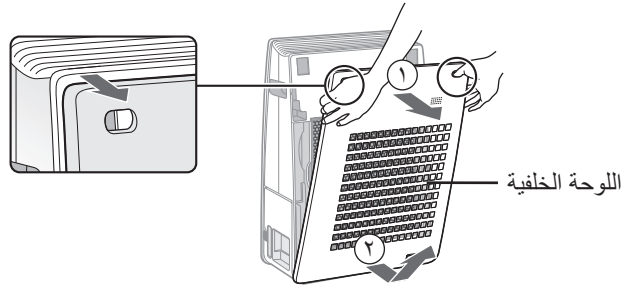


١

انزع المرشحات من الحافظة البلاستيكية.

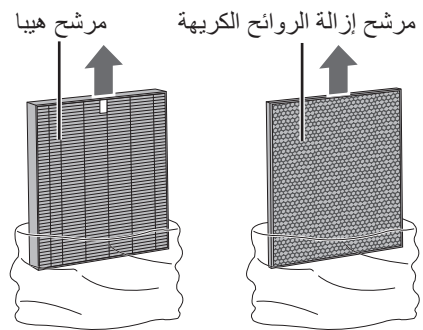


٢

قم بتركيب المرشحات بالترتيب الصحيح كما هو مبين.

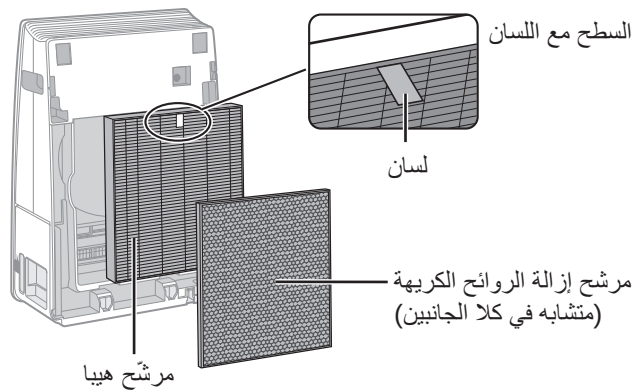


٣

قم بتركيب اللوحة الخلفية.

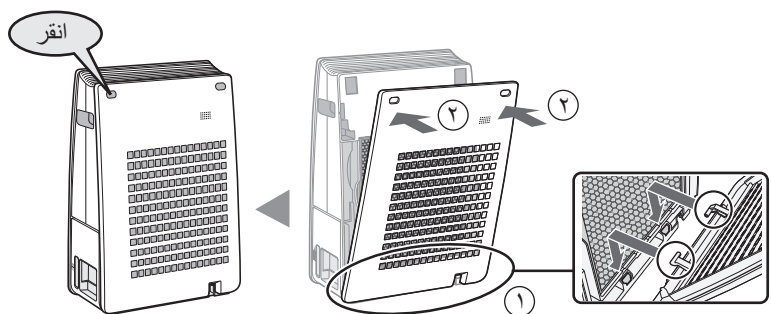


٤


لوحة / شاشة التشغيل

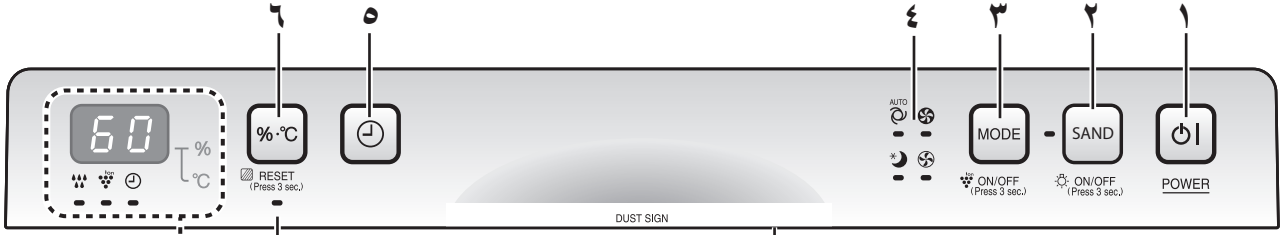

شاشة العرض

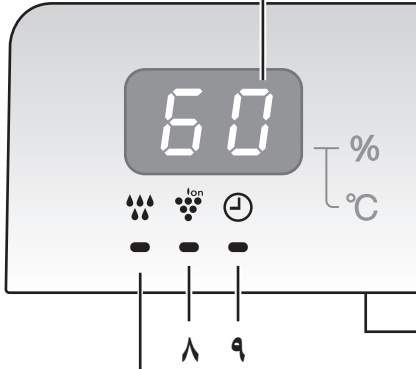

علامة الغبار
تشير إلى مدى نقاء الهواء من خلال 3 مراحل من الألوان.

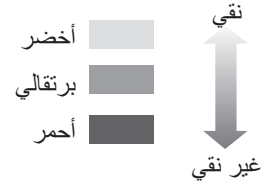


ضوء الترطيب

أخضر تشغيل الترطيب
أخضر الجهاز يحتاج إلى ماء
(وميض)
إيقاف إيقاف الترطيب


شاشة الرطوبة / درجة الحرارة

تشير إلى مستوى الرطوبة / درجة الحرارة التقريبي في الغرفة.

يتم عرض درجة الحرارة من ٠ إلى ٥٠ درجة مئوية بفواصل ١ درجة مئوية

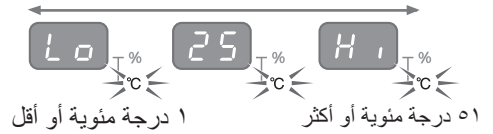


يتم عرض الرطوبة من ٦ إلى ٩٩٪ بفواصل ١٪




زر تشغيل / إيقاف الجهاز	١	زر تشغيل / إيقاف الجهاز	٥
زر تنظيف الرمال / ضوء المؤشر (أخضر)	٢	زر اختيار الشاشة	٦
(اضغط ٣ ثوان) زر تشغيل / إيقاف الضوء	٣	(اضغط ٣ ثوان) زر تشغيل / إيقاف المرشح	٧
زر الوضع	٤	ضوء مؤشر المرشح (برتقالي)	٨
(اضغط ٣ ثوان) زر تشغيل / إيقاف أيونات البلازما كلستر (أزرق)	٥	ضوء مؤشر أيون البلازما كلستر (أزرق)	٩
أضواء مؤشر سرعة المروحة (خضراء)	٦	ضوء مؤشر مؤقت الإيقاف (أخضر)	١٠

الجهة الأمامية / الجهة الخلفية

الجهة الأمامية

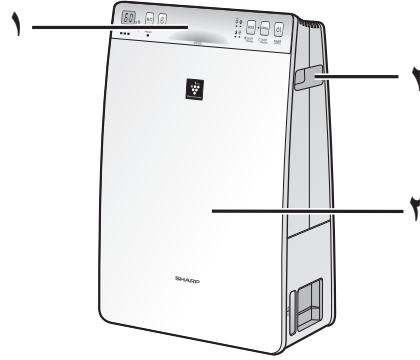

الجهة الخلفية

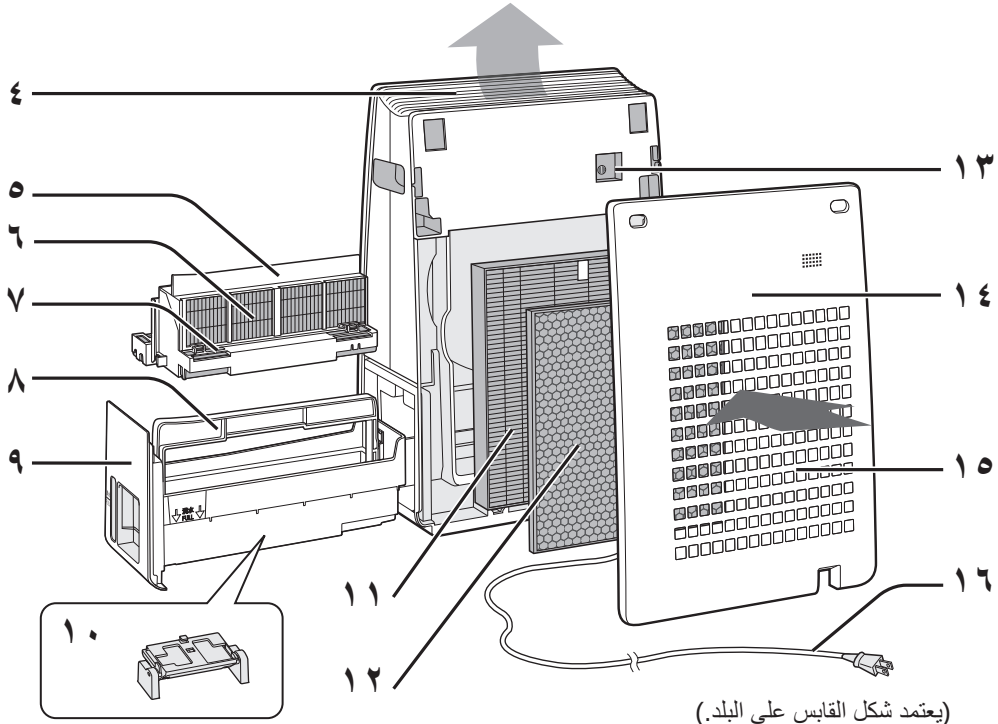

(يعتمد شكل القابض على البلد.)

١	لوحة / شاشة التشغيل (أرجع إلى Ar-5)	٩	صينية الترطيب
٢	مقبض (في موقعين)	١٠	عوامة
٣	الجهاز الرئيسي	١١	مرشح هيبا
٤	مخرج الهواء	١٢	مرشح إزالة الروائح الكريهة
٥	إطار المرشح	١٣	مستشعر (داخلي)
٦	مرشح الترطيب	١٤	اللوحة الخلفية (المرشح المسبق)
٧	عوامة (في إطار المرشح)	١٥	مدخل الهواء
٨	مقبض الصينية	١٦	سلك الطاقة / القابض

احتياطات خاصة بالتشغيل

- لا تقم بتشغيل الجهاز دون تثبيت المرشحات، أو صينية الترطيب بشكل صحيح.
- احتفظ بالجهاز بعيداً عن الماء.
- لا تغسل مرشح هيبا أو مرشح إزالة الروائح الكريهة أو تعيد استخدامه.
- لا يعمل هذا على تحسين أداء المرشح كما أن ذلك قد يتسبب بحدوث صدمة كهربائية أو عطل في التشغيل.
- نظف الجهاز من الخارج بقطعة قماش ناعمة فقط.
- لا تستخدم سوائل متطايرة و/أو منظفات. قد يؤدي القيام بذلك إلى تلف أو تصدع سطح الجهاز.
- بالإضافة إلى ذلك، قد يتسبب ذلك بحدوث عطل في المستشعرات.
- ستعتمد دورية الصيانة على صلاية الشوائب في الماء الذي تستخدمه، كلما كانت أصلب كلما احتجت للصيانة بشكل دوري أكثر.
- قبل تحريك الجهاز، تأكد من إيقاف تشغيله وإزالة صينية الترطيب عن طريق الإمساك بالمقابض الجانبية للجهاز.
- عند إزالة / إعادة تركيب صينية الترطيب، توخى الحذر لكي لا تعلق أصابعك في داخل الجهاز.
- عند تحريك الجهاز، تخدم المقابض الجانبية.
- لا تقم بتحريك الجهاز وهو يعمل.
- لا تعتمد إلى سد مدخل أو مخرج الهواء.
- لا تستخدم الجهاز بالقرب من أو فوق مصادر الحرارة، مثل الأفران أو السخانات، أو حيث يمكن أن يتعرض للبخر.
- قم بتشغيل الجهاز دوماً وهو في وضع قائم.

إرشادات التركيب

- عند استخدام الجهاز، ضعه بعيداً بمقدار ٢ متر عن الأجهزة التي تصدر موجات كهربائية، مثل التلفاز والمذياع لتجنب التشويش الكهربائي.
- تجنب المواقع التي تجعل المستشعرات معرضة لتيار مباشر من الهواء.
- يمكن أن يتسبب عدم القيام بذلك في تعطل الجهاز.
- تجنب وضع الجهاز في أماكن يكون فيها مدخل أو مخرج الهواء معاقاً بالأثاث أو الأقمشة أو أية مواد أخرى.
- تجنب الأماكن التي يتعرض فيها الجهاز للبخر أو التغييرات السريعة في درجة الحرارة.
- تتراوح درجة حرارة الغرفة المناسبة بين ٠-٣٥ درجة مئوية.
- قم بوضوح الجهاز على سطح مستو ومستقر حيث تتوافر التهوية المناسبة.
- عند وضع الجهاز على أرضية مغطاة بالسجاد السميك، فإنه قد يهتز بشكل خفيف.
- ضع الجهاز على أرضية مستوية لتجنب تسرب الماء من صينية الترطيب.
- تجنب المواقع التي يتولد فيها الدهم أو البخار الزيتي.
- يمكن أن يتسبب عدم القيام بذلك في تصدع سطح الجهاز أو تتعرض المستشعرات للتلف.
- تكون قدرة الجهاز على جمع الأتربة فعالة حتى عندما يكون الجهاز قريباً من الحائط بمقدار ٣ سم، فقد تتسخ الجدران المحيطة والأرضية.
- ضع الجهاز على مسافة من الجدار.
- قد يتعرض الجدار المواجه تماماً لمخرج الهواء للتساخ مع مرور الوقت. عند استخدامك للجهاز لمدة طويلة في نفس المكان، قم بتنظيف الجدار القريب منه بشكل دوري.

تعليمات خاصة بالمرشح

- اتبع التعليمات الواردة في هذا الكتيب للعناية بالمرشح وصيانتته بشكل صحيح.

تعليمات هامة عن السلامة

عند استخدام الأجهزة الكهربائية، يتوجب اتباع احتياطات السلامة الأساسية، والتي تتضمن التالي:

تحذير - التزم دائما بالتالي لتفادي خطر الإصابة بصدمة كهربائية أو نشوب حريق أو وقوع إصابات:

- اقرأ جميع التعليمات قبل استخدام الجهاز.
- استخدم مخرج بقدرة ٢٢٠-٢٤٠ فولت فقط.
- لا تستخدم هذا الجهاز إذا ما كان أي من السلك أو القابس تالفاً أو إذا كانت التوصيلة بمنفذ الكهرباء في الجدران مرتخية.
- قم بتنظيف القابس من الغبار بشكل دوري.
- لا تدخل إصبعك أو أية مواد أخرى في مدخل أو مخرج الهواء.
- عند إزالة مقبس الطاقة، أمسك دائماً المقبس نفسه ولا تسحبه بواسطة السلك الكهربائي.
- يمكن أن يتسبب عدم القيام بذلك في حدوث دائرة قصيرة تؤدي إلى صدمة كهربائية أو حريق.
- لا تعتمد إلى نزع المقبس ويديك مبللتين.
- لا تستخدم هذا الجهاز بالقرب من أجهزة الغاز أو الأفران.
- عند إعادة تعبئة صينية الترتيب، أو تنظيف الجهاز، أو حينما لا يكون الجهاز في وضع الاستخدام، تأكد من عدم توصيل الجهاز. يمكن أن يتسبب عدم القيام بذلك في حدوث دائرة قصيرة تؤدي إلى صدمة كهربائية أو حريق.
- إذا تعرض السلك الكهربائي للتلف، يجب أن يتم استبداله من قبل المصنّع، أو وكيل الصيانة، أو مركز صيانة شارب المعتمد، أو أحد الأشخاص المؤهلين لذلك لتجنب أية مخاطر.
- يجب أن لا تتم صيانة جهاز تنقية الهواء هذا إلا من قبل مركز صيانة معتمد من شارب. اتصل بأقرب مركز صيانة إذا ما طرأت أية مشاكل أو إذا ما استلزم إحداث أي تعديل أو إصلاح.
- لا تستخدم الجهاز في الغرف التي يوجد بها مبيدات حشرات بخاخة. لا تستخدم الجهاز في الغرف التي يوجد بها مخلفات زيتية، أو بخور، أو شرر من أعواد السجائر المشتعلة، أو أبخرة كيميائية في الهواء. لا تستخدم الجهاز في قد تعرض الجهاز للبلل مثل الحمام.
- كن حذرا عند تنظيف الجهاز. قد يتعرض سطح الجهاز للتلف إذا استخدمت مادة تنظيف حادة.
- عند حمل / تحريك الجهاز، قم أولاً بإزالة خزان الماء وصينية الترتيب واحمل الجهاز من المقابض الجانبية.
- حمل / تحريك الجهاز عندما يكون به ماء في صينية الترتيب قد يؤدي إلى ما يلي:
 - صدمة كهربائية.
 - تلف الجهاز بسبب انسكاب الماء الداخلي.
 - انسكاب الماء.
- لا تشرب الماء الموجود في صينية الترتيب.
- قم بتغيير الماء الموجود في صينية الترتيب يومياً بماء جديد من الصنبور، وقم بتنظيف بتنظيفها بانتظام (أرجع إلى Ar-12 و Ar-13).
- عندما لا يكون الجهاز قيد الاستعمال، تخلص من المياه الموجودة صينية الترتيب.
- قد يؤدي ترك المياه في صينية الترتيب إلى تجمع الأتربة والبكتيريا والروائح الكريهة.
- وفي حالات نادرة، قد تسبب هذه البكتيريا في مخاطر صحية.
- هذا الجهاز غير مصمم للاستخدام من قبل الأشخاص (بمن فيهم الأطفال) الذين يعانون من قصور في قدراتهم الجسدية أو الحسية أو العقلية، أو أولئك الذين لا يتمتعون بالخبرة والمعرفة بشأن كيفية تشغيل الجهاز، إلا إذا تم ذلك تحت إشراف أو تم تزويدهم بالتعليمات الخاصة المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم. لا تسمح للأطفال بالعبث في الجهاز.

ملحوظة

- إذا شوش الجهاز تنقية الهواء على استقبال جهاز التلفاز أو المذياع، حاول معالجة ذلك بطريقة أو أكثر من الطرق التالية:
- قم بتعديل أو تغيير موضع هوائي الاستقبال.
 - باعد المسافة بين الجهاز والمذياع أو التلفاز.
 - قم بتوصيل الجهاز في المخرج الموجود على دائرة كهربائية مختلفة عن تلك المتصلة بمستقبل المذياع أو التلفاز.
 - قم باستشارة البائع أو فني مختص بالمذياع/التلفاز للمساعدة.

المحتويات

Ar-2.....	تعليمات هامة عن السلامة
Ar-6.....	التحضير
Ar-8.....	التشغيل
Ar-9.....	الوظائف المفيدة
Ar-11.....	العناية والصيانة
Ar-12.....	العناية والصيانة
Ar-16.....	تحري الخلل وإصلاحه
Ar-17.....	المواصفات

المميزات

اتحاد فريد لتكنولوجيا معالجة الهواء
نظام ترشيح ثلاثي + بلازماكلستر + ترطيب
محاصرة الغبار*
يعمل المرشح المسبق على محاصرة الغبار والجزيئات الأخرى
الطيارة في الهواء.

تقليل الروائح الكريهة
يقوم مرشح إزالة الروائح الكريهة بامتصاص العديد من الروائح
الكريهة الشائعة في البيئة المنزلية.

تقليل الفطريات وغبار الطلع*
يحاصر مرشح هيبا ٩٩,٩٧٪ من الجزيئات بحجم ٠,٣ ميكرون.

ينعش
تعمل بلازماكلستر على معالجة الهواء بنفس الطريقة التي تتم في
الطبيعة عن طريق إطلاق مجموعة متوازنة من الأيونات السالبة
والموجبة.

يرطب
يعمل حتى ٥ ساعات لكل تعبئة.**

* عندما يدور الهواء خلال نظام الترشيح.
** حجم الغرفة: حتى ١٦ م^٢
تعمل تكنولوجيا المستشعر على مراقبة جودة الهواء باستمرار،
وتعمل على ضبط التشغيل تلقائيًا بناءً على نقاء الهواء ومستوى
الرطوبة.

نشكركم لشرائكم جهاز تنقية الهواء من شارب. يرجى قراءة هذا الدليل
بعناية قبل استخدام جهاز تنقية الهواء. بعد قراءة الكتيب، احتفظ به في
مكان ملائم للرجوع إليه مستقبلاً.


يرجى قراءة التالي قبل البدء باستخدام جهاز تنقية الهواء الجديد الخاص بك

يعمل جهاز تنقية الهواء على سحب هواء الغرفة من مدخل الهواء، ويمرره عبر المرشح المسبق ومن ثم مرشح إزالة الروائح الكريهة يليه مرشح هيبا داخل الجهاز، وبعد ذلك يخرج الهواء من خلال مخرج الهواء. يستطيع مرشح هيبا إزالة ٩٩,٩٧٪ من جزيئات الغبار بحجم ٠,٣ ميكرون التي تمر عبر المرشح إلى جانب قدرته على امتصاص الروائح الكريهة. يعمل مرشح إزالة الروائح الكريهة على امتصاص الروائح الكريهة تدريجياً خلال مرورها عبر المرشح.

بعض الروائح الكريهة التي يتم امتصاصها عبر المرشح قد تتكسر مع الوقت لينتج عنها روائح كريهة إضافية. تبعاً لظروف الاستخدام، وخاصة عند استخدام المنتج في بيئات أقصى من استخدامها للأغراض المنزلية الطبيعية، قد تصبح هذه الروائح قوية في فترة زمنية أقل مما كان متوقعاً. في حال استمرار هذه الروائح الكريهة، استبدل المرشح. (أرجع إلى Ar-14)

ملاحظة


- تم تصميم جهاز تنقية الهواء لإزالة الغبار العالق بالهواء والروائح الكريهة. جهاز تنقية الهواء غير مصمم لإزالة الغازات الضارة مثل أول أكسيد الكربون الموجود في دخان السجائر. إذا استمر تواجد المصدر الذي تنبعث منه الروائح الكريهة، لن يتمكن جهاز تنقية الهواء من إزالتها بشكل تام.

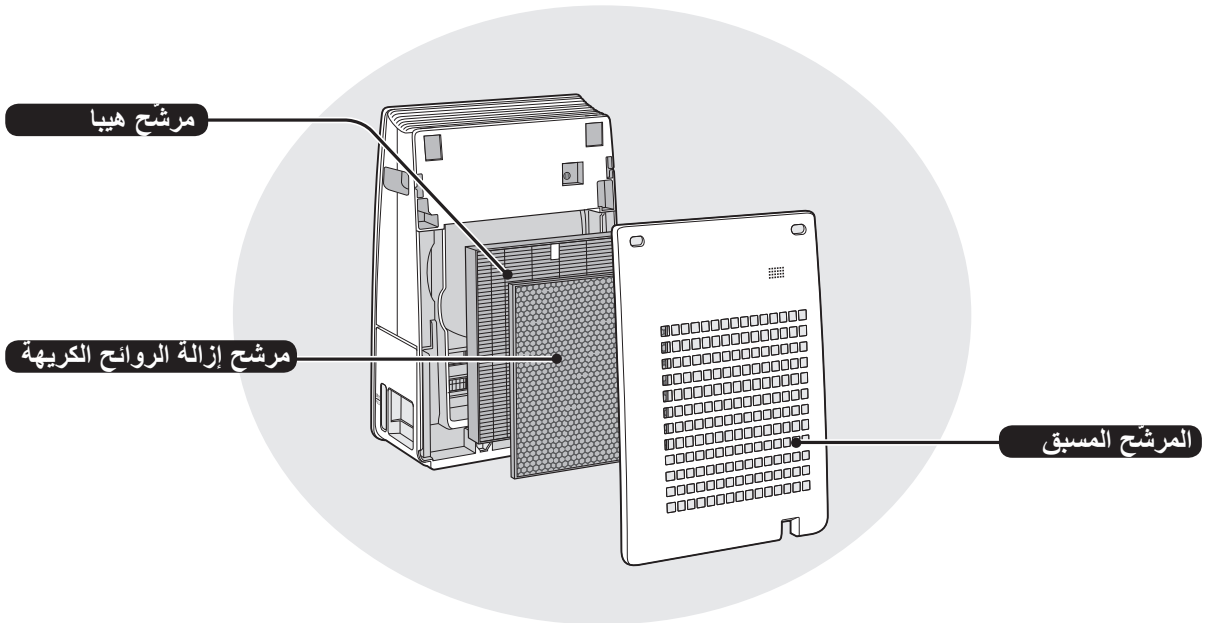

SHARP®

KC-F30SA


جهاز تنقية الهواء
مزود بوظيفة ترطيب
دليل التشغيل

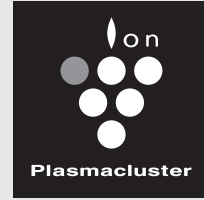

High-Density 7000 *

“Plasmacluster” and “Device of a cluster of grapes” are trademarks of Sharp Corporation.

*The number in this technology mark indicates the approximate number of ions supplied into 1 cm³ of air, which is measured around the center of a room (with the “High-Density Plasmacluster 7000” applicable floor area), at a height of 1.2m above the floor, at the MAX wind volume setting in air purifying mode, and when a humidifier & air purifier or an air purifier using the high-density plasmacluster ion evolving device is placed close to a wall. This product is equipped with a device of corresponding capacity.

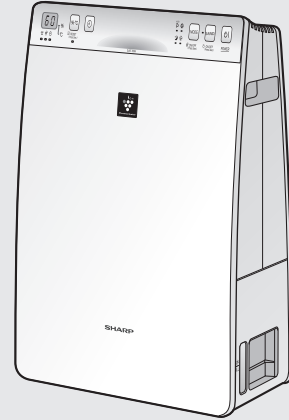

طراز دون حامل

FACTORY
USE ONLY



Printed in China

TINS-A959KKRZ 16G- (CN) ①