



YS2R6X400E9183091 / APS, Compressed air supply / E 56, APS control unit / APS / P, Power supply / P2, Central electric unit

C 1, Connector





From front, round sockets. Cable side, round sockets. From front, round pins. Cable side, round pins.

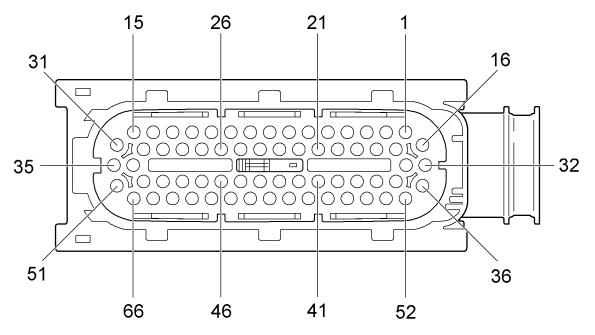

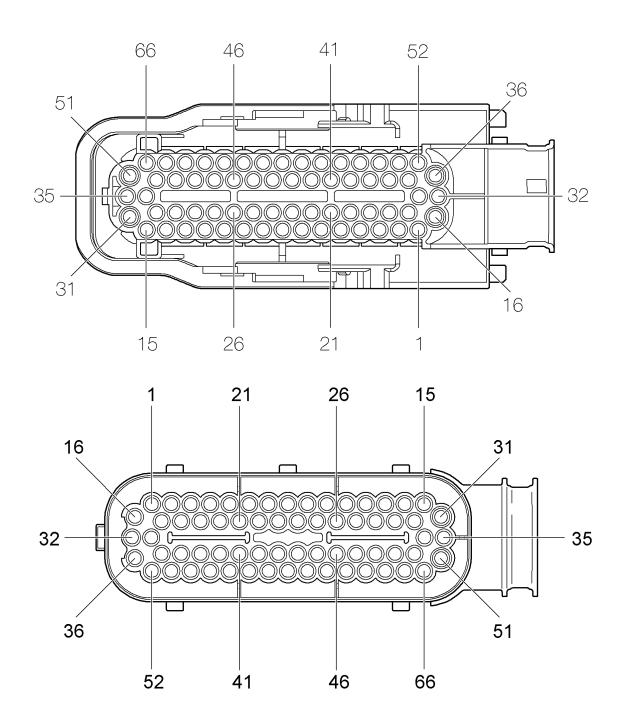




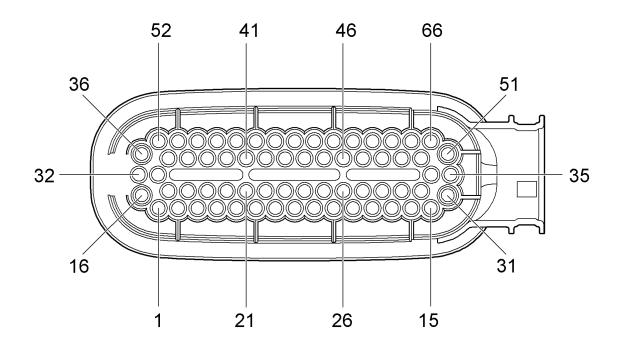

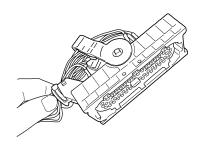

C 1, Connector

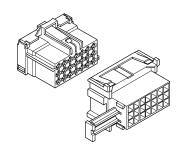

C 483, Connector



P 2, Central electric unit

Fuses:Warning!Always switch off the voltage when renewing fuses.Important!Always fit a fuse of the size specified in the list.Important! Always check the fuse and relay positions against the POW electrical diagram concerned.**Fuses for special functions:Relays and con-**

Fuse (No.)	Size (A)	System	Function	Supply	Cable colour	Connection 1	Marking of cable 1	Cable cross- sectional area 1 (mm²)	Connection 2	Marking of cable 2	Cable cross- sectional area 2 (mm²)
1	5	COO, BMS	Trailer ECU, ABS/EBS	15 A A	Green	A-1	COO125	0.75	A-2	BMS212	0.75
2	30	coo	Trailer valves	15AB	Green	A-3	COO128	4	A-4		
3	5	coo	PT01, PT02	15AC	Green	A-5	COO251	0.75	A-6	COO253	0.75
4	2	MIA, VIS	Mirror adjust- ment, reverse alarm	15AD	Green	A-7	MIA15	0.75	A-8	VIS167	0.75
5	5	TCO, LDW, FLC	Tacho- graph, Lane depar- ture warning	15AE	Green	A-9	TCO33	0.75	A-10	LDW12	1.5
6	20	WIW	Window winder, left- hand side	15AF	Green	A-11	WIW12	2.5	A-12	WIW10	2.5
7	10	VIS	Head- lamp wipers	15AG	Green	A-13	VIS16	1.5	A-14	VIS17	1.5
8	10	POW	Ciga- rette lighter	15AH	Green	A-15	POW45 +POW4 6	2.5	A-16	POW28	
9	5	FAS, COO	Inte- ractor 200 (FAS)/ Commu nicator	15AJ	Green	A-17	FAS14 +FAS15	1.5+1.5	A-18	COO130	0.75



			100, cruise control								
10	5	CCS, INL	ACC/ MCC, internal lighting Exclu- sive	15BA	Green	B-1	CCS3/ CCS2 +CCS4	0.75 +0.75 +0.75	B-2	INL12	0.75
11	10	RDL, AWD/ ABS	Diffe- rential locks, ABS 6 chan- nels	15BB	Green	B-3	RDL26	1	B-4	AWD12/ BMS222	1.5
12	5	FHS	Fuel pre- heating, heater for fuel filter	15BC	Green	B-5	FHS9	1	B-6		
13	10	TAL	Tag axle lift	15BD	Green	B-7	TAL17 +TAL4	0.75 +0.75	B-8		1.5
14	5	CSS	Airbag	15BE	Green	B-9	CSS015	0.75	B-10		
15	20	WIW	Window winder, right- hand	15BF	Green	B-11	WIW18 +WIW2 0	2.5+2.5	B-12	WIW14 +WIW1 6	2.5+2.5
16	10	CAT	Electric cab tilt- ing	15BG	Green	B-13			B-14	CAT	
17	20	BWS	Body- work	15BH	Green	B-15	BWS111	2.5	B-16	BWS207	1.5
18	5	SCS, POW	Safety belt buckle, safety switch ADR	15BJ	Green	B-17	SCS015	0.75	B-18	POW22 7	01
19	20	coo	Coor- dinator	30A	Red	C-1	COO58	2.5	C-2		
20	20	EMS	EDC	30B	Red	C-3	COO68	2.5	C-4		
21	10	coo	Starter lock	30C	Red	C-5	COO73	0.75	C-6		
22	20	EMS	EDC	30D	Red	C-7	COO67	2.5	C-8		



23	10	VIS	Brake lamp	30E	Red	C-9	VIS275	1.5	C-10		
24	20	BMS	ABS/EBS	30F	Red	C-11	BMS44	2.5	C-12	BMS45	2.5
25	10	SMS	ELC	30G	Red	C-13	SMS4	1.5	C-14	SMS5	1.5
26	20	ccs	Cab fan	30H	Red	C-15	CCS1	2.5	C-16		
27	5	CCS, AHS	CT/CTR	30J	Red	C-17	CCS5	0.75	C-18	AHS3	0.75
28	20	ROH	Roof hatch	30K	Red	C-19	ROH1	2.5	C-20		
29	10	ICL, TCO	Instru- ment cluster, tacho- graph	30L	Red	C-21	ICL18	1.5	C-22	TCO13	1.5
30	30	BWS	Body- work	30M	Red	C-23	BWS		C-24	BWS	
31	10	AWD, INL	AWD ECU, internal lighting	30N	Red	C-25	AWD5	1.5	C-26	INL5 +INL4 +INL1	1.5+1 +1.5
32	10	COO	SDP3	30R	Red	D-1	COO83	0.75	D-2		
33	10	HVF, VIS	Swiss road toll prepa- ration, rotating beacon	30\$	Red	D-3	HVF5	1.5	D-4	VIS172	1.5
34	20	POW	Voltage con- verter 24 V/12 V, 12 V elec- trical socket	30T	Red	D-5	POW34	2.5	D-6		
35	10	TGS, BWS	Trailer	30U	Red	D-7	TGS	1.5	D-8	BWS216	1.5
36	20	GMS	OPC/GA Allison	30V	Red	D-9	GMS1/ GMS136 2 +GMS1 363	2.5/1.5 +1.5			

trol units in the central electric unit:



							1				
37	10	LAS	Central locking	30X	Red	D-11	LAS101 +LAS20 1/MCL1	1.5+1.5	D-12	LAS1/ MCL2	1.0/1.5
38	20	AHS	Auxiliary heater (ATA, WTA)	30Y	Red	D-13	AHS1		D-14		1.5
39	10	VIS	Re- versing light	30Z	Red	D-15	VIS276	1.5	D-16		1.5
40	20	POW	24 V elec- trical socket	30AA	Red	D-17	POW24 +POW3 9	2.5+2.5	D-18	POW41	2.5
41	10	APS, FMS	APS ECU, FMS prepa- ration	30AB	Red	D-19	APS9	1.5	D-20	RTG3	1.5
42	30	CAT	Electric cab tilt- ing	30AC	Red	D-21	CAT		D-22		
43	10	REF, FAS	Refri- gerator, Inte- ractor 200/ Commu nicator 100 (FAS/ RTI)	30AD	Red	D-23	REF	1.5	D-24	FAS	1.5+1.5
44	10	AUS	Am- plifier	30AE	Red	D-25	AUS42	1.5	D-26	AUS44	2.5
45	10	MIH, ACL	Rear view mirror heater, ACL	61A	Blue	E-1	MIH61	1.5	E-2	ACL1	1
46	10	SCS, ALT	Seat heating, Alert	61B	Blue	E-3	SCS61 +SCS26 1	1.5	E-4	ALT30	
47	10	APS, FHS	Air dryer, fuel filter heater	61C	Orange	E-5	APS47	1.5	E-6	FHS13	1.5
48	10	BWS	Body-	61D		E-7	BWS		E-8	BWS	



			work								
49	-	-	-	-	-	-	-	-	-	-	-
50	5	COO	Alert yellow & green bus	X15	white	E-11	COO70	0.75	E-12		
51	-	-	-	_	_	-	-	-	_	_	_
52	2	LAS	Alarm	В	Brown	E-15	LAS40	0.75	E-16	INL	0.75
53	2	INL, ROH	INL Exclu- sive, warning of open roof hatch	В	Violet, grey	E-17	INL13	0.75	E-18	ROH050	0.75
54	10	VIS	Parking light, left- hand side	58A	Grey	F-1	VIS18 +VIS205	1.5+1.5	F-2	VIS19 +VIS20	1.5+1.5
55	10	VIS	Parking light, right- hand side	58B	Orange	F-3	VIS22 +VIS21	1.5+1.5	F-4	VIS24 +VIS23	1.5+1.5
56	5	INL, VIS	Back- ground lighting, levelling adjust- ment for head- lamps	58C	Blue	F-5	INL14	0.75	F-6	VIS	0.75
57	20	BWS	Body- work	58D		F-7	BWS		F-8	BWS	
58	10	VIS	Trailer, left- hand side	58E	Grey	F-9	VIS203	1.5	F-10		
59	10	VIS	Trailer, right- hand side	58F	Brown	F-11	VIS204	1.5	F-12		
60	-	-	-	-	-	-	-	-	-	-	-



61	2	BWS	Body- work	RA		F-15	BWS		F-16	BWS	
62	2	POW	Voltage con- verter 24 V/12 V	RA	Violet	F-17	POW31	0.75	F-18		
63	10	DAU, FLC	Driver alert unit, Forward looking camera	30AR		A-19	DAU1	1.5	A-20		
64	5	SMS	Electric power supply	30AS	Red	A-21	SMS200		A-22		
65	20	COO	Variable geo- metry turbo- charger	30AT	Red	A-23	COO710	2.5	A-24		
66	10	TPM	Electric power supply, TPM control unit	30AU	Red	A-25	TPM1	1.5	A-26		
67	30	KIT, CAT	Kitchen module, cab tilt system	30AF	Red	B-19	KIT530/ 532 KIT536	4.0	B-20	CAT8	4.0
68	10	KIT	Electric power supply	30AG	Red	B-21	KIT835	1.5	B-22	KIT830	1.5
69	20	ATL	Trailer axle lock	30AH	Red	B-23	ATL9	2.5	B-24		
70	10	DIS2	Distance sensor	30AJ	Red	B-25	DIS51	1.0	B-26		
71	20	FHS, FCS	Fuel heater, fuel cooler system	30AK	Red	E-19	FHS15	2.5	E-20	FCS23	
72	10	THR	Electric throttle	30AL	Red	E-21	COO8	2.5	E-22		



73	20	FHS, FCS	Fuel heater, fuel cooler system	30AM	Red	E-23	FHS4	2.5	E-24	FCS24	
74	20	VIS	Head- lamp cleaning	30AN	Green	E-25	VIS16	2.5	E-26		
75			Re- served for future system			F-19			F-20		
76			Re- served for future system			F-21			F-22		
77			Re- served for future system			F-23			F-24		
78			Re- served for future system			F-25			F-26		

Fuse (No.)	Size (A)	System	Function	Supply	Cable colour	Connection	Marking of cable	Cable cross- sectional area
F5	30	KIT	Kitchen equipment	30	Red	F5-6	KIT	4
F5	10	KIT	Kitchen equipment	30	Red	F5-8	KIT	1.5
F9	20	FHS	Heater fuel filter	30	Red	F9-2	FHS4	2.5
F14	20	WIW	Window winder, rear left (crew cab)	30	Green	F14-2	WIW1004 +WIW1005	2.5
F14	20	WIW	Window winder, rear right (crew cab)	30	Green	F14-4	WIW1006 +WIW1007	2.5



F14	10	FST	Footstep (crew cab)	30	White	F14-6	FST1004	1
F14	10	FST, POW	Footstep (crew cab)	30	Yellow, green	F14-8	FST1022, POW1002	1, 1.5

Position	System	Function
1	POW	15 voltage
2	POW	15 voltage
3	POW	controlled by VIS
4	POW	58 supply, controlled by VIS
5	INL	Internal lighting
6	TAL	Tag axle lift
7	VIS	Brake lamp
8	VIS	Reversing light
9	coo	Resistor unit for vehicles with cruise con- trol without buttons for this on steering wheel
10	FMS	ECU for FMS preparation
11	FMS	ECU for FMS preparation
12	ccs	A/C relay (crew cab)
13	POW	Safety switch
18	POW	Extra 15 supply relay for S vehicles
19	CAT	Relay for electronic cab tilting
20	TGL, KIT	Tail lift and kitchen equipment
23	VIS	Auxiliary light
24	VIS	Auxiliary light
25	VIS	Auxiliary light

Scania Diagnos & Programmer 3



		31 c-as c-as 30 c-as c-as	64 0-25 0-26 63 0-25 N=0 20			RP24	RP25	RP26	RP27A RP27B
[H-D-1	[Arcon]	29 carcas 28 carcas 27 carcas	62 0-21 0-22 61 0-12 0-22	63 p. or p. u	62 <i>1</i> -17 1 -18	RP20	RP21	RP22A RP22B	RP23
8 +15 +15 7 +12 +14	17#### 16####	26 0-15 0-16 25 0-13 0-14	39 0-15 0-16 36 0-13 0-14	525-15 6-16	61 F-15 F-16	RP17	RP	18	RP19
5 MAN	15011011	23040-10	35 0-1 0-10 35 0-2 0-4	50 e n e iii 49 ->	53 mm m 58 mm m 57 mm m	RP13	RP14	RP15	RP16
3 14 14 2 14 14 2	128484	21 04 04 20 04 04	34 04 04 33 04 04	47 64 64 46 63 64	667-17-4 657-17-4	RP9	RP10	RP11	RP12
I ALAK BP1	ID B-1 B-2 RP2	19 6-1 6-2 Fu	82 HI HI 50 S	45 E-1 E-2 RP3	54 r-1 r-2 SH RP4	RP5	RP6	RP7	RP8
							Rel	avs	

P 2, Central electric unit