



YS2R6X400E9183544 / VIS, Visibility system / E 32, CUV control unit / CUV1 / M, Electric motors / M7, Windscreen washer motor

## C 1, Connector





From front, round sockets. Cable side, round sockets. From front, round pins. Cable side, round pins.

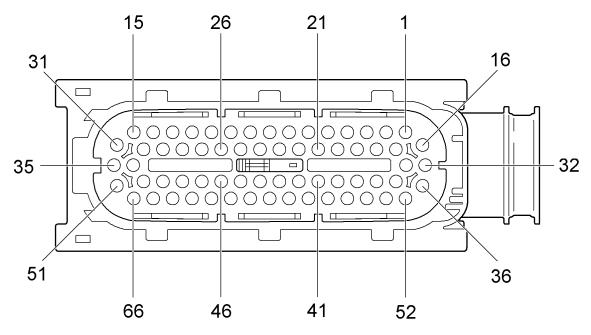

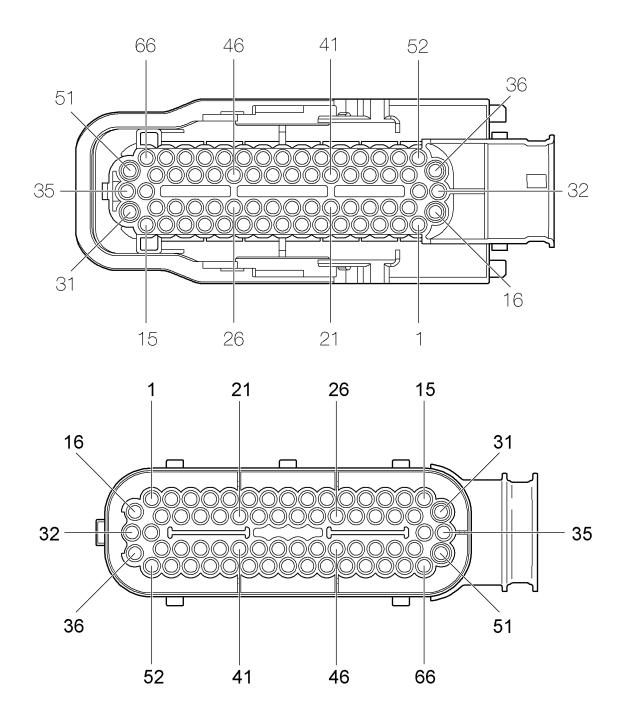



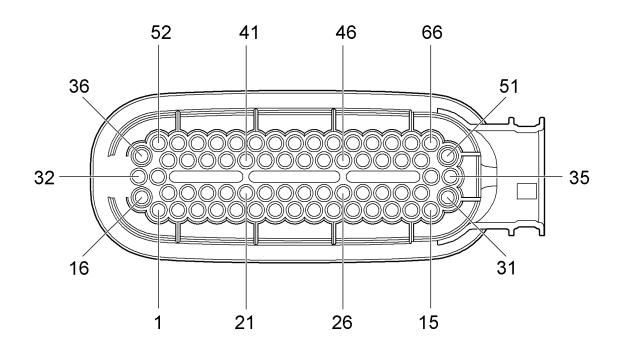

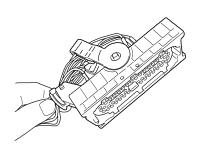

C 1, Connector

## E 32, CUV control unit

The CUV control unit has three multipin connectors and a 2-pin connector for the voltage supply. It comprises a driver stage which functions as a fuse in the event of overloading. The control unit receives information from the visibility system switch and controls and from other systems via the CAN link. It interprets the information and activates the requested functions or sends messages via the CAN link to other control units.

The control unit has three multipin connectors (15-, 18- and 21-pin) and a 2-pin connector for the voltage supply. Connector CCon-

Pin	Description	Signal type	Source/Destination
A 1-2	Voltage supply for CUV	Input signal, +24 V	C55



B1	Horn	Output signal, +24 V	Horn
B2	Activate the reversing light relay	Output signal, +24 V	Relay R24
В3	Activate the brake light relay	Output signal, +24 V	Relay R8
B4	Main beam LH	Output signal, +24 V	Main beam LH
B5	Ground		G14
В6	Windscreen wipers, low speed	Output signal, +24 V	Wiper motor
B7	Dipped beam RH	Output signal, +24 V	Dipped beam on the right- hand side
B8	Wiper speed interval	Input signal, analogue	Direction indicator and wiper lever
В9	Not used		
B10	Windscreen washer	Output signal, +24 V	Windscreen washer
B11	Starter key is in the drive position	Input signal, +24 V	Starter lock
B12	CANL	CAN	
B13	Windscreen wipers, high speed	Output signal, +24 V	Wiper motor
B14	Not used		
B15	CANH	CAN	

Pin	Description	Signal type	Source/Destination
C1	Indicator lamp for hazard warning signal	Output signal, +24V	Lighting switch module S139
C2	Activate the horn	Input signal, ground	Signal switch in the steering wheel
C3	Activate the main beam flash- er	Input signal, ground	Direction indicator and wiper lever
C4	Dipped beam LH	Output signal, +24V	Dipped beam on the left- hand side
C5	Activate the bumper- mounted spotlight	Input signal, ground	Extra lighting module S140

nector D



C6	Activate the sun visor- mounted spotlight	Input signal, ground	Extra lighting module S140
C7	Main beam RH	Output signal, +24V	Main beam on the right-hand side
C8	Ground	Ground	G14
C9	Activate work light	Input signal, ground	Extra lighting module S140
C10	Direction indicator front right	Output signal, +24V	Direction indicator front right
C11	Activate hazard warning signal	Input signal, ground	Lighting switch module S139
C12	Activate the parking lighting	Input signal, ground	Lighting switch module S139
C13	Direction indicator rear left	Output signal, +24V	Direction indicator rear left
C14	Lighting off/parking light	Input signal, ground	Lighting switch module S139
C15	Activate the direction indi- cator, RH side	Input signal, ground	Direction indicator and wiper lever
C16	Headlamp wipers	Output signal, +24V	Headlamp wiper Headlamp washer
C17	Switch for main/dipped beam	Input signal, ground	Direction indicator and wiper lever
C18	Activate the direction indi- cator, LH side	Input signal, ground	Direction indicator and wiper lever

Pin	Description	Signal type	Source/Destination
D1	Rear foglight	Output signal, +24V	Rear foglight
D2	Direction indicator, rear right on trailer	Output signal, +24V	Trailer socket
D3	Activate dipped beam/ parking lights	Input signal, ground	Lighting switch module S139
D4	Direction indicator, rear left on trailer	Output signal, +24V	Trailer socket
D5	Activate the windscreen washer	Input signal, ground	Direction indicator and wiper lever
D6	High-mounted headlamps indication	Input signal, ground	Switch for e.g. snow plough lighting

## Scania Diagnos & Programmer 3




D7	Sun visor-mounted spotlight	Output signal, +24V	Sun visor-mounted spotlights
D8	Activate front foglight	Input signal, ground	Front foglight
D9	Extra connection		
D10	Direction indicator rear right	Output signal, +24V	Direction indicator rear right
D11	Activate rear foglight	Input signal, ground	Extra lighting module S140
D12	Washer fluid level indication	Input signal, ground	Washer container
D13	Work light	Output signal, +24V	Work light
D14	Extra connection		
D15	Windscreen wiper end posi- tion	Input signal, ground	Wiper motor
D16	Direction indicator, front left	Output signal, +24V	Direction indicator, front left
D17	Activate the windscreen wiper, high or low speed	Input signal, analogue	Direction indicator and wiper lever
D18	Activate electrical equipment with high current consumption	Output signal, +24V	Relay 19
D19	Bumper-mounted spotlight	Output signal, +24V	Bumper-mounted spotlights
D20	Front foglight	Output signal, +24V	Front foglight
D21	Activate the parking light relay	Output signal, +24V	Relay 21

## M 7, Washer pump for windscreen washer

The washer pump for windscreen washer is controlled via the CUV control unit using the direction indicator and wiper lever (S141). Vehicles equipped with a low washer fluid level warning have a pump with integrated sensor. The driver is informed via the instrument cluster when approximately 30% of the washer fluid remains.

M 7, Washer pump for windscreen washer



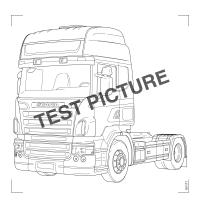



M 7, Washer pump for windscreen washer