


YS2R6X400E5345662 / COO, Coordinator / E 30, COO control unit / COO7 / C, Connectors / C489, Connector for bodywork

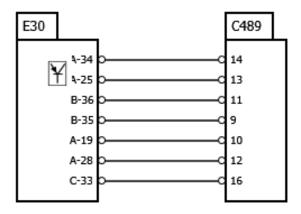

C489, Connector for bodywork

C489, Connector for bodywork

Connector C489 functions as an interface to bodywork.

Engine stop remote control

Status on coordinator pin A25. Active when circuit closed and 0 V.

Engine speed remote control

Status of coordinator pin A34. Active when circuit closed and 0 V.

Raise the tag axle on the trailer

When the tag axle on the trailer is lifted, an indication is sent to the coordinator via pin C33. The signal from the trailer can be either active for an open circuit and 24 V or active for a closed circuit and 0 V, dependent on how the trailer is configured. Settings are adjustable in SDP3.