The ARM Cortex-M4 Programmer's Model

STM32 Primer — Chapter 2

Muním Zabidi

Faculty of Electrical Engineering, Universiti Teknologi Malaysia

Why This Chapter Matters

To write real programs, we must know one processor in detail: its registers, their special roles, and how it stores the result of a comparison. This is the *programmer's model*. It is the part of the hardware that software can see. Everything you write, in C or assembly, uses these registers.

After this chapter, you can:

1. Separate ISA, microarchitecture and platform; give one meaning of "32-bit" for each.
2. State what makes ARM a RISC load-store design.
3. Explain how a pipeline raises throughput.
4. Choose a Cortex profile (A, R or M) for an application.
5. Name R0–R15 and the roles of SP, LR and PC.
6. Read the N, Z, C, V flags.
7. Describe the 4 GB memory map, little-endian order, and AHB versus APB.

© Muním Zabidi

By the end of this chapter, you will know exactly how this one line of C travels through the hardware:

```c
if (sensor_value == 0) { turn_on_led(); }
```

Each step on that trip is a section of this chapter:

What the hardware does	Where this chapter answers it
Load `sensor_value` from memory into a register	Load-store principle; the register set
Compare the register to zero using the ALU	RISC and the ALU; CPU time equation
Record the result as a flag	The APSR condition flags (N, Z, C, V)
Branch on that flag — change the PC	The register set (PC) and pipeline

Keep this one line in mind. Every abstract term that follows — ISA, RISC, pipeline, APSR, memory map — is a tool the hardware uses to execute it.

© Munim Zabidi

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set

8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

Three Layers Called “Architecture”

Layer	What it specifies
Instruction Set Architecture (ISA)	The language the processor understands: instruction formats, register set, addressing modes. Visible to an assembly programmer. *x86, ARM, RISC-V*
Microarchitecture	How that ISA is implemented in silicon: control signals, cache size, pipeline depth, ALU internals
Platform Architecture	How the processor reaches the rest of the system: buses, memory controllers, DMA. *ARM’s AMBA*

These layers are independent

One ISA can be built by many different microarchitectures. This is why code written for one ISA can run on physically different chips. It is the commercial foundation of the whole ARM ecosystem. The term “32-bit” can describe the ISA (32-bit registers), the ALU width, or the address bus. (Thumb-2 instructions themselves are 16 or 32 bits long.) On the Cortex-M4, these three meanings happen to be the same. But they are still three separate, independent facts.

Table of Contents

1 Architecture vs. Organization

2 **RISC and the Load-Store Principle**

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set

8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

CISC vs RISC

CISC	RISC
Emerged when memory was expensive and compilers were primitive	Deliberately simplified so that hardware is fast and predictable
Complex hardware instruction decoder	Relies heavily on the compiler for optimisation
Variable-length instructions, multi-clock operations	Uniform-length instructions, single-cycle operations, simple pipelining
Memory-to-memory: arithmetic can operate directly on memory	Register-to-register: memory is reached only via explicit load and store
Dense code, but more cycles per instruction	More instructions, but far fewer cycles per instruction
e.g. Intel x86, AMD	e.g. ARM, RISC-V

Complexity does not disappear — it moves

RISC moves complexity out of the hardware decoder and into the compiler. The result is a set of simple instructions that pipeline cleanly, and behave in a predictable way.

© Muním Zabidi

Memory Access vs. Register Architecture

CISC — Memory-to-Memory

- Memory operations are embedded in arithmetic instructions.
- A single instruction can load from memory, compute, and write the result back.

```
; x = x + 1
ADD [eax], ebx
```


RISC — Register-to-Register

- Strict load-store architecture.
- Memory is accessed only by dedicated LDR and STR instructions.

```
@ x = x + 1
LDR   r0, [r1]      @ load into register
ADD   r0, r0, r2    @ register arithmetic
STR   r0, [r1]      @ store back to memory
```


Instruction Length and Code Density CISC → ARM → Thumb → Thumb-2

CISC (e.g. x86)

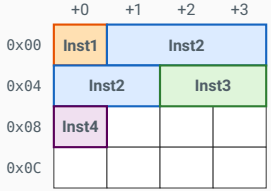

Very dense, but the length varies, so decoding is hard.

ARM, 32-bit (1985)

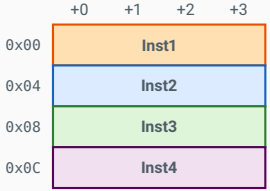

Uses the most memory. Fixed length makes decoding easy.

Thumb, 16-bit (1994)



Dense, but limited. Needs a mode switch (T bit) to reach ARM instructions.

Thumb-2, 16/32-bit (2003)




Dense and complete: 16- and 32-bit mixed, no mode switch. Used by every Cortex-M.

Why it matters: Flash is small

A microcontroller keeps its program in Flash, so smaller code means a cheaper chip. Thumb-2 gives ARM's full instruction set at close to Thumb's size. The Cortex-M4 runs only Thumb-2: every `.s` file starts with `.thumb`, and the T bit in xPSR must stay 1.

© Muním Zabidi

The Load-Store Principle

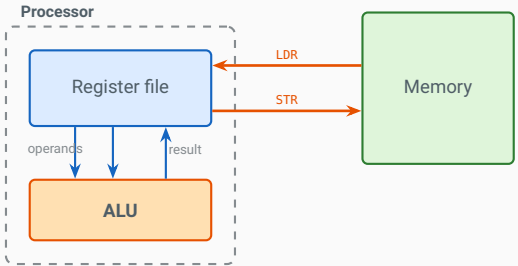

no path runs from memory to the ALU — every operand must first be loaded into a register

Key idea: the ALU never operates directly on memory. Data must first move into a register.

LDR → ALU operation → STR: this is the only way the ALU ever touches memory. Even `x = x + 1;` costs three instructions, never one. This pattern shapes every assembly example in Chapters 5 and 6.

Digital-electronics connection: registers sit only a few gate delays from the ALU. Memory sits across a bus, with address decoding and longer settling times. Forcing operands through registers first is what lets the clock run fast.

© Muním Zabidi

More Instructions Does Not Mean Slower

$$\text{CPU time} = \text{Instruction Count} \times \text{Cycles per Instruction} \times \text{Clock period}$$

Term	RISC effect	Why
Instruction count	Higher	More, simpler instructions per task
Cycles per instruction	Can be lower	Simple instructions pipeline easily
Clock period	Can be lower	A simple decoder allows a faster clock

Only the product of all three terms matters. RISC *aims* to lower CPI and the clock period, but the real values depend on the processor design.

Both of the fragments below were written by students used to CISC assembly. Neither one assembles on a Cortex-M4. Say why, in each case, before reading the answer.

Fragment A

```
ADD   [0x20000100], R1
```

"Add R1 to the memory word at `0x20000100`."

Why it fails The ALU can only read its operands from the register file. Memory is not an operand of an arithmetic instruction. The right version is three instructions: `LDR`, `ADD`, `STR`.

Fragment B

```
MOV   R0, #5
MOV   R1, #5
CMP   R0, R1
@ which flag is now 1?
```

Predict `CMP` subtracts `R1` from `R0` and discards the difference. Here $5 - 5 = 0$, so the Z (Zero) flag is set. The N, C, V flags are 0. This is why a C `if (x == y)` works.

Both answers rest on one rule each: the load-store principle on the left, and the APSR records every ALU result on the right.

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 **Von Neumann and Harvard Architectures**

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set


8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

Von Neumann Architecture

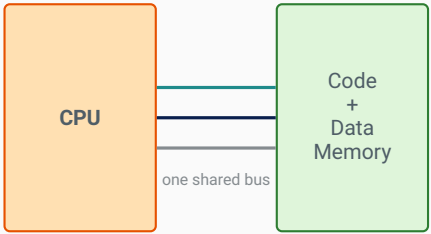


- A single storage system holds both program and data.
- An instruction typically needs two clock cycles: one to fetch the instruction, another to fetch its data.
- Instruction and data cannot travel at the same time, since they share one bus.
- Simple and inexpensive, but the shared bus quickly becomes a bottleneck.

This shared-bus limit is called the Von Neumann bottleneck. The next slide shows an architecture built to remove it.

© Muním Zabidi

Harvard Architecture

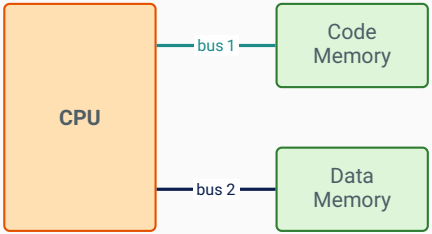


- Two separate memories for program and data, each with its own bus.
- With pipelining, an instruction can complete in one cycle: the next instruction is fetched while the current one reads its data.
- Most modern architectures are Harvard, or a close variant of it.

What the Cortex-M4 actually is

A modified Harvard machine. It has separate instruction and data buses (three AHB-Lite interfaces), but a single unified address space. You get the speed of Harvard, but you can still load a constant stored in flash with an ordinary load instruction.


© Munim Zabidi

Von Neumann vs Harvard: Why It Matters for Pipelining

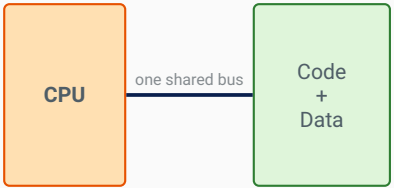

Von Neumann

- Instruction fetch and data access share one bus. They cannot happen together.
- The shared bus is the Von Neumann bottleneck.

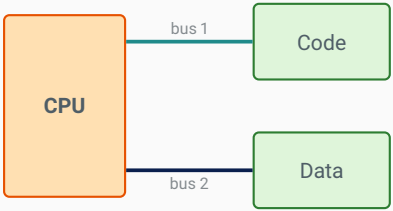

Harvard

- The CPU fetches the next instruction while the current one reads or writes data.
- This overlap is what a pipeline needs. The Cortex-M4 is modified Harvard: separate buses, one address space.

© Muním Zabidi

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 **Pipelining**

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set

8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map


10 Beamer Extras

11 Summary

Pipelining

Doing fetch, decode, and execute strictly one after another wastes hardware. While the ALU is busy, the fetch unit sits idle, doing nothing.

A pipeline overlaps these stages instead, like doing laundry: you do not wait for one load to finish drying before starting to wash the next one.

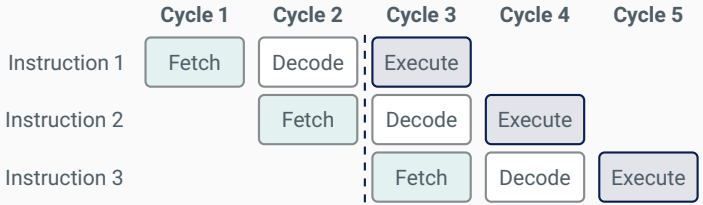

pipeline full — one instruction completes every cycle

- Each instruction still takes three cycles. But once the pipeline is full, one instruction finishes every cycle. The Cortex-M4 uses a three-stage pipeline with branch speculation.
- RISC instructions are simpler, so they are much easier to build a pipeline for.

What a Pipeline Costs

The PC runs ahead While instruction 1 executes, instruction 2 is decoding, and instruction 3 has already been fetched. So the PC does not point at the instruction currently executing. This is why `MOV R0, PC` returns an address four bytes ahead of the current instruction.

Branches cost more When a branch is taken, the instructions already fetched behind it are wrong. The pipeline must be cleared and refilled. A three-stage pipeline loses only a few cycles. A long pipeline loses many more.

A deliberate design decision

A Cortex-A core uses a long pipeline for high peak speed. But a mispredicted branch is expensive there, and how expensive depends on the data.
The Cortex-M gives up some peak speed on purpose, so its worst-case timing stays close to its average-case timing. Chapter 1 called this property essential for embedded systems.

© Muním Zabidi

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 **ARM History**

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set


8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

ARM History: Four Decades on One Line Colour shows the era

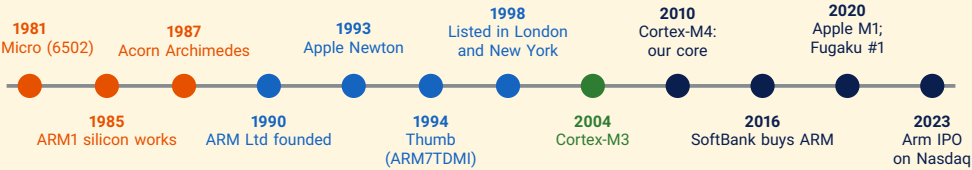

1980s a small British company builds a CPU. **1990s** it becomes a licensing company. **2000s** it takes the phone market. **2010s on** it reaches everything else.

Outline adapted from SKEE3223 Module 02; extra facts added.

To understand the Cortex-M4, we first look at where ARM came from, and how its processor families grew.

1980s Acorn Computers in Cambridge builds the **BBC Micro** around the 6502, for the BBC's computer-literacy project.

1985 Sophie Wilson and Steve Furber design a new CPU: the Acorn RISC Machine. The ARM1 has only 24 800 transistors and uses under 100 mW.

1990 ARM Ltd is spun out, jointly owned by Acorn, Apple, and VLSI. "Acorn" becomes Advanced RISC Machines.

1993 The Apple Newton ships with an ARM610. The product itself sells poorly, but the partnership pushes ARM toward a pure licensing model.

2000s Mobile phones make ARM the default choice: low power, good enough performance, and easy to license.

Today The most widely used ISA on Earth, used in everything from tiny sensors to Apple's M-series chips and Amazon's Graviton servers.

The pattern worth noticing

ARM was designed to be small because Acorn was a small company with a limited budget. That early constraint later became the reason ARM came to dominate the embedded and mobile markets. This is the same cost-and-power argument as in Chapter 1.

© Muním Zabidi

BEAMER EXTRA

Why a new CPU?

- The BBC Micro used the 6502. Acorn needed something faster for its next machine.
- The 16-bit chips on sale did not impress Sophie Wilson and Steve Furber.
- They read the Berkeley RISC research. The lesson they took: a small team can design a good CPU, if the design is simple.

What they did

- Wilson designed the instruction set. Furber led the hardware design.
- Their first model of the CPU was a program in BBC BASIC running on a BBC Micro.
- 26 April 1985: the first silicon came back from VLSI Technology. It worked the first time.
- About 25 000 transistors, and very low power.

Why this matters to you

Simple wins. The “reduced” in RISC is the reason this course can teach a whole Cortex-M4 instruction set in a few chapters.

© Muním Zabidi



1990: the spin-off

Acorn, Apple and VLSI Technology formed a joint venture. Apple wanted ARM for its Newton PDA, but did not want to depend on a rival. A separate company solved that. About a dozen engineers moved into a converted barn near Cambridge.

2017: the rebrand

The company dropped the acronym and the capital letters. The name is now just Arm. Older slides, and many books, still write ARM. This book uses ARM for the architecture family.

Selling Designs, Not Chips The business model that won

How Arm earns money

- A licence fee when a company starts using a core.
- A small royalty on every chip shipped.
- Arm owns no factory. The licensee adds peripherals, memory and analog parts, then has the chip made.

Licensees: Qualcomm, Samsung, Nvidia, Apple, and the maker of your board, STMicroelectronics.

Ownership

- **1998:** listed in London and New York.
- **2016:** bought by SoftBank for about $32 billion.
- **2020–22:** a planned sale to Nvidia was announced, then dropped.
- **2023:** listed again, on Nasdaq.

The result

Phones chose ARM for low power. Then embedded systems, cars and IoT followed. Then data centres (Amazon Graviton) and laptops (Apple M1 and M2).

Did You Know? Arm trivia

Powered by leakage

The story goes that an early ARM test board ran with its power connection missing. The chip was running on stray current leaking through its I/O lines. The design used so little power that nobody noticed.

Thumb in your pocket

Thumb (1994) made instructions 16 bits long to save memory. The ARM7TDMI core that used it ran the Game Boy Advance, and many phones of that time.

A supercomputer too

In 2020 Fugaku, a Japanese supercomputer built on Arm cores, ranked number 1 in the world. The same architecture family is on your desk.

Your core is a teenager

The Cortex-M4 was announced in 2010. The first Cortex-M3 chips from ST arrived around 2007, and they started the STM32 family you use now.

Cambridge, again

The Raspberry Pi also comes from Cambridge. Its first board used an ARM11 core. Its own microcontroller chip, the RP2040, uses two Cortex-M0+ cores.

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 **ARM Cortex Profiles**

7 The Cortex-M4 Register Set


8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

ARM Does Not Make Chips Why there is an ST logo on an ARM core

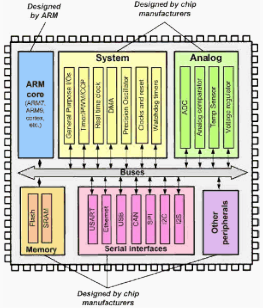

ARM is fabless: it designs processor cores and licenses the design to others. It owns no chip factory itself.

Core licence A chip maker puts an ARM core into its own design, then adds its own memory, peripherals, and analog circuits (ST, NXP, Microchip, Nordic, . . .).

Architecture licence A company designs its *own* core that still runs the ARM instruction set. Fewer than ten such licences exist. Apple's M-series is one example.

On your bench: ARM designed the Cortex-M4 core. ST added the flash, SRAM, GPIO, timers, ADC, and UART around it. The finished product is the **STM32F446RE**.

The hierarchy to keep straight

ARM defines the instruction-set architecture and licenses cores. **Cortex** names families of processor cores built around it. For embedded systems, the family we use is Cortex-M.

© Muním Zabidi

The Three Cortex Profiles

	Cortex-A	Cortex-R	Cortex-M
Profile	Application — highest performance	Real-time — fast response	Microcontroller — smallest, lowest power
OS	Linux, Android	RTOS	Bare metal / RTOS
Instruction set	32- and/or 64-bit	32-bit, Thumb	Thumb only
Interrupts	Software-managed	Deterministic, software-managed	Hardware-managed
Pipeline	Long	Long to medium	Short
Cache / TCM	Multi-level caches	TCMs and/or caches	None (M7: small)
Found in	Phones, tablets, servers	Storage, industrial, automotive	IoT, sensors, control

Cortex-M trades peak speed for predictable, low-power execution

A short pipeline and no cache mean an instruction takes exactly the time the documentation says it takes. This is the property we said was essential for embedded systems.

So where does the Cortex-M4 fit inside the Cortex-M family? That is next.


© Muním Zabidi

Processor	Description
Cortex-M0	Very small (from 12K gates), lowest cost, ultra-low power
Cortex-M0+	Most energy-efficient; adds single-cycle I/O and vector-table relocation
Cortex-M3	Rich instruction set, hardware divide, MAC, full debug and trace
Cortex-M4	Everything in the M3, plus DSP (SIMD, fast MAC) and an optional single-precision FPU
Cortex-M7	High performance, dual-issue pipeline, optional double-precision FPU, cache and TCM
Cortex-M23	ARMv8-M Baseline with TrustZone; ultra-low-power secure IoT
Cortex-M33	ARMv8-M Mainline with TrustZone, optional DSP/FPU; widely used secure MCU core
Cortex-M35P	Like M33 but with built-in physical tamper resistance
Cortex-M52	Smallest core with Arm Helium (MVE); efficient ML/DSP for cost-sensitive designs
Cortex-M55	First Helium core; strong scalar + vector (ML/DSP) performance
Cortex-M85	Highest-performance Cortex-M; superscalar + Helium, strongest ML/DSP and security features

The **F** in STM32F446RE's core name — Cortex-M4F — shows that a floating-point unit is fitted. Your board can therefore do single-precision floating-point arithmetic in hardware.

© Muním Zabidi


Inside the Cortex-M4 What each block is for

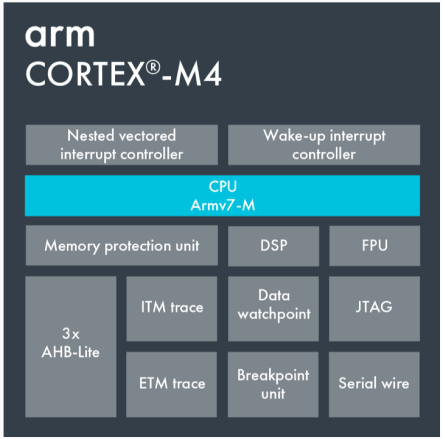

- **CPU (Armv7-M)** — the datapath from Chapter 1, now with 16 registers.
- **NVIC** — Nested Vectored Interrupt Controller. Interrupts are managed in hardware (Chapter 9).
- **DSP / FPU** — SIMD operations, fast multiply-accumulate, and single-precision floating-point.
- **MPU** — Memory Protection Unit.
- **3 × AHB-Lite** — the separate instruction and data buses that give the core its modified-Harvard design.
- **JTAG / Serial Wire, ITM/ETM** — the debug and trace hardware your ST-LINK talks to.

Cortex-M4 Features The specification, in one place

Architecture	ARMv7E-M
ISA	Thumb-2
Pipeline	3-stage + branch speculation
Bus interface	3 × AMBA AHB-Lite
DSP	Single-cycle 16/32-bit MAC
	Single-cycle dual 16-bit MAC
	8/16-bit SIMD arithmetic
	Hardware divide (2–12 cycles)
Floating point	Single precision, IEEE 754
Interrupts	Nested Vectored Interrupt Controller
	Non-maskable interrupt (NMI)
	1 to 240 physical interrupts
	8 to 256 priority levels
HLL support	Designed to be programmed fully in C

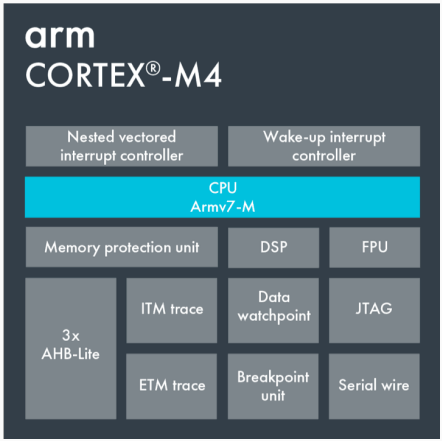

Every row above has already appeared in this chapter, except the last one. That last row is the reason Chapter 4 is written in C, not assembly.

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 **The Cortex-M4 Register Set**

8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary


We move from processor *architecture* to the processor's *programmer's model*.

What can your C or assembly program actually see?

This is the question we opened the chapter with: *"This detailed view is called the programmer's model — the part of the hardware that software can actually see."* We can now describe that model in detail: registers, flags, memory, and peripherals.

© Munim Zabidi

The Complete Register Set Core registers in focus; special registers for reference

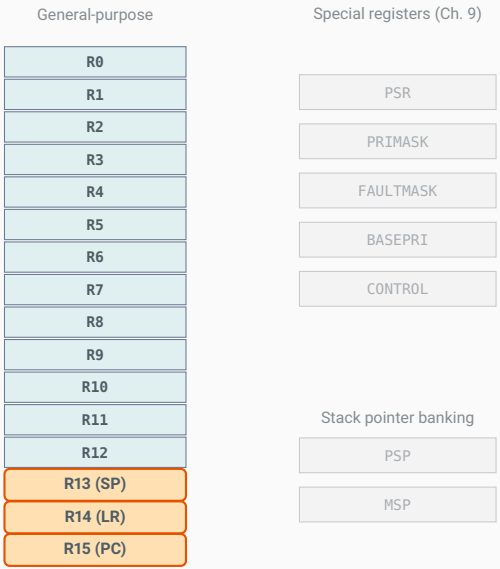

The Cortex-M4 Core Registers

Register	Name	Role
R0–R12	General purpose	Any data or address. R0–R3 carry the first four function arguments; R0 holds the return value
R13	**SP** Stack Pointer	Points to the top of the stack in SRAM. Banked as MSP / PSP
R14	**LR** Link Register	Holds the return address; written automatically by BL
R15	**PC** Program Counter	Address of the next instruction. Writing it performs a branch
xPSR	Status	Condition flags and execution state

Sixteen is a deliberately small register file

MIPS and RISC-V give the programmer 32 registers. ARM gives up a little compiler flexibility for a smaller, faster, lower-power register file. This fits both the load-store idea and the needs of embedded systems.

SP is really two banked registers, MSP and PSP, chosen by CONTROL. The mask registers (PRIMASK, FAULTMASK, BASEPRI) control interrupts. Not every Cortex-M core has them; Chapter 9 comes back to this.

© Muním Zabidi

A Common Debugging Mistake: Reading the PC

The surprise

`MOV R0, PC` does not give you the address of that `MOV`. It gives that address + 4.

Why — this is just the pipeline

- By the time an instruction executes, the next ones have already been fetched.
- "The current instruction" has no clear meaning on a pipelined machine.
- So the PC runs ahead. On the Cortex-M4, it runs 4 bytes ahead: two 16-bit instructions.

Why you care

- You will meet this in a debugger.
- It looks exactly like an off-by-one bug in your own code.
- It is not. It is the architecture.

Set a breakpoint on the MOV below. Three windows in your IDE now show the same instant, from three angles:

C source

```
int x = 10;    // <-- stop
```

Disassembly

```
0x08000100: MOV R0, #10  <--
0x08000104: STR R0, [SP, #4]
0x08000108: LDR R0, [SP, #4]
```

Register window

```
R0 = 0x00000000
PC = 0x08000104
LR = 0x08000201
```

What to notice

The MOV sits at 0x08000100, but the debugger shows PC = 0x08000104. The PC is reading the instruction after the one the arrow points at — because by the time MOV executes, the pipeline has already fetched the STR behind it. This is not an off-by-one bug. It is the pipeline, visible for the first time outside a textbook figure.

The same three lines from Chapter 1, now with the Cortex-M4 register set:

```
int x = 1;          // at 0x2000
int y = 2;          // at 0x2002
int z = x + y;      // at 0x2004
```

The Cortex-M4 is a load-store machine, so these values must travel a fixed path before any arithmetic can happen:



The register set is not an abstract list. It is the set of places where your variables must physically be before the ALU can touch them.

© Muním Zabidi

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set

8 **The Application Program Status Register (APSR)**

9 The 4 GB Memory Map

10 Beamer Extras

11 Summary

The APSR Condition Flags



Bit	Flag	Set when
31	**N** Negative	Bit 31 of the result is 1 (negative when interpreted as signed)
30	**Z** Zero	The result is exactly zero (set by a `CMP` of equal values)
29	**C** Carry	Unsigned addition produced a carry, or unsigned subtraction did *not* borrow
28	**V** Overflow	A signed operation exceeded the representable range

This is how a processor makes decisions: the C statement `if (x == y)` works by subtracting, discarding the difference, and testing the **Z** flag. **C** is the carry-out of the final full adder. **V** is the XOR of the carries into and out of the MSB. These are circuits you have already built.

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set


8 The Application Program Status Register (APSR)

9 **The 4 GB Memory Map**

10 Beamer Extras

11 Summary

The Generic ARMv7-M Memory Map

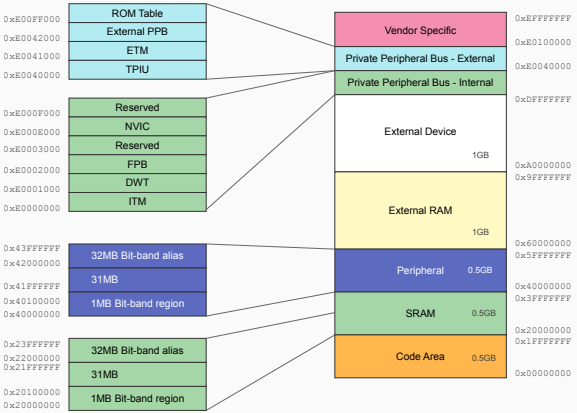

This is the map defined by ARM.

ARM defines a standardized address space shared by every Cortex-M core. This is what lets code move between chips from different vendors.

The space is 4 GB wide, split into sub-regions, each with its own separate role.

Base	Region
0x0000 0000	Code — 512 MB
0x2000 0000	SRAM — 512 MB
0x4000 0000	Peripheral — 512 MB
0x6000 0000	External RAM — 1 GB
0xA000 0000	External device — 1 GB
0xE000 0000	Private peripheral bus

Code area (512 MB)

- Maps to Flash: program code and constant data
- Also holds the bootloader and the interrupt vector table
- Code executes directly from Flash

SRAM (512 MB)

- Variables, the stack, dynamic data
- Faster to access than Flash

Peripheral (512 MB)

- The memory-mapped registers of every on-chip peripheral — GPIO, timers, ADC, DAC, UART, SPI, I^2C
- Each peripheral gets its own address range

Private peripheral bus

- System peripherals: NVIC, SysTick, MPU
- Debug and trace: DWT, ITM, FPB


On your STM32F446RE


512 KB of Flash and 128 KB of SRAM fill only a small part of the regions above. The rest of the map is reserved, not missing. Reading an address with nothing there causes a HardFault.

You will spend 99% of your time in just three of these regions: Code (Flash), SRAM, and Peripherals. External RAM, external devices, and the bit-band alias are advanced topics this book does not use.

© Muním Zabidi

The 4 GB Memory Map The STM32F446RE inside it

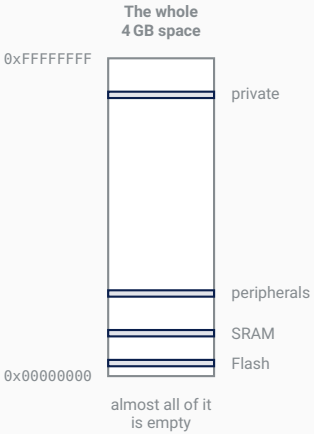

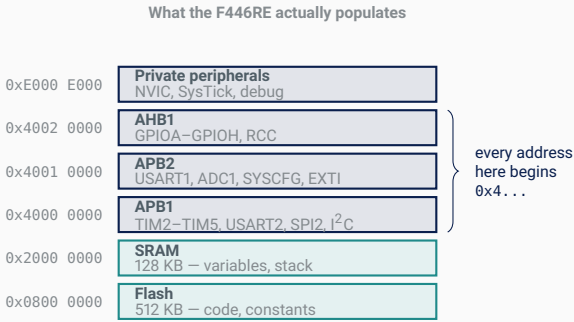

Now we look at where the real STM32 resources live. ARM fixes this layout for every Cortex-M device. This is why the NVIC sits at the same address on every vendor's chip.

There is no special instruction for I/O


A peripheral register is just an address. You turn an LED on with the same STR instruction you use to write to a variable. Only the address is different.

What you write in C	What it becomes	Where it lands
`c = a + b;`	`STR R2, [R3]`	SRAM, `0x2000xxxx`
`GPIOA->ODR |= (1<<5);`	`STR R2, [R3]`	peripheral, `0x40020014`

Same instruction, same registers, different address. And one of those addresses lights a real LED on `PA5`. That is the whole idea. Chapter 8 is where you put it to use.

© Muním Zabidi

Two Buses, Two Speeds AMBA: AHB for fast, APB for slow

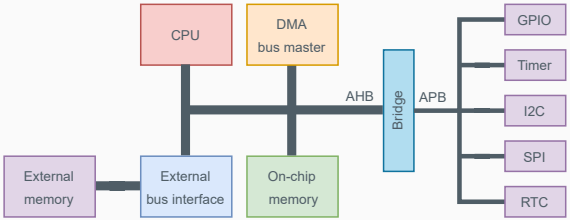


The peripheral region is not one single bus. STM32 chips use the AMBA standard, with two buses in particular:

- AHB (High-performance) — CPU, memory, and fast peripherals (GPIO, DMA).
- APB (Peripheral) — slower peripherals, reached through a bridge from AHB.

So `RCC->AHB1ENR` and `RCC->APB2ENR` are two different registers in every peripheral chapter from here on. A clock enabled on the wrong bus register is a clock that was never enabled at all.

© Muním Zabidi

Byte Order: Endianness

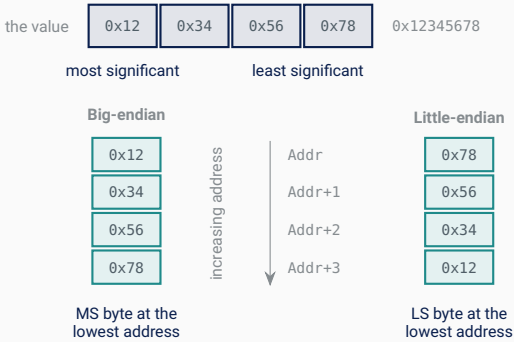

Both conventions store the same four bytes. They only differ in which end sits at the lowest address. The Cortex-M4 is little-endian, like x86, so raw memory dumps look the same on the target and on a typical PC.

When something later in the course looks strange — a C statement that compiles into more instructions than you expected, a debugger value that is off by four, an `if` that behaves oddly — one of these three sentences almost always resolves it:

1. The ALU only speaks to registers
2. The pipeline is always looking ahead
3. The APSR leaves breadcrumbs for the PC

Mantra	When it rescues you
1	Why does `x = x + 1;` become three instructions, not one? — load-store.
2	Why does `MOV R0, PC` return the address *after* the `MOV`? — pipeline.
3	How does an `if (x == y)` actually work? — `CMP` subtracts, Z flag is tested, PC branches.

© Munim Zabidi

BEAMER EXTRA

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set

8 The Application Program Status Register (APSR)


9 The 4 GB Memory Map

10 **Beamer Extras**

11 Summary

From ARM to the Board on Your Desk

Four names are easy to confuse: ARM, Cortex-M4, STM32, Nucleo. Each name is a different layer of the same stack.

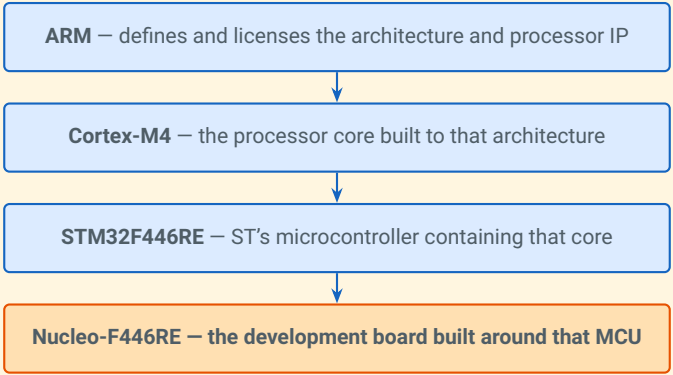

Every slide from here on sits at one of these four levels. Keeping them separate is the best way to avoid confusing "ARM," "the chip," and "the board."

STM32

STMicroelectronics' family of **32**-bit microcontrollers, each built around a licensed ARM Cortex-M core.

ARM supplies the core

- The Cortex-M4 datapath, registers, and instruction set: everything covered so far in this chapter.
- The same core, across every vendor's chips.

So Cortex-M4 code can move between different chips, at the core level.

ST adds everything else

- Flash and SRAM, in specific sizes
- Peripherals: GPIO, timers, ADC, DAC, UART, SPI, I^2C, CAN, USB
- Clock tree, power management, packaging

These parts are not portable. They are ST's own design. Chapters 8–13 focus on programming them.

The family covers many market needs: **F** (general purpose), **L** (low power), **G** (advanced general purpose), **H** (high performance), **WB** (wireless), **U** (ultra-low power). We use an STM32F4.


Reading the Part Number Every character means something



STM32	**F**	**446**	**R**	**E**	**T**	**6**
32-bit MCU	Foundation	high perf. + DSP with FPU	64 pins	512 KB flash	plastic LQFP	−40 to +85 °C

A part number is a spe[redacted] is not a serial number.

The Chip Itself STM32F446RE in LQFP64

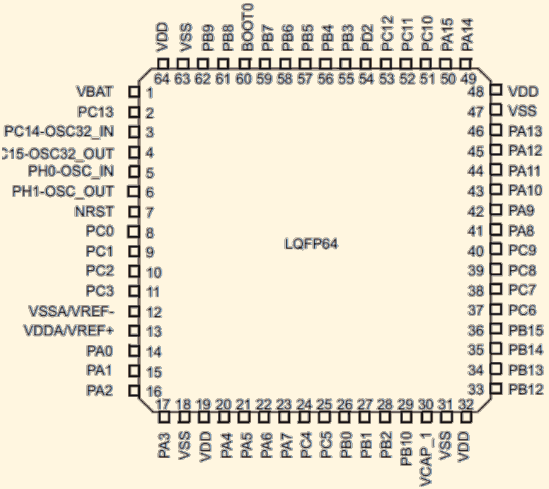


STM32F446RE

- Core: ARM Cortex-M4
- Clock: up to 180 MHz
- Flash: 512 KB
- SRAM: 128 KB
- FPU and DSP: single-precision floating-point and DSP instructions for real-time work
- Rich peripheral set: GPIO, timers, UART, I^2C, SPI, CAN, USB

R = 64 pins and **T** = LQFP, exactly as the part number said two slides ago.


BEAMER EXTRA

STM32 Boards The three you will actually use

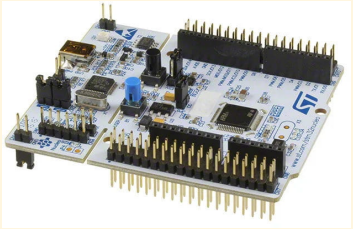

Nucleo-F446RE

- Our running board all semester
- ST-LINK built in — no separate debugger needed
- Arduino Uno pinout + morpho headers

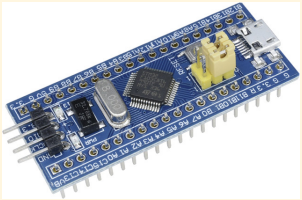

Blue Pill

- Not made by ST; one of many third-party boards
- Cheapest way to get a Cortex-M4 on a breadboard
- Debugger not included — needs the ST-LINK




ST-LINK V2

- External programmer/debugger over SWD
- What the Blue Pill needs; the Nucleo has one built in
- Same tool, same workflow, either board

Same Cortex-M4 core, same ISA, but very different boards.

BEAMER EXTRA

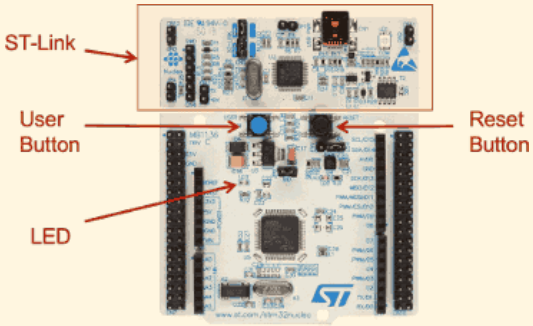


The Nucleo board adds four useful features that make experiments easy:

- ST-Link debugger — the detachable top section. One USB cable supplies power, programming, and debugging. No separate programmer is needed.
- User button and LED — PC13 and PA5. Enough to check a program works, with no external wiring.
- Arduino connector — accepts standard off-the-shelf shields.
- Morpho connector — brings out every STM32 pin, including the ones the Arduino header cannot reach.

Full details are in the *STM32 Nucleo-64 Boards User Manual* (UM1724).

Nucleo-F446RE Pinout

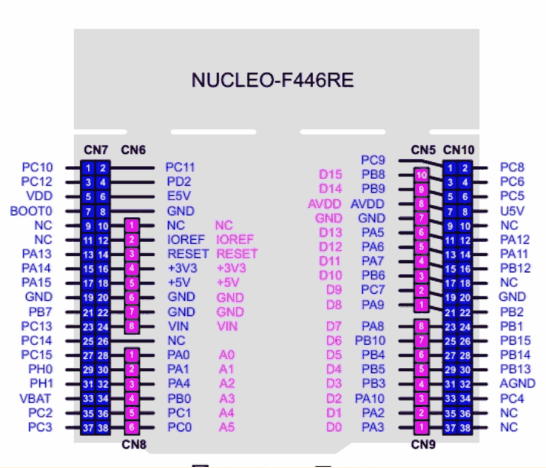

Two connector systems share the board:

- Arduino headers (CN5–CN10, magenta) — `D0-D15`, `A0-A5`. Accept standard shields.
- Morpho headers (CN7, CN10, blue) — every STM32 pin, including the ones the Arduino header leaves out.

Pins used throughout the course:
`PA5` — user LED (Arduino `D13`)
`PC13` — user button

BEAMER EXTRA

Table of Contents

1 Architecture vs. Organization

2 RISC and the Load-Store Principle

3 Von Neumann and Harvard Architectures

4 Pipelining

5 ARM History

6 ARM Cortex Profiles

7 The Cortex-M4 Register Set


8 The Application Program Status Register (APSR)

9 The 4 GB Memory Map

10 Beamer Extras

11 **Summary**

Summary

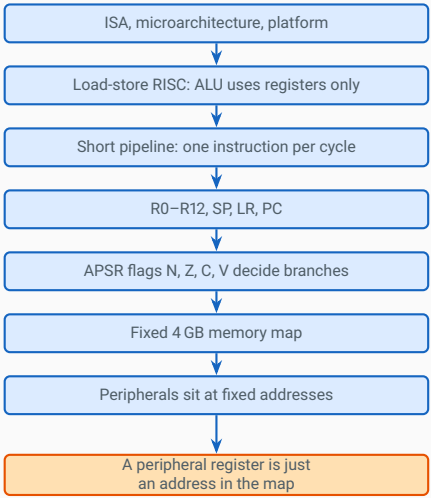

Terminology covered

- ISA vs microarchitecture
- Load-store, pipeline
- Core registers, APSR
- Memory map, endianness
- AHB and APB buses

Next: Chapter 3

Memory, Addressing and Pointers

If a peripheral is an address, a pointer is how C reaches it.