GNU Radio ile Uygulamalı Haberleşme Sistemleri

Linux Kış Kampı Eskişehir, 10-13 Şubat 2025

Outline

Quick Recap

SDR Intro

RTL-SDR Installation

Spectrum Monitoring

SDR Architectures

Recap - GNU Radio

Create a flowgraph that generates # dial tone

Schedule

- First Day: GNU Radio Introduction, DSP, GR Simulation Mode
- Second Day: SDR Introduction, RTL-SDR, GR Real-Time Mode
- Third Day: Analog Communications
- Fourth Day: Digital Communications

UNITED

STATES

FREQUENCY

ALLOCATIONS

THE RADIO SPECTRUM



ha dest inception ingla pera la rise premiet at the Telle of Progress billionismo and the thirt is set.


This is a construction an completely often all agents, in the enterval interest designs make note billion.

The rise of the construction is a semiglate information, some shall a count by Telle to interest the complete of the construction.

The rise of the construction is a semiglate information, some shall a count by Telle to interest the construction.

U.S. DEPARTMENT OF COMMERCE
National Telecommunications and information Administration
Office of Spaceton Management

To ad it its improvement for more the foreign Energy May from technologies (Security of the Markey St. Sec. 1997) of the foreign All Control Rev Sec. 1997 Water part of 1998 All Control

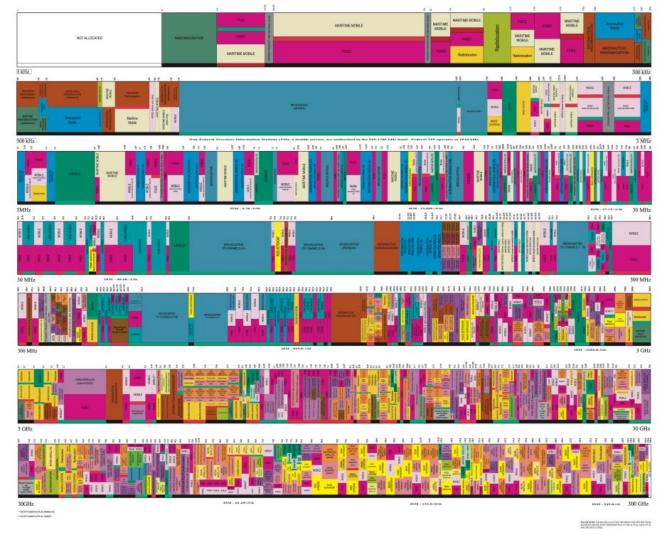


UNITED

STATES FREQUENCY ALLOCATIONS

THE RADIO SPECTRUM



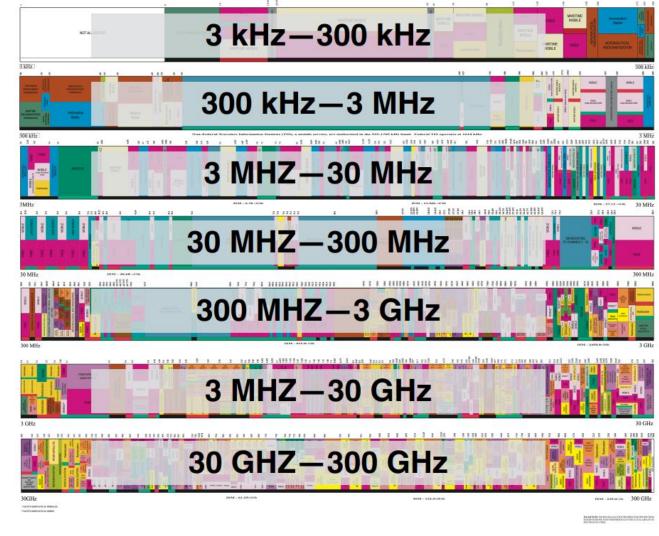

UNITED

STATES

FREQUENCY

ALLOCATIONS

THE RADIO SPECTRUM





ALLOCATION USAGE DESIGNATION
SERVICE EXAMPLE DESCRIPTION
Fromy PEXEL Copiel Lear
Incoming Mobile to Capiel Lear


The dark range for regle post-entry parties of the Table of Proposet Allocation small by the FCT and NTDL. As soil, it may not completely office of largests, as formationed associate parties for TABL of Proposet, followings: Therefore the complete of entraints, now closely could be Table to obtain to the


U.S. DEPARTMENT OF COMMERCE
National Telecommunications and Information Administration
Office of Spectrum Managerners


Fe with Octoperación of Novico, 11, Andread Party (15): Servet Indianage per Standolle (Bol 10) 400 Melada, 15 en 2011 (S Servet 10) (Scholler (en solt Herego, Sci 64) 416

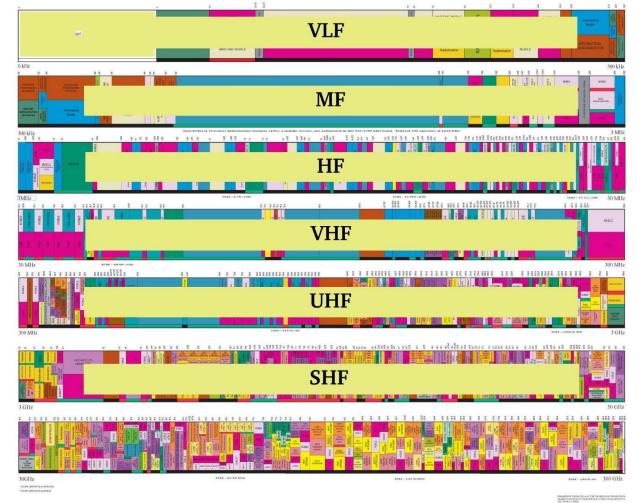

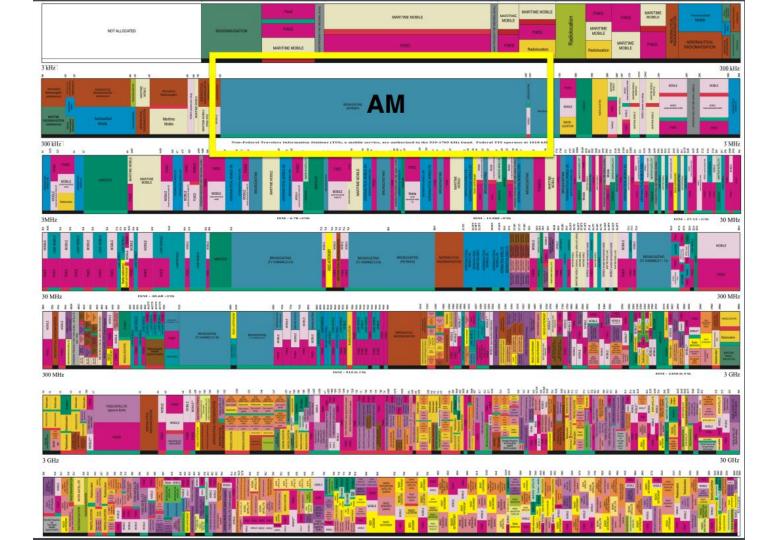


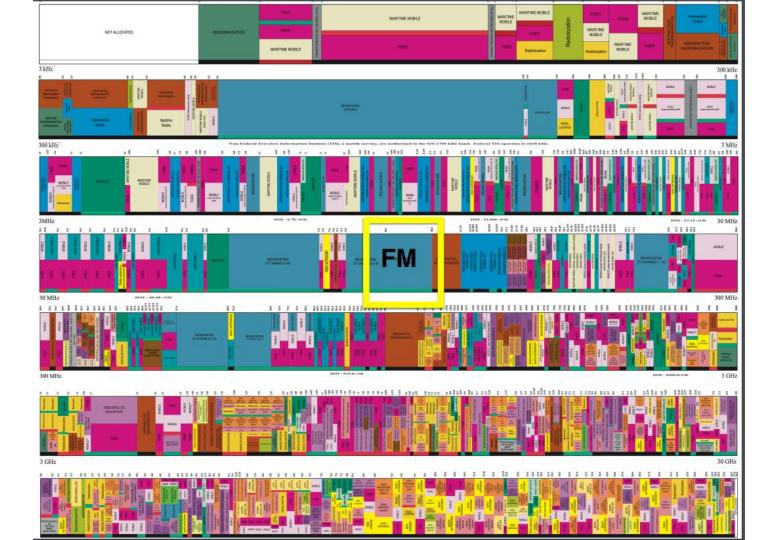

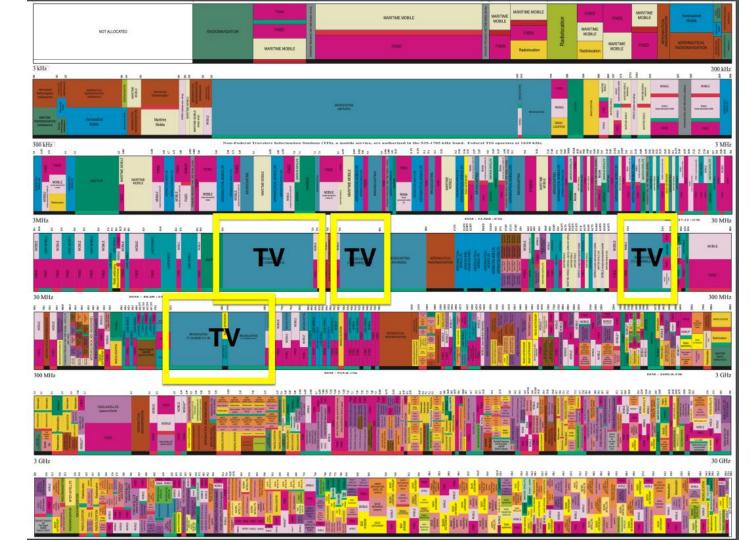

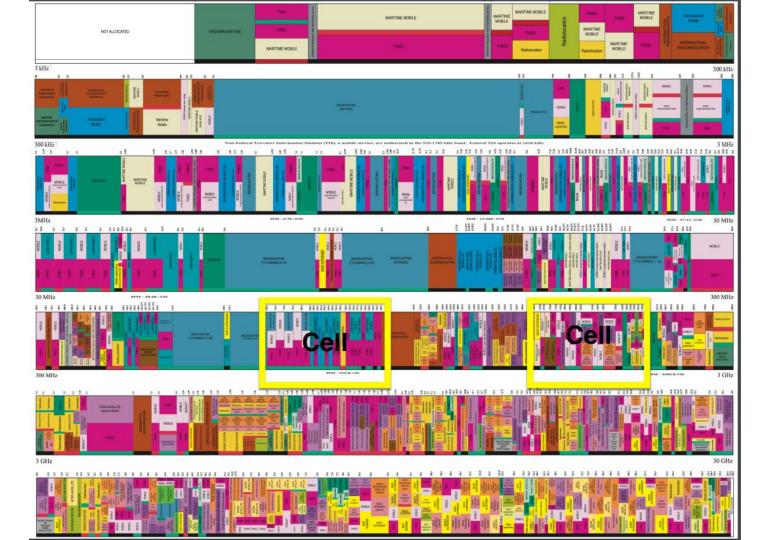



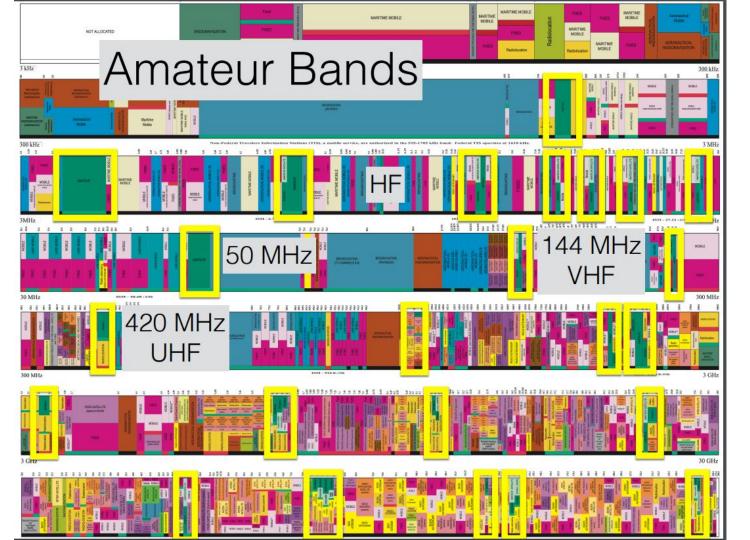


Finding Where You are on the Radio Dial

- Described as Band, Frequency, or Wavelength
- Bands: HF, UHF, VHF
- Frequency: 50 MHz, 144 MHz, 440 MHz
- Wavelength: 6 m, 2 m, 70 cm
- Wavelength (in m) = 300 / (frequency in MHz)

Propagation Modes

- Ground wave
 - Low HF and below, ground acts as waveguide
 - AM radio
- Line-of-Sight (LOS)
 - VHF and above, radio waves only slightly refracted or reflected by the atmosphere
 - FM Radio
- Sky wave
 - For HF, and sometimes VHF, the upper atmosphere acts as a reflector, bouncing radio waves back to earth far from the source
 - Short wave radio

Skywaves & Skip Distance & Skip Zone

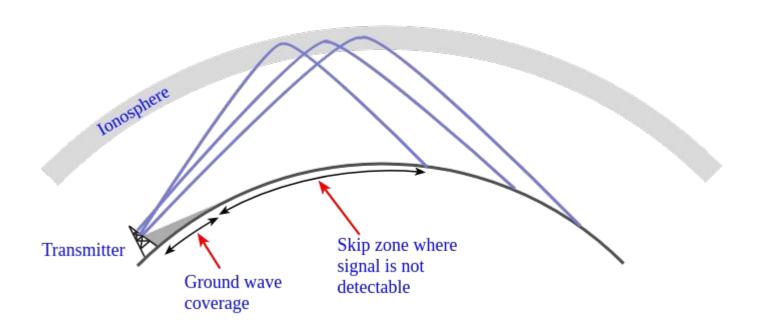


Modulations

- Information is encoded in different ways
 - Morse Code (CW)
 - Amplitude Modulation (AM)
 - Frequency Modulation (FM)
 - Phase modulation (PM)
 - Digital modulations


Amplitude Modulation (AM)

- Information encoded in carrier's amplitude
- Airband

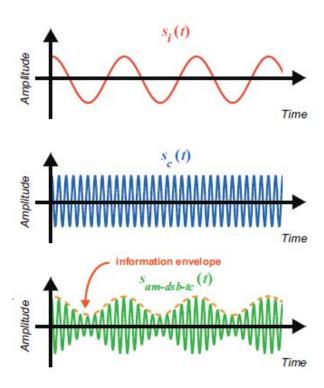

Frequency Modulation (FM)

- Information encoded in carrier's <u>frequency</u>
- Noise resistant

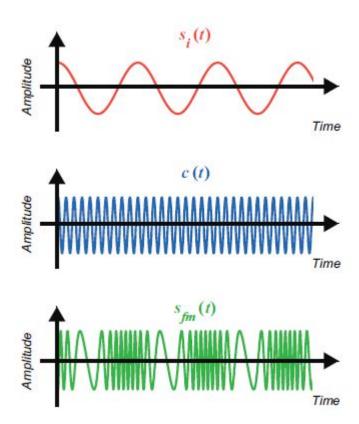

Radios

Desktop Radios

- Many modes, complex
- Mostly HF
- Lots of modes (FM, SSB, Digital Voice and Data)
- 100W + Power Amps to 1500 W

Mobile

- FM, one or more bands
- o 50 W


Handheld

- o FM, one or more bands, 5W
- Simple, but lots of options

Digital Radios

- DStar (ICom, Kenwood)
- C4FM, Wires (Yaesu)
- DMR Digital Mobile Radio (Lots of companies)

Signal References

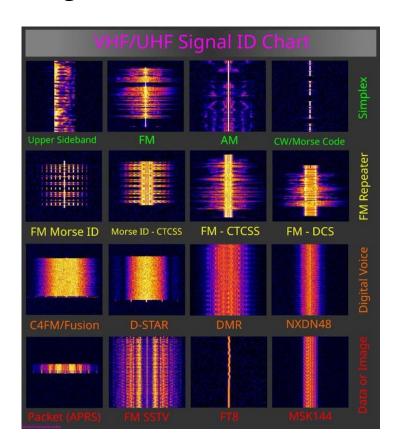

What is Software Defined Radio (SDR)?

"A radio in which aspects of functionality are implemented in, or controlled by, software."

- Flexible functionality
 - the operation of a radio can be changed without making any physical alterations to the device
- Algorithms from DSP and communications theory running as real-time software on a CPU, GPU and/or FPGA
- Joe Mitola first coined the term in 1991

Why SDR?

- Traditional radios are hard-wired to specific frequency bands and communication protocols
 - Fixed-function, Black Box
 - o Can't be easily modified, can't easily access internal values and states
- SDR provides:
 - Flexibility
 - Upgradability
 - Reconfigurability
 - Lower Cost


Key SDR Parameters (Features)

- Frequency (Tuning) Range
- Instantaneous Bandwidth
- Bit resolution
- Interface (USB, Ethernet, PCIe)
- Rx/Tx, half-duplex, full-duplex, MIMO
- Preselectors
- Budget: 50\$-...k\$

RTL-SDR

- "I smell a very cheap poor man's SDR here


 ""
- Cheap man's radio since 2012
- Hams, DIY, hackers, makers, students,...
- Demodulator
 - Named by RTL2832U chip, DVB-T
- Tuner
 - **R820T**: 24-1766MHz
 - **E4000**: 52-2200MHz

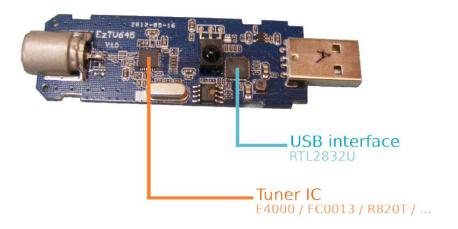

RTL-SDR

- Receive-only
- 8-bit ADC
- 24MHz-1.75GHz (depends on tuner chip)
- 2.4MSPS BW (stable) upto 3.2M
- "HamltUp" upconverter
 - HF coverage

Key Radio Terminology and Parameters

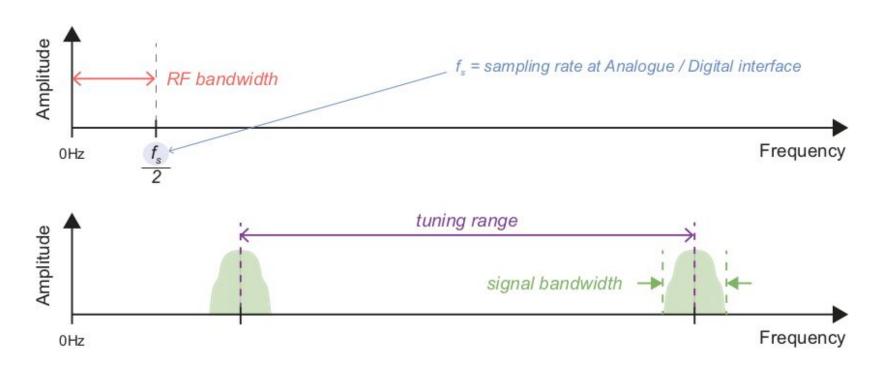

RTL-SDR Driver Installation - Linux

- Linux users may blacklist RTL so that default DVB-T driver is not loaded when dongle is plugged in.
 - cd /etc/modprobe.d/
 - sudo gedit blacklist-rtl.conf
 - # append: blacklist dvb_usb_rtl28xxu
 - \circ OR
 - echo "blacklist dvb_usb_rtl28xxu" >> /etc/modprobe.d/blacklist.conf


Test your RTL

run rtl_test terminal application to check your device is working

"RF" Hello World

- Acquire RF data with RTL-SDR
- Use gqrx as general-purpose SDR application
- Tune to a frequency in FM broadcast band
- Spectrum view
- Spectrogram view
- WBFM demodulation


Hello World: WBFM

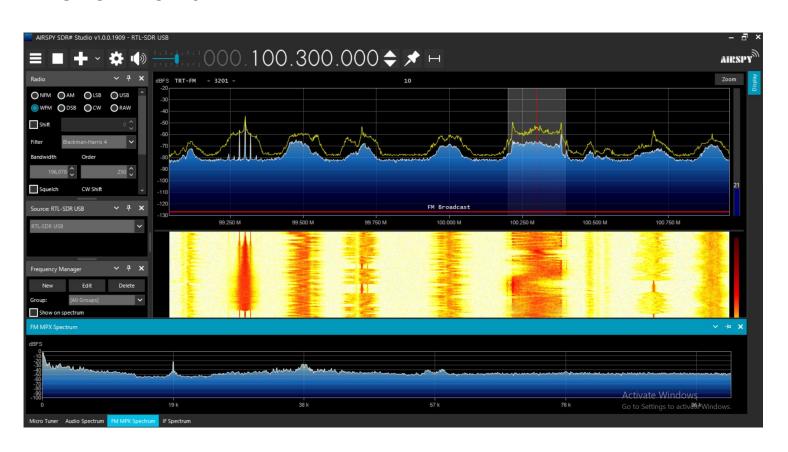

Capture The Signal (CTS)

- Your instructor is transmitting in one of the ISM bands, your job is to find out what this signal contains?
 - Hint: Tune to an <u>ISM band</u> frequency, watch the <u>spectrogram!</u>

RTSA

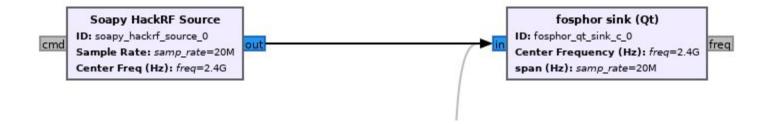


Some Signal Hunting

- VHF airband: 108 and 137 MHz.
 - 108 to 117.95, split into 200 narrow-band channels of 50 kHz. VOR beacons, ILS localizers.
 - 118 to 136.975: amplitude modulation voice transmissions
- Keyfob: 433 MHz
- GSM


SDR Architectures

- There are **two** primary architectures for radio transmitters
 - One involves direct modulation from baseband frequencies to RF frequencies
 - The second (the superheterodyne) achieves this transition with two modulation stages: the first from baseband to an Intermediate Frequency (IF), and the second from IF to RF. In each case, the receiver mirrors the operations of the transmitter

Superheterodyne Scheme

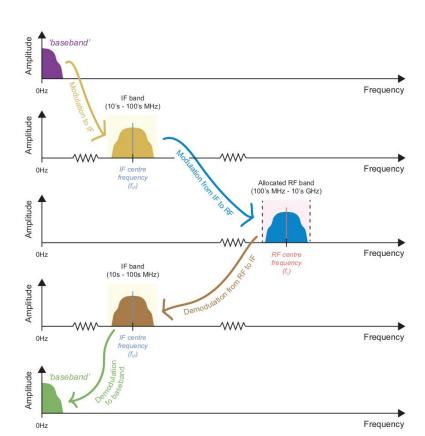


IF-Sampling Software Defined Radio

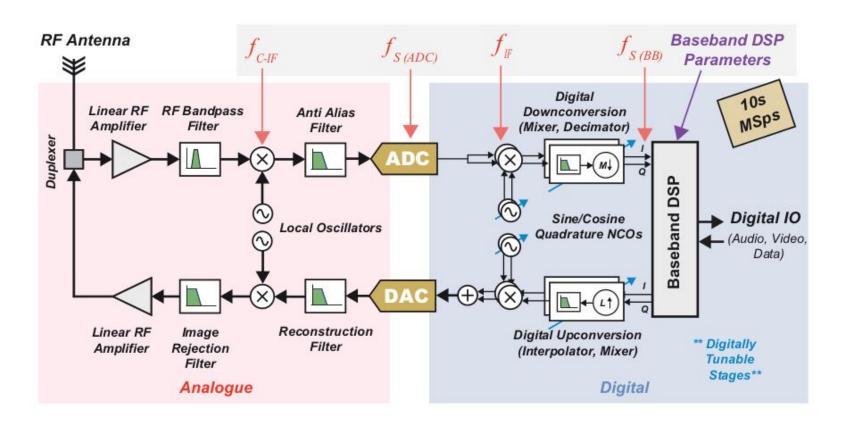

SDR Architectures: DCR

- Most SDR uses a direct-conversion receiver (DCR) architecture
 - Also called Zero-IF receiver, and homodyne receiver
 - Eliminates the intermediate frequency (IF) by translating the band of interest directly to baseband
 - The frequency of the LO is set to the same frequency as the transmitted/desired RF signal

Baseband-Sampling Software Defined Radio

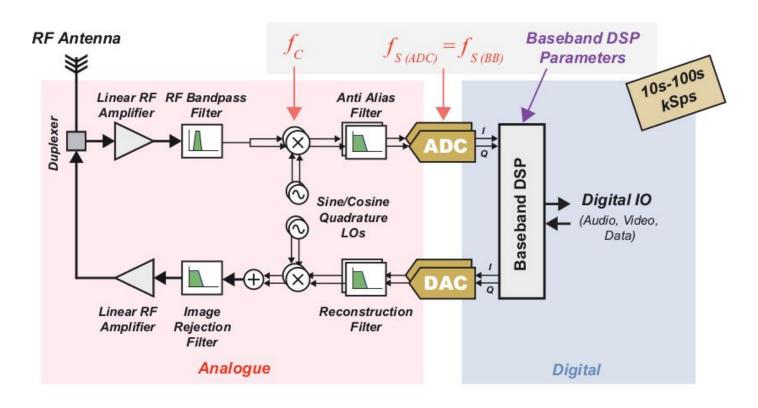

Direct-RF (Almost-All-Digital) Radio

