

Tartım

User guide for body composition analyzers

Installation · Wired and Bluetooth connection · Measurements · Device report

Version 0.6.0 · 2026-10-16
https://github.com/muratGursel/tartim

Contents

- 1. Installation
- 2. Opening the application
- 3. Connecting the scale with a cable
- 4. Connecting the scale over Bluetooth
- 5. Taking measurements
- 6. Saved measurements, SD card and Excel
- 7. Preparing and sending a device report
- 8. Troubleshooting
- 9. Protecting personal data

> The screenshots in this guide use sample (synthetic) measurements and sample Bluetooth devices; none of them belongs to a real person.

This guide explains step by step how to take measurements from your body composition analyzer (scale) with the Tartım application, how to keep them, and how to send a device report to the developers. No computer skills needed.

1. Installation

You install once. The administrator (sudo) password is needed; if you do not know it, ask your IT department.

1. Open the **Terminal** (type "Terminal" in the application menu).
2. Copy the line below, paste it into the terminal and press **Enter**:

   ```
   curl -fsSL https://raw.githubusercontent.com/muratGursel/tartim/main/install.sh | sudo sh
   ```

3. Type your password if asked (it is not shown while you type) and press **Enter**.
4. When you see `tartim installed` at the end, the installation is complete.


> If you prefer not to use the terminal, download the `tartim_..._all.deb` file from the Releases page and double-click it to install.

Updating: run the same command again.

The application follows the system language. To use English on a Turkish system (or the other way round), start it with `TARTIM_LANG=en tartim-arayuz` (or `TARTIM_LANG=tr`).

2. Opening the application

Open the application menu and type **Tartım**. Click its icon.

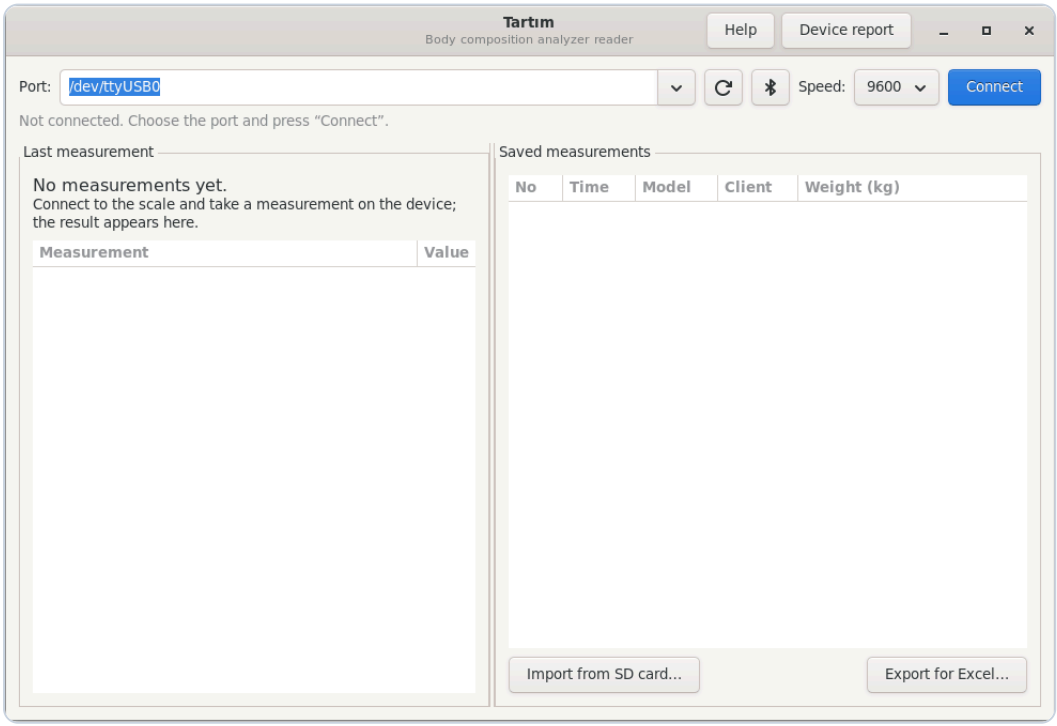

In the window:

- **Top:** port selection, refresh and Bluetooth buttons, speed and **Connect**
- **Left:** the results of the last measurement
- **Right:** saved measurements, **Import from SD card** and **Export for Excel**
- **Top right: Help** (this guide) and **Device report**

3. Connecting the scale with a cable


1. Connect the scale to the computer with a USB or RS-232 cable (with a USB-serial adapter) and turn the scale on.
2. In Tartım, press the **refresh** button (circular arrow).
3. Choose the scale in the **Port** list. Devices connected over USB usually appear as `/dev/ttyUSB0` or `/dev/ttyACM0` at the top of the list.
4. Leave **Speed** at 9600. Only change it if no data arrives (see Troubleshooting).
5. Press **Connect**. The button turns into a red **Disconnect** and the line below says "Listening on".

4. Connecting the scale over Bluetooth


Your computer must have Bluetooth and it must be on (check the system menu in the top-right corner of the screen).

4.1 Finding the scale

1. Turn the scale on. If your device has a Bluetooth or pairing mode, switch it on (see the device's own manual).
2. In Tartım, press the **Bluetooth** button next to the port field.
3. Wait about 10 seconds. The devices found are added to the top of the **Port** list as `bt:... (device name, type)`.
4. Open the list and choose your scale.

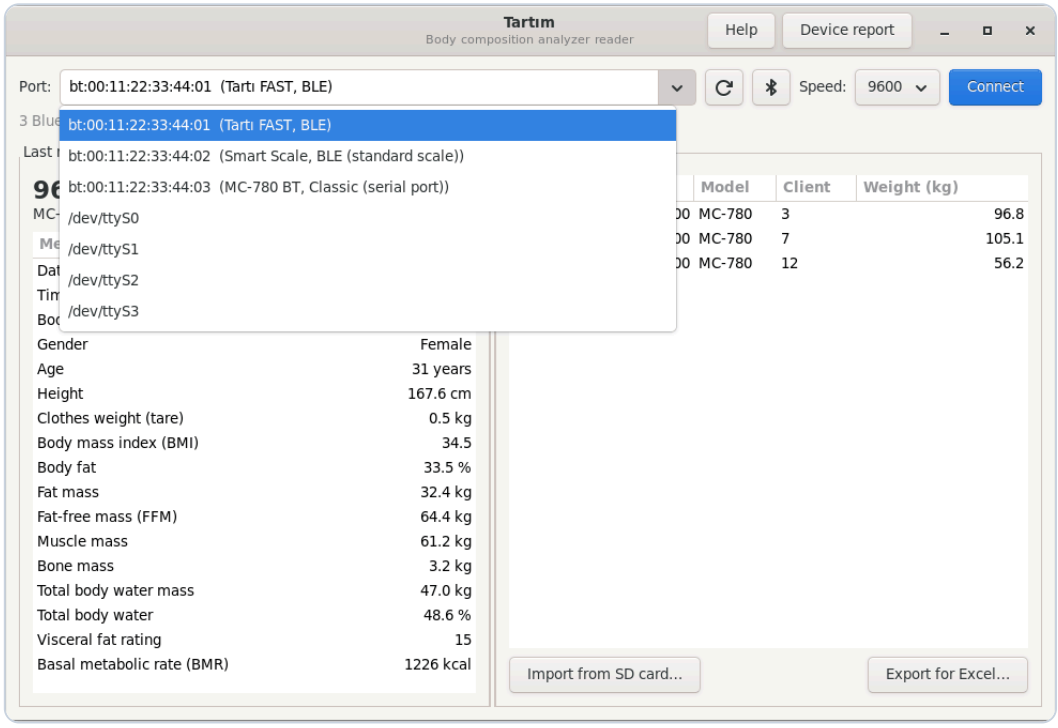

5. Press **Connect**. When the connection is made, the line below says "connected":

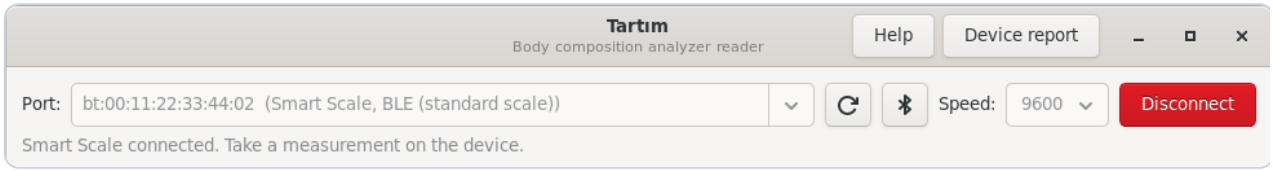

Next to each device the list shows one of three types:

Shown	Meaning	What should I do?
BLE (standard scale)	The device uses the standard Bluetooth scale service.	Press **Connect**. Measurements arrive live.
Classic (serial port)	The device uses older Bluetooth that works like a cable.	Pair it first (4.2), then press **Connect**.
BLE	The device uses a vendor-specific method.	It cannot be read directly yet. Please send a **device report** (section 7); with it we can add support.

4.2 Pairing a classic Bluetooth device

You do this once per device.


1. Open **Settings** → **Bluetooth**.
2. Click your scale in the list.
3. If a PIN is asked, enter the code from the device's manual. If the manual does not say, it is usually **0000** or **1234**.
4. When you see "Connected" or "Paired", return to Tartım, press the Bluetooth button again, choose the device and press **Connect**.

4.3 The Bluetooth device does not appear

- Make sure the scale is on and close to the computer (within a few metres).
- If the scale is connected to a phone or tablet, switch Bluetooth off on that device; most scales connect to one device at a time.
- Press the Bluetooth button once more; some devices only appear on the second scan.

5. Taking measurements

1. While connected (the line below says "Listening on" or "connected"), measure on the device as usual: enter the client's details on the device and let the client step on.
2. When the measurement ends, the result appears on the left of Tartım within a few seconds and is saved automatically. You do not need to do anything else.

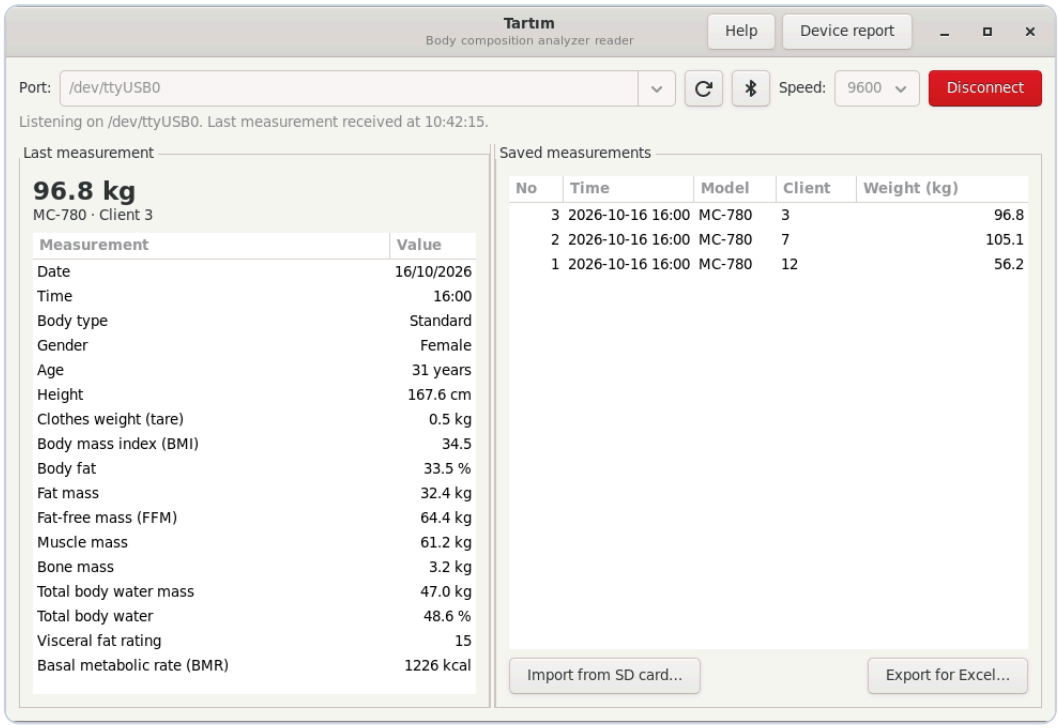

3. Continue the same way with the next client. There is no need to disconnect.
4. When you are done, press **Disconnect** or close the window.

> If you see an asterisk (*) next to a value: the meaning of that field has not been verified on a real device yet. Compare it with the value on the device display and send a device report if they differ.

6. Saved measurements, SD card and Excel

A saved measurement: click a row in the list on the right; its details appear on the left. Click the column headers to sort.

Importing from an SD card (for devices with an SD card):

1. Put the device's SD card into the computer.
2. Press **Import from SD card…**.
3. Choose the `.csv` files on the card (you can choose several) and press **Import**.
4. The same measurement is never added twice; importing the same files again is fine.

Exporting for Excel:

1. Press **Export for Excel…**.
2. Give the file a name and press **Save**.
3. Open the file with LibreOffice Calc or Excel.

7. Preparing and sending a device report

A device report teaches us how your scale sends its data to the computer. It is especially helpful when:


- your scale does not show up in Tartım at all or "Unrecognized record" appears,
- the Bluetooth list shows only **BLE** next to your scale,
- the values shown differ from the device display.

A report takes about 2 minutes.


> **Important:** for a report, measure **yourself or a test person**. Do not use a real client's measurement. The client number is removed automatically, but age, height, gender and body values stay in the report.

7.1 Preparing the report

1. For a wired connection, first choose the scale in the **Port** list.
2. Press **Device report** in the top right.
3. Type the model in **Device model**. The model is printed on the label under or behind the device (e.g. `MC-780MA`, `FAST`).

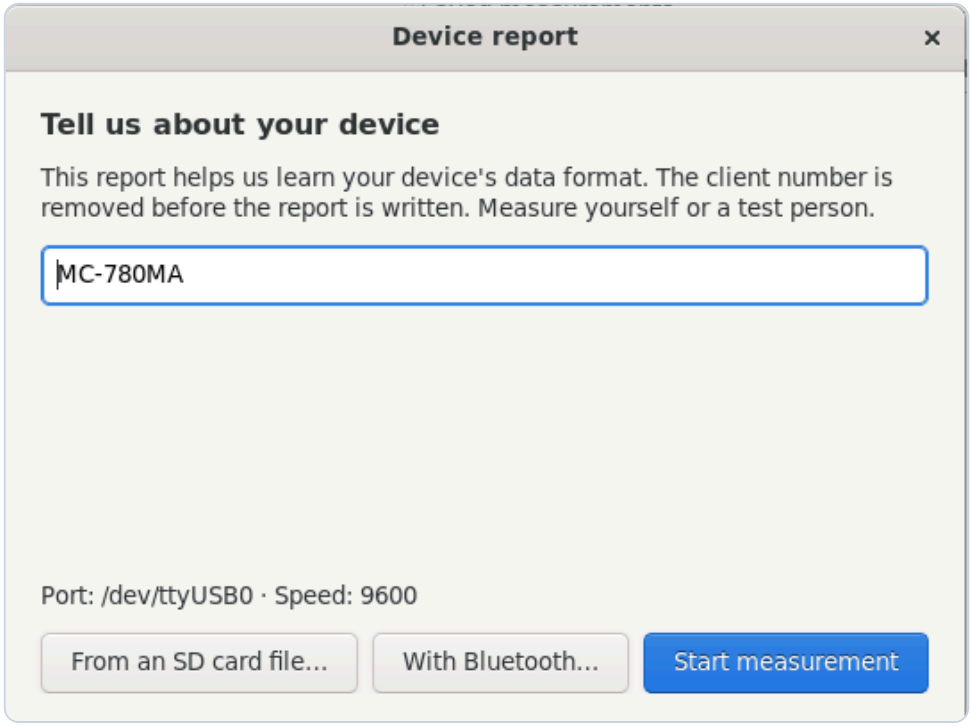


4. Press the button for your connection:
    - **Start measurement:** the scale is connected with a cable
    - **With Bluetooth...:** the scale has Bluetooth. Choose your scale in the list and press **Choose and start measuring**.

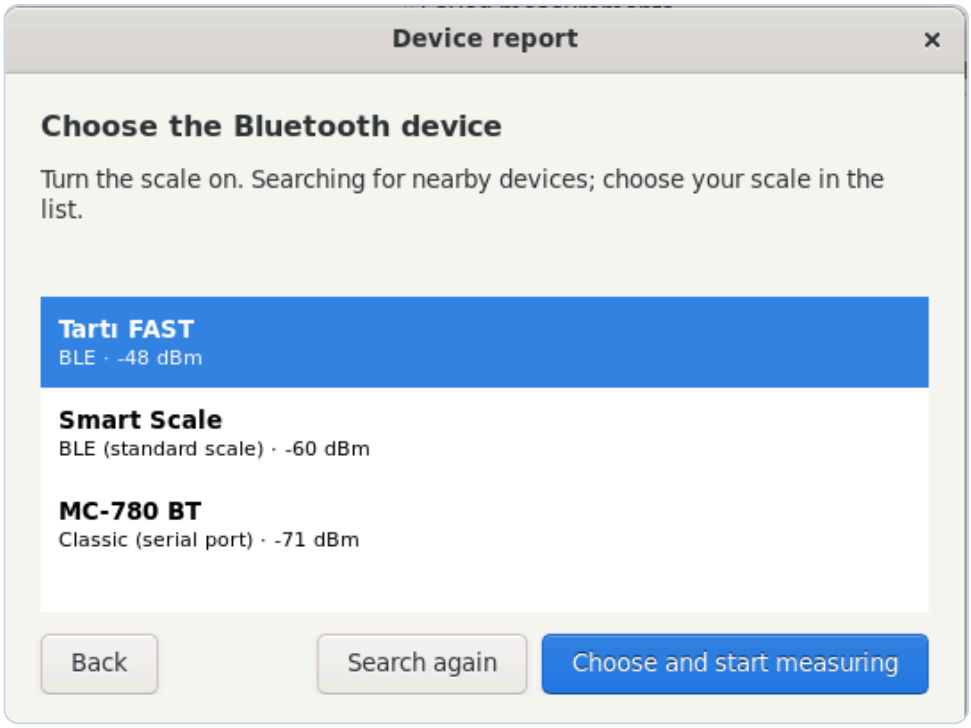


- **From an SD card file…:** the device writes measurements to an SD card. Choose the file on the card.

5. When "Take a measurement on the device now" appears, measure on the scale. When data arrives the window moves to the next step by itself.

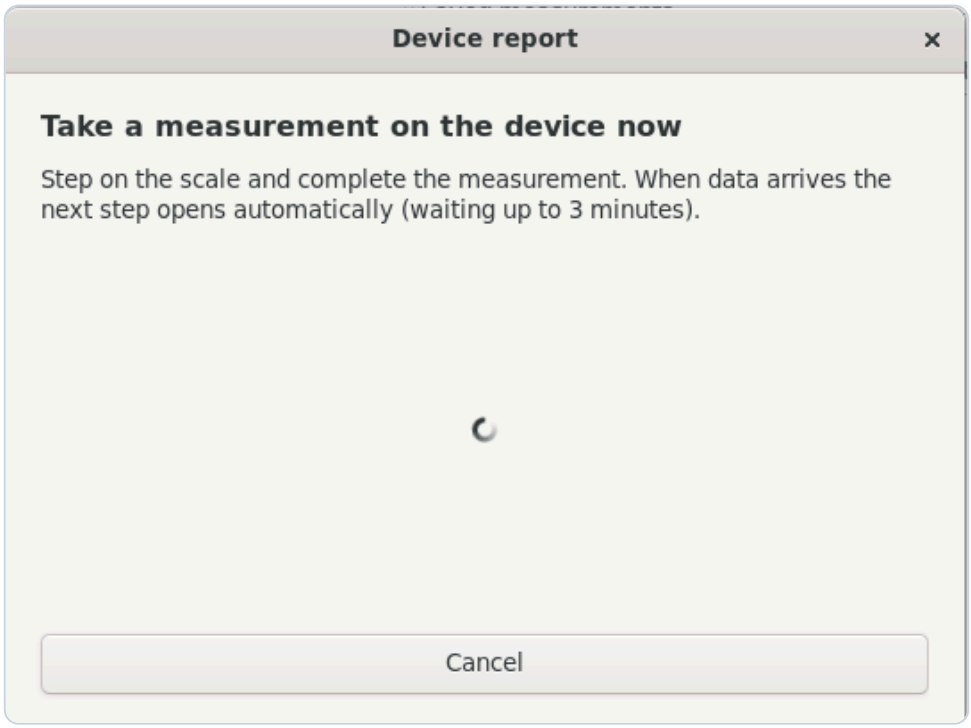

6. Type the **weight** shown on the device display (e.g. `72.4`). This is optional but makes verifying the data much easier.

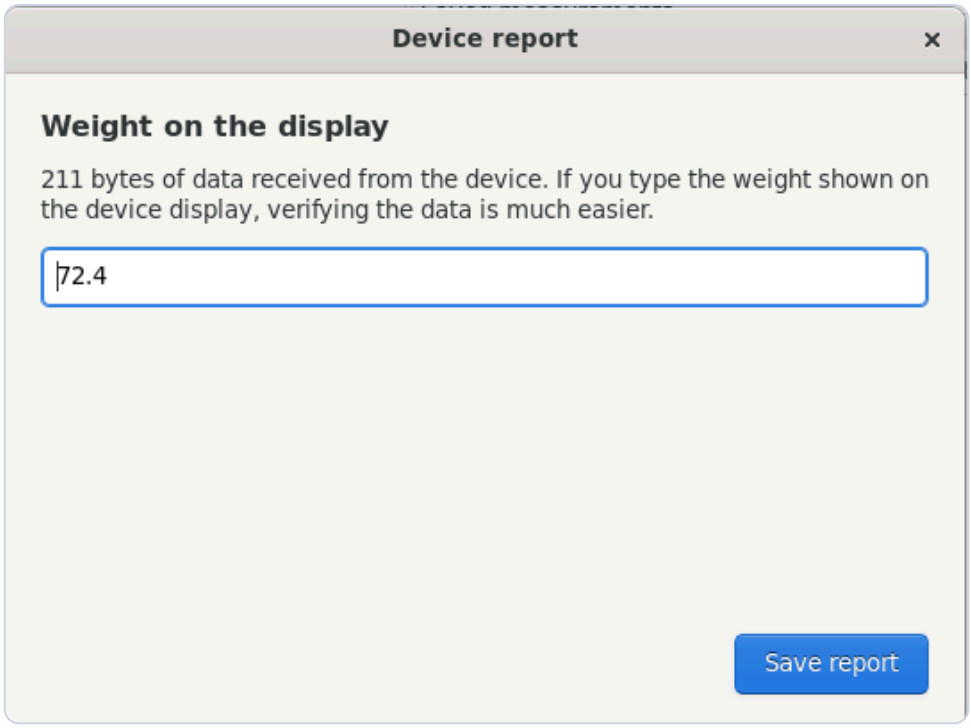


7. Press **Save report**. The report is saved in your **Documents** folder as `tartim-report-MODEL-DATE.json` and the send options appear (see 7.2).

Even if "No data arrived" is shown, save and send the report; that helps too.

7.2 Sending the report

After the report is saved, the window asks how you would like to send it. Choose what suits you:

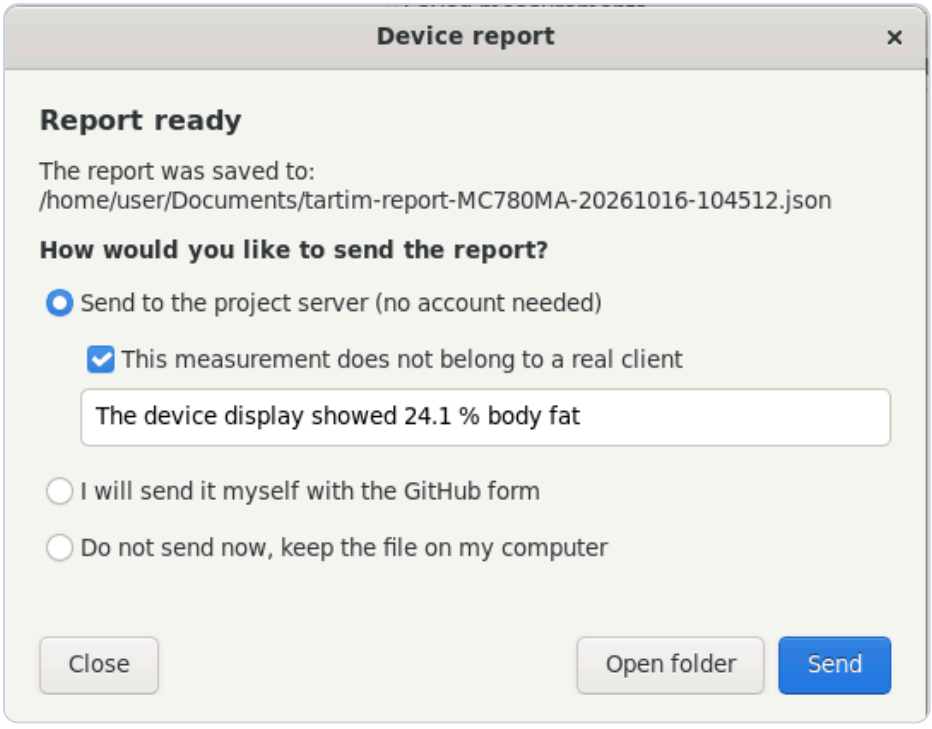

Option	What happens?	For whom?
Send to the project server	The report reaches the developers with one click. No GitHub account needed. The report is not published.	The easiest for most users
I will send it myself with the GitHub form	The GitHub form opens and you attach the file. The issue is public.	People with a GitHub account who want to follow up themselves
Do not send now	The file stays on your computer. Send it whenever and however you like (e.g. by e-mail).	Organisations that want to check it internally first

Sending to the project server


1. Keep **Send to the project server** selected.
2. Tick **"This measurement does not belong to a real client"**. Without it the **Send** button does not work.
3. Optionally write a short note (e.g. "The device display showed 24.1 % body fat").
4. Press **Send**. "Sent, thank you!" and a **report number** appear. Mention this number if you contact us.

Without an internet connection "Could not reach the report server" appears. The file stays on your computer; you can send it again later (see 7.3).

Sending with the GitHub form


A free GitHub account is needed (https://github.com/signup).

1. Choose **I will send it myself with the GitHub form** and press **Open the GitHub form**. (Direct address: https://github.com/muratGursel/tartim/issues/new?template=cihaz-raporu.yml)
2. Sign in with your GitHub account. The "Device report" form opens:

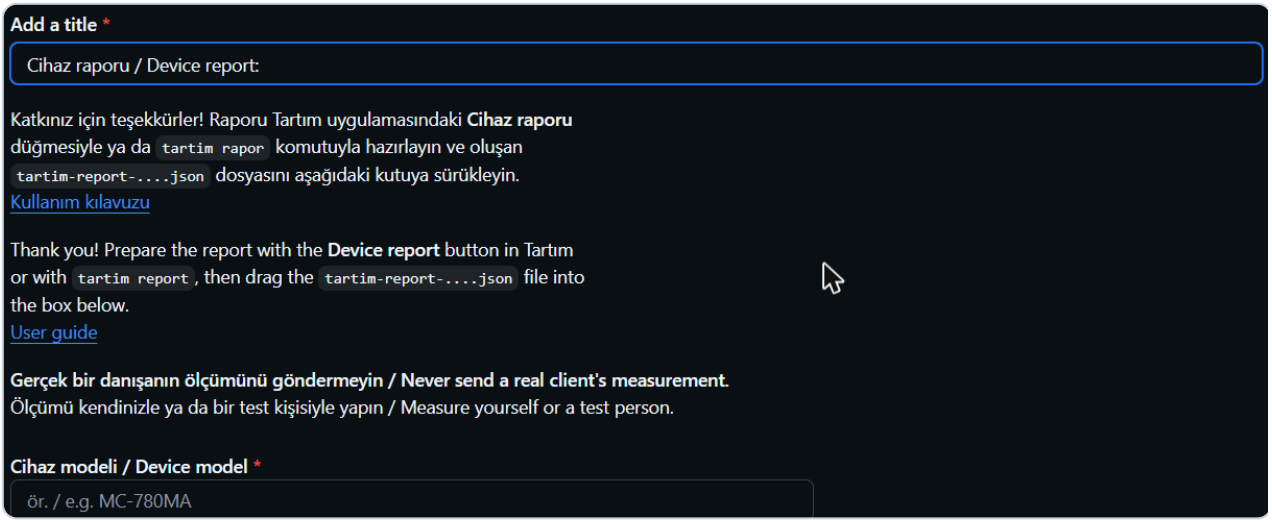

3. In the form:
    - **Device model:** type the model.

- **Report file:** drag the `tartim-report-....json` file from the folder opened with **Open folder** into this box. When it is uploaded, a link appears in the box.

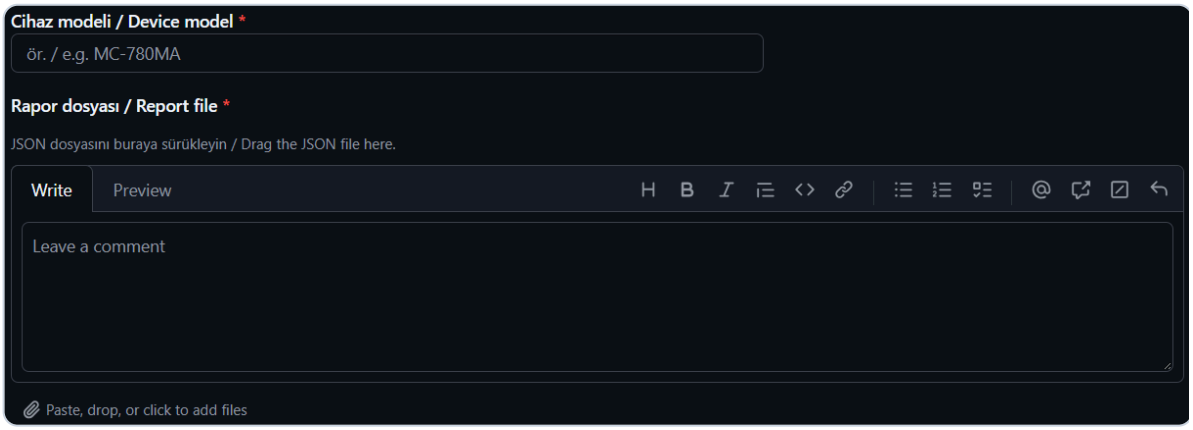

- **Notes:** any problems you had (optional).
- **Confirmation:** tick "This measurement does not belong to a real client" at the bottom of the page.

4. Press the green **Create** button at the bottom right.

Reports sent this way are public.

7.3 Reports from the command line (optional)

If you prefer the terminal to the interface:

```
tartim report               # wired device
tartim report --bluetooth   # Bluetooth device
tartim report --file /media/USER/SD/20261016.CSV   # SD card
```

It only asks for the model and the weight on the display, saves the report in the current folder and asks how you would like to send it. To send a saved report to the server later:

```
tartim send-report tartim-report-MC780MA-20261016-104512.json
```

8. Troubleshooting

Problem	Solution
The port list is empty	Unplug and plug the cable back in and press **refresh**. If you use a USB-serial adapter, make sure it is plugged in.
"You do not have permission to use the port"	Log out and back in. If it persists and the port is `/dev/ttyS...`, run `sudo usermod -aG dialout $USER` in a terminal and log in again.
Connected but no measurement arrives	1) Check that "data output to PC" is on in the device settings. 2) Press **Disconnect**, set **Speed** to 4800, 19200 or 38400 and try again. 3) If still nothing arrives, send a device report.
"Unrecognized record"	We do not know your device's format yet. Please send a device report.
"Bluetooth is off"	Turn Bluetooth on in the system menu.
"No Bluetooth adapter found"	The computer has no Bluetooth or it is disabled. You can plug in a USB Bluetooth adapter.
Could not connect over Bluetooth	The scale may be connected to a phone; switch Bluetooth off on that device. Pair classic devices first (4.2).
"This device does not use the standard Bluetooth scale service"	The device uses a vendor-specific method. Send a device report (7).

If your problem is not solved, write to us at https://github.com/muratGursel/tartim/issues.

9. Protecting personal data

Body measurements are health data, a special category of personal data under KVKK and the GDPR.

- Measurements are stored only on your computer, in a file that only your user account can read (`~/.local/share/tartim/tartim.db`). Measurements are never sent to the internet.
- The only thing that goes to the internet is a **device report** that you choose and confirm. Reports sent to the project server are kept in a private repository that only the developers can access; reports sent with the GitHub form are public. In both cases, never send a real client's measurement.
- If your organisation wants to switch off sending to a server completely, the IT department can set the `TARTIM_REPORT_URL` environment variable to an empty value; the option then disappears from the window.
- Files exported for Excel contain personal data too; keep them in a safe place.
- Before using the application in your organisation, settle consent, access rights and retention with your data controller.