

sick picoscan config

a great new feature is the integrated web server on picoscan devices. this simplifies config a lot.


take the new ranger, wire it to power and your lan. by default, the device has the ip `192.168.0.1`.

similar to its older sick lidar siblings, the picoscan is integrated via the `LMDscandata` telegram messaging. to make this work, some settings have to be adjusted.

connect & config

open a browser and connect to the lidar by its ip address. in order to make any changes, log in to the device by clicking the user icon top-right. select level *service* with the default password `servicelevel`. alter pass to likings.

next, open the basic settings:

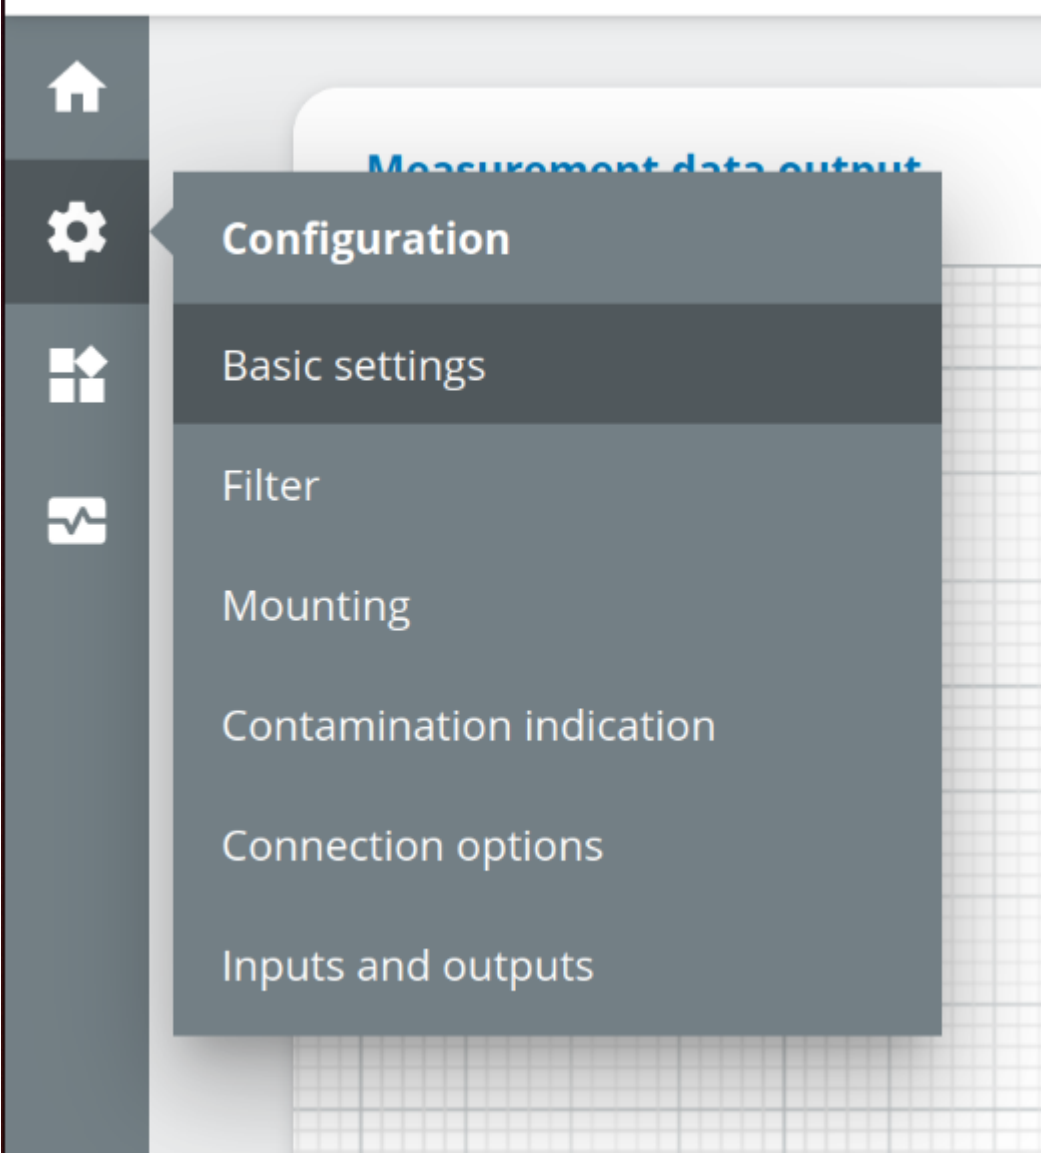

basic settings

to the right you can see available scan configurations. it's not necessary to set the right away but it might be good to know that *pharus* supports **scan config switching during runtime**. a good default setting is profile 8 (50Hz @ 0.25°).

Basic settings



Device name

SN 25050058

Scan configuration

10 (40 Hz & 0.125°)



Scanning frequency 40 Hz

Angular resolution 0.125 °

Scanning range 30 m

Sensitivity ⓘ

Standard



Autostart
measurements



LED



Measurement



filter settings

next, we need to turn off the echo filter, which is not used by *pharus*. go to the settings menu left and select *filter*.

set the *echo filter* to *first echo* and deactivate any subsequent switches.

Filter



Echo filter ⓘ

First echo



Fog filter ⓘ



Moving
average
filter ⓘ



Particle
filter ⓘ



data output settings

in the menu left, just below the settings icon is the application icon (four squares). hover over it and select *data output*.

in the *format* combo box, select **LMDscandata** . all other switches can be turned off.

Measurement data output



Format ⓘ

LMDscandata



Protocol

CoLa ASCII TCP

Port

2111

Protocol

CoLa Binary TCP

Port

2112

IMU data output



Destination port

7503

Destination
IP address

192.168.0.100

Start/stop
data output



Data reduction (0)



Interval
filter



Scan range
filter



Region of Interest (0)



Cuboid
area filter



Scanning
range filter



connection settings

IMPORTANT: do not set the ip address just yet if you plan to.

back to settings -> connection options. the bar to the right features *legacy protocols* in the lower half. activate it.

Ethernet



Addressing mode

Static



IP address

10.147.11.14

Subnet mask

255.0.0.0

Default gateway

0.0.0.0



Apply

MAC address

00:06:77:5E:16:49

Calculated speed

100 Mbit/s full duplex



Legacy protocols



Legacy protocols



TCP

Protocol

CoLa ASCII

Port

2111

Protocol

CoLa Binary

Port

2112

Device search



now, before we make any changes to the ip address, let's persist our settings. in the top bar, just left of the user icon, there's a disc icon. click it to make our settings survive when the device is disconnected from power.

once this is done, proceed to changing the ip address. click on apply, then make any necessary changes to your local network config should the device not be reachable with the new settings.

done

launch *pharus* and introduce the new laser by selecting lidar type *SICK PICO*.