
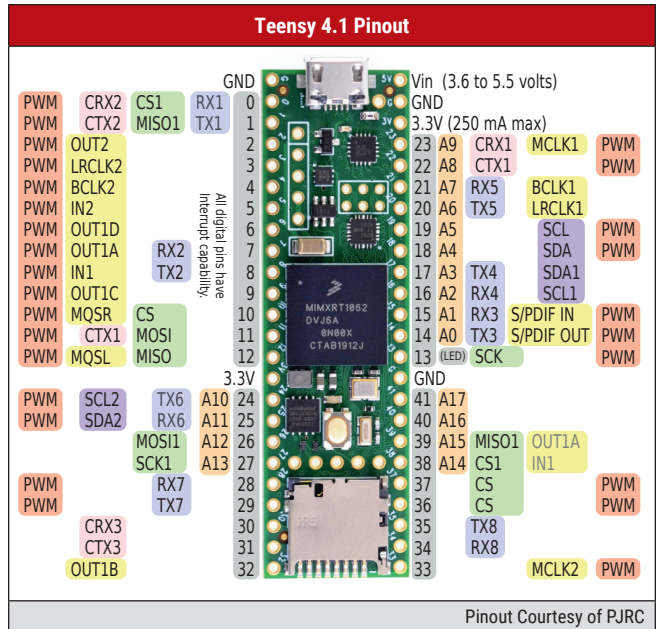


BOARDS – TEENSY

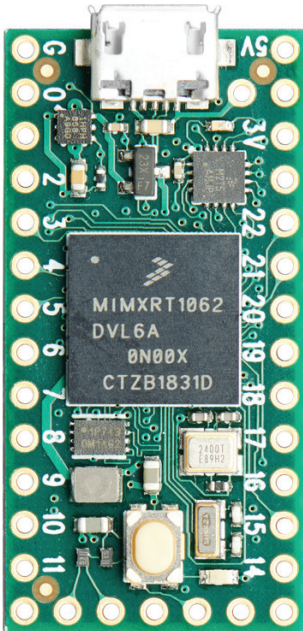

	Teensy 3.2	Teensy 3.5	Teensy 3.6	Teensy 4.0	Teensy 4.1
Digi-Key Part Number	• 1528-2385-ND	• 1568-1464-ND	• 1568-1442-ND	• 1568-DEV-16997-ND	• 1568-DEV-16771-ND
Processor	• MK20DX256VLH7	• MK64FX512VMD12	• MK66FX1M0VMD18	• IMXRT1062	• IMXRT1062
Core	• Cortex-M4	• Cortex-M4F	• Cortex-M4F	• ARM Cortex-M7	• ARM Cortex-M7
Clock Speed	• 96 MHz	• 120 MHz	• 180 MHz	• 600 MHz	• 600 MHz
RAM	• 64K	• 256K	• 256K	• 1M	• 1M
Flash	• 256K	• 512K	• 1M	• 2M	• 8M
EEPROM	• 2K	• 4K	• 4K	• 64K of Flash	• 64K of Flash
I/O Pins	• 34 (24 on Headers)	• 58 (42 on Headers)	• 58 (42 on Headers)	• 40 (24 on Headers)	• 55 (42 on Headers)
Pin Voltage	• 3.3 V (5 V tolerant)	• 3.3 V (5 V tolerant)	• 3.3 V	• 3.3 V	• 3.3 V
Connectivity	• USB • Serial • SPI • I²C • CAN • I²S	• USB • 2xCAN • 3xI²C • 3xSPI • Ethernet • MicroSD • I²S	• USB (High Speed) • 2xCAN • 4xI²C • 3xSPI • Ethernet • MicroSD • I²S	• 2xUSB (High Speed) Host • 3xCAN • 3xI²C • 3xSPI • SD (pads) • 3xI²S • SPDIF	• 2xUSB (High Speed) Host • 3xCAN • 3xI²C • 3xSPI • Ethernet • MicroSD • 3xI²S • SPDIF
RTC	• Yes	• Yes	• Yes	• Yes	• Yes
PWM Outputs	• 12	• 20	• 22	• 31	• 35
Analog Inputs	• 21	• 27	• 25	• 14	• 18
Analog Output	• 1x12 bit	• 2x12 bit	• 2x12 bit	• 2x16 bit	• 2x16 bit

For more information, visit DIGIKEY.COM/NOTEBOOK