

Lightbox Wall Install Guide for Anytime Fitness

**TRAINING.
NUTRITION.
RECOVERY.**



**SEG
SYSTEMS®**


Overview

- Your Anytime Fitness location will be receiving a single-sided lightbox from SEG Systems
 - Size: Reference DCP for size
 - Included will be:
 - 1 blackout backer graphic
 - 1 printed front graphic
- Follow all construction specs & details regarding framing, etc. as shown in the DCP.
- Ensure the wall opening measures as specified in the construction documents/DCP.
- Ensure electrical outlet is located on the lower right corner as shown in the DCP.
- Follow the Lightbox Assembly Instructions, which are included in the crate with the lightbox.


Information found in your DCP

SINGLE-SIDED LIGHTBOX

EXAMPLE PHOTOS

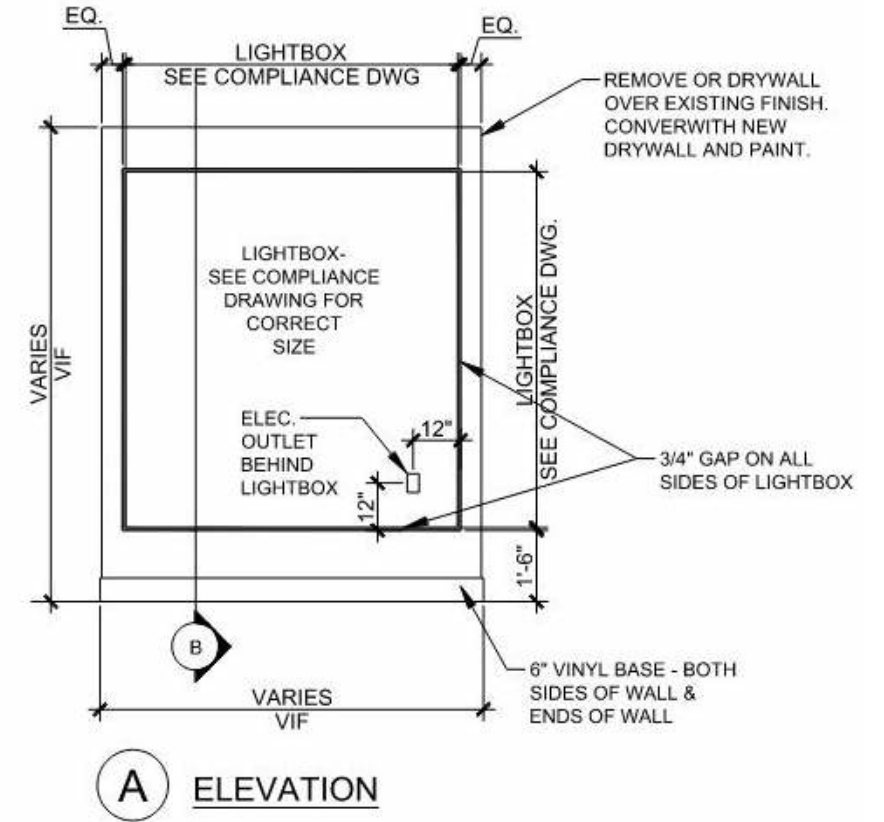

Assemble lightbox per Assembly Directions included in crate

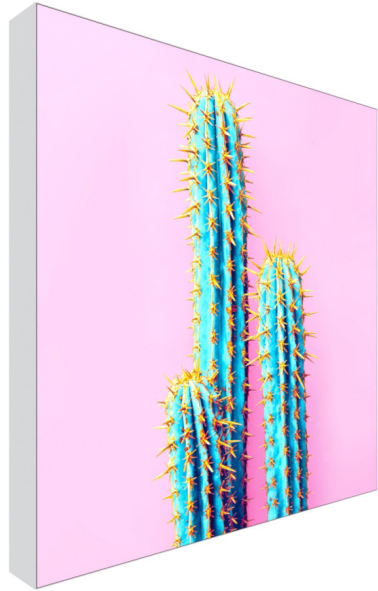


4.0" SPLICED - BLAZE FRAME ASSEMBLY



Figure 1

Cross-Section:

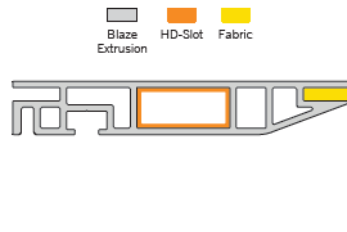

Supplied Hardware:




Step One:

Layout all Frame Assembly Hardware as shown in Figure 1.


Step Two:

Gather Joiner Bars to begin assembly.

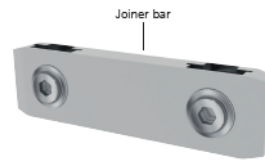


Step Three:

Start by assembling one spliced side of the frame at a time. Press down screw and slide Joiner Bar into the Blaze 4" Frame's Slot (highlighted in orange). Screw should engage with pre-drilled hole in frame.

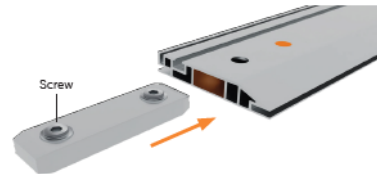


Step Four:

Once in place, tighten screws with Allen Wrench, turning clockwise to lock in place. Repeat steps until all Splices of the frame are assembled.

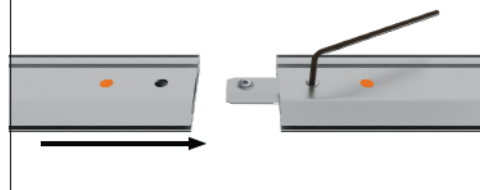

Step Five:

Gather 90 Degree Connectors to continue assembly.

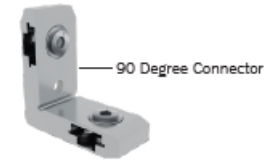


Step Six:

Assemble one corner of the frame at a time. Press down screw and slide 90 Degree Connector into the Blaze 4" Frame's Slot (highlighted in orange). Screw should engage with pre-drilled hole in frame.



Step Seven:

Once in place, tighten screws with Allen Wrench, turning clockwise to lock in place. Repeat until all corners of the frame are assembled.

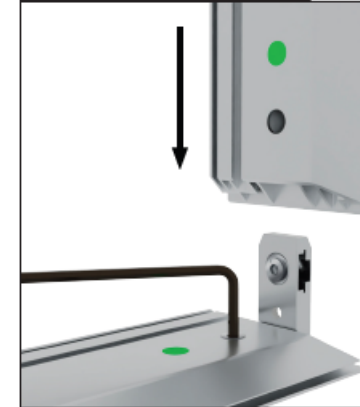

Insert blackout liner into the backside of the lightbox



Insert blackout liner into the backside of the lightbox

NOTE: Silicon gasket should be on inside of the fabric as shown below:



Incorrect!



Correct!



Correct!


Remove protective tape from frame



Insert frame into opening



Center lightbox in opening top to bottom and left to right

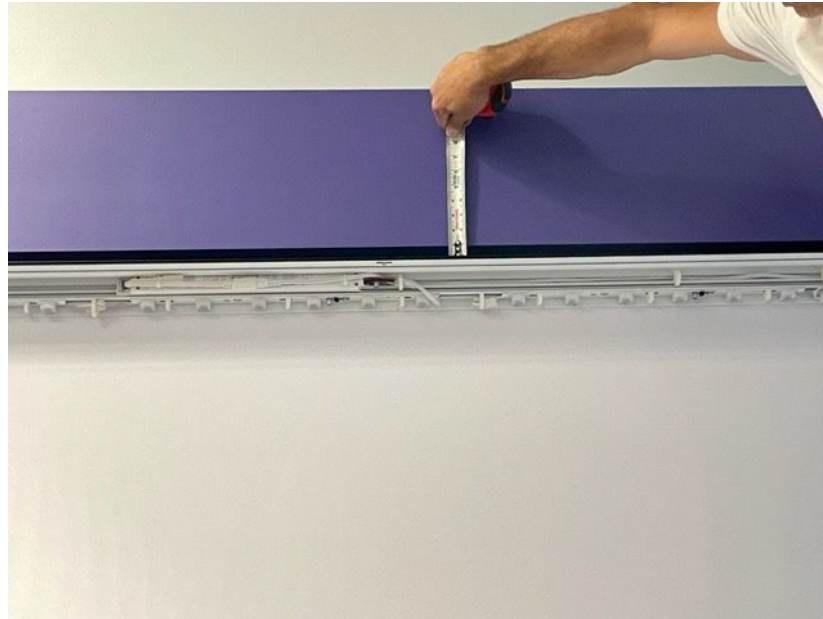


Secure lightbox to wall as shown in the assembly instructions using drywall anchors (if necessary) and screws.

NOTE: All hardware is included.

DRYWALL - WALL MOUNTING ASSEMBLY

Supplied Hardware:

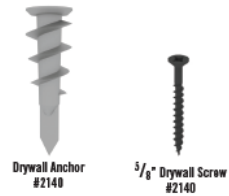


Tools Required:



Step One:

Flip Lightbox so you are looking at the backside. Insert blockout into the back of your frame by inserting the edges of the blockout into the groove.

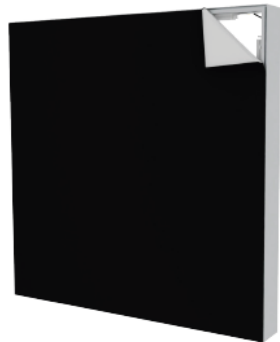


Step Two:

Place Lightbox frame on the wall at the desired position. Level Frame and mark the top corners on the wall. Insert Wall Mount Brackets into the groove (highlighted in blue) at the top and bottom of the frame, space evenly and mark the blockout where to drill. Drill holes and insert Dry Wall Anchors.




Step Three:

Place the frame on the wall so that it is aligned with the installed Drywall Anchors. Starting with the top, insert the Drywall Screw through Wall Mount Bracket, Blockout and into the Drywall Anchor and tighten. Repeat for all anchors on the wall until frame is secured on the wall.

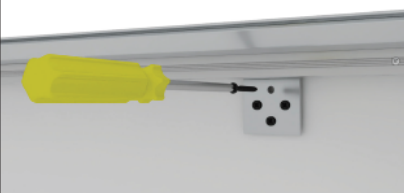

FULL LIT - BLAZE LIGHTING ASSEMBLY

Power Connection:

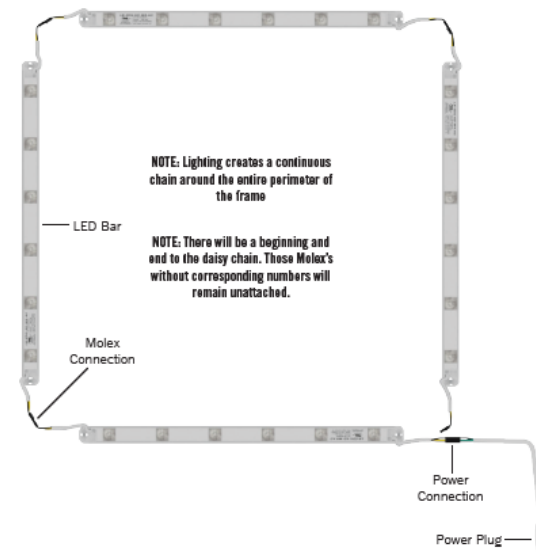

DISCLAIMER
If LED's are missing or not lighting correctly please contact our team for further assistance.



Step One:

Connect all corresponding Molex's and Power Connection around the frame with alike numbers written on them (i.e. 1-1, 2-2, 3-3 etc.)



Step Two:

Insert the Power Plug into the nearest outlet for testing purposes. This will ensure that all of your lights are working properly before installing the rest of your frame and graphics.



Locate the outlet in the lower right corner. Using a sharp blade, cut a hole in the blockout backer to expose the outlet opening. Insert plug into outlet.



Install front graphic

NOTE: Make sure your fingers are free of dirt/grime/grease as it will transfer to the fabric and leave marks

