

Lightbox Wall Install Guide for Anytime Fitness

**TRAINING.
NUTRITION.
RECOVERY.**



**SEG
SYSTEMS®**


Overview

- Your Anytime Fitness location will be receiving a single-sided lightbox from SEG Systems
 - Size: 7'w x 7'6"h x 4"d
 - Included will be:
 - 1 blackout backer graphic
 - 1 printed front graphic
- Follow all construction specs & details regarding framing, etc. as shown in the DCP.
- Ensure the wall opening measures as specified in the construction documents/DCP.
- Ensure electrical outlet is located on the lower right corner as shown in the DCP.
- Follow the Lightbox Assembly Instructions, which are included in the crate with the lightbox.

Information found in your DCP

SINGLE-SIDED LIGHTBOX

EXAMPLE PHOTOS

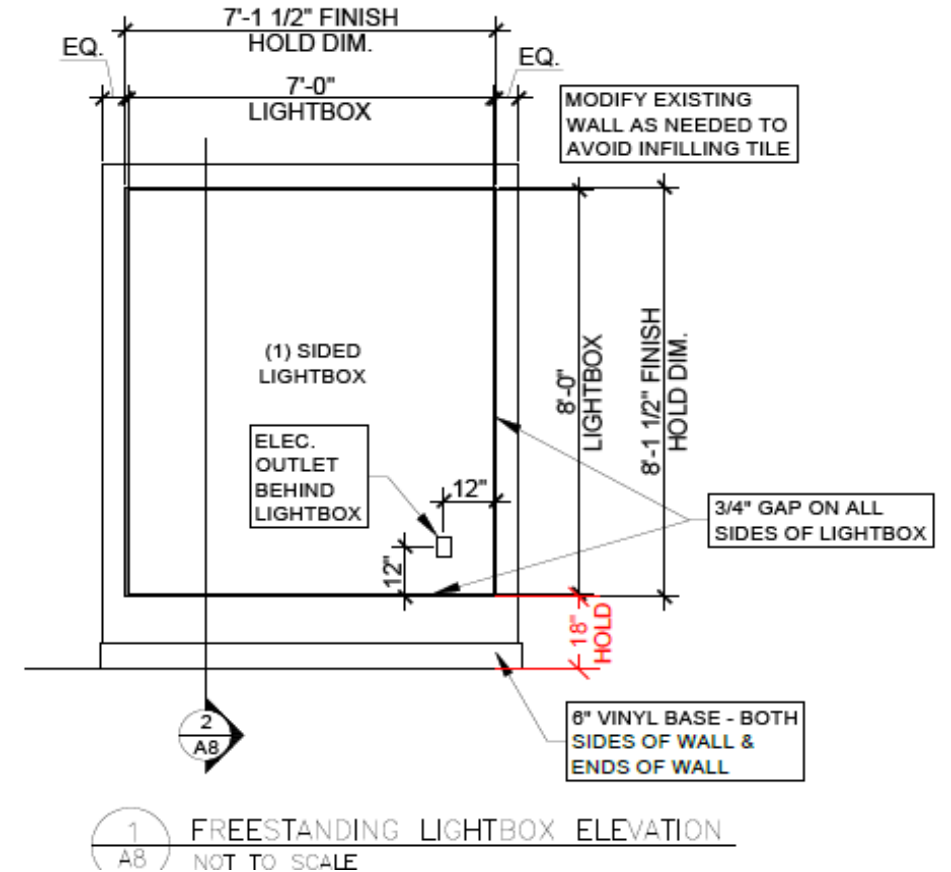

Assemble lightbox per Assembly Directions included in crate

4.0" ECONO UNSPLICED FULL LIT WALL-MOUNTED FRAME



Assembly Guides:

1. 4.0" Econo Unsplied - Frame Assembly
2. Drywall - Wall Mounting Assembly
3. Full Lit - Lighting Assembly
4. Fabric Installation

4.0" ECONO UNSPLICED - FRAME ASSEMBLY



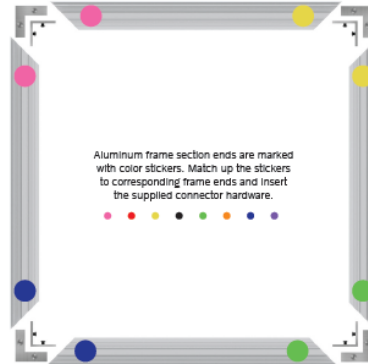


Figure 1

Cross-Section:

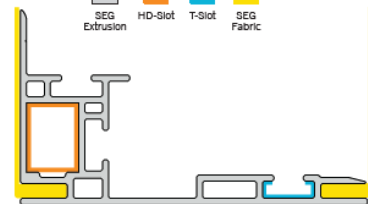

Supplied Hardware:

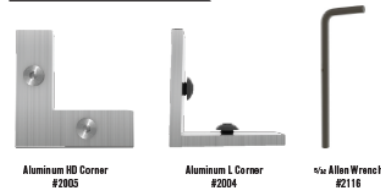

Step One:

Layout all Frame Assembly Hardware as shown in Figure 1.


Step Two:

Loosen Buttonhead Screws on all L Corners so that they become flush. Remove the HD Screws from each of the HD Corners with supplied Allen Wrench - set aside.



Step Three:

Start by assembling one corner of the frame at a time. Insert an L Corner into the SEG Frame's T-slot (highlighted in blue). Insert an HD Corner into the frames HD-Slot (highlighted in orange).

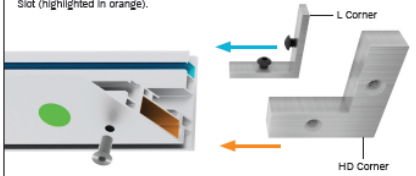

Step Four:


Once in place, tighten Buttonhead Screws with Allen Wrench just enough to catch. Re-insert HD Screws into the HD Corner and loosely tighten with Allen Wrench just enough to catch. Repeat step 3 until all corners of the frame are loosely assembled.



Correct alignment of frame as needed and tighten all hardware screws until frame is secure.

FULL LIT - LIGHTING ASSEMBLY

Power Connection:

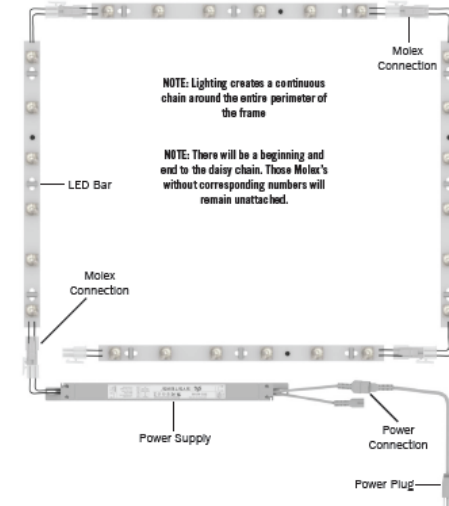

DISCLAIMER
If LED's are missing or not lighting correctly please contact our team for further assistance.




Step One:

Connect all corresponding Molex's around the frame with alike numbers written on them (i.e. 1-1, 2-2, 3-3 etc.).



Step Two:

Insert the Power Plug into the nearest outlet for testing purposes. This will ensure that all of your lights are working properly before installing the rest of your frame and graphics.

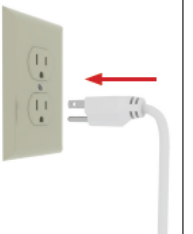

Insert blackout liner into the backside of the lightbox



Insert blackout liner into the backside of the lightbox

NOTE: Silicon gasket should be on inside of the fabric as shown below:



Incorrect!



Correct!



Correct!


Remove protective tape from frame



Insert frame into opening



Center lightbox in opening top to bottom and left to right

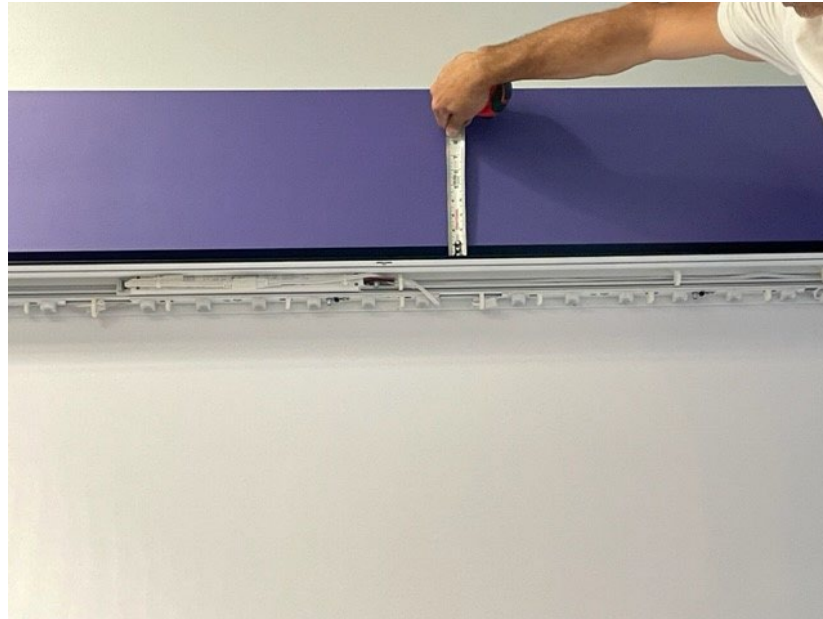

Secure lightbox to wall as shown in the assembly instructions using drywall anchors (if necessary) and screws.

NOTE: All hardware is included.



Locate the outlet in the lower right corner. Using a sharp blade, cut a hole in the blockout backer to expose the outlet opening. Insert plug into outlet.



Install front graphic

NOTE: Make sure your fingers are free of dirt/grime/grease as it will transfer to the fabric and leave marks

