Microprocessors & Interfacing

AVR ISA & AVR Programming (I)

Lecturer: Annie Guo

COMP9032 Week2

Lecture Overview

- · AVR ISA and Instructions
 - A brief overview
- · AVR Programming (I)
 - Implementation of basic programming constructs

COMP9032 Week2

Atmel AVR



- · 8-bit RISC architecture
 - Most instructions have 16-bit fixed length
 - Most instructions take 1 clock cycle to execute.
- · Load-store memory access architecture
 - All AL calculations are on registers
- Internal program memory and data memory
- · Wide variety of on-chip peripherals (digital I/O, ADC, EEPROM, UART, pulse width modulator (PWM) ...).

COMP9032 Week2

AVR Registers

- · General purpose registers
 - 32 8-bit registers, R0 ~ R31 or r0 ~ r31
 - Can be further divided into two groups
 - First half group (R0 ~ R15) and second half group (R16 ~ R31)
 - · Some instructions work only on the second half group
 - Due to the limitation of instruction encoding bits
 - » Will be covered later
 - ;rd ∈ R16~R31 - E.a. Idi rd. #number

COMP9032 Week2

AVR Registers (cont.)

- General purpose registers
 - The following register pairs can work together as address registers (or address pointers)
 - X, R27:R26
 - Y, R29:R28
 - Z, R31:R30
 - The following registers can be applied for specific purpose
 - R1:R0 store the result of the multiplication instruction
 - · R0 stores the data loaded from the program memory

COMP9032 Week2

AVR Registers (cont.)

- I/O registers
 - 64+ 8-bit registers
 - Their names are defined in the m2560def.inc file
 - Used in input/output operations
 - · Mainly storing data/addresses and control signal bits
 - Will be covered in detail later
- · Status register (SREG)
 - A special I/O register

SREG

- The Status Register (SREG) contains information about the result of the most recently executed AL instruction. This information can be used for altering program flow in order to perform conditional operations.
- · SREG is updated by hardware after an AL operation.
 - Some instructions such as load do not affect SREG.
- SREG is not automatically saved when entering an interrupt routine and restored when returning from an interrupt. This must be handled by software.
 - Using in/out instruction to store/restore SREG
 - To be covered later

COMP9032 Week2

SREG (cont.) | H | S | V | N | Z | C | | 5 | 4 | 3 | 2 | 1 | 0

- Bit 0 C: Carry Flag
 - Its meaning depends on the operation.
 - For addition x+y, it is the carry from the most significant bit
 - For subtraction x-y, where x and y are unsigned integers, it indicates whether x<y or not. If x<y, C=1; otherwise, C=0.

COMP9032 Week2

2 Week2 8


SREG (cont.)



- Bit 1 Z: Zero Flag
 - Z indicates a zero result in an arithmetic or logic operation. 1: zero. 0: Non-zero.
- Bit 2 N: Negative Flag
 - N is the most significant bit of the result.

COMP9032 Week2


SREG (cont.)

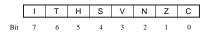

- Bit 3 V: Overflow Flag
 - For two's complement arithmetic operations
- Bit 4 S: Sign Bit
 - Exclusive OR between the Negative Flag N and the Two's Complement Overflow Flag V (S = N ⊕V)

COMP9032 Week2

SREG (cont.)

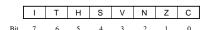

- Bit 5 H: Half Carry Flag
 - The Half Carry Flag H indicates a Half Carry (carry from bit 3) in some arithmetic operations.
 - Half Carry is useful in BCD arithmetic.

-BCD: Binary Coded Decimal

BCD Example

COMP9032 Week2

ample


SREG (cont.)




- Bit 6 T: Bit Copy Storage
 - Used for copying a bit from one register to another register
 - The Bit Copy instructions BLD (Bit LoaD) and BST (Bit STore) use the T-bit as source or destination for the operated bit.


COMP9032 Week2

32 Week2 12

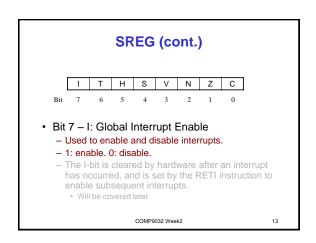





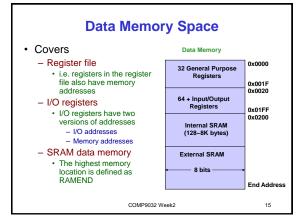


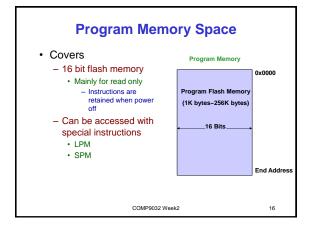



AVR Instruction Format • For AVR, almost all instructions are 16 bits long - For example • add Rd, Rr • sub Rd, Rr • mul Rd, Rr • brge k • Some instructions are 32 bits long - For example • Ids Rd, k (0 ≤ k ≤ 65535) - loads 1 byte from data space to a register.

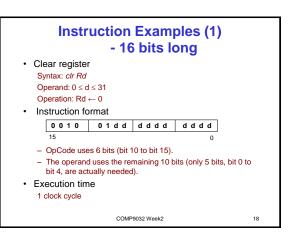

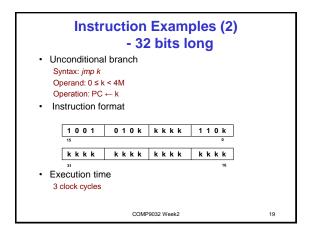

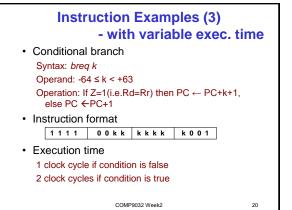

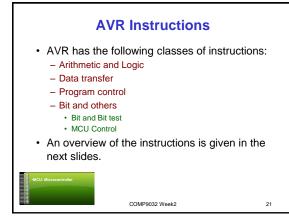

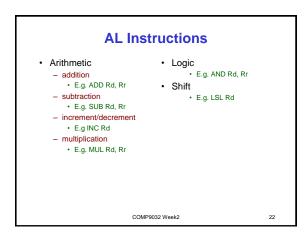


```
Transfer Instructions
                                · Memory
· GP register
      • E.g. MOV Rd, Rr
                                   - Data memory
                                       • E.g. LD Rd, X

    I/O registers

                                            ST X, Rr
      • E.g. IN Rd, PORTA
                                   - Program memory
            OUT PORTB, Rr
                                      • E.g. LPM

    Stack

                                   - EEPROM memory
      • PUSH Rr
                                      · Not covered in this course
      • POP Rd
· Immediate values
      • E.g. LDI Rd, K8
                        COMP9032 Week2
                                                           23
```

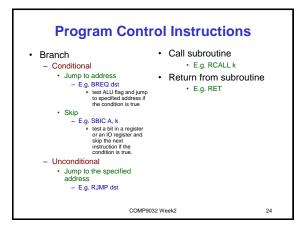

Bit & Other Instructions Bit Set bit E.g. SBI PORTA, b Clear bit E.g. CBI PORTA, b Bit copy E.g. BST Rd, b COMP9032 Week2

AVR Instructions (cont.) Not all instructions are implemented in all AVR controllers. Refer to the data sheet of a specific microcontroller Refer to online AVR instruction document for the detail description of each instruction Get a general view of the instruction set Learn each instruction when use it.

AVR Addressing Modes Immediate Register direct Memory related addressing modes Data memory Direct Indirect Indirect with Displacement Indirect with Pre-decrement

COMP9032 Week2

· Indirect with Post-increment

Program memoryEPROM memoryNot covered in this course

Immediate Addressing • The operand comes from instruction • For example andi r16, \$0F - Bitwise logic AND operation • Clear left four bits in register r16

```
Register Direct Addressing


• The operand comes from general purpose register

• For example


and r16, r0


- r16 ← r16 AND r0

• Clear left four bits in register r16 if r0 = 0x0F
```

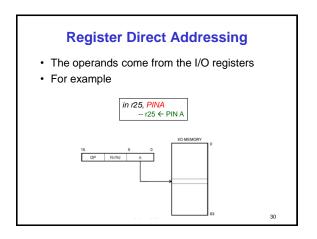



Data Direct Addressing The data memory address is given directly from the instruction For example | Ids r5, \$F123

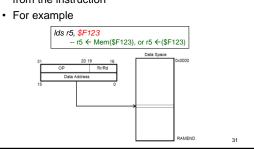


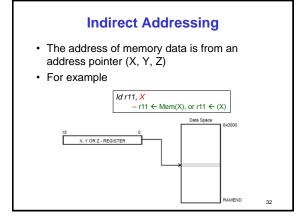



Indirect Addressing with Displacement • The address of memory data is from (Y,Z)+q - Offset q >=0 • For example Std Y+10, r14 - (Y+10) ← r14 Data Space OHOROMOR RAMEND 33

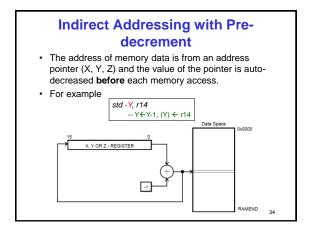


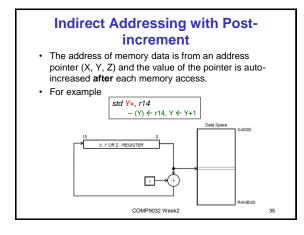


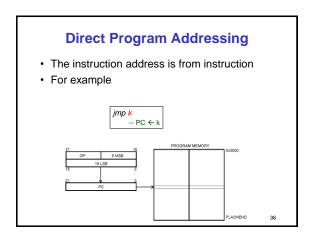

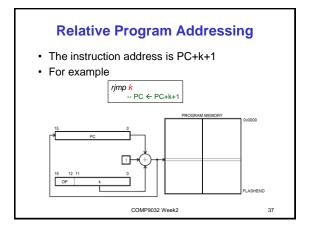

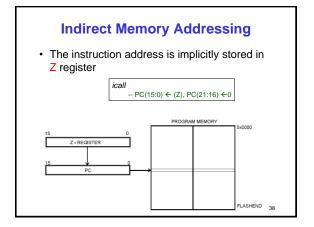

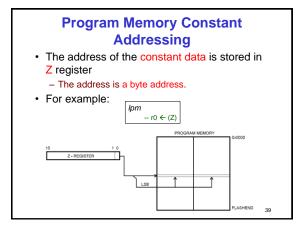

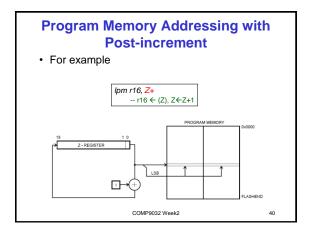

AVR Programming COMP9032 Week2 41

AVR Programming • Refer to the AVR Instruction Set document for the complete list of instructions - http://www.cse.unsw.edu.au/~cs9032, follow the link: References → Documents →AVR-Instruction-Set.pdf • The rest of the lecture demonstrates AVR assembly programming - By implementing some basic structures with some examples • Sequence • Sequence • Selection • Iteration

Sequence (1/5) - example

Expressions

$$z = 2x - xy - x^2$$

 where all data including results from multiplications are 8-bit unsigned numbers; and x, y, z are stored in registers r2, r3, and r4, respectively.

COMP9032 Week2

What instructions do you need?

- sub
- mul

COMP9032 Week2

P9032 Week2

Subtract without Carry

• Syntax: sub Rd, Rr

• Operands: Rd, $Rr \in \{r0, r1, ..., r31\}$

• Operation: $Rd \leftarrow Rd - Rr$

• Flags affected: H, S, V, N, Z, C

Words: 1 Cycles: 1

COMP9032 Week2

Multiply Unsigned

• Syntax: mul Rd, Rr

• Operands: Rd, $Rr \in \{r0, r1, ..., r31\}$

• Operation: r1:r0 ← Rr*Rd

– (unsigned ← unsigned * unsigned)

· Flags affected: Z, C

 C is set if bit 15 of the result is set; cleared otherwise.

Words: 1 Cycles: 2

COMP9032 Week2

What instructions do you need?

- sub
- mul
- Idi
- mov

COMP9032 Week2

Load Immediate

• Syntax: Idi Rd, k

• Operands: $Rd \in \{r16, ..., r31\}, 0 \le k \le 255$

Operation: Rd ← k
 Flag affected: None

Words: 1

• Cycles: 1

Encoding: 1110 kkkk dddd kkkk

• Example:

ldi r16, \$42 ; Load \$42 to r16

Copy Register

• Syntax: mov Rd, Rr

• Operands: Rd, Rr ∈{r0,r1,...,r31}

Operation: Rd ← Rr
Flag affected: None
Words: 1
Cycles: 1

COMP9032 Week2

Sequence (2/5)

- AVR code for $z = 2x xy x^2$
 - where all data including results from multiplications are 8-bit unsigned numbers; and x, y, z are stored in registers r2, r3, and r4, respectively.

```
ldi
        r16, 2
                         ; r16 <del><</del> 2
                         ; r1:r0 \leftarrow 2x
mul
       r16, r2
mov
        r5, r0
                          ; r5 ← 2x
        r2. r3
                         ; r1:r0 \leftarrow xv
mul
                          ; r5 ← 2x-xy
sub
        r5, r0
mul r2, r2
                         ; r1:r0 \leftarrow x<sup>2</sup>
sub
        r5, r0
                         ; r5 \leftarrow 2x-xy- x^2
                          ; r4 ← z
mov r4, r5
```

8 instructions and 11 cycles

COMP9032 Week2

Sequence (3/5)

- AVR code for $z = 2x xy x^2$
 - where all data including products from multiplication are 8-bit unsigned numbers; and x, y, z are stored in registers r2, r3, and r4, respectively.

; r16 < 2 ldi r16, 2 mul r16, r2 ; r1:r0 \leftarrow 2x r4, r0 ; r4 **←** 2x mov mul r2, r3 ; r1:r0 ← xy r4, r0 ; r4 ← 2x-xy sub mul r2, r2 ; r1:r0

x2 ; r4 2x-xy- x2 r4, r0 sub

7 instructions and 10 cycles
 COMP9032 Week2

Week2

Sequence (4/5)

· Expressions

$$z = 2x - xy - x^2$$

 $z = x(2 - (x + y))$

 where all data including products from multiplications are 8-bit unsigned numbers; and x, y, z are stored in registers r2, r3, and r4, respectively.

COMP9032 Week2

52

What instructions do you need?

- sub
- mul
- Idi
- mov
- add

COMP9032 Week2

Add without Carry

Syntax: add Rd, Rr

• Operands: Rd, Rr ∈ {r0, r1, ..., r31}

• Operation: Rd←Rd + Rr

• Flags affected: H, S, V, N, Z, C

Words: 1 Cycles: 1

Sequence (5/5)

- · AVR code for $z = 2x - xy - x^2$ z = x(2 - (x + y))
 - where all data including products from multiplications are 8bit unsigned numbers; and x, y, z are stored in registers r2, r3, and r4, respectively.

```
mov r4, r2
                      ; r4 ← x
add
       r4, r3
                       ; r4 \leftarrow x+y
ldi
                       ; r16 ← 2
       r16, 2
                       r16 \leftarrow 2-(x+y)
       r16, r4
sub
      r2, r16
                       ; r1:r0 \leftarrow x(2-(x+y))
mul
mov r4, r0
                       ; r4 ← z
```

- 6 instructions and 7 cycles

COMP9032 Week2

Selection (1/2) - example

· IF-THEN-ELSE control structure



- Assume numbers a, b are 8-bit signed integers and stored in registers. You need to decide which registers to use.
- · Instructions involved:
 - Compare
 - Conditional branch
 - Unconditional jump

COMP9032 Week2

Compare

· Syntax: cp Rd, Rr

Operands: $Rd \in \{r0, r1, ..., r31\}$

Operation: Rd - Rr (Rd is not changed)

Flags affected: H, S, V, N, Z, C

Words: 1 · Cycles:

Example:

cp r4, r5 ; Compare r4 with r5 ; Branch if r4 ≠ r5 brne notea

noteq: nop ; Branch destination (do nothing)

COMP9032 Week2

Compare with Immediate

Syntax: cpi Rd, k

· Operands: Rd \in {r16, r17, ..., r31} and $0 \le k \le 255$

 Operation: Rd - k (Rd is not changed)

· Flags affected: H, S, V, N, Z, C

Words: · Cycles:

COMP9032 Week2

Conditional Branch

Syntax: brge k

· Operands: $-64 \le k < 64$

· Operation: If Rd \geq Rr (N \oplus V=0) then PC \leftarrow PC+k+1,

else PC ← PC+1 if condition is false

· Flag affected: None

Words:

 Cycles: 1 if condition is false; 2 if condition is

true

COMP9032 Week2

Relative Jump

Syntax: rjmp k

· Operands: $-2K \le k < 2K$

· Operation: PC←PC+k+1

· Flag affected: None

· Words:

· Cycles: 2


Selection (2/2) · IF-THEN-ELSE control structure if(a<0) h=1: b=-1; - Numbers a, b are 8-bit signed integers and stored in registers. You need to decide which registers to use .def a=r16 .def b=r17 cpi a, 0 ELSE ;if a≥0, go to ELSE brge ;b=1 ;end of IF statement ldi b, 1 END rjmp


;b=-1


ELSE: ldi

END:

b, -1

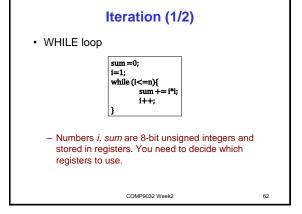

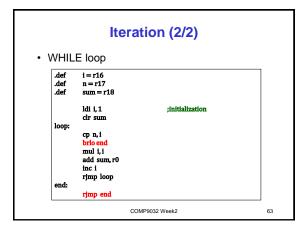

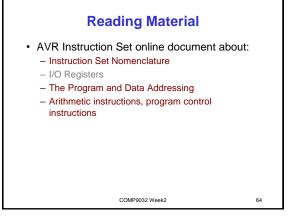

Homework 1. Refer to the AVR Instruction Set document (available at http://www.cse.unsw.edu.au/~cs9032, under the link References → Documents → AVR-Instruction-Set.pdf). Study the following instructions: - Arithmetic and logic instructions • add, adc, adiw, sub, subi, sbc, sbci, sbiw, mul, muls, mulsu • and, andi, or, ori, eor • com, neg

Homework 1. Study the following instructions (cont.) - Branch instructions - cp, cpc, cpi - rjmp - breq, brne - brge, brnt - brsh, brlo - Data transfer instructions - mov - Idi, Id, st

Homework

- 2. Write the assembly code for the following functions
 - 1) 2-byte addition (i.e, addition on 16-bit numbers)
 - 2) 2-byte signed subtraction
 - 3) 2-byte signed multiplication

COMP9032 Week2

67