# Microprocessors & Interfacing

Lecturer: Annie Guo

COMP9032 Week1

#### **Lecture Overview**

- · Course Introduction
  - A whole picture of the course
- · Basics of Computing with Microprocessor Systems

COMP9032 Week1

#### **Course Organization**

- · Lecture:
  - Microprocessor fundamentals (1 week)
  - Assembly programming (3 weeks)
  - I/O devices and Interfacing (5 weeks)
  - Development and extended topics on microprocessor applications (1 week)
- · Lab:
  - Four lab exercises
  - · Start in Week 2
    - · About 2 weeks each
      - Set up the simulation environment at home and form lab groups (two students per group) by Week 2.
- · Project design:
  - Microprocessor application
  - Microprocessis, ...

    Released in Week 9

    COMP9032 Week1

#### Aims of the Course

- · After completing the course, you should
  - understand the basic concepts and structures of microprocessors, and its operational principles
  - gain assembly programming skills
  - understand how hardware and software interact with each other
  - know how to use microprocessors to solve problems
  - be familiar with the development of microprocessor applications

## **Expectation (1)**

- · Lectures
  - Concepts
  - Principles
  - Problem solving approaches and techniques

COMP9032 Week1

## **Expectation (2)**

- Labs
  - - · AVR studio development environment
      - Development, simulation and debug
    - · AVR lab board
      - Devices, ports, and connections
      - Programming and testing
  - Lab exercises
    - · Prepare before lab
    - · Finish in lab
    - · Marked off by the lab tutor
      - » 20% off for one-week late
        - Late more than one week, your work is only marked as completion for eligibility of passing this course.

## **Expectation (3)**

- Homework
  - Study questions provided after each lecture
    - · attempt all questions

COMP9032 Week1

#### **Assessment**

- Four lab exercises must be completed and marked off
  - 20%, working in pairs but marked individually
- Mid-term exam (in Week 6)
  - 20%
  - Location is to be determined
- · Project design
  - 15%, working individually
- · Final exam
  - 45%
- · To pass the course,
  - (result >=50)&(lab compl.)&(final\_exam>=40)

COMP9032 Week1

.

#### And ...

- · Main references:
  - Fredrick M. Cady: Microcontrollers and Microcomputers —Principles of Software and Hardware Engineering
  - AVR documents (available on the course website)
    - Data Sheet
    - · Instruction Set
- Additional materials provided on the course website
- · Lecture notes
  - Posted each week before lecture

COMP9032 Week1

## **Resources for Help**

- · Course website
  - www.cse.unsw.edu.au/~cs9032
- Lecturer
  - Lecture break
  - Consultation
  - Fri. 15:00—17:00, K17-501F
- · Lab tutors

COMP9032 Week1

10

#### **NOTE**

 Please check the website frequently for new notices, lectures, lab exercises, and later the design project specification.

## **Microprocessors & Interfacing**

Basics of Computing with Microprocessor Systems

Lecturer: Annie Guo


COMP9032 Week1

#### **Lecture Overview**

- · Microprocessor Hardware Structures
- · Data Representation
  - Number representation
- · Instruction Set Architecture

COMP9032 Week1

## **Fundamental Hardware Components in Computing System** DM I/O bus CPU datapath CU ALU • ALU: Arithmetic and Logic Unit RF: Register File (a set of registers) CU: Control Unit • IM/DM: Instruction/Data Memory • I/O: Input/Output Devices COMP9032 Week1

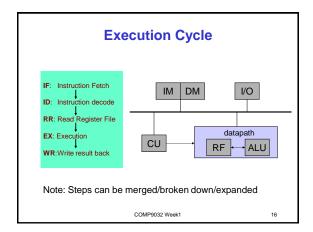

#### **Microprocessors**

- · A microprocessor is the datapath and control unit on a single chip.
- · If a microprocessor, its associated support circuitry, memory and peripheral I/O components are implemented on a single chip, it is a microcontroller.
  - We use AVR microcontroller as the example in our course



COMP9032 Week1

## **Data Representation**

- · For a digital microprocessor system being able to compute and process data, the data must be properly represented
  - How to represent numbers for calculation?
    - Binary
  - How to represent characters, symbols and other values for processing?
    - · Will be covered later

#### **Decimal**

Example

$$(3597)_{10}$$
=  $3 \times 10^3 + 5 \times 10^2 + 9 \times 10 + 7$ 

- The place values, from right to left, are 1, 10, 100, 1000
- The base or radix is 10
- All digits must be less than the base, namely, 0~9

COMP9032 Week1

#### **Number Representation**

Any number can be represented in the form of

$$\begin{array}{l} (a_na_{n-1}...a_{1}a_{0}.a_{.1}...a_{.m})_r\\ =a_n\times r^n+a_{n-1}\times r^{n-1}+...+a_{1}\times r+a_{0}+a_{.1}\times r^{-1}+...+a_{-m}\times r^{-m}\\ r:radix,base\\ 0\leq a_i< r \end{array}$$

COMP9032 Week1

Week1 20

#### **Binary**

· Example

$$(1011)_2$$
  
=  $1 \times 2^3 + 0 \times 2^2 + 1 \times 2 + 1$ 

- All digits must be less than 2 (0~1).

What are the first 16 binary integers?

COMP9032 Week1

#### **Hexadecimal**

Example

$$(F24B)_{16}$$
  
=  $F \times 16^3 + 2 \times 16^2 + 4 \times 16 + B$   
=  $15 \times 16^3 + 2 \times 16^2 + 4 \times 16 + 11$ 

- All digits must be less than 16 (0~9,A,B,C,D,E,F)

COMP9032 Week1

# **Binary Arithmetic Operations**

- · Similar to decimal calculations
- Examples of addition and multiplication are given in the next two slides.

COMP9032 Week1

23

## **Binary Additions**

- · Example:
  - Addition of two 4-bit unsigned binary numbers.
     How many bits are required for holding the result?

1001+0110 = (\_\_\_\_\_)

COMP9032 Week1

eek1 24

## **Binary Multiplications**

- · Example:
  - Multiplication of two 4-bit unsigned binary numbers. How many bits are required for holding the result?

1001\*0110 = (\_\_\_\_\_

COMP9032 Week1

#### **Binary Subtraction**

· Subtraction can be defined as addition of the additive inverse:

$$a - b = a + (-b)$$

- We can represent –b by two's complement of b.
- In *n*-bit binary arithmetic, 2's complement of *b* is

$$b^* = 2^n - b$$

- $(b^*)^* = b$
- The MSB (Most Significant Bit) of a 2's complement number
  - For example, for a 4-bit 2's complement number
  - (1001) → -7, (0111) → 7

COMP9032 Week1

#### **Exercises**

Represent the following decimal numbers using 8bit 2's complement format

(b) 127

- Can all the above numbers be represented by 4 bits?
- An *n*-bit binary number can be interpreted in two different ways: signed or unsigned. What decimal value does the 4-bit number, 1011, represent for the following two cases?

(a) if it is a signed number (b) if it is an unsigned number

COMP9032 Week1

#### **Examples**

#### 4-bit 2's-complement additions/subtractions

(2) 0101 - 0010 (5 - 2): (1) 0101 + 0010 (5 + 2): 0101 + 0010

= 00111

0101 +<u>1110 (= 0010\*</u>) = 10011

(3) 0010 - 0101 (2 - 5): 0010

(4) -0101 - 0010 (-5 - 2): 1011 (= 0101\*) + 1110 (= 0010\*)

<u>+ 1011 (= 0101\*)</u> = 1101 (= 0011\*). Result means -3.

Result means -7.

= 11001

COMP9032 Week1

#### **Overflow in Two's-Complement**

- Overflow happens when the result cannot be represented by the given number of bits.
- Assume a, b are positive numbers in the nbit 2's complement system,
  - For a+b
    - If the MSB of a+b is 1, which indicates a negative number; then the addition causes a positive overflow.
  - For -a-b
    - If the MSB of -a-b is 0, which indicates a positive number; then the addition causes a negative overflow.


COMP9032 Week1

#### **Exercises**

- 1. Do the following calculations, where all numbers are 4-bit 2's complement numbers. Check whether there is any overflow.
  - (a) 1000-0001
  - (b) 1000+0101
  - (c) 0101+0110

# **Microprocessor Applications**

- · A microprocessor application system can be abstracted in a three-level architecture
  - ISA (Instruction Set Architecture) is the interface between hardware and software

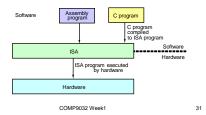

#### **Instruction Set**

- Instruction set provides the vocabulary and grammar for programmer/software to communicate with the hardware machine.
- It is machine oriented
  - Different machine, different instruction set
    - For example
  - 68K has more comprehensive instruction set than ARM machine - Same operation, could be represented differently in different
    - machines
    - AVR
      - Addition: add r2,
        Branching: breq 6
        - ;r2 ← r2+r1 ;branch if equal condition is true ldi r30, \$F0 ;r30 ← F0
      - Load:
      - Addition: add d1,d2
        Branching: breq 6
        Load: mov #1234, d2
- ;branch if equal condition is true ;d2 ← 1234

COMP9032 Week1

;d2 ← d2+d1

#### **Instructions**

- · Instructions can be written in two languages
  - Machine language
    - · Made of binary digits
    - · Used by machines
  - Assembly language
    - · Text representation of machine language
    - · Easier to understand than machine language
    - · Used by human being.

COMP9032 Week1

#### Machine Code vs. Assembly Code

- · Basically, there is a one-to-one mapping between the machine instructions and assembly instructions
  - Example (AVR instruction):

For incrementing register r16 by 1:

• 1001010100000011 (machine code) • inc r16 (assembly code)

- Assembly language also includes directives
  - Directives
    - · Instructions to the assembler
      - Assembler is a program to translate assembly code into machine code.
    - · Example:
      - .def temp = r16
      - .include "m2560def.inc"

## **Instruction Set Architecture (ISA)**

- · ISA specifies all aspects of a computer architecture visible to a programmer
  - Instructions (just mentioned)
  - Native data types
  - Registers
  - Memory models
  - Addressing modes

COMP9032 Week1

#### **Native Data Types**

- · Different machines support different data types in hardware
  - e.g. Pentium II:

Data Type	8 bits	16 bits	32 bits	64 bits	128 bits
Signed integer	1	1	1		
Unsigned integer	1	✓	1		
BCD integer	1				
Floating point			1	1	

· e.g. Atmel AVR (we are using):

Data Type	8 bits	16 bits	32 bits	64 bits	128 bits
Signed integer	1				
Unsigned integer	1				
BCD integer					
Floating point					

## **Registers**

- · Two types
  - General purpose
  - Special purpose
    - e.g.
      - Program Counter (PC)
      - Status Register
      - Stack Pointer (SP)
      - Input/Output Registers
  - Stack Pointer and Input/Output Registers will be discussed in detail later.

COMP9032 Week1

## **General Purpose Registers**

- · A set of registers in the machine
  - Used for storing temporary data/results
  - For example
    - In (68K) instruction <u>add d3, d5</u>, operands are stored in general registers d3 and d5, and the result is stored in d5.
- · Can be structured differently in different machines
  - For example
    - Separate general purpose registers for data and address
       68K
    - · Different number of registers and different size of registers
      - 32 32-bit registers in MIPS
      - 16 32-bit registers in ARM

COMP9032 Week1

38

## **Program Counter (PC)**

- · Special register
  - For storing the memory address of currently executed instruction
- · Can be of different size
  - E.g. 16 bit, 32 bit
- · Can be auto-incremented
  - By the instruction word size
  - Giving rise the name "counter"

COMP9032 Week1

39

## **Status Register**

- Contains a number of bits with each bit being associated with processor (CPU) operations
- · Typical status bits
  - V: Overflow
  - C: CarryZ: Zero
  - N: Negative
- Used for controlling the program execution flow

COMP9032 Week1

40

## **Memory Model**

- · Deals with how memory is used to store data
- Issues
  - Addressable unit size
  - Address spaces
  - Endianness
  - Alignment

COMP9032 Week1

#### **Addressable Unit Size**

- Memory has units, each of which has an address
- Most basic unit size is 8 bits (1 byte)
  - Related addresses are called byte-addresses.
- Modern processors can have multiple-byte unit
  - e.g. 32-bit instruction memory in MIPs
     16-bit Instruction memory in AVR
  - Related addresses are called word-addresses.

COMP9032 Week1

#### **Address Space**

- · The range of addresses a processor can
  - A processor can have one or more address spaces. For example
    - · Princeton architecture or Von Neumann architecture
      - A single linear address space for both instructions and data memory
    - · Harvard architecture
      - Separate address spaces for instruction and data memories

COMP9032 Week1

#### **Address Space (cont.)**

- · Address space is not necessarily just for "memory"
  - E.g, all general purpose registers and I/O registers can be accessed through memory addresses in

COMP9032 Week1

#### **Endianness**

- · Memory objects
  - Memory objects are basic entities that can be accessed as a function of the address and the
  - E.g. bytes, words, longwords
- · For large objects (multiple bytes), there are two byte-ordering conventions
  - Little endian little end (least significant byte) stored first (i.e. at the lowest address)
    - · Intel microprocessors (Pentium etc)
  - Big endian big end (most significant byte) stored first
    - · SPARC, Motorola microprocessors

COMP9032 Week1

#### **Big Endian & Little Endian**

- Example: 0x12345678—a long word of 4 bytes. It is stored in the memory at address 0x00000100
  - big endian:

Address	data
0x00000100	0x12
0x00000101	0x34
0x00000102	0x56
0x00000103	0x78

- little endian:

Address	data
0x00000100	0x78
0x00000101	0x56
0x00000102	0x34
0x00000103	0x12

#### **Alignment**

- · Modern computer reads from or writes to a memory address in fixed sized chunks,
  - for example, word size
- · Alignment means putting the data at a memory address that is multiple of the word size
  - for example, with AVR, data in the program memory are aligned with the word addresses.

COMP9032 Week1

47

#### **Addressing Modes**

- Instructions need to specify where to get operands from
- Some possibilities
  - an operand value is in the instruction
  - an operand value is in a register
    - · the register number is given in the instruction
  - an operand value is in memory
    - · address is given in the instruction · address is given in a register
    - the register number is in the instruction
    - · address is a register content plus some offset
      - register number is in the instruction - offset is in the instruction (or in a register)
- These ways of specifying the operand locations are
- called addressing modes

#### **Addressing Modes (cont.)**

- Some examples are given in the next slides, based on the 68K machine.
- · For each addressing mode, there are
  - a general description and
  - an example to show how the address mode is used.
    - the specified addressing mode is highlighted in red

COMP9032 Week1

32 Week1

#### **Immediate Addressing**

- · The operand is from the instruction itself
  - i.e the operand is immediately available from the instruction
- · For example, in 68K

addw #99, d7

- d7 ← 99 + d7; value 99 comes from the instruction
- d7 is a register

COMP9032 Week1

50

## **Register Direct Addressing**

- Data from a register and the register is directly given by the instruction
- · For example, in 68K

addw d0,d7

- d7 ← d7 + d0; add value in d0 to value in d7 and store result to d7
- d0 and d7 are registers

COMP9032 Week1

## **Memory Direct Addressing**

- The data is from memory and the memory address is directly given by the instruction
- We use notion: (addr) to represent memory value at address, addr
- · For example, in 68K

addw 0x123A, d7

 – d7 ← d7 + (0x123A); add value in memory location 0x123A to register d7

COMP9032 Week1

52

## Memory Register Indirect Addressing

- The data is from memory and the memory address is given by a register that is directly given by the instruction
- For example, in 68K

addw  $(a\theta)$ , d7

- d7 ← d7 + (a0); add value in memory with the address stored in register a0, to register d7
  - For example, if a0 = 100 and (100) = 123, then this adds 123 to d7

COMP9032 Week1

ek1

## Memory Register Indirect Autoincrement

- The data is from memory and the memory address is given by a register that is directly given by the instruction; the value of the register is automatically increased – to point to the next memory object.
- For example, in 68K

addw (a0)+,d7

-d7 ← d7 + (a0); a0 ← a0 + 2

COMP9032 Week1

## Memory Register Indirect Autodecrement

- The data is from memory and the memory address is given by a register that is directly given by the instruction; but the value of the register is automatically decreased before such an operation.
- · For example, in 68K

addw -(*a0*), d7

- a0 ← a0 −2; d7 ← d7 + (a0);

COMP9032 Week1

# Memory Register Indirect with Displacement

- Data is from the memory with the address given by the register plus a constant
  - Used to access a member in a data structure
- For example, in 68K

addw a0@(8), d7

 $-d7 \leftarrow (a0+8) + d7$ 

COMP9032 Week1

56

# Address Register Indirect with Index and Displacement

- The address of the data is sum of the initial address and the index address as compared to the initial address
  - Used to access an element in an array of structured data type
- · For example, in 68K

addw a0@(d3)8, d7

- $d7 \leftarrow (a0 + d3 + 8)$
- With a0 as an initial address and d3 varied to dynamically point to different elements plus a constant for a certain member of an element of an array.

COMP9032 Week1

# **Reading Material**

- Cady "Microcontrollers and Microprocessors", Chapter 1.1, Chapter 2.2-2.4
- Cady "Microcontrollers and Microprocessors", Appendix A
- Week 1 reference: "number conversion"
  - · available at the course website

COMP9032 Week1

58

#### **Homework**

Questions 1-6 are in Cady "Microcontrollers and Microprocessors",

- 1. Question A.4 (i)(ii) (a)(f)
- 2. Question A.8 (b)(c)
- 3. Question A.9 (a)(b)
- 4. Question 2.4
- 5. Question 3.1 (a)(c)
- 6. Questions 3.5, 3.7
- 7. Install AVR Studio at home and complete lab0
  - · Available on the Labs page of the course website

COMP9032 Week1

59

#### **Homework**

- 1. Find the two's complement binary code for the following decimal numbers:
- (a) 26
- (b) -26

COMP9032 Week1

## Homework

- 2. Find the binary code words for the following hexadecimal numbers:
- (c) C0FFEE
- (d) F00D

COMP9032 Week1

## Homework

3. Prove that the two's-complement overflow cannot occur when two numbers of different signs are added.

COMP9032 Week1