

NORMAN SHUTTERS-WALLAC

2/1/22

(PH) 800-366-5562 (FAX) 800-784-7849

	WOODLORE	WOODLORE PLUS	N
PAINTS	YES	YES	
STAINS	N/A	N/A	
CUSTOM PAINTED	N/A	YES	
MOTORIZATION	YES	YES	
LOUVER SIZE 1 7/8" *	YES	YES	
LOUVER SIZE 2 1/2"	YES	YES	
LOUVER SIZE 3"	YES	YES	
LOUVER SIZE 3 1/2"	YES	YES	
LOUVER SIZE 4 1/2"	YES	YES	

SURCHARGES			
CUSTOM PAINTED	N/A	SURCHARGES APPY	SURC
DOUBLE HUNG	NO BIFOLD - 10%	NO BIFOLD - 10%	
HORIZONTAL T POST	10%	10%	
FLAME RETARDANT	10%	10%	
WATER PROOF	N/A	30%	
1 7/8" LOUVER	10%	10%	
L FRAMES WITH 1/2" & 1" BO	5%	5%	
DECO & L FRAMES WITH CUSTOM EXT	10%	10%	
CUSTOM DIVIDER RAIL HEIGHT	N/A	N/A	SURC
T POST EXT UP TO 2"	5%	5%	
CUSTOM WIDTH T POST	10%	10%	
CUSTOM BAY POST	5%	5%	
PRE DRILL Z AND L FRAMES	5%	5%	
DECO SILL OR CAP FRAME	SURCHARGES APPY	SURCHARGES APPY	SURC
NOTCH OUT FRAMES	SURCHARGES APPY	SURCHARGES APPY	SURC
INVISIBLE HINGES	N/A	N/A	
STAINLESS STEEL HINGES	5%	5%	
RING PULLS / PANEL LOCK	SURCHARGES APPY	SURCHARGES APPY	SURC
INVISIBLE TILT ROD/ NA ON 1 7/8 *	SURCHARGES APPY	SURCHARGES APPY	SURC
OFF SET TILT ROD	SURCHARGES APPY	SURCHARGES APPY	SURC
CAFÉ SHUTTER FRAME BIGGER THAN PANEL	30%	30%	
3 SIDED BOX OUT FRAME:	BY PASS / BI F		
STANDARD / DECO BOX	40%	40%	
FACIA WITH HEADER ONLY	20%	20%	
TRACK ONLY	10%	10%	
ADDITIONAL TRACKS	10%	10%	
INTERLOCKING RAILS BPC	DEFAULT N/C	DEFAULT N/C	DI
INTERLOCKING RAILS BPO	5%	5%	
FRENCH DOOR CUTOUTS	N/A	SURCHARGES APPY	SURC
RAISED & LIBERTY PANELS	N/A	N/A	
SHUTTER POLES	\$40	SURCHARGES APPY	SURC
SPECIALTY SHAPES	N/A	SURCHARGES APPY	SURC
PERFRCT TILT *	YES	YES	
PERFECT TILT SOLAR MOTOR* RF	SURCHARGES APPY	REMOTE	
SOLAR BATTERIES INCLUDED			

Call for current pricing

IMPORTANT NOTE: Norman Shutters requires that any claims for damaged product must be rep days of receipt of shipment. As a result of their policy, Wallace Blinds cannot be held responsible for damages reported beyond this 30-day period. If installation cannot be scheduled within 30 days


Measuring Guideli

Table of Contents

1. Panel Anatomy
2. Basic Measuring
3. Mounting Options
4. General Frame Categories
 - Frame Decision Tree
 - Number of Sides
5. Measuring for
 - Different Frames
 - Direct Mount
 - Standard Deduction
 - Café Shutter
 - Corner Window
 - Bay Window
 - T Post
 - Other Window Situ

Call for current pricing

Panel Anatomy

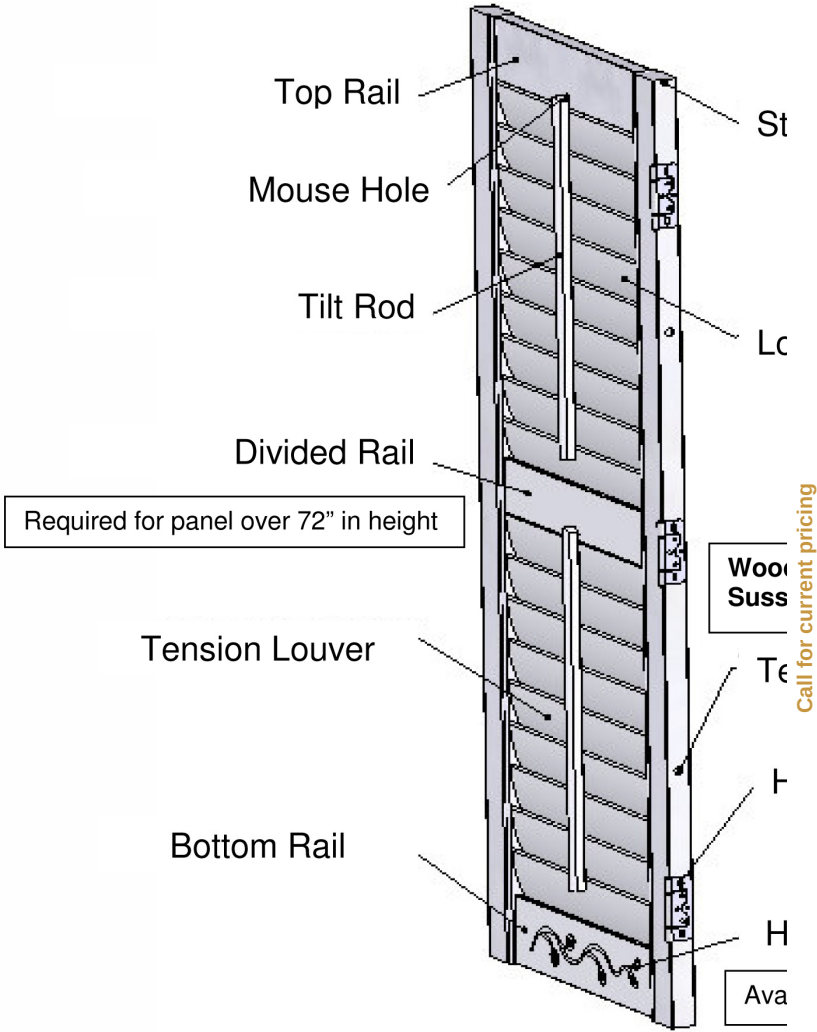

Basic Measuring

To get a precise and accurate measurement is the first step

- ◇ Always use a metal measuring tape.
- ◇ Always measure to the closest $\frac{1}{16}$ ”.

To measure your window

Width: Take 3 measurements at the top, middle and bottom of the window opening.

Height: Take 3 measurements at the left, center and right of the window opening.

Mounting Options

Inside Mount (IM)

- Shutters will fit inside a window opening.
 - There must be enough unobstructed depth of the window opening.
- For **IM**, please provide the **SMALLEST** height of the three.

Outside Mount (OM)


- Shutters will fit outside a window opening.
 - There must be sufficient flat mounting surface.
- For **OM**, please provide the **LARGEST** height of the three.

Tip: When there is enough flat mounting surface, Outside Mount is the preferred method as it is more forgiving and less challenging.

Call for current pricing

Basic Measuring

Determine Window Squareness

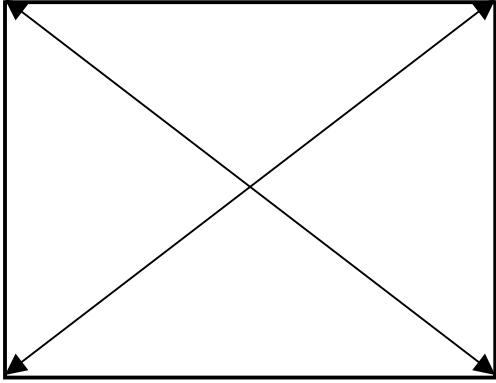


- Measure diagonals
- Should the difference in measurements be recommended


Measurement Type

- **Max Frame to Frame (MFF)**
Finished size of the shutters, measure from the outside of the top to bottom frame.
- **Window Size (WS)**
Exact size of the window opening


Call for current pricing

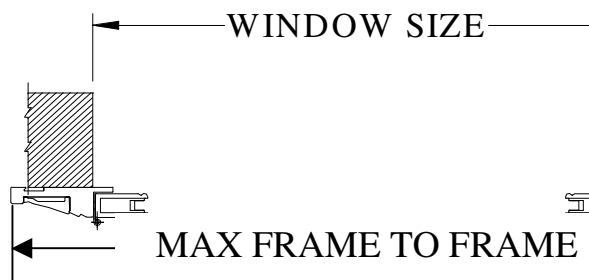

General Frame Ca

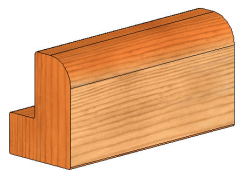


L Frame

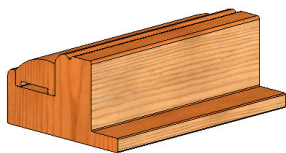


Deco Frame



Z

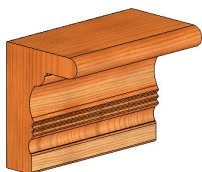

Sill Frame


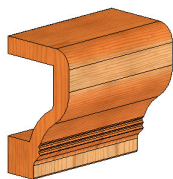


Designer Sill Cap




Call for current pricing


Frame Decision T

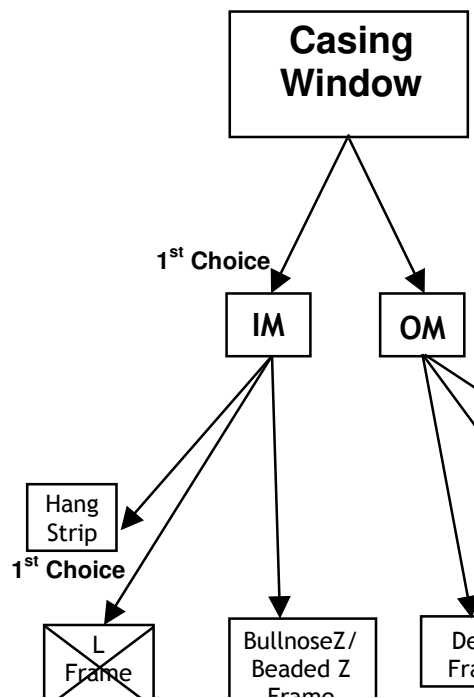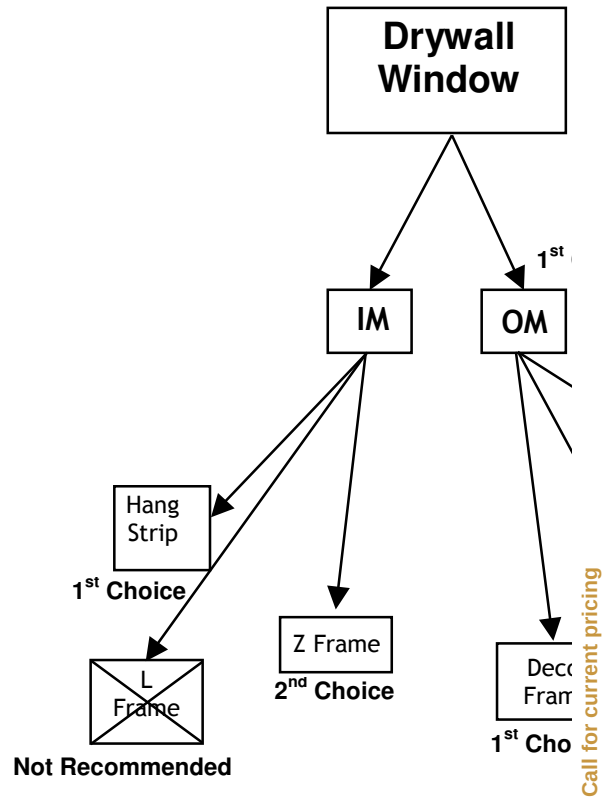


Number of Sides

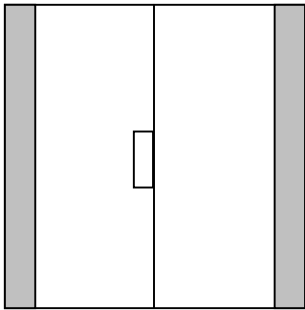


2-sided

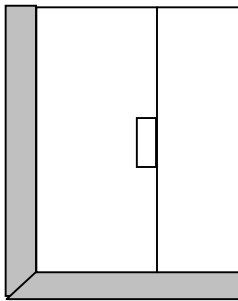

3-sided

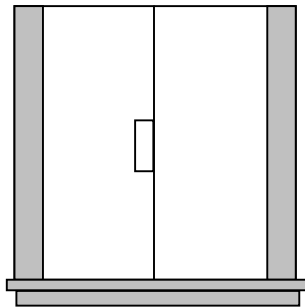

2-sided + Deco Sill Frame/
Designer Sill Cap

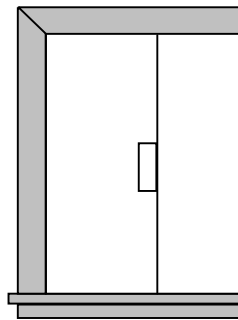

3-sided + Deco Sill |
Designer Sill C

Call for current pricing


Measuring For Different

L Frame

- OM or IM


OM

- The edge of L frame usually aligns with the window edge. Under situation where there is moldings around the window mounted on the outside edge of the molding or on top of the molding.

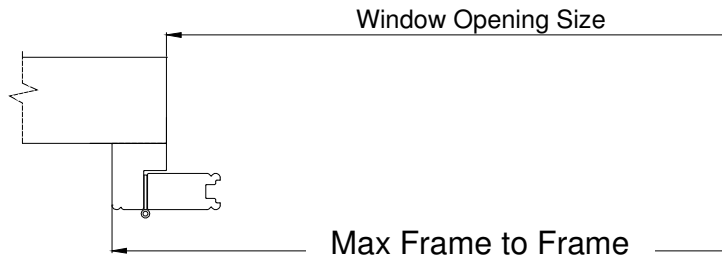

IM

- Max Frame to Frame measurement is **required** for IM.
- $\frac{1}{16}$ " is the suggested deduction on each side.

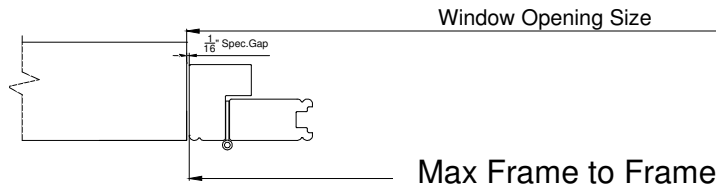

Call for current pricing

Feature:

- L Frame OM leaves more room on the inside of the window opening as it protrudes more into the room compared to other frames.

Measuring For Differ

Hang Strip


- OM or IM

IM

- Hang strip is placed behind the panel.
- Shutters come with two pre-drilled hang strips only. the top and bottom of the window opening.


- **Window size measurement**

- ◇ Standard deduction for gap between panel and $\frac{3}{16}$ " for height.

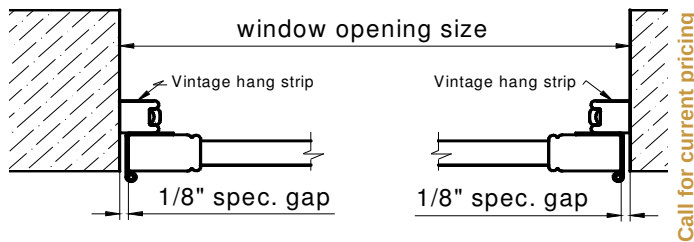

- **Max Frame to Frame measurement**

- ◇ Max Frame to Frame width = panel width (not inc
- ◇ Max Frame to Frame height = panel height
- ◇ The total length for hang strip will be $\frac{1}{10}$ " more th

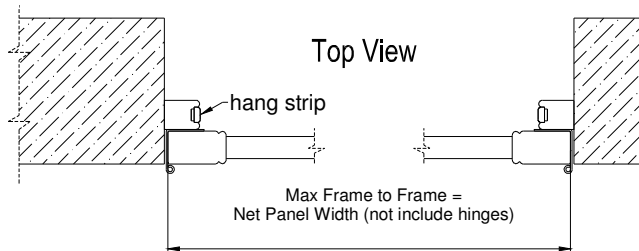


Measuring For Different

Hang Strip

OM

- Hang strip is placed on the side of the panel
- Panel is $\frac{1}{2}$ " wider than the window opening on both left

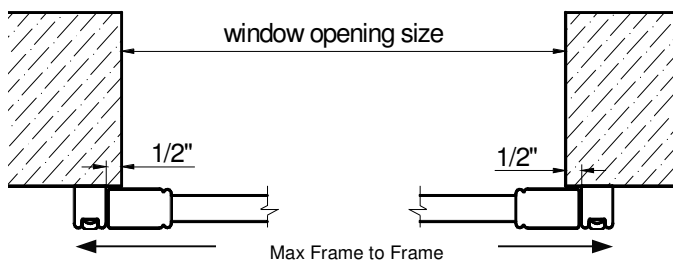

Hang strip OM; beside the panels
(shown in Vintage Hang Strip)

Call for current pricing


Feature:

- An innovative frame design for easier installation. Hang strip can be installed with screws that will be hidden under the panel.

Measuring For Different

Deco Frame

- OM only
- Must have enough flat surface around the window opening

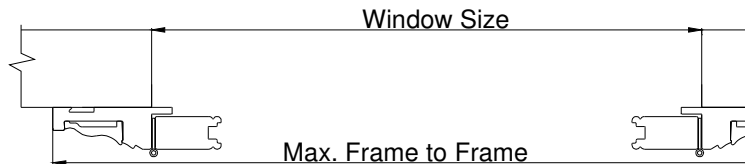


Feature:

- *Deco frame can help to hide an imperfect window*
- *The elegant frame profile adds a decorative touch*
- *An innovative frame design for easier and touch-less pre-drilled holes and can be installed with screws*

Call for current pricing

Z Frame

- IM only
- Standard deduction = $\frac{1}{16}$ " (all sides for window size)

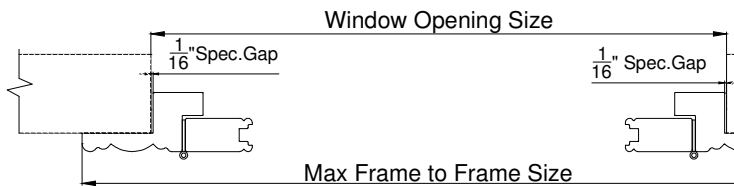


Feature:

- *Z frame is less protruding into the room.*
- *It can help to hide an imperfect window.*
- *The elegant frame profile adds a decorative touch*

Measuring For Differ


Deco Sill Frame/Designer Sill Cap

- Window Size Measurement:

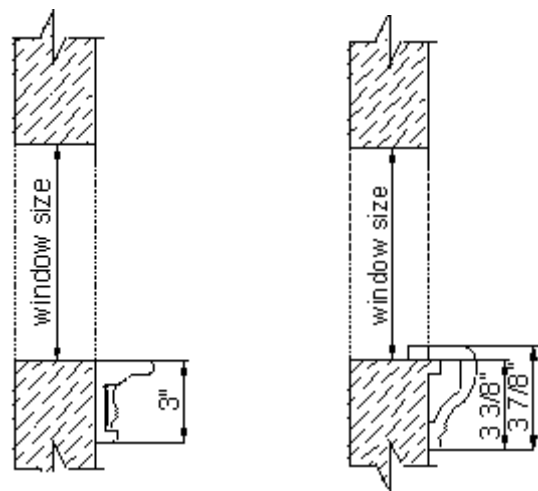


* If extension is requested behind regular frames, then extensi

- Max Frame to Frame Measurement:
 - ◇ Measure height from the top of top frame to bottom

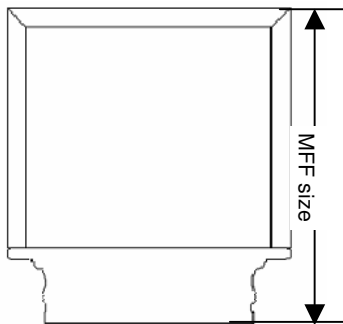

- ◇ To eliminate the gap between the side frame and th drawings below), sill frame will be extended 1/2 " on l

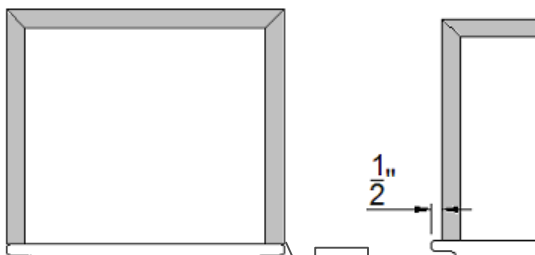

Call for current pricing


Measuring For Different

Direct Mount

- Shutters are directly hinged to window jambs.
- Hardware, including self mortised hinges and magnets
- Comes with 4 light blocks, with magnet catches included
- For hinge, part goes on the panel is pre-installed and hinge pin are included in the hardware box.
- Astragal stile is highly recommended in this mounting method between panels.
- For shutters used as a door or without bottom Product Specification section for details.


Window Size measurement

- Measure both width and height from the inside of

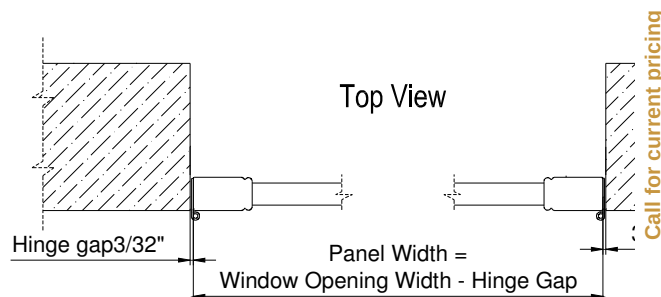

Max Frame to Frame measurement

- Equal to panel size.
- Please note that the Max Frame to Frame width is panel and window jamb.

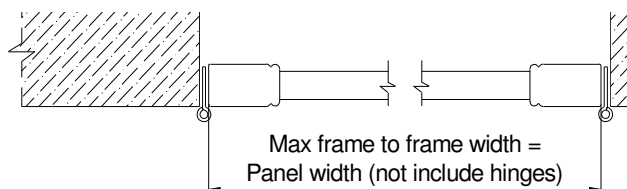

Measuring For Café


Café Shutters

- The top of the panel requires special finish. Please i
- Shutter does not come with recessed magnet on top

WS = Window Size
MFF = Max Frame to Frame


Window size measurement

Panel Height: From bottom of window to top of panels

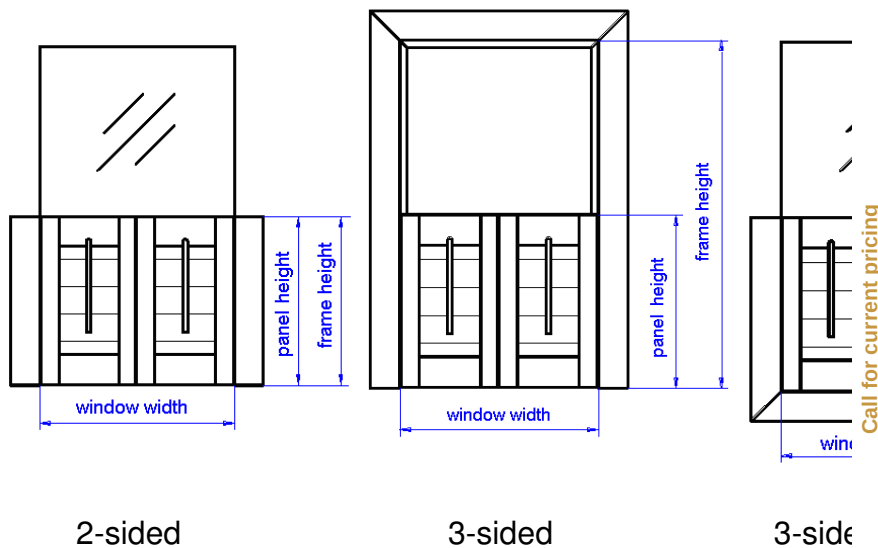

Max frame to frame size measurement


Panel Height: From bottom of frame to top of panels

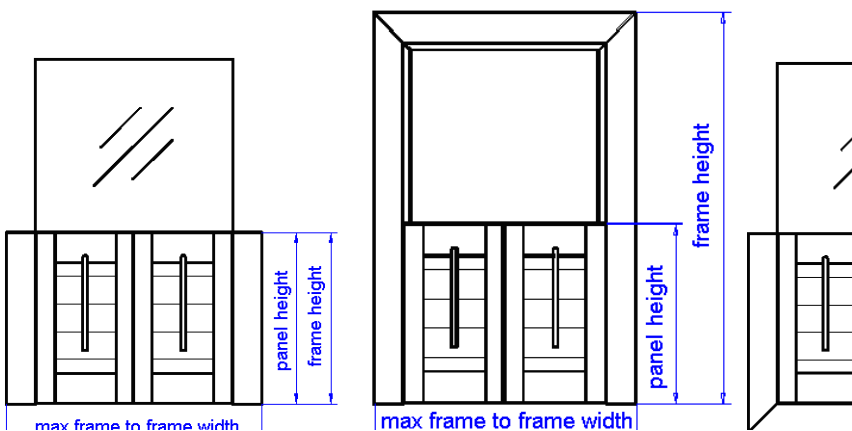

Measuring For Cor

Corner Window


- Shutter is made as a single unit with corner post to co
- Standard angle = 90° (For other angles, please refer
- Width will be different at different depths in window. To please decide **where frames will be mounted on** and place as shown in the corner window drawings.

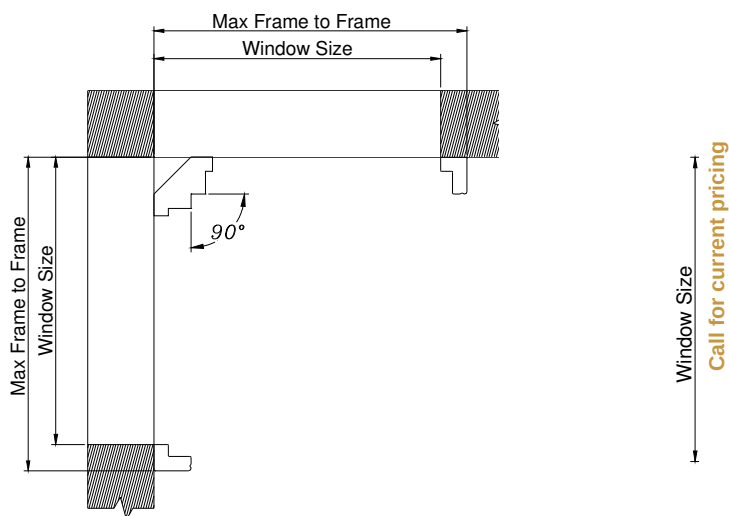


L Frame Outside Mount
(Corner window with a break)

Measuring For Col

Corner Window (con't)

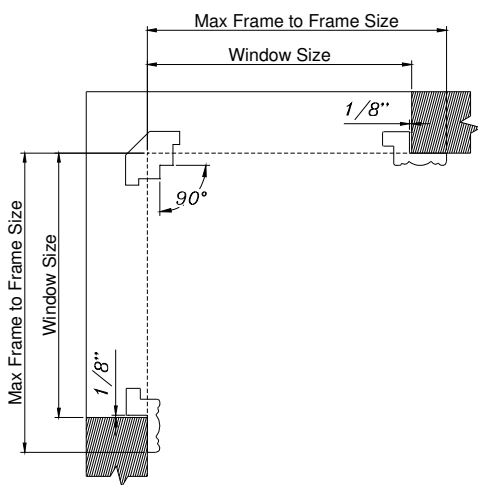

Z Frame Inside Mount
(Continuous Corner Window)

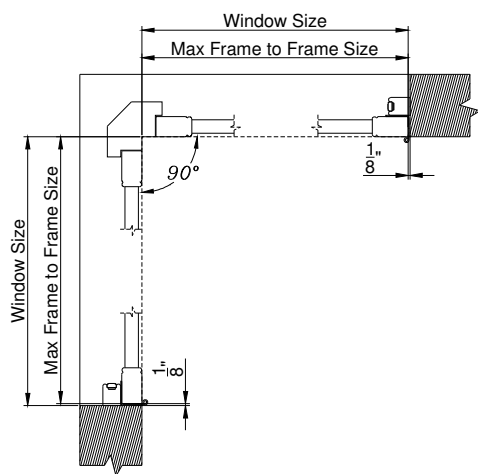

Hang Strip Inside Mount
(Continuous Corner Window)


Call for current pricing

Max Frame to Frame Size


Measuring For Bay

Bay Window


- Shutter is made as a single unit with bay post to cover
- Standard angle = 135° (Custom angle is available)
- Width will be different at different depths in window. Please decide where frames will be mounted on and as shown following diagrams.

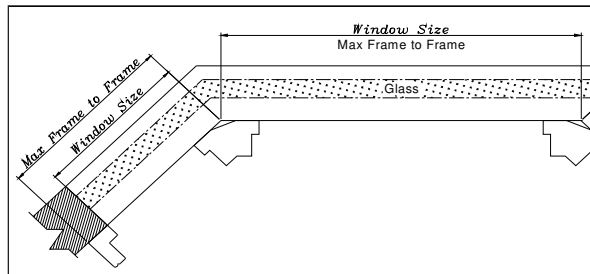


L Frame Outside Mount

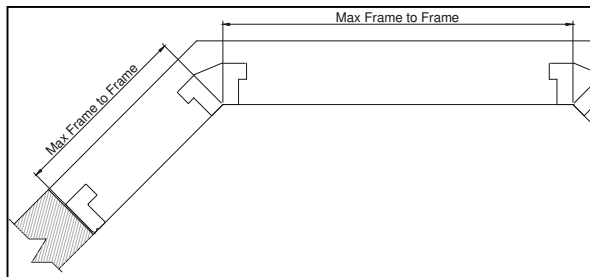

L Frame Inside Mount

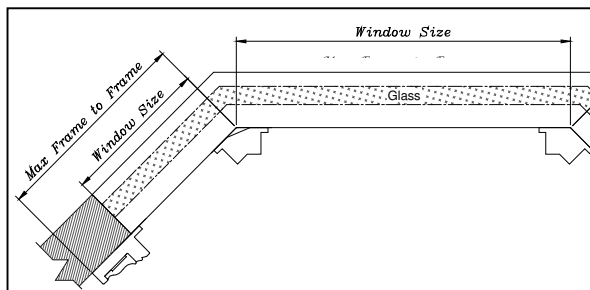


Deco Frame Outside Mount

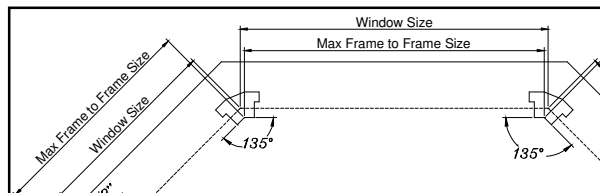


Call for current pricing

Measuring For Bay

Bay Window (con't)

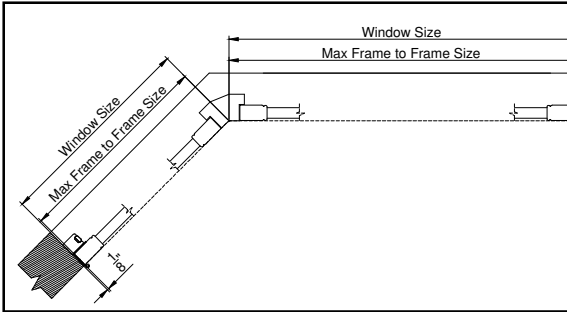

Hang Strip Inside Mount

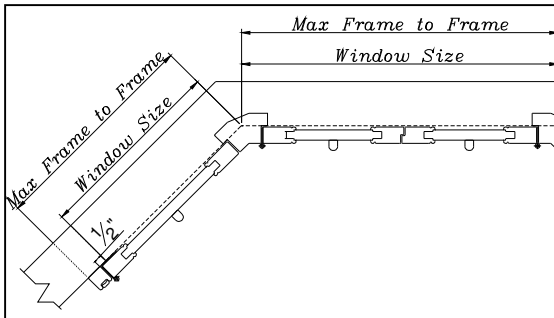


Hang Strip Outside Mo

Call for current pricing

Measuring For T Post

T Post

- T Post can be used to
 - ◇ divides window vertically to match window design
 - ◇ accommodate wider window opening/window with
 - allows shutters to be operated individually for
- Custom T Posts are available to accommodate wider frame type.

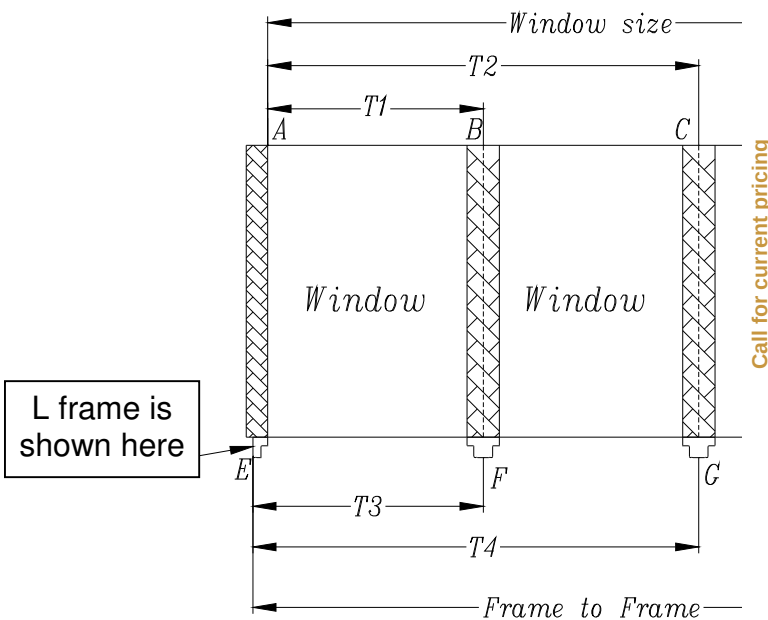

Measuring T Post location for

1. T1 = measure point A to point B
2. T2 = measure point A to point C
3. Measure from point A to point D for the o

Measuring T Post location for M


1. T3 = measure point E to point F
2. T4 = measure point E to point G
3. Measure from point E to point H for over

Measuring For T F

T Post for Hang Strip

OM

- Window size measurement:
 - ◇ T Post is notched in order to fit into the window flushed with hang strip front face.
- Max Frame to Frame measurement:
 - ◇ T Post will not be notched as the distance of the edge cannot be determined.

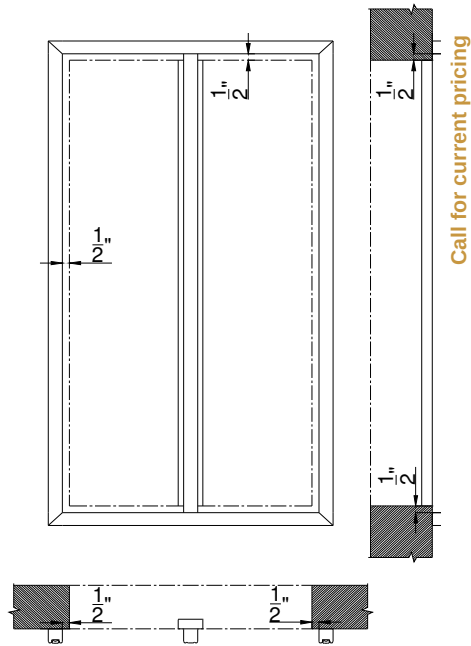


Measuring For Other V

Other Window Situation


When there is an **obstruction**:

- For the example of a side-by-side window, or when cabinet or wall, Max Frame to Frame measurement

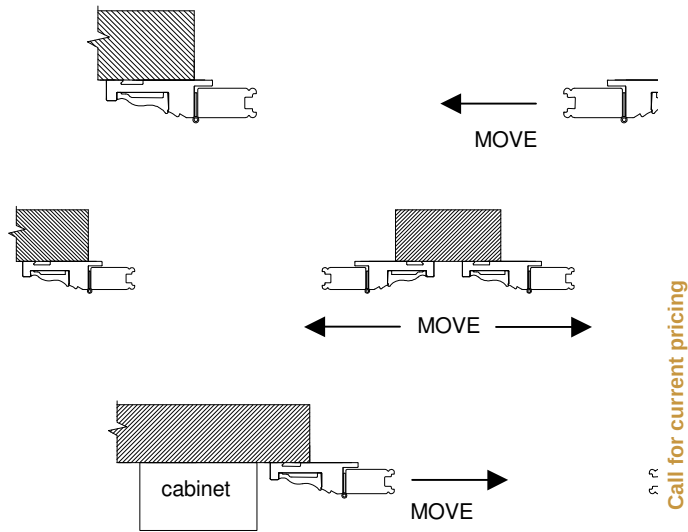

For windows with **protruding cranks**:

- Tilt out Z frame and Notch out L frame can be used for v or other obstructions.
- Tilt out Z frame requires less depth, leaving more room l

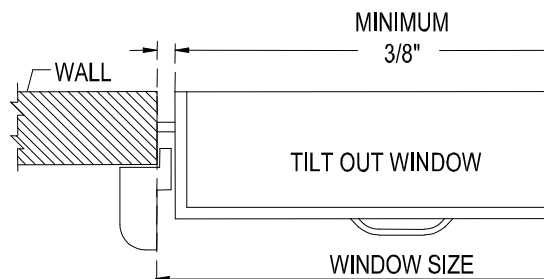


Measuring For Other V

Other Window Situation

When there is a **bullnose wall**:



- ◇ Place frame on the flat part of the wall (where t width as shown below.
- ◇ Please provide the smallest measurement for l

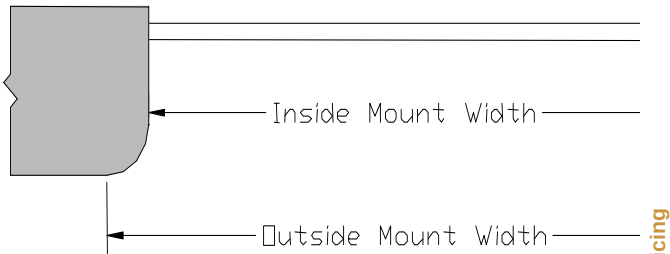

*** Please measure from the point where bulli

For windows with **molding, casing or trim**:

- ◇ Frame can be placed on the molding or besic
- ◇ Please provide Max Frame to Frame measur

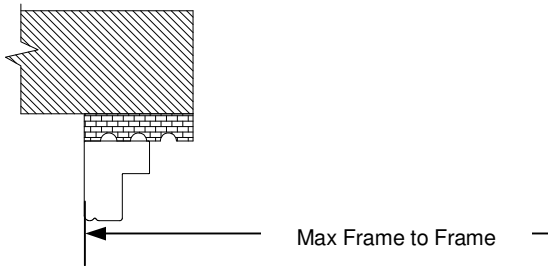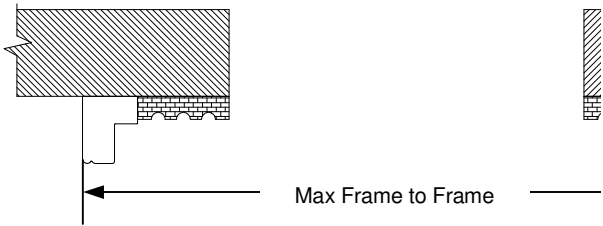

Call for current pricing

Template Require


A template is necessary if the specialty shutter is

- Inside mounted
- Will be mounted onto existing molding
- Imperfect arch
- An oval
- Not listed in the program binder


Arches

1) Perfect Arch

When the same radius with same center point
Any specialty arch shutter order without a temp

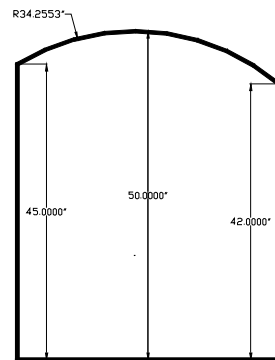


Asymmetrical

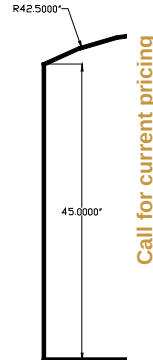


S

Call for current pricing

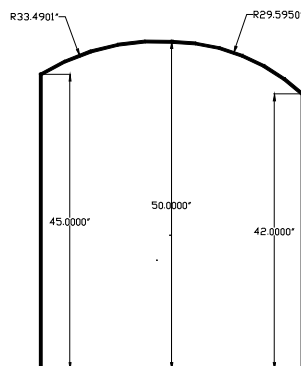

Asymmetrical



S

Template Require

Creating a template


- We recommend using a thick stock paper such as Builders Paper from Home Center/Hardware Store.
- Thinner paper may misrepresent the size and shape of the window.
- If one sheet of paper does not cover the entire arched area, you must use multiple sheets before attaching paper to the window.
- Make sure paper is large enough to extend beyond the arch's base.
- Paper should cover below the transition points, where the top of the arch begins.
- Use painter's tape to secure the paper to the wall as paint on the wall.
- Most arches can be outlined from the front. However, if necessary, you may need to use the paper and outline the arch from the back of the paper through the opening.
- The traced line should not be thicker than 1/16". Thick lines may obscure the shape of the opening. Please mention whether the outside edge of the line is for the shutters. If it is not mentioned then the outside edge of the line will be used for Inside mount shutters.
- Do not draw multiple lines. Make sure horizontal lines are horizontal.
- Always mark the transition points as well as draw and label the transition points (halves) on the paper. For circle or oval shapes, draw and label the transition points.
- For inside mounted L frames, hang strips or direct mounts, please use the template measurements provided are window size or max frame size.
- On all templates mark the front side "Front" (facing the inside of the window), arches (left or right), octagons and hexagons also need to have the front side marked on the corresponding sides of the template.
- **On the template, indicate your Company Name, Customer Name, Line item # and "Front side", so that the template can be properly identified.**
- **Please note: the measurements indicated on your template should be used in the ordering system. If not, you will have to verify via an on-site measurement.**

Call for current pricing

These requirements should be followed:

Template Require

Marking Examples

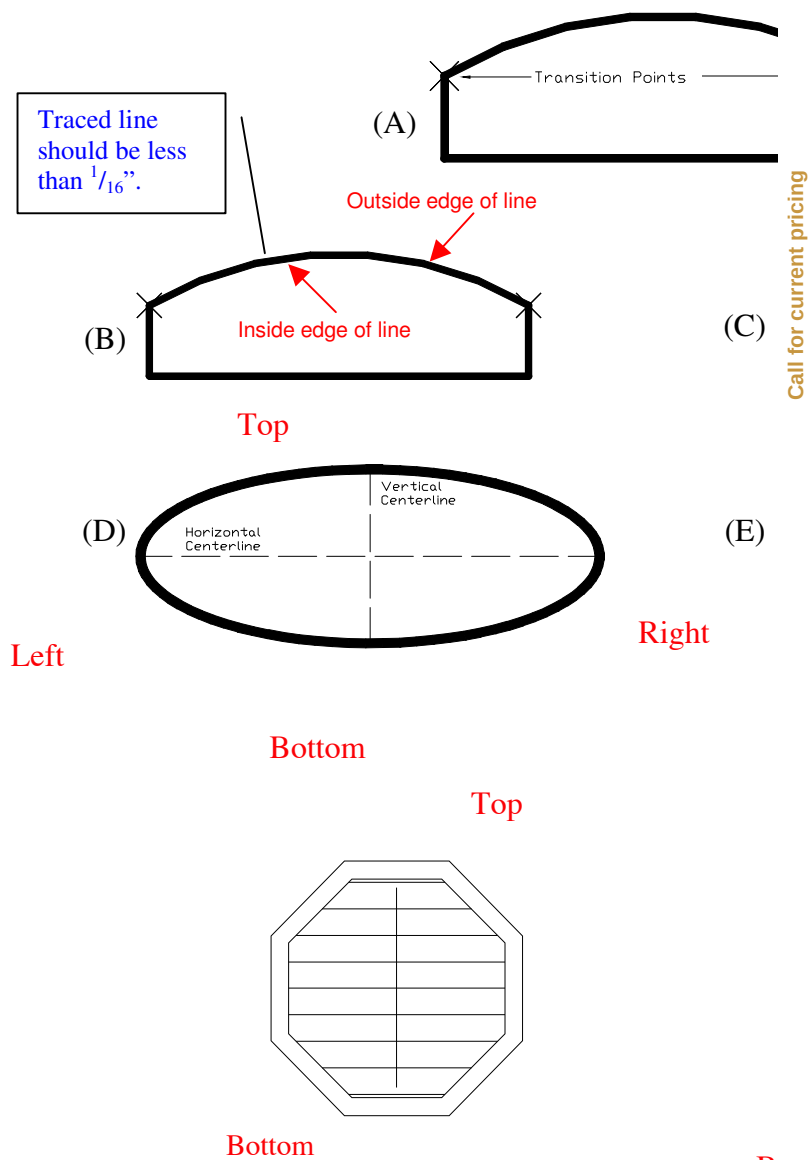

Template Require

Sending Template

- By using couriers services such as FedEx and DHL, t China within 5 to 7 business days.
- Choose a shipping method that has tracking ability. P than \$10.00 are subjected to customs duty.
- **It is not recommended to send templates via the Unite this will lead to extremely long delays.**
- If the customs duty is not cleared or paid by the custo delayed. It is advised to write: **PAPER DOCUMENT E COMMERCIAL RESALE** to avoid unnecessary custo
- A CAD drawing will be sent to you once we receive yc after we receive your final drawing confirmation.

Send your template to:

Attn: Liu Ya Yi (Shutter Factory)
Company Name: NienMade (Dong Guan) Window
Address: No. 1, Zhao Feng Industrial Sout
QiShi Town, DongGuan City, Gu
China 523517
Tel: +86 769 86716666

Call for current pricing



Norman® shutters are backed by a Lifetime Limited Wa materials or workmanship for as long as the original pur that such products were properly installed. Any resale c materials voids this warranty.

Composite shutters have a Lifetime Limited warranty co Painted and stained shutters have a 3 year warranty co may warp in high humidity areas. The manufacturer co is not covered by this warranty.

Call for current pricing

Motorization components are covered for two years fro

To Obtain Warranty Service

- Please contact the original dealer for warranty assista
- For product manuals and technical support visit Norm

Repair or remake of defective products is the sole reme event shall Norman® or its licensed distributors or dealer reinstall the product. Repairs will be made with like or si include shipping charges, costs of labor for measuring, claims must be accompanied by proof of purchase, as of the problem, location of the product, etc.

Please Note:

This warranty does not cover any conditions caused by normal wear and misuse, abuse, exposure to the elements, excessive humidity, fading, fail installation, cleaning or maintenance.

This warranty is exclusive and in lieu of all other obligations, liabilities or w