# Material Models Used in NairnMPM and NairnFEA

John Nairn

December 10, 2013

## 1 Introduction

These technical notes give details behind the constitutive laws in the material classes implemented in NairnMPM and NairnFEA.

# 2 Linear Elastic Materials

The Isotropic, TransIsotropic, and Orthotropic classes all inherit from the Elastic class and implement linear elastic materials. The constitutive law is in the Elastic class and implemented for an orthotropic material. The isotropic and transversely isotropic materials are special cases of the orthotropic material. For such a material, the 3D stiffness equation is

$$\begin{pmatrix}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{zz} \\
\tau_{xz} \\
\tau_{yz} \\
\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
C_{11} & C_{12} & C_{13} & 0 & 0 & 0 \\
C_{12} & C_{22} & C_{23} & 0 & 0 & 0 \\
C_{13} & C_{23} & C_{33} & 0 & 0 & 0 \\
0 & 0 & 0 & C_{44} & 0 & 0 \\
0 & 0 & 0 & 0 & C_{55} & 0 \\
0 & 0 & 0 & 0 & 0 & C_{66}
\end{pmatrix} \begin{pmatrix}
\varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\
\varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\
\varepsilon_{zz} - \varepsilon_{zz}^{(res)} \\
\gamma_{xz} \\
\gamma_{yz} \\
\gamma_{xy}
\end{pmatrix}$$
(1)

The elements of the **C** matrix can be found from all engineering properties. Where  $\varepsilon_{ii}^{(res)}$  are residual strains in the normal directions. Here they may be caused by either thermal expansion or moisture expansion:

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{zz}^{(res)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx} \Delta T + \beta_{xx} \Delta c \\ \alpha_{yy} \Delta T + \beta_{yy} \Delta c \\ \alpha_{zz} \Delta T + \beta_{zz} \Delta c \end{pmatrix}$$
(2)

where  $\alpha_{ii}$  and  $\beta_{ii}$  are thermal and moisture expansion coefficients, and  $\Delta T$  and  $\Delta c$  are temperature and moisture change from reference conditions. FEA has only thermal expansion while MPM may have both thermal and moisture expansion.

## 2.1 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{yy} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xy} \end{pmatrix}$$
(3)

The elements of the **Q** matrix are found from

$$Q_{xx} = \frac{E_{xx}}{1 - v_{xy}v_{yx}} \tag{4}$$

$$Q_{yy} = \frac{E_{yy}}{1 - v_{xy}v_{yx}} \tag{5}$$

$$Q_{xy} = \frac{E_{xx}v_{yx}}{1 - v_{xy}v_{yx}} = \frac{E_{yy}v_{xy}}{1 - v_{xy}v_{yx}}$$
(6)

$$Q_{xyxy} = G_{xy} \tag{7}$$

These elements are calculated in SetAnalysisProps() as C11 =  $Q_{xx}$ , C12 =  $Q_{xy}$ , C22 =  $Q_{yy}$ , and C66 =  $Q_{xyxy}$ . The thermal and moisture expansion coefficients are equal to the material thermal and moisture expansion coefficients and set as CTE1 =  $\alpha_{xx}$ , CTE2 =  $\alpha_{yy}$ , CME1 =  $\beta_{xx}$ , and CME2 =  $\beta_{yy}$ , also in SetAnalysisProps().

In plane stress analysis,  $\sigma_{zz} = 0$ , but  $\varepsilon_{zz} \neq 0$ . The out-of-plane strain is found from the 3D stiffness matrix by solving the  $\sigma_{zz}$  equation for  $\varepsilon_{zz}$ :

$$\varepsilon_{zz} = -\frac{C_{13}}{C_{33}}(\varepsilon_{xx} - \alpha_{xx}\Delta T) - \frac{C_{23}}{C_{33}}(\varepsilon_{yy} - \alpha_{yy}\Delta T) + \varepsilon_{zz}^{(res)}$$
(8)

The new terms are set in SetAnalysisProps() as C13 =  $-C_{13}/C_{33}$ , C23 =  $-C_{23}/C_{33}$ , CTE3 =  $\alpha_{zz}$ , and CME3 =  $\beta_{zz}$ .

# 2.2 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{22} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res,r)} \\ \gamma_{xy} \end{pmatrix}$$
(9)

where residual strains now depend on reduced residual strains

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \varepsilon_{xx}^{(res)} + v_{zx} \varepsilon_{zz}^{(res)} \\ \varepsilon_{yy}^{(res)} + v_{zy} \varepsilon_{zz}^{(res)} \end{pmatrix}$$
(10)

which is equivalent to using reduced expansion properties

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \\ \alpha_{yy}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \end{pmatrix}$$
(11)

The reduced expansion coefficients are

$$\alpha_{xx}^{(r)} = \alpha_{xx} + v_{zx}\alpha_{zz}, \quad \alpha_{yy}^{(r)} = \alpha_{yy} + v_{zy}\alpha_{zz}, \quad \beta_{xx}^{(r)} = \beta_{xx} + v_{zx}\beta_{zz}, \quad \beta_{yy}^{(r)} = \beta_{yy} + v_{zy}\beta_{zz}$$
(12)

These elements are calculated in SetAnalysisProps() as C11 =  $C_{11}$ , C12 =  $C_{12}$ , C22 =  $C_{22}$ , and C66 =  $C_{66}$ . The reduced expansion coefficients are set as CTE1 =  $\alpha_{xx}^{(r)}$ , CTE2 =  $\alpha_{yy}^{(r)}$ , CME1 =  $\beta_{xx}^{(r)}$ , and CME2 =  $\beta_{yy}^{(r)}$ , also in SetAnalysisProps().

In plane strain analysis,  $\varepsilon_{zz} = 0$ , but  $\sigma_{zz} \neq 0$ . The out-of-plane stress is found from the 3D stiffness matrix by setting  $\varepsilon_{zz} = 0$ :

$$\sigma_{zz} = C_{13} \left( \varepsilon_{xx} - (\alpha_{xx}^{(r)} - v_{zx}\alpha_{zz})\Delta T - (\beta_{xx}^{(r)} - v_{zx}\beta_{zz})\Delta c \right) + C_{23} \left( \varepsilon_{yy} - (\alpha_{yy}^{(r)} - v_{zy}\alpha_{zz})\Delta T - (\beta_{yy}^{(r)} - v_{zy}\beta_{zz})\Delta c \right) - C_{33}\varepsilon_{zz}^{(res)}$$

$$(13)$$

The new terms are set in SetAnalysisProps() as C13 =  $C_{13}$ , C23 =  $C_{23}$ , and C33 =  $C_{33}$ . Notice that this equation needs actual residual expansion coefficients and thus the reduced expansion coefficients must be *unreduced* by subtracting terms. For these calculations (more details in next section), the following expansion properties are set as CTE3 =  $\alpha_{zz}$ , CME3 =  $\beta_{zz}$ , prop1 =  $v_{zx}$ , and prop2 =  $v_{zy}$ .

# 2.3 Rotated Stiffness Equations in MPM

For orthotropic materials with material angle not zero, the stiffness equations must be rotated counter-clockwise by the material point angle to transpose to the analysis coordinate systems. The material point angle is initialized when the calculations starts. To account for large displacements and rotations, the angle is updated on each time step based on the rotation tensor. The angle thus always reflects the current material orientation. Thus prior to calling MPMConstitutiveLaw(), the equations are rotated (if needed) to obtain:

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xx} - \varepsilon_{xy}^{(res)} \end{pmatrix}$$
 (14)

where the rotated residual strains (which become reduced residual strains when in plane strain) are

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{xy}^{(res)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \text{alpha}[3]\Delta T + \text{beta}[3]\Delta c \end{pmatrix}$$
 (15)

The rotated elements are found by standard in-plane rotation in the counter-clockwise direction in LoadMechanicalPropertiesFEA(). Rotation is only needed for anistotropic materials. For isotropic materials, the C[][], alpha[], and beta[] elements are calculated once for zero rotation angle. The elements of C[][] are also made specific by dividing by material density. The constitutive law should only use specific properties to have the proper specific stress.

Calculation of out-of-plane values requires rotation of the 3D stiffness matrix counter-clockwise around the z axis. The results for plane stress are

$$\varepsilon_{zz} = C[4][1](\varepsilon_{xx} - \varepsilon_{xx}^{(res)}) + C[4][2](\varepsilon_{yy} - \varepsilon_{yy}^{(res)}) + C[4][3](\gamma_{xy} - \varepsilon_{xy}^{(res)}) + \varepsilon_{zz}^{(res)}$$

$$(16)$$

where

$$C[4][1] = -\left(\frac{C_{13}}{C_{33}}\cos^2\theta + \frac{C_{23}}{C_{33}}\sin^2\theta\right) = C13\cos^2\theta + C23\sin^2\theta \tag{17}$$

$$C[4][2] = -\left(\frac{C_{13}}{C_{33}}\sin^2\theta + \frac{C_{23}}{C_{33}}\cos^2\theta\right) = C13\sin^2\theta + C23\cos^2\theta \tag{18}$$

$$C[4][3] = \left(\frac{C_{13}}{C_{33}} - \frac{C_{23}}{C_{33}}\right) \sin\theta \cos\theta = -(C13 - C23) \sin\theta \cos\theta$$
 (19)

and CTE3 = alpha[4] =  $\alpha_{zz}$  and CME3 = beta[4] =  $\beta_{zz}$  hold out-of-plane thermal expansion coefficients needed to find  $\varepsilon_{zz}^{(res)}$ , which was defined earlier.

The problem in plane strain is that the calculation of  $\sigma_{zz}$  requires rotated expansion coefficients while the alpha[1] to alpha[3] and beta[1] to beta[3] have rotated reduced expansion coefficients. The solution is to define some new terms such that

$$\sigma_{zz} = C[4][1](\varepsilon_{xx} - (\varepsilon_{xx}^{(res,r)} - alpha[5]\varepsilon_{zz}^{(res)})) + C[4][2](\varepsilon_{yy} - (\varepsilon_{yy}^{(res,r)} - alpha[6]\varepsilon_{zz}^{(res)})) + C[4][3](\gamma_{xx} - (\varepsilon_{yy}^{(res,r)} - alpha[7]\varepsilon_{zz}^{(res)})) - C[4][4]\varepsilon_{zz}^{(res)}$$

$$(20)$$

where

$$\rho \, \mathbb{C}[4][1] = C_{13} \cos^2 \theta + C_{23} \sin^2 \theta = \mathbb{C}13 \cos^2 \theta + \mathbb{C}23 \sin^2 \theta \tag{21}$$

$$\rho \,C[4][2] = C_{13}\sin^2\theta + C_{23}\cos^2\theta = C13\sin^2\theta + C23\cos^2\theta \tag{22}$$

$$\rho \,C[4][3] = -(C_{13} - C_{23})\sin\theta\cos\theta = -(C13 - C23)\sin\theta\cos\theta \tag{23}$$

$$\rho \, \mathbb{C}[4][4] = C_{33} \tag{24}$$

$$alpha[5] = v_{zx} \cos^2 \theta + v_{zy} \sin^2 \theta = prop1 \cos^2 \theta + prop2 \sin^2 \theta$$
 (25)

$$alpha[6] = v_{zx} \sin^2 \theta + v_{zy} \cos^2 \theta = prop1 \sin^2 \theta + prop2 \cos^2 \theta$$
 (26)

$$alpha[7] = -2(v_{zx} - v_{zy})\sin\theta\cos\theta = -2(prop1 - prop2)\sin\theta\cos\theta$$
 (27)

Again, CTE3 =  $alpha[4] = \alpha_{zz}$  and CME3 =  $beta[4] = \beta_{zz}$  hold out-of-plane expansion coefficients needed to find  $\varepsilon_{zz}^{(res)}$ , which was defined earlier. In these terms,  $\varepsilon_{xx}^{(res,r)} - alpha[5]\varepsilon_{zz}^{(res)}$  (and similarly for (yy, 6) and (xy, 7) pairs) evaluate to the rotated, but unreduced expansion strains. The angle  $\theta$  is the material angle on the material point, which is a clockwise rotation from the analysis axes.

# 2.4 Rotated Stiffness Equations in FEA

To be added.

# 3 Plasticity Materials

For general analysis, begin with an elastic stress increment,  $d\sigma$ , given by

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{28}$$

where **C** is the stiffness matrix,  $d\boldsymbol{\varepsilon}_{tot} = d\boldsymbol{\varepsilon} - d\boldsymbol{\varepsilon}_{res}$  is total strain increment (using tensorial strains) relative to the residual strain increments. Let  $f(\boldsymbol{\sigma}, \boldsymbol{q})$  be a plastic potential function that depends on components of stress, possibly on some collection of internal variables ( $\boldsymbol{q}$ ) or other parameters. The potential function is defined such that f=0 is the yield surface, f<0 is the elastic region, and f>0 is not allowed.

First construct a trial update that assumes elastic deformation only or assumes that  $d\varepsilon_e = d\varepsilon_{tot}$ ,  $d\varepsilon_p = 0$ , and  $d\mathbf{q} = 0$  (in other words, no plastic deformation). The trial f is given by

$$f_{trial} = f(\boldsymbol{\sigma} + d\boldsymbol{\sigma}, \boldsymbol{q}) = f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot}, \boldsymbol{q})$$
(29)

If  $f_{trial} < 0$ , the deformation is elastic, the trial increment is accepted, and the analysis is done.

If  $f_{trial} > 0$ , the task is to partition the total strain into elastic and plastic strain,  $d\varepsilon_{tot} = d\varepsilon_e + d\varepsilon_p$ , such that the final f is zero. In other words, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \mathbf{C}d\boldsymbol{\varepsilon}_{p}, \boldsymbol{q} + d\boldsymbol{q}) = 0$$
(30)

By the associative flow rule, the increment in plastic strain and internal variables are assumed to be

$$d\boldsymbol{\varepsilon}_{p} = \lambda df$$
 and  $d\boldsymbol{q} = -\lambda \boldsymbol{h}(\sigma, \boldsymbol{q})$  (31)

where

$$df_i = \frac{\partial f}{\partial \sigma_i} \tag{32}$$

are the derivatives of f with respect to the components of stress and the internal variables and h is function of stress and internal variable state). Thus, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \lambda \mathbf{C}df, \boldsymbol{q} - \lambda \boldsymbol{h}) = 0$$
(33)

for  $\lambda$ . For arbitrary f, this solution may require numerical analysis.

If all increments are small, and f depends only on stress and internal variables, the problem can be expanded around  $f_{trial}$  in a Taylor series to give

$$f = f_{trial} - \lambda \left( d\mathbf{f} \cdot \mathbf{C} d\mathbf{f} + d\mathbf{f}^q \cdot \mathbf{h} \right) \tag{34}$$

where

$$df_i^q = \frac{\partial f}{\partial q_i} \tag{35}$$

Setting the new f to zero to land on the yield surface, this equation can be solved for  $\lambda$  and thus solved to partition the strain increment into elastic and plastic strain. The solution is

$$\lambda = \frac{f_{trial}}{df \cdot \mathbf{C}df + df^q \cdot \mathbf{h}} \tag{36}$$

For larger increments or more accurate solution, the problem can be solved iteratively by Newton's method with bracketing. The following method is only used in the code for anisotropic materials because special case results that seem to work well for isotropic materials are given below. Here is method used for anisotropic materials.

- 1. Find an initial guess for  $\lambda^{(2)} = \lambda$  from the Eq. (36) where df and h are found from  $\sigma_{trial}$  or stress when  $\lambda = 0$  and  $df^q$  is found from initial q.
- 2. Update stress at initial guess in two steps

$$\boldsymbol{\sigma}^{(1)} = \boldsymbol{\sigma}_{trial} - \lambda^{(2)} \mathbf{C} df(\boldsymbol{\sigma}_{trial}) \tag{37}$$

$$\boldsymbol{\sigma}^{(2)} = \boldsymbol{\sigma}_{trial} - \lambda^{(2)} \mathbf{C} df(\boldsymbol{\sigma}^{(1)})$$
 (38)

3. Find new df and h using  $\sigma^{(2)}$  followed by calculation of  $f_2$  corresponding to  $\lambda_2$ :

$$f^{(2)} = f(\sigma^{(2)}, q^{(0)} - \lambda^{(2)} h(\sigma^{(2)}))$$
(39)

4. Pick a lower  $\lambda$  and calculate f:

$$\lambda^{(1)} = \frac{\lambda^{(2)}}{2} \tag{40}$$

$$\sigma^{(1)} = \sigma_{trial} - \lambda^{(1)} \mathbf{C} df(\sigma^{(2)})$$

$$f^{(1)} = f(\sigma^{(1)}, q^{(0)} - \lambda^{(1)} h(\sigma^{(2)}))$$
(41)

$$f^{(1)} = f(\sigma^{(1)}, q^{(0)} - \lambda^{(1)} h(\sigma^{(2)}))$$
(42)

5. Expand the interval  $\lambda^{(1)}$  to  $\lambda^{(2)}$  as needed until it brackets a solution for f=0. The code follows zbrac() in "Numerical Recipes in C" (page 260). Whenever need new value for f, use:

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} df(\boldsymbol{\sigma}^{(2)})$$

$$\boldsymbol{f}^{(k)} = \boldsymbol{f}(\boldsymbol{\sigma}^{(k)}, \boldsymbol{g}^{(0)} - \lambda^{(k)} \boldsymbol{h}(\boldsymbol{\sigma}^{(2)}))$$

$$\tag{43}$$

$$f^{(k)} = f(\sigma^{(k)}, q^{(0)} - \lambda^{(k)} h(\sigma^{(2)}))$$
(44)

In other words, use the slopes calculated in step 3 above throughout the calculation. Attempts to recalculate the slope on each step tended to cause problems. If the bracketing fails, return the initial  $\lambda$  from step 1 as an approximate result.

6. Solve for  $\lambda$  using Newton-Raphson method with derivatives and bracketing following rtsafe() in "Numerical Recipes in C" (page 273). Whenever needed, find f and its derivative from

$$\sigma^{(k)} = \sigma_{trial} - \lambda^{(k)} \mathbf{C} df(\sigma^{(2)})$$

$$q^{(k)} = q^{(0)} - \lambda^{(k)} h(\sigma^{(2)})$$
(45)
$$(46)$$

$$q^{(k)} = q^{(0)} - \lambda^{(k)} h(\sigma^{(2)})$$
(46)

$$f^{(k)} = f(\sigma^{(k)}, q^{(k)})$$
 (47)

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(2)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(2)}) + df^{q}(\boldsymbol{\alpha}^{(k)}) \cdot \boldsymbol{h}(\boldsymbol{\sigma}^{(2)})\right) \tag{48}$$

Again, the key slopes are found from the initial stress guess in  $\sigma^{(2)}$ . Attempts to update slopes as solution proceeds were less stable and also slower. It might be possible to update slopes after solution, re-bracket the solution and repeat, but it may not improve accuracy much.

7. Continue until convergence.

# 3.1 $J_2$ Flow Theory for Isotropic Materials

For a special case, consider an isotropic material with isotropic hardening, a single internal variable,  $\alpha$ , and assume the plastic potential is a function only of  $J_2 = (1/2) \|\mathbf{s}\|^2$  expressed as

$$f = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha) = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}(\sigma_y - q)$$
 (49)

where **s** is the deviatoric stress tensor and  $K(\alpha)$  defines the tensile yield stress as a function of the hardening variable and possibly other variables (e.g., plastic strain rate or temperature, but not pressure). The plastic variable q and  $\alpha$  are related by

$$q = \sigma_{v} - K(\alpha) \tag{50}$$

The usual assumption is to take

$$d\alpha = \lambda \sqrt{\frac{2}{3}}$$
 which implies  $dq = -\lambda K'(\alpha) \sqrt{\frac{2}{3}}$  and  $h = K'(\alpha) \sqrt{\frac{2}{3}}$  (51)

All materials that fit this mold are handled in NairnMPM by the IsoPlasticity class. The implementation of hardening law  $(K(\alpha))$  is handled by a separate subclass of the HardeningLawBase class. Combining IsoPlasticity class with various hardening laws gives a series of material. The only materials that need to subclass IsoPlasticity is if they need a different equation of state to handle elastic parts differently.

In terms of the deviatoric stress

$$2J_2 = \|\mathbf{s}\|^2 = s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 + 2s_{xz}^2 + 2s_{yz}^2$$
 (52)

During plastic deformation, the plastic strain increment simplifies to

$$\lambda df = \lambda \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|} = \lambda \mathbf{n}$$
 (53)

where  $\mathbf{s}_{trial}$  is the deviatoric stress calculated by assuming no plastic deformation. Since  $||d\boldsymbol{\varepsilon}_p|| = ||\lambda d\boldsymbol{f}|| = \lambda$ , this assumption corresponds to

$$d\alpha = \sqrt{\frac{2}{3}} \|d\boldsymbol{\varepsilon}_p\| \tag{54}$$

where  $\sqrt{\frac{2}{3}} \|d\boldsymbol{\varepsilon}_p\|$  is known as the equivalent plastic strain increment. In other words,  $\alpha$  is the cumulative equivalent plastic strain. During uniaxial plastic deformation, the equivalent plastic strain will equal the axial plastic strain (i.e. when  $d\varepsilon_{xx} = d\varepsilon$  and  $d\varepsilon_{yy} = d\varepsilon_{zz} = -d\varepsilon/2$ ,  $\sqrt{\frac{2}{3}} \|d\boldsymbol{\varepsilon}_p\| = d\varepsilon$ ).

Once  $\lambda$  is known, the final deviatoric stress is written as

$$\mathbf{s} = \mathbf{s}_{trial} - \lambda 2G\mathbf{n} = \left(1 - \frac{\lambda 2G}{\|\mathbf{s}_{trial}\|}\right) \mathbf{s}_{trial}$$
 (55)

which leads to

$$\|\mathbf{s}\| = \|\mathbf{s}_{trial}\| - \lambda 2G$$
 and  $\frac{\mathbf{s}}{\|\mathbf{s}\|} = \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|}$  (56)

The required equation for finding  $\lambda$  thus simplifies to depend only on  $\|\mathbf{s}_{trial}\|$ , G, and hardening law:

$$f^{(k)} = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = \|\mathbf{s}_{trial}\| - \lambda^{(k)}2G - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = 0$$
 (57)

This can be solved in the iterative method above with the specific results of:

$$\frac{df^{(k)}}{d\lambda} = -2G - \sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = -2G - \frac{2K'(\alpha^{(k)})}{3}$$
 (58)

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}}$$
 (59)

where  $K'(\alpha^{(k)})$  is the derivative with respect to  $\alpha$ . This solution is implemented by hardening law classes. The HardeningLawBase class solves this equation numerically by having a subclass providing for calculation of  $K(\alpha^{(k)})$  (in GetYield()) and  $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$  (in GetKPrime()). The base class uses Newton's method with bracketing; the bracketing is needed because some yield functions are unstable by the unbracketed Newton's method. The solution is done in SolveForLambdaBracketed() as follows:

- 1. The result for  $\lambda = 0$  is known to have f > 0.
- 2. Set the plastic strain rate  $d\alpha/dt$  to 1 sec<sup>-1</sup> where dt is time step and then trial  $\lambda = d\alpha/\sqrt{2/3}$ .
- 3. Evaluate f; if it is negative,  $\lambda$  is between current value and previous order of magnitude; if it is positive, increase the strain rate by a factor or 10 and go back to beginning of this step.

If any subclass hardening law can bracket the solution faster (or find the solution with an unbracketed method), it can override SolveForLambdaBracketed() and provide a new method (which may be as simple as calling the unbracketed method in SolveForLambda() or devising a better bracketing method in BracketSolution()). For example, for a linear hardening law,  $\lambda$  can be found in a closed-form expression — when  $K(\alpha) = \sigma_Y + E_D \alpha$ , the task is to solve

$$f = \|\mathbf{s}_{trial}\| - \lambda 2G - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \left(\alpha^0 + \lambda \sqrt{\frac{2}{3}}\right)\right) = 0$$
 (60)

The analytical solution is

$$\lambda = \frac{\|\mathbf{s}_{trial}\| - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \alpha^0\right)}{2G + \frac{2E_p}{3}} \tag{61}$$

## 3.2 Plane Strain and Axisymmetric Analysis for $J_2$ Flow Theory, Isotropic Materials

Plane strain and axisymmetric analysis can follow the above analysis. For isotropic material models, it is convenient to formulate in terms of bulk and shear moduli (*K* and *G*) and track pressure and deviatoric stress. The stress update is

$$\frac{\Delta V}{V} = d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3d\varepsilon^{(res)}$$
 (62)

$$dP = -K\frac{\Delta V}{V} \tag{63}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for  $i = j = x, y, z$  (64)

$$d\tau_{xy} = ds_{xy} = Gd\gamma_{xy} \tag{65}$$

(66)

where

$$d\varepsilon_{xx}^{(tot)} = d\varepsilon_{xx} - d\varepsilon^{(res)}, \quad d\varepsilon_{yy}^{(tot)} = d\varepsilon_{yy} - d\varepsilon^{(res)}, \quad \text{and} \quad d\varepsilon_{zz}^{(tot)} = d\varepsilon_{zz} - d\varepsilon^{(res)}$$
 (67)

are the strain increments relative to the increment in residual strain (note that in plane strain,  $d\varepsilon_{zz} = 0$ , but it may be nonzero when axisymmetric). For isotropic materials, only normal residual strains exist and they are all equal to

$$d\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c \tag{68}$$

If the updated stress has f < 0, the analysis uses the new stress state.

If f > 0, the equations in the previous section are used to find  $\lambda$ . Once  $\lambda$  is known, the initial update is modified using

$$ds_{ij} = ds_{ij}^{trial} - 2Gd\varepsilon_{ij}^{p} \tag{69}$$

while the pressure update is unchanged. By including  $\sigma_{zz}$  in the calculations, the out-of-plane stress is correctly updated. In general, the plastic strain will include plastic strain in the z direction, even in plane strain. To keep zero total strain when in plane strain analysis, the out-of-plane elastic strain update will be

$$d\varepsilon_{ij}^e = -d\varepsilon_{ij}^p \tag{70}$$

For the IsoPlasticity class, K = Kred, G = Gred,  $\alpha = \text{CTE3}$ , and  $\beta = \text{CME3}$ . The default implementation assumes these are constant and they are calculated once in VeriofyAndLoadProperties(). A

subclass can implement non-linear materials two ways. To let K, G,  $\alpha$ , and  $\beta$ , depend on particle state, calculate their state-dependent values in LoadMechanicalProps() and/or GetTransportProps(). An alternative approach for more complicated materials is to replace the pressure calculation by overriding UpdatePressure(). This method is called after finding  $\Delta V/V$ , but before any other calculations. It must update the particle pressure and particle strain energy due to dilation. It should also calculate G (in Gred) if it depends on particle state. It need not calculate K (in Kred) because it is not needed after new pressure is found.

# Plane Stress Analysis for $J_2$ Flow Theory, Isotropic Materials

Unfortunately, plane stress analysis requires some addition steps and always requires numerical solution for  $\lambda$ . First, by requiring  $\sigma_{zz} = 0$ , the 3D equations can be solved to show

$$d\varepsilon_{zz}^{(tot)} = -\frac{v}{1 - v} \left( d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} \right)$$
 (71)

Using this relation, the stress update for the in-plane terms only are

$$\frac{\Delta V}{V} = d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} + d\varepsilon_{zz}^{(tot)} = \left(\frac{1 - 2v}{1 - v}\right) \left(d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)}\right)$$
(72)

$$dP = -K\frac{\Delta V}{V} \tag{73}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for  $i = j = x, y$  (74)

$$ds_{zz}^{trial} = ds_{zz} = dP (75)$$

$$ds_{zz}^{trial} = ds_{zz} = dP$$

$$d\tau_{xy}^{trial} = ds_{xy}^{trial} = Gd\gamma_{xy}$$
(75)

(77)

The IsoPlasticity class is based on K and G (in Kred and Gred). For calculation efficiency, two above terms and one term defined below are stored in variables:

psRed = 
$$\left(\frac{1-2v}{1-v}\right) = \frac{1}{\frac{K}{2G} + \frac{2}{3}}$$
 (78)

$$psLr2G = \frac{v}{1-v} = \frac{\frac{K}{2G} - \frac{1}{3}}{\frac{K}{2G} + \frac{2}{3}}$$
 (79)

psKred = 
$$\frac{E}{3(1-v)} = K * psRed = \frac{K}{\frac{K}{2G} + \frac{2}{3}}$$
 (80)

Note that plane stress analysis assumes incrementally linear-elastic response (although the linear terms can depend on particle state) and also needs to know psRed before finding the pressure change. Materials that override LoadMechanicaProps() must calculate psRed, psLr2G, and psKred along with Kred and Gred. Materials that override UpdatePressure() instead will need to deal with these terms differently. For such materials, the incremental volumetric strain passed to UpdatePressure() depends on psRed (see Eq. (72)). The best approach is to set psRed = 1 and then scale delV by the current (1-2v)/(1-v) in UpdatePressure(). That method can leave psRed = 1 (because it is no longer needed) and calculate psLr2G (for normal stress update) and psKred (for finding  $\lambda$ ) needed in subsequent calculations. It should also calculate Gred, but Kred is not needed.

When f > 0, the process (following Simo and Hughes), effectively (or equivalently) revises f using squares to be

$$f = \|\mathbf{s}\|^2 - \frac{2}{3}K^2(\alpha) = \sigma \mathbf{P}\sigma - \frac{2}{3}K^2(\alpha)$$
 (81)

where **P** is a transformation matrix on the plane stress vector  $\sigma = (\sigma_{xx}, \sigma_{yy}, \tau_{xy})$  given by

$$\mathbf{P} = \begin{pmatrix} \frac{2}{3} & -\frac{1}{3} & 0\\ -\frac{1}{3} & \frac{2}{3} & 0\\ 0 & 0 & 2 \end{pmatrix}$$
 (82)

such that  $\sigma \mathbf{P} \sigma = \|\mathbf{s}\|^2$ . The plastic strain update from this f, and using engineering shear strain, is

$$(d\varepsilon_{xx}^p, d\varepsilon_{yy}^p, d\gamma_{xy}^p) = \lambda df = \lambda \mathbf{P}\sigma \tag{83}$$

Now, in this flow theory, the total volume change due to plastic strains is zero; thus this plastic strain increment implies  $d\varepsilon_{zz}^p = -(d\varepsilon_{xx}^p + d\varepsilon_{yy}^p)$ . The full 3D plastic strain increment tensor using tensorial strains is

$$d\boldsymbol{\varepsilon}_{p} = \lambda \begin{pmatrix} \frac{1}{3} (2\sigma_{xx} - \sigma_{yy}) & \tau_{xy} & 0\\ \tau_{xy} & \frac{1}{3} (2\sigma_{yy} - \sigma_{xx}) & 0\\ 0 & 0 & -\frac{1}{3} (\sigma_{xx} + \sigma_{yy}) \end{pmatrix}$$
(84)

This traceless tensor has inner product

$$\|d\boldsymbol{\varepsilon}_p\|^2 = \lambda^2 \left(\frac{2}{3}(\sigma_{xx}^2 + \sigma_{yy}^2 - \sigma_{xx}\sigma_{yy}) + 2\tau_{xy}^2\right) = \lambda^2 \sigma \mathbf{P}\sigma$$
 (85)

$$= \lambda^2 \left( s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 \right) \tag{86}$$

Requiring  $d\alpha$  to equal the equivalent plastic strain increment (as it does in plane strain and 3D), leads

$$d\alpha = \sqrt{\frac{2}{3}}\lambda\sqrt{\sigma \mathbf{P}\sigma} \tag{87}$$

When f > 0, the task is to find the  $(n+1)^{st}$  stress and strain state in terms of the  $n^{th}$  state. In terms of the to-be-determined  $\lambda$ , the stress update is

$$\sigma_{n+1}^{trial} = \sigma_n + \mathbf{C}(d\varepsilon_{xx}^{(tot)}, d\varepsilon_{yy}^{(tot)}, d\gamma_{xy}^{(tot)})$$

$$\sigma_{n+1} = \sigma_{n+1}^{trial} - \mathbf{C}d\varepsilon_p = \sigma_{n+1}^{trial} - \mathbf{C}\lambda\mathbf{P}\sigma_{n+1}$$
(88)

$$\sigma_{n+1} = \sigma_{n+1}^{trial} - \mathbf{C}d\boldsymbol{\varepsilon}_p = \sigma_{n+1}^{trial} - \mathbf{C}\lambda \mathbf{P}\sigma_{n+1}$$
(89)

where **C** is the plane stress stiffness matrix:

$$\mathbf{C} = \begin{pmatrix} \frac{E}{1-v^2} & \frac{vE}{1-v^2} & 0\\ \frac{vE}{1-v^2} & \frac{E}{1-v^2} & 0\\ 0 & 0 & G \end{pmatrix} \quad \text{with} \quad \mathbf{C}^{-1} = \begin{pmatrix} \frac{1}{E} & -\frac{v}{E} & 0\\ -\frac{v}{E} & \frac{1}{E} & 0\\ 0 & 0 & \frac{1}{G} \end{pmatrix}$$
(90)

Solving the second equation the required stress is:

$$\sigma_{n+1} = \left[ \mathbf{C}^{-1} + \lambda \mathbf{P} \right]^{-1} \mathbf{C}^{-1} \sigma_{n+1}^{trial}$$
(91)

This general result applied to isotropic materials leads to

$$\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + \frac{E}{3(1-y)}\lambda} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)$$
(92)

$$-\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + 2G\lambda} \left( -\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)$$
(93)

$$\tau_{xy}^{(n+1)} = \frac{\tau_{xy}^{trial}}{1 + 2G\lambda} \tag{94}$$

and

$$\|\mathbf{s}\|^{2} = \sigma_{n+1} \mathbf{P} \sigma_{n+1} = \frac{\frac{1}{6} \left( \sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)^{2}}{\left( 1 + \frac{E}{3(1-\nu)} \lambda \right)^{2}} + \frac{\frac{1}{2} \left( -\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)^{2} + 2\tau_{xy}^{trial}^{2}}{(1 + 2G\lambda)^{2}}$$
(95)

The task is to find  $\lambda$  by Newton's method with the key equations being:

$$f^{(k)} = \frac{1}{2} \|\mathbf{s}^{(k)}\|^2 - \frac{1}{3} K^2(\alpha^{(k)}) = 0$$
(96)

$$\frac{df^{(k)}}{d\lambda} = -\left[\frac{E}{3(1-v)} \frac{\frac{1}{6} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2}}{\left(1 + \frac{E}{3(1-v)}\lambda^{(k)}\right)^{3}} + 2G \frac{\frac{1}{2} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^{2} + 2\tau_{xy}^{trial^{2}}}{\left(1 + 2G\lambda^{(k)}\right)^{3}}\right]$$

$$-\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} \tag{97}$$

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}} \|\mathbf{s}^{(k+1)}\|$$
 (98)

A subclass of IsoPlasticity class can implement this numerical solution simply by providing for calculation of  $K(\alpha^{(k)})$  (in GetYield()) and  $\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda}$  (in GetK2Prime()). To keep the analysis in terms of K and G, the modulus term above can be found from

$$psKred = \frac{E}{3(1-v)} = \frac{K}{\frac{K}{2c} + \frac{2}{3}}$$
 (99)

When material class is working in deviatoric stress ( $\mathbf{s} = \boldsymbol{\sigma} + P$ ), the key terms needed above are

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$
 (100)

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$

$$-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{yy}^{trial} - s_{xx}^{trial}$$

$$s_{xx}^{(n+1)} = \sigma_{xx}^{(n+1)} + P_{final}$$

$$s_{yy}^{(n+1)} = \sigma_{yy}^{(n+1)} + P_{final}$$

$$s_{zz}^{(n+1)} = P_{final}$$

$$s_{xy}^{(n+1)} = \tau_{xy}^{(n+1)}$$
(103)

$$s_{xx}^{(n+1)} = \sigma_{xx}^{(n+1)} + P_{final}$$
 (102)

$$s_{yy}^{(n+1)} = \sigma_{yy}^{(n+1)} + P_{final}$$
 (103)

$$s_{zz}^{(n+1)} = P_{final} \tag{104}$$

$$s_{xy}^{(n+1)} = \tau_{xy}^{(n+1)} \tag{105}$$

The special hardening laws that allow a closed-form expression in plane strain will still require numerical solution in plane stress. The example given above used  $K(\alpha) = \sigma_Y + E_p \alpha$ . The equation for  $\lambda$  will be quartic expression. The one key derivative needed, however, simplifies to:

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \left( \sigma_{Y} + E_{p} \alpha^{(k)} \right) E_{p} \| \mathbf{s}^{(k)} \|$$
 (106)

# 3.4 3D Analysis for $J_2$ Flow Theory, Isotropic Materials

This analysis follows the plane strain and axisymmetric section except includes direct updates for  $\gamma_{xz}$ ,  $\gamma_{yz}$ ,  $\tau_{xz}$ , and  $\tau_{yz}$ .

# 3.5 Examples of $J_2$ Flow Theory Materials

From the previous sections, analysis with materials that can use  $J_2$  flow theory only require code implementation of the yield stress  $(K(\alpha))$  and its derivatives. For plane strain or 3D, the code only needs  $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$ . To handle plane stress as well, the code needs  $\frac{1}{3} \frac{dK^2(\alpha^{(k)})}{d\lambda}$ . When the yield stress depends on strain rate, that rate is  $\dot{\varepsilon}_p = d\alpha/dt$  where dt is the time step. When evaluating in plane strain or 3D code  $\alpha'(\lambda) = \sqrt{2/3}$  and  $\dot{\varepsilon}'_p(\lambda) = \sqrt{2/3}/dt$ . In plane stress code  $\alpha'(\lambda) = \sqrt{2/3} \|\mathbf{s}\|$  and  $\dot{\varepsilon}'_p(\lambda) = \sqrt{2/3} \|\mathbf{s}\|/dt$ .

All hardening laws are implemented as subclasses of the HardeningLawBase class. The Isoplasticity class, or any of its subclasses, can use any hardening law by picking it when defining material parameters. Those the total number of available materials in this group is number of hardening laws × number of Isoplasticity classes. The following sections list the current hardening laws and the equations that are implemented.

#### 3.5.1 VonMises Material with Linear Work Hardening

$$K(\alpha) = \sigma_{v}(1 + \beta \alpha) = \sigma_{v} + E_{p}\alpha \tag{107}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} E_p \tag{108}$$

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(\sigma_y + E_p \alpha)E_p \|\mathbf{s}\|$$
 (109)

#### 3.5.2 VonMises Material with Non-Linear Work Hardening

$$K(\alpha) = \sigma_{\gamma} (1 + \beta \alpha)^n \tag{110}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n (1 + \beta \alpha)^{n-1}$$
(111)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n (1 + \beta \alpha)^{2n-1} ||\mathbf{s}||$$
 (112)

#### 3.5.3 VonMises Material with Alternate Non-Linear Work Hardening

$$K(\alpha) = \sigma_{\gamma}(1 + \beta \alpha^{n}) \tag{113}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n \alpha^{n-1}$$
 (114)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n \alpha^{n-1} (1 + \beta \alpha^{n}) \|\mathbf{s}\|$$
 (115)

#### 3.5.4 Johnson-Cook

$$K(\alpha) = (A + B\alpha^n) \left( 1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) \left( 1 - (T^*)^m \right)$$
 (116)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \left[ Bn\alpha^{n-1} \left( 1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) + \frac{C}{\dot{\varepsilon}_p dt} (A + B\alpha^n) \right] \left( 1 - (T^*)^m \right) \tag{117}$$

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(A+B\alpha^n)\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right)\left(1-(T^*)^m\right)^2$$

$$\left[Bn\alpha^{n-1}\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right) + \frac{C}{\dot{\varepsilon}_p dt}(A+B\alpha^n)\right] \|\mathbf{s}\|$$
 (118)

This law has numerical issues as  $\dot{\varepsilon}_p \to 0$  because the  $\ln \dot{\varepsilon}_p$  can cause the yield stress to be nonphysically negative. One solution is to truncate at  $\dot{\varepsilon}_{p,min}$  within  $\dot{\varepsilon}_0 e^{-1/C} < \dot{\varepsilon}_{p,min} < \dot{\varepsilon}_0$ ; the lower limit is when the rate term becomes zero and the upper is when it is one. Below  $\dot{\varepsilon}_{p,min}$ , the rate term can be taken as a constant using that minimum strain rate. The resulting yield functions are

$$K(\alpha) = (A + B\alpha^n) \left( 1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left( 1 - (T^*)^m \right)$$
 (119)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} Bn\alpha^{n-1} \left( 1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left( 1 - (T^*)^m \right)$$
(120)

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}Bn\alpha^{n-1}(A+B\alpha^n)\left(1+C\ln\frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0}\right)^2\left(1-(T^*)^m\right)^2||\mathbf{s}|| \qquad (121)$$

## 3.6 Anisotropic 2D Plane Strain and Axisymmetric Analysis

In general plane strain or axisymmetric analysis, the matrix equation for update is:

$$d\sigma = \mathbf{C}d\varepsilon_{tot} + \varepsilon_{excess} \tag{122}$$

The key terms are

$$\mathbf{C} = \begin{pmatrix} \mathbf{C}[1][1] & \mathbf{C}[1][2] & \mathbf{C}[1][3] & 0 \\ \mathbf{C}[1][2] & \mathbf{C}[2][2] & \mathbf{C}[2][3] & 0 \\ \mathbf{C}[4][1] & \mathbf{C}[4][2] & \mathbf{C}[4][3] & \mathbf{C}[4][4] \\ \mathbf{C}[1][3] & \mathbf{C}[2][3] & \mathbf{C}[3][3] & 0 \end{pmatrix}$$

$$(123)$$

$$d\varepsilon_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{zz} - \varepsilon_{zz}^{(res)}, d\gamma_{xy} - \varepsilon_{xy}^{(res,r)}\right)$$
(124)

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{xy}}\right)$$
(125)

$$\begin{pmatrix}
\varepsilon_{xx}^{(res,r)} \\
\varepsilon_{yy}^{(res,r)} \\
\varepsilon_{zz}^{(res)} \\
\varepsilon_{xy}^{(res,r)}
\end{pmatrix} = \begin{pmatrix}
\operatorname{alpha}[1]\Delta T + \operatorname{beta}[1]\Delta c \\
\operatorname{alpha}[2]\Delta T + \operatorname{beta}[2]\Delta c \\
\alpha_{zz}\Delta T + \beta_{zz}\Delta c \\
\operatorname{alpha}[3]\Delta T + \operatorname{beta}[3]\Delta c
\end{pmatrix}$$
(126)

The term  $d\varepsilon_{zz}$  is zero for plane strain, but incremental hoop strain of axisymmetry, while the term  $\mathbf{c}_{excess}$  is zero for axisymmetry but is needed for plane strain analysis to compensate for use of reduced thermal and moisture expansion coefficients in the x-y terms. The only non-zero component is:

$$c_{excess}[3] = (C[4][1]alpha[5] + C[4][2]alpha[6] + C[4][3]alpha[7])\varepsilon_{xx}^{(res)}$$
 (127)

Note that in the code, alpha[5] to alpha[7] hold out-of=plane Poisson ratios (or rotated ratios) and not thermal expansion coefficient. This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \quad d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \quad d\gamma_{xy}^{(p)} = \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(p)} = \lambda df_{zz}$$
 (128)

The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(e)} = -\lambda df_{zz}$$
 (129)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\gamma_{xx}^{(e)} - \varepsilon_{xy}^{(res,r)} \end{pmatrix}$$
(130)

For plane strain analysis,  $d\sigma_{zz}$  is similar to an elastic material using elastic strains:

$$d\sigma_{zz} = C[4][1] \left( d\varepsilon_{xx}^{(e)} - (\varepsilon_{xx}^{(res,r)} - alpha[5]\varepsilon_{zz}^{(res)}) \right) + C[4][2] \left( d\varepsilon_{yy}^{(e)} - (\varepsilon_{yy}^{(res,r)} - alpha[6]\varepsilon_{zz}^{(res)}) \right)$$

$$+ C[4][3] \left( d\gamma_{xx}^{(e)} - (\varepsilon_{xy}^{(res,r)} - alpha[7]\varepsilon_{zz}^{(res)}) \right) - C[4][4](d\varepsilon_{zz}^{(e)} - \varepsilon^{(res)})$$

$$(131)$$

The  $d\varepsilon_{zz}^{(e)}$  term may be non zero even though it is plane strain. The total z direction strain is zero because  $d\varepsilon_{zz}^{(e)} = -d\varepsilon_{zz}^{(p)}$ .

#### 3.7 Anisotropic 2D Plane Stress Analysis

Plane stress analysis is currently not supported for anisotropic plastic materials.

# 3.8 Anisotropic 3D Analysis

In 3D strain analysis, the matrix equation for update is

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{132}$$

The key terms are

$$\mathbf{C} = \mathbf{C}[\mathbf{i}][\mathbf{j}] \quad \text{for } \mathbf{i} = 0,5 \text{ and } \mathbf{j} = 0,5$$

$$d\boldsymbol{\varepsilon}_{tot} = \left( d\boldsymbol{\varepsilon}_{xx} - \boldsymbol{\varepsilon}_{xx}^{(res,r)}, d\boldsymbol{\varepsilon}_{yy} - \boldsymbol{\varepsilon}_{yy}^{(res,r)}, d\boldsymbol{\varepsilon}_{yy} - \boldsymbol{\varepsilon}_{zz}^{(res)}, d\boldsymbol{\gamma}_{yz} - \boldsymbol{\varepsilon}_{yz}^{(res,r)}, d\boldsymbol{\gamma}_{xz} - \boldsymbol{\varepsilon}_{xz}^{(res,r)}, d\boldsymbol{\gamma}_{xy} - \boldsymbol{\varepsilon}_{xy}^{(res,r)} \right)$$

$$(133)$$

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{yz}, df_{xz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{yz}}, \frac{\partial f}{\tau_{xz}}, \frac{\partial f}{\tau_{xy}}\right) (135)$$

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \\ \varepsilon_{yz}^{(res,r)} \\ \varepsilon_{yz}^{(res,r)} \\ \varepsilon_{xz}^{(res,r)} \\ \varepsilon_{xx}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \operatorname{alpha}[0]\Delta T + \operatorname{beta}[0]\Delta c \\ \operatorname{alpha}[1]\Delta T + \operatorname{beta}[1]\Delta c \\ \operatorname{alpha}[2]\Delta T + \operatorname{beta}[2]\Delta c \\ \operatorname{alpha}[3]\Delta T + \operatorname{beta}[3]\Delta c \\ \operatorname{alpha}[3]\Delta T + \operatorname{beta}[4]\Delta c \\ \operatorname{alpha}[4]\Delta T + \operatorname{beta}[4]\Delta c \\ \operatorname{alpha}[5]\Delta T + \operatorname{beta}[5]\Delta c \end{pmatrix}$$

$$(136)$$

This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \ d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \ d\varepsilon_{zz}^{(p)} = \lambda df_{zz}, \ d\gamma_{yz}^{(p)} = \lambda df_{yz}, \ d\gamma_{xz}^{(p)} = \lambda df_{xz}, \ d\gamma_{xy}^{(p)} = \lambda df_{xy}, \ (137)$$

The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\varepsilon_{zz}^{(e)} = d\varepsilon_{yy} - \lambda df_{zz}$$
(138)

$$d\gamma_{yz}^{(e)} = d\gamma_{yz} - \lambda df_{yz}, \quad d\gamma_{xz}^{(e)} = d\gamma_{xz} - \lambda df_{xz}, \quad \text{and} \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}$$
 (139)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\sigma_{zz} \\ d\tau_{yz} \\ d\tau_{xz} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[i][j] & \text{for } i = 0, 5 \text{ and } j = 0, 5 \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yz}^{(res,r)} \\ d\gamma_{yz}^{(e)} - \varepsilon_{yz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \varepsilon_{xz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \varepsilon_{xz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \varepsilon_{xz}^{(res,r)} \end{pmatrix}$$

$$(140)$$

# 3.9 Quadratic Hill Criterion

The quadratic Hill yield criterion can implement anisotropic plasticity and hardening terms can be added to include aniostropic hardening as well. For 2D plane strain analysis, one version of Hill yield function with arbitrary hardening function (defined later) reduces to:

$$f = \sqrt{F\left(\overline{\sigma_{yy}} - \overline{\sigma_{zz}}\right)^{2} + G\left(\overline{\sigma_{xx}} - \overline{\sigma_{zz}}\right)^{2} + H\left(\overline{\sigma_{yy}} - \overline{\sigma_{xx}}\right)^{2} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2}} - g(\boldsymbol{\alpha})$$

$$= \left[ (G+H)\overline{\sigma_{xx}}^{2} + (F+H)\overline{\sigma_{yy}}^{2} + (F+G)\sigma_{zz}^{2} - 2F\overline{\sigma_{yy}}\sigma_{zz} - 2G\overline{\sigma_{xx}}\sigma_{zz} - 2H\overline{\sigma_{xx}}\sigma_{yy} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2} \right]^{1/2} - g(\boldsymbol{\alpha})$$

$$(142)$$

$$= \sqrt{\overline{\sigma} \cdot \mathbf{A} \overline{\sigma}} - g(\mathbf{a}) \tag{143}$$

where  $\overline{\sigma} = (\overline{\sigma_{xx}}, \overline{\sigma_{yy}}, \overline{\sigma_{zz}}, \overline{\tau_{yz}}, \overline{\tau_{xx}}, \overline{\tau_{xy}})$ ,  $g(\alpha)$  is some hardening function of internal variables, and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 & 0 & 0 \\ -H & F+H & -F & 0 & 0 & 0 \\ -G & -F & F+G & 0 & 0 & 0 \\ 0 & 0 & 0 & 2L & 0 & 0 \\ 0 & 0 & 0 & 0 & 2M & 0 \\ 0 & 0 & 0 & 0 & 0 & 2N \end{pmatrix}$$
 (144)

An overbar is the stress in the material coordinates. It is found from

$$\overline{\sigma} = R_x R_y R_z \sigma = R_\sigma \sigma \tag{145}$$

where  $\mathbf{R}_x$ ,  $\mathbf{R}_y$ , and  $\mathbf{R}_z$  are rotation matrices about each axis for rotation of stress in the clockwise direction. The corresponding equation in analysis axis coordinates for the yield function takes the form

$$f = \sqrt{\sigma \mathbf{R}_{\sigma}^{T} \cdot \mathbf{A} \mathbf{R}_{\sigma} \sigma} - g(\alpha) = \sqrt{\sigma \mathbf{A}' \sigma} - g(\alpha)$$
(146)

where  $\mathbf{A}' = \mathbf{R}_{\sigma}^T \mathbf{A} \mathbf{R}_{\sigma}$  is the  $\mathbf{A}$  matrix rotated in the counter-clockwise direction from the material axes to the analysis axes (the same transformation used for compliance matrices).

For 2D, plane strain,  $\overline{\sigma} = (\overline{\sigma_{xx}}, \overline{\sigma_{yy}}, \sigma_{zz}, \overline{\tau_{xy}})$  (i.e.,  $\sigma_{zz}$  does not rotate) and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 \\ -H & F+H & -F & 0 \\ -G & -F & F+G & 0 \\ 0 & 0 & 0 & 2N \end{pmatrix}$$
 (147)

The only rotation needed is clockwise rotations around the z axis:

$$\overline{\boldsymbol{\sigma}} = \mathbf{R}_{\sigma} \boldsymbol{\sigma} = \mathbf{R}_{z} \boldsymbol{\sigma} \quad \text{where} \quad \mathbf{R}_{z} = \begin{pmatrix} \cos^{2} \theta & \sin^{2} \theta & 0 & -2\cos\theta\sin\theta \\ \sin^{2} \theta & \cos^{2} \theta & 0 & 2\cos\theta\sin\theta \\ 0 & 0 & 1 & 0 \\ \sin\theta\cos\theta & -\sin\theta\cos\theta & 0 & \cos^{2}\theta - \sin^{2}\theta \end{pmatrix}$$
(148)

is the 2D engineering stress tensor, clockwise rotation matrix.

The elements of the **A** matrix are physically defined by directionally dependent yield stresses prior to any hardening:

$$(G+H) = \frac{1}{(\sigma_{yy}^{Y})^2} \qquad (F+H) = \frac{1}{(\sigma_{yy}^{Y})^2} \qquad (F+G) = \frac{1}{(\sigma_{zz}^{Y})^2}$$
 (149)

$$F = \frac{1}{2} \left( \frac{1}{(\sigma_{yy}^Y)^2} + \frac{1}{(\sigma_{zz}^Y)^2} - \frac{1}{(\sigma_{xx}^Y)^2} \right) \qquad G = \frac{1}{2} \left( \frac{1}{(\sigma_{zz}^Y)^2} + \frac{1}{(\sigma_{xx}^Y)^2} - \frac{1}{(\sigma_{yy}^Y)^2} \right)$$
(150)

$$H = \frac{1}{2} \left( \frac{1}{(\sigma_{xx}^{Y})^{2}} + \frac{1}{(\sigma_{yy}^{Y})^{2}} - \frac{1}{(\sigma_{zz}^{Y})^{2}} \right) \quad L = \frac{1}{2(\tau_{yz}^{Y})^{2}} \quad M = \frac{1}{2(\tau_{xz}^{Y})^{2}} \quad N = \frac{1}{2(\tau_{xy}^{Y})^{2}} \quad (151)$$

To make physical sense, the **A** matrix must be positive semidefinite (so square root will always be of a non-negative number). The determinant of **A** is zero, but it can be diagonalized using its eigenvalues

and three linearly independent eigenvectors. The calculations were done separately, but show that for **A** to be positive semidefinite, requires both:

$$F^{2} + G^{2} + H^{2} - FH - GH - FG \ge 0$$
(152)

$$F + G + H \ge \sqrt{F^2 + G^2 + H^2 - FH - GH - FG}$$
 (153)

Substituting yield stresses, the conditions can be recast as

$$\left(\frac{1}{\sigma_{xx}^{Y}} - \frac{1}{\sigma_{yy}^{Y}}\right)^{2} \le \frac{1}{(\sigma_{zz}^{Y})^{2}} \le \left(\frac{1}{\sigma_{xx}^{Y}} + \frac{1}{\sigma_{yy}^{Y}}\right)^{2} \tag{154}$$

$$\left(\frac{1}{\sigma_{xx}^{Y}} - \frac{1}{\sigma_{zz}^{Y}}\right)^{2} \le \frac{1}{(\sigma_{yy}^{Y})^{2}} \le \left(\frac{1}{\sigma_{xx}^{Y}} + \frac{1}{\sigma_{zz}^{Y}}\right)^{2} \tag{155}$$

$$\left(\frac{1}{\sigma_{zz}^Y} - \frac{1}{\sigma_{yy}^Y}\right)^2 \le \frac{1}{(\sigma_{xx}^Y)^2} \le \left(\frac{1}{\sigma_{zz}^Y} + \frac{1}{\sigma_{yy}^Y}\right)^2 \tag{156}$$

Two special cases are mentioned. If one yield stress is infinite (e.g.,  $\sigma_{xx}^Y = \infty$ ), the other two must be equal (e.g.,  $\sigma_{yy}^Y = \sigma_{zz}^Y$ ). If two yield stresses are related by  $\sigma_{yy}^Y/\sigma_{xx}^Y = R$  then the other is bracketed by:

$$\frac{\sigma_{yy}^Y}{(1+R)} \le \sigma_{zz}^Y \le \frac{\sigma_{yy}^Y}{|1-R|} \tag{157}$$

For examples: if R=1 then  $\sigma_{yy}^Y/2 \le \sigma_{zz}^Y \le \infty$ ; if R=0 or  $R=\infty$  then  $\sigma_{yy}^Y=\sigma_{zz}^Y$ . For an isotropic material (*i.e.*, the Von Mises criterion), the key terms are

$$(G+H) = (F+H) = (F+G) = 2F = 2G = 2H = \frac{1}{\sigma_V^2}, \quad L = M = N = \frac{1}{2\sigma_V^2} = \frac{3}{2\sigma_V^2}$$
 (158)

leading to an isotropic material with  $K(\alpha) = \sigma_Y + E_p \alpha$  if  $g(\alpha) = 1 + (E_p/\sigma_Y)\alpha$ .

The derivatives with respect to analyses axes are found by differentiating with respect to rotated stress (see Eq. 143) and then transforming the result by strain rotation in the counter-clockwise direction back to the analysis axes. The result is

$$df = \frac{\mathbf{R}_{\varepsilon}^{-1} \mathbf{A} \overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A} \overline{\sigma}}} \tag{159}$$

where  $\mathbf{R}_{\varepsilon}$  is the rotation matrix for clockwise strain rotation. Alternatively, differentiating in analysis coordinates (see Eq. 146) gives:

$$df = \frac{\mathbf{A}'\sigma}{\sqrt{\sigma \mathbf{A}'\sigma}} = \frac{\mathbf{R}_{\sigma}^T \mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A}\overline{\sigma}}}$$
(160)

Because  $\mathbf{R}_{\varepsilon}^{-1}=\mathbf{R}_{\sigma}^{T},$  the two results are the same. In 2D, the results reduce to

$$df = \frac{\mathbf{R}^{-1}\mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A}\overline{\sigma}}} \quad \text{where} \quad \mathbf{R} = \begin{pmatrix} \cos^{2}\theta & \sin^{2}\theta & 0 & -\cos\theta\sin\theta \\ \sin^{2}\theta & \cos^{2}\theta & 0 & \cos\theta\sin\theta \\ 0 & 0 & 1 & 0 \\ 2\sin\theta\cos\theta & -2\sin\theta\cos\theta & 0 & \cos^{2}\theta - \sin^{2}\theta \end{pmatrix}$$
(161)

In the material axis system, the full plastic strain increment is

$$\overline{d\varepsilon_p} = \lambda \mathbf{R}_{\varepsilon} df = \frac{\mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A}\overline{\sigma}}}$$
 (162)

This strain results in a traceless tensor (i.e., only deviatoric plastic strains):

$$d\boldsymbol{\varepsilon}_{p} = \frac{\lambda}{\sqrt{\overline{\boldsymbol{\sigma}} \cdot \mathbf{A} \overline{\boldsymbol{\sigma}}}} \begin{pmatrix} \frac{\overline{\sigma_{xx}}}{(\sigma_{xx}^{Y})^{2}} - H \overline{\sigma_{yy}} - G \overline{\sigma_{zz}} & N \overline{\tau_{xy}} & M \overline{\tau_{xz}} \\ N \overline{\tau_{xy}} & -H \overline{\sigma_{xx}} + \frac{\overline{\sigma_{yy}}}{(\sigma_{yy}^{Y})^{2}} - F \overline{\sigma_{zz}} & L \overline{\tau_{yz}} \\ M \overline{\tau_{xz}} & L \overline{\tau_{yz}} & -G \overline{\sigma_{xx}} - F \overline{\sigma_{yy}} + \frac{\overline{\sigma_{zz}}}{(\sigma_{zz}^{Y})^{2}} \end{pmatrix}$$

$$(163)$$

We assume hardening is a function only of equivalent plastic strain and thus  $\alpha$  is cumulative plastic strain. Perhaps a general anisotropic material would have something different, but this assumption is common in metals. The update in alpha is thus

$$d\alpha = \sqrt{\frac{2}{3}} \|d\varepsilon_p\| = \lambda \sqrt{\frac{2}{3} \left( df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
 (164)

Thus the update vector is

$$\mathbf{h} = -\sqrt{\frac{2}{3} \left( df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(165)

and

$$df^{\alpha} \cdot \mathbf{h} = g'(\alpha) \sqrt{\frac{2}{3} \left( df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(166)

Some possible hardening laws are

$$g(\alpha) = (1 + K\alpha)^n, \ g'(\alpha) = nK(1 + K\alpha)^{n-1}, \ g'(0) = nK, \ K_n = \frac{(1 + K_1\alpha)^{\frac{1}{n}} - 1}{\alpha}$$
(167)

$$g(\alpha) = 1 + K\alpha^{n}, \ g'(\alpha) = nK\alpha^{n-1} \ g'(0) = 0 \ (n \neq 1), \ K_{n} = (K_{1}\alpha)^{\frac{1}{n}}$$
(168)

These two laws are identical when n = 1 and give linear hardening. If  $K_1$  is the hardening term when n=1 and then a new value of n is selected, the first law can preserve the initial slope, g'(0), by keeping the product constant or setting  $K_n = K_1/n$ ; the second law will always have zero slope when  $n \neq 1$  and thus cannot match the linear slope. The last equations for  $K_n$  give the value of  $K_n$  for new n to match the amount of hardening that occurs up to any specified  $\alpha$  between the n = 1 and n laws.

The numerical solution uses the following iterative equations

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}^{trial} - \lambda^{(k)} \mathbf{C} df(\lambda^{(k)}) \tag{169}$$

$$\boldsymbol{h}^{(k)} = -\mathbf{R}d\boldsymbol{f}(\boldsymbol{\sigma}^{(k)}) \tag{170}$$

$$f^{(k)} = f(\boldsymbol{\sigma}^{(k)}, \boldsymbol{\alpha}^{(k)}) \tag{171}$$

$$f^{(k)} = f(\boldsymbol{\sigma}^{(k)}, \boldsymbol{\alpha}^{(k)})$$

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(k)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(k)}) + df^{\alpha} \cdot \boldsymbol{h}^{(k)}\right)$$
(171)

$$\lambda^{(k+1)} = \lambda^{(k)} - \frac{f^{(k)}}{df^{(k)}/d\lambda}$$
 (173)

$$\alpha^{(k+1)} = \alpha^0 - \lambda^{(k+1)} h^{(k)}$$
 (174)

# 4 Thermodynamics of Deformation

In MPM, all thermodynamics quantities will vary with position by depending on particle state. Work is done on the particle by stresses and strains and a particle can exchange heat with neighboring particles by conduction or with exterior by thermal boundary conditions. NairnMPM can run in four different modes. The entire system can be "isolated" or "nonisolated" where an isolated system has no thermal boundary condition that cause heat input or temperature rises on any particles. A nonisolated system has thermal boundary conditions. Similarly, the particles can be "isolated" or "nonisolated," which refer to conduction being off (isolated) or on (nonisolated). For each of these modes, the particles can be locally adiabatic or locally isothermal, where adiabatic means all heat generated by material mechanisms causes a temperature change and isothermal means all heat generated by material mechanisms is lost to the global exterior.

In MPM, we can treat each particle as a "system" with all other particles and boundary conditions being the "exterior." The differential in particle internal energy per unit mass, U, with dissipative and irreversible processes is (Fung, page 347)

$$dU = dw + dq = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + T d_e S \tag{175}$$

where dw is work and dq is heat exchanged with the "exterior." The second form associates work with stress power or strain energy, where  $d\varepsilon$  is the incremental strain tensor (relative to a stress free state if there are residual strains), and heat flow with  $dq = T d_e S$  where  $d_e S$  is the change in entropy (per unit mass) due to exchange of energy with the exterior. The full change in entropy per unit mass is

$$dS = d_e S + d_i S = \frac{C_V dT_{ext}}{T} - \frac{T_0}{T} \frac{\mathsf{M} \cdot d\varepsilon}{\rho} + d_i S \tag{176}$$

where  $C_V$  is per unit mass, M is the stress-temperature tensor, and  $d_iS \ge 0$  is entropy change per unit mass due to internal irreversible processes that do not exchange energy with exterior. The second term is entropy product to to expansion of compression in thermoelasticity (see Carlson). If all particles were the system, exchange of heat by conduction would be part of  $d_iS$ , but when each particle is its owns system, heat flow is part of  $d_eS = C_V dT_{ext}/T$ . Certain material mechanisms, such as plasticity, might contribute to  $d_iS$ , but would not be associated with heat flow.

The Helmholtz free energy per unit mass is

$$A = U - TS \tag{177}$$

with differential

$$dA = dU - TdS - SdT = \frac{1}{\rho} \sigma \cdot d\varepsilon + Td_e S - TdS - SdT = \frac{1}{\rho} \sigma \cdot d\varepsilon - SdT - Td_i S$$
 (178)

The goal of NairnMPM is to track the most appropriate energies (see below). The challenge is dealing with material-specific dissipation or other isoentropic temperature changes while also allowing for external heating through thermal boundary conditions and heat conduction (i.e., dealing with all simulation modes described above).

# 4.1 Locally Adiabatic

For a locally adiabatic process, dq = 0 for material-specific mechanisms, but the temperature might increase. Let  $dT_{ad}$  be the temperature change that happens during an adiabatic process in the material

model. From above energy flow and adiabatic term from thermoelasticity, which happens even in elastic materials with no energy disspation, is:

$$dT_{ad}^{0} = T_{0} \frac{\mathsf{M} \cdot d\varepsilon}{\rho C_{V}} \tag{179}$$

For an isotropic material,  $\mathbf{M} \cdot d\varepsilon = -3K\alpha\Delta V/V$  leading to

$$dT_{ad}^{0} = -T_{0} \frac{3K\alpha}{\rho C_{V}} \frac{\Delta V}{V} = -T_{0} J \frac{K}{K_{0}} \gamma_{0} \frac{\Delta V}{V} = -T_{0} \frac{K}{K_{0}} \gamma_{0} \frac{\Delta V}{V_{0}}$$
(180)

where  $J = V/V_0 = \rho_0/\rho$  and

$$\gamma_0 = \frac{3K_0\alpha}{\rho_0 C_V} \tag{181}$$

This result assume thermal expansion coefficient is a constant.

In general problems, T might also increase due to exchange of heat with the exterior (conduction of thermal loading). Let those temperature changes be  $dT_{ext}$ . The change in internal energy becomes

$$dU = \frac{1}{\rho} \sigma \cdot d\varepsilon + C_V dT_{ext}$$
 (182)

But in MPM, the dT on one particle for any given time step will be  $dT_{ad} + dT_{ext}$  and there is no way to separate them in the dT calculated in each time step. One solution is to separate them in the particle strain update where  $dT_{ad}$  is known:

$$dU = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} - C_V dT_{ad} + C_V (dT_{ad} + dT_{ext}) = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + C_V (dT - dT_{ad})$$
 (183)

In a simulation,  $dT_{ad}$  can be calculated for a given time step and subtracted from U. It will be added back on the next time step through the contribution of  $dT_{ad}$  to dT and this results in net dq=0 due to material mechanisms. For example, plasticity might dissipate energy  $d\Phi$  that causes temperature change of  $dT_{ad}=d\Phi/C_V$  (plasticity might have other energy contributing to  $d_iS$  (?) and may or may not convert all dissipated energy to a temperature rise). The  $d\Phi$  is subtracted when it occurs, but will be added back on the next time step through its contribution to the  $C_V dT$  term. The total  $C_V dT_{ad}$  is sum of adiabatic temperature rises (see above) and dissipated energy by any material mechanisms.

Instead of tracking only total U, a material could track total work, w, and heat energy, q, using updates

$$dw = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\varepsilon$$
 and  $dq = C_V (dT - dT_{ad})$  (184)

When needed, U = w + q.

For tracking Helmholtz energy,  $T d_e S = dq = 0$ , giving

$$dA = \frac{1}{\rho} \sigma \cdot d\varepsilon + C_V (dT - dT_{ad}) - SdT - Td_i S$$
(185)

This update needs entropy, which therefore must be tracked separately (using dS from above), but the problem again is that  $dT_{ext}$  is not known. A solution similar to that used for internal energy is

$$dS = d_i S + \frac{C_V dT}{T} - \frac{C_V dT_{ad}}{T + dT_{ad}}$$
(186)

Again, the second, isentropic term is subtracted from entropy, but is added back on the next time step (thereby restoring net dS = 0 for the adiabatic mechanism). If internal energy is needed, it is

$$U = A + TS \tag{187}$$

For "isolated" system and particle simulations (that is also reversible), the net results will be

$$dA = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon}, \quad dS = 0 \quad \text{and} \quad U = A$$
 (188)

and this result holds for both elastic and plastic materials.

# 4.2 Locally Isothermal

For a locally isothermal process, dT=0 due to material processes, although  $dT_{ext}$  may still be nonzero if the system is nonisolated. If  $d\Phi$  is material dissipated energy that is converted to heat, then the internal energy change is

$$dU = \frac{1}{\rho} \sigma \cdot d\varepsilon - C_V dT_{ad}^0 - d\Phi + C_V dT = \frac{1}{\rho} \sigma \cdot d\varepsilon + C_V (dT - dT_{ad})$$
 (189)

where  $dT=dT_{ext}$  in this case and  $dT_{ad}^0$  is adiabatic temperature rise by mechanisms other that material energy dissipation. Here  $C_V dT_{ad}^0 + d\Phi$  has been equated to  $C_V dT_{ad}$ ; i.e.,  $dT_{ad}$  now means the temperature rise that would have happened if the process was adiabatic. The dU update is the same for both locally adiabatic and isothermal processes. Similarly, separate tracking of w and q (see above) is the same.

For tracking Helmholtz energy,  $-Td_eS = C_V(dT_{ad} - dT)$  (because the dissipated energy leaves the object in the form of heat), which gives

$$dA = \frac{1}{\rho} \, \sigma \cdot d\varepsilon - SdT - Td_i S \tag{190}$$

The Helmholtz update therefore depends on the simulation type. The difference is the  $C_V(dT - dT_{ad})$  term that is included for locally adiabatic, but omitted for locally isothermal. The entropy update is similar, but should account for isothermal state to be

$$dS = d_i S + \frac{C_V (dT - dT_{ad})}{T} \tag{191}$$

For "isolated" system and particle simulations (that is also reversible), the net results will be

$$dA = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} - SdT, \qquad dS = -\frac{C_V dT_{ad}}{T} \quad \text{and} \quad U = A + TS$$
 (192)

If the process is also elastic

$$dA = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\varepsilon, \qquad dS = -\frac{C_V dT_{ad}^0}{T} \quad \text{and} \quad U = A + TS$$
 (193)

If the process is elastic and reversible, but has "nonisolated" particles and system:

$$dA = \frac{1}{\rho} \sigma \cdot d\varepsilon - SdT$$
 and  $dS = \frac{C_V (dT - dT_{ad}^0)}{T}$  (194)

If  $C_V$  is constant and taking  $dT_{ad}^0 = 0$ , these can be integrated

$$S = C_V \ln \frac{T}{T_0} \tag{195}$$

$$A = \int \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} - C_V \int_{T_0}^T \ln \frac{T}{T_0} dT = \int \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + C_V (T - T_0) - C_V T \ln \frac{T}{T_0}$$
 (196)

$$U = \int \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + C_V(T - T_0) \tag{197}$$

The final U is w + q, which is obviously correct and shows the consistency of these updates.

## 4.3 J Integral

The J integral can be derived from Helmholtz energy and entropy but can be reduced to only depend on w. Hence it is important for all NairnMPM material to track w. (note: I derived this approach several years ago and I am not sure if it is found elsewhere besides some of it in a paper by McCartney). Consider a closed contour,  $\Gamma$ , around a crack tip, as done in J integral analysis by Rice, and the analogous application of Green's theorem

$$\int_{\Gamma} \left( A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} ds \right) = \int_{A^*} \left[ \frac{\partial A}{\partial x} - \frac{1}{\rho} \, \frac{\partial}{\partial x_j} \left( \sigma_{ij} \frac{\partial u_i}{\partial x} \right) \right] dx \, dy \tag{198}$$

where  $A^*$  is area within  $\Gamma$ . Working in the reverse process from Rice for static problems:

$$\frac{\partial}{\partial x_j} \left( \sigma_{ij} \frac{\partial u_i}{\partial x} \right) = \sigma_{ij} \frac{\partial}{\partial x_j} \left( \frac{\partial u_i}{\partial x} \right) + \frac{\partial u_i}{\partial x} \frac{\partial \sigma_{ij}}{\partial x_j}$$
(199)

$$= \sigma_{ij} \frac{\partial}{\partial x_i} \left( \frac{\partial u_i}{\partial x} \right) \tag{200}$$

$$= \frac{1}{2}\sigma_{ij}\left(\frac{\partial}{\partial x}\frac{\partial u_i}{\partial x_j} + \frac{\partial}{\partial x}\frac{\partial u_j}{\partial x_i}\right)$$
(201)

$$= \sigma \cdot \frac{\partial \varepsilon}{\partial x} \tag{202}$$

The second step uses static equilibrium and the third step uses  $\sigma_{ij} = \sigma_{ji}$ . The derivative of A is

$$\frac{\partial A}{\partial x} = \frac{1}{\rho} \, \boldsymbol{\sigma} \cdot \frac{\partial \, \boldsymbol{\varepsilon}}{\partial \, \boldsymbol{x}} - S \frac{\partial \, \boldsymbol{T}}{\partial \, \boldsymbol{x}} - T \frac{\partial \, \boldsymbol{S}_i}{\partial \, \boldsymbol{x}} \tag{203}$$

Substituting the above two results into Eq. (198) leads to a path-independent result (which includes path integral and area integral) of

$$\int_{\Gamma} \left( A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} ds \right) + \int_{A^*} \left( S \frac{\partial T}{\partial x} + T \frac{\partial S_i}{\partial x} \right) dx \, dy = 0 \tag{204}$$

McCartney took this result for reversible processes, and suggested J integral of

$$J = \int_{\Gamma^*} \left( A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} \, ds \right) + \int_{A^*} S \frac{\partial T}{\partial x} \, dx \, dy \tag{205}$$

The prior form extends it to irreversible processes (if  $d_iS$  can be found).

To get to internal energy, note that the area integral can be rewritten as

$$\int_{\Gamma} \left( A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} ds \right) + \int_{A^*} \left( \frac{\partial (TS)}{\partial x} - T \frac{\partial S_e}{\partial x} \right) dx \, dy = 0 \tag{206}$$

By Green's theorem

$$\int_{A^*} \frac{\partial (TS)}{\partial x} dx \, dy = \int_{\Gamma} TS \, dy \tag{207}$$

leading to

$$\int_{\Gamma} \left( U \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} ds \right) - \int_{A^*} T \frac{\partial S_e}{\partial x} dx \, dy = 0 \tag{208}$$

or

$$\int_{\Gamma} \left( U \, dy - \frac{1}{\rho} T_i \frac{\partial u_i}{\partial x} ds \right) - \int_{A^*} \frac{dq}{dx} \, dx \, dy = 0 \tag{209}$$

After another Green's theorem:

$$\int_{\Gamma} \left( w \, dy - \frac{1}{\rho} T_i \frac{\partial u_i}{\partial x} ds \right) = 0 \tag{210}$$

where w is cumulative work. These results seem to hold for irreversible processes as well.

# 4.4 Summary

Here are three alternatives for tracking of energy in computational mechanics (and in NairnMPM):

1. Track internal energy only using

$$dU = \frac{1}{\rho} \sigma \cdot d\varepsilon + C_V (dT - dT_{ad})$$
 (211)

2. Track work and heat energy using

$$dw = \frac{1}{\rho} \sigma \cdot d\varepsilon, \qquad dq = C_V (dT - dT_{ad}) \qquad \text{and} \qquad U = w + q$$
 (212)

This result is general; although individual time steps will be out of balance (e.g.,  $dq \neq 0$  when adiabatic), the cumulative heat flow will be correct. Special cases for "isolated" particles (i.e.,  $dT_{ext} = 0$ ) are as follows. For locally adiabatic particles is

$$dw = \frac{1}{\rho} \sigma \cdot d\varepsilon, \qquad dq = 0 \quad \text{and} \quad U = w$$
 (213)

For locally isothermal particles is

$$dw = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\varepsilon, \qquad dq = -C_V dT_{ad} \quad \text{and} \quad U = w + q$$
 (214)

Here heat is balanced within each time step. All these updates assume the material constitutive law never changes particle temperature directly. When developing materials, particle temperature changes should only be done by calling IncrementHeatEnergy() in the base material class. This method updates q, handles all special cases, and logs heat energy for subsequent changes in particle temperature, as appropriate.

3. Track Helmholtz energy and entropy using

$$dA = \begin{cases} \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + C_V (dT - dT_{ad}) - SdT - Td_i S & \text{locally adiabatic} \\ \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} - SdT - Td_i S & \text{locally isothermal} \end{cases}$$
(215)

$$dS = \begin{cases} d_i S + \frac{C_V dT}{T} - \frac{C_V dT_{ad}}{T + dT_{ad}} & \text{locally adiabatic} \\ d_i S + \frac{C_V (dT - dT_{ad})}{T} & \text{locally isothermal} \end{cases}$$
(216)

$$U = A + TS \tag{217}$$

The reason the entropy updates differ for locally adiabatic and isothermal are to improve accuracy of the adiabatic result cancel the increment in the next time step with the one in the previous step; otherwise the same update could be used.

The advantage of #1 is that only one item needs to be tracked, but then only one item is known. For example, that approach would not have enough information for the full thermodynamic J integral. The advantage of #2 is that it has simple updates and can be used for J integral calculations. The disadvantage is the neither w nor q are state functions, which means A and S are not known. The advantage of #3 is that A and S are state function and if needed they could be used to find S0 as well. The disadvantages is that the equations are more complex and require different updates for locally adiabatic and isothermal. The current version of NairnMPM tracks S0 in strain energy, S1 in heat energy, and for plasticity materials tracks S2 due to plasticity in plastic energy. Some materials track S3 as well, but only for information; S3 is not used in any other calculations.

Finally, table 1 summarizes thermodynamics properties of the various NairnMPM modes. The term dq is heat change on a single particle. The global terms are defined by:

$$dQ = \sum_{p} dq$$
,  $dS = \sum_{p} \frac{dq}{T_p}$ , and  $T = \frac{1}{n_p} \sum_{p} T_p$  (218)

An "isolated" system means no thermal boundary conditions are being used, while a "nonisolated" system has thermal boundary conditions. "Isolated" particles means conduction is turned off, while "nonisolated" particles means conduction is on. "Adiabatic" means energy coupling is turned on, while "Isothermal" means energy coupling is off.

## 5 Viscoelastic Materials

The stress-strain relation for an isotropic viscoelastic material in which bulk modulus is independent of time, but shear modulus depends on time and the analysis is 3D (or plane strain by setting  $\varepsilon_{zz}=0$  and ignoring  $\tau_{xz}$  and  $\tau_{yz}$  or axisymmetric by ignoring  $\tau_{xz}$  and  $\tau_{yz}$ ) can be written as

$$P = -K(\varepsilon_{xx} + \varepsilon_{yy} + \varepsilon_{zz} - 3\varepsilon^{(res)})$$
 (219)

$$s_{ij} = \int_0^t 2G(t-\tau) \frac{de_{xy}}{d\tau} d\tau \tag{220}$$

where P is pressure,  $s_{ij}$  and  $e_{ij}$  are elements of the deviatoric stress and strain tensors, and  $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$ . We only need to evaluate the deviatoric stress terms. The only form of G(t) the permits efficient evaluation of all strain history effects is when it is a sum of exponentials or

$$G(t) = G_0 + \sum_{k=1}^{n} G_k e^{-t/\tau_k}$$
(221)

Table 1: The changes in particle heat (dq), global heat (dQ), global entropy (dS), and average temperature (dT) for each NairnMPM thermodynamics mode. For entropy, all processes other than heat conduction are assumed reversible.

		Adiabatic				Isothermal			
System	Particles	dq	dQ	dS	dT	dq	dQ	dS	dТ
Isolated	Isolated	01	0	0	<b>≠</b> 0	<b>≠</b> 0	<b>≠</b> 0	<b>≠</b> 0	0
Isolated	Nonsolated	$\neq$ 0 <sup>2</sup>	0	$\geq$ 0 <sup>2</sup>	<b>≠</b> 0	$\neq$ 0 <sup>3</sup>	$\neq$ 0 <sup>3</sup>	$\neq$ 0 <sup>3</sup>	03
Nonsolated	Isolated	<b>≠</b> 0	≠0	≠ 0	≠ 0 <sup>4</sup>	≠ 0	<b>≠</b> 0	≠ 0	≠ 0 <sup>4</sup>
Nonsolated	Nonsolated								

- 1. If any particles start with a temperature that is different then the stress free temperature, the first time step will add  $dq = C_V(dT_i dT_0)$  to the particle heat energy. The above conditions will hold thereafter, but a constant will be added to dS and dQ.
- 2. The dq will be due to conduction only and entropy will increase because conduction is irreversible.
- 3. This mode is identical to system and particle isolated if the initial temperature of all particles is equal to the stress-free temperature. Thus, a simulation in this mode should turn off conduction for efficiency when all particles are at the stress free temperature.
- 4. When particles are isolated, the only possible thermal boundary condition is a thermal ramp that applies uniform temperature change to all particles. If there is no thermal ramp, then the system is isolated and refer to first mode instead.

The stress (with e(0) = 0) becomes:

$$s = 2G_0 e(t) + \sum_{k=1}^{n} 2G_k \int_0^t e^{-(t-\tau)/\tau_k} \frac{de}{d\tau} d\tau$$
 (222)

where subscripts of s and e have been dropped for simplicity, Next, following Simo and Hughes, introduce the internal variables,  $\alpha_k$ , that satisfy

$$\frac{d\alpha_k}{dt} + \frac{\alpha_k}{\tau_k} = \frac{e(t)}{\tau_k} \tag{223}$$

This first order differential equations (with  $\alpha_k(0) = 0$ ) can be solved and integrated by parts to get

$$\alpha_{k} = \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{e(\tau)}{\tau_{k}} d\tau = e(t) - \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{de(\tau)}{d\tau} d\tau$$
 (224)

Substitution into stress give

$$s(t) = G_0 e(t) + \sum_{k=1}^{n} G_k e(t) - \sum_{k=1}^{n} G_k \alpha_k = G_e e(t) - \sum_{k=1}^{n} G_k \alpha_k$$
 (225)

where

$$G_e = \sum_{k=0}^{n} G_k \tag{226}$$

is the modulus at t = 0. In numerical implementation,  $\alpha_k$  can be found by midpoint integration:

$$\alpha_{i,k} = \frac{\Delta t}{\tau_k} \left[ \sum_{j=1}^{i-1} e^{-(i-j)\Delta t/\tau_k} e_j + \frac{e_i}{2} \right]$$
 (227)

where  $\alpha_{i,k}$  and  $e_i$  are at time  $t = i\Delta t$ . For efficient evaluation,  $\alpha_k$  can be updated on each time step without needing a sum of strain history, thereby avoiding the need to store strain history. The update is

$$\alpha_{i+1,k} = e^{-\Delta t/\tau_k} \left( \alpha_{i,k} + \frac{e_i}{2} \right) + \frac{\Delta t}{\tau_k} \frac{e_{i+1}}{2}$$
(228)

which depends on the the current state (state i) and the current strain increment (to get  $e_{i+1}$ ). This ability to track strain history without storing strain history is only possible because of properties exponentials used in G(t).

For calculation of stored and dissipated energy, the code splits up the stress increment into elastic and viscous energy. The elastic part is

$$d\sigma_{xx}^{(elas)} = K(d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3\varepsilon^{(res)}) + \frac{2G_e}{3} \left( 2d\varepsilon_{xx} - d\varepsilon_{yy} - d\varepsilon_{zz} \right)$$
 (229)

$$d\sigma_{yy}^{(elas)} = K(d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3\varepsilon^{(res)}) + \frac{2G_e}{3} \left( 2d\varepsilon_{yy} - d\varepsilon_{zz} - d\varepsilon_{zz} \right)$$
 (230)

$$d\sigma_{zz}^{(elas)} = K(d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3\varepsilon^{(res)}) + \frac{2G_e}{3} \left( 2d\varepsilon_{zz} - d\varepsilon_{yy} - d\varepsilon_{xx} \right)$$
 (231)

$$d\tau_{ij}^{(elas)} = G_e d\gamma_{ij} \tag{232}$$

The elastic strress increment is used to find the stored energy increment. The viscous energy (from  $d\sigma_{xx} - d\sigma_{xx}^{(elas)}$  for example) is used to find the dissipated energy increment.

#### 5.1 Prior Incremental Method

Earlier version of these notes and the code tracked different history variables. We only need to evaluate terms lis

$$\sigma(t) = \int_{0}^{t} G(t - \tau) \frac{d\varepsilon}{d\tau} d\tau \tag{233}$$

Writing  $\sigma_i$  as stress at time  $t = i\Delta t$ , the stress increment can be written as  $\sigma_{i+1} = \sigma_i + \Delta \sigma_i$  where

$$\Delta\sigma_i = G(0)\Delta\varepsilon_i + \Delta t \int_0^t G'(t-\tau) \frac{d\varepsilon}{d\tau} d\tau$$
 (234)

where  $\Delta \varepsilon_i = \Delta t (d\varepsilon(i\Delta t)/dt)$ . Evaluating the integral by the midpoint rule leads to

$$\Delta\sigma_{i} = \left(G(0) + \frac{\Delta t}{2}G'(0)\right)\Delta\varepsilon_{i} + \Delta t \sum_{i=1}^{i-1} G'(j\Delta t)\Delta\varepsilon_{i-j}$$
(235)

Inserting G(t) as a sum of exponentials gives:

$$\Delta\sigma_{i} = \left(G_{e} + \frac{\Delta t}{2}G_{e}'\right)\Delta\varepsilon_{i} + \Delta t \sum_{j=1}^{i-1} \left(\sum_{k=1}^{n} -\frac{G_{k}}{\tau_{k}}e^{-j\Delta t/\tau_{k}}\right)\Delta\varepsilon_{i-j}$$
 (236)

where

$$G_e = \sum_{i=0}^{n} G_i$$
 and  $G'_e = -\sum_{i=1}^{n} \frac{G_k}{\tau_k}$  (237)

This equation leads to definition of k history variables

$$h_{i,k} = -\frac{G_k}{\tau_k} \sum_{j=1}^{i} e^{-j\Delta t/\tau_k} \Delta \varepsilon_{i-j+1}$$
(238)

such that

$$\Delta\sigma_{i} = \left(G_{e} + \frac{\Delta t}{2}G_{e}'\right)\Delta\varepsilon_{i} + \Delta t \sum_{k=1}^{n} h_{i-1,k}$$
(239)

Furthermore, because of the properties of exponentials, an update in history variable is only a function of the previous history variable using

$$h_{i,k}e^{-\Delta t/\tau_k}\left(h_{i-1,k} - \frac{G_k}{\tau_k}\Delta\varepsilon_i\right) \tag{240}$$

A stress increment using internal variables  $\alpha_k$  gives nearly identical results. First, the stress increment is

$$\Delta \sigma_i = G_e \Delta \varepsilon_i - \sum_{k=1}^n G_k \Delta \alpha_{i,k}$$
 (241)

where  $\Delta \alpha_{i,k} = \alpha_{i+1,k} - \alpha_{i,k}$ . From numerical  $\alpha_k$  above:

$$\Delta \alpha_{i,k} = \frac{\Delta t}{\tau_k} \left[ \sum_{j=1}^i e^{-(i+1-j)\Delta t/\tau_k} \varepsilon_j - \sum_{j=1}^{i-1} e^{-(i-j)\Delta t/\tau_k} \varepsilon_j + \frac{\Delta \varepsilon_i}{2} \right]$$
(242)

Shifting the second term by one and then including j=1 term (because  $\varepsilon_0=0$ ) gives

$$\Delta \alpha_{i,k} = \frac{\Delta t}{\tau_k} \left[ \sum_{j=1}^i e^{-(i+1-j)\Delta t/\tau_k} \Delta \varepsilon_{j-1} + \frac{\Delta \varepsilon_i}{2} \right]$$
 (243)

Reversing the order of the summation gives

$$\Delta \alpha_{i,k} = \frac{\Delta t}{\tau_k} \left[ \sum_{j=1}^i e^{-j\Delta t/\tau_k} \Delta \varepsilon_{i-j} + \frac{\Delta \varepsilon_i}{2} \right]$$
 (244)

Leading to stress increment of

$$\Delta\sigma_{i} = \left(G_{e} - \frac{\Delta t}{2} \sum_{k=1}^{n} \frac{G_{k}}{\tau_{k}}\right) \Delta\varepsilon_{i} - \Delta t \sum_{k=1}^{n} \frac{G_{k}}{\tau_{k}} \sum_{j=1}^{i} e^{-j\Delta t/\tau_{k}} \Delta\varepsilon_{i-j}$$
(245)

$$= \left(G_e + \frac{\Delta t}{2}G_e'\right)\Delta\varepsilon_i + \Delta t \sum_{k=1}^n h_{i-1,k} - \Delta t \sum_{k=1}^n \frac{G_k}{\tau_k} e^{-i\Delta t/\tau_k} \Delta\varepsilon_0$$
 (246)

This result is identical the previous form, except for last term, which is negligible and probably due to choose of numerical integration intervals.

# 6 Hyperelastic Materials

### 6.1 Material Point Properties

Constitutive laws for hyperelastic materials always involve the deformation gradient, F. All hyperelastic materials store the full deformation gradient using the strain and rotation variables on the particles (named  $\varepsilon = ep$  and  $\omega = wrot$ ) as follows:

$$\mathbf{F} = \begin{pmatrix} 1 + \varepsilon_{xx} & \frac{1}{2}(\gamma_{xy} - \omega_{xy}) & \frac{1}{2}(\gamma_{xz} - \omega_{xz}) \\ \frac{1}{2}(\gamma_{xy} + \omega_{xy}) & 1 + \varepsilon_{yy} & \frac{1}{2}(\gamma_{yz} - \omega_{yz}) \\ \frac{1}{2}(\gamma_{xz} + \omega_{xz}) & \frac{1}{2}(\gamma_{yz} + \omega_{yz}) & 1 + \varepsilon_{zz} \end{pmatrix}$$
(247)

and should store the updated gradient back on strain and rotation tensors on each time step.

Hyperelastic materials with plasticity, still store full deformation gradient as above and thus unlike small-strain plasticity materials, the strain variables describe the total strain and not just the elastic deformation. To have information about elastic and plastic deformation, these materials use the plastic strain variable on the particles ( $\mathbf{e}^{(p)} = \text{eplast}$ ) to store the symmetric, elastic, left Cauchy-Green tensor ( $\mathbf{B} = \mathbf{F}\mathbf{F}^T$ ). For convenience, hyperelastic materials can obtain a pointer to this variable using the particle accessor GetElasticLeftCauchyTensor(). Because this just returns a pointer to eplast, that material cannot also use GetPlasticStrainTensor() expecting an option to store different particle state information.

Large deformation MPM requires calculation of specific Cauchy stress ( $\sigma$ ) on each time step, or the Cauchy stress divided by the current density ( $\rho$ ) accounting for volume changes. This required quantity is equivalent to

$$\frac{\sigma}{\rho} = \frac{\sigma J}{\rho_0} = \frac{\tau}{\rho_0} \tag{248}$$

where J is  $\det \mathbf{F}$  and equal to the relative volume change  $(J = V/V_0)$ ,  $\tau$  is the Kirchoff stress, and  $\rho_0$  is the initial volume (i.e.,  $\rho_0 = J\rho$ ). In other words, all hyperelastic materials track the Kirchoff stress normalized to the initial density, which is done by dividing all constitutive law properties by  $\rho_0$  at the start of the calculation and then finding Kirchoff stress in constitutive laws. The output stresses, however, are converted to true Cauchy stress using particle J.

#### 6.2 Incremental Deformation Gradient

Each MPM time step requires evaluation of deformation gradient rate defined by

$$\frac{d\mathsf{F}}{dt} = \nabla \nu \mathsf{F} \tag{249}$$

If velocity gradient,  $\nabla v$ , is constant for the time step, the exact solution is

$$F(t + \Delta t) = \exp(\Delta t \nabla v)F(t) = dF F(t)$$
(250)

where

$$dF = \exp(\Delta t \nabla v) = \frac{V(t + \Delta t)}{V(t)}$$
(251)

is the incremental deformation gradient. An interesting review article on finding the exponential of a matrix is "Nineteen Dubious Ways to Compute the Exponential of a Matrix. Twenty Five Years Later."

(C. Moler and C. Van Loan, *SIAM Review*, **46**, 2003). They conclude no single way is stable and efficient for all problems, but in MPM with sufficiently small time steps, an expansion method should work well

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = I + \nabla u + \sum_{k=2}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
 (252)

where  $\nabla u = \Delta t \nabla v$  is the incremental displacement gradient. The first two terms are trivial, but have been noticed to have issues in rotational deformation fields. The question is how to evaluate extra terms as efficiently as possible.

Method 8 of the "Nineteen Dubious Ways" uses the Cayley-Hamilton theorem to find  $(\nabla u)^k$  without any matrix multiplications in 2D and just one in 3D. In 2D (plane stress, plain strain, or axisymmetric), the deformation gradient can be partitioned as

$$\nabla u = \left( \begin{array}{ccc} du_{xx} & du_{xy} \\ du_{yx} & du_{yy} \end{array} \right) \quad \begin{array}{c} 0 \\ 0 \\ 0 & 0 \end{array}$$
 (253)

where  $du_{ij} = \partial u_i/\partial x_j$  ( $du_{zz} = 0$  for plain strain, but not for plane stress or axisymmetry). If A is the  $2 \times 2$  partition, then

$$(\nabla u)^k = \begin{pmatrix} A^k & 0\\ 0 & 0\\ 0 & 0 & du_{zz}^k \end{pmatrix}$$
 (254)

Let the characteristic polymer of A (of any dimension n) be

$$c(z) = \det(zI - A) = z^n - \sum_{k=0}^{n-1} c_k z^k$$
 (255)

Because c(A) = 0, the  $n^{th}$  power of A can be found from lower powers of A

$$A^{n} = \sum_{k=0}^{n-1} c_{k} A^{k}$$
 (256)

For n = 2, these reduce to

$$c_0 = -\det(A), \qquad c_1 = \text{Tr}(A), \qquad \text{and} \qquad A^2 = c_0 I + c_1 A$$
 (257)

Higher powers of A can be found by recursion to be

$$A^k = \beta_{k,0}I + \beta_{k,1}A \tag{258}$$

where  $\beta_{1,i} = \delta_{i1}$ ,  $\beta_{k,0} = c_0 \beta_{k-1,1}$ , and  $\beta_{k,1} = c_1 \beta_{k-1,1} + \beta_{k-1,0}$ . In other words, I and A are a basis for all powers of A. Finally, we can expand the incremental deformation gradient using  $k_{max}$  terms as

$$dF(k_{max}) = \begin{pmatrix} [\alpha_0 I + \alpha_1 A] & 0 \\ 0 & 0 & 1 + du_{zz} + \sum_{k=2}^{k_{max}} \frac{du_{zz}^k}{k!} \end{pmatrix}$$
(259)

where

$$\alpha_0 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,0}}{k!}$$
 and  $\alpha_1 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,1}}{k!}$  (260)

An efficient computer algorithm for all non-zero elements of the deformation gradient using  $k_{max}$  terms (which eliminates as many multiplications and divides as I think are possible and the factorial terms are scaled into the beta variables such that betai=  $\beta_{k,i}/k!$ ) is:

```
double c0 = duxy*duyx - duxx*duyy, c1 = duxx + duyy;
double beta0 = 0., beta1 = 1., alpha0 = 1., alpha1 = 1.;
double betaz = duzz; dFzz = 1. + duzz
int k;
double factor, temp;;
for(k = 2; k \le kmax; k++)
    factor = 1/(double)k;
    temp = beta1;
   beta1 = factor*(c1*temp + beta0);
    beta0 = factor*c0*temp;
    betaz *= factor*duzz;
    alpha0 += beta0;
    alpha1 += beta1;
    dFzz += betaz;
double dFxx = alpha0 + alpha1*duxx;
double dFxy = alpha1*duxy;
double dFyx = alpha1*duyx;
double dFyy = alpha0 + alpha1*duyyl
```

Each extra term included in the expansion costs 6 multiplications, 1 division, and 4 additions. Direct matrix multiplication would add 14 multiplications/division and 13 additions for each term.

A similar approach can be done in 3D, but does require one matrix multiplication. The overall expansion is

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = I + \nabla u + \frac{1}{2} (\nabla u)^2 + \sum_{k=3}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
 (261)

which can be reduced to

$$\exp(\Delta t \nabla v) = \alpha_0 I + \alpha_1 \nabla u + \alpha_2 (\nabla u)^2$$
(262)

$$\alpha_0 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,0}}{k!}, \qquad \alpha_1 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,1}}{k!}, \quad \text{and} \quad \alpha_2 = \frac{1}{2} + \sum_{k=3}^{k_{max}} \frac{\beta_{k,2}}{k!}$$
 (263)

The required recursion relations are  $\beta_{2,i} = \delta_{i2}$ ,  $\beta_{k,0} = c_0\beta_{k-1,2}$ ,  $\beta_{k,1} = c_1\beta_{k-1,2} + \beta_{k-1,0}$ , and  $\beta_{k,2} = c_2\beta_{k-1,2} + \beta_{k-1,1}$ . For a 3 × 3 matrix,  $c_0 = \det(M)$ ,  $c_1 = -I_2$ , and  $c_2 = \operatorname{Tr}(M)$ , where  $I_2$  is the second invariant. Each extra term included in the expansion adds 6 multiplications, 1 division and 5 additions. Direct matrix multiplication would add about 36 multiplications, 1 division, and 27 additions for each term.

One MPM user suggested loading a single particle in tension to some value and then rotating. A plot of axial stress in the loading direction should increase linearly while loading and then oscillate around a constant mean during rotation. In 2D calculations with  $k_{max}=1$ , the stress continues to increase while rotating, but using  $k_{max}=2$  appears to make it constant. Addition of extra terms beyond  $k_{max}=2$  does not seem to provide much benefit (at least in this example). A need for extra terms can be demonstrated by using a very large time step, such as 8 times the Courant-Friedrichs-Lewy (CFL) condition. Some results are in Fig. 1. With 1 term, the calculations are immediately bad once rotation starts. Each extra

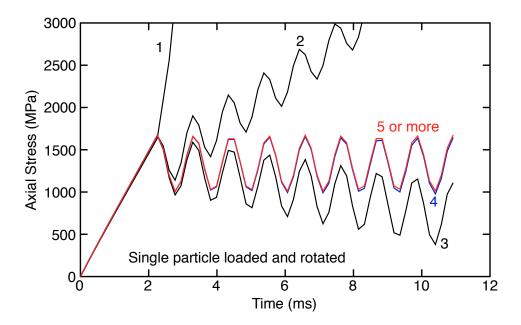


Figure 1: Calculation for a single particle loaded in tension, held, and then rotated. The different curves show  $k_{max}$  or the number of terms used to expand the matrix exponential in the incremental deformation gradient.

term improves the result. With 5 or more terms, the result is correct. When CFL is less than 1 (as it should be), terms beyond  $k_{max} = 2$  might not have much benefit, but can be seen, for example, in pure shear examples.

#### 6.3 Mooney-Rivlin Material

The Mooney-Rivilin material is an isotropic, elastic, hyperelastic material. It's stresses are based on a strain energy function that depends only on invariants to the left Cauchy-Green deformation tensor:

$$\mathbf{B} = \mathbf{F}\mathbf{F}^T \tag{264}$$

where **F** is the deformation tensor. The deformation tensor can be calculated by combining cumulative strain and rotation tensors (see HyperElastic.cpp for the calculation). The strain energy is assumed to be

$$W = \frac{G_1}{2} \left( \bar{I}_1 - 3 \right) + \frac{G_2}{2} \left( \bar{I}_2 - 3 \right)^2 + \frac{K}{2} (J - 1)^2$$
 (265)

where  $G_1$ ,  $G_2$ , and K are material properties,  $J = \det \mathbf{F}$ , and the invariants are

$$\bar{I}_1 = \frac{B_{xx} + B_{yy} + B_{zz}}{J^{2/3}} \tag{266}$$

$$\bar{I}_{2} = \frac{1}{2} \left( \bar{I}_{1}^{2} - \frac{B_{xx}^{2} + B_{yy}^{2} + B_{zz}^{2} + 2B_{xy}^{2} + 2B_{xz}^{2} + 2B_{yz}^{2}}{J^{5/3}} \right)$$
 (267)

For low strains, this material is equivalent for a linear elastic, isotropic material with shear modulus  $G_1 + G_2$  and bulk modulus K. If  $G_2 = 0$ , the material is a neo-Hookean material. See below for an alternate compressibility terms. Some hyperelastic rubber models assume incompressible materials,

which corresponds to  $K \to \infty$ ; such models do not work in dynamic code (because wave speed is infinite).

The Cauchy (or true stress) is found by differentiating the strain energy to get

$$\sigma = \frac{G_1}{J^{5/3}} \left( \mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J^{7/3}} \left( I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) + K(J - 1) \mathbf{I}$$
 (268)

where  $I_1 = J^{2/3}\bar{I_1}$  and  $I_2 = J^{4/3}\bar{I_2}$ . The stress components can be divided into pressure, P, and deviatoric stress,  $\mathbf{s} = \boldsymbol{\sigma} + P$ , which explicitly evaluate to:

$$P = -K(J-1) (269)$$

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2 - B_{xz}^2 + 2B_{yz}^2}{3J^{7/3}}$$
(270)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2 + 2B_{xz}^2 - B_{yz}^2}{3J^{7/3}}$$
(271)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3J^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2 - B_{xz}^2 - B_{yz}^2}{3J^{7/3}}$$
(272)

$$s_{xy} = G_1 \frac{B_{xy}}{J^{5/3}} + G_2 \frac{B_{zz}B_{xy} - B_{xz}B_{yz}}{J^{7/3}}$$
(273)

$$s_{xz} = G_1 \frac{B_{xz}}{J^{5/3}} + G_2 \frac{B_{yy}B_{xz} - B_{xy}B_{yz}}{J^{7/3}}$$
(274)

$$s_{yz} = G_1 \frac{B_{yz}}{I^{5/3}} + G_2 \frac{B_{xx}B_{yz} - B_{xy}B_{xz}}{I^{7/3}}$$
(275)

#### 6.3.1 Plane Strain and Plane Stress Analysis

For 2D analysis,  $F_{xz} = F_{yz} = F_{zx} = F_{zy} = 0$ , which leads to zero for corresponding terms in **B**. The resulting stresses are P = -K(J-1) and

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(276)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(277)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3J^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2}{3J^{7/3}}$$
(278)

$$s_{xy} = G_1 \frac{B_{xy}}{J^{5/3}} + G_2 \frac{B_{zz}B_{xy}}{J^{7/3}}$$
 (279)

$$s_{xz} = 0 ag{280}$$

$$s_{\gamma z} = 0 ag{281}$$

For plane strain analysis  $B_{zz}=1$ . For plane stress analysis, one has to solve numerically for  $B_{zz}$  to get  $\sigma_{zz}=0$  or  $s_{zz}=P$  and then use that result to find  $\varepsilon_{zz}$  and other stresses.

## 6.4 Dealing with Thermal and Moisture Strains

To handle thermal and moisture strains the deformation is divided into two steps. The first is free expansion to the new stress free volume and then deformation to the final volume. The total deformation

will be

$$\mathbf{F} = \mathbf{F}^* \mathbf{F}^{res} = \mathbf{F}^* \lambda_{res} \mathbf{I} \tag{282}$$

where  $\lambda_{res}$  is total extension due to free thermal and moisture expansion:

$$1 + \alpha \Delta T + \beta \Delta c \tag{283}$$

The stresses and energy, however, should be found using  $\mathbf{F}^*$  instead of  $\mathbf{F}$ , where  $\mathbf{F}^*$  is now deformation from the current free expansion volume instead of from the initial volume. The net effects are  $\mathbf{F}^* = \mathbf{F}/\lambda_{res}$ ,  $J_{eff} = |\mathbf{F}^*| = J/\lambda_{res}^3$ , and  $\mathbf{B}_{eff} = \mathbf{B}/\lambda_{res}^2$ .

When doing incremental deformation,  $\mathbf{F}_{k+1} = \mathsf{dF} \mathbf{F}_k$  and incremental volume ratio is  $dJ = |\mathsf{dF}| = V_{k+1}/V_k$ , but  $J_{eff}$  is  $V/V_{sf}$  where  $V_{sf}$  is the current stress free volume. For incremental deformation,  $J_{k+1} = dJJ_k$ , but we really want to increment  $J_{eff,k+1} = dJ_{eff}J_{eff,k}$ , which is

$$J_{eff,k+1} = \frac{V_{k+1}}{V_{sf,k+1}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} \frac{V_k}{V_{sf,k}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} J_{eff,k} = dJ_{eff}J_{eff,k}$$
(284)

which implies that

$$dJ_{eff} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} = dJ/d\lambda_{res}^3$$
 (285)

where

$$d\lambda_{res} = 1 + \alpha dT + \beta dc \tag{286}$$

where dT and dc are temperature and concentration changes on the current time step.

#### 6.4.1 Alternate Bulk Modulus Term

Two alternative compressibility terms (showing only that term) is

$$W = \frac{K}{2}(\ln J)^2$$
 and  $W = \frac{K}{2}\left(\frac{1}{2}(J^2 - 1) - \ln J\right)$  (287)

which gives normal Cauchy pressure terms of

$$P = -K \frac{\ln J}{J} \mathbf{I} \quad \text{and} \quad P = -\frac{K}{2} \left( J - \frac{1}{J} \right) \mathbf{I}$$
 (288)

Although these three compressibility terms show some significant differences when J deviates significantly from 1, under most problems, J will stay close to one. Two exceptions could be constrained compression or tension. Here, the only one that works well to very small or large J is the second one above. This one correctly leads to inifinite positive stress as  $J \to \infty$  and infinite negative stress as  $J \to 0$ . This later one is the default for this material in NairnMPM.

## 6.5 Mie-Grüniesen Equation of State

The Mie-Grüniesen Equation of State defines the pressure only and the Kirchoff pressure needed in NairnMPM is

$$P = \frac{C_0^2 \eta \left(1 - \frac{1}{2} \gamma_0 \eta\right)}{\left(1 - S_1 \eta - S_2 \eta^2 - S_3 \eta^3\right)^2} + \gamma_0 U \tag{289}$$

where  $\eta$  is fraction compression and given by

$$\eta = 1 - \frac{\rho_0}{\rho} = 1 - \frac{V}{V_0} = 1 - J \tag{290}$$

and  $\gamma_0$ ,  $C_0$ , and  $S_i$  are material properties and U is total internal energy. The above equation applies only in compression ( $\eta > 0$ ). In tension, the pressure is given by

$$P = C_0^2 \eta + \gamma_0 U \tag{291}$$

This equation of state also causes a temperature change of

$$dT = -T\gamma_0 \frac{\rho_0}{\rho} \frac{V(t + \Delta t) - V(t)}{V} + \frac{dq}{C_V}$$
(292)

where dq is dissipated energy that is converted to heat. The first term simplifies to an isentropic temperature change of

$$dT_{dq=0} = -JT\gamma_0 \frac{V(t+\Delta t) - V(t)}{V}$$
(293)

The volume change relative to current volume can be found from

$$\frac{V(t + \Delta t) - V(t)}{V(t + \Delta t)} = 1 - \frac{1}{|dF|}$$
 (294)

Noticing that

$$\frac{dT_{dq=0}}{T} = \gamma_0 d\eta \tag{295}$$

The temperature due to isoentropic heating alone can be integrated to

$$T = T_0 \exp(\gamma_0 \eta) \tag{296}$$

Thus the total temperature rise (assuming  $C_V$  is constant) is

$$dT = T_0(\exp(\gamma_0 \eta) - 1) + \frac{\Phi}{C_V}$$
(297)

where  $\Phi$  is the cumulative dissipated energy due to plasticity.

Rather then calculate temperature changes, which are needed for internal energy, NairnMPM tracks total work, w, and heat, q, to find internal energy as U = w + q. The details are given above in the section on "Thermodynamics of Deformation."

In compression, J is physically limited to be between 0 and 1, which means  $\eta$  is also between 0 and 1. But for most materials that have been fit to this equation of state, the denominator in pressure will be come zero before eta reaches 1. For example, Tungsten has  $S_1 = 1.24$  and  $S_2 = S_3 = 0$ . The denominator becomes zero when

$$\eta = 1/1.24 = 0.806 \tag{298}$$

If the time step is too large in dynamic code, the compression could potentially pass this value. If that happens for any particle, the results will likely be poor; NairnMPM prints a warning labeling states beyond the physical limit as "excessive compression." It is good practice to use an adjustable time step when using this material so the time step can get smaller if the compression gets high.

This equation of state has no thermal expansion coefficient, but thermal expansion occurs naturally with proper tracking of heat flow and temperature. The volumetric thermal expansion coefficient from input properties is:

$$3\alpha = \frac{\rho_0 \gamma_0 C_V}{K_0} \qquad \text{or} \qquad \gamma_0 = \frac{3K_0 \alpha}{\rho_0 C_V} \tag{299}$$

which is same as defined above in Eq. (181). The temperature rise here, which is

$$dT_{dq=0} = -JT\gamma_0 \frac{\Delta V}{V} \quad vs. \qquad dT_{dq=0} - JT_0 \frac{K}{K_0} \gamma_0 \frac{\Delta V}{V}$$
(300)

from above. The result here differs by a factor  $(T/T_0)(K/K_0)$ .

#### 6.6 Ideal Gas Law

The ideal gas material implements ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The ideal gas law is

$$PV = nRT (301)$$

The ideal gas properties are defined by picking any reference pressure,  $P_0$ , reference temperature,  $T_0$ , and reference density,  $\rho_0$ . If M is the molecular weight of the gas molecules, the reference density can be found from:

$$\rho_0 = \frac{P_0}{T_0} \frac{M}{R} \tag{302}$$

We can now eliminate *n* and *R* to derive

$$P = P_0 \frac{V_0}{V} \frac{T}{T_0} = P_0 \frac{T}{T_0} \frac{1}{J}$$
 (303)

where  $J = \det \mathbf{F} = V/V_0$ . The Cauchy stress due to this pressure is  $-P\mathbf{I}$ , which implies hyperelastic energy function determined from:

$$\boldsymbol{\sigma} = -P_0 \frac{T}{T_0} \frac{1}{J} \mathbf{I} = \frac{dU(J)}{dJ} \mathbf{I} \qquad \text{or} \qquad U(J) = -P_i \ln J$$
 (304)

where  $P_i = P_0 T / T_0$  is the initial pressure (when J = 1). This energy is equal to the energy per unit initial volume for isothermal compression or expansion of an ideal gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\frac{P_0 T}{T_0} \int_{V_0}^{V} \frac{1}{V} \, dV = -P_i \ln \frac{V}{V_0} = -P_i \ln J$$
 (305)

For MPM calculations, the code needs a specific Kirchoff stress normalized to  $\rho_0$  or

$$\tau^{(s)} = -\frac{PJ}{\rho_0} \mathbf{I} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \mathbf{I}$$
 (306)

In coding, an incremental approach is preferred. If  $\tau_n^{(s)}$  is any diagonal element of the specific Kirchoff stress tensor for time step n, then

$$\tau_{n+1}^{(s)} = -\frac{P_0}{\rho_0} \frac{T_{n+1}}{T_0} = -\frac{P_0}{\rho_0} \frac{T_n}{T_0} \frac{T_{n+1}}{T_n} = \tau_n^{(s)} \frac{T_{n+1}}{T_n}$$
(307)

Note that the Kirchoff stress remains constant for isothermal expansion and compression.

The energy increment associated with this stress change is dU = -P dV work. The energy per unit mass using midpoint rule between initial and final pressure is therefore

$$\frac{dU}{\rho_0 V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1} - V_n}{V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1}}{V_0} \left( 1 - \frac{V_n}{V_{n+1}} \right)$$
(308)

Let deformation gradient for step n + 1 be

$$\mathbf{F}_{n+1} = \mathbf{f} \cdot \mathbf{F}_n$$
 where  $\mathbf{f} = \exp(\Delta t \nabla v)$  and  $J_{n+1} = \det \mathbf{f} J_n$  (309)

which leads to

$$\frac{dU}{\rho_0 V_0} = -\frac{J_{n+1}}{2} \frac{P_n + P_{n+1}}{\rho_0} \left( 1 - \frac{1}{\det f} \right) = -\frac{1}{2} \left( \frac{P_n}{\rho_n} \det f + \frac{P_{n+1}}{\rho_{n+1}} \right) \left( 1 - \frac{1}{\det f} \right) \tag{310}$$

But,  $P/\rho$  is  $-\tau^{(s)}$  leading to

$$\frac{dU}{\rho_0 V_0} = \frac{1}{2} \left( \tau_n^{(s)} \det f + \tau_{n+1}^{(s)} \right) \left( 1 - \frac{1}{\det f} \right) \tag{311}$$

In NairnMPM, the cumulative work, w, is tracked in the particle's strain energy and cumulative heat, q, in the heat energy (heat energy will be zero for adiabatic or -w for isothermal). The internal energy is U = w + q. The incremental work is  $dw = dU/(\rho_0 V_0)$  term above. Because plastic energy has no other use, it is used in this material to track the change in entropy using

$$dS = \begin{cases} d_i S + \frac{C_V dT}{T} - \frac{C_V dT_{ad}}{T + dT_{ad}} & \text{locally adiabatic} \\ d_i S + \frac{C_V dT - d\Phi}{T} & \text{locally isothermal} \end{cases}$$
(312)

where  $dT_{ad} = dU/C_V$  is the temperature rise that would occur if the process was adiabatic and the irreversible entropy,  $d_iS$ , is assumed to be zero. The reason that  $dS \neq 0$  for adiabatic case is because there might be temperature changes due to external conditions or conduction. The Helmholtz free energy can be found post analysis using A = U - TS = w + q - TS.

When gas particles are present, they have to be initialized to the pressure (or stress) of

$$\tau_i^{(s)} = -\frac{P_i}{\rho_0} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \tag{313}$$

where T is the simulation reference temperature (need not be the gas reference temperature, which can be any desired reference condition). All simulations with gas particles must therefore specify a reference temperature in degrees Kelvin.

This material always needs heat capacity and needs thermal conductivity when doing conduction. Heat capacity is calculated using ideal gas law theory  $(C_V = (3/2)nR/(\rho_0V_0))$  for monotonic gas and  $C_V = (5/2)nR/(\rho_0V_0)$  for diatomic gas in J/(kg-K)). To find heat capacity from input parameters, substitute  $nR = P_0V_0/T_0$  at reference conditions to get

$$C_V = \frac{3}{2} \frac{P_0}{\rho_0 T_0} \tag{314}$$

for monatomic gas (or replace 3/2 with 5/2 for diatomic gas). For conduction, the current code assumes conductivity is a temperature-independent property (as entered), although conductivity of a gas does vary with temperature. If simulations with large temperature changes of the gas are important, this material will need to be improved to allow temperature-dependent thermal conductivity.

For wave speed calculations, the bulk modulus for adiabatic conditions is

$$B = \sqrt{\frac{\gamma \rho RT}{M}} \tag{315}$$

In terms of defined material properties, the wave speed reduces to

$$C = \sqrt{\frac{B}{\rho}} = \sqrt{\frac{5\rho_0 P_0 T}{3T_0}} \tag{316}$$

where T is particle temperature.

### Verification Examples

A simple gas problem is to confine all sides by rigid particles and move one wall for compression or expansion. If the movable wall is in the *x* direction, the volume will be  $V = V_0(1 + \varepsilon_{xx})$ . For isothermal compression and expansion:

$$P = \frac{P_i}{1 + \varepsilon_{xx}} \tag{317}$$

$$U = 0 (318)$$

$$w = -P_i V_0 \ln(1 + \varepsilon_{xx})$$

$$q = -w$$
(319)
(320)

$$q = -w (320)$$

$$S = nR \ln(1 + \varepsilon_{xx}) = \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx})$$
 (321)

For adiabatic compression and expansion

$$P = \frac{P_i}{(1 + \varepsilon_{xx})^{\gamma}} \tag{322}$$

$$T = \frac{T_i}{(1 + \varepsilon_{rr})^{\gamma - 1}} \tag{323}$$

$$U = C_V(T - T_i) = \frac{3P_0 V_0}{2T_0} T_i \left( \frac{1}{(1 + \varepsilon_{var})^{\gamma - 1}} - 1 \right)$$
 (324)

$$w = U (325)$$

$$q = 0 (326)$$

$$S = -(\gamma - 1)C_V \ln(1 + \varepsilon_{xx}) + \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx}) = 0$$
 (327)

where  $\gamma = C_P/C_V = 5/3$ . An undocumented custom task in NairnMPM can subject an ideal gas to a Carnot cycle and recover an efficiency close to the theoretical maximum of:

$$\eta = 1 - \frac{T_2}{T_1} \tag{328}$$

where  $T_1$  is the hot reservoir and  $T_2$  is the cold one.

## Isothermal vs. Adiabatic vs. General Constitutive Law

Equation (303) can be rewritten as an increment in pressure from initial pressure  $P_0$  at temperature  $T_0$ :

$$P - P_0 = \kappa_0 \left[ \left( \frac{J_{res}}{J} \right) - 1 \right] \tag{329}$$

where  $\kappa_0$  is the bulk modulus at  $P_0$ :

$$\frac{1}{\kappa_0} = -\frac{1}{V_0} \left( \frac{\partial V_0}{\partial P} \right)_T = \frac{1}{P_0} \tag{330}$$

and

$$J = \frac{V(P,T)}{V(P_0,T_0)} = \frac{V}{V_0}$$
 and  $J_{res} = \frac{V(P_0,T)}{V(P_0,T_0)} = \frac{T}{T_0}$  (331)

Here  $J_{res}$  is the volume ratio for free thermal expansion at reference pressure  $P_0$ . For an isothermal process  $J_{res} = 1$ . For a (reversible) adiabatic compression or expansion, the temperature change is:

$$T = \frac{T_0}{J^{\gamma - 1}} \quad \text{and} \quad J_{res} = \frac{1}{J^{\gamma - 1}}$$
 (332)

Two special cases of the general law, therefore, are:

$$P - P_0 = \kappa_0 \left[ \left( \frac{1}{J} \right) - 1 \right]$$
 isothermal (333)

$$P - P_0 = \kappa_0 \left[ \left( \frac{1}{J} \right)^{\gamma} - 1 \right]$$
 adiabatic (334)

But if code implements either of these laws, it will be restricted to either isothermal or adiabatic conditions only. The preferred approach is to implement the general law because it includes both these limits as special cases and can be used for nonisothermal, nonadiabatic simulations as well. When using a general law, however, each material point must correctly change its temperature according to how much energy should be converted into heat for a given increment in deformation. For an ideal case undergoing in increment in volume of dV, the temperature change is

$$dT = -\frac{PdV}{C_V} = -\frac{nRT}{C_V}\frac{dV}{V} = -\frac{nRT}{C_V}\frac{\rho}{\rho_0}\frac{dV}{V_0}$$
(335)

In other words, all the work is converted into heat. Also notice that this result can be written

$$\frac{dT}{T} = \frac{nR}{C_V} \frac{1}{J} d\eta = \frac{\gamma_0}{J} d\eta = -\gamma_0 \frac{dJ}{J} \quad \text{where} \quad \eta = 1 - \frac{\rho_0}{\rho} = 1 - J$$
 (336)

For a monatoic ideal gas  $\gamma_0 = 2/3$ ; for a diatomic gas  $\gamma_0 = 2/5$ ; for both  $\gamma_0 = \gamma - 1$ . This result is identical to the Mie-Grüniesen theory in Eq. (300) by using K = P,  $3\alpha = 1/T$  and  $C_V = (3/2)nR/(\rho V)$  (or 5/2 for diatomic gas).

## 6.9 Van der Waals Gas Law

The van der Wasls gas material implements a non-ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The van der Wasls gas law is

$$\left(P - \frac{an^2}{V^2}\right) \left(\frac{V}{n} - b\right) = RT$$
(337)

The nonideal gas properties are defined by picking any reference pressure,  $P_0$ , reference temperature,  $T_0$ , and reference density,  $\rho_0$ , along with a and b. The law can then be transformed to pressure of

$$P = (P_0 - a') \left(\frac{1 - b'}{J - b'}\right) \frac{T}{T_0} + \frac{a'}{J^2}$$
(338)

where  $J = V/V_0$ ,  $V_0$  is initial particle volume,  $a' = an^2/V_0^2$ , and  $b' = nbV_0$ . Writing P = -dU(J)/dJ implies a hyperelastic energy function of

$$U(J) = (P_i - a') (1 - b') \ln(J - b') - \frac{a'}{J}$$
(339)

where  $P_i$  is the initial particle pressure (when J = 1) of

$$P_i = (P_0 - a') \frac{T}{T_0} + a' \tag{340}$$

This energy is equal to the energy per unit initial volume for isothermal compression or expansion of an ideal gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\int_{1}^{J} \left( \left( P_i - a' \right) \left( \frac{1 - b'}{J - b'} \right) + \frac{a'}{J^2} \right) \, dJ \tag{341}$$

In NairnMPM, the cumulative work is tracked in the particle's plastic energy (which is = PdV work and can tracked the same as for an ideal gas). The particle's strain energy tracks total internal energy in the gas per unit mass, which for a van der Waals gas is

$$U = C_V(T - T_0) - \frac{a'}{\rho_0 J} \tag{342}$$

In hyperelastic code, an incremental form is

$$U = C_V dT + \frac{a'}{\rho_0 J^2} dJ \tag{343}$$

For a van der Waals gas, the heat capacity is same as for ideal gas,  $C_V = (3/2)nR/(\rho_0 V_0)$  for monatomic (or 5/2 for diatomic gas), the the n is found differently from reference conditions. It can be found as root to

$$\frac{ab}{V_0^2}n^3 - \frac{a}{V_0}n^2 - (P_0b + RT_0)n + P_0V_0 = 0$$
(344)

This *n* is needed to find a', b' and  $C_V$ .

# 7 Two-State Isotropic Material

The BistableIsotropic class inherits from Isotropic. It allows two different isotropic states and transitions between the states based on various criteria. The two options are to have a jump to a new linear stress-strain curve (DILATION\_RULE) or to simply change the slope (DISTORTION\_RULE or VONMISES\_RULE). When jumping to a new curve (DILATION\_RULE), the deformed state can additionally define a new origin by adding an offset volumetric strain. The only new calculations needed are to change properties when a transition occurs and if there is a new stress-strain curve to calculate a jump in stresses to the new curve. The 3D stiffness equations with an offset volumetric strain for an isotropic material are

$$\begin{pmatrix}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{zz} \\
\tau_{xz} \\
\tau_{yz} \\
\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
C_{11} & C_{12} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
0 & 0 & 0 & C_{66} & 0 & 0 \\
0 & 0 & 0 & 0 & C_{66} & 0 \\
0 & 0 & 0 & 0 & 0 & C_{66}
\end{pmatrix} \begin{pmatrix}
\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{zz} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{zz} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\gamma_{xz} \\
\gamma_{yz} \\
\gamma_{xy}
\end{pmatrix}$$
(345)

where  $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$ . Whenever a change in state occurs in the DILATION\_RULE, these equations must be used to recalculate all components of stress.

### 7.1 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{xx} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \gamma_{xx} \end{pmatrix}$$
(346)

with out-of-plane strain given by

$$\varepsilon_{zz} = -\frac{C_{12}}{C_{11}} (\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)}) - \frac{C_{12}}{C_{11}} (\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)}) + \frac{\Delta}{3} + \varepsilon^{(res)}$$
(347)

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] =  $Q_{xx}/\rho$ , C[1][2] =  $Q_{xy}/\rho$ , C[3][3] =  $Q_{xyxy}/\rho$ , C[4][1] = C[4][2] =  $-C_{12}/C_{11}$ , alpha[1] = alpha[2] = alpha[4] = CTE3 =  $\alpha$ , beta[1] = beta[2] = beta[4] = CME3 =  $\beta$ , C[1][3] = C[2][3] = alpha[3] = beta[3] = 0, and normOffset =  $\Delta/3$ .

## 7.2 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{11} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3}(1+v) - \varepsilon^{(res,r)} \\ \varepsilon_{yy} - \frac{\Delta}{3}(1+v) - \varepsilon^{(res,r)} \\ \gamma_{xx} \end{pmatrix}$$
(348)

where  $\varepsilon^{(res,r)} = \alpha^{(r)} \Delta T + \beta^{(r)} \Delta c$ . In other words, a reduced offset and residual strains are needed. The out-of-plane stress is found from 3D equation and without reduced terms:

$$\sigma_{zz} = C_{12} \left( \varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \right) + C_{12} \left( \varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \Delta T \right) - C_{11} \left( \frac{\Delta}{3} + \varepsilon^{(res)} \right)$$
(349)

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] = C[4][4] =  $C_{11}/\rho$ , C[1][2] =  $C_{12}/\rho$ , C[3][3] =  $C_{66}/\rho$ , C[4][1] = C[4][2] =  $C_{12}/\rho$ , alpha[1] = alpha[2] =  $\alpha(1+v)$ , beta[1] = beta[2] =  $\beta(1+v)$ , alpha[4] = CTE3 =  $\alpha$ , beta[4] = CME3 =  $\beta$ , alpha[5] = alpha[6] = v, C[1][3] = C[2][3] = C[4][3] = alpha[3] = alpha[7] = 0, normOffset =  $\Delta/3$ , and nu = v.

# 7.3 Special Cases for E = 0

If either K or G in any state is zero then the tensile modulus E is also zero. Although this state is easy to derive in theory, in practice, it rarely gives useful results in dynamic MPM (except maybe as an inclusion in a composite material). A second problem is that it requires special cases to make it work with the super Isotropic class because that class has equations requiring  $E \neq 0$ . For these reasons, NairnMPM does not support zero modulus states in this material. It is easy to approximate such a state simply by setting K and/or G to a very small number.