Material Models Used in NairnMPM and NairnFEA

John Nairn

December 19, 2014

Contents

1	Line	Linear Elastic Hypoelastic Materials					
	1.1	Introduction	5				
	1.2	Plane Stress Equations	5				
	1.3	Plane Strain Equations	6				
	1.4	Rotated Stiffness Equations in MPM	7				
	1.5	Rotated Stiffness Equations in FEA	8				
	1.6	Two-State Isotropic Material	8				
		1.6.1 Plane Stress Equations	9				
		1.6.2 Plane Strain Equations	9				
		1.6.3 Special Cases for $E = 0$	9				
2	Plas	sticity Materials	11				
	2.1	Introduction	11				
	2.2	J_2 Flow Theory for Isotropic Materials	13				
	2.3	Plane Strain and Axisymmetric Analysis for J_2 Flow Theory, Isotropic Materials	15				
	2.4	Plane Stress Analysis for J_2 Flow Theory, Isotropic Materials	15				
	2.5	3D Analysis for J_2 Flow Theory, Isotropic Materials	18				
	2.6	Examples of J_2 Flow Theory Materials	18				
		2.6.1 VonMises Material with Linear Work Hardening	19				
		2.6.2 VonMises Material with Non-Linear Work Hardening	19				
		2.6.3 VonMises Material with Alternate Non-Linear Work Hardening	19				
		2.6.4 Johnson-Cook	20				
	2.7	Anisotropic 2D Plane Strain and Axisymmetric Analysis	20				
	2.8	Anisotropic 2D Plane Stress Analysis	21				
	2.9	Anisotropic 3D Analysis	21				
	2.10	Quadratic Hill Criterion	22				
3	The	rmodynamics of Deformation	27				
	3.1	Introduction	27				
	3.2	Locally Adiabatic	28				
	3.3	Locally Isothermal	29				
	3.4	Energy Tracking in NairnMPM	29				
	3.5	J Integral	30				
4	Нур	perelastic Materials	33				
	4.1	Introduction	33				
	4.2	Incremental Deformation Gradient	33				
	4.3	Hyperelastic 1D Membrane in a 2D Simulation	36				

4 CONTENTS

	4.4	Hyperelastic 2D Membrane in a 3D Simulation	37
	4.5	Membrane Material Tasks	10
	4.6	Isotopic, Hyperelastic Materials	11
	4.7	Mooney-Rivlin Material	12
		4.7.1 Plane Strain, Plane Stress, and Axisymmetric Analysis	12
		4.7.2 Dealing with Thermal and Moisture Strains	13
		4.7.3 Alternate Bulk Modulus Term	14
		4.7.4 Tangent Bulk Modulus	15
		4.7.5 Plane Stress Mooney-Rivlin Membrane	15
		4.7.6 Plane Stress Mooney-Rivlin Membrane — Alternate Approach 4	16
		4.7.7 Plane Strain and Axisymmetric Mooney-Rivlin Membrane	16
		4.7.8 3D Mooney-Rivlin Membrane	17
	4.8	Neo-Hookean Material	19
		4.8.1 Tangent Bulk Modulus	50
			50
		4.8.3 Plane Strain and Axisymmetric Neohookean Membrane 5	51
		4.8.4 3D Neo-Hookean Membrane	52
	4.9	Mie-Grüniesen Equation of State	53
		4.9.1 Residual Stresses	55
	4.10) Isotropic Hyperelastic-Plastic Material	55
	4.11	I Ideal Gas	56
		4.11.1 Verification Examples	58
			59
		4.11.3 Van der Waals Gas Law	60
	4.12	2 Disney Snow Model	51
5	Visc	coelastic Materials 6	53
	5.1	Introduction	53
	5.2	Small Strain, Internal Variables Analysis	53
	5.3		54
_	3 / - ···		
6			55
	6.1		55
	6.2		55 55
		, 1	56 56
		· · · · · · · · · · · · · · · · · · ·	56
	6.3		50 57
	0.3	• • • • • • • • • • • • • • • • • • •	57
	6.4		58
	0.4		59
		, 1	59 59
			70
	6.5		70 70
	0.5		
		6.5.1 Low-Strain, Isotropic Material	71

Chapter 1

Linear Elastic Hypoelastic Materials

1.1 Introduction

The Isotropic, TransIsotropic, and Orthotropic classes all inherit from the Elastic class and implement linear elastic materials. The constitutive law is in the Elastic class and implemented for an orthotropic material. The isotropic and transversely isotropic materials are special cases of the orthotropic material. For such a material, the 3D stiffness equation is

$$\begin{pmatrix}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{zz} \\
\tau_{xz} \\
\tau_{yz} \\
\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
C_{11} & C_{12} & C_{13} & 0 & 0 & 0 \\
C_{12} & C_{22} & C_{23} & 0 & 0 & 0 \\
C_{13} & C_{23} & C_{33} & 0 & 0 & 0 \\
0 & 0 & 0 & C_{44} & 0 & 0 \\
0 & 0 & 0 & 0 & C_{55} & 0 \\
0 & 0 & 0 & 0 & 0 & C_{66}
\end{pmatrix} \begin{pmatrix}
\varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\
\varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\
\varepsilon_{zz} - \varepsilon_{zz}^{(res)} \\
\gamma_{xz} \\
\gamma_{yz} \\
\gamma_{xy}
\end{pmatrix}$$
(1.1)

The elements of the **C** matrix can be found from all engineering properties. Where $\varepsilon_{ii}^{(res)}$ are residual strains in the normal directions. Here they may be caused by either thermal expansion or moisture expansion:

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{zz}^{(res)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx} \Delta T + \beta_{xx} \Delta c \\ \alpha_{yy} \Delta T + \beta_{yy} \Delta c \\ \alpha_{zz} \Delta T + \beta_{zz} \Delta c \end{pmatrix}$$
(1.2)

where α_{ii} and β_{ii} are thermal and moisture expansion coefficients, and ΔT and Δc are temperature and moisture change from reference conditions. FEA has only thermal expansion while MPM may have both thermal and moisture expansion.

1.2 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{yy} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xy} \end{pmatrix}$$
(1.3)

The elements of the **Q** matrix are found from

$$Q_{xx} = \frac{E_{xx}}{1 - v_{xy}v_{yx}} \tag{1.4}$$

$$Q_{yy} = \frac{E_{yy}}{1 - v_{xy}v_{yx}} \tag{1.5}$$

$$Q_{xy} = \frac{E_{xx}v_{yx}}{1 - v_{xy}v_{yx}} = \frac{E_{yy}v_{xy}}{1 - v_{xy}v_{yx}}$$
(1.6)

$$Q_{xyxy} = G_{xy} \tag{1.7}$$

These elements are calculated in SetAnalysisProps() as C11 = Q_{xx} , C12 = Q_{xy} , C22 = Q_{yy} , and C66 = Q_{xyxy} . The thermal and moisture expansion coefficients are equal to the material thermal and moisture expansion coefficients and set as CTE1 = α_{xx} , CTE2 = α_{yy} , CME1 = β_{xx} , and CME2 = β_{yy} , also in SetAnalysisProps().

In plane stress analysis, $\sigma_{zz} = 0$, but $\varepsilon_{zz} \neq 0$. The out-of-plane strain is found from the 3D stiffness matrix by solving the σ_{zz} equation for ε_{zz} :

$$\varepsilon_{zz} = -\frac{C_{13}}{C_{33}} (\varepsilon_{xx} - \alpha_{xx} \Delta T) - \frac{C_{23}}{C_{33}} (\varepsilon_{yy} - \alpha_{yy} \Delta T) + \varepsilon_{zz}^{(res)}$$
(1.8)

The new terms are set in SetAnalysisProps() as C13 = $-C_{13}/C_{33}$, C23 = $-C_{23}/C_{33}$, CTE3 = α_{zz} , and CME3 = β_{zz} .

1.3 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{22} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res,r)} \\ \gamma_{xy} \end{pmatrix}$$
(1.9)

where residual strains now depend on reduced residual strains

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \varepsilon_{xx}^{(res)} + v_{zx} \varepsilon_{zz}^{(res)} \\ \varepsilon_{yy}^{(res)} + v_{zy} \varepsilon_{zz}^{(res)} \end{pmatrix}$$
(1.10)

which is equivalent to using reduced expansion properties

$$\begin{pmatrix} \varepsilon_{xx}^{(res,r)} \\ \varepsilon_{yy}^{(res,r)} \end{pmatrix} = \begin{pmatrix} \alpha_{xx}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \\ \alpha_{yy}^{(r)} \Delta T + \beta_{xx}^{(r)} \Delta c \end{pmatrix}$$
(1.11)

The reduced expansion coefficients are

$$\alpha_{xx}^{(r)} = \alpha_{xx} + v_{zx}\alpha_{zz}, \quad \alpha_{yy}^{(r)} = \alpha_{yy} + v_{zy}\alpha_{zz}, \quad \beta_{xx}^{(r)} = \beta_{xx} + v_{zx}\beta_{zz}, \quad \beta_{yy}^{(r)} = \beta_{yy} + v_{zy}\beta_{zz}$$
 (1.12)

These elements are calculated in SetAnalysisProps() as C11 = C_{11} , C12 = C_{12} , C22 = C_{22} , and C66 = C_{66} . The reduced expansion coefficients are set as CTE1 = $\alpha_{xx}^{(r)}$, CTE2 = $\alpha_{yy}^{(r)}$, CME1 = $\beta_{xx}^{(r)}$, and CME2 = $\beta_{yy}^{(r)}$, also in SetAnalysisProps().

In plane strain analysis, $\varepsilon_{zz} = 0$, but $\sigma_{zz} \neq 0$. The out-of-plane stress is found from the 3D stiffness matrix by setting $\varepsilon_{zz} = 0$:

$$\sigma_{zz} = C_{13} \left(\varepsilon_{xx} - (\alpha_{xx}^{(r)} - v_{zx}\alpha_{zz}) \Delta T - (\beta_{xx}^{(r)} - v_{zx}\beta_{zz}) \Delta c \right) + C_{23} \left(\varepsilon_{yy} - (\alpha_{yy}^{(r)} - v_{zy}\alpha_{zz}) \Delta T - (\beta_{yy}^{(r)} - v_{zy}\beta_{zz}) \Delta c \right) - C_{33} \varepsilon_{zz}^{(res)}$$
(1.13)

The new terms are set in SetAnalysisProps() as C13 = C_{13} , C23 = C_{23} , and C33 = C_{33} . Notice that this equation needs actual residual expansion coefficients and thus the reduced expansion coefficients must be *unreduced* by subtracting terms. For these calculations (more details in next section), the following expansion properties are set as CTE3 = α_{zz} , CME3 = β_{zz} , prop1 = v_{zx} , and prop2 = v_{zy} .

1.4 Rotated Stiffness Equations in MPM

For orthotropic materials with material angle not zero, the stiffness equations must be rotated counter-clockwise by the material point angle to transpose to the analysis coordinate systems. The material point angle is initialized when the calculations starts. To account for large displacements and rotations, the angle is updated on each time step based on the rotation tensor. The angle thus always reflects the current material orientation. Thus prior to calling MPMConstitutiveLaw(), the equations are rotated (if needed) to obtain:

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy} - \varepsilon_{yy}^{(res)} \\ \gamma_{xx} - \varepsilon_{xy}^{(res)} \end{pmatrix}$$
 (1.14)

where the rotated residual strains (which become reduced residual strains when in plane strain) are

$$\begin{pmatrix} \varepsilon_{xx}^{(res)} \\ \varepsilon_{yy}^{(res)} \\ \varepsilon_{xy}^{(res)} \end{pmatrix} = \begin{pmatrix} \text{alpha}[1]\Delta T + \text{beta}[1]\Delta c \\ \text{alpha}[2]\Delta T + \text{beta}[2]\Delta c \\ \text{alpha}[3]\Delta T + \text{beta}[3]\Delta c \end{pmatrix}$$
(1.15)

The rotated elements are found by standard in-plane rotation in the counter-clockwise direction in LoadMechanicalPropertiesFEA(). Rotation is only needed for anistotropic materials. For isotropic materials, the C[][], alpha[], and beta[] elements are calculated once for zero rotation angle. The elements of C[][] are also made specific by dividing by material density. The constitutive law should only use specific properties to have the proper specific stress.

Calculation of out-of-plane values requires rotation of the 3D stiffness matrix counter-clockwise around the z axis. The results for plane stress are

$$\varepsilon_{zz} = C[4][1](\varepsilon_{xx} - \varepsilon_{xx}^{(res)}) + C[4][2](\varepsilon_{yy} - \varepsilon_{yy}^{(res)}) + C[4][3](\gamma_{xy} - \varepsilon_{xy}^{(res)}) + \varepsilon_{zz}^{(res)}$$

$$(1.16)$$

where

$$C[4][1] = -\left(\frac{C_{13}}{C_{33}}\cos^2\theta + \frac{C_{23}}{C_{33}}\sin^2\theta\right) = C13\cos^2\theta + C23\sin^2\theta \tag{1.17}$$

$$C[4][2] = -\left(\frac{C_{13}}{C_{33}}\sin^2\theta + \frac{C_{23}}{C_{33}}\cos^2\theta\right) = C13\sin^2\theta + C23\cos^2\theta \tag{1.18}$$

$$C[4][3] = \left(\frac{C_{13}}{C_{33}} - \frac{C_{23}}{C_{33}}\right) \sin\theta \cos\theta = -(C13 - C23) \sin\theta \cos\theta \tag{1.19}$$

and CTE3 = alpha[4] = α_{zz} and CME3 = beta[4] = β_{zz} hold out-of-plane thermal expansion coefficients needed to find $\varepsilon_{zz}^{(res)}$, which was defined earlier.

The problem in plane strain is that the calculation of σ_{zz} requires rotated expansion coefficients while the alpha[1] to alpha[3] and beta[1] to beta[3] have rotated reduced expansion coefficients. The solution is to define some new terms such that

$$\begin{split} \sigma_{zz} &= \mathrm{C}[4][1](\varepsilon_{xx} - (\varepsilon_{xx}^{(res,r)} - \mathrm{alpha}[5]\varepsilon_{zz}^{(res)})) + \mathrm{C}[4][2](\varepsilon_{yy} - (\varepsilon_{yy}^{(res,r)} - \mathrm{alpha}[6]\varepsilon_{zz}^{(res)})) \\ &+ \mathrm{C}[4][3](\gamma_{xx} - (\varepsilon_{xy}^{(res,r)} - \mathrm{alpha}[7]\varepsilon_{zz}^{(res)})) - \mathrm{C}[4][4]\varepsilon_{zz}^{(res)} \end{split} \tag{1.20}$$

where

$$\rho \,C[4][1] = C_{13}\cos^2\theta + C_{23}\sin^2\theta = C13\cos^2\theta + C23\sin^2\theta \tag{1.21}$$

$$\rho \,C[4][2] = C_{13}\sin^2\theta + C_{23}\cos^2\theta = C13\sin^2\theta + C23\cos^2\theta \tag{1.22}$$

$$\rho \,C[4][3] = -(C_{13} - C_{23})\sin\theta\cos\theta = -(C13 - C23)\sin\theta\cos\theta \tag{1.23}$$

$$\rho \, \mathbb{C}[4][4] = C_{33} \tag{1.24}$$

alpha[5] =
$$v_{zx}\cos^2\theta + v_{zy}\sin^2\theta = \text{prop}1\cos^2\theta + \text{prop}2\sin^2\theta$$
 (1.25)

$$alpha[6] = v_{xx} \sin^2 \theta + v_{xy} \cos^2 \theta = prop1 \sin^2 \theta + prop2 \cos^2 \theta$$
 (1.26)

$$alpha[7] = -2(v_{zx} - v_{zy}) \sin\theta \cos\theta = -2(prop1 - prop2) \sin\theta \cos\theta \qquad (1.27)$$

Again, CTE3 = alpha[4] = α_{zz} and CME3 = beta[4] = β_{zz} hold out-of-plane expansion coefficients needed to find $\varepsilon_{zz}^{(res)}$, which was defined earlier. In these terms, $\varepsilon_{xx}^{(res,r)}$ – alpha[5] $\varepsilon_{zz}^{(res)}$ (and similarly for (yy,6) and (xy,7) pairs) evaluate to the rotated, but unreduced expansion strains. The angle θ is the material angle on the material point, which is a clockwise rotation from the analysis axes.

1.5 Rotated Stiffness Equations in FEA

To be added.

1.6 Two-State Isotropic Material

The BistableIsotropic class inherits from Isotropic. It allows two different isotropic states and transitions between the states based on various criteria. The two options are to have a jump to a new linear stress-strain curve (DILATION_RULE) or to simply change the slope (DISTORTION_RULE or VONMISES_RULE). When jumping to a new curve (DILATION_RULE), the deformed state can additionally define a new origin by adding an offset volumetric strain. The only new calculations needed are to change properties when a transition occurs and if there is a new stress-strain curve to calculate a jump in stresses to the new curve. The 3D stiffness equations with an offset volumetric strain for an isotropic material are

$$\begin{pmatrix}
\sigma_{xx} \\
\sigma_{yy} \\
\sigma_{zz} \\
\tau_{xz} \\
\tau_{yz} \\
\tau_{xy}
\end{pmatrix} = \begin{pmatrix}
C_{11} & C_{12} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{11} & C_{12} & 0 & 0 & 0 \\
C_{12} & C_{12} & C_{11} & 0 & 0 & 0 \\
0 & 0 & 0 & C_{66} & 0 & 0 \\
0 & 0 & 0 & 0 & C_{66} & 0 \\
0 & 0 & 0 & 0 & C_{66}
\end{pmatrix} \begin{pmatrix}
\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\varepsilon_{zz} - \frac{\Delta}{3} - \varepsilon^{(res)} \\
\gamma_{xz} \\
\gamma_{yz} \\
\gamma_{xy}
\end{pmatrix} \tag{1.28}$$

where $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$. Whenever a change in state occurs in the DILATION_RULE, these equations must be used to recalculate all components of stress.

1.6.1 Plane Stress Equations

The plane stress stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} Q_{xx} & Q_{xy} & 0 \\ Q_{xy} & Q_{xx} & 0 \\ 0 & 0 & Q_{xyxy} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \\ \gamma_{xx} \end{pmatrix}$$
(1.29)

with out-of-plane strain given by

$$\varepsilon_{zz} = -\frac{C_{12}}{C_{11}} (\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)}) - \frac{C_{12}}{C_{11}} (\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)}) + \frac{\Delta}{3} + \varepsilon^{(res)}$$
(1.30)

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] = Q_{xx}/ρ , C[1][2] = Q_{xy}/ρ , C[3][3] = Q_{xyxy}/ρ , C[4][1] = C[4][2] = $-C_{12}/C_{11}$, alpha[1] = alpha[2] = alpha[4] = CTE3 = α , beta[1] = beta[2] = beta[4] = CME3 = β , C[1][3] = C[2][3] = alpha[3] = beta[3] = 0, and normOffset = $\Delta/3$.

1.6.2 Plane Strain Equations

The plane strain stiffness equations for in-plane stresses are

$$\begin{pmatrix} \sigma_{xx} \\ \sigma_{yy} \\ \tau_{xy} \end{pmatrix} = \begin{pmatrix} C_{11} & C_{12} & 0 \\ C_{12} & C_{11} & 0 \\ 0 & 0 & C_{66} \end{pmatrix} \begin{pmatrix} \varepsilon_{xx} - \frac{\Delta}{3}(1+v) - \varepsilon^{(res,r)} \\ \varepsilon_{yy} - \frac{\Delta}{3}(1+v) - \varepsilon^{(res,r)} \\ \gamma_{xx} \end{pmatrix}$$
(1.31)

where $\varepsilon^{(res,r)} = \alpha^{(r)} \Delta T + \beta^{(r)} \Delta c$. In other words, a reduced offset and residual strains are needed. The out-of-plane stress is found from 3D equation and without reduced terms:

$$\sigma_{zz} = C_{12} \left(\varepsilon_{xx} - \frac{\Delta}{3} - \varepsilon^{(res)} \right) + C_{12} \left(\varepsilon_{yy} - \frac{\Delta}{3} - \varepsilon^{(res)} \Delta T \right) - C_{11} \left(\frac{\Delta}{3} + \varepsilon^{(res)} \right)$$
 (1.32)

For the super-class Isotropic material, the needed terms are stored as C[1][1] = C[2][2] = C[4][4] = C_{11}/ρ , C[1][2] = C_{12}/ρ , C[3][3] = C_{66}/ρ , C[4][1] = C[4][2] = C_{12}/ρ , alpha[1] = alpha[2] = $\alpha(1+v)$, beta[1] = beta[2] = $\beta(1+v)$, alpha[4] = CTE3 = α , beta[4] = CME3 = β , alpha[5] = alpha[6] = v, C[1][3] = C[2][3] = C[4][3] = alpha[3] = alpha[7] = 0, normOffset = $\Delta/3$, and nu = v.

1.6.3 Special Cases for E=0

If either K or G in any state is zero then the tensile modulus E is also zero. Although this state is easy to derive in theory, in practice, it rarely gives useful results in dynamic MPM (except maybe as an inclusion in a composite material). A second problem is that it requires special cases to make it work with the super Isotropic class because that class has equations requiring $E \neq 0$. For these reasons, NairnMPM does not support zero modulus states in this material. It is easy to approximate such a state simply by setting K and/or G to a very small number.

Chapter 2

Plasticity Materials

2.1 Introduction

For general analysis, begin with an elastic stress increment, $d\sigma$, given by

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{2.1}$$

where **C** is the stiffness matrix, $d\boldsymbol{\varepsilon}_{tot} = d\boldsymbol{\varepsilon} - d\boldsymbol{\varepsilon}_{res}$ is total strain increment (using tensorial strains) relative to the residual strain increments. Let $f(\boldsymbol{\sigma}, \boldsymbol{q})$ be a plastic potential function that depends on components of stress, possibly on some collection of internal variables (\boldsymbol{q}) or other parameters. The potential function is defined such that f=0 is the yield surface, f<0 is the elastic region, and f>0 is not allowed.

First construct a trial update that assumes elastic deformation only or assumes that $d\varepsilon_e = d\varepsilon_{tot}$, $d\varepsilon_p = 0$, and $d\mathbf{q} = 0$ (in other words, no plastic deformation). The trial f is given by

$$f_{trial} = f(\boldsymbol{\sigma} + d\boldsymbol{\sigma}, \boldsymbol{q}) = f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot}, \boldsymbol{q})$$
(2.2)

If f_{trial} < 0, the deformation is elastic, the trial increment is accepted, and the analysis is done.

If $f_{trial} > 0$, the task is to partition the total strain into elastic and plastic strain, $d\varepsilon_{tot} = d\varepsilon_e + d\varepsilon_p$, such that the final f is zero. In other words, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \mathbf{C}d\boldsymbol{\varepsilon}_{p}, \boldsymbol{q} + d\boldsymbol{q}) = 0$$
(2.3)

By the associative flow rule, the increment in plastic strain and internal variables are assumed to be

$$d\varepsilon_p = \lambda df$$
 and $d\mathbf{q} = -\lambda \mathbf{h}(\sigma, \mathbf{q})$ (2.4)

where

$$df_i = \frac{\partial f}{\partial \sigma_i} \tag{2.5}$$

are the derivatives of f with respect to the components of stress and the internal variables and h is function of stress and internal variable state). Thus, the task is to solve

$$f(\boldsymbol{\sigma} + \mathbf{C}d\boldsymbol{\varepsilon}_{tot} - \lambda \mathbf{C}d\boldsymbol{f}, \boldsymbol{q} - \lambda \boldsymbol{h}) = 0$$
(2.6)

for λ . For arbitrary f, this solution may require numerical analysis.

If all increments are small, and f depends only on stress and internal variables, the problem can be expanded around f_{trial} in a Taylor series to give

$$f = f_{trial} - \lambda \left(d\mathbf{f} \cdot \mathbf{C} d\mathbf{f} + d\mathbf{f}^q \cdot \mathbf{h} \right) \tag{2.7}$$

where

$$df_i^q = \frac{\partial f}{\partial q_i} \tag{2.8}$$

Setting the new f to zero to land on the yield surface, this equation can be solved for λ and thus solved to partition the strain increment into elastic and plastic strain. The solution is

$$\lambda = \frac{f_{trial}}{d\mathbf{f} \cdot \mathbf{C}d\mathbf{f} + d\mathbf{f}^q \cdot \mathbf{h}}$$
 (2.9)

For larger increments or more accurate solution, the problem can be solved iteratively by Newton's method with bracketing. The following method is only used in the code for anisotropic materials because special case results that seem to work well for isotropic materials are given below. Here is method used for anisotropic materials.

- 1. Find an initial guess for $\lambda^{(2)} = \lambda$ from the Eq. (2.9) where df and h are found from σ_{trial} or stress when $\lambda = 0$ and df^q is found from initial q.
- 2. Update stress at initial guess in two steps

$$\sigma^{(1)} = \sigma_{trial} - \lambda^{(2)} \mathbf{C} df(\sigma_{trial}) \tag{2.10}$$

$$\boldsymbol{\sigma}^{(2)} = \boldsymbol{\sigma}_{trial} - \lambda^{(2)} \mathbf{C} df(\boldsymbol{\sigma}^{(1)})$$
 (2.11)

3. Find new df and h using $\sigma^{(2)}$ followed by calculation of f_2 corresponding to λ_2 :

$$f^{(2)} = f(\sigma^{(2)}, q^{(0)} - \lambda^{(2)} h(\sigma^{(2)}))$$
(2.12)

4. Pick a lower λ and calculate f:

$$\lambda^{(1)} = \frac{\lambda^{(2)}}{2} \tag{2.13}$$

$$\sigma^{(1)} = \sigma_{trial} - \lambda^{(1)} \mathbf{C} df(\sigma^{(2)})$$

$$f^{(1)} = f(\sigma^{(1)}, q^{(0)} - \lambda^{(1)} h(\sigma^{(2)}))$$
(2.14)
(2.15)

$$f^{(1)} = f(\sigma^{(1)}, q^{(0)} - \lambda^{(1)}h(\sigma^{(2)}))$$
 (2.15)

5. Expand the interval $\lambda^{(1)}$ to $\lambda^{(2)}$ as needed until it brackets a solution for f=0. The code follows zbrac() in "Numerical Recipes in C" (page 260). Whenever need new value for f, use:

$$\sigma^{(k)} = \sigma_{trial} - \lambda^{(k)} \mathbf{C} df(\sigma^{(2)})$$

$$f^{(k)} = f(\sigma^{(k)}, q^{(0)} - \lambda^{(k)} h(\sigma^{(2)}))$$
(2.16)
(2.17)

$$f^{(k)} = f(\sigma^{(k)}, q^{(0)} - \lambda^{(k)} h(\sigma^{(2)}))$$
 (2.17)

In other words, use the slopes calculated in step 3 above throughout the calculation. Attempts to recalculate the slope on each step tended to cause problems. If the bracketing fails, return the initial λ from step 1 as an approximate result.

6. Solve for λ using Newton-Raphson method with derivatives and bracketing following rtsafe() in "Numerical Recipes in C" (page 273). Whenever needed, find f and its derivative from

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}_{trial} - \lambda^{(k)} \mathbf{C} d\boldsymbol{f}(\boldsymbol{\sigma}^{(2)})$$
 (2.18)

$$q^{(k)} = q^{(0)} - \lambda^{(k)} h(\sigma^{(2)})$$
 (2.19)

$$f^{(k)} = f(\sigma^{(k)}, q^{(k)}) \tag{2.20}$$

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(2)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(2)}) + df^{q}(\boldsymbol{\alpha}^{(k)}) \cdot \boldsymbol{h}(\boldsymbol{\sigma}^{(2)})\right)$$
(2.21)

Again, the key slopes are found from the initial stress guess in $\sigma^{(2)}$. Attempts to update slopes as solution proceeds were less stable and also slower. It might be possible to update slopes after solution, re-bracket the solution and repeat, but it may not improve accuracy much.

7. Continue until convergence.

2.2 J_2 Flow Theory for Isotropic Materials

For a special case, consider an isotropic material with isotropic hardening, a single internal variable, α , and assume the plastic potential is a function only of $J_2 = (1/2) \|\mathbf{s}\|^2$ expressed as

$$f = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha) = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}(\sigma_y - q)$$
 (2.22)

where **s** is the deviatoric stress tensor and $K(\alpha)$ defines the tensile yield stress as a function of the hardening variable and possibly other variables (*e.g.*, plastic strain rate or temperature, but not pressure). The plastic variable q and α are related by

$$q = \sigma_y - K(\alpha) \tag{2.23}$$

The usual assumption is to take

$$d\alpha = \lambda \sqrt{\frac{2}{3}}$$
 which implies $dq = -\lambda K'(\alpha) \sqrt{\frac{2}{3}}$ and $h = K'(\alpha) \sqrt{\frac{2}{3}}$ (2.24)

All materials that fit this mold are handled in NairnMPM by the IsoPlasticity class. The implementation of hardening law $(K(\alpha))$ is handled by a separate subclass of the HardeningLawBase class. Combining IsoPlasticity class with various hardening laws gives a series of material. The only materials that need to subclass IsoPlasticity is if they need a different equation of state to handle elastic parts differently.

In terms of the deviatoric stress

$$2J_2 = \|\mathbf{s}\|^2 = s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 + 2s_{xz}^2 + 2s_{yz}^2$$
 (2.25)

During plastic deformation, the plastic strain increment simplifies to

$$\lambda df = \lambda \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|} = \lambda \mathbf{n}$$
 (2.26)

where \mathbf{s}_{trial} is the deviatoric stress calculated by assuming no plastic deformation. Since $\|d\boldsymbol{\varepsilon}_p\| = \|\lambda d\boldsymbol{f}\| = \lambda$, this assumption corresponds to

$$d\alpha = \sqrt{\frac{2}{3}} \|d\varepsilon_p\| \tag{2.27}$$

where $\sqrt{\frac{2}{3}}\|d\pmb{\varepsilon}_p\|$ is known as the equivalent plastic strain increment. In other words, α is the cumulative equivalent plastic strain. During uniaxial plastic deformation, the equivalent plastic strain will equal the axial plastic strain (i.e. when $d\varepsilon_{xx}=d\varepsilon$ and $d\varepsilon_{yy}=d\varepsilon_{zz}=-d\varepsilon/2$, $\sqrt{\frac{2}{3}}\|d\pmb{\varepsilon}_p\|=d\varepsilon$).

Once λ is known, the final deviatoric stress is written as

$$\mathbf{s} = \mathbf{s}_{trial} - \lambda 2G\mathbf{n} = \left(1 - \frac{\lambda 2G}{\|\mathbf{s}_{trial}\|}\right) \mathbf{s}_{trial}$$
(2.28)

which leads to

$$\|\mathbf{s}\| = \|\mathbf{s}_{trial}\| - \lambda 2G$$
 and $\frac{\mathbf{s}}{\|\mathbf{s}\|} = \frac{\mathbf{s}_{trial}}{\|\mathbf{s}_{trial}\|}$ (2.29)

The required equation for finding λ thus simplifies to depend only on $\|\mathbf{s}_{trial}\|$, G, and hardening law:

$$f^{(k)} = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = \|\mathbf{s}_{trial}\| - \lambda^{(k)}2G - \sqrt{\frac{2}{3}}K(\alpha^{(k)}) = 0$$
 (2.30)

This can be solved in the iterative method above with the specific results of:

$$\frac{df^{(k)}}{d\lambda} = -2G - \sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = -2G - \frac{2K'(\alpha^{(k)})}{3}$$
 (2.31)

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}}$$
 (2.32)

where $K'(\alpha^{(k)})$ is the derivative with respect to α . This solution is implemented by hardening law classes. The HardeningLawBase class solves this equation numerically by having a subclass providing for calculation of $K(\alpha^{(k)})$ (in GetYield()) and $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$ (in GetKPrime()). The base class uses Newton's method with bracketing; the bracketing is needed because some yield functions are unstable by the unbracketed Newton's method. The solution is done in SolveForLambdaBracketed() as follows:

- 1. The result for $\lambda = 0$ is known to have f > 0.
- 2. Set the plastic strain rate $d\alpha/dt$ to 1 sec⁻¹ where dt is time step and then trial $\lambda = d\alpha/\sqrt{2/3}$.
- 3. Evaluate f; if it is negative, λ is between current value and previous order of magnitude; if it is positive, increase the strain rate by a factor or 10 and go back to beginning of this step.

If any subclass hardening law can bracket the solution faster (or find the solution with an unbracketed method), it can override SolveForLambdaBracketed() and provide a new method (which may be as simple as calling the unbracketed method in SolveForLambda() or devising a better bracketing method in BracketSolution()). For example, for a linear hardening law, λ can be found in a closed-form expression — when $K(\alpha) = \sigma_Y + E_p \alpha$, the task is to solve

$$f = \|\mathbf{s}_{trial}\| - \lambda 2G - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \left(\alpha^0 + \lambda \sqrt{\frac{2}{3}}\right)\right) = 0$$
 (2.33)

The analytical solution is

$$\lambda = \frac{\|\mathbf{s}_{trial}\| - \sqrt{\frac{2}{3}} \left(\sigma_Y + E_p \alpha^0\right)}{2G + \frac{2E_p}{3}}$$
(2.34)

2.3 Plane Strain and Axisymmetric Analysis for J_2 Flow Theory, Isotropic Materials

Plane strain and axisymmetric analysis can follow the above analysis. For isotropic material models, it is convenient to formulate in terms of bulk and shear moduli (K and G) and track pressure and deviatoric stress. The stress update is

$$\frac{\Delta V}{V} = d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3d\varepsilon^{(res)}$$
 (2.35)

$$dP = -K\frac{\Delta V}{V} \tag{2.36}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for $i = j = x, y, z$ (2.37)

$$d\tau_{xy} = ds_{xy} = Gd\gamma_{xy} \tag{2.38}$$

(2.39)

where

$$d\varepsilon_{xx}^{(tot)} = d\varepsilon_{xx} - d\varepsilon^{(res)}, \quad d\varepsilon_{yy}^{(tot)} = d\varepsilon_{yy} - d\varepsilon^{(res)}, \quad \text{and} \quad d\varepsilon_{zz}^{(tot)} = d\varepsilon_{zz} - d\varepsilon^{(res)}$$
 (2.40)

are the strain increments relative to the increment in residual strain (note that in plane strain, $d\varepsilon_{zz} = 0$, but it may be nonzero when axisymmetric). For isotropic materials, only normal residual strains exist and they are all equal to

$$d\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c \tag{2.41}$$

If the updated stress has f < 0, the analysis uses the new stress state.

If f > 0, the equations in the previous section are used to find λ . Once λ is known, the initial update is modified using

$$ds_{ij} = ds_{ij}^{trial} - 2Gd\varepsilon_{ij}^{p} \tag{2.42}$$

while the pressure update is unchanged. By including σ_{zz} in the calculations, the out-of-plane stress is correctly updated. In general, the plastic strain will include plastic strain in the z direction, even in plane strain. To keep zero total strain when in plane strain analysis, the out-of-plane elastic strain update will be

$$d\varepsilon_{ij}^e = -d\varepsilon_{ij}^p \tag{2.43}$$

For the IsoPlasticity class, K = Kred, G = Gred, $\alpha = \text{CTE3}$, and $\beta = \text{CME3}$. The default implementation assumes these are constant and they are calculated once in VeriofyAndLoadProperties(). A subclass can implement non-linear materials two ways. To let K, G, α , and β , depend on particle state, calculate their state-dependent values in LoadMechanicalProps() and/or GetTransportProps(). An alternative approach for more complicated materials is to replace the pressure calculation by overriding UpdatePressure(). This method is called after finding $\Delta V/V$, but before any other calculations. It must update the particle pressure and particle strain energy due to dilation. It should also calculate G (in Gred) if it depends on particle state. It need not calculate K (in Kred) because it is not needed after new pressure is found.

2.4 Plane Stress Analysis for J_2 Flow Theory, Isotropic Materials

Unfortunately, plane stress analysis requires some addition steps and always requires numerical solution for λ . First, by requiring $\sigma_{zz} = 0$, the 3D equations can be solved to show

$$d\varepsilon_{zz}^{(tot)} = -\frac{v}{1 - v} \left(d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} \right)$$
 (2.44)

Using this relation, the stress update for the in-plane terms only are

$$\frac{\Delta V}{V} = d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)} + d\varepsilon_{zz}^{(tot)} = \left(\frac{1 - 2v}{1 - v}\right) \left(d\varepsilon_{xx}^{(tot)} + d\varepsilon_{yy}^{(tot)}\right)$$
(2.45)

$$dP = -K\frac{\Delta V}{V} \tag{2.46}$$

$$ds_{ij}^{trial} = 2G\left(d\varepsilon_{ij}^{(tot)} - \frac{\Delta V}{3V}\right)$$
 for $i = j = x, y$ (2.47)

$$ds_{\alpha\alpha}^{trial} = ds_{\alpha\alpha} = dP (2.48)$$

$$ds_{zz}^{trial} = ds_{zz} = dP$$

$$d\tau_{xy}^{trial} = ds_{xy}^{trial} = Gd\gamma_{xy}$$
(2.48)

(2.50)

The IsoPlasticity class is based on K and G (in Kred and Gred). For calculation efficiency, two above terms and one term defined below are stored in variables:

psRed =
$$\left(\frac{1-2v}{1-v}\right) = \frac{1}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.51)

$$psLr2G = \frac{v}{1-v} = \frac{\frac{K}{2G} - \frac{1}{3}}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.52)

psKred =
$$\frac{E}{3(1-v)} = K * psRed = \frac{K}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.53)

Note that plane stress analysis assumes incrementally linear-elastic response (although the linear terms can depend on particle state) and also needs to know psRed before finding the pressure change. Materials that override LoadMechanicaProps() must calculate psRed, psLr2G, and psKred along with Kred and Gred. Materials that override UpdatePressure() instead will need to deal with these terms differently. For such materials, the incremental volumetric strain passed to UpdatePressure() depends on psRed (see Eq. (2.45)). The best approach is to set psRed = 1 and then scale delV by the current (1-2v)/(1-v) in UpdatePressure(). That method can leave psRed = 1 (because it is no longer needed) and calculate psLr2G (for normal stress update) and psKred (for finding λ) needed in subsequent calculations. It should also calculate Gred, but Kred is not needed.

When f > 0, the process (following Simo and Hughes), effectively (or equivalently) revises f using squares to be

$$f = \|\mathbf{s}\|^2 - \frac{2}{3}K^2(\alpha) = \sigma \mathbf{P}\sigma - \frac{2}{3}K^2(\alpha)$$
 (2.54)

where **P** is a transformation matrix on the plane stress vector $\sigma = (\sigma_{xx}, \sigma_{yy}, \tau_{xy})$ given by

$$\mathbf{P} = \begin{pmatrix} \frac{2}{3} & -\frac{1}{3} & 0\\ -\frac{1}{3} & \frac{2}{3} & 0\\ 0 & 0 & 2 \end{pmatrix}$$
 (2.55)

such that $\sigma \mathbf{P} \sigma = \|\mathbf{s}\|^2$. The plastic strain update from this f, and using engineering shear strain, is

$$(d\varepsilon_{xx}^p, d\varepsilon_{yy}^p, d\gamma_{xy}^p) = \lambda df = \lambda \mathbf{P}\sigma$$
 (2.56)

Now, in this flow theory, the total volume change due to plastic strains is zero; thus this plastic strain increment implies $d\varepsilon_{zz}^p = -(d\varepsilon_{xx}^p + d\varepsilon_{yy}^p)$. The full 3D plastic strain increment tensor using tensorial strains is

$$d\varepsilon_{p} = \lambda \begin{pmatrix} \frac{1}{3} (2\sigma_{xx} - \sigma_{yy}) & \tau_{xy} & 0\\ \tau_{xy} & \frac{1}{3} (2\sigma_{yy} - \sigma_{xx}) & 0\\ 0 & 0 & -\frac{1}{3} (\sigma_{xx} + \sigma_{yy}) \end{pmatrix}$$
(2.57)

This traceless tensor has inner product

$$\|d\boldsymbol{\varepsilon}_p\|^2 = \lambda^2 \left(\frac{2}{3}(\sigma_{xx}^2 + \sigma_{yy}^2 - \sigma_{xx}\sigma_{yy}) + 2\tau_{xy}^2\right) = \lambda^2 \sigma \mathbf{P}\sigma \tag{2.58}$$

$$= \lambda^2 \left(s_{xx}^2 + s_{yy}^2 + s_{zz}^2 + 2s_{xy}^2 \right) \tag{2.59}$$

Requiring $d\alpha$ to equal the equivalent plastic strain increment (as it does in plane strain and 3D), leads to

$$d\alpha = \sqrt{\frac{2}{3}}\lambda\sqrt{\sigma\mathbf{P}\sigma} \tag{2.60}$$

When f > 0, the task is to find the $(n+1)^{st}$ stress and strain state in terms of the n^{th} state. In terms of the to-be-determined λ , the stress update is

$$\sigma_{n+1}^{trial} = \sigma_n + \mathbf{C}(d\varepsilon_{xx}^{(tot)}, d\varepsilon_{yy}^{(tot)}, d\gamma_{xy}^{(tot)})$$
 (2.61)

$$f\sigma_{n+1} = \sigma_{n+1}^{trial} - \mathbf{C}d\boldsymbol{\varepsilon}_p = \sigma_{n+1}^{trial} - \mathbf{C}\lambda\mathbf{P}\sigma_{n+1}$$
 (2.62)

where **C** is the plane stress stiffness matrix:

$$\mathbf{C} = \begin{pmatrix} \frac{E}{1-v^2} & \frac{vE}{1-v^2} & 0\\ \frac{vE}{1-v^2} & \frac{E}{1-v^2} & 0\\ 0 & 0 & G \end{pmatrix} \quad \text{with} \quad \mathbf{C}^{-1} = \begin{pmatrix} \frac{1}{E} & -\frac{v}{E} & 0\\ -\frac{v}{E} & \frac{1}{E} & 0\\ 0 & 0 & \frac{1}{G} \end{pmatrix}$$
 (2.63)

Solving the second equation the required stress is:

$$\sigma_{n+1} = \left[\mathbf{C}^{-1} + \lambda \mathbf{P} \right]^{-1} \mathbf{C}^{-1} \sigma_{n+1}^{trial}$$
 (2.64)

This general result applied to isotropic materials leads to

$$\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + \frac{E}{3(1-y)}\lambda} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)$$
(2.65)

$$-\sigma_{xx}^{(n+1)} + \sigma_{yy}^{(n+1)} = \frac{1}{1 + 2G\lambda} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)$$
 (2.66)

$$\tau_{xy}^{(n+1)} = \frac{\tau_{xy}^{trial}}{1 + 2G\lambda} \tag{2.67}$$

and

$$\|\mathbf{s}\|^{2} = \sigma_{n+1} \mathbf{P} \sigma_{n+1} = \frac{\frac{1}{6} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)^{2}}{\left(1 + \frac{E}{3(1-y)} \lambda \right)^{2}} + \frac{\frac{1}{2} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} \right)^{2} + 2\tau_{xy}^{trial^{2}}}{(1 + 2G\lambda)^{2}}$$
(2.68)

The task is to find λ by Newton's method with the key equations being:

$$f^{(k)} = \frac{1}{2} \|\mathbf{s}^{(k)}\|^2 - \frac{1}{3} K^2(\alpha^{(k)}) = 0$$

$$\frac{df^{(k)}}{d\lambda} = -\left[\frac{E}{3(1-\nu)} \frac{\frac{1}{6} \left(\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^2}{\left(1 + \frac{E}{3(1-\nu)}\lambda^{(k)}\right)^3} + 2G \frac{\frac{1}{2} \left(-\sigma_{xx}^{trial} + \sigma_{yy}^{trial}\right)^2 + 2\tau_{xy}^{trial^2}}{\left(1 + 2G\lambda^{(k)}\right)^3} \right]$$

$$1 dK^2(\alpha^{(k)})$$
(2.69)

$$-\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} \tag{2.70}$$

$$\alpha^{(k+1)} = \alpha^0 + \lambda^{(k+1)} \sqrt{\frac{2}{3}} \| \mathbf{s}^{(k+1)} \|$$
 (2.71)

A subclass of IsoPlasticity class can implement this numerical solution simply by providing for calculation of $K(\alpha^{(k)})$ (in GetYield()) and $\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda}$ (in GetK2Prime()). To keep the analysis in terms of K and G, the modulus term above can be found from

$$psKred = \frac{E}{3(1-v)} = \frac{K}{\frac{K}{2G} + \frac{2}{3}}$$
 (2.72)

When material class is working in deviatoric stress ($\mathbf{s} = \boldsymbol{\sigma} + P$), the key terms needed above are

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$
 (2.73)

$$\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{xx}^{trial} + s_{yy}^{trial} - 2P_{final}$$

$$-\sigma_{xx}^{trial} + \sigma_{yy}^{trial} = s_{yy}^{trial} - s_{xx}^{trial}$$

$$s_{xx}^{(n+1)} = \sigma_{xx}^{(n+1)} + P_{final}$$

$$s_{yy}^{(n+1)} = \sigma_{yy}^{(n+1)} + P_{final}$$

$$s_{zz}^{(n+1)} = P_{final}$$

$$s_{xy}^{(n+1)} = \tau_{xy}^{(n+1)}$$
(2.75)
$$(2.76)$$

$$(2.77)$$

$$s_{xx}^{(n+1)} = \sigma_{xx}^{(n+1)} + P_{final}$$
 (2.75)

$$s_{\gamma\gamma}^{(n+1)} = \sigma_{\gamma\gamma}^{(n+1)} + P_{final}$$
 (2.76)

$$s_{\sigma\sigma}^{(n+1)} = P_{final} \tag{2.77}$$

$$s_{yy}^{(n+1)} = \tau_{yy}^{(n+1)} \tag{2.78}$$

The special hardening laws that allow a closed-form expression in plane strain will still require numerical solution in plane stress. The example given above used $K(\alpha) = \sigma_Y + E_p \alpha$. The equation for λ will be quartic expression. The one key derivative needed, however, simplifies to:

$$\frac{1}{3}\frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \left(\sigma_{Y} + E_{p}\alpha^{(k)}\right) E_{p} \|\mathbf{s}^{(k)}\|$$
(2.79)

3D Analysis for J_2 Flow Theory, Isotropic Materials 2.5

This analysis follows the plane strain and axisymmetric section except includes direct updates for γ_{xz} , γ_{yz} , τ_{xz} , and τ_{yz} .

Examples of J_2 Flow Theory Materials

From the previous sections, analysis with materials that can use J_2 flow theory only require code implementation of the yield stress $(K(\alpha))$ and its derivatives. For plane strain or 3D, the code only needs $\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda}$. To handle plane stress as well, the code needs $\frac{1}{3} \frac{dK^2(\alpha^{(k)})}{d\lambda}$. When the yield stress depends on strain rate, that rate is $\dot{\varepsilon}_p = d\alpha/dt$ where dt is the time step. When evaluating in plane strain or 3D code $\alpha'(\lambda) = \sqrt{2/3}$ and $\dot{\varepsilon}_p'(\lambda) = \sqrt{2/3}/dt$. In plane stress code $\alpha'(\lambda) = \sqrt{2/3} \|\mathbf{s}\|$ and $\dot{\varepsilon}_p'(\lambda) = \sqrt{2/3} \|\mathbf{s}\|/dt$.

All hardening laws are implemented as subclasses of the HardeningLawBase class. The Isoplasticity class, or any of its subclasses, can use any hardening law by picking it when defining material parameters. Those the total number of available materials in this group is number of hardening laws × number of Isoplasticity classes. The following sections list the current hardening laws and the equations that are implemented.

2.6.1 VonMises Material with Linear Work Hardening

$$K(\alpha) = \sigma_y(1 + \beta \alpha) = \sigma_y + E_p \alpha \tag{2.80}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} E_p \tag{2.81}$$

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(\sigma_y + E_p \alpha)E_p \|\mathbf{s}\|$$
 (2.82)

2.6.2 VonMises Material with Non-Linear Work Hardening

$$K(\alpha) = \sigma_y (1 + \beta \alpha)^n \tag{2.83}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n (1 + \beta \alpha)^{n-1}$$
(2.84)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n (1 + \beta \alpha)^{2n-1} ||\mathbf{s}||$$
 (2.85)

2.6.3 VonMises Material with Alternate Non-Linear Work Hardening

$$K(\alpha) = \sigma_y(1 + \beta \alpha^n) \tag{2.86}$$

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \sigma_y \beta n \alpha^{n-1}$$
(2.87)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} \sigma_{y}^{2} \beta n \alpha^{n-1} (1 + \beta \alpha^{n}) ||\mathbf{s}||$$
 (2.88)

2.6.4 Johnson-Cook

$$K(\alpha) = (A + B\alpha^n) \left(1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.89)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} \left[Bn\alpha^{n-1} \left(1 + C \ln \frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0} \right) + \frac{C}{\dot{\varepsilon}_p dt} (A + B\alpha^n) \right] \left(1 - (T^*)^m \right) \tag{2.90}$$

$$\frac{1}{3}\frac{dK^2(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}}(A+B\alpha^n)\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right)\left(1-(T^*)^m\right)^2$$

$$\left[Bn\alpha^{n-1}\left(1+C\ln\frac{\dot{\varepsilon}_p}{\dot{\varepsilon}_0}\right) + \frac{C}{\dot{\varepsilon}_p dt}(A+B\alpha^n)\right] \|\mathbf{s}\| \tag{2.91}$$

This law has numerical issues as $\dot{\varepsilon}_p \to 0$ because the $\ln \dot{\varepsilon}_p$ can cause the yield stress to be nonphysically negative. One solution is to truncate at $\dot{\varepsilon}_{p,min}$ within $\dot{\varepsilon}_0 e^{-1/C} < \dot{\varepsilon}_{p,min} < \dot{\varepsilon}_0$; the lower limit is when the rate term becomes zero and the upper is when it is one. Below $\dot{\varepsilon}_{p,min}$, the rate term can be taken as a constant using that minimum strain rate. The resulting yield functions are

$$K(\alpha) = (A + B\alpha^n) \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.92)

$$\sqrt{\frac{2}{3}} \frac{dK(\alpha^{(k)})}{d\lambda} = \frac{2}{3} Bn\alpha^{n-1} \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_0} \right) \left(1 - (T^*)^m \right)$$
 (2.93)

$$\frac{1}{3} \frac{dK^{2}(\alpha^{(k)})}{d\lambda} = \sqrt{\frac{8}{27}} Bn\alpha^{n-1} (A + B\alpha^{n}) \left(1 + C \ln \frac{\dot{\varepsilon}_{p,min}}{\dot{\varepsilon}_{0}} \right)^{2} \left(1 - (T^{*})^{m} \right)^{2} ||\mathbf{s}||$$
 (2.94)

2.7 Anisotropic 2D Plane Strain and Axisymmetric Analysis

In general plane strain or axisymmetric analysis, the matrix equation for update is:

$$d\sigma = \mathbf{C}d\varepsilon_{tot} + \varepsilon_{excess} \tag{2.95}$$

The key terms are

$$\mathbf{C} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] & 0 \\ C[1][2] & C[2][2] & C[2][3] & 0 \\ C[4][1] & C[4][2] & C[4][3] & C[4][4] \\ C[1][3] & C[2][3] & C[3][3] & 0 \end{pmatrix}$$
(2.96)

$$d\varepsilon_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{zz} - \varepsilon_{zz}^{(res)}, d\gamma_{xy} - \varepsilon_{xy}^{(res,r)}\right)$$
(2.97)

$$df = (df_{xx}, df_{yy}, df_{zz}, df_{xy}) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{xy}}\right)$$
(2.98)

$$\begin{pmatrix}
\varepsilon_{xx}^{(res,r)} \\
\varepsilon_{yy}^{(res,r)} \\
\varepsilon_{yy}^{(res)} \\
\varepsilon_{zz}^{(res,r)}
\end{pmatrix} = \begin{pmatrix}
\operatorname{alpha}[1]\Delta T + \operatorname{beta}[1]\Delta c \\
\operatorname{alpha}[2]\Delta T + \operatorname{beta}[2]\Delta c \\
\alpha_{zz}\Delta T + \beta_{zz}\Delta c \\
\operatorname{alpha}[3]\Delta T + \operatorname{beta}[3]\Delta c
\end{pmatrix}$$
(2.99)

The term $d\varepsilon_{zz}$ is zero for plane strain, but incremental hoop strain of axisymmetry, while the term c_{excess} is zero for axisymmetry but is needed for plane strain analysis to compensate for use of reduced thermal and moisture expansion coefficients in the x-y terms. The only non-zero component is:

$$c_{excess}[3] = (C[4][1]alpha[5] + C[4][2]alpha[6] + C[4][3]alpha[7])\varepsilon_{zz}^{(res)}$$
(2.100)

Note that in the code, alpha[5] to alpha[7] hold out-of=plane Poisson ratios (or rotated ratios) and not thermal expansion coefficient. This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \quad d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \quad d\gamma_{xy}^{(p)} = \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(p)} = \lambda df_{zz}$$
 (2.101)

The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}, \quad \text{and} \quad d\varepsilon_{zz}^{(e)} = -\lambda df_{zz}$$
(2.102)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[1][1] & C[1][2] & C[1][3] \\ C[1][2] & C[2][2] & C[2][3] \\ C[1][3] & C[2][3] & C[3][3] \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\gamma_{xx}^{(e)} - \varepsilon_{xy}^{(res,r)} \end{pmatrix}$$
 (2.103)

For plane strain analysis, $d\sigma_{zz}$ is similar to an elastic material using elastic strains:

$$\begin{split} d\sigma_{zz} &= \mathrm{C}[4][1] \Big(d\varepsilon_{xx}^{(e)} - (\varepsilon_{xx}^{(res,r)} - \mathrm{alpha}[5]\varepsilon_{zz}^{(res)}) \Big) + \mathrm{C}[4][2] \Big(d\varepsilon_{yy}^{(e)} - (\varepsilon_{yy}^{(res,r)} - \mathrm{alpha}[6]\varepsilon_{zz}^{(res)}) \Big) \\ &+ \mathrm{C}[4][3] \Big(d\gamma_{xx}^{(e)} - (\varepsilon_{xy}^{(res,r)} - \mathrm{alpha}[7]\varepsilon_{zz}^{(res)}) \Big) - \mathrm{C}[4][4] (d\varepsilon_{zz}^{(e)} - \varepsilon^{(res)}) \end{split} \tag{2.104}$$

The $d\varepsilon_{zz}^{(e)}$ term may be non zero even though it is plane strain. The total z direction strain is zero because $d\varepsilon_{zz}^{(e)} = -d\varepsilon_{zz}^{(p)}$.

2.8 Anisotropic 2D Plane Stress Analysis

Plane stress analysis is currently not supported for anisotropic plastic materials.

2.9 Anisotropic 3D Analysis

In 3D strain analysis, the matrix equation for update is

$$d\sigma = \mathbf{C}d\varepsilon_{tot} \tag{2.105}$$

The key terms are

$$\mathbf{C} = \mathbb{C}[\mathbf{i}][\mathbf{j}] \quad \text{for } \mathbf{i} = 0,5 \text{ and } \mathbf{j} = 0,5$$

$$d\varepsilon_{tot} = \left(d\varepsilon_{xx} - \varepsilon_{xx}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{yy}^{(res,r)}, d\varepsilon_{yy} - \varepsilon_{zz}^{(res)}, d\gamma_{yz} - \varepsilon_{yz}^{(res,r)}, d\gamma_{yz} - \varepsilon_{yz}^{(res,r)}, d\gamma_{xy} - \varepsilon_{xy}^{(res,r)} \right)$$

$$df = \left(df_{xx}, df_{yy}, df_{zz}, df_{yz}, df_{xz}, df_{xy} \right) = \left(\frac{\partial f}{\sigma_{xx}}, \frac{\partial f}{\sigma_{yy}}, \frac{\partial f}{\sigma_{zz}}, \frac{\partial f}{\tau_{xz}}, \frac{\partial f}{\tau_{xy}}, \frac{\partial f}{\tau_{$$

This formulation is using engineering shear strains.

The plastic strain increments are:

$$d\varepsilon_{xx}^{(p)} = \lambda df_{xx}, \ d\varepsilon_{yy}^{(p)} = \lambda df_{yy}, \ d\varepsilon_{zz}^{(p)} = \lambda df_{zz}, \ d\gamma_{yz}^{(p)} = \lambda df_{yz}, \ d\gamma_{xz}^{(p)} = \lambda df_{xz}, \ d\gamma_{xy}^{(p)} = \lambda df_{xy}, \ (2.110)$$

The elastic strain increments are:

$$d\varepsilon_{xx}^{(e)} = d\varepsilon_{xx} - \lambda df_{xx}, \quad d\varepsilon_{yy}^{(e)} = d\varepsilon_{yy} - \lambda df_{yy}, \quad d\varepsilon_{zz}^{(e)} = d\varepsilon_{yy} - \lambda df_{zz}$$
 (2.111)

$$d\gamma_{vz}^{(e)} = d\gamma_{yz} - \lambda df_{yz}, \quad d\gamma_{xz}^{(e)} = d\gamma_{xz} - \lambda df_{xz}, \quad \text{and} \quad d\gamma_{xy}^{(e)} = d\gamma_{xy} - \lambda df_{xy}$$
 (2.112)

The specific stress increments are

$$\begin{pmatrix} d\sigma_{xx} \\ d\sigma_{yy} \\ d\sigma_{zz} \\ d\tau_{yz} \\ d\tau_{xx} \\ d\tau_{xy} \end{pmatrix} = \begin{pmatrix} C[i][j] & \text{for } i = 0, 5 \text{ and } j = 0, 5 \end{pmatrix} \begin{pmatrix} d\varepsilon_{xx}^{(e)} - \varepsilon_{xx}^{(res,r)} \\ d\varepsilon_{yy}^{(e)} - \varepsilon_{yy}^{(res,r)} \\ d\varepsilon_{zz}^{(e)} - \varepsilon_{yz}^{(res,r)} \\ d\gamma_{yz}^{(e)} - \varepsilon_{yz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \varepsilon_{xz}^{(res,r)} \\ d\gamma_{xz}^{(e)} - \varepsilon_{xz}^{(res,r)} \end{pmatrix}$$

$$(2.113)$$

2.10 Quadratic Hill Criterion

The quadratic Hill yield criterion can implement anisotropic plasticity and hardening terms can be added to include aniostropic hardening as well. For 2D plane strain analysis, one version of Hill yield function with arbitrary hardening function (defined later) reduces to:

$$f = \sqrt{F\left(\overline{\sigma_{yy}} - \overline{\sigma_{zz}}\right)^{2} + G\left(\overline{\sigma_{xx}} - \overline{\sigma_{zz}}\right)^{2} + H\left(\overline{\sigma_{yy}} - \overline{\sigma_{xx}}\right)^{2} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2}} - g(\boldsymbol{a})$$

$$= \left[(G+H)\overline{\sigma_{xx}}^{2} + (F+H)\overline{\sigma_{yy}}^{2} + (F+G)\sigma_{zz}^{2} - 2F\overline{\sigma_{yy}}\sigma_{zz} - 2G\overline{\sigma_{xx}}\sigma_{zz} - 2H\overline{\sigma_{xx}}\sigma_{yy} + 2L\overline{\tau_{yz}}^{2} + 2M\overline{\tau_{xz}}^{2} + 2N\overline{\tau_{xy}}^{2} \right]^{1/2} - g(\boldsymbol{a})$$

$$(2.114)$$

$$= \sqrt{\overline{\sigma} \cdot \mathbf{A} \overline{\sigma}} - g(\mathbf{\alpha}) \tag{2.116}$$

where $\overline{\sigma} = (\overline{\sigma_{xx}}, \overline{\sigma_{yy}}, \overline{\sigma_{zz}}, \overline{\tau_{yz}}, \overline{\tau_{xz}}, \overline{\tau_{xy}})$, $g(\alpha)$ is some hardening function of internal variables, and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 & 0 & 0 \\ -H & F+H & -F & 0 & 0 & 0 \\ -G & -F & F+G & 0 & 0 & 0 \\ 0 & 0 & 0 & 2L & 0 & 0 \\ 0 & 0 & 0 & 0 & 2M & 0 \\ 0 & 0 & 0 & 0 & 0 & 2N \end{pmatrix}$$
 (2.117)

An overbar is the stress in the material coordinates. It is found from

$$\overline{\sigma} = R_x R_y R_z \sigma = R_\sigma \sigma \tag{2.118}$$

where \mathbf{R}_x , \mathbf{R}_y , and \mathbf{R}_z are rotation matrices about each axis for rotation of stress in the clockwise direction. The corresponding equation in analysis axis coordinates for the yield function takes the form

$$f = \sqrt{\boldsymbol{\sigma} \mathbf{R}_{\sigma}^{T} \cdot \mathbf{A} \mathbf{R}_{\sigma} \boldsymbol{\sigma}} - g(\boldsymbol{\alpha}) = \sqrt{\boldsymbol{\sigma} \mathbf{A}' \boldsymbol{\sigma}} - g(\boldsymbol{\alpha})$$
 (2.119)

where $\mathbf{A}' = \mathbf{R}_{\sigma}^T \mathbf{A} \mathbf{R}_{\sigma}$ is the \mathbf{A} matrix rotated in the counter-clockwise direction from the material axes to the analysis axes (the same transformation used for compliance matrices).

For 2D, plane strain, $\overline{\sigma}=(\overline{\sigma_{xx}},\overline{\sigma_{yy}},\sigma_{zz},\overline{\tau_{xy}})$ (i.e., σ_{zz} does not rotate) and

$$\mathbf{A} = \begin{pmatrix} G+H & -H & -G & 0 \\ -H & F+H & -F & 0 \\ -G & -F & F+G & 0 \\ 0 & 0 & 0 & 2N \end{pmatrix}$$
 (2.120)

The only rotation needed is clockwise rotations around the z axis:

$$\overline{\boldsymbol{\sigma}} = \mathbf{R}_{\sigma} \boldsymbol{\sigma} = \mathbf{R}_{z} \boldsymbol{\sigma} \quad \text{where} \quad \mathbf{R}_{z} = \begin{pmatrix} \cos^{2}\theta & \sin^{2}\theta & 0 & -2\cos\theta\sin\theta \\ \sin^{2}\theta & \cos^{2}\theta & 0 & 2\cos\theta\sin\theta \\ 0 & 0 & 1 & 0 \\ \sin\theta\cos\theta & -\sin\theta\cos\theta & 0 & \cos^{2}\theta - \sin^{2}\theta \end{pmatrix}$$
(2.121)

is the 2D engineering stress tensor, clockwise rotation matrix.

The elements of the **A** matrix are physically defined by directionally dependent yield stresses prior to any hardening:

$$(G+H) = \frac{1}{(\sigma_{xx}^Y)^2}$$
 $(F+H) = \frac{1}{(\sigma_{yy}^Y)^2}$ $(F+G) = \frac{1}{(\sigma_{zz}^Y)^2}$ (2.122)

$$F = \frac{1}{2} \left(\frac{1}{(\sigma_{yy}^Y)^2} + \frac{1}{(\sigma_{zz}^Y)^2} - \frac{1}{(\sigma_{xx}^Y)^2} \right) \qquad G = \frac{1}{2} \left(\frac{1}{(\sigma_{zz}^Y)^2} + \frac{1}{(\sigma_{xx}^Y)^2} - \frac{1}{(\sigma_{yy}^Y)^2} \right)$$
(2.123)

$$H = \frac{1}{2} \left(\frac{1}{(\sigma_{xx}^Y)^2} + \frac{1}{(\sigma_{yy}^Y)^2} - \frac{1}{(\sigma_{zz}^Y)^2} \right) \quad L = \frac{1}{2(\tau_{yz}^Y)^2} \quad M = \frac{1}{2(\tau_{xz}^Y)^2} \quad N = \frac{1}{2(\tau_{xy}^Y)^2} (2.124)$$

To make physical sense, the **A** matrix must be positive semidefinite (so square root will always be of a non-negative number). The determinant of **A** is zero, but it can be diagonalized using its eigenvalues

and three linearly independent eigenvectors. The calculations were done separately, but show that for **A** to be positive semidefinite, requires both:

$$F^{2} + G^{2} + H^{2} - FH - GH - FG \ge 0$$
 (2.125)

$$F + G + H \ge \sqrt{F^2 + G^2 + H^2 - FH - GH - FG}$$
 (2.126)

Substituting yield stresses, the conditions can be recast as

$$\left(\frac{1}{\sigma_{xx}^Y} - \frac{1}{\sigma_{yy}^Y}\right)^2 \le \frac{1}{(\sigma_{zz}^Y)^2} \le \left(\frac{1}{\sigma_{xx}^Y} + \frac{1}{\sigma_{yy}^Y}\right)^2 \tag{2.127}$$

$$\left(\frac{1}{\sigma_{xx}^Y} - \frac{1}{\sigma_{zz}^Y}\right)^2 \le \frac{1}{(\sigma_{yy}^Y)^2} \le \left(\frac{1}{\sigma_{xx}^Y} + \frac{1}{\sigma_{zz}^Y}\right)^2 \tag{2.128}$$

$$\left(\frac{1}{\sigma_{zz}^Y} - \frac{1}{\sigma_{yy}^Y}\right)^2 \le \frac{1}{(\sigma_{xx}^Y)^2} \le \left(\frac{1}{\sigma_{zz}^Y} + \frac{1}{\sigma_{yy}^Y}\right)^2 \tag{2.129}$$

Two special cases are mentioned. If one yield stress is infinite (e.g., $\sigma_{xx}^Y = \infty$), the other two must be equal (e.g., $\sigma_{yy}^Y = \sigma_{zz}^Y$). If two yield stresses are related by $\sigma_{yy}^Y/\sigma_{xx}^Y = R$ then the other is bracketed by:

$$\frac{\sigma_{yy}^Y}{(1+R)} \le \sigma_{zz}^Y \le \frac{\sigma_{yy}^Y}{|1-R|} \tag{2.130}$$

For examples: if R=1 then $\sigma_{yy}^Y/2 \le \sigma_{zz}^Y \le \infty$; if R=0 or $R=\infty$ then $\sigma_{yy}^Y=\sigma_{zz}^Y$. For an isotropic material (*i.e.*, the Von Mises criterion), the key terms are

$$(G+H) = (F+H) = (F+G) = 2F = 2G = 2H = \frac{1}{\sigma_v^2}, \quad L = M = N = \frac{1}{2\tau_v^2} = \frac{3}{2\sigma_v^2}$$
 (2.131)

leading to an isotropic material with $K(\alpha) = \sigma_Y + E_p \alpha$ if $g(\alpha) = 1 + (E_p/\sigma_Y)\alpha$.

The derivatives with respect to analyses axes are found by differentiating with respect to rotated stress (see Eq. 2.116) and then transforming the result by strain rotation in the counter-clockwise direction back to the analysis axes. The result is

$$df = \frac{\mathsf{R}_{\varepsilon}^{-1} \mathsf{A} \overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathsf{A} \overline{\sigma}}} \tag{2.132}$$

where \mathbf{R}_{ε} is the rotation matrix for clockwise strain rotation. Alternatively, differentiating in analysis coordinates (see Eq. 2.119) gives:

$$df = \frac{\mathbf{A}'\sigma}{\sqrt{\sigma\mathbf{A}'\sigma}} = \frac{\mathbf{R}_{\sigma}^{1}\mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma}\cdot\mathbf{A}\overline{\sigma}}}$$
(2.133)

Because $\mathbf{R}_{\varepsilon}^{-1} = \mathbf{R}_{\sigma}^{T}$, the two results are the same. In 2D, the results reduce to

$$df = \frac{\mathbf{R}^{-1}\mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A}\overline{\sigma}}} \quad \text{where} \quad \mathbf{R} = \begin{pmatrix} \cos^{2}\theta & \sin^{2}\theta & 0 & -\cos\theta\sin\theta \\ \sin^{2}\theta & \cos^{2}\theta & 0 & \cos\theta\sin\theta \\ 0 & 0 & 1 & 0 \\ 2\sin\theta\cos\theta & -2\sin\theta\cos\theta & 0 & \cos^{2}\theta - \sin^{2}\theta \end{pmatrix}$$
(2.134)

In the material axis system, the full plastic strain increment is

$$\overline{d\varepsilon_p} = \lambda \mathbf{R}_{\varepsilon} df = \frac{\mathbf{A}\overline{\sigma}}{\sqrt{\overline{\sigma} \cdot \mathbf{A}\overline{\sigma}}}$$
 (2.135)

This strain results in a traceless tensor (i.e., only deviatoric plastic strains):

$$d\boldsymbol{\varepsilon}_{p} = \frac{\lambda}{\sqrt{\overline{\boldsymbol{\sigma}} \cdot \mathbf{A} \overline{\boldsymbol{\sigma}}}} \begin{pmatrix} \frac{\overline{\sigma_{xx}}}{(\sigma_{xx}^{Y})^{2}} - H \overline{\sigma_{yy}} - G \overline{\sigma_{zz}} & N \overline{\tau_{xy}} & M \overline{\tau_{xz}} \\ N \overline{\tau_{xy}} & -H \overline{\sigma_{xx}} + \frac{\overline{\sigma_{yy}}}{(\sigma_{yy}^{Y})^{2}} - F \overline{\sigma_{zz}} & L \overline{\tau_{yz}} \\ M \overline{\tau_{xz}} & L \overline{\tau_{yz}} & -G \overline{\sigma_{xx}} - F \overline{\sigma_{yy}} + \frac{\overline{\sigma_{zz}}}{(\sigma_{zz}^{Y})^{2}} \end{pmatrix}$$

$$(2.136)$$

We assume hardening is a function only of equivalent plastic strain and thus α is cumulative plastic strain. Perhaps a general anisotropic material would have something different, but this assumption is common in metals. The update in alpha is thus

$$d\alpha = \sqrt{\frac{2}{3}} \|d\boldsymbol{\varepsilon}_p\| = \lambda \sqrt{\frac{2}{3} \left(d\boldsymbol{f}_{xx}^2 + d\boldsymbol{f}_{yy}^2 + d\boldsymbol{f}_{zz}^2 + \frac{1}{2} d\boldsymbol{f}_{yz}^2 + \frac{1}{2} d\boldsymbol{f}_{xz}^2 + \frac{1}{2} d\boldsymbol{f}_{xy}^2 \right)}$$
(2.137)

Thus the update vector is

$$h = -\sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.138)

and

$$df^{\alpha} \cdot \mathbf{h} = g'(\alpha) \sqrt{\frac{2}{3} \left(df_{xx}^2 + df_{yy}^2 + df_{zz}^2 + \frac{1}{2} df_{yz}^2 + \frac{1}{2} df_{xz}^2 + \frac{1}{2} df_{xy}^2 \right)}$$
(2.139)

Some possible hardening laws are

$$g(\alpha) = (1 + K\alpha)^n, \ g'(\alpha) = nK(1 + K\alpha)^{n-1}, \ g'(0) = nK, \ K_n = \frac{(1 + K_1\alpha)^{\frac{1}{n}} - 1}{\alpha}$$
 (2.140)

$$g(\alpha) = 1 + K\alpha^{n}, \ g'(\alpha) = nK\alpha^{n-1} \ g'(0) = 0 \ (n \neq 1), \ K_{n} = (K_{1}\alpha)^{\frac{1}{n}}$$
 (2.141)

These two laws are identical when n = 1 and give linear hardening. If K_1 is the hardening term when n=1 and then a new value of n is selected, the first law can preserve the initial slope, g'(0), by keeping the product constant or setting $K_n = K_1/n$; the second law will always have zero slope when $n \neq 1$ and thus cannot match the linear slope. The last equations for K_n give the value of K_n for new n to match the amount of hardening that occurs up to any specified α between the n = 1 and n laws.

The numerical solution uses the following iterative equations

$$\boldsymbol{\sigma}^{(k)} = \boldsymbol{\sigma}^{trial} - \lambda^{(k)} \mathbf{C} df(\lambda^{(k)})$$
 (2.142)

$$\boldsymbol{h}^{(k)} = -\mathbf{R}d\boldsymbol{f}(\boldsymbol{\sigma}^{(k)}) \tag{2.143}$$

$$f^{(k)} = f(\boldsymbol{\sigma}^{(k)}, \boldsymbol{a}^{(k)}) \tag{2.144}$$

$$f^{(k)} = f(\boldsymbol{\sigma}^{(k)}, \boldsymbol{\alpha}^{(k)})$$

$$\frac{df^{(k)}}{d\lambda} = -\left(df(\boldsymbol{\sigma}^{(k)}) \cdot \mathbf{C}df(\boldsymbol{\sigma}^{(k)}) + df^{\alpha} \cdot \boldsymbol{h}^{(k)}\right)$$
(2.144)

$$\lambda^{(k+1)} = \lambda^{(k)} - \frac{f^{(k)}}{df^{(k)}/d\lambda}$$
 (2.146)

$$\boldsymbol{\alpha}^{(k+1)} = \boldsymbol{\alpha}^0 - \lambda^{(k+1)} \boldsymbol{h}^{(k)}$$
 (2.147)

Chapter 3

Thermodynamics of Deformation

3.1 Introduction

In MPM, all thermodynamics quantities will vary with position by depending on particle state. Work is done on the particle by stresses and strains and a particle can exchange heat with neighboring particles by conduction or with exterior by thermal boundary conditions. NairnMPM can run in four different modes. The entire system can be "isolated" or "nonisolated" where an isolated system has no thermal boundary condition that cause heat input or temperature changes on any particles. A nonisolated system has thermal boundary conditions. Similarly, the particles can be "isolated" or "nonisolated," which refer to conduction being off (isolated) or on (nonisolated). For each of these modes, the particles can be locally adiabatic or locally isothermal, where adiabatic means all heat generated by material mechanisms causes a temperature change and isothermal means all heat generated by material mechanisms is lost to the global exterior.

In MPM, we can treat each particle as a "system" with all other particles and boundary conditions being the "exterior." The differential in particle internal energy per unit mass, U, with dissipative and irreversible processes is:

$$dU = dw + dq = \frac{1}{\rho} \sigma \cdot d\varepsilon + T d_e S$$
 (3.1)

where dw is work and dq is heat exchanged with the "exterior." The second form associates work with stress power or work energy, where $d\varepsilon$ is the incremental total strain tensor, and heat flow with $dq = T d_e S$ where $d_e S$ is the change in entropy (per unit mass) due to exchange of energy with the exterior. The full change in entropy per unit mass is

$$dS = d_e S + d_i S = \frac{C_V dT}{T} - \frac{\mathsf{M} \cdot d\varepsilon}{\rho} + d_i S \tag{3.2}$$

where C_V is per unit mass, M is the stress-temperature tensor, and $d_iS \ge 0$ is entropy change per unit mass due to internal irreversible processes that do not exchange energy with the exterior. The second term is entropy production due to expansion or compression (and occurs in elastic materials). If all particles were the system (instead of just one particle), exchange of heat by conduction between particles would be part of the irreversible d_iS , but when each particle is its owns system, conduction heat flow is in $C_V dT/T$. Certain material mechanisms, such as plasticity, might also contribute to heat and entropy.

The Helmholtz free energy per unit mass is

$$A = U - TS \tag{3.3}$$

with differential

$$dA = dU - TdS - SdT = \frac{1}{\rho} \sigma \cdot d\varepsilon + Td_e S - TdS - SdT = \frac{1}{\rho} \sigma \cdot d\varepsilon - SdT - Td_i S$$
 (3.4)

The goal of NairnMPM is to track the most appropriate energies (see below). The challenge is dealing with material-specific dissipation or other isoentropic temperature changes while also allowing for external heating through thermal boundary conditions and heat conduction (i.e., dealing with all simulation modes described above).

3.2 Locally Adiabatic

For a locally adiabatic process, dq = 0 on each particle for any material-specific mechanisms, but the temperature might increase. Let dT_{ad} be the temperature change that happens during an adiabatic process in the material model. From above energy flow and adiabatic term for expansion and compression (even when elastic) is:

$$dT_{ad}^{0} = T \frac{\mathsf{M} \cdot d\varepsilon}{\rho C_{V}} \tag{3.5}$$

For an isotropic material, $\mathbf{M} \cdot d\varepsilon = -3K\alpha\Delta V/V$ leading to

$$dT_{ad}^{0} = -T\frac{3K\alpha}{\rho C_{V}}\frac{\Delta V}{V} = -TJ\frac{K}{K_{0}}\gamma_{0}\frac{\Delta V}{V} = -T\frac{K}{K_{0}}\gamma_{0}\frac{\Delta V}{V_{0}}$$
(3.6)

where $J = V/V_0 = \rho_0/\rho$ and

$$\gamma_0 = \frac{3K_0\alpha}{\rho_0 C_V} \tag{3.7}$$

This result assume thermal expansion coefficient and C_V are constant.

In general problems, T might also increase due to exchange of heat with the exterior (conduction or thermal loading). Let those temperature changes be dT_{ext} . The change in internal energy becomes

$$dU = \frac{1}{\rho} \sigma \cdot d\varepsilon + C_V dT_{ext}$$
 (3.8)

But in MPM, the dT on one particle for any given time step will be $dT_{ad} + dT_{ext}$ and there is no way to separate them in the dT calculated in each time step. The solution is to separate them in the particle strain update where dT_{ad} is known:

$$dU = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} - C_V dT_{ad} + C_V (dT_{ad} + dT_{ext}) = \frac{1}{\rho} \boldsymbol{\sigma} \cdot d\boldsymbol{\varepsilon} + C_V (dT - dT_{ad})$$
 (3.9)

Note that this incremental dU is the correct internal energy update when thermodynamics of deformations is done completely (see personal notes for more). In a simulation, dT_{ad} can be calculated for a given time step and subtracted from U. It will be added back on the next time step through the contribution of dT_{ad} to dT and this results in net dq=0 due to material mechanisms. Besides dT_{ad}^0 defined above, plasticity or viscoelastic materials might dissipate energy $d\Phi$ that causes temperature change. If it all causes heating than $dT_{ad}^{(disp)} = d\Phi/C_V$. Alternatively, we could say a fraction f induces heating and the rest is irreversible energy loss (with no exchange of heat). This dissipated energy is handled by writing:

$$dT_{ad} = dT_{ad}^{0} + \frac{f d\Phi}{C_{V}}$$
 and $d_{i}S = (1 - f)\Phi$ (3.10)

In other words, the total $C_V dT_{ad}$ is sum of adiabatic temperature change due to expansion or compression and dissipated energy by any material mechanisms that causes heat rise. The term d_iS is irreversible entropy production.

3.3 **Locally Isothermal**

For a locally isothermal process, dT = 0 due to material processes, although dT_{ext} may still be nonzero if the system is nonisolated. As expected, the incremental internal energy equation is the same (because U) is a state function. The difference is that the dT seen on each time step is always dT_{ext} , which means that the net heat on the particle will be sum of $C_V(dT_{ext}-dT_{ad})$ and it will include heat supplied to the particle and heat lost by the particle from dissipated energy.

Energy Tracking in NairnMPM 3.4

Instead of tracking only total *U* (or any other state variable), a better approach is for each material type to track total work, w, heat energy, q, m and entropy using general updates

$$dw = \frac{1}{\rho} \sigma \cdot d\varepsilon, \tag{3.11}$$

$$dq = C_V(dT - dT_{ad}) (3.12)$$

$$dS = \frac{C_V(dT - dT_{ad})}{T} + d_i S (3.13)$$

It is also useful to track thermoelastic strain energy, W, whose increment is

$$dW = dw - dw_{res}$$
 where $dw_{res} = \frac{1}{\rho} \sigma \cdot d\varepsilon_{res}$ (3.14)

and $d\varepsilon_{res}$ is the free residual strain for the current time step. If each operating modes is considered, it is possible to simplify these updates (and maybe even improve their accuracy). The work and residual work updates are the same in all modes, but the heat and entropy updates can simplify.

• Isolated System: In an isolated system, $dT_{ext} = 0$. If the particles are locally adiabatic then $dT = dT_{ad}$ and particle dq = 0. If the particles are locally isothermal then dT = 0 and all of dT_{ad} results in heat and entropy production

$$dq = \begin{cases} 0 & \text{locally adiabatic} \\ -C_V dT_{ad} & \text{locally isothermal} \end{cases}$$
 (3.15)

$$dq = \begin{cases} 0 & \text{locally adiabatic} \\ -C_V dT_{ad} & \text{locally isothermal} \end{cases}$$

$$dS = \begin{cases} d_i S & \text{locally adiabatic} \\ -\frac{C_V dT_{ad}}{T} + d_i S & \text{locally isothermal} \end{cases}$$
(3.15)

• Nonsolated System: In a nonisolated system, $dT_{ext} \neq 0$. If the particles are locally adiabatic, the entropy update can be improved by anticipating the compensating term on the next time step. If the particle are locally isothermal then $dT = dT_{ext}$ and the entropy update follows from heat update:

$$dq = C_V(dT - dT_{ad}) (3.17)$$

$$dS = \begin{cases} \frac{C_V dT}{T} - \frac{C_V dT_{ad}}{T + dT_{ad}} + d_i S & \text{locally adiabatic} \\ \frac{C_V (dT - dT_{ad})}{T} + d_i S & \text{locally isothermal} \end{cases}$$
(3.18)

Each material model's constitutive law in NairnMPM is responsible for tracking w and w_{res} using the above updates. Those constitutive laws, however, should not update particle T, q, or S on their own. Instead, all temperature and heat updates should be done by the constitutive law calling IncrementHeatEnergy(mptr,dT,dT_{ad},0, Φ) where mptr is pointer to the material point, dT is total temperature change in the time step, dT_{ad} is adiabatic temperature change on the particle, and Φ is dissipated heat in the time step. This function automatically updates correctly depending on the current thermodynamics mode being used.

If $w, w_{res}, q, S, T, \sigma$, and ε are tracked than any other state functions can be found:

$$U = w + q \tag{3.19}$$

$$A = U - TS = w + q - TS \tag{3.20}$$

$$H = U + \frac{1}{\rho} \boldsymbol{\sigma} \cdot \boldsymbol{\varepsilon} = w + q + \frac{1}{\rho} \boldsymbol{\sigma} \cdot \boldsymbol{\varepsilon}$$
 (3.21)

$$G = H - TS = w + q + \frac{1}{2}\sigma \cdot \varepsilon - TS$$
 (3.22)

$$W = w - w_{res} (3.23)$$

Finally, table 3.1 summarizes thermodynamics properties of the various NairnMPM modes. The term dq is heat change on a single particle. The global terms are defined by:

$$dQ = \sum_{p} dq$$
, $dS = \sum_{p} \frac{dq}{T_{p}}$, and $T = \frac{1}{n_{p}} \sum_{p} T_{p}$ (3.24)

An "isolated" system means no thermal boundary conditions are being used, while a "nonisolated" system has thermal boundary conditions. "Isolated" particles means conduction is turned off, while "nonisolated" particles means conduction is on. "Adiabatic" means energy coupling is turned on, while "Isothermal" means energy coupling is off.

3.5 *J* Integral

The J integral can be derived from Helmholtz energy and entropy but can be reduced to only depend on w. Hence it is important for all NairnMPM materials to track w. (note: I derived this approach several years ago and I am not sure if it is found elsewhere besides some of it in a paper by McCartney). Consider a closed contour, Γ , around a crack tip, as done in J integral analysis by Rice, and the analogous application of Green's theorem

$$\int_{\Gamma} \left(A dy - \frac{1}{\rho} T_i \frac{\partial u_i}{\partial x} ds \right) = \int_{A^*} \left[\frac{\partial A}{\partial x} - \frac{1}{\rho} \frac{\partial}{\partial x_j} \left(\sigma_{ij} \frac{\partial u_i}{\partial x} \right) \right] dx \, dy \tag{3.25}$$

where A^* is area within Γ . Working in the reverse process from Rice for static problems:

$$\frac{\partial}{\partial x_{i}} \left(\sigma_{ij} \frac{\partial u_{i}}{\partial x} \right) = \sigma_{ij} \frac{\partial}{\partial x_{i}} \left(\frac{\partial u_{i}}{\partial x} \right) + \frac{\partial u_{i}}{\partial x} \frac{\partial \sigma_{ij}}{\partial x_{j}}$$
(3.26)

$$= \sigma_{ij} \frac{\partial}{\partial x_i} \left(\frac{\partial u_i}{\partial x} \right) \tag{3.27}$$

$$= \frac{1}{2}\sigma_{ij}\left(\frac{\partial}{\partial x}\frac{\partial u_i}{\partial x_j} + \frac{\partial}{\partial x}\frac{\partial u_j}{\partial x_i}\right)$$
(3.28)

$$= \sigma \cdot \frac{\partial \varepsilon}{\partial x} \tag{3.29}$$

3.5. J INTEGRAL 31

Table 3.1: The changes in particle heat (dq), global heat (dQ), global entropy (dS), and average temperature (dT) for each NairnMPM thermodynamics mode. For entropy, all processes other than heat conduction are assumed reversible.

		Adiabatic				Isothermal			
System	Particles	dq	dQ	dS	dT	dq	dQ	dS	dT
Isolated	Isolated	01	0	0	≠ 0	≠ 0	≠ 0	≠ 0	0
Isolated	Nonsolated	\neq 0 ²	0	≥ 0 ²	≠ 0	\neq 0 ³	\neq 0 ³	\neq 0 ³	03
Nonsolated	Isolated	≠ 0	≠ 0	≠ 0	≠ 0 ⁴	≠ 0	≠0	≠ 0	≠ 0 ⁴
Nonsolated	Nonsolated	7 70							<i>+</i> 0

- 1. If any particles start with a temperature that is different then the stress free temperature, the first time step will add $dq = C_V(dT_i dT_0)$ to the particle heat energy. The above conditions will hold thereafter, but a constant will be added to dS and dO.
- 2. The dq will be due to conduction only and entropy will increase because conduction is irreversible.
- 3. This mode is identical to system and particle isolated if the initial temperature of all particles is equal to the stress-free temperature. Thus, a simulation in this mode should turn off conduction for efficiency when all particles are at the stress free temperature.
- 4. When particles are isolated, the only possible thermal boundary condition is a thermal ramp that applies uniform temperature change to all particles. If there is no thermal ramp, then the system is isolated and refer to first mode instead.

The second step uses static equilibrium and the third step uses $\sigma_{ij} = \sigma_{ji}$. The derivative of A is

$$\frac{\partial A}{\partial x} = \frac{1}{\rho} \sigma \cdot \frac{\partial \varepsilon}{\partial x} - S \frac{\partial T}{\partial x} - T \frac{\partial S_i}{\partial x}$$
(3.30)

Substituting the above two results into Eq. (3.25) leads to a path-independent result (which includes path integral and area integral) of

$$\int_{\Gamma} \left(A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} \, ds \right) + \int_{A^*} \left(S \frac{\partial T}{\partial x} + T \frac{\partial S_i}{\partial x} \right) dx \, dy = 0 \tag{3.31}$$

McCartney took this result for reversible processes, and suggested J integral of

$$J = \int_{\Gamma^*} \left(A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} \, ds \right) + \int_{A^*} S \frac{\partial T}{\partial x} \, dx \, dy \tag{3.32}$$

The prior form extends it to irreversible processes (if d_iS can be found).

To get to work energy, note that the area integral can be rewritten as

$$\int_{\Gamma} \left(A \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} \, ds \right) + \int_{A^*} \left(\frac{\partial (TS)}{\partial x} - T \frac{\partial S_e}{\partial x} \right) dx \, dy = 0 \tag{3.33}$$

By Green's theorem

$$\int_{A^*} \frac{\partial (TS)}{\partial x} dx \, dy = \int_{\Gamma} TS \, dy \tag{3.34}$$

leading to

$$\int_{\Gamma} \left(U \, dy - \frac{1}{\rho} \, T_i \frac{\partial u_i}{\partial x} ds \right) - \int_{A^*} T \frac{\partial S_e}{\partial x} dx \, dy = 0 \tag{3.35}$$

or

$$\int_{\Gamma} \left(U \, dy - \frac{1}{\rho} T_i \frac{\partial u_i}{\partial x} ds \right) - \int_{A^*} \frac{dq}{dx} \, dx \, dy = 0$$
 (3.36)

After another Green's theorem:

$$\int_{\Gamma} \left(w \, dy - \frac{1}{\rho} T_i \frac{\partial u_i}{\partial x} ds \right) = 0 \tag{3.37}$$

where w is cumulative work.

$$w = \int \sigma \cdot d\varepsilon \tag{3.38}$$

This results seems to apply to both reversible and irreversible processe, but does require elastic (and reversible) stress strain response.

Chapter 4

Hyperelastic Materials

4.1 Introduction

Constitutive laws for hyperelastic materials always involve the deformation gradient, F. All hyperelastic materials store the full deformation gradient using the strain and rotation variables on the particles (named $\varepsilon = ep$ and $\omega = wrot$) as follows:

$$\mathbf{F} = \begin{pmatrix} 1 + \varepsilon_{xx} & \frac{1}{2}(\gamma_{xy} - \omega_{xy}) & \frac{1}{2}(\gamma_{xz} - \omega_{xz}) \\ \frac{1}{2}(\gamma_{xy} + \omega_{xy}) & 1 + \varepsilon_{yy} & \frac{1}{2}(\gamma_{yz} - \omega_{yz}) \\ \frac{1}{2}(\gamma_{xz} + \omega_{xz}) & \frac{1}{2}(\gamma_{yz} + \omega_{yz}) & 1 + \varepsilon_{zz} \end{pmatrix}$$
(4.1)

and should store the updated gradient back on strain and rotation tensors on each time step.

Hyperelastic materials with plasticity, still store full deformation gradient as above and thus unlike small-strain plasticity materials, the strain variables describe the total strain and not just the elastic deformation. To have information about elastic and plastic deformation, these materials use the plastic strain variable on the particles ($\mathbf{\epsilon}^{(p)} = \text{eplast}$) to store the symmetric, elastic, left Cauchy-Green tensor ($\mathbf{B} = \mathbf{F}\mathbf{F}^T$). For convenience, hyperelastic materials can obtain a pointer to this variable using the particle accessor GetElasticLeftCauchyTensor(). Because this just returns a pointer to eplast, that material cannot also use GetPlasticStrainTensor() expecting an option to store different particle state information.

Large deformation MPM requires calculation of specific Cauchy stress (σ) on each time step, or the Cauchy stress divided by the current density (ρ) accounting for volume changes. This required quantity is equivalent to

$$\frac{\sigma}{\rho} = \frac{\sigma J}{\rho_0} = \frac{\tau}{\rho_0} \tag{4.2}$$

where J is $\det \mathbf{F}$ and equal to the relative volume change $(J = V/V_0)$, τ is the Kirchoff stress, and ρ_0 is the initial volume (i.e., $\rho_0 = J\rho$). In other words, all hyperelastic materials track the Kirchoff stress normalized to the initial density, which is done by dividing all constitutive law properties by ρ_0 at the start of the calculation and then finding Kirchoff stress in constitutive laws. The output stresses, however, are converted to true Cauchy stress using particle J.

4.2 Incremental Deformation Gradient

Each MPM time step requires evaluation of deformation gradient rate defined by

$$\frac{d\mathbf{F}}{dt} = \nabla v \mathbf{F} \tag{4.3}$$

If velocity gradient, ∇v , is constant for the time step, the exact solution is

$$\mathbf{F}(t + \Delta t) = \exp(\Delta t \nabla v)\mathbf{F}(t) = \mathbf{dF}\mathbf{F}(t)$$
(4.4)

where

$$\mathbf{dF} = \exp(\Delta t \nabla v) = \mathbf{F}(t + \Delta t)\mathbf{F}(t)^{-1}$$
(4.5)

is the incremental deformation gradient. An interesting review article on finding the exponential of a matrix is "Nineteen Dubious Ways to Compute the Exponential of a Matrix. Twenty Five Years Later." (C. Moler and C. Van Loan, *SIAM Review*, **46**, 2003). They conclude no single way is stable and efficient for all problems, but in MPM with sufficiently small time steps, an expansion method should work well

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = \mathbf{I} + \nabla u + \sum_{k=2}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
(4.6)

where $\nabla u = \Delta t \nabla v$ is the incremental displacement gradient. The first two terms are trivial, but have been noticed to have issues in rotational deformation fields. The question is how to evaluate extra terms as efficiently as possible.

Method 8 of the "Nineteen Dubious Ways" uses the Cayley-Hamilton theorem to find $(\nabla u)^k$ without any matrix multiplications in 2D and just one in 3D. In 2D (plane stress, plain strain, or axisymmetric), the displacement gradient can be partitioned as

$$\nabla u = \left(\begin{array}{ccc} du_{xx} & du_{xy} \\ du_{yx} & du_{yy} \end{array} \right) \quad 0 \\ 0 \quad 0 \quad du_{zz}$$
 (4.7)

where $du_{ij} = \partial u_i/\partial x_j$ ($du_{zz} = 0$ for plain strain, but not for plane stress or axisymmetry). If A is the 2×2 partition, then

$$(\nabla u)^k = \begin{pmatrix} A^k & 0\\ 0 & 0\\ 0 & 0 & du_{zz}^k \end{pmatrix}$$

$$\tag{4.8}$$

Let the characteristic polymer of A (of any dimension n) be

$$c(z) = \det(z\mathbf{I} - A) = z^n - \sum_{k=0}^{n-1} c_k z^k$$
(4.9)

Because c(A) = 0, the n^{th} power of A can be found from lower powers of A

$$A^{n} = \sum_{k=0}^{n-1} c_k A^{k}$$
 (4.10)

For n = 2, these reduce to

$$c_0 = -\det(A), \qquad c_1 = \text{Tr}(A), \qquad \text{and} \qquad A^2 = c_0 \mathbf{I} + c_1 A$$
 (4.11)

Higher powers of A can be found by recursion to be

$$A^k = \beta_{k,0} \mathbf{I} + \beta_{k,1} A \tag{4.12}$$

where $\beta_{1,i} = \delta_{i1}$, $\beta_{k,0} = c_0 \beta_{k-1,1}$, and $\beta_{k,1} = c_1 \beta_{k-1,1} + \beta_{k-1,0}$. In other words, **I** and A are a basis for all powers of A. Finally, we can expand the incremental deformation gradient using k_{max} terms as

$$\mathbf{dF}(k_{max}) = \begin{pmatrix} [\alpha_0 \mathbf{I} + \alpha_1 \mathbf{A}] & 0 \\ 0 & 0 & 1 + du_{zz} + \sum_{k=2}^{k_{max}} \frac{du_{zz}^k}{k!} \end{pmatrix}$$
(4.13)

where

$$\alpha_0 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,0}}{k!}$$
 and $\alpha_1 = 1 + \sum_{k=2}^{k_{max}} \frac{\beta_{k,1}}{k!}$ (4.14)

An efficient computer algorithm for all non-zero elements of the deformation gradient using k_{max} terms (which eliminates as many multiplications and divides as I think are possible and the factorial terms are scaled into the beta variables such that betai= $\beta_{k,i}/k!$) is:

```
double c0 = duxy*duyx - duxx*duyy, c1 = duxx + duyy;
double beta0 = 0., beta1 = 1., alpha0 = 1., alpha1 = 1.;
double betaz = duzz; dFzz = 1. + duzz
double factor, temp;;
for(k = 2; k \le kmax; k++)
   factor = 1/(double)k;
    temp = beta1;
   beta1 = factor*(c1*temp + beta0);
    beta0 = factor*c0*temp;
    betaz *= factor*duzz;
    alpha0 += beta0;
    alpha1 += beta1;
    dFzz += betaz;
}
double dFxx = alpha0 + alpha1*duxx;
double dFxy = alpha1*duxy;
double dFyx = alpha1*duyx;
double dFyy = alpha0 + alpha1*duyyl
```

Each extra term included in the expansion costs 6 multiplications, 1 division, and 4 additions. Direct matrix multiplication would add 14 multiplications/division and 13 additions for each term.

A similar approach can be done in 3D, but does require one matrix multiplication. The overall expansion is

$$\exp(\Delta t \nabla v) = \sum_{k=0}^{k_{max}} \frac{(\nabla u)^k}{k!} = \mathbf{I} + \nabla u + \frac{1}{2} (\nabla u)^2 + \sum_{k=3}^{k_{max}} \frac{(\nabla u)^k}{k!}$$
(4.15)

which can be reduced to

$$\exp(\Delta t \nabla v) = \alpha_0 \mathbf{I} + \alpha_1 \nabla u + \alpha_2 (\nabla u)^2$$
(4.16)

$$\alpha_0 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,0}}{k!}, \qquad \alpha_1 = 1 + \sum_{k=3}^{k_{max}} \frac{\beta_{k,1}}{k!}, \quad \text{and} \quad \alpha_2 = \frac{1}{2} + \sum_{k=3}^{k_{max}} \frac{\beta_{k,2}}{k!}$$
 (4.17)

The required recursion relations are $\beta_{2,i} = \delta_{i2}$, $\beta_{k,0} = c_0 \beta_{k-1,2}$, $\beta_{k,1} = c_1 \beta_{k-1,2} + \beta_{k-1,0}$, and $\beta_{k,2} = c_2 \beta_{k-1,2} + \beta_{k-1,1}$. For a 3 × 3 matrix, $c_0 = \det(M)$, $c_1 = -I_2$, and $c_2 = Tr(M)$, where I_2 is the second

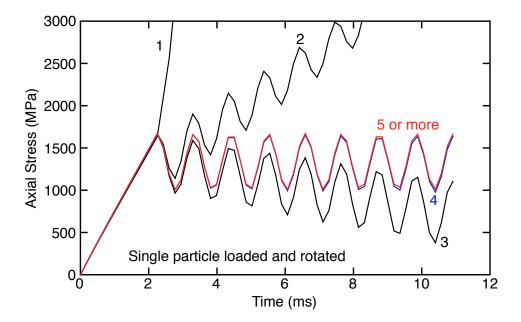


Figure 4.1: Calculation for a single particle loaded in tension, held, and then rotated. The different curves show k_{max} or the number of terms used to expand the matrix exponential in the incremental deformation gradient.

invariant. Each extra term included in the expansion adds 6 multiplications, 1 division and 5 additions. Direct matrix multiplication would add about 36 multiplications, 1 division, and 27 additions for each term.

One MPM user suggested loading a single particle in tension to some value and then rotating. A plot of axial stress in the loading direction should increase linearly while loading and then oscillate around a constant mean during rotation. In 2D calculations with $k_{max}=1$, the stress continues to increase while rotating, but using $k_{max}=2$ appears to make it constant. Addition of extra terms beyond $k_{max}=2$ does not seem to provide much benefit (at least in this example). A need for extra terms can be demonstrated by using a very large time step, such as 8 times the Courant-Friedrichs-Lewy (CFL) condition. Some results are in Fig. 4.1. With 1 term, the calculations are immediately bad once rotation starts. Each extra term improves the result. With 5 or more terms, the result is correct. When CFL is less than 1 (as it should be), terms beyond $k_{max}=2$ might not have much benefit, but can be seen, for example, in pure shear examples.

4.3 Hyperelastic 1D Membrane in a 2D Simulation

A membrane in a 2D simulation is a 1D path through the object (this notes are plane stress and plane strain only and will need to be updated for axisymnetry). Imagine a coordinate system with the fiber direction of the membrane initially along the x axis and the thickness direction along the y axis. In membrane models, it is assumed there is no shear deformation in the plane of the membrane — it has only stretches in fiber direction and thickness directions. As a result, the general deformation gradient is:

$$\mathbf{F} = \begin{pmatrix} \lambda_1 \cos \theta & \lambda_2 \sin \theta & 0 \\ -\lambda_1 \sin \theta & \lambda_2 \cos \theta & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = \begin{pmatrix} \cos \theta & \sin \theta & 0 \\ -\sin \theta & \cos \theta & 0 \\ 0 & 0 & 1 \end{pmatrix} \begin{pmatrix} \lambda_1 & 0 & 0 \\ 0 & \lambda_2 & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = \mathbf{R}[\lambda] \quad (4.18)$$

where λ_i are stretches in three orthogonal membrane directions (and they remain orthogonal) and θ is the clockwise rotation of the current fiber direction from the global, positive x axis direction. The first and second columns are vectors along the current fiber and thickness directions, respectively.

In an MPM time step, the membrane constitutive law will be provided an incremental deformation gradient, dF (as calculated above), but in general this deformation will not be compatible with a membrane deformation with zero shear. Instead, dF is just used to find new fiber vector:

$$m = (\mathbf{dF}_{11}\mathbf{F}_{11} + \mathbf{dF}_{12}\mathbf{F}_{21}, \mathbf{dF}_{21}\mathbf{F}_{11} + \mathbf{dF}_{22}\mathbf{F}_{21})$$
 (4.19)

The magnitude of this vector is the new fiber stretch: $\lambda_1 = ||m||$. A specific membrane material model should calculations λ_2 and λ_3 and then update the particle's deformation gradient to be:

$$\mathbf{F} = \begin{pmatrix} m_x & -\frac{\lambda_2}{\lambda_1} m_y & 0 \\ m_y & \frac{\lambda_2}{\lambda_1} m_x & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix}$$
 (4.20)

For stresses and energy, membrane material classes find Kirchhoff stress in the unrotated membrane coordinates (which should only need the three λ_i stretches and ω). These stresses are rotated to the MPM coordinates:

$$\tau = \mathsf{R}\tau\mathsf{R}^T = \mathsf{R}[\lambda]([\lambda]^{-1}\sigma[\lambda]^{-T})[\lambda]^T\mathsf{R}^T = \mathsf{F}\mathsf{S}\mathsf{F}^T \tag{4.21}$$

where **F** is the updated membrane deformation gradient on the particle and S is the second Poila-Kirchoff stress in the mebrane coordinates. The second Poila-Kirchoff stress will only have non-zero S_{11} , S_{12} , and S_{22} and it is found from $S = [\lambda]^{-1} \tau [\lambda]^{-T}$ or $S_{11} = \tau_{11}/\lambda_1^2$.

Work and residual energy updates can be done in the membrane coordinates:

$$dw = \tau_{11} du_{11}$$
 and $dw_{res} = \tau_{11} du_{11}^{res} + \tau_{33} du_{33}^{res}$ (4.22)

where du_{11} is element of the displacement gradient for this step and du_{res}^{ii} is incremental residual strain for this step. The displacement gradient can be found from the effective membrane incremental deformation gradient:

$$\mathbf{dF}_{m} = \exp(\nabla u) = \begin{pmatrix} \frac{\lambda_{1}}{\lambda_{1}^{(n-1)}} & 0 & 0\\ 0 & \frac{\lambda_{2}}{\lambda_{2}^{(n-1)}} & 0\\ 0 & 0 & \frac{\lambda_{2}}{\lambda_{2}^{(n-1)}} \end{pmatrix} \quad \text{or} \quad du_{11} = \ln \frac{\lambda_{1}}{\lambda_{1}^{(n-1)}}$$
(4.23)

where $\lambda_1^{(n-1)}$ are the stretches at the start of the time step.

4.4 Hyperelastic 2D Membrane in a 3D Simulation

A membrane in a 3D simulation is a 2D surface through the object. Imagine a coordinate system with the two fiber directions of the membrane initially along the x and y axes and the thickness direction

along the *z* axis. In membrane models, it is assumed the normal and shear stresses in the thickness direction of the membrane are zero — the membrane has only stretches and shear in the plane defined by the two fiber directions. As a result, the general deformation gradient can be written as:

$$\mathbf{F} = R \begin{pmatrix} \lambda_1 & \lambda_2 \cos \omega & 0 \\ 0 & \lambda_2 \sin \omega & 0 \\ 0 & 0 & \lambda_3 \end{pmatrix} = R[\lambda \omega]$$
 (4.24)

where λ_i are stretches in three initially orthogonal membrane directions and ω is the angle between the deformed, in-plane fiber directions. The rotation matrix R rotates the positive x axis to the corresponding fiber axis in the deformed membrane.

In an MPM time step, the membrane constitutive law will be provided an incremental deformation gradient, dF (as calculated above), but in general this deformation will not be compatible with a membrane deformation where thickness direction should have stretch only and zero shear. Instead, dF is just used to find new fiber vectors from the first two columns of $dF \cdot F$. If these deformed vectors are m_1 and m_2 then the key deformation terms are:

$$\lambda_1 = ||\boldsymbol{m}_1||, \quad \lambda_2 = ||\boldsymbol{m}_2||, \quad \cos \omega = \frac{\boldsymbol{m}_1 \cdot \boldsymbol{m}_2}{\lambda_1 \lambda_2}, \quad \text{and} \quad \sin \omega = \frac{||\boldsymbol{m}_1 \times \boldsymbol{m}_2||}{\lambda_1 \lambda_2} \tag{4.25}$$

A specific membrane material model should calculate λ_3 for the thickness direction (to get zero thickness stress). The particle deformation gradient is updated with m_1 , m_2 left intact as first two columns, but the third column of the provisional $\mathbf{dF} \cdot \mathbf{F}$ is changed to be $\lambda_3(m_1 \times m_2)/(\lambda_1 \lambda_2)$. In this approach, the membrane normal vector remains normal to both m_1 and m_2 .

For stresses and energy, membrane material classes finds Kirchhoff stress (τ) in the unrotated membrane coordinates (which should only need the three λ_i stretches and ω). These stresses are rotated to the MPM coordinates:

$$\tau (MPM) = R\tau R^{T} = R[\lambda \omega] ([\lambda \omega]^{-1} \tau [\lambda \omega]^{-T}) [\lambda \omega]^{T} R^{T} = FSF^{T}$$
(4.26)

where **F** is the updated membrane deformation gradient on the particle and S is the second Poila-Kirchoff stress in the membrane coordinates. The second Poila-Kirchoff stress will only have non-zero S_{11} , S_{12} , and S_{22} and it is found from $S = [\lambda \omega]^{-1} \tau [\lambda \omega]^{-T}$ or:

$$S = \begin{pmatrix} \frac{1}{\lambda_{1}} & -\frac{\cot\omega}{\lambda_{1}} & 0\\ 0 & \frac{1}{\lambda_{2}\sin\omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{3}} \end{pmatrix} \begin{pmatrix} \tau_{11} & \tau_{12} & 0\\ \tau_{12} & \tau_{y22} & 0\\ 0 & 0 & 0 \end{pmatrix} \begin{pmatrix} \frac{1}{\lambda_{1}} & 0 & 0\\ -\frac{\cot\omega}{\lambda_{1}} & \frac{1}{\lambda_{2}\sin\omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{3}} \end{pmatrix}$$
(4.27)

The result is

$$S = \begin{pmatrix} \frac{1}{\lambda_{1}} & -\frac{\cot \omega}{\lambda_{1}} & 0\\ 0 & \frac{1}{\lambda_{2} \sin \omega} & 0\\ 0 & 0 & \frac{1}{\lambda_{2}} \end{pmatrix} \begin{pmatrix} \frac{\tau_{11}}{\lambda_{1}} - \frac{\tau_{12} \cot \omega}{\lambda_{1}} & \frac{\tau_{12}}{\lambda_{2} \sin \omega} & 0\\ \frac{\tau_{12}}{\lambda_{1}} - \frac{\tau_{22} \cot \omega}{\lambda_{1}} & \frac{\tau_{22}}{\lambda_{2} \sin \omega} & 0\\ 0 & 0 & 0 \end{pmatrix}$$
(4.28)

which simplifies to

$$S_{11} = \frac{1}{\lambda_1^2} \left(\tau_{11} - 2\tau_{12} \cot \omega + \tau_{22} \cot^2 \omega \right)$$
 (4.29)

$$S_{22} = \frac{\tau_{22}}{\lambda_2^2 \sin^2 \omega} \tag{4.30}$$

$$S_{12} = \frac{(\tau_{12} - \tau_{22} \cot \omega)}{\lambda_1 \lambda_2 \sin \omega} \tag{4.31}$$

These can be inverted to

$$\tau_{11} = S_{11}\lambda_1^2 + 2S_{12}\lambda_1\lambda_2\cos\omega + S_{22}\lambda_2^2\cos^2\omega \tag{4.32}$$

$$\tau_{22} = S_{22}\lambda_2^2 \sin^2 \omega \tag{4.33}$$

$$\tau_{12} = S_{12}\lambda_1\lambda_2\sin\omega + S_{22}\lambda_2^2\cos\omega\sin\omega \tag{4.34}$$

The membrane deformation (or $[\lambda\omega]$) is tracked on the particle in the plastic strain. Work and residual energy updates can be done in the membrane coordinates:

$$dw = \tau_{11}du_{11} + \tau_{12}(du_{12} + du_{21}) + \tau_{22}du_{22}$$
 (4.35)

$$dw_{res} = \tau_{11} du_{11}^{res} + \tau_{12} (du_{12}^{res} + (du_{12}^{res}) + \tau_{22} du_{22}^{res}$$
(4.36)

where du_{ij} are elements of the displacement gradient for this step and du_{res}^{ij} are incremental residual strains for this step. The displacement gradient can be found from the effective membrane incremental deformation gradient, which is defined by $[\lambda \omega] = d\mathbf{F}_m[\lambda \omega]_{n-1}$ giving

$$\mathbf{dF}_{m} = \exp(\nabla u) = [\lambda \omega] [\lambda \omega]_{n-1}^{-1} = \begin{pmatrix} \lambda_{1} & \lambda_{2} \cos \omega & 0 \\ 0 & \lambda_{2} \sin \omega & 0 \\ 0 & 0 & \lambda_{3} \end{pmatrix} \begin{pmatrix} \frac{1}{M_{11}} & -\frac{M_{12}}{M_{11}M_{22}} & 0 \\ 0 & \frac{1}{M_{22}} & 0 \\ 0 & 0 & \frac{1}{M_{33}} \end{pmatrix} (4.37)$$

$$= \begin{pmatrix} \frac{\lambda_{1}}{M_{11}} & \frac{\lambda_{2} \cos \omega}{M_{22}} - \frac{M_{12}\lambda_{1}}{M_{11}M_{22}} & 0 \\ 0 & \frac{\lambda_{2} \sin \omega}{M_{22}} & 0 \\ 0 & 0 & \frac{\lambda_{3}}{M_{22}} \end{pmatrix}$$

$$= \begin{pmatrix} \frac{\lambda_{1}}{M_{11}} & \frac{\lambda_{2} \cos \omega}{M_{22}} - \frac{M_{12}\lambda_{1}}{M_{11}M_{22}} & 0 \\ 0 & \frac{\lambda_{2} \sin \omega}{M_{22}} & 0 \\ 0 & 0 & \frac{\lambda_{3}}{M_{22}} \end{pmatrix}$$

$$(4.38)$$

where $[\lambda\omega]_{n-1}$ is the membrane-coordinates deformation gradient at the start of the time step and M_{ij} are elements of $[\lambda\omega]_{n-1}$. Assuming that gradient of the displacement vector has non-zero elements the same places as dF_m , the exponential can be evaluated:

$$\exp(\nabla \mathbf{u}) = \begin{pmatrix} e^{du_{11}} & \frac{du_{12}}{du_{11}} \left(e^{du_{22}} - e^{du_{11}} \right) & 0 \\ 0 & e^{du_{22}} & 0 \\ 0 & 0 & e^{du_{33}} \end{pmatrix}$$
(4.39)

From which

$$du_{11} = \ln \frac{\lambda_1}{M_{11}} \tag{4.40}$$

$$du_{22} = \ln \frac{\lambda_2 \sin \omega}{M_{22}} \tag{4.41}$$

$$du_{33} = \ln \frac{\lambda_3}{M_{33}} \tag{4.42}$$

$$du_{33} = \ln \frac{\lambda_3}{M_{33}}$$

$$du_{12} = \ln \frac{\lambda_1}{M_{11}} \frac{\frac{\lambda_2 \cos \omega}{M_{22}} - \frac{M_{12}\lambda_1}{M_{11}M_{22}}}{\frac{\lambda_2 \sin \omega}{M_{22}} - \frac{\lambda_1}{M_{11}}}$$

$$(4.42)$$

Alternatively, the incremental work can be written as

$$dw = \mathbf{S} \cdot \dot{\mathbf{E}} dt = \frac{1}{2} \mathbf{S} \cdot \dot{\mathbf{C}} dt \tag{4.44}$$

where **E** is Green-Lagrange strain. Evaluating $\dot{\mathbf{C}}$ and using $\dot{\mathbf{F}} = \nabla v \mathbf{F}$ gives

$$\dot{\mathbf{C}} = \dot{\mathbf{F}}^T \mathbf{F} + \mathbf{F}^T \dot{\mathbf{F}} = \mathbf{F}^T (\nabla v^T + \nabla v) \mathbf{F}$$
(4.45)

The energy increment (using tensors in the membrane coordinates) becomes

$$dw = \mathbf{S} \cdot [\lambda \omega]^T \left(\frac{1}{2} (\nabla u^T + \nabla u)\right) [\lambda \omega]$$
 (4.46)

Expansion of this expression is identical to Eq. (4.35) (as it must be).

4.5 Membrane Material Tasks

Much of the work for membrane model is done by the MemPoint2D.cpp, MemPointAS.cpp and MemPoint3D.cpp classes. These classes do the following tasks:

- 1. Use **dF** to find λ_1 (2D), λ_1 and λ_3 (AS), or λ_1 , λ_2 , and ω (3D).
- 2. Call the material class, which will complete these calculations
 - (a) For 2D and axisymmetric simulations, find λ_2 , λ_3 (plane stress only), τ_{11} and $\tau_{33} = \tau_{zz}$. For 3D simulations, find λ_3 , τ_{11} , τ_{12} , and τ_{22} (τ_{33} is zero, which may be used in the material model when finding the other quantities).
 - (b) Alternatively, a membrane material can find S_{ij} in the membrane instead of τ_{ij} and then set isPoila variable to true.
 - (c) Call method to update residual energy (it is done in the material to be able to handle anisotropic materials).
 - (d) Call method to track temperature, entropy, and heat on the particle.
- 3. Find du_{ij} and increment work energy
- 4. Store $[\lambda]$ (2D) or $[\lambda\omega]$ (3D) in the particle plastic strain
- 5. Update **F** on the particle
- 6. Rotate membrane stress to MPM coordinates and store on the particle stresses.

The material class works in a simplified deformation system. In 2D plane stress simulations with fiber stretch λ_1 , $J=\lambda_1\lambda_2\lambda_3$ and $\lambda_2=\lambda_3=\sqrt{J/\lambda_1}$ (assuming isotropic). The left Cauchy-Green deformation tensor in the membrane coordinates has non-zero elements $B_{11}=\lambda_1^2$ and $B_{22}=B_{33}=J/\lambda_1$.

In 2D plane strain (or axisymmetric) simulations with fiber stretch λ_1 , $J=\lambda_1\lambda_2\lambda_3$, $\lambda_3=1$ (plane strain) or is an input λ_3 (axisymmetric), and $\lambda_2=J/(\lambda_1\lambda_3)$. The left Cauchy-Green deformation tensor in the membrane coordinates has non-zero elements $B_{11}=\lambda_1^2$, $B_{22}=J^2/(\lambda_1^2\lambda_3^2)$, and $B_{33}=\lambda_3^2$.

In 3D simulations with fiber stretches λ_1 and λ_2 , $J=\lambda_1\lambda_2\lambda_3\sin\omega$, and $\lambda_3=J/(\lambda_1\lambda_2\sin\omega)$. The left Cauchy-Green deformation tensor in the membrane coordinates is

$$\mathbf{B} = \mathbf{F}\mathbf{F}^{T} = \begin{pmatrix} \lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega & \lambda_{2}^{2} \sin \omega \cos \omega & 0\\ \lambda_{2}^{2} \sin \omega \cos \omega & \lambda_{2}^{2} \sin^{2} \omega & 0\\ 0 & 0 & \lambda_{3}^{2} \end{pmatrix}$$
(4.47)

and the right Cauchy-Green deformation tensor in the membrane coordinates is

$$\mathbf{C} = \mathbf{F}^T \mathbf{F} = \begin{pmatrix} \lambda_1^2 & \lambda_1 \lambda_2 \cos \omega & 0 \\ \lambda_1 \lambda_2 \cos \omega & \lambda_2^2 & 0 \\ 0 & 0 & \lambda_3^2 \end{pmatrix}$$
(4.48)

Finally, in NairnMPM, the membrane deformation matrix ($[\lambda]$ or $[\lambda\omega]$), is tracked on the particle using the particle's plastic strain. Note that other Hyperelastic materials track **B** in the plastic strain and hyperelastic, plasticity materials track the elastic **B**; plastic membranes will need an alternate method to store elastic deformation information.

4.6 Isotopic, Hyperelastic Materials

Isotropic, hyperelastic materials can be derived by define an energy function in terms of invariants of **F** or other large-strain tensors. One approach is based on invariants of the left, Cauchy-Green tensor:

$$I_1 = \text{Tr}(\mathbf{B}) = B_{11} + B_{22} + B_{33}$$
 (4.49)

$$I_2 = \frac{1}{2} \left(I_1^2 - \mathbf{B} \cdot \mathbf{B} \right) \tag{4.50}$$

$$I_3 = \det(\mathbf{B}) = J^2 \tag{4.51}$$

Sometimes modified invariants are used instead as $\overline{I_1} = I_1/J^{2/3}$ and $\overline{I_2} = I_2/J^{4/3}$. Next the strain energy is written as a function of these invariants, with the common forms being $W(I_1, I_2, J)$ and $W(\overline{I_1}, \overline{I_2}, J)$. In these two forms, the Cauchy stress can be found from

$$\boldsymbol{\sigma} = \frac{\partial W}{\partial J} \mathbf{I} + \frac{2}{J} \left[\frac{\partial W}{\partial I_1} \mathbf{B} + \frac{\partial W}{\partial I_2} \left(I_1 \mathbf{B} - \mathbf{B}^2 \right) \right]$$
(4.52)

$$\boldsymbol{\sigma} = \frac{\partial W}{\partial J} \mathbf{I} + 2 \left[\frac{1}{J^{5/3}} \frac{\partial W}{\partial \overline{I_1}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{1}{J^{7/3}} \frac{\partial W}{\partial \overline{I_2}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) \right]$$
(4.53)

Because **B** is symmetric (and therefore $Tr(\mathbf{B}^2) = \mathbf{B} \cdot \mathbf{B}$), the second version can be written

$$\boldsymbol{\sigma} = \frac{\partial W}{\partial J} \mathbf{I} + 2 \left[\frac{1}{J^{5/3}} \frac{\partial W}{\partial \overline{I_1}} \operatorname{dev}(\mathbf{B}) + \frac{1}{J^{7/3}} \frac{\partial W}{\partial \overline{I_2}} \operatorname{dev}(I_1 \mathbf{B} - \mathbf{B}^2) \right]$$
(4.54)

The pressure $(P = -\text{Tr}(\boldsymbol{\sigma})/3)$ can be found from

$$P = -\frac{\partial W}{\partial J} - \frac{2}{3J} \left[\frac{\partial W}{\partial I_1} \text{Tr}(\mathbf{B}) + \frac{\partial W}{\partial I_2} \text{Tr} \left(I_1 \mathbf{B} - \mathbf{B}^2 \right) \right]$$
(4.55)

$$P = -\frac{\partial W}{\partial J} \tag{4.56}$$

Thus the deviatoric Cauchy stresses are:

$$\mathbf{s} = \frac{2}{J} \left[\frac{\partial W}{\partial I_1} \operatorname{dev}(\mathbf{B}) + \frac{\partial W}{\partial I_2} \operatorname{dev}\left(I_1 \mathbf{B} - \mathbf{B}^2\right) \right]$$
(4.57)

$$\mathbf{s} = \frac{2}{J} \left[\frac{1}{J^{2/3}} \frac{\partial W}{\partial \overline{I_1}} \operatorname{dev}(\mathbf{B}) + \frac{1}{J^{4/3}} \frac{\partial W}{\partial \overline{I_2}} \operatorname{dev}(I_1 \mathbf{B} - \mathbf{B}^2) \right]$$
(4.58)

4.7 Mooney-Rivlin Material

The Mooney-Rivilin material is an isotropic, elastic, hyperelastic material. It's stresses are based on a strain energy function that is assumed to be

$$W(\overline{I_1}, \overline{I_2}, J) = \frac{G_1}{2} \left(\overline{I_1} - 3 \right) + \frac{G_2}{2} \left(\overline{I_2} - 3 \right) + \frac{K}{2} (J - 1)^2$$
(4.59)

where G_1 , G_2 , and K are material properties. For low strains, this material is equivalent for a linear elastic, isotropic material with shear modulus G_1+G_2 and bulk modulus K. If $G_2=0$, the material is one form or a neo-Hookean material (another form is given below). See below for alternate compressibility terms. Some hyperelastic rubber models assume incompressible materials, which corresponds to $K \to \infty$; such models do not work in dynamic code (because wave speed is infinite), although they can be used in membranes.

The Cauchy (or true stress) is found by differentiating the strain energy to get

$$\sigma = \frac{G_1}{J^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) + K(J - 1) \mathbf{I}$$
 (4.60)

The stress components can be divided into pressure, P, and deviatoric stress, $\mathbf{s} = \boldsymbol{\sigma} + P\mathbf{I}$, which explicitly evaluate to:

$$P = -K(J-1) (4.61)$$

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2 - B_{xz}^2 + 2B_{yz}^2}{3J^{7/3}}$$
(4.62)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2 + 2B_{xz}^2 - B_{yz}^2}{3J^{7/3}}$$
(4.63)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3I^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2 - B_{xz}^2 - B_{yz}^2}{3I^{7/3}}$$
(4.64)

$$s_{xy} = G_1 \frac{B_{xy}}{J^{5/3}} + G_2 \frac{B_{zz}B_{xy} - B_{xz}B_{yz}}{J^{7/3}}$$
(4.65)

$$s_{xz} = G_1 \frac{B_{xz}}{J^{5/3}} + G_2 \frac{B_{yy}B_{xz} - B_{xy}B_{yz}}{J^{7/3}}$$
(4.66)

$$s_{yz} = G_1 \frac{B_{yz}}{J^{5/3}} + G_2 \frac{B_{xx}B_{yz} - B_{xy}B_{xz}}{J^{7/3}}$$
(4.67)

4.7.1 Plane Strain, Plane Stress, and Axisymmetric Analysis

For 2D analyses, $F_{xz} = F_{yz} = F_{zx} = F_{zy} = 0$, which leads to zero for corresponding terms in **B**. The resulting stresses are P = -K(J-1), $s_{xz} = s_{yz} = 0$, and

$$s_{xx} = G_1 \frac{2B_{xx} - B_{yy} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{xx}(B_{yy} + B_{zz}) - 2B_{yy}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(4.68)

$$s_{yy} = G_1 \frac{2B_{yy} - B_{xx} - B_{zz}}{3J^{5/3}} + G_2 \frac{B_{yy}(B_{xx} + B_{zz}) - 2B_{xx}B_{zz} - B_{xy}^2}{3J^{7/3}}$$
(4.69)

$$s_{zz} = G_1 \frac{2B_{zz} - B_{xx} - B_{yy}}{3J^{5/3}} + G_2 \frac{B_{zz}(B_{xx} + B_{yy}) - 2B_{xx}B_{yy} + 2B_{xy}^2}{3J^{7/3}}$$
(4.70)

$$s_{xy} = G_1 \frac{B_{xy}}{J^{5/3}} + G_2 \frac{B_{zz}B_{xy}}{J^{7/3}}$$
(4.71)

For plane strain analysis $B_{zz}=1$. For axisymmetric analysis, B_{zz} is provided by the input deformation. For plane stress analysis, one has to solve numerically for B_{zz} to get $\sigma_{zz}=0$ or $s_{zz}=P$ and then use that result to find ε_{zz} and other stresses.

In the presence of residual stresses (see details below), $\sigma_{zz}=0$ is found by solving f=0 where

$$f = -3J_{res}J_{eff}^{2}P(J_{eff}) + G_{1}J^{1/3}(2B_{zz} - \alpha_{1}) + \frac{G_{2}}{J^{1/3}}(B_{zz}\alpha_{1} - 2\alpha_{2})$$
(4.72)

where $P(J_{eff})$ is the pressure model used, $\alpha_1 = B_{xx} + B_{yy}$, $\alpha_2 = B_{xx}B_{yy} - B_{xy}^2$, $J^2 = \det(\mathbf{B}) = B_{zz}\alpha_2$, and $J_{eff} = J/J_{res}$. More explicitly in B_{zz} , the function is

$$f = -3J_{res}J_{eff}^{2}P(J_{eff}) + G_{1}B_{zz}^{1/6}\alpha_{2}^{1/6}(2B_{zz} - \alpha_{1}) + \frac{G_{2}}{B_{zz}^{1/6}\alpha_{2}^{1/6}}(B_{zz}\alpha_{1} - 2\alpha_{2})$$
(4.73)

For more efficient Newton's method, we need

$$\frac{df}{dB_{zz}} = -3J_{res}\frac{d\left(J_{eff}^{2}P(J_{eff})\right)}{dJ_{eff}}\frac{dJ_{eff}}{dB_{zz}} + \frac{G_{1}J^{1/3}(14B_{zz} - \alpha_{1})}{6B_{zz}} + \frac{G_{2}(5\alpha_{1}B_{zz} + 2\alpha_{2})}{6B_{zz}J^{1/3}}$$
(4.74)

where $J_{eff}=\sqrt{B_{zz}\alpha_2}/J_{res}$ and $B_{zz}(dJ_{eff}/dB_{zz})=\sqrt{B_{zz}\alpha_2}/(2J_{res})$. The first term simplifies to:

$$\frac{df}{dB_{zz}} = -\frac{3J}{2B_{zz}} \frac{d\left(J_{eff}^2 P(J_{eff})\right)}{dJ_{eff}} + \frac{G_1 J^{1/3} (14B_{zz} - \alpha_1)}{6B_{zz}} + \frac{G_2 (5\alpha_1 B_{zz} + 2\alpha_2)}{6B_{zz} J^{1/3}}$$
(4.75)

For the pressure term above

$$-\frac{3J}{2B_{zz}}\frac{d\left(J_{eff}^{2}P(J_{eff})\right)}{dJ_{eff}} = \frac{3J}{2B_{zz}}KJ_{eff}(3J_{eff}-2)$$
(4.76)

Other pressure models are given below.

4.7.2 Dealing with Thermal and Moisture Strains

To handle thermal and moisture strains the deformation is divided into two steps. The first is free expansion to the new stress free volume and then deformation to the final volume. The total deformation will be

$$\mathbf{F} = \mathbf{F}^* \mathbf{F}^{res} = \mathbf{F}^* \lambda_{res} \mathbf{I} \tag{4.77}$$

where λ_{res} is total extension due to free thermal and moisture expansion:

$$\lambda_{res} = \exp(\alpha \Delta T + \beta \Delta c) \approx 1 + \alpha \Delta T + \beta \Delta c \tag{4.78}$$

where the approximation is for small ΔT and Δx . The stresses and energy, however, should be found using \mathbf{F}^* instead of \mathbf{F} , where \mathbf{F}^* is now deformation from the current free expansion volume instead of from the initial volume. The net effects are $\mathbf{F}^* = \mathbf{F}/\lambda_{res}$, $J_{eff} = |\mathbf{F}^*| = J/\lambda_{res}^3$, and $\mathbf{B}_{eff} = \mathbf{B}/\lambda_{res}^2$. In the above equations, the Cauchy stress is found by replacing J with J_{eff} in the pressure model and by multiplying all shear terms by $J_{res} = \lambda_{res}^3$, or explicitly by three equivalent forms:

$$\sigma = \frac{J_{res}G_1}{J^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{J_{res}G_2}{J^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
(4.79)

$$\sigma = \frac{G_1}{J_{eff}J^{2/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J_{eff}J^{4/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
(4.80)

$$\sigma = \frac{G_1}{J_{res}^{2/3} J_{eff}^{5/3}} \left(\mathbf{B} - \frac{I_1}{3} \mathbf{I} \right) + \frac{G_2}{J_{res}^{4/3} J_{eff}^{7/3}} \left(I_1 \mathbf{B} - \mathbf{B}^2 - \frac{2I_2}{3} \mathbf{I} \right) - P(J_{eff}) \mathbf{I}$$
(4.81)

These results reduce to the proper low-strain thermoelastic relation at small strain. In this limit

$$\mathbf{B} \approx \mathbf{I} + 2\boldsymbol{\varepsilon}, \quad I_1 \approx 3 + 2\operatorname{Tr}(\boldsymbol{\varepsilon}), \quad \mathbf{B}^2 \approx \mathbf{I} + 2\boldsymbol{\varepsilon}, \quad J \approx 1 + \operatorname{Tr}(\boldsymbol{\varepsilon}), \quad \text{and} \quad \frac{1}{J_{res}} \approx 1 - 3\alpha\Delta T$$
 (4.82)

leading to

$$\boldsymbol{\sigma} = G_1 \left(2\boldsymbol{\varepsilon} - \frac{2}{3} \text{Tr}(\boldsymbol{\varepsilon}) \mathbf{I} \right) + G_2 \left(2\boldsymbol{\varepsilon} + \left(I_1 \left(1 - \frac{I_1}{3} \right) - 1 + \frac{\mathbf{B} \cdot \mathbf{B}}{3} \right) \mathbf{I} \right) + K(\text{Tr}(\boldsymbol{\varepsilon}) - 3\alpha \Delta T) \mathbf{I}$$
(4.83)

Using $\mathbf{B} \cdot \mathbf{B} \approx 3 + 4 \text{Tr}(\boldsymbol{\varepsilon})$ leads to

$$\boldsymbol{\sigma} = (G_1 + G_2) \left(2\boldsymbol{\varepsilon} - \frac{2}{3} \text{Tr}(\boldsymbol{\varepsilon}) \mathbf{I} \right) + K(\text{Tr}(\boldsymbol{\varepsilon}) - 3\alpha \Delta T) \mathbf{I}$$
 (4.84)

$$= \left[\left(K - \frac{2}{3} (G_1 + G_2) \right) \operatorname{Tr}(\boldsymbol{\varepsilon}) - 3K\alpha\Delta T \right] \mathbf{I} + 2(G_1 + G_2)\boldsymbol{\varepsilon}$$
 (4.85)

which is the expected result where $G_1 + G_2$ is the low-strain shear modulus.

When doing incremental deformation, $\mathbf{F}_{k+1} = \mathbf{dF} \cdot \mathbf{F}_k$ and incremental volume ratio is $dJ = |\mathbf{dF}| = V_{k+1}/V_k$, but J_{eff} is V/V_{sf} where V_{sf} is the current stress free volume. For incremental deformation, $J_{k+1} = dJ_{J_k}$, but we really want to increment $J_{eff,k+1} = dJ_{eff}J_{eff,k}$, which is

$$J_{eff,k+1} = \frac{V_{k+1}}{V_{sf,k+1}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} \frac{V_k}{V_{sf,k}} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} J_{eff,k} = dJ_{eff}J_{eff,k}$$
(4.86)

which implies that

$$dJ_{eff} = \frac{V_{k+1}}{V_k} \frac{V_{sf,k}}{V_{sf,k+1}} = dJ/d\lambda_{res}^3$$
 (4.87)

where

$$d\lambda_{res} = \exp(\alpha dT + \beta dc) \approx 1 + \alpha dT + \beta dc \tag{4.88}$$

where dT and dc are temperature and concentration changes on the current time step.

4.7.3 Alternate Bulk Modulus Term

Besides the dilation energy term used above of

$$W = \frac{K}{2}(J-1)^2 \quad \text{with} \quad P = -K(J-1), \tag{4.89}$$

two alternative compressibility terms are:

$$W = \frac{K}{2}(\ln J)^2$$
 and $W = \frac{K}{2}\left(\frac{1}{2}(J^2 - 1) - \ln J\right)$ (4.90)

which gives normal Cauchy pressure terms of

$$P = -K \frac{\ln J}{J} \quad \text{and} \quad P = -\frac{K}{2} \left(J - \frac{1}{J} \right) \tag{4.91}$$

Although these three compressibility terms show some significant differences when J deviates significantly from 1, under most problems, J will stay close to one. Two exceptions could be constrained compression or tension. Here, the only one that works well to very small or large J is the second one

above. This one correctly leads to infinite positive stress as $J \to \infty$ and infinite negative stress as $J \rightarrow 0$. This later one is the default for this material in NairnMPM.

When implementing plane stress, the pressure term derivatives for these two new laws are:

$$\frac{d(J_{eff}^2 P(J_{eff}))}{dJ_{eff}} = -K \frac{d\left(J_{eff} \ln J_{eff}\right)}{dJ_{eff}} = -K(1 + \ln J_{eff})$$
(4.92)

$$\frac{d(J_{eff}^2 P(J_{eff}))}{dJ_{eff}} = -\frac{K}{2} \frac{d\left(J_{eff}^3 - J_{eff}\right)}{dJ_{eff}} = -\frac{K}{2} (3J_{eff}^2 - 1)$$
(4.93)

Tangent Bulk Modulus

The incremental bulk modulus is

$$\frac{1}{K(P)} = -\frac{d \ln V}{dP} = -\frac{d \ln J_{eff}}{dP} \qquad \text{or} \qquad K = -J_{eff} \frac{dP}{dJ_{eff}}$$
(4.94)

The various bulk moduli are (using J for J_{eff}):

$$P = -K_0(J - 1)$$
 gives $K = K_0 J$ (4.95)

$$= -K_0(J - 1) gives K = K_0 J (4.95)$$

$$P = -K_0 \frac{\ln J}{J} gives K_0 \frac{1 - \ln J}{J^2} (4.96)$$

$$P = -\frac{K_0}{2} \left(J - \frac{1}{J} \right) \qquad \text{gives} \qquad K = \frac{K_0}{2} \left(J + \frac{1}{J} \right) \tag{4.97}$$

4.7.5 Plane Stress Mooney-Rivlin Membrane

Using the deformation state for plane stress membrane and defining $\lambda = \lambda_1$) a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + 2J_{res}G_1 \frac{\lambda^2 - \frac{J}{\lambda}}{3J^{5/3}} + 2J_{res}G_2 \frac{\lambda - \frac{J}{\lambda^2}}{3J^{4/3}}$$
(4.98)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + J_{res}G_1 \frac{\frac{J}{\lambda} - \lambda^2}{3J^{5/3}} + J_{res}G_2 \frac{\frac{J}{\lambda^2} - \lambda}{3J^{4/3}}$$
(4.99)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22}=0$ for Jor solving:

$$-P(J_{eff}) = J_{res}G_1 \frac{\lambda^2 - \frac{J}{\lambda}}{3J^{5/3}} + J_{res}G_2 \frac{\lambda - \frac{J}{\lambda^2}}{3J^{4/3}}$$
(4.100)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^2 P(J_{eff}) + (J^{1/3}G_1 + J^{2/3}G_2) \left(\lambda^2 - \frac{J}{\lambda}\right)$$
 (4.101)

$$\frac{df}{dJ} = 3\frac{d(J_{eff}^2 P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3}G_1}{3} \left(\frac{\lambda^2}{J} - \frac{4}{\lambda}\right) + \frac{J^{2/3}G_2}{3} \left(\frac{2\lambda}{J} - \frac{5}{\lambda^2}\right)$$
(4.102)

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{J^{2/3} G_2}{\lambda} \right) \left(\lambda^2 - \frac{J}{\lambda} \right) \quad \text{and} \quad \tau_{33} = 0$$
(4.103)

and $\lambda_2 = \lambda_3 = \sqrt{J/\lambda}$. Normally dynamic code cannot model an incompressible material, but an incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = \left(J_{res}^{1/3} G_1 + \frac{J_{res}^{2/3} G_2}{\lambda}\right) \left(\lambda^2 - \frac{J_{res}}{\lambda}\right) \quad \text{and} \quad \tau_{33} = 0 \tag{4.104}$$

and $\lambda_2 = \lambda_3 = \sqrt{J_{res}/\lambda}$. Note that during free thermal expansion, $J_{res} = \lambda^3$ and all stresses are zero.

4.7.6 Plane Stress Mooney-Rivlin Membrane — Alternate Approach

In this alternate approach, the new fiber stretch is found by conserving the imposed incremental volume change, dJ, and then finding the new fiber stretch to keep the thickness stress equal to zero.

In 2D plane stress simulations with incremental fiber stretch $d\lambda$, $J=J_n=d\lambda d\lambda_2 d\lambda_3 J_{n-1}$ and $d\lambda_2=d\lambda_3=\sqrt{dJ/d\lambda}$. The left Cauchy-Green deformation tensor current membrane coordinates has non-zero elements $B_{11}=\lambda_n^2$, $B_{22}=B_{33}=J/\lambda_n$, where $\lambda_n=d\lambda\lambda$ is the new fiber stretch in the n^{th} step. For a Mooney-Rivlin material (here neo-hookean only with $G_1=G$ and $G_2=0$) the normal Cauchy stresses are:

$$\sigma_{11} = -P(J_{eff}) + 2J_{res}G \frac{\lambda_n^2 - \frac{J}{\lambda_n}}{3J^{5/3}}$$
(4.105)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + J_{res}G \frac{J_{\lambda_n} - \lambda_n^2}{3J^{5/3}}$$
 (4.106)

where the $P(J_{eff})$ is the pressure model. The stress state is found by solving $\sigma_{yy} = 0$ for $d\lambda = \lambda_n/\lambda_{n-1}$, which is a cubic equation:

$$\lambda_n^3 + \frac{3J^{2/3}J_{eff}P(J_{eff})}{G}\lambda_n - J = 0 {(4.107)}$$

This depressed cubic can be found analytically. When this approach was tried, the resulting membrane seemed too stiff and the stiffness was a strong function of the Poisson's ratio. This approach is not recommended for MPM membrane analysis.

4.7.7 Plane Strain and Axisymmetric Mooney-Rivlin Membrane

Using the deformation state for plane strain or axiymmetric membranes and defining $\lambda = \lambda_1$, a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + J_{res}G_1 \frac{2\lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2} - \lambda_3^2}{3J^{5/3}} + J_{res}G_2 \frac{\lambda^2 \lambda_3^2 + \frac{J^2}{\lambda_3^2} - 2\frac{J^2}{\lambda^2}}{3J^{7/3}}$$
(4.108)

$$\sigma_{22} = -P(J_{eff}) + J_{res}G_1 \frac{2\frac{J^2}{\lambda^2 \lambda_3^2} - \lambda^2 - \lambda_3^2}{3J^{5/3}} + J_{res}G_2 \frac{\frac{J^2}{\lambda_3^2} + \frac{J^2}{\lambda^2} - 2\lambda^2 \lambda_3^2}{3J^{7/3}}$$
(4.109)

$$\sigma_{33} = -P(J_{eff}) + J_{res}G \frac{2\lambda_3^2 - \lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2}}{3J^{5/3}} + J_{res}G_2 \frac{\lambda^2 \lambda_3^2 + \frac{J^2}{\lambda^2} - 2\frac{J^2}{\lambda_3^2}}{3J^{7/3}}$$
(4.110)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = J_{res}G_1 \frac{\lambda_3^2 + \lambda^2 - 2\frac{J^2}{\lambda^2 \lambda_3^2}}{3J^{5/3}} + J_{res}G_2 \frac{2\lambda^2 \lambda_3^2 - \frac{J^2}{\lambda_3^2} - \frac{J^2}{\lambda^2}}{3J^{7/3}}$$
(4.111)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^{2}P(J_{eff}) + J^{1/3}G_{1}\left(\lambda_{3}^{2} + \lambda^{2} - 2\frac{J^{2}}{\lambda^{2}\lambda_{3}^{2}}\right) + \frac{G_{2}}{J^{1/3}}\left(2\lambda^{2}\lambda_{3}^{2} - J^{2}\left(\frac{1}{\lambda_{3}^{2}} + \frac{1}{\lambda^{2}}\right)\right)$$

$$\frac{df}{dJ} = 3\frac{d(J_{eff}^{2}P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3}G_{1}}{3}\left(\frac{\lambda_{3}^{2} + \lambda^{2}}{J} - \frac{14J}{\lambda^{2}\lambda_{3}^{2}}\right) - \frac{G_{2}}{3J^{1/3}}\left(\frac{2\lambda^{2}\lambda_{3}^{2}}{J} + 5J\left(\frac{1}{\lambda_{3}^{2}} + \frac{1}{\lambda^{2}}\right)\right)$$

$$(4.112)$$

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{G_2 \lambda_3^2}{J^{1/3}} \right) \left(\lambda^2 - \frac{J^2}{\lambda^2 \lambda_3^2} \right)$$
(4.113)

$$\tau_{33} = \frac{1}{J_{eff}} \left(J^{1/3} G_1 + \frac{G_2 \lambda^2}{J^{1/3}} \right) \left(\lambda_3^2 - \frac{J^2}{\lambda^2 \lambda_3^2} \right)$$
(4.114)

and $\lambda_2=J/(\lambda\lambda_3)$. Normally dynamic code cannot model an incompressible material, but a plane strain incompressible membrane material can be modeled by setting $J=J_{res}$ and $J_{eff}=1$ or:

$$\tau_{11} = \left(J_{res}^{1/3}G_1 + \frac{G_2\lambda_3^2}{J_{res}^{1/3}}\right) \left(\lambda^2 - \frac{J_{res}^2}{\lambda^2\lambda_3^2}\right) \tag{4.115}$$

$$\tau_{33} = \left(J_{res}^{1/3}G_1 + \frac{G_2\lambda^2}{J_{res}^{1/3}}\right) \left(\lambda_3^2 - \frac{J_{res}^2}{\lambda^2\lambda_3^2}\right)$$
(4.116)

and $\lambda_2=J_{res}/(\lambda\lambda_3)$. Note that during free plane strain thermal expansion, $J_{res}=\lambda^2$ and $\lambda_3=1$ such that in-plane stress will be zero but τ_{33} will be non-zero due to restraint in that direction. For axisymmetric free thermal expansion, $J_{res}=\lambda^3$ and $\lambda_3=\lambda$ such that all stresses are zero.

4.7.8 3D Mooney-Rivlin Membrane

Using the deformation state for 3D membranes, a Mooney-Rivlin material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(2\lambda_1^2 + \lambda_2^2 (2\cos^2\omega - \sin^2\omega) - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2\omega} \right) + \frac{J_{res}G_2}{3J^{7/3}} \left(\lambda_1^2 \lambda_2^2 \sin^2\omega + (\lambda_1^2 + \lambda_2^2 (\cos^2\omega - 2\sin^2\omega)) \frac{J^2}{\lambda_2^2 \lambda_1^2 \sin^2\omega} \right)$$
(4.117)

$$\sigma_{22} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(\lambda_2^2 (2\sin^2 \omega - \cos^2 \omega) - \lambda_1^2 - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
(4.118)

$$+\frac{J_{res}G_2}{3J^{7/3}}\left(\lambda_1^2\lambda_2^2\sin^2\omega - (2\lambda_1^2 + \lambda_2^2(2\cos^2\omega - \sin^2\omega))\frac{J^2}{\lambda_2^2\lambda_1^2\sin^2\omega}\right)$$
(4.119)

$$\sigma_{33} = -P(J_{eff}) + \frac{J_{res}G_1}{3J^{5/3}} \left(\frac{2J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} - \lambda_1^2 - \lambda_2^2 \right)$$
(4.120)

$$+\frac{J_{res}G_2}{3J^{7/3}}\left(\frac{(\lambda_1^2 + \lambda_2^2)J^2}{\lambda_2^2\lambda_1^2\sin^2\omega} - 2\lambda_1^2\lambda_2^2\sin^2\omega\right)$$
(4.121)

$$\sigma_{12} = \frac{J_{res}G_1}{J^{5/3}}\lambda_2^2 \sin \omega \cos \omega + \frac{J_{res}G_2}{J^{1/3}} \frac{\cos \omega}{\lambda_1^2 \sin \omega}$$
(4.122)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{33} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{J_{res}G_1}{3J^{5/3}} \left(\lambda_1^2 + \lambda_2^2 - \frac{2J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) + \frac{J_{res}G_2}{3J^{7/3}} \left(2\lambda_1^2 \lambda_2^2 \sin^2 \omega - \frac{(\lambda_1^2 + \lambda_2^2)J^2}{\lambda_2^2 \lambda_1^2 \sin^2 \omega} \right)$$
(4.123)

For Newton's method, solve f = 0 for J using

$$f = 3J_{res}J_{eff}^{2}P(J_{eff}) + J^{1/3}G_{1}\left(\lambda_{1}^{2} + \lambda_{2}^{2} - \frac{2J^{2}}{\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}\right)$$

$$+ \frac{G_{2}}{J^{1/3}}\left(2\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega - \frac{(\lambda_{1}^{2} + \lambda_{2}^{2})J^{2}}{\lambda_{2}^{2}\lambda_{1}^{2}\sin^{2}\omega}\right)$$

$$\frac{df}{dJ} = 3\frac{d(J_{eff}^{2}P(J_{eff}))}{dJ_{eff}} + \frac{J^{1/3}G}{3}\left(\frac{\lambda_{1}^{2} + \lambda_{2}^{2}}{J} - \frac{14J}{\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}\right)$$

$$- \frac{G_{2}}{3J^{1/3}}\left(\frac{2\lambda_{1}^{2}\lambda_{2}^{2}\sin^{2}\omega}{J} + \frac{5(\lambda_{1}^{2} + \lambda_{2}^{2})J}{\lambda_{2}^{2}\lambda_{1}^{2}\sin^{2}\omega}\right)$$

$$(4.125)$$

Given this J, the final results for Kirchhoff stresses are:

$$\tau_{11} = \frac{J^{1/3}G_{1}}{J_{eff}} \left(\lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega - \frac{J^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right) + \frac{G_{2}}{J_{eff}J^{1/3}} \left(\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega - \frac{J^{2}}{\lambda_{1}^{2}} \right)$$

$$\tau_{22} = \frac{J^{1/3}G_{1}}{J_{eff}} \left(\lambda_{2}^{2} \sin^{2} \omega - \frac{J^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right)$$

$$+ \frac{G_{2}}{J_{eff}J^{1/3}} \left(\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega - \frac{(\lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega)J^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right)$$

$$\tau_{12} = \frac{J^{1/3}G_{1}}{J_{eff}} \lambda_{2}^{2} \sin \omega \cos \omega + \frac{G_{2}}{J_{eff}J^{1/3}} \frac{J^{2} \cos \omega}{\lambda_{1}^{2} \sin \omega}$$

$$(4.128)$$

and $\lambda_3 = J/(\lambda_1 \lambda_2 \sin \omega)$. Normally dynamic code cannot model an incompressible material, but a 3D incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G_{1} \left(\lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega - \frac{J_{res}^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right) + \frac{G_{2}}{J_{res}^{1/3}} \left(\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega - \frac{J_{res}^{2}}{\lambda_{1}^{2}} \right)$$

$$\tau_{22} = J_{res}^{1/3} G_{1} \left(\lambda_{2}^{2} \sin^{2} \omega - \frac{J_{res}^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right)$$

$$+ \frac{G_{2}}{J_{res}^{1/3}} \left(\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega - \frac{(\lambda_{1}^{2} + \lambda_{2}^{2} \cos^{2} \omega) J_{res}^{2}}{\lambda_{1}^{2} \lambda_{2}^{2} \sin^{2} \omega} \right)$$

$$\tau_{12} = J_{res}^{1/3} G_{1} \lambda_{2}^{2} \sin \omega \cos \omega + \frac{G_{2}}{I^{1/3}} \frac{J_{res}^{2} \cos \omega}{\lambda_{2}^{2} \sin \omega}$$

$$(4.131)$$

and $\lambda_3 = J_{res}/(\lambda_1\lambda_2\sin\omega)$. Note that during free thermal expansion, $J_{res} = \lambda^3$, $\lambda_1 = \lambda_2 = \lambda$ and $\cos\omega = 0$, which leads to all stresses equal to zero.

4.8 Neo-Hookean Material

Although using $G_2 = 0$ is a special case of a Mooney-Rivlin material is a neo-Hookean material, some literature results define a different neo-Hookean material using the strain energy function:

$$W(I_1, I_2, J) = \frac{G}{2} \left(I_1 - 3 - 2 \ln J \right) + \frac{\lambda}{2} (\ln J)^2$$
 (4.132)

where *G* is shear modulus and λ is the Lamé constant. The Cauchy stress (after accounting for residual stresses) is

$$\sigma = \frac{\lambda \ln J_{eff}}{J_{eff}} \mathbf{I} + \frac{G}{J_{eff}} \left(\frac{\mathbf{B}}{J_{res}^{2/3}} - \mathbf{I} \right)$$
(4.133)

In the low strain limit, $J=1+{\rm Tr}(\pmb{\varepsilon}), J_{res}=1+3\alpha\Delta T$, and $\mathbf{B}=\mathbf{I}+2\pmb{\varepsilon}$. The stress simplifies to

$$\boldsymbol{\sigma} = (\lambda \operatorname{Tr}(\boldsymbol{\varepsilon}) - (3\lambda + 2G)\alpha\Delta T)\mathbf{I} + 2G\boldsymbol{\varepsilon} \qquad \text{low strain}$$
 (4.134)

which is the expected result using low-strain shear and Lamé properties and accounting for residual thermal stresses (note that $3\lambda + 2G = 3K$ where K is the low strain bulk modulus).

The stress components can be divided into pressure, P and deviatoric stress, $s = \sigma + PI$, which explicitly evaluate to:

$$P = P(J_{eff}) - \frac{G}{J_{eff}} \left(\frac{B_{xx} + B_{yy} + B_{zz}}{3J_{res}^{2/3}} - 1 \right)$$
(4.135)

$$s_{xx} = \frac{J_{res}^{1/3}G}{3J} (2B_{xx} - B_{yy} - B_{zz})$$
 (4.136)

$$s_{yy} = \frac{J_{res}^{1/3}G}{3J} (2B_{yy} - B_{zz} - B_{zz})$$
 (4.137)

$$s_{zz} = \frac{J_{res}^{1/3}G}{3J} (2B_{zz} - B_{xx} - B_{xx})$$
 (4.138)

$$s_{ij} = \frac{J_{res}^{1/3}G}{J}B_{ij} \quad \text{for } i \neq j$$
 (4.139)

where $P(J_{eff})$ uses any pressure above except that K is replaced by λ . When doing plane stress calculations, one task is to solve for $\sigma_{zz} = 0$, which is equivalent to solving numerically for f = 0 give

$$f = -J_{res}^{2/3} J_{eff} P(J_{eff}) + G\left(B_{zz} - J_{res}^{2/3}\right)$$
 (4.140)

$$\frac{df}{dB_{zz}} = G - \frac{J_{res}^{2/3} J_{eff}}{2B_{zz}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}}$$
(4.141)

which used $J_{eff} = \sqrt{B_{zz}\alpha_2}/J_{res}$ with $\alpha_2 = B_{xx}B_{yy} - B_{xy}^2$ leading to $(dJ_{eff}/dB_{zz}) = J_{eff}/(2B_{zz})$. This equation can be solved analytically for two pressure models, but requires numerical solution for the third. The two analytical solutions are

$$B_{zz} = J_{res}^2 \frac{\lambda + 2G}{\lambda \alpha_2 + 2G J_{res}^{4/3}}$$
 when $J_{eff} P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff}^2 - 1 \right)$ (4.142)

and

$$\sqrt{B_{zz}} = J_{res} \frac{\lambda \sqrt{\alpha_2} + \sqrt{\lambda^2 \alpha_2 + 4G\left(\lambda \alpha_2 + GJ_{res}^{4/3}\right)}}{2\left(\lambda \alpha_2 + GJ_{res}^{4/3}\right)}$$
(4.143)

when $P(J_{eff}) = -\lambda \left(J_{eff} - 1\right)$. A third pressure law has $P(J_{eff}) = -\lambda \ln J_{eff}/J_{eff}$ leading to

$$f = G\left(B_{zz} - J_{res}^{2/3}\right) + \lambda J_{res}^{2/3} \ln J_{eff}$$
 (4.144)

$$\frac{df}{dB_{zz}} = G + \frac{\lambda J_{res}^{2/3}}{2B_{zz}} \tag{4.145}$$

4.8.1 Tangent Bulk Modulus

To support adiabatic heating (or state dependent wave speeds), we need K as a function of deformation. Using $K = -J_{eff} dP/dJ_{eff}$ gives The various bulk moduli are (using J for J_{eff}):

$$P(J_{eff}) = -\lambda(J-1)$$
 gives $K = \lambda J + G\left(1 - \frac{I_1}{3} + \frac{1}{3}\frac{dI_1}{dJ}\right)$ (4.146)

$$P(J_{eff}) = -\lambda \frac{\ln J}{J}$$
 gives $K = \lambda \frac{1 - \ln J}{J^2} + G\left(1 - \frac{I_1}{3} + \frac{1}{3}\frac{dI_1}{dJ}\right)$ (4.147)

$$P(J_{eff}) = -\frac{\lambda}{2} \left(J - \frac{1}{J} \right)$$
 gives $K = \frac{\lambda}{2} \left(J + \frac{1}{J} \right) + G \left(1 - \frac{I_1}{3} + \frac{1}{3} \frac{dI_1}{dJ} \right)$ (4.148)

For hydrostatic compression in all models, K_0 is found by substituting $I_1 = 3J^{2/3}$ and then J = 1 to get the result of $K_0 = \lambda + 2G/3$. For $J \neq 1$, the shear term becomes

$$G\left(1 - J^{2/3} + \frac{2}{3J^{1/3}}\right) \tag{4.149}$$

which appears to be the only way to evaluate K for a fixed particle state.

4.8.2 Plane Stress Neo-Hookean Membrane

Using the deformation state for plane stress membrane, a neo-Hookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2}{J_{res}^{2/3}} - 1 \right)$$
 (4.150)

$$\sigma_{22} = \sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J}{\lambda_1 J_{res}^{2/3}} - 1 \right)$$
 (4.151)

where the $P(J_{eff})$ is the pressure model (using λ instead of K). The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J}{\lambda_1 J_{res}^{2/3}} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{1/3} J_{eff}}{\lambda_1} + 1 = 0$$
 (4.152)

For two models, this can be solved analytically:

$$J_{eff} = -\frac{J_{res}^{1/3}G}{\lambda\lambda_1} + \sqrt{1 + \frac{2G}{\lambda} + \left(\frac{J_{res}^{1/3}G}{\lambda\lambda_1}\right)^2} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}}\right)$$
(4.153)

$$J_{eff} = \frac{1}{2} \left(1 - \frac{J_{res}^{1/3} G}{\lambda \lambda_1} + \sqrt{\frac{4G}{\lambda} + \left(1 - \frac{J_{res}^{1/3} G}{\lambda \lambda_1} \right)^2} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right) \quad (4.154)$$

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = \lambda_1 J_{res}^{2/3} J_{eff} P(J_{eff}) + G\left(\lambda_1 J_{res}^{2/3} - J\right) = -\lambda \lambda_1 J_{res}^{2/3} \ln J_{eff} + G\left(\lambda_1 J_{res}^{2/3} - J\right)$$
(4.155)

$$\frac{df}{dJ} = \frac{\lambda_1}{J_{res}^{1/3}} \frac{d(J_{eff}P(J_{eff}))}{dJ_{eff}} - G = -\frac{\lambda \lambda_1 J_{res}^{2/3}}{J} - G$$
(4.156)

Given this J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G\left(\lambda_1^2 - \frac{J}{\lambda_1}\right) \quad \text{and} \quad \tau_{33} = 0$$
(4.157)

with $\lambda_2 = \lambda_3 = \sqrt{J/\lambda_1}$. Normally dynamic code cannot model an incompressible material, but an incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = \frac{G}{J_{res}^{2/3}} \left(\lambda_1^2 - \frac{J_{res}}{\lambda_1} \right) \quad \text{and} \quad \tau_{33} = 0$$
(4.158)

with $\lambda_2 = \lambda_3 = \sqrt{J_{res}/\lambda_1}$. Note that during free thermal expansion, $J_{res} = \lambda_1^3$ and all stresses are zero.

4.8.3 Plane Strain and Axisymmetric Neohookean Membrane

Using the deformation state for plane strain or axiymmetric membranes, a Neohookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2}{J_{res}^{2/3}} - 1 \right)$$
 (4.159)

$$\sigma_{22} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_3^2} - 1 \right)$$
(4.160)

$$\sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_3^2}{J_{res}^{2/3}} - 1 \right)$$
 (4.161)

where the $P(J_{eff})$ is the pressure model. The stress state is found by numerically solving $\sigma_{22} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_3^2} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{4/3} J_{eff}^2}{\lambda_1^2 \lambda_3^2} + 1 = 0$$
 (4.162)

For two models, this can be solved analytically:

$$J_{eff} = \sqrt{\frac{\lambda + 2G}{\lambda + 2G\frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_3^2}}} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}} \right)$$
(4.163)

$$J_{eff} = \frac{1}{2} \left(\frac{1 + \sqrt{1 + \frac{4G}{\lambda} \left(1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^1 \lambda_3^2} \right)}}{1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^1 \lambda_3^2}} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right)$$
(4.164)

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = \lambda_3 = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1 = \lambda_3)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = \lambda_1^2 \lambda_3^2 J_{res}^{2/3} J_{eff} P(J_{eff}) + G\left(\lambda_1^2 \lambda_3^2 J_{res}^{2/3} - J^2\right)$$
(4.165)

$$= -\lambda \lambda_1^2 \lambda_3^2 J_{res}^{2/3} \ln J_{eff} + G \left(\lambda_1^2 \lambda_3^2 J_{res}^{2/3} - J^2 \right)$$
 (4.166)

$$\frac{df}{dJ} = \frac{\lambda_1^2 \lambda_3^2}{J_{res}^{1/3}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}} - 2GJ = -\frac{\lambda \lambda_1^2 \lambda_3^2 J_{res}^{2/3}}{J} - 2GJ$$
(4.167)

Given the solved J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G\left(\lambda_1^2 - \frac{J^2}{\lambda_1^2 \lambda_3^2}\right) \quad \text{and} \quad \tau_{33} = J_{res}^{1/3} G\left(\lambda_3^2 - \frac{J^2}{\lambda_1^2 \lambda_3^2}\right) \tag{4.168}$$

and $\lambda_2 = J/(\lambda_1 \lambda_3)$. Normally dynamic code cannot model an incompressible material, but a plane strain incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 - \frac{J_{res}^2}{\lambda_1^2 \lambda_3^2} \right) \quad \text{and} \quad \tau_{33} = J_{res}^{1/3} G \left(\lambda_3^2 - \frac{J_{res}^2}{\lambda_1^2 \lambda_3^2} \right)$$
(4.169)

and $\lambda_2 = J_{res}/(\lambda_1\lambda_3)$. Note that during free plane strain thermal expansion, $J_{res} = \lambda_1^2$ and $\lambda_3 = 1$ such that in-plane stress will be zero but τ_{33} will be non-zero due to restraint in that direction. For axisymmetric free thermal expansion, $J_{res} = \lambda_1^3$ and $\lambda_3 = \lambda_1$ such that all stresses are zero.

4.8.4 3D Neo-Hookean Membrane

Using the deformation state for 3D membranes, a Neohookean material has the normal Cauchy stresses:

$$\sigma_{11} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_1^2 + \lambda_2^2 \cos^2 \omega}{J_{res}^{2/3}} - 1 \right)$$
(4.170)

$$\sigma_{22} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{\lambda_2^2 \sin^2 \omega}{J_{res}^{2/3}} - 1 \right)$$
 (4.171)

$$\sigma_{33} = -P(J_{eff}) + \frac{G}{J_{eff}} \left(\frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega} - 1 \right)$$
 (4.172)

$$\sigma_{12} = \frac{G}{J_{eff}} \frac{\lambda_2^2 \sin \omega \cos \omega}{J_{res}^{2/3}} \tag{4.173}$$

where the $P(J_{eff})$ is the pressure model. The stress state is found by solving $\sigma_{33} = 0$ for J or solving:

$$-P(J_{eff}) = \frac{G}{J_{eff}} \left(1 - \frac{J^2}{J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega} \right) \quad \text{or} \quad \frac{J_{eff} P(J_{eff})}{G} - \frac{J_{res}^{4/3} J_{eff}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} + 1 = 0$$
 (4.174)

For two models, this can be solved analytically:

$$J_{eff} = \sqrt{\frac{\lambda + 2G}{\lambda + 2G \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega}}} \quad \text{for } P(J_{eff}) = -\frac{\lambda}{2} \left(J_{eff} - \frac{1}{J_{eff}} \right)$$
(4.175)

$$J_{eff} = \frac{1}{2} \left(\frac{1 + \sqrt{1 + \frac{4G}{\lambda} \left(1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)}}{1 + \frac{G}{\lambda} \frac{J_{res}^{4/3}}{\lambda_1^2 \lambda_2^2 \sin^2 \omega}} \right) \quad \text{for } P(J_{eff}) = -\lambda \left(J_{eff} - 1 \right)$$
 (4.176)

Notice for incompressible $(\lambda \to \infty)$, undeformed $(J_{res}^{1/3} = \lambda_1 = \lambda_3 = \sin \omega = 1)$, and free thermal expansion $(J_{res}^{1/3} = \lambda_1 = \lambda_3 \text{ and } \sin \omega = 1)$ that $J_{eff} = 1$. The last model (with $J_{eff}P(J_{eff}) = -\lambda \ln J_{eff}$) must be solved numerically for J using Newton's method with:

$$f = J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega (J_{eff} P(J_{eff})) + G\left(J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega - J^2\right)$$
(4.177)

$$= -\lambda J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega (\ln J_{eff}) + G \left(J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega - J^2 \right)$$
 (4.178)

$$\frac{df}{dJ} = \frac{\lambda_1^2 \lambda_2^2 \sin^2 \omega}{J_{res}^{1/3}} \frac{d(J_{eff} P(J_{eff}))}{dJ_{eff}} - 2GJ = -\frac{\lambda J_{res}^{2/3} \lambda_1^2 \lambda_2^2 \sin^2 \omega}{J} - 2GJ$$
(4.179)

Given the solved J, the final Kirchhoff stress results are

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (4.180)

$$\tau_{22} = J_{res}^{1/3} G \left(\lambda_2^2 \sin^2 \omega - \frac{J^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (4.181)

$$\tau_{12} = J_{res}^{1/3} G \lambda_2^2 \sin \omega \cos \omega \tag{4.182}$$

and $\lambda_3 = J/(\lambda_1 \lambda_2 \sin \omega)$. Normally dynamic code cannot model an incompressible material, but a 3D incompressible membrane material can be modeled by setting $J = J_{res}$ and $J_{eff} = 1$ or:

$$\tau_{11} = J_{res}^{1/3} G \left(\lambda_1^2 + \lambda_2^2 \cos^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (4.183)

$$\tau_{22} = J_{res}^{1/3} G \left(\lambda_2^2 \sin^2 \omega - \frac{J_{res}^2}{\lambda_1^2 \lambda_2^2 \sin^2 \omega} \right)$$
 (4.184)

$$\tau_{12} = J_{res}^{1/3} G \lambda_2^2 \sin \omega \cos \omega \tag{4.185}$$

and $\lambda_3 = J_{res}/(\lambda_1\lambda_2\sin\omega)$. Note that during free thermal expansion, $J_{res} = \lambda_1^3$, $\lambda_2 = \lambda_1$, $\cos\omega = 0$, and $\sin\omega = 1$ such that all stresses are zero.

4.9 Mie-Grüniesen Equation of State

The Mie-Grüniesen Equation of State defines the pressure only and the Cauchy pressure is

$$P = \frac{\rho_0 C_0^2 \eta \left(1 - \frac{1}{2} \gamma_0 \eta\right)}{\left(1 - S_1 \eta - S_2 \eta^2 - S_3 \eta^3\right)^2} + \rho_0 \gamma_0 U \tag{4.186}$$

where η is fraction compression and given by

$$\eta = 1 - \frac{\rho_0}{\rho} = 1 - \frac{V}{V_0} = 1 - J \tag{4.187}$$

and γ_0 , C_0 , and S_i are material properties and U is total internal energy. The above equation applies only in compression ($\eta > 0$). In tension, the pressure uses on of the Mooney-Rivlin pressure laws:

$$P = -\rho_0 C_0^2 (J_{eff} - 1) \tag{4.188}$$

The Kirchhoff pressure needed by MPM is

$$\frac{\tau}{\rho_0} = \frac{JP}{\rho_0} \tag{4.189}$$

This material model also causes a temperature change of

$$dT = -T\gamma_0 \frac{\rho_0}{\rho} \frac{V(t + \Delta t) - V(t)}{V} + \frac{dq}{C_V}$$
(4.190)

where dq is dissipated energy that is converted to heat. The first term simplifies to an isentropic temperature change of

$$dT_{dq=0} = -JT\gamma_0 \frac{V(t + \Delta t) - V(t)}{V}$$
(4.191)

The volume change relative to current volume can be found from

$$\frac{V(t + \Delta t) - V(t)}{V(t + \Delta t)} = 1 - \frac{1}{|dF|}$$
(4.192)

The temperature rise here, which is

$$dT_{dq=0} = -JT\gamma_0 \frac{\Delta V}{V} \qquad vs. \qquad dT_{dq=0} = JT \frac{K}{K_0} \gamma_0 \frac{\Delta V}{V}$$
 (4.193)

from above. The result here differs by a factor (K/K_0) . In tension, this material use the full law with $(K/K_0) = J_{eff}$.

Noticing that

$$\frac{dT_{dq=0}}{T} = \gamma_0 d\eta \tag{4.194}$$

The temperature due to isoentropic heating alone can be integrated to

$$T = T_0 \exp(\gamma_0 \eta) \tag{4.195}$$

Thus the total temperature rise (assuming C_V is constant) is

$$dT = T_0(\exp(\gamma_0 \eta) - 1) + \frac{\Phi}{C_V}$$
 (4.196)

where Φ is the cumulative dissipated energy due to plasticity.

Rather then calculate temperature changes, which are needed for internal energy, NairnMPM tracks total work, w, and heat, q, to find internal energy as U = w + q. The details are given above in the section on "Thermodynamics of Deformation."

In compression, J is physically limited to be between 0 and 1, which means η is also between 0 and 1. But for most materials that have been fit to this equation of state, the denominator in pressure

will be come zero before *eta* reaches 1. For example, Tungsten has $S_1 = 1.24$ and $S_2 = S_3 = 0$. The denominator becomes zero when

$$\eta = 1/1.24 = 0.806 \tag{4.197}$$

If the time step is too large in dynamic code, the compression could potentially pass this value. If that happens for any particle, the results will likely be poor; NairnMPM prints a warning labeling states beyond the physical limit as "excessive compression." It is good practice to use an adjustable time step when using this material so the time step can get smaller if the compression gets high.

4.9.1 Residual Stresses

This equation of state has no thermal expansion coefficient, but thermal expansion occurs naturally with proper tracking of heat flow and temperature. The volumetric thermal expansion coefficient from input properties is:

$$3\alpha = \frac{\rho_0 \gamma_0 C_V}{K_0} \qquad \text{or} \qquad \gamma_0 = \frac{3K_0 \alpha}{\rho_0 C_V} \tag{4.198}$$

which is same as defined above in Eq. (3.7).

Under free thermal expansion, $U = C_V \Delta T$. In small strain compression

$$P = -K_0 \frac{\Delta V}{V_0} + 3K_0 \alpha \Delta T \tag{4.199}$$

which leads to:

$$\frac{\Delta V}{V_0} = 3\alpha \Delta T \tag{4.200}$$

4.10 Isotropic Hyperelastic-Plastic Material

The HEIsotropic material is an anisotropic material with plasticity. The elastic part of this material uses the Mooney-Rivlin material but restricts it to $G_2 = 0$ (i.e., a neo-Hookean material). For 3D (with plane strain and axisymmetry as easy special cases, but plane stress not handled), the Kirchhoff stress update, including residual stresses is is

$$P = JP(J_{eff}) (4.201)$$

$$s_{xx}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{xx}^{trial} - B_{yy}^{trial} - B_{zz}^{trial} \right)$$
 (4.202)

$$s_{yy}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{yy}^{trial} - B_{xx}^{trial} - B_{zz}^{trial} \right)$$
 (4.203)

$$s_{zz}^{trial} = \frac{J_{res}G_1}{3J^{2/3}} \left(2B_{zz}^{trial} - B_{xx}^{trial} - B_{yy}^{trial} \right)$$
 (4.204)

$$s_{ij}^{trial} = \frac{J_{res}G_1}{I^{2/3}}B_{ij}^{trial} \quad \text{for } i \neq j$$
 (4.205)

where $P(J_{eff})$ is any hyperelaastic pressure model, J is relative volume change, J_{res} is the volume change related to residual stresses, and $J_{eff} = J/J_{res}$. Here the deviatoric Kirchoff stresses are trial stresses based on trial, elastic, left Cauchy-Green strain in \mathbf{B}^{trial} . This material tracks the elastic \mathbf{B} . At the start of the update, \mathbf{B}^{trial} is found from:

$$\mathbf{B}_{n+1}^{trial} = \mathbf{dFB}_n \mathbf{dF}^T \tag{4.206}$$

where **dF** is the incremental deformation gradient for this time step and \mathbf{B}_n is the elastic **B** from previous step. Notice that the deviatoric Kirchoff stresses can be rewritten more concisely as

$$\mathbf{s} = J_{res}G_1 \operatorname{dev} \overline{\mathbf{B}} \tag{4.207}$$

where $\overline{\mathbf{B}} = \mathbf{B}/J^{2/3}$.

The yielding criterion is handled by methods nearly identical to J_2 plasticity for isotropic materials (and can use any available hardening law). The first step is to find

$$f_{trial} = \|\mathbf{s}\| - \sqrt{\frac{2}{3}}K(\alpha) \tag{4.208}$$

if \mathbf{f}_{trial} is less than zero, the trial stresses and \mathbf{B}_{n+1}^{trial} are copied to the particle and the update is done. If yielding is occurring, the task is to solve for λ such that f=0 and thereby determine the amount of yielding. The key equations for final results are:

$$\mathbf{B} = \mathbf{B}^{trial} - \frac{2}{3}\lambda \overline{I_1} \mathbf{n} \tag{4.209}$$

$$\mathbf{s} = \mathbf{s}^{trial} - 2\lambda \left(\frac{J_{res}G\overline{I_1}}{3} \right) \mathbf{n} \tag{4.210}$$

$$\|\mathbf{s}\| = \|\mathbf{s}^{trial}\| - 2\lambda \left(\frac{J_{res}G\overline{I_1}}{3}\right) \tag{4.211}$$

where \mathbf{n} is normal defined from deviatoric stress tensor and

$$\overline{I_1} = \frac{B_{xx} + B_{yy} + B_{zz}}{J^{2/3}} \tag{4.212}$$

Notice that the updates for the deviatoric stress and its magnitude are identical to low-strain J_2 plasticity theory provided we replace shear modulus G in that theory with $\overline{\mu}$ defined by

$$\overline{\mu} = \frac{J_{res}G\overline{I_1}}{3} \tag{4.213}$$

After this substitution, any hardening law available in the code can solve for plasticity in this hyperelastic material as well (this mapping relies on constitutive law in Eq. (4.207)) and therefore is specific to this material model). This modification works for plane strain, axisymmetric, and 3D, but not for plane stress, because J_2 plane stress analysis makes use of low-strain constitutive laws. For this reason, the HEIsotropic material cannot do plane stress calculations. Once the hardening law finds λ , the above equations are used to update $\bf s$ and $\bf B$ on the particle.

4.11 Ideal Gas

The ideal gas material implements ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The ideal gas law is

$$PV = nRT (4.214)$$

4.11. IDEAL GAS 57

The ideal gas properties are defined by picking any reference pressure, P_0 , reference temperature, T_0 , and reference density, ρ_0 . If M is the molecular weight of the gas molecules, the reference density can be found from:

$$\rho_0 = \frac{P_0}{T_0} \frac{M}{R} \tag{4.215}$$

We can now eliminate n and R to derive

$$P = P_0 \frac{V_0}{V} \frac{T}{T_0} = P_0 \frac{T}{T_0} \frac{1}{J}$$
 (4.216)

where $J = \det \mathbf{F} = V/V_0$. The Cauchy stress due to this pressure is $-P\mathbf{I}$, which implies hyperelastic energy function determined from:

$$\boldsymbol{\sigma} = -P_0 \frac{T}{T_0} \frac{1}{J} \mathbf{I} = \frac{dU(J)}{dJ} \mathbf{I} \qquad \text{or} \qquad U(J) = -P_i \ln J \tag{4.217}$$

where $P_i = P_0 T / T_0$ is the initial pressure (when J = 1). This energy is equal to the energy per unit initial volume for isothermal compression or expansion of an ideal gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\frac{P_0 T}{T_0} \int_{V_0}^{V} \frac{1}{V} \, dV = -P_i \ln \frac{V}{V_0} = -P_i \ln J$$
 (4.218)

For MPM calculations, the code needs a specific Kirchoff stress normalized to ρ_0 or

$$\tau^{(s)} = -\frac{PJ}{\rho_0} \mathbf{I} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \mathbf{I}$$
 (4.219)

In coding, an incremental approach is preferred. If $\tau_n^{(s)}$ is any diagonal element of the specific Kirchoff stress tensor for time step n, then

$$\tau_{n+1}^{(s)} = -\frac{P_0}{\rho_0} \frac{T_{n+1}}{T_0} = -\frac{P_0}{\rho_0} \frac{T_n}{T_0} \frac{T_{n+1}}{T_n} = \tau_n^{(s)} \frac{T_{n+1}}{T_n}$$
(4.220)

Note that the Kirchoff stress remains constant for isothermal expansion and compression.

The energy increment associated with this stress change is dU = -P dV work. The energy per unit mass using midpoint rule between initial and final pressure is therefore

$$\frac{dU}{\rho_0 V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1} - V_n}{V_0} = -\frac{1}{2} \frac{P_n + P_{n+1}}{\rho_0} \frac{V_{n+1}}{V_0} \left(1 - \frac{V_n}{V_{n+1}} \right) \tag{4.221}$$

Let deformation gradient for step n + 1 be

$$\mathbf{F}_{n+1} = \mathbf{f} \cdot \mathbf{F}_n$$
 where $\mathbf{f} = \exp(\Delta t \nabla v)$ and $J_{n+1} = \det \mathbf{f} J_n$ (4.222)

which leads to

$$\frac{dU}{\rho_0 V_0} = -\frac{J_{n+1}}{2} \frac{P_n + P_{n+1}}{\rho_0} \left(1 - \frac{1}{\det f} \right) = -\frac{1}{2} \left(\frac{P_n}{\rho_n} \det f + \frac{P_{n+1}}{\rho_{n+1}} \right) \left(1 - \frac{1}{\det f} \right) \tag{4.223}$$

But, P/ρ is $-\tau^{(s)}$ leading to

$$\frac{dU}{\rho_0 V_0} = \frac{1}{2} \left(\tau_n^{(s)} \det f + \tau_{n+1}^{(s)} \right) \left(1 - \frac{1}{\det f} \right) \tag{4.224}$$

In NairnMPM, the cumulative work, w, is tracked in the particle's strain energy and cumulative heat, q, in the heat energy (heat energy will be zero for adiabatic or -w for isothermal). The internal energy is U = w + q. The incremental work is $dw = dU/(\rho_0 V_0)$ term above. This material tracks the change in entropy using

$$dS = \begin{cases} d_i S + \frac{C_V dT}{T} - \frac{C_V dT_{ad}}{T + dT_{ad}} & \text{locally adiabatic} \\ d_i S + \frac{C_V dT - d\Phi}{T} & \text{locally isothermal} \end{cases}$$
(4.225)

where $dT_{ad} = dU/C_V$ is the temperature rise that would occur if the process was adiabatic and the irreversible entropy, d_iS , is assumed to be zero. The reason that $dS \neq 0$ for adiabatic case is because there might be temperature changes due to external conditions or conduction. The Helmholtz free energy can be found post analysis using A = U - TS = w + q - TS.

When gas particles are present, they have to be initialized to the pressure (or stress) of

$$\tau_i^{(s)} = -\frac{P_i}{\rho_0} = -\frac{P_0}{\rho_0} \frac{T}{T_0} \tag{4.226}$$

where T is the simulation reference temperature (need not be the gas reference temperature, which can be any desired reference condition). All simulations with gas particles must therefore specify a reference temperature in degrees Kelvin.

This material always needs heat capacity and needs thermal conductivity when doing conduction. Heat capacity is calculated using ideal gas law theory $(C_V = (3/2)nR/(\rho_0 V_0))$ for monotonic gas and $C_V = (5/2)nR/(\rho_0 V_0)$ for diatomic gas in J/(kg-K)). To find heat capacity from input parameters, substitute $nR = P_0 V_0 / T_0$ at reference conditions to get

$$C_V = \frac{3}{2} \frac{P_0}{\rho_0 T_0} \tag{4.227}$$

for monatomic gas (or replace 3/2 with 5/2 for diatomic gas). For conduction, the current code assumes conductivity is a temperature-independent property (as entered), although conductivity of a gas does vary with temperature. If simulations with large temperature changes of the gas are important, this material will need to be improved to allow temperature-dependent thermal conductivity.

For wave speed calculations, the bulk modulus for adiabatic conditions is

$$B = \sqrt{\frac{\gamma \rho RT}{M}} \tag{4.228}$$

In terms of defined material properties, the wave speed reduces to

$$C = \sqrt{\frac{B}{\rho}} = \sqrt{\frac{5\rho_0 P_0 T}{3T_0}} \tag{4.229}$$

where *T* is particle temperature.

4.11.1 Verification Examples

A simple gas problem is to confine all sides by rigid particles and move one wall for compression or expansion. If the movable wall is in the x direction, the volume will be $V = V_0(1 + \varepsilon_{xx})$. For isothermal

4.11. IDEAL GAS 59

compression and expansion:

$$P = \frac{P_i}{1 + \varepsilon_{xx}} \tag{4.230}$$

$$U = 0 (4.231)$$

$$w = -P_i V_0 \ln(1 + \varepsilon_{xx}) \tag{4.232}$$

$$q = -w \tag{4.233}$$

$$S = nR \ln(1 + \varepsilon_{xx}) = \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx})$$
 (4.234)

For adiabatic compression and expansion

$$P = \frac{P_i}{(1 + \varepsilon_{xx})^{\gamma}} \tag{4.235}$$

$$T = \frac{T_i}{(1 + \varepsilon_{xx})^{\gamma - 1}} \tag{4.236}$$

$$U = C_V(T - T_i) = \frac{3P_0V_0}{2T_0}T_i\left(\frac{1}{(1 + \varepsilon_{rr})^{\gamma - 1}} - 1\right)$$
(4.237)

$$w = U (4.238)$$

$$q = 0 \tag{4.239}$$

$$S = -(\gamma - 1)C_V \ln(1 + \varepsilon_{xx}) + \frac{P_0 V_0}{T_0} \ln(1 + \varepsilon_{xx}) = 0$$
 (4.240)

where $\gamma = C_P/C_V = 5/3$. An undocumented custom task in NairnMPM can subject an ideal gas to a Carnot cycle and recover an efficiency close to the theoretical maximum of:

$$\eta = 1 - \frac{T_2}{T_1} \tag{4.241}$$

where T_1 is the hot reservoir and T_2 is the cold one.

4.11.2 Isothermal vs. Adiabatic vs. General Constitutive Law

Equation (4.216) can be rewritten as an increment in pressure from initial pressure P_0 at temperature T_0 :

$$P - P_0 = \kappa_0 \left[\left(\frac{J_{res}}{J} \right) - 1 \right] \tag{4.242}$$

where κ_0 is the bulk modulus at P_0 :

$$\frac{1}{\kappa_0} = -\frac{1}{V_0} \left(\frac{\partial V_0}{\partial P} \right)_T = \frac{1}{P_0} \tag{4.243}$$

and

$$J = \frac{V(P,T)}{V(P_0,T_0)} = \frac{V}{V_0}$$
 and $J_{res} = \frac{V(P_0,T)}{V(P_0,T_0)} = \frac{T}{T_0}$ (4.244)

Here J_{res} is the volume ratio for free thermal expansion at reference pressure P_0 . For an isothermal process $J_{res} = 1$. For a (reversible) adiabatic compression or expansion, the temperature change is:

$$T = \frac{T_0}{J^{\gamma - 1}}$$
 and $J_{res} = \frac{1}{J^{\gamma - 1}}$ (4.245)

Two special cases of the general law, therefore, are:

$$P - P_0 = \kappa_0 \left[\left(\frac{1}{J} \right) - 1 \right]$$
 isothermal (4.246)

$$P - P_0 = \kappa_0 \left[\left(\frac{1}{J} \right)^{\gamma} - 1 \right]$$
 adiabatic (4.247)

But if code implements either of these laws, it will be restricted to either isothermal or adiabatic conditions only. The preferred approach is to implement the general law because it includes both these limits as special cases and can be used for nonisothermal, nonadiabatic simulations as well. When using a general law, however, each material point must correctly change its temperature according to how much energy should be converted into heat for a given increment in deformation. For an ideal case undergoing in increment in volume of dV, the temperature change is

$$dT = -\frac{PdV}{C_V} = -\frac{nRT}{C_V}\frac{dV}{V} = -\frac{nRT}{C_V}\frac{\rho}{\rho_0}\frac{dV}{V_0}$$
(4.248)

In other words, all the work is converted into heat. Also notice that this result can be written

$$\frac{dT}{T} = \frac{nR}{C_V} \frac{1}{J} d\eta = \frac{\gamma_0}{J} d\eta = -\gamma_0 \frac{dJ}{J} \quad \text{where} \quad \eta = 1 - \frac{\rho_0}{\rho} = 1 - J \quad (4.249)$$

For a monatoic ideal gas $\gamma_0=2/3$; for a diatomic gas $\gamma_0=2/5$; for both $\gamma_0=\gamma-1$. This result is identical to the Mie-Grüniesen theory in Eq. (4.193) by using K=P, $3\alpha=1/T$ and $C_V=(3/2)nR/(\rho V)$ (or 5/2 for diatomic gas).

4.11.3 Van der Waals Gas Law

The van der Wasls gas material implements a non-ideal gas law as a large deformation, hyperelastic material. It seems to work well for gas confined within a solid or constrained by rigid particles. It does not handle gas dynamics such as irreversible free expansion, but does handle reversible processes including coupled conversion of energy into heat (*i.e.*, cooling on expansion and heating on compression).

The van der Wasls gas law is

$$\left(P - \frac{an^2}{V^2}\right) \left(\frac{V}{n} - b\right) = RT$$
(4.250)

The nonideal gas properties are defined by picking any reference pressure, P_0 , reference temperature, T_0 , and reference density, ρ_0 , along with a and b. The law can then be transformed to pressure of

$$P = (P_0 - a') \left(\frac{1 - b'}{J - b'}\right) \frac{T}{T_0} + \frac{a'}{J^2}$$
 (4.251)

where $J = V/V_0$, V_0 is initial particle volume, $a' = an^2/V_0^2$, and $b' = nbV_0$. Writing P = -dU(J)/dJ implies a hyperelastic energy function of

$$U(J) = (P_i - a') (1 - b') \ln(J - b') - \frac{a'}{J}$$
(4.252)

where P_i is the initial particle pressure (when J = 1) of

$$P_i = (P_0 - a') \frac{T}{T_0} + a' \tag{4.253}$$

This energy is equal to the energy per unit initial volume for isothermal compression or expansion of a van der Waals gas:

$$U(J) = -\frac{1}{V_0} \int_{V_0}^{V} P \, dV = -\int_{1}^{J} \left(\left(P_i - a' \right) \left(\frac{1 - b'}{J - b'} \right) + \frac{a'}{J^2} \right) dJ \tag{4.254}$$

In NairnMPM, the cumulative work is tracked in the particle's plastic energy (which is = PdV work and can tracked the same as for an ideal gas). The particle's strain energy tracks total internal energy in the gas per unit mass, which for a van der Waals gas is

$$U = C_V(T - T_0) - \frac{a'}{\rho_0 J}$$
 (4.255)

In hyperelastic code, an incremental form is

$$U = C_V dT + \frac{a'}{\rho_0 J^2} dJ (4.256)$$

For a van der Waals gas, the heat capacity is same as for ideal gas, $C_V = (3/2)nR/(\rho_0 V_0)$ for monatomic (or 5/2 for diatomic gas), the the n is found differently from reference conditions. It can be found as root to

$$\frac{ab}{V_0^2}n^3 - \frac{a}{V_0}n^2 - (P_0b + RT_0)n + P_0V_0 = 0$$
(4.257)

This *n* is needed to find a', b' and C_V .

4.12 Disney Snow Model

According to a paper on Disney snow animation, MPM was used to model snow in the movie *Frozen*. The constitutive model for snow was based on a hyperelastic-plastic model. The strain energy function is

$$W = \mu(J_p)||\mathbf{F} - \mathbf{R}||^2 + \frac{\lambda(J_p)}{2}(J - 1)^2$$
(4.258)

where $\mu(J_P)$ and $\lambda(J_P)$ are called Lamé parameters and J_P is the plastic dilation, The Lamé parameters undergo hardening according to

$$\mu(J_P) = \mu_0 e^{\xi(1 - J_P)}$$
 and $\lambda(J_P) = \lambda_0 e^{\xi(1 - J_P)}$ (4.259)

where ξ is a hardening parameter and μ_0 and λ_0 are the initial Lamé coefficients. The **F**, R, and *J* in strain energy are for the elastic part of the loading. The first term can be written as

$$||\mathbf{F} - \mathbf{R}||^{2} = ||\Lambda - \mathbf{I}||^{2} = (\lambda_{1} - 1)^{2} + (\lambda_{2} - 1)^{2} + (\lambda_{3} - 1)^{2}$$

$$= \lambda_{1}^{2} + \lambda_{2}^{2} + \lambda_{3}^{2} - 2(\lambda_{1} + \lambda_{2} + \lambda_{3}) + 3 = I_{1} - 3 - 2(\lambda_{1} + \lambda_{2} + \lambda_{3} - 3)$$
(4.261)

where Λ is diagonal matrix with eigenvalues of the stretch (λ_i) on the diagonal, and I_1 is the first invariant of the left Cauchy-Green tensor. Under modest elongation, second term approximates to

$$\lambda_1 + \lambda_2 + \lambda_3 - 3 \approx J - 1 \approx \ln J \tag{4.262}$$

Using the approximate forms, the elastic part of this material is identical to a neo-Hookean material except the first term's coefficient should be $\mu(J_P)/2$. The three possibilities are a misprint in the paper, a mistake in their constitutive law, or they did not intend $\mu(J_P)$ to mean shear modulus.

For this to work, need code for singular decomposition of **F**.

Chapter 5

Viscoelastic Materials

5.1 Introduction

The stress-strain relation for an isotropic viscoelastic material in which bulk modulus is independent of time, but shear modulus depends on time and the analysis is 3D (or plane strain by setting $\varepsilon_{zz}=0$ and ignoring τ_{xz} and τ_{yz} or axisymmetric by ignoring τ_{xz} and τ_{yz}) can be written as

$$P = -K(\varepsilon_{xx} + \varepsilon_{yy} + \varepsilon_{zz} - 3\varepsilon^{(res)})$$
 (5.1)

$$s_{ij} = \int_0^t 2G(t-\tau) \frac{de_{xy}}{d\tau} d\tau \tag{5.2}$$

where P is pressure, $s_{ij} = \sigma_{ij} + \delta_{ij}P$ and $e_{ij} = \varepsilon_{ij} - (\delta_{ij}/3) \text{Tr}(\varepsilon)$ are elements of the deviatoric stress and strain tensors, and $\varepsilon^{(res)} = \alpha \Delta T + \beta \Delta c$. The pressure is straightforward, but the deviatoric stress terms require more work. The only form of G(t) the permits efficient evaluation of all strain history effects is when it is a sum of exponentials or

$$G(t) = G_0 + \sum_{k=1}^{n} G_k e^{-t/\tau_k}$$
(5.3)

Each element of deviatoric stress (with e(0) = 0) becomes:

$$s = 2G_0 e(t) + \sum_{k=1}^{n} 2G_k \int_0^t e^{-(t-\tau)/\tau_k} \frac{de(\tau)}{d\tau} d\tau$$
 (5.4)

where subscripts i j on s and e have been dropped for simplicity,

5.2 Small Strain, Internal Variables Analysis

Following Simo and Hughes, we introduce the internal variables, α_k (with implied subscript ij for each component of stress), that satisfy

$$\frac{d\alpha_k}{dt} + \frac{\alpha_k}{\tau_k} = \frac{e(t)}{\tau_k} \tag{5.5}$$

This first order differential equations (with $\alpha_k(0) = 0$) can be solved and integrated by parts to get

$$\alpha_{k} = \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{e(\tau)}{\tau_{k}} d\tau = e(t) - \int_{0}^{t} e^{-(t-\tau)/\tau_{k}} \frac{de(\tau)}{d\tau} d\tau$$
 (5.6)

Substitution into stress give

$$\frac{s(t)}{2} = G_0 e(t) + \sum_{k=1}^{n} G_k (e(t) - \alpha_k) = G_e e(t) - \sum_{k=1}^{n} G_k \alpha_k$$
 (5.7)

where

$$G_e = \sum_{k=0}^{n} G_k \tag{5.8}$$

is the modulus at t=0. In numerical implementation, the internal variable increment, $d\alpha_k = \alpha_k(t+\Delta t) - \alpha_k(t)$, can be found from

$$d\alpha_k = e^{-\Delta t/\tau_k} \int_0^{t+\Delta t} e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau - \int_0^t e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau$$
 (5.9)

$$= \left(e^{-\Delta t/\tau_k} - 1\right) \alpha_k(t) + e^{-\Delta t/\tau_k} \int_t^{t+\Delta t} e^{-(t-\tau)/\tau_k} \frac{e(\tau)}{\tau_k} d\tau \tag{5.10}$$

Evaluating the second term by midpoint rule gives

$$d\alpha_k = \left(e^{-\Delta t/\tau_k} - 1\right)\alpha_k(t) + \frac{\Delta t}{2\tau_k}\left(e(t + \Delta t) + e^{-\Delta t/\tau_k}e(t)\right)$$
 (5.11)

$$= \left(e^{-\Delta t/\tau_k} - 1\right) \alpha_k(t) + \frac{\Delta t}{2\tau_k} \left(\left(e^{-\Delta t/\tau_k} + 1\right) e(t) + de\right)$$
 (5.12)

where de is the increment in deviatoric strain in the time step. Note that α_k can be updated on each time step without needing a sum of strain history, thereby avoiding the need to store strain history. This ability to track strain history without storing strain history is only possible because of properties of exponentials used in G(t).

5.3 Final, Small Strain, Incremental Results

The pressure change is

$$dP = -K(d\varepsilon_{xx} + d\varepsilon_{yy} + d\varepsilon_{zz} - 3d\varepsilon^{(res)})$$
(5.13)

The deviatoric stress updates using

$$ds_{ij} = 2\left(G_e de_{ij} - \sum_{k=1}^{n} G_k d\alpha_{ij,k}\right)$$
 (5.14)

where $d\alpha_{ij,k}$ is the ij^{th} element of $d\alpha_k$. The dissipated energy (by midpoint rule) is

$$\Phi = \sum_{ij} \sum_{k=1}^{n} 2G_k \left(e_{ij} + \frac{de_{ij}}{2} - \alpha_{ij,k} + \frac{d\alpha_{ij,k}}{2} \right) d\alpha_{ij,k}$$
 (5.15)

where $\alpha_{ij,k}$ is $\alpha_k(t+\Delta t)$ for the ij^{th} element of deviatoric strain at the end of the time step.

Chapter 6

Manufactured Solutions

6.1 Introduction

Brannon (and several coworkers) have proposed manufacture solutions as a method to valid material modeling. In brief, a deformation gradient is imposed on a material and substituted into constitutive law and equilibrium equations. The exact stresses in the material are determined along with boundary conditions and body forces required to create the solution. This chapter has some particular manufacture solutions used in testing NairnMPM and easily adapted to testing new material models.

6.2 Constrained Uniaxial Tension

If an object is deformed on one direction at a constant rate while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 + (\Lambda - 1)\frac{t}{t_f} & 0 & 0\\ 0 & 1 & 0\\ 0 & 0 & 1 \end{pmatrix}$$
 (6.1)

Here Λ is the final extension, which is reached at $t = t_f$. The initial particle velocities are $\mathbf{v} = ((\Lambda - 1)X/t_f, 0, 0)$, where X is the initial particle position. This deformation can be applied in 2D plane strain or in 3D calculations. Because F is independent of position, the stress in the object will be independent of position and determined by the material model being used.

When using velocity conditions implemented using a function of current position and time, the condition can use:

$$u = x - X = (\Lambda - 1)X \frac{t}{t_f}$$
 or $X = \frac{x}{1 + (\Lambda - 1)\frac{t}{t_f}}$ (6.2)

The applied velocity should be

$$\nu = \left(\frac{(\Lambda - 1)\frac{x}{t_f}}{1 + (\Lambda - 1)\frac{t}{t_f}}, 0, 0\right)$$
(6.3)

6.2.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material can be written as

$$\sigma = \lambda (\text{Tr}(\mathbf{F}) - 3)\mathbf{I} + G(\mathbf{F} + \mathbf{F}^T - 2\mathbf{I})$$
(6.4)

where $\lambda = vE/((1+v)(1-2v))$ is the Lamé constant for the material. For constrained uniaxial tension, the stress is

$$\sigma_{ij} = (\lambda + 2G\delta_{i1})(\Lambda - 1)\frac{t}{t_f}\delta_{ij}$$
(6.5)

although this stress is based on initial area and not the Cauchy stress. This solution can be imposed by applying traction or velocity boundary conditions. On the $\pm x$ surfaces, the traction condition should be:

$$T_{x} = \pm (\lambda + 2G)(\Lambda - 1)\frac{t}{t_{f}}$$
(6.6)

On the $\pm y$ and $\pm z$ surface, the traction condition should be:

$$T_y = \pm \lambda (\Lambda - 1) \frac{t}{t_f}$$
 or $v_y = v_z = 0$ (6.7)

6.2.2 Neo-Hookean, Mooney-Rivlin Material

For a neo-Hookean version of a Mooney-Rivlin material (with $G_2 = 0$) with default pressure term and no residual stresses, the Cauchy stress is

$$\boldsymbol{\sigma} = \frac{K}{2} \left(J - \frac{1}{J} \right) \mathbf{I} + \frac{G_1}{J^{5/3}} \operatorname{dev}(\mathbf{F}\mathbf{F}^T)$$
(6.8)

where $\text{dev}(\mathbf{F}\mathbf{F}^T)$ is the deviatoric part of the left Cauchy-Green tensor worth diagonal elements $(1/3)(2(J^2-1),1-J^2,1-J^2)$. Under constrained uniaxial deformation:

$$\sigma_{xx} = \left(\frac{K}{2\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)} + \frac{2G_1}{3\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)^{5/3}}\right) \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
(6.9)

$$\sigma_{yy} = \left(\frac{K}{2\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)} - \frac{G_1}{3\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)^{5/3}}\right) \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
 (6.10)

$$\sigma_{zz} = \sigma_{yy} \tag{6.11}$$

his solution can be imposed by applying traction and/or velocity boundary conditions. On the $\pm x$ surface, the traction condition should be $T_x = \pm \sigma_{xx}$. On the $\pm y$ and $\pm z$ surfaces, the conditions should be $T_y = \pm \sigma_{yy}$ and $T_z = \pm \sigma_{yy}$.

6.2.3 Neo-Hookean Material

For an alternate neo-Hookean material with default pressure term and no residual stresses, the Cauchy stress is

$$\sigma = \frac{\lambda}{2} \left(J - \frac{1}{J} \right) \mathbf{I} + \frac{G}{J} (\mathbf{F} \mathbf{F}^T - \mathbf{I})$$
 (6.12)

Under constrained uniaxial deformation:

$$\sigma_{xx} = \frac{\lambda + 2G}{2J}(J^2 - 1) = \frac{\lambda + 2G}{2\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)} \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
(6.13)

$$\sigma_{yy} = \frac{\lambda}{2J}(J^2 - 1) = \frac{\lambda}{2\left(1 + (\Lambda - 1)\frac{t}{t_f}\right)} \left(2 + (\Lambda - 1)\frac{t}{t_f}\right) \frac{(\Lambda - 1)t}{t_f}$$
(6.14)

$$\sigma_{zz} = \sigma_{yy} \tag{6.15}$$

This solution can be imposed by applying traction and/or velocity boundary conditions. On the $\pm x$ surface, the traction condition should be $T_x = \pm \sigma_{xx}$. On the $\pm y$ and $\pm z$ surfaces, the conditions should be $T_y = \pm \sigma_{yy}$ and $T_z = \pm \sigma_{yy}$.

6.3 Constrained Uniaxial Tension with Thermal Ramp

In addition to linear variation in elongation, we add linear variation in $\lambda_{res} = 1 + (\Lambda_{res} - 1)t/t_f$, which corresponds to a temperature of

$$\Delta T = \frac{1}{\alpha} \ln \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)$$
 (6.16)

For plane strain, the full deformation matrix is

$$\mathbf{F} = \begin{pmatrix} \left(1 + (\Lambda - 1)\frac{t}{t_f}\right) \left(1 + (\Lambda_{res} - 1)\frac{t}{t_f}\right) & 0 & 0\\ 0 & 1 + (\Lambda_{res} - 1)\frac{t}{t_f} & 0\\ 0 & 0 & 1 \end{pmatrix}$$
(6.17)

The acceleration will be

$$a = \left(\frac{2X}{t_f^2}(\Lambda - 1)(\Lambda_{res} - 1), 0, 0\right)$$
(6.18)

The initial velocities will be

$$v(t=0) = \left((\Lambda - 1) \frac{X}{t_f} + (\Lambda_{res} - 1) \frac{X}{t_f}, (\Lambda_{res} - 1) \frac{Y}{t_f}, 0 \right)$$
 (6.19)

6.3.1 Neo-Hookean Material

For an alternate neo-Hookean material with the default pressure term and including residual stresses, the Cauchy stress is

$$\boldsymbol{\sigma} = \frac{\lambda}{2} \left(\frac{J}{J_{res}} - \frac{J_{res}}{J} \right) \mathbf{I} + \frac{G}{J} \left(J_{res}^{1/3} \mathbf{F} \mathbf{F}^T - J_{res} \mathbf{I} \right)$$
(6.20)

The stresses, which are independent of position (and hence have zero divergence) are:

$$\sigma_{xx} = \left[\frac{\frac{\lambda}{2} (\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f} \right) + G(\Lambda - 1) \left(2 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)^2}{\left(1 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)} \right] \frac{t}{t_f}$$
(6.21)

$$\sigma_{yy} = \frac{\lambda}{2} \frac{(\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f}\right)}{\left(1 + (\Lambda - 1) \frac{t}{t_f}\right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f}\right)} \frac{t}{t_f}$$
(6.22)

$$\sigma_{zz} = \left[\frac{\frac{\lambda}{2} (\Lambda - \Lambda_{res}) \left(2 + (\Lambda + \Lambda_{res} - 2) \frac{t}{t_f} \right) - G(\Lambda_{res} - 1) \left(2 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)}{\left(1 + (\Lambda - 1) \frac{t}{t_f} \right) \left(1 + (\Lambda_{res} - 1) \frac{t}{t_f} \right)} \right] \frac{t}{t_f}$$
(6.23)

To be able to implement this in NairnMPM need:

1. A method to have a non-linear thermal ramp for the ΔT term

6.4 Linear Shear

If an object is sheared on one direction at a constant rate while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 & \Gamma \frac{t}{t_f} & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{pmatrix} \tag{6.24}$$

Here $\tan\Theta = \Gamma$ is the final shear angle of the deformation, which is reached at $t = t_f$. The initial particle velocities are $\mathbf{v} = (\Gamma Y/t_f, 0, 0)$. The accelerations are always zero. This deformation can be applied in 2D plane strain or in 3D calculations; it might work in plane stress as well. Because F is independent of position, the stress in the object will be independent of position and determined by the material model being used. As a result, the divergence of the stress is zero and the manufactured solution can be derived with zero body force. The remaining task is finding boundary conditions for various material models.

Traction boundary conditions are found from $\sigma \cdot \hat{n}$. On the $\pm y$ and $\pm z$ surfaces, the normal stays constant during deformation, but on the initially $\pm x$ surface, the normal rotates to be

$$\hat{\mathbf{n}} = \left(\frac{1}{\sqrt{1+\gamma^2}}, \frac{-\gamma}{\sqrt{1+\gamma^2}}, 0\right) \tag{6.25}$$

where $\gamma = \Gamma t/t_f$. But since $\gamma = \tan \theta$, where θ is the current shear angle, this normal vector is also

$$\hat{\mathbf{n}} = (\cos \theta, -\sin \theta, 0) \tag{6.26}$$

For general stress state (but with $\sigma_{xz} = \sigma_{yz} = 0$), the traction will be

$$T = (\sigma_{xx}\cos\theta - \sigma_{xy}\sin\theta, \sigma_{xy}\cos\theta - \sigma_{yy}\sin\theta, 0)$$
 (6.27)

6.4. LINEAR SHEAR 69

This traction can be divided into traction normal and tangential to the current surface:

$$T_n = \mathbf{T} \cdot \hat{\mathbf{n}} = \sigma_{xx} \cos^2 \theta - 2\sigma_{xy} \cos \theta \sin \theta + \sigma_{yy} \sin^2 \theta = \frac{\sigma_{xx} - 2\gamma \sigma_{xx} + \gamma^2 \sigma_{yy}}{1 + \gamma^2}$$
(6.28)

$$T_t = \mathbf{T} \cdot \hat{\mathbf{t}} = (\sigma_{xx} - \sigma_{yy}) \cos \theta \sin \theta + \sigma_{xy} (\cos^2 \theta - \sin^2 \theta)$$
 (6.29)

$$= \frac{\gamma(\sigma_{xx} - \sigma_{yy}) + \sigma_{xy}(1 - \gamma^2)}{1 + \gamma^2} \tag{6.30}$$

which used $\hat{t} = (\sin \theta, \cos \theta, 0)$. Note that traction boundary conditions in NairnMPM have the option of being applied normal and tangential to the current surface orientation (when using CPDI). This approach, however, is less stable because an error is surface orientation amplifies and inaccuracies in the solution. Using tractions along analysis axes works better

For velocity conditions, all surfaces should impose

$$\mathbf{v} = \left(\Gamma \frac{Y}{t_f}, 0, 0\right) \tag{6.31}$$

Because particles have zero velocity in the y direction Y will equal y for all particles and can be implemented as a function of current position.

6.4.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material for shear sliding can be written as

$$\sigma = G(\mathbf{F} + \mathbf{F}^T - 2\mathbf{I}) \tag{6.32}$$

The only non-zero stress is the shear stress:

$$\sigma_{xy} = G\gamma = G\Gamma \frac{t}{t_f} \tag{6.33}$$

6.4.2 Neo-Hookean, Mooney-Rivlin Material

For a Mooney-Rivlin material, the Cauchy stress under sliding shear is found from elements of **B** which are $B_{xx} = 1 + \gamma^2$, $B_{yy} = B_{zz} = 1$, and $B_{xy} = \gamma$. In addition J = 1, which means pressure terms are zero. The final stresses are

$$\sigma_{xx} = \frac{J_{res}\gamma^2}{3} (2G_1 + G_2) \tag{6.34}$$

$$\sigma_{yy} = -\frac{J_{res}\gamma^2}{3} \left(G_1 + 2G_2 \right) \tag{6.35}$$

$$\sigma_{zz} = \frac{J_{res}\gamma^2}{3} \left(-G_1 + G_2 \right) \tag{6.36}$$

$$\tau_{xy} = J_{res}\gamma \left(G_1 + G_2\right) \tag{6.37}$$

where J_{res} is set to one to generate a solution with no residual stresses.

6.4.3 **Neo-Hookean Material**

For an alternate Neo-Hookean material with no residual stresses, the Cauchy stress under sliding shear is found from elements of **B** which are $B_{xx} = 1 + \gamma^2$, $B_{yy} = B_{zz} = 1$, and $B_{xy} = \gamma$. In addition J = 1, which means pressure terms are zero. The final stresses are

$$\sigma_{rr} = G\gamma^2 \tag{6.38}$$

$$\sigma_{xx} = G\gamma^2$$

$$\sigma_{yy} = \sigma_{zz} = 0$$
(6.38)
$$(6.39)$$

$$\sigma_{xy} = G\gamma \tag{6.40}$$

On the $\pm y$ surfaces, the tractions are $T_x = \pm \tau_{xy}$ and $T_y = 0$. On the $\pm z$ surfaces, the traction are $T_z = 0$. The $\pm x$ surface have to account for rotations and can be done with normal and tangential tractions:

$$T_n = -\frac{G\gamma^2}{1+\gamma^2} \tag{6.41}$$

$$T_t = \frac{G\gamma}{1 + \gamma^2} \tag{6.42}$$

or with tractions along x and y. Both work, but x and y tractions are more stable

Linear Acceleration 6.5

If an object is stretched in uniaxial tension, using an acceleration that is linear in x while being constrained to no motion in the other two directions, the deformation gradient will be

$$\mathbf{F} = \begin{pmatrix} 1 + (\Lambda - 1)\frac{t^2}{t_f^2} & 0 & 0\\ 0 & 1 & 0\\ 0 & 0 & 1 \end{pmatrix}$$
 (6.43)

Here Λ is the final extension ratio, which is reached at $t=t_f$. The particle velocities are $\nu=2(\Lambda-1)$ 1) Xt/t_f^2 ; hence the initial velocities are all zero. The particle accelerations are $a = 2(\Lambda - 1)X/t_f^2$, which is linear in X. Because the deformation gradient is independent of position, the stresses will be uniform and therefore have zero divergence. To manufacture a solution, the non-zero accelerations have to be balanced by body force on the nodes (in spatial coordinates) or:

$$b = \left(\frac{2(\Lambda - 1)\frac{x}{t_f^2}}{1 + (\Lambda - 1)\frac{t^2}{t_f^2}}, 0, 0\right)$$
(6.44)

To apply velocity boundary conditions, the applied velocity (in spatial nodal coordinates) should be

$$\nu = \left(\frac{2(\Lambda - 1)\frac{xt}{t_f^2}}{1 + (\Lambda - 1)\frac{t^2}{t_f^2}}, 0, 0\right)$$
(6.45)

6.5.1 Low-Strain, Isotropic Material

In terms of **F**, the stress in a low-strain, isotropic material can be written as

$$\sigma = \lambda (\text{Tr}(\mathbf{F}) - 3)\mathbf{I} + G(\mathbf{F} + \mathbf{F}^T - 2\mathbf{I})$$
(6.46)

where $\lambda = vE/((1+v)(1-2v))$ is the Lamé constant for the material. For constrained uniaxial tension with linear extension, the stress is

$$\sigma_{ij} = (\lambda + 2G\delta_{i1})(\Lambda - 1)\frac{t^2}{t_f^2}\delta_{ij}$$
(6.47)

although this stress is based on initial area and not the Cauchy stress. This solution can be imposed by applying traction or velocity boundary conditions. On the $\pm x$ surfaces, the traction condition should be:

$$T_x = \pm (\lambda + 2G)(\Lambda - 1)\frac{t^2}{t_f^2}$$
 (6.48)

On the $\pm y$ and $\pm z$ surface, the traction condition should be:

$$T_y = \pm \lambda (\Lambda - 1) \frac{t^2}{t_f^2}$$
 or $v_y = v_z = 0$ (6.49)