



USING BOOTICE TO CREATE A USB MEMORY STICK COMPATIBLE WITH SYSTEA ANALYZERS


- A) Start the BOOTICE application and select your destination disk.
Press **Part Manage** button.

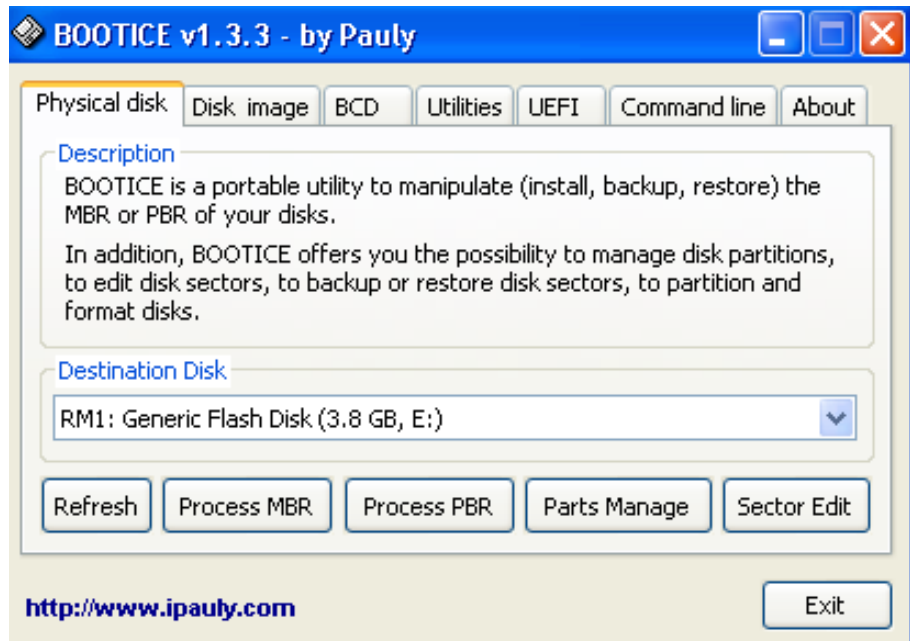

- B) Select the partition and then click to **"Re-Partitioning"** button

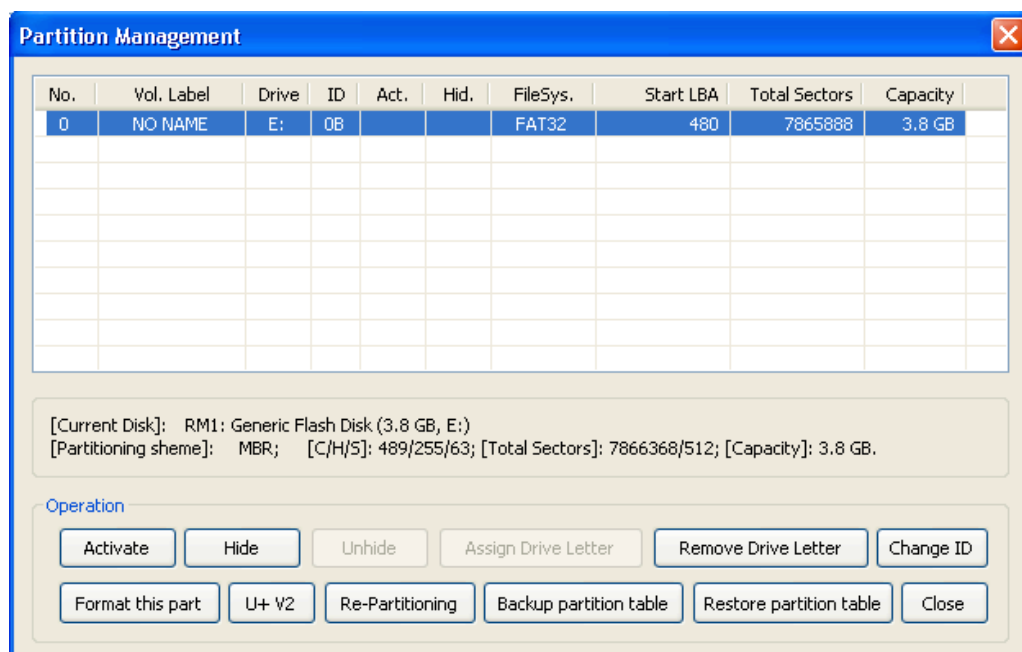


C) Select the “**USB-HDD mode (Multi-Partitions)**” and click OK.

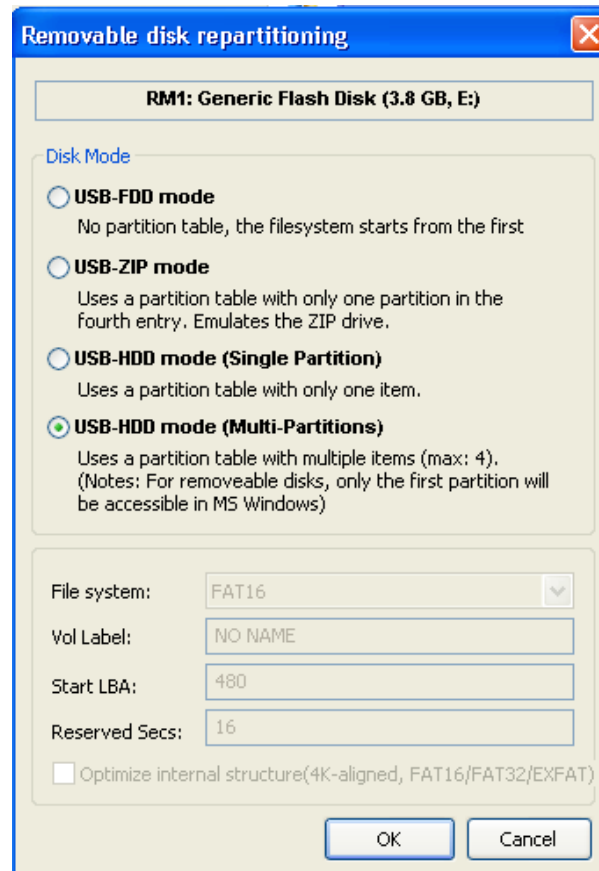


The dialog box is titled "Removable disk repartitioning" and shows the disk "RM1: Generic Flash Disk (3.8 GB, E:)". Under "Disk Mode", four options are listed: "USB-FDD mode", "USB-ZIP mode", "USB-HDD mode (Single Partition)", and "USB-HDD mode (Multi-Partitions)". The "Multi-Partitions" option is selected. Below this, the "File system" is set to "FAT16", "Vol Label" is "NO NAME", "Start LBA" is "480", and "Reserved Secs" is "16". There is a checkbox for "Optimize internal structure(4K-aligned, FAT16/FAT32/EXFAT)" which is unchecked. "OK" and "Cancel" buttons are at the bottom right.

D) Be sure that the FIRST partition has less than 1 GB size and FAT16 selected. You can leave all the other settings as it is. If you want you can choose a name for this partition. Click **OK** button.

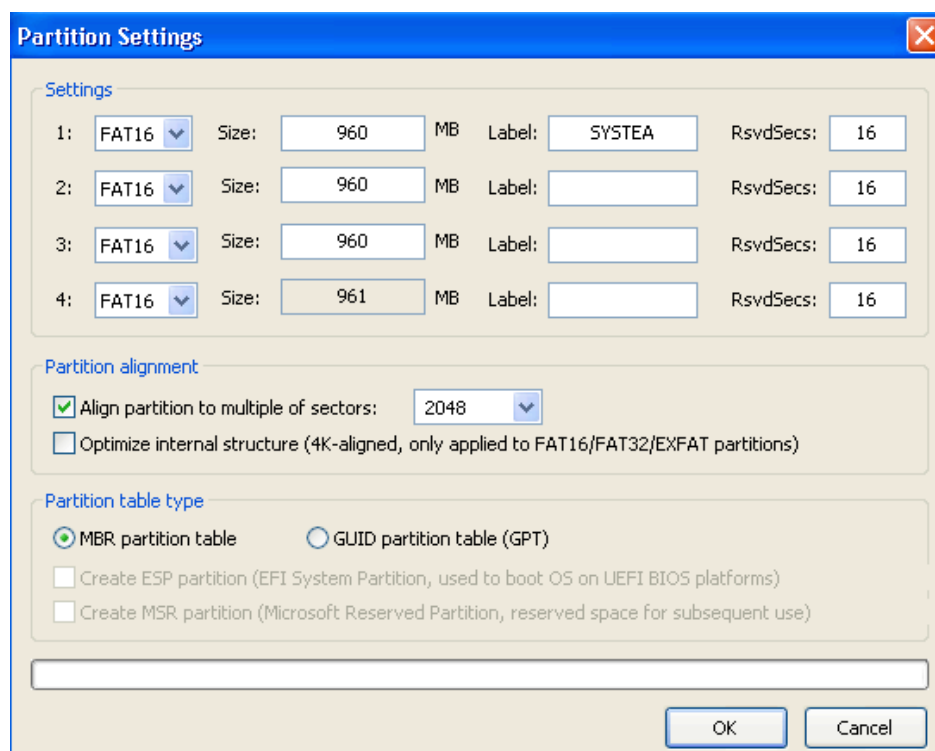


The dialog box is titled "Partition Settings". It shows four partitions, all with "FAT16" file system and "16" reserved sectors. The first partition has a size of 960 MB and label "SYSTE A". The second and third have 960 MB. The fourth has 961 MB. Under "Partition alignment", the "Align partition to multiple of sectors" checkbox is checked with a value of 2048. Under "Partition table type", the "MBR partition table" radio button is selected. There are checkboxes for "Create ESP partition" and "Create MSR partition", both of which are unchecked. "OK" and "Cancel" buttons are at the bottom right.


E) Now select again the first partition and click the **“FORMAT THIS PART”** button.

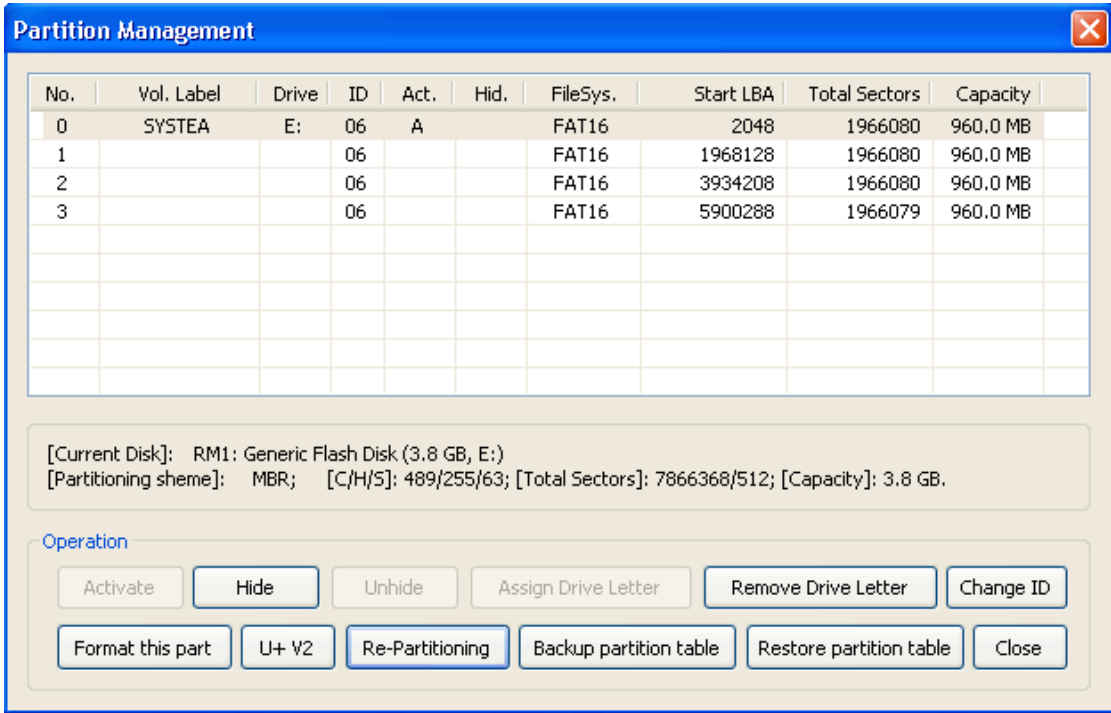


F) Choose FAT16 “File system” and click the **START** button.

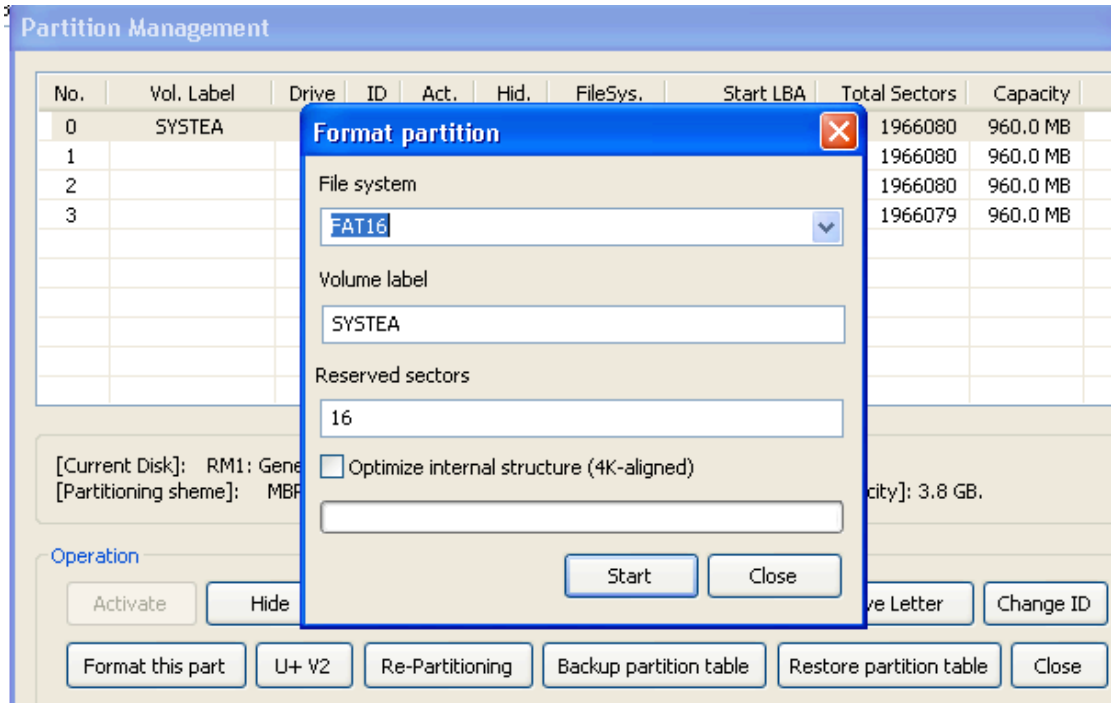

G) Now you can see the new 1 GB partition available and ready to use

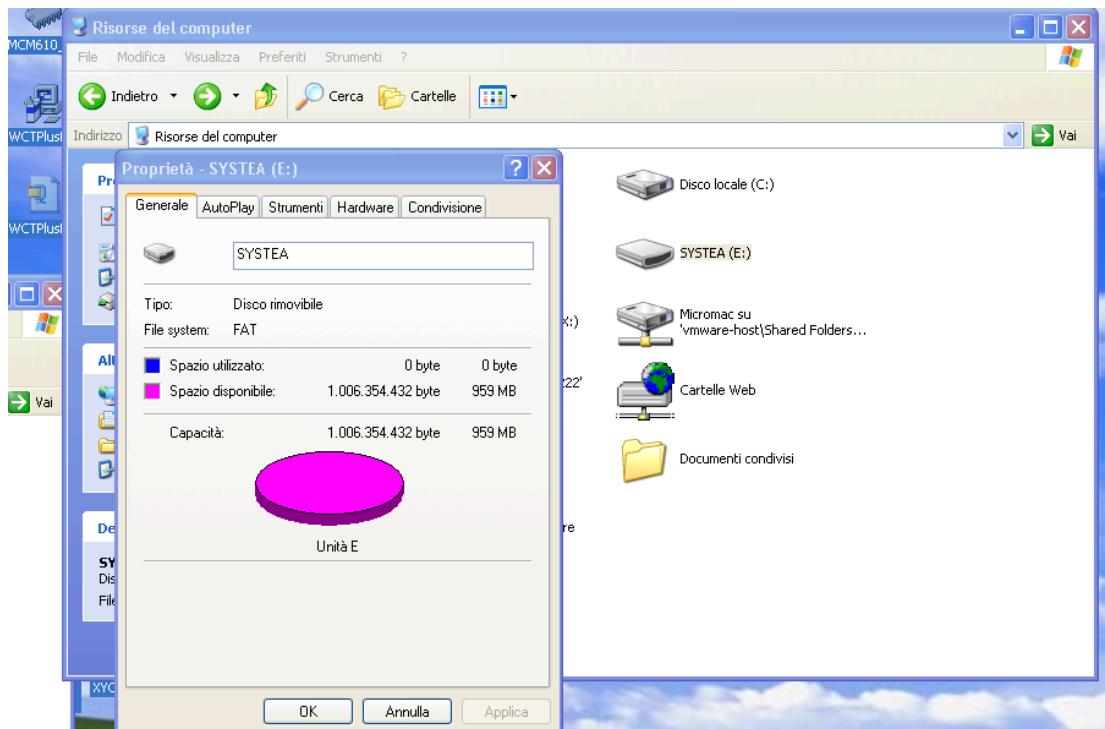

H) Create the two folders named "QWERTY" and "UPLOAD" in this partition. Now your USB memory is ready to be used on SYSTEA analyzers.

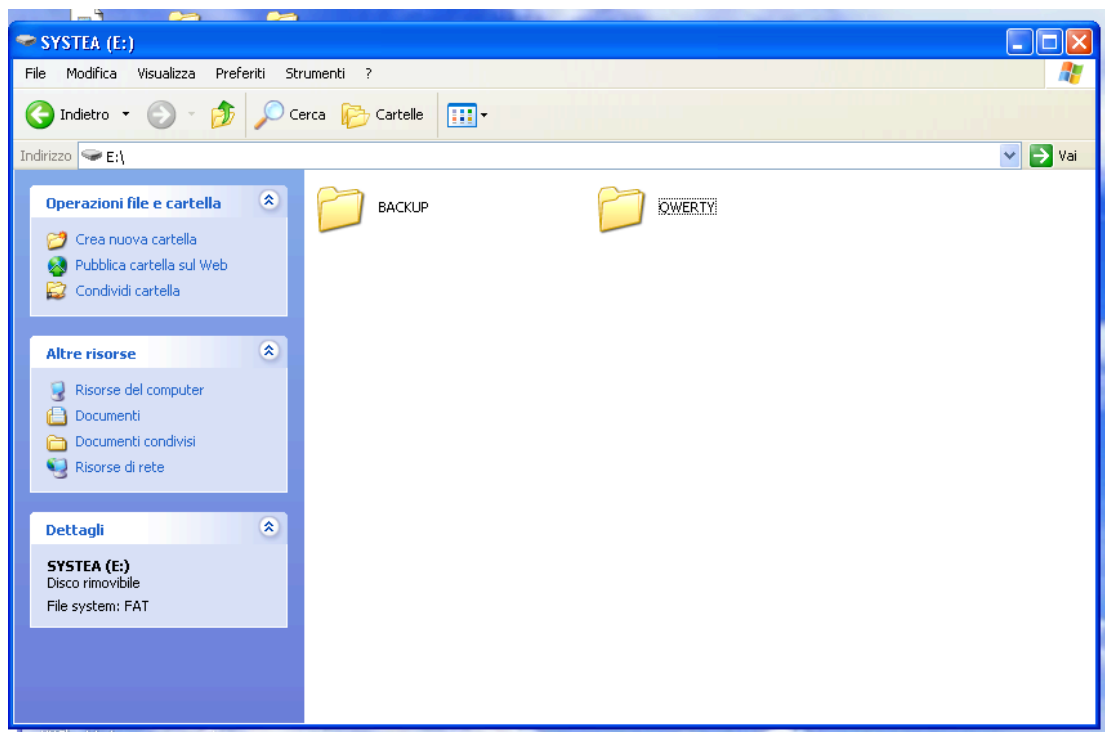

NOTE: For memory stick up to 1 GB it is not necessary to follow the entire procedure. In this case it is enough to follow only points A -> B -> E -> F