QPOS SDK Integration Guide

Document Version: <3.3>

Version	Date	Author	Description	
1.0	2013.07.12	Longhui.xiao	Chinese Version	
2.0	2013.08.10	William.tang	English Version	
2.1	2013.09.20	William.tang	Support Audio and BT mode.	
2.2	2013.09.21	Xu.Wang	Added QPOS Reader Series	
2.3	2014.03.11	Longhui Xiao	Added icc apdu	
2.4	2014.03.26	Longhui Xiao	Added set the sleep time interface	
2.5	2014.04.08	Longhui Xiao	Added update work key interface	
2.6	2015.02.11	Yanhao Lu	Perfect the documents	
2.7	2015.09.07	Longhui Xiao	Added resetPosStatus	
			interface.	
			Perfect the documents	
2.8	2016.12.27	Qianmeng	Added doSetManagemgentKey	
		Chen	and doSetBuzzerOperation	
			interface	
2.9	2017.01.04	Qianmeng	Added doUpdateIPEKOperation	
		Chen	interface and update the doc	
3.0	2017.01.11	Qianmeng	Added updateEmvAPP and	
		Chen	updateEmvCAPK interface	
3.1	2017.03.03	Qianmeng	Added scanQpos2Mode and	
		Chen	stopQpos2Mode interface	
3.2	2022.04.25	Qianmeng	Added the api	
		Chen	operateLEDByType and	
			playBuzzerByType	
3.3	2022.09.19	Shasha Lv	Modify the description for	
			onRequestGenerateTransportKey	
			and onReturnUpdateIPEKResult	
3.4	2024.01.04	Shasha Lv	Added the api sendCvmPin and	
			getEncryptData()	
3.5	2024.01.05	Shasha Lv	Added the api which online file	
			included	



Copyright notification

Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent - or other industrial or intellectual property rights.

© Dspread technology CO.,LTD All rights are reserved.



Table

1.1 SUMMARY	8
1.1 SUMMARY	8
1.2 CONNECTION MAP FOR QPOS	9
1.4 Purpose and Scope	10
1.5 GLOSSARY AND DEFINITIONS	10
1.6 Transaction Key	10
1.7 EMVCo Terminal Type Approval	10
1.8 Message Format	11
1.9 EMV Standard Tags	11
1.10 Proprietary Tags Description	11
· ·	
~	
2 ANDROID SDK API	13
2.1 SYSTEM REQUIREMENT	13
2.1.1 DEVELOPMENT ENVIRONMENT	13
2.1.2 OS Version Requirement	13
2.2 SDK FRAMEWORK	14
2.3 ANDROID PERMISSION	15
2.4 CLASSIFICATION PRINCIPLE IN SDK METHODS	15
2.4.1 INIT METHODS	15
2.4.2 Interactive Methods	16
2.4.3 Listener Methods	18
2.5 TRANSACTION FLOW	21
2.5.1 EMV ICC Transaction Flow For QPOS	21
2.5.2 EMV ICC Transaction Flow for QPOS Reader	22
2.5.3 EMV ICC Transaction Description	23
2.5.4 Magnetic Transaction Flow	26
2.5.5 Magnetic Transaction Description	26
2.6 API METHODS REFERENCE	28
2.6.1 GETSDKVERSION	28
2.6.2 RESETQPOS	28
2.6.3 SCANQPOS2MODE	28
2.6.4 STOPQPOS2MODE	29

Desperab Desperad Technology Co., Ltd	鼎合远传	
2.6.6 CLOSEAUDIO 29 2.6.7 CONNECTBT 30 2.6.8 CONNECTBT 30 2.6.9 DISCONNECTBT 30 2.6.10 ISQPOSPRESENT 31 2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.17 S DOEMYAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMYAPP 35 2.6.21 CANCELSELECTEMYAPP 35 2.6.22 SINLICONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.31 SETPOSALEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVCAPKONFIG 39 2.6.35 UDPATEWORKEY 40 2.6.37 ISQPOSPRESENT 41 2.6	DSPREAD Dspread Technology Co., Ltd	Android
2.6.7 CONNECTBT 30 2.6.8 CONNECTBLUETOOTHDEVICE 30 2.6.9 DISCONNECTBT 30 2.6.10 ISQPOSPRESENT 31 2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 SENDATEM 39 2.6.33 SENDARPOLOHIGE 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UppateWorkkey 40 2.6.37 ISQPOSPRESENT 41	2.6.5 OPENAUDIO	29
2.6.8 CONNECTBL 30 2.6.9 DISCONNECTBT 30 2.6.10 ISQPOSPRESENT 31 2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UppateEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVAPPCONFIG 39 2.6.35 UppateEMORKEY 40 2.6.37 ISQPOSPRESENT 41	2.6.6 CLOSEAUDIO	29
2.6.9 DISCONNECTBT 30 2.6.10 ISQPOSPRESENT 31 2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UPDATEEMVCKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 <t< td=""><td>2.6.7 CONNECTBT</td><td>30</td></t<>	2.6.7 CONNECTBT	30
2.6.10 ISQPOSPRESENT 31 2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCOMFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UPDATEWORKEY 40 2.6.36 MACKEVENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41	2.6.8 CONNECTBLUETOOTHDEVICE	30
2.6.11 GETQPOSID 31 2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTÍCON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATEWORKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41	2.6.9 DISCONNECTBT	30
2.6.12 GETQPOSINFO 31 2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATEWORKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 IsQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42	2.6.10 isQposPresent	31
2.6.13 SETAMOUNT 32 2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVCAPKONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLE 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.11 GETQPOSID	31
2.6.14 CANCELSETAMOUNT 32 2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLE 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.12 GETQPOSINFO	31
2.6.15 DOTRADE 33 2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UPPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDUBLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.13 SETAMOUNT	32
2.6.16 DOCHECKCARD 33 2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLE 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.14 CANCELSETAMOUNT	32
2.6.17 S DOEMVAPP 34 2.6.18 CANCELSETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.40 CALCMACDUBLE 42 2.6.41 CALCMACDUBLE 42 2.6.42 CALCMACDUBLENOCHECK 42	2.6.15 DOTRADE	33
2.6.18 CANCEL SETAMOUNT 34 2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCEL SELECTEMVAPP 35 2.6.22 FINAL CONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVER CONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWER ONICC 38 2.6.29 POWER OFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSS LEEPTIME 38 2.6.32 UPDATEEMV CAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATE WORK KEY 40 2.6.36 MACKEY ENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMAC SINGLE 41 2.6.40 CALCMAC DOUBLE 42 2.6.41 CALCMAC DOUBLE NOCHECK 42 2.6.42 CALCMAC DOUBLE NOCHECK 42	2.6.16 DOCHECKCARD	33
2.6.19 SETAMOUNT 34 2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.35 UDPATEWORKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.17 S DOEMVAPP	34
2.6.20 SELECTEMVAPP 35 2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.18 CANCELSETAMOUNT	34
2.6.21 CANCELSELECTEMVAPP 35 2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDUBLE 42 2.6.41 CALCMACDUBLENOCHECK 42 2.6.42 CALCMACDUBLENOCHECK 42	2.6.19 SETAMOUNT	34
2.6.22 FINALCONFIRM 35 2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.20 SELECTEMVAPP	35
2.6.23 SENDONLINEPROCESSRESULT 36 2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.21 CANCELSELECTEMVAPP	35
2.6.24 ISSERVERCONNECTED 36 2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLENOCHECK 42	2.6.22 FINALCONFIRM	35
2.6.25 SENDTIME 36 2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.23 SENDONLINEPROCESSRESULT	36
2.6.26 SETAMOUNTICON 37 2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 40 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.24 isServerConnected	36
2.6.27 GETPIN 37 2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.37 ISQPOSPRESENT 40 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.25 SENDTIME	36
2.6.28 POWERONICC 38 2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACDOUBLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.26 SETAMOUNTICON	37
2.6.29 POWEROFFICC 38 2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MacKeyEncrypt 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.27 GETPIN	37
2.6.30 SENDAPDU 38 2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.28 POWERONICC	38
2.6.31 SETPOSSLEEPTIME 38 2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.29 POWEROFFICC	38
2.6.32 UPDATEEMVCAPK 39 2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.30 SENDAPDU	38
2.6.33 READEMVAPPCONFIG 39 2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.31 SETPOSSLEEPTIME	38
2.6.34 READEMVCAPKCONFIG 39 2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.32 UPDATEEMVCAPK	39
2.6.35 UDPATEWORKKEY 40 2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.33 READEMVAPPCONFIG	39
2.6.36 MACKEYENCRYPT 40 2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.34 READEMVCAPKCONFIG	39
2.6.37 ISQPOSPRESENT 41 2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.35 UDPATEWORKKEY	40
2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.36 MacKeyEncrypt	40
2.6.38 SETMASTERKEY 41 2.6.39 CALCMACSINGLE 41 2.6.40 CALCMACDOUBLE 42 2.6.41 CALCMACSINGLENOCHECK 42 2.6.42 CALCMACDOUBLENOCHECK 42	2.6.37 isOposPresent	41
2.6.40 CALCMACDOUBLE422.6.41 CALCMACSINGLENOCHECK422.6.42 CALCMACDOUBLENOCHECK42		
2.6.40 CALCMACDOUBLE422.6.41 CALCMACSINGLENOCHECK422.6.42 CALCMACDOUBLENOCHECK42	2.6.39 CALCMACSINGLE	41
2.6.42 CALCMACDOUBLENOCHECK 42		
2.0.73 DOWNLOADINGAI UDLICINET	2.6.43 DOWNLOADRSAPUBLICKEY	
2.6.44 UPDATEMASTERKEYRANDOM		
2.6.45 UPDATEMASTERKEY		
2.6.46 PINKEY TDES		
2.6.47 PINKEY TDESNOCHECK	-	
2.6.48 SETSYSTEMDATETIME	-	

鼎合远传	
DSPREAD Dspread Technology Co. ,Ltd	Android
2.6.49 SETMERCHANTID	46
2.6.50 SETTERMINALID	46
2.6.51 GETMAGNETICTRACKPLAINTEXT	46
2.6.52 GETCARDNO	47
2.6.53 GETICCCARDNO	47
2.6.54 POWEROFFNFC	47
2.6.55 SENDAPDUBYNFC	48
2.6.56 POWERONNFC	48
2.6.57 CBC_MAC	48
2.6.58 CBC_MACNOCHECK	49
2.6.59 INQUIREECQAMOUNT	49
2.6.60 isIdle	50
2.6.61 ANLYSEMVICCDATA	50
2.6.62 VIPOSBATCHSENDAPDU	50
2.6.63 SYNVIPOSBATCHSENDAPDU	50
2.6.64 ANLYSEMVICCDATA_QF	51
2.6.65 ICCCASHBACK	51
2.6.66 SETPOSPRESENT	52
2.6.67 SETCARDTRADEMODE	52
2.6.68 SETPINPADFLAG	52
2.6.69 QPOSSTATUS	53
2.6.70 readBusinessCard	53
2.6.71 WRITEBUSINESSCARD	53
2.6.72 SYNCREADBUSINESSCARD	54
2.6.73 SYNCWRITEBUSINESSCARD	55
2.6.74 CONFIRMAMOUNT	55
2.6.75 SETAMOUNT	55
2.6.76 GETPIN	56
2.6.77 DoSetManagementKey	56
2.6.78 DOSETBUZZEROPERATION	57
2.6.79 DOSETBUZZEROPERATION	57
2.6.80 DOUPDATEIPEKOPERATION	57
2.6.81 UPDATEIPEKOPERATIONBYKEYTYPE	58
2.6.82 UPDATEEMVAPP	58
2.6.83 UPDATEEMVCAPK	59
2.6.84 GETUPDATEKEY	59
2.6.85 SETSLEEPMODETIME	60
2.6.86 GENERATETRANSPORTKEY	60
2.6.87 readGasCard	61
2.6.88 WRITEGASCARD	61
2.6.89 UPDATEIPEKByTransportKey	62
2.6.90 UPDATEWORKKEYBYTRANSPORTKEY	
2.6.91 SENDCVV	63
2.6.92 GETENCRYPTEDDATABLOCK	64

鼎合远传	
DSPREAD Dspread Technology Co. ,Ltd	Android
2.6.93 DISPLAYQRCODE	64
2.6.94 OPERATELEDBYTYPE	65
2.6.95 PLAYBUZZERBYTYPE	66
2.6.96 SENDNFCPROCESSRESULT	66
2.6.97 GETICCTAG	67
2.6.98 GETENCRYPTEDTRACK2DATA	67
2.6.99 LCDSHOWCUSTOMDISPLAY	68
2.6.100 SETCUSTOMLOGODISPLAY	68
2.6.101 GETENCRYPTDATA	69
2.6.102 SENDCVMPIN	69
2.6.103 INITLISTENER	70
2.6.104 OPENUSB	70
2.6.105 OPENUART	71
2.6.106 BYPASSPIN	71
2.6.107 CANCELPIN	71
2.6.108 PINMAPSYNC	72
2.6.109 UPDATEKEYBYTR_31	72
2.6.110 UPDATEEMVCONFIGBYXML	72
2.6.111 updatePosFirmware	73
2.6.112 POLLONMIFARECARD	73
2.6.113 AUTHENTICATEMIFARECARD	74
2.6.114 OPERATEMIFARECARDDATA	74
2.6.115 READMIFARECARD	75
2.6.116 WRITEMIFARECARD	75
2.6.117 FINISHMIFARECARD	75
2.6.118 FASTREADMIFARECARDDATA	76
2.6.119 GETDEVICEECCPUBLICKEY	76
2.6.120 UPDATESERVERECCPUBLICKEY	77
2.6.121 UPDATEKEYBYTR_31	77
2.6.122 CALCULATEMACWITHKEY	78
2.6.123 GETENCRYPTEDDATAWITHTAG	78
2.7 DELEGATE METHODS REFERENCE	79
2.7.1 onRequestWaitingUser	79
2.7.2 onQposIdResult	
2.7.3 onQposInfoResult	
2.7.4 onDoTradeResult	
2.7.5 onRequestSetAmount	
2.7.6 ONREQUESTSELECTEMVAPP	
2.7.7 onRequestIsServerConnected	
2.7.8 onRequestFinalConfirm	
2.7.9 onRequestOnlineProcess	
2.7.10 ONREQUESTTIME	
2.7.11 ONREQUESTTRANSACTIONRESULT	
2.7.12 onRequestTransactionLog	

鼎合远传	
DSPREAD Dspread Technology Co. ,Ltd	Android
2.7.13 ONREQUESTBATCHDATA	83
2.7.14 onRequestQposConnected	83
2.7.15 onRequestQposDisconnected	84
2.7.16 onRequestNoQposDetected	84
2.7.17 onError	84
2.7.18 ONREQUESTDISPLAY	84
2.7.19 ONREQUESTUPDATEWORKKEYRESULT	85
2.7.20 onGetCardNoResult	85
2.7.21 onReturnReversalData	85
2.7.22 onReturnGetPinResult	86
2.7.23 ONRETURNPOWERONICCRESULT	86
2.7.24 onReturnPowerOffIccResult	86
2.7.25 ONRETURNAPDURESULT	87
2.7.26 ONRETURNSETSLEEPTIMERESULT	87
2.7.27 ONREQUESTCALCULATEMAC	87
2.7.28 ONRETURNCUSTOMCONFIGRESULT	
2.7.29 onReturnSetMasterKeyResult	88
2.7.30 ONRETURNBATCHSENDAPDURESULT	88
2.7.31 ONRETURNICCCASHBACK	89
2.7.32 ONUPDATEPOSFIRMWARERESULT	89
2.7.33 ONRETURNDOWNLOADRSAPUBLICKEY	89
2.7.34 ONPINKEY TDES RESULT	90
2.7.35 ONUPDATEMASTERKEYRESULT	
2.7.36 ONEMVICCEXCEPTIONDATA	90
2.7.37 onSetManagementKey	91
2.7.38 onSetBuzzerResult	91
2.7.39 ONRETURNUPDATEIPEKRESULT	91
2.7.40 onReturnUpdateEMVResult	91
2.7.41 ONRETURNUPDATEEMVRIDRESULT	92
2.7.42 onRequestDeviceScanFinished	92
2.7.43 onDeviceFound	
2.7.44 onRequestUpdateKey	93
2.7.45 ONSETSLEEPMODETIME	
2.7.46 onRequestGenerateTransportKey	93
2.7.47 onReadGasCardResult	
2.7.48 onWriteGasCardResult	94
2.7.49 ONRETURNOPERATELEDByTypeResult	94
2.7.50 onReturnPlayBuzzerByTypeResult	95
2.7.51 ONRETURNDISPLAYQRCODERESULT	95
2.7.52 onReturnNFCBatchData	
2.7.53 ONLCDSHOWCUSTOMDISPLAY	
2.7.54 onSetCustomLogoDisplay	
2.7.55 onSearchMifareCardResult	
2.7.56 onVerifyMifareCardResult	97

鼎合远传 DSPREAD Dspread Technology Co. , Ltd	Android
2.7.57 ONOPERATEMIFARECARDRESULT	97
2.7.58 onReadMifareCardResult	97
2.7.59 onWriteMifareCardResult	98
2.7.60 onFinishMifareCardResult	98
2.7.61 GETMIFAREFASTREADDATA	99
2.7.62 ONRETURNUPDATEKEYBYTR_31RESULT	99
2.7.63 onQposGetDeviceECCPublicKeyResult	99
2.7.64 ONQPOSUPDATESERVERECCPUBLICKEYRESULT	100
2.7.65 ONRETURNUPDATEKEYBYTR 31RESULT	100

1 Introduction

1.1 Summary

QPOS is a mobile payment card reader device with pin pad that works with mobile devices such as smart phone. It provides merchants and consumers a safe and convenient way to make mobile payments. QPOS can communicate with the mobile device through many methods, such as: audio jack, Bluetooth and USB cable.

QPOS Reader is another mobile payment card reader device without pin pad. QPOS Reader can communicate with the mobile device through audio jack or USB cable.

SPOS is a yet another mobile payment card reader device with pin pad and touch screen, SPOS can communicate with the mobile device through many methods, such as: audio jack, Bluetooth and USB cable. The touch screen can be used to capture the signature of consumer in an electronic way.


QPOS share a lot in common, the SDK API is almost same for QPOS. In the following chapters.

Features:


- Ensure secure transactions: integrated keyboard and multiple encryption algorithms to ensure secure transactions.
- Accept all types of bank card: supports magnetic stripe card, contact EMV IC card and contactless EMV IC card.
- Adapts to more smart devices through audio jack: Supports over 2,000 smart devices through audio jack.
- Fulfils global standards: EMV L1&L2, PCI PTS and more.
- Supports all types of mobile systems: Such as iOS, Android, Windows phone and PC OS.

This document is to help readers to integrate QPOS android SDK into their mobile payment APPs.

1.2Connection map For QPOS

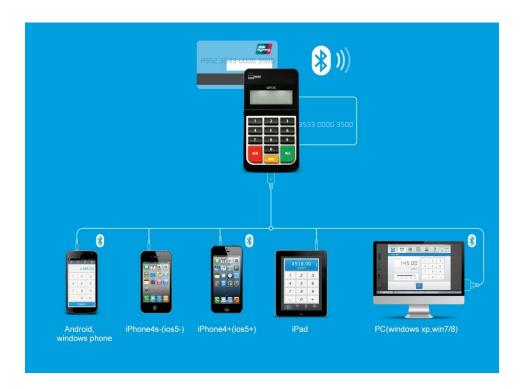

1.3 Connection map For QPOS Reader

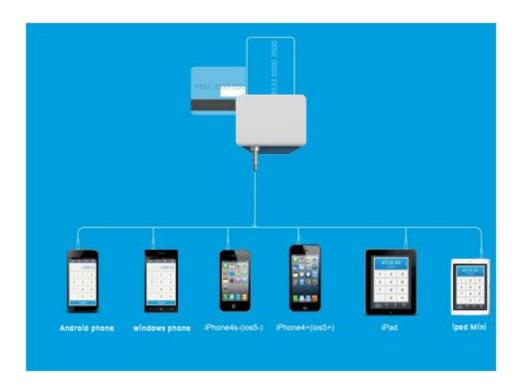

1.4Purpose and Scope

This document is to describe the APIs of QPOS android SDK. The goal of the QPOS android SDK is to communicate between the smart device and QPOS.

The readers of the document are those who plans to use QPOS android SDK in their application.

1.5Glossary and Definitions

DUKPT	DERIVED UNIQUE KEY PER TRANSACTION.
PK_Q	QPOS Public Key
SK_Q	QPOS Private Key
PK_P	Payment Operator Public Key
SK_P	Payment Operator Private Key
PK_T	Terminal Manufacturer Public Key
SK_T	Terminal Manufacturer Private Key
KSN	Key Serial Number
BDK	Base Derivation Key
IPEK	Initial PIN Encryption Key
DATA-key	The data key to be generated by KSN and IPEK or by KSN and BDK
PIN-key	The PIN key to be generated by KSN and IPEK or by KSN and BDK

1.6Transaction Key

Unless otherwise specified, Triple DES encryption with EBC and DUKPT key management are assumed. DUKPT is specified in ANSI X9.24 part 1.

Refer to

http://en.wikipedia.org/wiki/DUKPT#Key_Register_.2832_hexadecimal_digits.29

In the Demo, the default transaction keys refer to the following table.

Key Name	Default	Length(Bytes)
KSN	00000332100300e00001	20
BDK	0123456789ABCDEFFEDCBA9876543210	32

1.7EMVCo Terminal Type Approval

EMVCo has approved QPOS application EMVCo type for Terminal level 2. QPOS application is based on the requirements stated in the EMV 4.3 specification.



1.8Message Format

Messages within data communication protocols between the mobile payment application and QPOS EMV kernel are encoded as a BER-TLV (Basic Encoding Rules-Tag-Length-Value) which is defined in EMV 4.3 book3 Annex B.

1.9EMV Standard Tags

EMV Standard Tags are defined in EMV 4.3 book3 Annex A.

1.10 Proprietary Tags Description

Tag	Description	Length(B	Key	Algorithm
		ytes)		
0xC0	KSN of online message	10	No	No
0xC3	KSN of Batch	10	No	No
0xC4	Masked PAN	0-10	No	No
0xC5	Batch message ¹	Var	DATA-key	Triple-Des
0xC2	Online message ³	Var	DATA-key	Triple-Des
0x70	Online EMV data message ²	Var	No	No

Note:

- 1. The **Batch message** is the Triple-Des encrypted result with Data-key. For using, first Triple-Des decrypted the **batch message** with **DATA-key**, the decrypted result is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B.
- 2. The **Online EMV data message** is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B.
- 3. The **Online message** is the Triple-Des encrypted result with Data-key. For using, first Triple-Des decrypted the **Online message** with **DATA-key**, the decrypted result is encoded as a BER-TLV which is defined in EMV 4.3 book3 Annex B and Proprietary Tags.

1.11 Bluetooth Mode

1.11.1 How to get QPOS/SPOS Bluetooth ID

QPOS Bluetooth ID is combined by 'QPOS' strings and the last-10 numbers of the label. For example:

QPOS_ID := 12070002000200100151 QPOS_BT_ID := QPOS0200100151




(The label is sticked on QPOS back cover)

SPOS Bluetooth ID is similar to QPOS' but starting with SPOS.


1.11.2 How to connect QPOS/SPOS through Bluetooth

ITEM	DEFAULT
CONNECT METHOD	Manual
PASSWORD	1234

1.12 Management Keys For QPOS

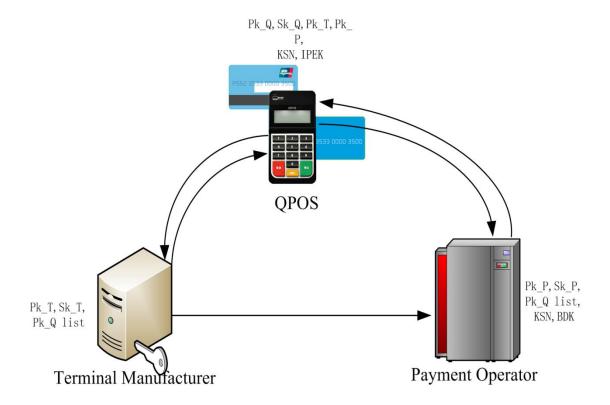

1.13 Firmware Upgrade For QPOS

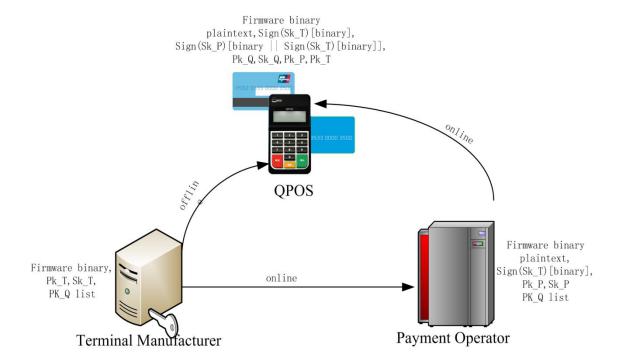

2 Android SDK API

2.1 System Requirement


2.1.1 Development Environment

JDK: Java 1.6 or above

2.1.2 OS Version Requirement

OS: Android 2.2 and all above

2.2 SDK Framework

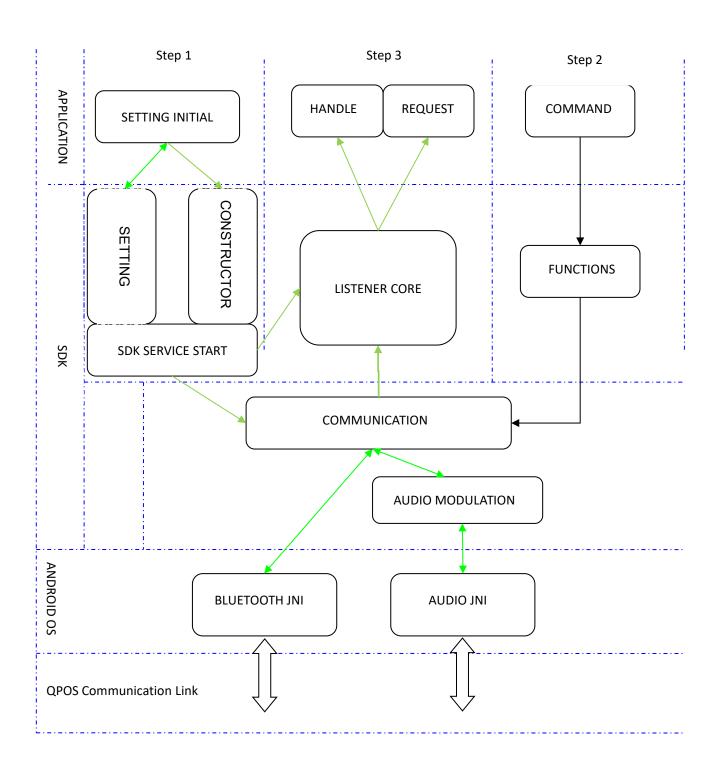



2.3 Android Permission

The library needs permission to use the audio and Bluetooth resource. The following lines must be added to the **AndroidManifest.xml** file in the APP project.

2.4 Classification Principle in SDK Methods

According to the SDK framework and the methods feature, all methods are devided into three parts:

1. Init methods;

}

- 2. Interactive methods;
- 3. Listener methods.

To avoid the application block and improve the speed of data interaction between the smart terminal and QPOS, the SDK framework is designed to work under asynchronous mode.

2.4.1 Init Methods

The Init methods group is the entry of SDK library, to create the core instance, and build the communication connection between the smart terminal and SDK through the audio jack or the Bluetooth with SPP profile, etc. The method named 'QPOSService' is the core of SDK library. Before the APP create this core instance with the parameter of "CommunicationMode mode", the APP must register all the sub-functions in 'QPOSServiceListener'. Then the APP call the sub-function named 'QPOSService.initListener' of the constructor method named 'QPOSService', the method named 'QPOSServiceListener' should be the input parameter of 'QPOSService.initListener'.

The detailed description about "QPOSServiceListener" refers to the Listener methods.

Example code of creating the core instance, see the following code:

public static enum CommunicationMode {

BLUETOOTH,// bluetooth mode

AUDIO// audio mode

Audio Mode:

QPOSService pos = QPOSService.getInstance(CommunicationMode.AUDIO); pos.initListener(MainActivity.this, listener);

Bluetooth Mode:

QPOSService pos = QPOSService.getInstance(CommunicationMode.BLUETOOTH); pos.initListener(MainActivity.this, listener);

Method Name	Description
QPOSService	Constructor Method
getSdkVersion	Get this SDK version
resetQPOS	Reset and bring the QPOS back to a known initial state.
resetPosStatus	Reset and bring the QPOS back to a known initial state. Synchronized methods
openAudio	Start the audio instance for playing, recording and modulating
closeAudio	Stop the audio instance for playing, recording and modulating
connectBT	Connect to QPOS by Bluetooth, using for
	exchanging data between APP and QPOS
disconnectBT	Disconnect from QPOS with bluetooth

2.4.2 Interactive Methods

The Interactive methods deal with the transaction from the application to QPOS, to get the device information of QPOS, to confirm the transaction information, and to set the transaction command etc. The relative handler of these methods is defined into sub functions of 'QPOSServiceListener'. Some of these methods are triggered by the relative handle methods prefixed by 'onRequest' in 'QPOSServiceListener', and the handler result of other methods needs to be returned by the relative handler methods prefixed by 'on', except for 'onRequest'.

Method Name	Description		Handle Name
	Get the serial number about Qpos		onQposIdResult
getQposId			
	Get the config		

Dspread Technol	logy Co. ,Lta		Android
getQposInfo	information from Qpos	-	onQposInfoResult
setAmount	Set the amount and transaction type required for EMV transaction.	•	onRequestSetAmount
cancelSetAmount	Cancel the process about setting amount	←	onRequestSetAmount
doTrade	Send the command as swiping/inserting card to QPOS.	-	onDoTradeResult
doEmvApp	Send the command as executing the EMV transaction flow to QPOS		no
selectEmvApp	Select one application of the application list returned from EMV kernel, then set the application ID to EMV kernel	•	onRequestSelectEmvApp
cancelSelectEmvApp	Cancel the process about setting one application	•	onRequestSelectEmvApp
finalConfirm	Send transaction confirmation command to Qpos	•	onRequestFinalConfirm
sendOnlineProcessResult	Send the connectivity status about network to Qpos		
isServerConnected	Send the connectivity status about network to Qpos		
sendTime	Set the date and time formatted as 'YYMMDDHHMMS S' to Qpos,based the smart terminal date and time	—	onRequestTime
sendPin	Set the pin to QPOS Reader	•	<u>onRequestSetPin</u>

emptyPin	Set the empty pin to QPOS Reader	•	<u>onRequestSetPin</u>
cancelPin	Set cancel to QPOS Reader	—	<u>onRequestSetPin</u>
powerOnIcc	Turn on the EMV card.	←	onReturnPowerOnIccResu lt
powerOffIcc	Turn off the EMV card.	←	onReturnPowerOffIccResu lt
sendApdu	Send data to EMV card in raw APDU formats. This is the EMV Level 1 protocol and developers can develop their only EMV Level 2 application	•	onReturnApduResult
setPosSleepTime	Set the pos sleep time	←	onReturnSetSleepTimeRes ult
udpateWorkKey	update the pos work key	←	onRequestUpdateWorkKe yResult
setMasterKey	update the pos master key	—	onReturnSetMasterKeyRe sult

2.4.3 Listener Methods

The Listener methods deal with the event and the handler from QPOS to the application, to handle all events from QPOS to APP, and to handle the returned result of some commands from the APP to QPOS. The method named 'QPOSService' is the constructor method, and the method named 'QPOSServiceListener' must be registered the sub-function in "QPOSService.initListener" of the constructor method. Some sub-functions 'QPOSServiceListener' are either mandatory or optional. Here we recommend the developer to define all sub-functions referring to the following table. Even if some sub-functions are optional, it is better to define them as Null functions.

Handle Name	Description		Method Name
onRequestWaitingUser	Qpos is ready and waiting for swiping or inserting a EMV card	o	no

DSPREAD Dspread Technology Co., Ltd Android				
onQposIdResult	Return the serial number about Qpos	O	•	getQposId
onQposInfoResult	Return the config information about Qpos	O	•	getQposInfo
onDoTradeResult	Return the action about swiping, inserting the ICC, canceling etc.	m	←	doTrade
onRequestSetAmount	Prompt to inputting the transaction amount to the application	m	→	setAmount
onRequestSelectEmvApp	Supply application list supported by EMV ICC to the application for selecting.	m	→	selectEmvApp
onRequestIsServerConnected		m	→	isServerConnected
onRequestFinalConfirm	Finally confirm before generating the AC by the ICC COS	m	→	finalConfirm
onRequestOnlineProcess	EMV kernel request the online handler	m	→	sendOnlineProcessRes ult
onRequestTime	Request setting the date and time from Qpos	O	→	sendTime
onRequestTransactionResult	After finishing this transaction, EMV kernel report this transaction result to the application	m		

Dspread Technology Co., Ltd				Android
onRequestTransactionLog	After finishing this transaction, EMV kernel report this transaction log to the application	o		
onRequestBatchData	EMV kernel send the batch data to the application	m		
onRequestPosConnected	SDK report to the application about the connected event between smart terminal and Qpos	m		
onRequestPosDisconnected	SDK report to the application about the disconnected event between smart terminal and Qpos	m		
onRequestNoPosDetected	SDK report to the application about the no connected event between smart terminal and Qpos	m		
onError	SDK report the error ID to the application during transaction	m		
onRequestDisplay	SDK request display to the application	0		
onRequestSetPin	SDK request the application to set PIN for the EMV card. Note, this is only available for QPOS Reader since QPOS Reader doesn't has PINPAD.	<u>o</u>	→	sendPin emptyPin cancelPin
onReturnPowerOnIccResult	Turn on the EMV card result	<u>o</u>	→	powerOnIcc
onReturnPowerOffIccResult	Turn off the EMV card result	<u>o</u>	→	powerOffIcc
onReturnApduResult		<u>o</u>	→	sendApdu

onReturnSetSleepTimeResu lt	Set the pos sleep time	<u>o</u>	→	setPosSleepTime
onRequestUpdateWorkKey Result	update the pos work key	o	→	udpateWorkKey
onReturnSetMasterKeyResu lt	update the pos work key	o	→	setMasterKey

2.5 Transaction Flow

From the return of 'onDoTradeResult', the APP can find out whether consumer use an EMV ICC card or a magnetic card.

Public void onDoTradeResult(DoTradeResult result, Hashtable<String, String> decodeData); Enum DoTradeResult can be any of following


NONE, ICC, NOT ICC, BAD_SWIPE, MCR, MAG_HEAD_FAIL, NO RESPONSE, TRACK2 ONLY, NFC_TRACK2

When the delegate method "onDoTradeResult" is triggered to return the "Enum DoTradeResult" result, if this result is ICC, the APP will trigger the EMV ICC transaction flow, or this result is MCR, the APP will trigger the magnetic transaction flow.

2.5.1 EMV ICC Transaction Flow For QPOS

I

2.5.2 EMV ICC Transaction Flow for QPOS Reader

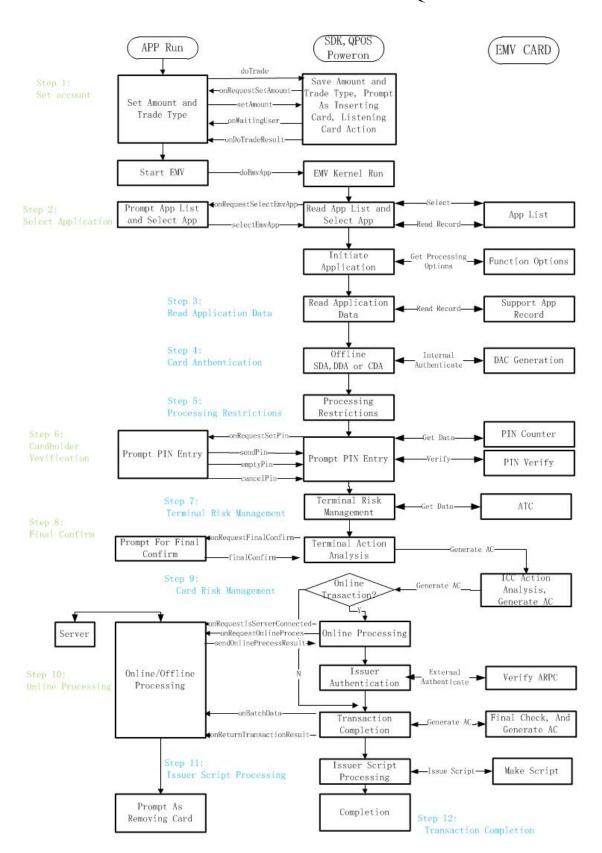

2.5.3 EMV ICC Transaction Description

Step 1: A transaction amount is needed for a payment transaction and it to be entered by the operator (or calculated by the inventory system) regardless of whether magnetic stripe card or EMV card. The **onRequestSetAmount** delegate method is triggered.

Public void onRequestSetAmount ();

The APP should prompt the operator to enter the amount and then call the **setAmount** to send the data back to EMV kernel.

Public void **setAmount**(String amount,String cashbackAmount,String currency,TransactionType transactionType);//2 decimal places.e.g.234.87

The **transactionType** can be any of the following:

GOODS,

SERVICES,

CASHBACK,

INQUIRY,

TRANSFER,

PAYMENT

The amount has an upper limit of 1000000000.00.

The user can also select to abort the transaction.

Public void cancelSetAmount();

Step 2: Select Application

An EMV card may support multiple payment applications. The EMV kernel reads the list of applications supported by the EMV card and asks the customer/operator to select the desired application.

The delegate method **onRequestSelectApplication** is triggered to return an array of application Ids.

Public void onRequestSelectEmvApp (ArrayList<String>applist);

The APP should prompt the user to select one application and then call the **selectEmvApp** method.

Public void selectEmvApp (int index)

The user can also select to abort the transaction.

Public void cancelSelectEmvApp ()

In most cases, there is only one default application and this step is skipped.

Step 3: Read Application Data

In this step, EMV kernel reads the necessary data from the EMV card. The EMV kernel asks for the terminal time through the **onRequestTime** method.

This step is only done between the EMV kernel and EMV card. If this step fails, onRequestTransactionResult will be returned and the EMV process stops.

Public void onRequestTime ();

The terminal time in YYMMDDHHmmss formats should be sent in response:

Public void **sendTime**(String terminalTime);

Step 4: Card Authentication

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 5: Processing Restrictions

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 6: Cardholder Verification

There are the different cardholder verification methods (CVMs) supported in an EMV transaction and some require the customer to enter a PIN (personal identifier number). If the EMV transaction requires PIN verification, the customer must enter his PIN by the keypad of QPOS. Where PIN is 4-12 digits. The PIN can be input via PINPAD for QPOS and SPOS, or can be input via mobile application for QPOS Reader.

Some applications (e.g. for small amount payment) does not require CVM (Cardholder Verification Method) and this step is skipped. But it is also possible that the EMV card decline a transaction without PIN. The customer/operator can press the **cancel** key on the keypad of QPOS to cancel the PIN entry and abort.

Step 7: Terminal Risk Management

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 8: Terminal Action Analysis

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops. At the end of this step, a final confirmation will be needed to proceed via **onRequestFinalConfirm**.

Public void onRequestFinalConfirm();

The APP should prompt the user for a confirmation to proceed. This gives the user a chance to review the amount, the payment method, etc.

A final confirmation is sent to EMV kernel by calling this:

public void finalConfirm(boolean isConfirmed);

Step 9: Card Risk Management

This step is only done between the EMV kernel and EMV ICC card. If this step fails, **onRequestTransactionResult** will be returned and the EMV process stops.

Step 10: Online Processing

An EMV transaction can either be online or offline. If online processing is required, then the **onRequestOnlineProcess** delegate method is triggered.

public void onRequestOnlineProcess(string tlv);

The parameter TLV contains the tag-length-value data structure returned by the EMV kernel. After that, the client APP should send the data to the payment operator. When the processing results are returned from the payment operator, it should send the results back to EMV kernel by sendOnlineProcessResult.

public void sendOnlineProcessResult(String tlv);

The data elements that are required are payment operator and issuer dependent. See **chapter 1.9** and the **EVM Book 3 Annex A** for the full list of tags and the TLV structure.

The following tags are usually required but are ICC dependent:

Tags	Parameter
0089	Authorisation Code
008A	Authorisation Response Code
0091	Issuer Authentication Data
0071	Issuer Script Template 1 (needed for Step 11)
0072	Issuer Script Template 2 (needed for Step 11)

This step is skipped in offline processing.

Step 11: Issuer Scripts Processing

This step is handled transparently between the EMV kernel and EMV ICC card if issue scripts are present in the online processing results or skipped otherwise. This step is skipped in offline processing.

Step 12: Completion

In this step, EMV kernel sends back the final transaction result from the EMV card by the




public void onRequestBatchData (String tlv);

The data elements that are required are payment operator and issuer dependent. See the **EVM Book 3 Annex A** for the full list of tags and the TLV structure.

In this step, the client APP should store the results, display the results, print receipts, and prompt the user to remove the card from the QPOS device. Later, the batch data should be updated to the server for settlement.

2.5.4 Magnetic Transaction Flow

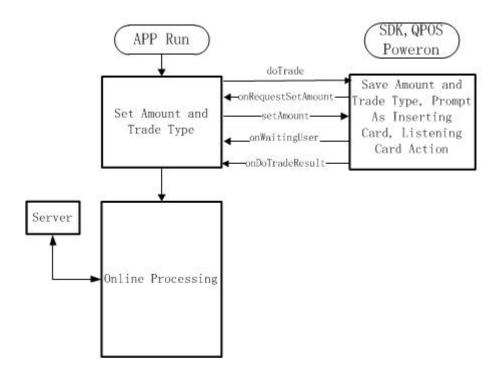

2.5.5 Magnetic Transaction Description

If a magnetic stripe card has been swiped, the encrypted PINBLOCK and the encrypted track data will be returned along with the **trackksn** and the **pinKsn** in the **decodeData Hashtable**.

Public void **onDoTradeResult**(DoTradeResult result, Hashtable<String, String> decodeData);

The **Hashtable** contain keys for the values:

Key	Description
maskedPAN	Masked card number showing at most the first 6 and last 4 digits
	with in-between digits masked by "X"



expiryDate	4-digit in the form of YYMM in the track data
cardHolderNa	The cardholder name as seen on the card. This can be up to 26
me	characters.
serviceCode	3-digit service code in the track data
track1Length	Length of Track 1 data
track2Length	Length of Track 2 data
track3Length	Length of Track 3 data
encTracks	Reserved
encTrack1	Encrypted track 1 data with T-Des encryption key derived from
	DATA-key to be generated with trackksn and IPEK
encTrack2	Encrypted track 2 data with T-Des encryption key derived from
	DATA-key to be generated with trackksn and IPEK
encTrack3	Encrypted track 3 data with T-Des encryption key derived from
	DATA-key to be generated with trackksn and IPEK
partialTrack	Reserved
pinKsn	KSN of the Pin-block
trackksn	KSN of the track data
pinBlock1	Encrypted PIN data with T-Des encryption key derived from PIN-key
	to be generated with pinKsn and IPEK

Note:

1. The PIN format is defined as ANSI X9.8.

pinBlock := (PIN^PAN);

2.6 API Methods Reference

2.6.1 getSdkVersion

Signature	String getApiVersion()
Inputs	None
Outputs	SDK version
Description	Return the SDK version
See also	

2.6.2 resetQPOS

Signature	void resetQPOS()
Inputs	None
Outputs	None
Description	Reset and bring the QPOS back to a known initial state.
See also	

2.6.3 scanQPos2Mode

Signature	List <bluetoothdevice> scanQPos2Mode(Context context)</bluetoothdevice>
Inputs	context
Outputs	List <bluetoothdevice>: the list of bluetoothDevice</bluetoothdevice>
Description	Start to scan the devices and return the list of scanned devices
See also	The reponse method of onDeviceFound

2.6.4 stopQPos2Mode

Signature	void stopQPos2Mode()
Inputs	None
Outputs	None
Description	Stop to scan the device
See also	

2.6.5 openAudio

Signature	void openAudio ()
Inputs	None
Outputs	None
Description	Start the audio instance for playing, recording and modulating.
See also	

2.6.6 closeAudio

Signature	void closeAudio ()
Inputs	None
Outputs	None
Description	Stop the audio instance for playing, recording and modulating.
See also	

2.6.7 connectBT

Signature	void connectBT (String address)
Inputs	Bluetooth mac address.
Outputs	None
Description	Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS.
See also	

2.6.8 connectBluetoothDevice

Signature	boolean connectBluetoothDevice(boolean auto,int bondtime, String blueToothAddress)
Inputs	auto: Whether automatic matching.
	bondtime: Connection timeout
	blueToothAddress: Bluetooth mac address.
Outputs	None
Description	Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS.
See also	

2.6.9 disconnectBT

Signature	void disconnectBT ()/void disconnectBT (String address)
Inputs	None/Bluetooth mac address.
Outputs	None



Description	Connect to QPOS by Bluetooth, using for exchanging data between APP and QPOS.
See also	

2.6.10 is Qpos Present

Signature	boolean isQposPresent()
Inputs	None.
Outputs	BOOL: Presence flag of the Qpos.
Description	Check if an QPOS is connected and ready.
See also	

2.6.11 getQposId

Signature	getQposId()
Inputs	None
Outputs	None
Description	Retrieve the POS_ID of the QPOS device. Results are returned by onQposIdResult.
See also	onQposIdResult

2.6.12 getQposInfo

Signature	getQposInfo()
Inputs	None
Outputs	None

Description	Retrieve parameters about the QPOS device. Results are returned by onQposInfoResult which includes: firmware version, bootloader version, USB connection and charging status, battery level, and hardware version
See also	onQposInfoResult

2.6.13 setAmount

Signature	void setAmount(String amount, String amountDescribe, String currencyCode, TransactionType transactionType)
Inputs	amount: the amount for a transaction. [sep] cashbackAmount: the amount for a transaction. If this is non-zero, amount cannot be zero. currencyCode: three digits of the currency code, e.g. "840" for USD transactionType: enum of the transaction type.
Outputs	None
Description	Set the amount, currency and type of a transaction. This method can be called before a transaction or in response to an onRequestSetAmount call requested by the EMV engine. The Enum TransactionType can be GOODS, SERVICES, CASHBACK, INQUIRY, TRANSFER, PAYMENT
See also	onRequestSetAmount , cancelSetAmount

2.6.14 cancelSetAmount

Signature	void cancelSetAmount ()

Inputs	None
Outputs	None
Description	Cancel setting the amount of a transaction. This method can be called to abort a transaction in response to onRequestSetAmount
See also	onRequestSetAmount

2.6.15 doTrade

Signature	void doTrade(int timeout)
Inputs	Timeout
Outputs	None
Description	Check the status of the Magnetic Card Reader, the EMV Card reader, or NFC transceiver. It checks if a card has been swiped, a NFC card has been tapped or an EMV card is inserted. The result is returned by the onDoTradeResult delegate method.
See also	onDoTradeResult

2.6.16 doCheckCard

Signature	void doCheckCard (int timeout)
Inputs	Timeout
Outputs	None
Description	Start transaction, no pin input
See also	onDoTradeResult

2.6.17 s doEmvApp

Signature	void doEmvApp (EmvOption emvOption)
Inputs	EmvOption: enum { START START_WITH_FORCE_ONLINE }
Outputs	None
Description	Start Emv app, Emv card
See also	onDoTradeResult

2.6.18 cancelSetAmount

Signature	void cancelSetAmount ()
Inputs	None
Outputs	None
Description	Cancel Set Amount
See also	

2.6.19 setAmount

Signature	void setAmount (String amount, String cashbackAmount,
	String currencyCode, TransactionType transactionType)
	OR
	void setAmount (String amount, String cashbackAmount,
	String currencyCode, TransactionType transactionType,
	boolean isPosDisplayAmount)
Inputs	Amount:
	CashbackAmount

	CurrencyCode
	TransactionType
	IsPosDisplayAmount
Outputs	None
Description	Set amount
See also	

2.6.20 selectEmvApp

Signature	void selectEmvApp (int index)
Inputs	Index: select emv app index
Outputs	None
Description	Select Emv App
See also	

2.6.21 cancelSelectEmvApp

Signature	void cancelSelectEmvApp ()
Inputs	None
Outputs	None
Description	Cancel Select Emv App
See also	

2.6.22 finalConfirm

Signature	void finalConfirm (bool isConfirmed)
Inputs	isConfirmed



Outputs	None
Description	Not support
See also	

2.6.23 sendOnlineProcessResult


Signature	void sendOnlineProcessResult (String tlv)
Inputs	Tlv: type + length + value
Outputs	None
Description	Send transaction results from the processor back to EMVSwipe
See also	onRequestOnlineProcess

2.6.24 isServerConnected

Signature	void isServerConnected (bool isConnected)
Inputs	isConnected: whether the signature connect the successfully or not
Outputs	None
Description	Send the connectivity status to EMVSwipe
See also	onRequestIsServerConnected

2.6.25 sendTime

Signature	void sendTime (String aterminalTime)
Inputs	aterminalTime: terminalTime
Outputs	None



Description	Send the terminal time in yyyyMMddHHmmss format to EMVSwipe
See also	onRequestTime

2.6.26 setAmountIcon

Signature	void setAmountIcon (String aAmountIcon)/ void setAmountIcon (AmountType amtType String aAmountIcon)
Inputs	amtType: amount type aAmountIcon: amountIcon
Outputs	None
Description	Set Amount symbol. String Data is a string with length below 4 characters, and can only be ASCII string. below are some valid examples: "RUP" "USD" "CNY"
See also	

2.6.27 getPin

Signature	void getPin(String aTransactionData)
Inputs	aTransactionData: transactionData
Outputs	None
Description	Get Pin
See also	onReturnGetPinResult



2.6.28 powerOnIcc

Signature	void powerOnIcc ()
Inputs	None
Outputs	None
Description	Provide power to ICC for level 1 APDU exchange
See also	onReturnPowerOnIccResult

2.6.29 powerOffIcc

Signature	void powerOffIcc ()
Inputs	None
Outputs	None
Description	Cut off power to ICC after level 1 APDU exchange
See also	onReturnPowerOnIccResult

2.6.30 sendApdu

Signature	void sendApdu (String apduStr)
Inputs	apduStr: apdu character string
Outputs	None
Description	Send APDU exchange to ICC. Response data are returned by onReturnApduResult
See also	onReturnApduResult

2.6.31 setPosSleepTime

Signature	void setPosSleepTime (int sleepTime)



Inputs	sleepTime
Outputs	None
Description	Set Sleep Time
See also	onReturnSetSleepTimeResult

2.6.32 UpdateEmvCAPK

Signature	void updateEmvCAPK (String emvAppCfg,String emvCapkCfg)
Inputs	emvAppCfg emvCapkCfg
Outputs	None
Description	update emv config files(CAPK and AID)
See also	onReturnCustomConfigResult

2.6.33 readEmvAppConfig

Signature	void readEmvAppConfig ()
Inputs	None
Outputs	None
Description	read emv app config
See also	onReturnCustomConfigResult

2.6.34 readEmvCapkConfig

Signature	void readEmvCapkConfig ()
Inputs	None



Outputs	None
Description	read emv capk config
See also	onReturnCustomConfigResult

2.6.35 udpateWorkKey

Signature	void udpateWorkKey (String pik,String pikCheck,String trk,String trkCheck,String mak,String makCheck,String tnsk,String tnskCheck,int keyIndex,int timeout)
Inputs	pik:
	pikCheck
	trk
	trkCheck
	mak
	makCheck
	tnsk
	tnskCheck
	keyIndex
	timeout
Outputs	None
Description	Update Work Key
See also	onRequestUpdateWorkKeyResult

2.6.36 MacKeyEncrypt

Signature	void MacKeyEncrypt (String macStr)
Inputs	macStr: mac character string



Outputs	None
Description	macKey Encrypt
See also	onRequestCalculateMac

2.6.37 isQposPresent

Signature	void isQposPresent ()
Inputs	None
Outputs	None
Description	Get Qpos available status
See also	

2.6.38 setMasterKey

Signature	void setMasterKey (String key,String ckValue,int keyIndex,int timeout)
Inputs	key: master key ckValue: check value
	keyIndex timeout
Outputs	None
Description	Set Master Key
See also	onReturnSetMasterKeyResult

2.6.39 calcMacSingle

Signature	void setMasterKey (String macStr)
Inputs	macStr: mac character string



Outputs	None
Description	Calculate mac (single)
See also	onRequestCalculateMac

2.6.40 calcMacDouble

Signature	void calcMacDouble (String macStr,int keyIndex,int timeout)
Inputs	macStr: mac character string keyIndex
	timeout
Outputs	None
Description	Calculate mac (double)
See also	onRequestCalculateMac

2.6.41 calcMacSingleNoCheck

Signature	void calcMacSingleNoCheck (String macStr,int timeout)
Inputs	macStr: mac character string
	timeout
Outputs	None
Description	Calculate mac (double)
See also	onRequestCalculateMac

2.6.42 calcMacDoubleNoCheck

Signature	void calcMacDoubleNoCheck (String macStr,int
	keyIndex,int timeout)

Inputs	macStr: mac character string
	keyIndex
	timeout
Outputs	None
Description	Calculate mac (double)
See also	onRequestCalculateMac

2.6.43 downloadRsaPublicKey

Signature	void downloadRsaPublicKey (int useType,String rid,String index,String module,String exponent,int timeout)
Inputs	useType rid: public Key RID index: Public Key Index module: Public Key Module exponent: Public Key Exponent timeout
Outputs	None
Description	Acquire server RSA public key 详细操作步骤: 第一步: 调用服务器接口,从服务器获取公钥 第二步: 调用此接口获取用这公钥加密的 randomkey 第三步: 将 randomkey 上送服务器,服务器解密 randomkey 后返回用 randemkey 明文加密的终端主密钥 第四步: 调用 setMasterKey 设置主密钥
See also	onReturnDownloadRsaPublicKey

2.6.44 updateMasterKeyRandom

Signature	void updateMasterKeyRandom (int step,String
	keyIndex,String masterKey,String masterKeyCheck,int



and the second s	preda reciniology co. ,2.a.
	timeout)
Inputs	step: step index
	keyIndex
	masterKey
	masterKeyCheck
	timeout
Outputs	None
Description	Update Master Key in Random method
Description	详细操作步骤:
	第一步: 调用此接口获取随机数并上送服务器,服务器
	返回用这个随机数加密的主密钥
	第二步:拿到主密钥密文后再调用下面接口设置主密钥
See also	onUpdateMasterKeyResult

2.6.45 updateMasterKey

Signature	void updateMasterKey (int step,String RN1,String RN2,String masterKey,String masterKeyCheck,int timeout)
Inputs	step: step index
	RN1: random key 1
	RN2: random key 2
	masterKey
	masterKeyCheck
	timeout
Outputs	None
Description	Set Master Key
See also	onUpdateMasterKeyResult

2.6.46 pinKey_TDES

Signature	void pinKey_TDES (int keyIndex,String pin,int timeout)
Inputs	keyIndex
	pin
	timeout
Outputs	None
Description	Use pinKey to encrypt data
See also	onPinKey_TDES_Result

2.6.47 pinKey_TDESNoCheck

Signature	void pinKey_TDESNoCheck (int keyIndex,String pin,int timeout)
Inputs	keyIndex
	pin
	timeout
Outputs	None
Description	Use pinKey to encrypt data (NoCheck)
See also	onPinKey_TDES_Result

2.6.48 setSystemDateTime

Signature	void setSystemDateTime (String dataTime,int timeout)
Inputs	dataTime
	timeout
Outputs	None



Description	Set SystemDate Time
See also	onSetParamsResult

2.6.49 setMerchantID

Signature	void setMerchantID (String merchantID,int timeout)
Inputs	merchantID
	timeout
Outputs	None
Description	Set Merchant ID
See also	onSetParamsResult

2.6.50 setTerminalID

Signature	void setTerminalID (String terminalID,int timeout)
Inputs	terminalID
	timeout
Outputs	None
Description	Set Terminal ID
See also	onSetParamsResult

2.6.51 getMagneticTrackPlaintext

Signature	void getMagneticTrackPlaintext (int timeout)
Inputs	timeout
Outputs	None
Description	Get Magnetic Track Plaintext





|--|

2.6.52 getCardNo

Signature	void getCardNo ()
Inputs	None
Outputs	None
Description	Acquire cardPan (Magnetic stripe card)
See also	onGetCardNoResult

2.6.53 getIccCardNo

Signature	void getIccCardNo (String aterminalTime)
Inputs	aterminalTime: terminalTime
Outputs	None
Description	Acquire cardPan (IC, Magnetic stripe card)
See also	onGetCardNoResult
	onReturniccCashBack
	onRequestBatchData

2.6.54 powerOffNFC

Signature	void powerOffNFC (int timeout)
Inputs	timeout
Outputs	None
Description	Turn off the NFC transceiver
See also	onReturnPowerOffNFCResult



2.6.55 sendApduByNFC

Signature	void sendApduByNFC (String apduString,int timeout)
Inputs	apduString
	timeout
Outputs	None
Description	Send data to EMV card in raw APDU formats by nfc
See also	onReturnNFCApduResult

2.6.56 powerOnNFC

Signature	void powerOnNFC (int isEncrypt,int timeout)
Inputs	isEncrypt
	timeout
Outputs	None
Description	Turn on the NFC transceiver
See also	onReturnPowerOnNFCResult

2.6.57 cbc_mac

Signature	void cbc_mac (int keyLen, int algorithmType, int operatorType, String data, int timeout)
Inputs	keyLen
	algorithmType
	operatorType
	data
	timeout



Outputs	None
Description	With 3DES CBC mode calculate Mac
See also	onCbcMacResult

2.6.58 cbc_macNoCheck

Signature	void cbc_mac (int keyLen, int algorithmType, int operatorType, String data, int timeout)
Inputs	keyLen
	algorithmType
	operatorType
	data
	timeout
Outputs	None
Description	Calculate Mac (No Check)with 3DES CBC mode
See also	onCbcMacResult

2.6.59 inquireECQAmount

Signature	void inquireECQAmount (String transactionTime)
Inputs	transactionTime
Outputs	None
Description	Inquire IC card Electronic pocket balance
See also	onGetCardNoResult
	onReturniccCashBack
	onRequestBatchData

2.6.60 isIdle

Signature	Boolean isIdle ()
Inputs	None
Outputs	The status of pos is trading
Description	Flag indicate pos is working
See also	

2.6.61 anlysEmvIccData

Signature	void anlysEmvIccData (String tlv)
Inputs	tlv: type + length + value
Outputs	None
Description	Parsing ICC data
See also	

2.6.62 VIPOSBatchSendAPDU

Signature	void VIPOSBatchSendAPDU (LinkedHashMap <integer, string[]=""> batchAPDU)</integer,>
Inputs	batchAPDU
Outputs	None
Description	send Batch APDU command VIPOS protocol
See also	onReturnBatchSendAPDUResult

$2.6.63\ syn VIPOSB atch Send APDU$

Signature	void synVIPOSBatchSendAPDU (Boolean isOpen,



	LinkedHashMap <integer, string[]=""> batchAPDU)</integer,>
Inputs	isOpen: whether the signature is open or not
	batchAPDU: batchAPDU command
Outputs	None
Description	send Batch APDU command VIPOS protocal (synchronize mode)
See also	onReturnBatchSendAPDUResult

2.6.64 anlysEmvIccData_qf

Signature	void anlysEmvIccData_qf (String tlv)
Inputs	Tlv: type + length + value
Outputs	None
Description	Parsing ICC data qf
See also	

2.6.65 iccCashBack

Signature	void iccCashBack (String transactionTime, String random)
Inputs	transactionTime: transactionTime
	random: random character string
Outputs	None
Description	Specific customer IC card cach back trade
See also	onGetCardNoResult
	onReturniccCashBack
	onRequestBatchData



2.6.66 setPosPresent

Signature	void setPosPresent (boolean flag)
Inputs	flag: whether the POS device has exist
Outputs	None
Description	Flag for POS existence
See also	

2.6.67 setCardTradeMode

Signature	void setCardTradeMode (CardTradeMode
	cardTradeMode)
Inputs	cardTradeMode:
	enum{ONLY_INSERT_CARD//only IC
	ONLY_SWIPE_CARD//Only Magnetic stripe card
	SWIPE_INSERT_CARD//Magnetic stripe card and IC
	UNALLOWED_LOW_TRADE//the devices will remind to insert the card if the card are both chip and track }
Outputs	None
Description	Set Card Trade Mode, (Only Magnetic stripe card, only IC, Magnetic stripe card and IC)
See also	

2.6.68 setPinPadFlag

Signature	void setPinPadFlag (boolean flag)
Inputs	flag: whether the key signature exists or not
Outputs	None



Description	Device keypad flag
See also	

2.6.69 qposStatus

Signature	void qposStatus ()
Inputs	None
Outputs	None
Description	Check APP connect status
See also	

2.6.70 readBusinessCard

Signature	void readBusinessCard (String cardType, String address, int
	readLen, String cardPin, int vender_id, int timeout)
Inputs	cardTyp: card type
	address: The address of reading data
	readLen: The length of reading data
	cardPin: password of the card
	vender_id: The ID of the Vender
	timeout: overtime
Outputs	None
Description	Read Business Card
See also	onReadBusinessCardResult

2.6.71 writeBusinessCard

Signature	void writeBusinessCard (String cardType, String address,
	String data, String cardPin, boolean isUpdatePinFlag, int

No. of the Control of	7
	vender_id, int timeout)
Inputs	cardType: card type
	address: read-in address
	data : read-in data
	cardPin: password of the card
	isUpdatePinFlag: whether update the password or not
	vender_id: : The ID of the Vender
	timeout: overtime
Outputs	None
Description	write Business Card
See also	onWriteBusinessCardResult

2.6.72 syncReadBusinessCard

Signature	void syncReadBusinessCard (String cardType, String
	address, int readLen, String cardPin, int vender_id, int
	timeout)
Inputs	cardType: card type
	address: the address of reading data
	readLen: the length of reading data
	cardPin: the password of the card
	vender_id: the ID of the vender
	timeout: overtime
Outputs	None
Description	Read Business Card (synchronize mode)
See also	



2.6.73 syncWriteBusinessCard

world arm White Dropin and Could (Chain a soud Trans Chain
void syncWriteBusinessCard (String cardType, String
address, String data, String cardPin, boolean
isUpdatePinFlag, int vender_id, int timeout)
cardType: card type
address: the address of the read-in data
data: read-in the data
cardPin: the password of the card
isUpdatePinFlag: whether update the password or not
vender_id: the ID of the vender
timeout: overtime
None
Write Business Card (synchronize mode)

2.6.74 confirmAmount

Signature	void confirmAmount (String amount, int timeout)
Inputs	amount: payment amount
	timeout: overtime
Outputs	None
Description	Confirm Amount
See also	onConfirmAmountResult

2.6.75 setAmount

Signature	void setAmount (String amount, String
	cashbackAmount,String currencyCode,TransactionType

AND MADE OF THE PARTY OF THE PA	<u> </u>
	transactionType,boolean isPosDisplayAmount)
Inputs	amount: transaction amount
	cashbackAmount: enchashment amount
	currencyCode: currency code
	transactionType: transaction type
	isPosDisplayAmount: whether display on POS device or not
Outputs	None
Description	Set Amount
See also	

2.6.76 getPin

Signature	void getPin (int encryptType, int keyIndex, int maxLen, String typeFace, String cardNo, String data, int timeout)
Inputs	encryptType: default:0
	keyIndex: default:0
	maxLen: max length of pin
	typeface: display the font
	cardNo:the cardPan
	data: attached data
	timeout
Outputs	None
Description	Get Pin
See also	onReturnGetPinResult

2.6.77 doSetManagementKey

Signature	void doSetManagementKey(String publicKey)

Inputs	publicKey
Outputs	None
Description	Set the management publicKey
See also	onSetManagementKey

2.6.78 doSetBuzzerOperation

2.6.79 doSetBuzzerOperation

Signature	void doSetBuzzerOperation(int time)
Inputs	The buzzer ringing's time
Outputs	None
Description	Set the buzzer
See also	onSetBuzzerResult

2.6.80 doUpdateIPEKOperation

Signature	void doUpdateIPEKOperation(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String pinksn,String pinipek,String pinipekCheckvalue)
Inputs	ipekgroup,1字节trackksn10字节,trackipek16字 节,trackipekCheckvalue8字节,emvksn10字节,emvipek16字 节,emvipekCheckvalue8字节,pinksn10字节,pinipek16字 节,pinipekCheckvalue8字节
Outputs	None
Description	Update the IPEK
See also	onReturnUpdateIPEKResult



2.6.81 updateIPEKOperationByKeyType

Signature	void updateIPEKOperationByKeyType(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String pinksn,String pinipek,String pinipekCheckvalue)
Inputs	ipekgroup,1字节trackksn10字节,trackipek16字 节,trackipekCheckvalue8字节,emvksn10字节,emvipek16字 节,emvipekCheckvalue8字节,pinksn10字节,pinipek16字 节,pinipekCheckvalue8字节
Outputs	None
Description	Update single or multiple IPEK KEY
See also	onReturnUpdateIPEKResult

2.6.82 updateEmvAPP

Signature	void updateEmvAPP(EMVDataOperation operationType,String data)
Inputs	operationType:the type of operation.
	It's has six type.
	Clear:clear all AID
	Add:add one AID
	Delete:delete one AID
	AttainList:get the list of AID
	Update:update the AID
	getEmv:get the AID data.
	data:have different data according to the operationType
Outputs	None
Description	Update the EMV that id is AID



See also	onReturnUpdateEMVResult

2.6.83 updateEmvCAPK

void updateEmvCAPK(EMVDataOperation
operationType,String data)
operationType:the type of operation
It's has five type.
Clear:clear all RID
Add:add one RID
Delete:delete one RID
AttainList:get the list of RID
getEmv:get the RID data.
data:have different data according to the operationType
None
Update the EMV that id is RID
onReturnUpdateEMVRIDResult

2.6.84 getUpdateKey

Signature	void getUpdateKey()
Inputs	None
Outputs	None
Description	Get the update key
See also	onRequestUpdateKey

2.6.85 setSleepModeTime

Signature	void setSleepModeTime(int time)
Inputs	time:it's value in 10s and 1000s.
Outputs	None
Description	Set the sleepTime
See also	onSetSleepModeTime

2.6.86 generateTransportKey

void generateTransportKey(int timeout)
Timeout
None
Generate the transport key encrypted by the server's public key
onRequestGenerateTransportKey
onRequestGenerateTransportKey
result:390CE532205DE88E7F8B713527B4EA333ECC122
133D39725B5D72D012E36EA736A8865259713C2DEEE2
33E5BF7F940B4C4583C570C28C82ED3CB03D53919D0
BAA41BA90A9429B81AA1A9DFCB56DF4D350CCCF8
DDBA4D75DBA928CFFC33A4B1B9DFC580CBA34F1B
6E8752565622C606CE7D442248FE39DA551CC5481D53
F4539A
/com.dspread.demoui D/POS_SDK: buffer:
229279554278282164552639152755323120960999101795
343691155748798250587365222587650371312677802138
126191059275870574890923331610493022385892345779
459702394270879814244748352069111116056878737185
532071846202252684560390146332477338246621878771
054158830191791270694079345427843541353397122076
07202837129624038033



2021-03-16 19:26:12.909 9563-9563/com.dspread.demoui
D/POS_SDK: decrypted result:
F692C5AF86F8D4DB88B87BBDDF1BB5C6

2.6.87 readGasCard

Signature	void readGasCard(String cardType, String address, int readLen, int timeout)
Inputs	cardType: 0x00- FDW4442 0x01- FDW4428
	address: The address of reading data
	readLen: The length of reading data
	timeout: overtime
Outputs	None
Description	Read Gas Card
See also	onReadGasCardResult
Exmple data	GasCardData==06400400400200000040000000000000000000

2.6.88 writeGasCard

Signature	void writeGasCard(String cardType, String password, String address, int dataLen, String data, int timeout)
Inputs	cardType: 0x00- FDW4442 0x01- FDW4428
	password: FDW4428-2 bytes, FDW4442-3 bytes
	address: The address of writing data
	dataLen: The length of writing data
	data: The data of writing
	timeout: overtime
Outputs	None



Description	Write Gas Card
See also	onWriteGasCardResult
Exmple data	com.dspread.demoui.debug I/POS_SDK: WriteCard Success

2.6.89 updateIPEKByTransportKey

Signature	void updateIPEKByTransportKey(String ipekgroup,String trackksn,String trackipek,String trackipekCheckvalue,String emvksn,,String emvipek,String emvipekCheckvalue,String pinksn,String pinipek,String pinipekCheckvalue)
Inputs	Ipekgroup 1 byte, trackksn 10 byte, trackipek 16byte, trackipekCheckvalue 8byte, emvksn 10byte, emvipek 16byte, emvipekCheckvalue 8byte, pinksn 10byte, pinipek 16byte, pinipekCheckvalue 8byte
Outputs	None
Description	Use transport key to 3des ecb ipek plaintext and update ipek
See also	onReturnUpdateIPEKResult
Example	ipekgroup: 00ipekgroup: 09118012400705E00000trackksn:
data	09118012400705E00000trackipek:
	4B7F6768C67C85AE4B7F6768C67C85AEtrackipekcheck
	value: 82E13665B4624DF5emvksn:
	09118012400705E00000emvipek:
	4B7F6768C67C85AE4B7F6768C67C85Aeemvipekcheckv
	alue: 82E13665B4624DF5pinksn:
	09118012400705E00000pinipek:
	4B7F6768C67C85AE4B7F6768C67C85Aepinipekcheckval
	ue: 82E13665B4624DF5
	11959-11959/com.dspread.demoui D/POS_SDK:
	onReturnUpdateIPEKResult(Boolean arg0):true
	I.

2.6.90 updateWorkKeyByTransportKey

Signature	void updateWorkKeyByTransportKey(String pik,String
	pikCheck,String trk,String trkCheck,String mak,String

	makCheck ,int keyIndex,int timeout)
Inputs	Pinkey 16byte, pinkeyCheckValue 8byte, trackKey 16byte,
	trackKeyCheckValue 8byte, macKey 16byte,
	macKeyCheckValue 8byte, keyIndex, timeout
Outputs	None
Description	Use transport key to 3des ecb work key plaintext and update work key
See also	onRequestUpdateWorkKeyResult
Example	com.dspread.demoui D/POS_SDK: pinKey:
data	42F53F7DE22B029842F53F7DE22B0298pinKeyCheckVal
	ue: 82E13665B4624DF5trackKey:
	42F53F7DE22B029842F53F7DE22B0298trackKeyCheckV alue: 82E13665B4624DF5macey:
	42F53F7DE22B029842F53F7DE22B0298macKeyCheckVa
	lue: 82E13665B4624DF5
	2021-03-31 16:43:15.386 8510-8510/com.dspread.demoui
	D/POS_SDK:
	onRequestUpdateWorkKeyResult(UpdateInformationResult result):UPDATE_SUCCESS

2.6.91 sendCVV

Signature	Public boolean sendCVV(String cvvString)
Inputs	CVV String
Outputs	Result of call the sendCVV function
Description	Send CVV to reader
See also	None
Example data	10212-10212/com.dspread.demoui D/POS_SDK: onRequestOnlineProcess() 10212-10212/com.dspread.demoui D/POS_SDK: send cvv to pos

2.6.92 getEncryptedDataBlock

Signature	Hashtable <string, string=""> getEncryptedDataBlock(int</string,>
	keyIndex)
Inputs	keyIndex 0 ~ 9
Outputs	Hashtable of encrypted data block
Description	Get the corresponding data according to DUKPT, MK/SK
See also	None
Example	2021-03-31 16:47:18.807
data	10212-10212/com.dspread.demoui D/POS SDK: hashtable:
	{KCV=C80059, CRC32=AD1B58EB,
	KSN=09118012400705E00001,
	CardSensitiveData=47EC31C89D84234D32AE3F070DC62
	F295BFF6BF6F58B6164B5F0E93EA67ED900D47B94FD
	31C035FF08781A78F61E3D894DE7FE55EEBF3A5F0BA
	E66CD612391FEF3ABDA12666459B02E8EE6A7A69A03
	D1914E4677C38C4644CF4A552000D7D5B6A3AA10AC6
	1B88EE5}

2.6.93 displayQRCode

Signature	Public void displayQRCode(String customDisplayStr,
	String qrLink)
Inputs	customDisplayStr
	qrLink
Outputs	None
Description	Display QR code on the pos
See also	Public void onReturnDisplayQRCodeResult(Boolean result)
Example	com.dspread.demoui D/POS_SDK: customDisplayStr:
data	9999999999 qrLink: https://www.dspread.com
	com.dspread.demoui D/POS_SDK:
	onReturnDisplayQRCode result: success

2.6.94 operateLEDByType

Signature	Public void operateLEDByType (LEDType ledType,String colorValue,LEDDirection ledDirection, LEDStatus status,int lightTime, int lightOffTime, int blinksTimes)
Inputs	ledType: FIXED_COLOR/RGB_COLOR
	colorValue: if the ledType is FIXED_COLOR, you can fill in the below color value
	"0000": blue led
	"0001": yellow led
	"0002": green led
	"0003": red led
	if the ledType is RGB_COLOR, you can fill in the rgb565 format value, like 3666
	ledDirection: ALL/LEFT/RIGHT/UP/DOWN
	status: ON/OFF/BLINKS
	lightTime: the led light on time when the status param is "BLINKS"
	lightOffTime: the led light off time when the status param is "BLINKS"
	blinksTimes: the led blinks times when the status param is "BLINKS"
Outputs	None
Description	To operate the different color LED according
	type
See also	Public void onReturnOperateLEDByTypeResult(boolean result)



2.6.95 playBuzzerByType

Signature	playBuzzerByType(BuzzerType type,int buzzerOnTime, int
	buzzerOffTime, int buzzerTimes)
Inputs	type: COMMON/ PAYMENT SUCCESS/
	PAYMENT_ERROR/ PAIRING_SUCCESS
	COMMON: play the common type buzzer
	PAYMENT_SUCCESS: play the
	"PAYMENT_SUCCESS" buzzer that MP shared
	PAYMENT_ERROR: play the
	"PAYMENT_ERROR" buzzer that MP shared
	PAIRING_SUCCESS: play the "PAIRING_SUCCESS" buzzer that MP shared
	buzzerOnTime: the time of the buzzer on when type is "COMMON"
	buzzerOffTime: the time of the buzzer off when type is "COMMON"
	buzzerTimes: the times of buzzer play on when type is "COMMON"
Outputs	None
Description	To play different buzzer according type
See also	Public void onReturnPlayBuzzerByTypeResult(boolean result)
L	I .

2.6.96 sendNfcProcessResult

Signature	Public void sendNfcProcessResult(String tlv)
Inputs	Tlv(8A+91+71/72 tag)
Outputs	None
Description	Perform double tap

See also	Public void onRequestNFCBatchData(TransactionResult result, String tlv)
Example data	pos.sendNfcProcessResult("8A02303091100102030405060 70800000000000000072189F180400000001860F8C24000 00A8E081122334455667788");

2.6.97 getICCTag

Signature	public Hashtable <string, string=""> getICCTag(EncryptType encryType, int cardType, int tagCount, String tagArrStr)</string,>
Inputs	EncryptType:
	ENCRYPTED means the data is encrypted; PLAINTEXT means the data is plaintext;
	cardType:
	0 means the card type is contact;1 means the card type is contactless;
	tagCount: number of tags;
	tagArrStr: tags string;
Outputs	The tlv format data corresponding to the incoming tags
Description	This method is used in getting the tlv format data of the corresponding tags
See also	None
Example data	pos.getICCTag(QPOSService.EncryptType.ENCRYPTED, 1, 2, "5A57");

2.6.98 getEncryptedTrack2Data

Signature	Public Hashtable <string, string=""> getEncryptedTrack2Data()</string,>
Inputs	None

Outputs	Ksn and EncryptedTrack2data
Description	This method is used in getting ksn and EncryptedTrack2data
See also	None

2.6.99 lcdShowCustomDisplay

Signature	Public void lcdShowCustomDisplay(LcdModeAlign
	lcdModeAlign, String lcdFont, int timeout)
Inputs	LcdModeAlign: The alignment of the displayed content
	LCD_MODE_ALIGNCENTER;
	LCD_MODE_ALIGNLEFT;
	LCD_MODE_ALIGNRIGHT;
	lcdFont;
	timeout;
Outputs	None
Description	This method is used in setting the lcd display on the device screen
See also	protected void onLcdShowCustomDisplay(final boolean isSuccess)
Example data	pos.lcdShowCustomDisplay(LcdModeAlign.LCD_MODE_ALIGNCENTER, customDisplayString, 60);

2.6.100 setCustomLogoDisplay

Signature	Public void setCustomLogoDisplay(LcdModeAlign lcdModeAlign, String customLogoStr, int timeout)
Inputs	LcdModeAlign: The alignment of the displayed logo.
	LCD_MODE_ALIGNCENTER; LCD_MODE_ALIGNLEFT;

	spread Technology Co., Liu
	LCD_MODE_ALIGNRIGHT;
	customLogoStr: The logo you want to display on the main interface; If an empty string is passed in, it will shows the default logo; timeout;
Ontonto	Nama
Outputs	None
Description	This method is used in dynamic modify logo
See also	Public void onSetCustomLogoDisplay(boolean result)
Example	pos.setCustomLogoDisplay(LcdModeAlign.LCD_MODE_
data	ALIGNRIGHT, "WELCOME", 60)

2.6.101 getEncryptData

Signature	public Hashtable <string, string=""> getEncryptData()</string,>
Inputs	None
Outputs	RandomData, PAN, AESKey, isOnlinePin, pinTryLimit
Description	This method is used to get the data which used to encrypt PIN
See also	None
Example data	pos.getEncryptData()

2.6.102 sendCvmPin

Signature	public void sendCvmPin(String pinblock, boolean isEncrypted)
Inputs	pinblock: ISO format 4 pinblock; isEncrypted: True/False
Outputs	None



Description	This method is used to transfer pinblock to device
See also	None
Example data	pos.sendCvmPin();

2.6.103 initListener

Signature	public void initListener(Handler handler, QPOSServiceListener listener)
Inputs	Handler; listener
Outputs	None
Description	This method is used to init a listener
See also	None
Example data	pos.initListener(handler, listener);

2.6.104 openUsb

Signature	public void openUsb(UsbDevice usbDevice)
Inputs	usbDevice
Outputs	None
Description	This method is used to open USB
See also	None
Example data	pos.openUsb(usbDevice);

2.6.105 openUart

Signature	public void openUart()
Inputs	None
Outputs	None
Description	This method is used to open serial port
See also	None
Example data	pos.openUart();

2.6.106 bypassPin

Signature	public void bypassPin()
Inputs	None
Outputs	None
Description	This method is used to bypass PIN
See also	None
Example data	pos.bypassPin();

2.6.107 cancelPin

Signature	public void cancelPin()
Inputs	None
Outputs	None
Description	This method is used to cancal PIN
See also	None



_	
Example	pos.cancelPin();
data	

2.6.108 pinMapSync

Signature	public void pinMapSync(String datas, int timeout)
Inputs	PIN coordinates;
	time
Outputs	None
Description	This method is used to synchronize PIN coordinates to firmware for Smart POS
See also	None
Example	pos.pinMapSync(value, 20);
data	

2.6.109 updateKeyByTR_31

Signature	public void updateKeyByTR_31(String keyBlock, int timeout)
Inputs	TR31 keyBlock; time
Outputs	None
Description	This method is used to update IPEK
See also	None
Example data	pos.updateKeyByTR_31(data, 30);

2.6.110 updateEMVConfigByXml

Signature	public void updateEMVConfigByXml(String xmlContent)



Inputs	xmlContent
Outputs	None
Description	This method is used to update emv
See also	None
Example	pos.updateEMVConfigByXml(new
data	String(FileUtils.readAssetsLine("mini_emv_app_config.xml"

2.6.111 updatePosFirmware

Signature	public int updatePosFirmware(byte[] data, String deviceAddress)
Inputs	Firmware data; blueTootchAddress
Outputs	None
Description	This method is used to update firmware
See also	None
Example data	pos.updatePosFirmware(data, blueTootchAddress);

2.6.112 pollOnMifareCard

Signature	public void pollOnMifareCard(int timeout)
Inputs	time
Outputs	None
Description	This method is used to power on and detect Mifare card
See also	None
Example data	pos.pollOnMifareCard(20);



2.6.113 authenticateMifareCard

Signature	public void authenticateMifareCard(MifareCardType cardType, String keyType, String block, String keyValue, int timeout)
Inputs	MifareCardType cardType: CLASSIC、UITRALIGHT keyType: Key A、Key B block keyValue time
Outputs	None
Description	This method is used to verify Key A/B
See also	None
Example data	pos.authenticateMifareCard(QPOSService.MifareCardType. <i>CLASSIC</i> , keyclass, blockaddr, keyValue, 20);

2.6.114 operateMifareCardData

Signature	public void operateMifareCardData(MifareCardOperationType type, String block, String data, int timeout)
Inputs	MifareCardType cardType: CLASSIC、UITRALIGHT block data time
Outputs	None
Description	This method is used to add/reduce/restore Mifare card
See also	None
Example	pos. operate Mifare Card Data (QPOSS ervice. Mifare Card Operators)
data	ionType. ADD, blockaddr, cardData, 20);

2.6.115 readMifareCard

Signature	pos.readMifareCard(MifareCardType cardType,String block,int timeout)
Inputs	MifareCardType cardType: CLASSIC、UITRALIGHT block time
Outputs	None
Description	This method is used to read Mifare card
See also	None
Example data	pos.readMifareCard(QPOSService.MifareCardType. <i>CLASSI C</i> , blockaddr, 20);

2.6.116 writeMifareCard

Signature	public void writeMifareCard(MifareCardType cardType, String block, String data, int timeout)
Inputs	MifareCardType cardType: CLASSIC、UITRALIGHT block data time
Outputs	None
Description	This method is used to write Mifare card
See also	None
Example data	pos.writeMifareCard(QPOSService.MifareCardType. <i>CLASSI C</i> , blockaddr, cardData, 20);

2.6.117 finishMifareCard

Signature	public void finishMifareCard(int timeout)
-----------	---

Inputs	time
Outputs	None
Description	This method is used to finish the operation for Mifare card
See also	None
Example data	pos.finishMifareCard(20);

2.6.118 fastReadMifareCardData

Signature	public void fastReadMifareCardData(String startBlock, String endBlock, int timeout)
Inputs	startBlock;
	endBlock;
	time
Outputs	None
Description	This method is used to read Mifare Ultralight card
See also	None
Example	pos.fastReadMifareCardData(startAddr, endAddr, 20);
data	

2.6.119 getDeviceECCPublicKey

Signature	public void getDeviceECCPublicKey(int timeout)
Inputs	time
Outputs	None
Description	get the device ECC pulic key value
See also	None
example	pos.getDeviceECCPublicKey(10);



2.6.120 updateServerECCPublicKey

Signature	public void updateServerECCPublicKey(String serverPublic KeyStr, int timeout)
Inputs	serverPublicKeyStr: "30819beed29" timeout :time
Outputs	None
Description	update the server ECC pulic key value
See also	None
example	pos.updateServerECCPublicKey("30819beed29",10);

2.6.121 updateKeyByTR_31

Signature	public void updateKeyByTR_31(int keyIndex, String ksn, St ring keyBlock)
Inputs	keyIndex: 0 ksn:"FFFFFFFF1045200000001E" keyBlock:"D0112B1AX00E000092D825CC86CDB6167B0 1FAD5E038575C0D73AC7E485FC39543B5520D54A4BE FBEE7E7889531091855303EFB1CD12CFD8"
Outputs	None
Description	update the TR31 key block and ksn
See also	None
example	pos.updateKeyByTR_31(0,"FFFFFFFFF1045200000001E ","D0112B1AX00E000092D825CC86CDB6167B01FAD5E 038575C0D73AC7E485FC39543B5520D54A4BEFBEE7E 7889531091855303EFB1CD12CFD8")



2.6.122 calculateMacWithKey

Signature	public Hashtable <string,string> calculateMacWithKey(Key Part keyPart, CryptMode cryptMode, KeyManager keyManager, KeyType keyType, String data, boolean isAddKSN)</string,string>
Inputs	keyPart: QPOSService.KeyPart.KEY_ALL cryptMode: QPOSService.CryptMode.AES_CBC_ENCRYPT keyManager:QPOSService.KeyManager.DUKPT_KEY keyType: QPOSService.KeyType.TRACK_KEY data:"2222222222222222" isAddKSN:false
Outputs	None
Description	Use different key to calculate mac
See also	None
example	Hashtable <string,string> result= pos.calculateMacWithKey (QPOSService.KeyPart.KEY_ALL, QPOSService.CryptMo de.AES_CBC_ENCRYPT, QPOSService.KeyManager.DU KPT_KEY, QPOSService.KeyType.TRACK_KEY,"222222 222222222222;,false) String encryptedData = result.get("result") String ksn = result.get("ksn")</string,string>

2.6.123 getEncryptedDataWithTag

Signature	public Hashtable <string,string> getEncryptedDataWithTag(String tagName, int cardType, CryptMode cryptMode)</string,string>
Inputs	tagName: tag name, ex: 57
	cardType: 0 is IC, 1 is NFC
	cryptMode:



	QPOSService.CryptMode.AES_CBC_ENCRYPT
Outputs	None
Description	get the certain encrypted tag value
See also	None
example	Hashtable <string,string> data = pos.getEncryptedDataWith Tag("57",0, QPOSService.CryptMode.AES_CBC_ENCRYP T);</string,string>

2.7 Delegate Methods Reference

2.7.1 onRequestWaitingUser

Signature	void onRequestWaitingUser()
Inputs	None
Outputs	None
Description	In the callback to waiting user operating
See also	

2.7.2 onQposIdResult

Signature	void onQposIdResult (Hashtable <string, string=""> posIdTable)</string,>
Inputs	Hashtable <string, string=""> posIdTable</string,>
Outputs	None
Description	Callback of pos id response
See also	getQposId()



$2.7.3\ on QposInfoResult$

Signature	void onQposInfoResult (Hashtable <string, string=""> posIdTable)</string,>
Inputs	Hashtable <string, string=""> posIdTable</string,>
Outputs	None
Description	Callback of pos info response
See also	getQposInfo()

2.7.4 onDoTradeResult

Signature	void onDoTradeResult (DoTradeResult result,
	Hashtable <string, string=""> decodeData)</string,>
Inputs	DoTradeResult result
	Hashtable <string, string=""> decodeData</string,>
Outputs	None
Description	Callback of track data response
See also	doTrade()
	doEmvApp(EmvOption emvOption)

2.7.5 onRequestSetAmount

Signature	void onRequestSetAmount ()
Inputs	None
Outputs	None
Description	The callback of request user set amount
See also	doTrade()
	setAmount(String amount, String cashbackAmount, String

currencyCode, TransactionType transactionType)

2.7.6 onRequestSelectEmvApp

Signature	void onRequestSelectEmvApp (ArrayList <string> appList)</string>
Inputs	ArrayList <string> appList</string>
Outputs	None
Description	Callback method of request user to select emv app
See also	doTrade()
	selectEmvApp(int index)
	cancelSelectEmvApp()

2.7.7 onRequestIsServerConnected

Signature	void onRequestIsServerConnected ()
Inputs	None
Outputs	None
Description	In the method judge the network state
See also	doTrade()
	isServerConnected(boolean isConnected)

2.7.8 onRequestFinalConfirm

Signature	void onRequestFinalConfirm ()
Inputs	None
Outputs	None
Description	Final confirm amount response



See also	doTrade()
	finalConfirm (boolean isConfirmed)

2.7.9 onRequestOnlineProcess

Signature	void onRequestOnlineProcess (String tlv)
Inputs	Tlv type+length+value
Outputs	None
Description	Response of request data to server
See also	doTrade()
	anlysEmvIccData ()
	sendOnlineProcessResult()

$2.7.10\,on Request Time$

Signature	void onRequestTime ()
Inputs	None
Outputs	None
Description	Set terminal time response
See also	doTrade()
	sendTime()

$2.7.11\,on Request Transaction Result$

Signature	void onRequestTransactionResult (TransactionResult transactionResult)
Inputs	None
Outputs	None



Description	Transaction response
See also	doTrade()

$2.7.12\,on Request Transaction Log$

Signature	void onRequestTransactionResult (String tlv)
Inputs	Tlv type+length+value
Outputs	None
Description	reserve
See also	

$2.7.13\,on Request Batch Data$

Signature	void onRequestBatchData (String tlv)
Inputs	Tlv type+length+value
Outputs	None
Description	Response of ICC transactions
See also	doTrade()

$2.7.14\,on Request Q pos Connected$

Signature	void onRequestQposConnected ()
Inputs	None
Outputs	None
Description	Callback of connected success
See also	connectBluetoothDevice()



$2.7.15\,on Request Q pos D is connected$

Signature	void onRequestQposDisconnected ()
Inputs	None
Outputs	None
Description	Callback of disconnect
See also	disconnectBT()

$2.7.16\,on Request No Qpos Detected$

Signature	void onRequestNoQposDetected ()
Inputs	None
Outputs	None
Description	Callback of connected fail
See also	connectBluetoothDevice()

2.7.17 on Error

Signature	void onError (Error errorState)
Inputs	enum Error errorState error type information
Outputs	None
Description	SDK error information response
See also	

2.7.18 on Request Display

Signature	void onRequestDisplay (Display displayMsg)

Inputs	enum Display displayMsg: display content
Outputs	None
Description	Notify the terminal displays the current related content
See also	

$2.7.19\, on Request Update Work Key Result$

Signature	void onRequestUpdateWorkKeyResult
	(UpdateInformationResult result)
Inputs	enum UpdateInformationResult result
Outputs	None
Description	Update work key response
See also	udpateWorkKey()

2.7.20 on Get Card No Result

Signature	void onGetCardNoResult (String result)
Inputs	String result of the cardPan.
Outputs	None
Description	Get Card pan response
See also	getCardNo()

2.7.21 onReturnReversalData

Signature	void onReturnReversalData (String tlv)
Inputs	tlv: type+length+value
Outputs	None
Description	ic card reversal data response



See also	doEmvApp()

2.7.22 on Return Get Pin Result

Signature	void onReturnGetPinResult (Hashtable <string, string=""></string,>
	result)
Inputs	Hashtable <string, string=""> result 包含pinKsn 和 pinBlock</string,>
Outputs	None
Description	Get pin response
See also	getPin()

2.7.23 onReturnPowerOnIccResult

Signature	void onReturnPowerOnIccResult (boolean result, String ksn, String atr, int atrLen)
Inputs	result: true – success, false – failure ksn: EMV KSN used for encryption of ATR data and APDU data. If ksn is all FF, then ATR and APDU data are not encrypted. atr: data returned in ATR atrLen: length of the ATR data
Outputs	None
Description	Respond to powerOnIcc. If ksn is all FF, then ATR and APDU are not encrypted. Otherwise, ATR and APDU are encrypted by the key derived from EMV KSN.
See also	powerOnIcc()

2.7.24 on Return Power Off Icc Result

Signature	void onReturnPowerOffIccResult (boolean result)

Inputs	result: true – success, false – failure
Outputs	None
Description	Respond to powerOffIcc.
See also	powerOffIcc()

$2.7.25\,on Return Apdu Result$

Signature	void onReturnApduResult (boolean isSuccess, String apdu,
	int apduLen)
Inputs	isSuccess: true– success, false – failure
	apdu: data returned
	apduLength: length of the apdu data
Outputs	None
Description	Return data in response to the level 1 EMV method
	sendApdu. If
	the apdu data are encrypted, the KSN returned after the
	powerOnIcc command is used for encryption.
See also	sendApduByNFC()
	sendApdu()

$2.7.26\,on Return Set Sleep Time Result$

Signature	void onReturnSetSleepTimeResult (boolean isSuccess)
Inputs	isSuccess: true- success, false - failure
Outputs	None
Description	The response of set device sleep time
See also	setPosSleepTime()

$2.7.27\,on Request Calculate Mac$

Signature	void onRequestCalculateMac (String calMac)
Inputs	calMac: calculate mac result data

Outputs	None
Description	Calculate mac response method
See also	doCalculateMac()
	doDoubleMac()
	doSingleMac()

$2.7.28\,on Return Custom Config Result$


Signature	void onReturnCustomConfigResult (boolean isSuccess,
	String result)
Inputs	isSuccess: true– success, false – failure
	result : data of result
Outputs	None
Description	Save Emv Config response
See also	updateEmvConfig()

$2.7.29\,on Return Set Master Key Result$

Signature	void onReturnSetMasterKeyResult (boolean isSuccess)
Inputs	isSuccess: true- success, false - failure
Outputs	None
Description	Set masterKey response
See also	setMasterKey()

2.7.30 on Return Batch Send APD UResult

Signature	void onReturnBatchSendAPDUResult
	(LinkedHashMap <integer, string=""> batchAPDUResult)</integer,>
Inputs	LinkedHashMap <integer, string=""> batchAPDUResult</integer,>
Outputs	None



Description	Response of batch APDU instruction execution
See also	DoVIPOSBatchSendApdu()

2.7.31 onReturniccCashBack

Signature	void onReturniccCashBack (Hashtable <string, string=""> result)</string,>
Inputs	Hashtable <string, string=""> result</string,>
Outputs	None
Description	Cash back response (Special needs)
See also	iccCashBack()
	getIccCardNo()
	inquireECQAmount()

$2.7.32\,on Update Pos Firmware Result$

Signature	void
	onUpdatePosFirmwareResult(UpdateInformationResult
	result)
Inputs	enum UpdateInformationResult result
Outputs	None
Description	Response of upgrade the firmware
See also	updatePosFirmware()

$2.7.33\,on Return Download Rsa Public Key$

Signature	void onReturnDownloadRsaPublicKey (HashMap <string,< th=""></string,<>
	String> map)
Inputs	HashMap <string, string=""> map</string,>
Outputs	None



Description	Callback of encrypt random number using RSA public key
See also	downloadRsaPublicKey()

$2.7.34\,on Pin Key_TDES_Result$

Signature	void onPinKey_TDES_Result (String result)
Inputs	result: data of response
Outputs	None
Description	Response of 3DES encrypt pin
See also	pinKey_TDES()

$2.7.35\,on Update Master Key Result$

Signature	void onUpdateMasterKeyResult (boolean result,
	Hashtable <string, string=""> resultTable)</string,>
Inputs	boolean result
	Hashtable <string, string=""> resultTable</string,>
Outputs	None
Description	Update masterKey response
See also	updateMasterKeyRandom()
	updateMasterKey()

$2.7.36\,on EmvICC Exception Data$

Signature	void onEmvICCExceptionData (String tlv)
Inputs	Tlv: type+length+value
Outputs	None
Description	Emv ICC Exception response
See also	

$2.7.37\, on Set Management Key$

Signature	void onSetManagementKey (boolean b)
Inputs	b:the flag of the key if is setted successful
Outputs	None
Description	The response of SetManagementKey
See also	

2.7.38 on SetBuzzerResult

Signature	void onSetBuzzerResult(boolean b)
Inputs	b:the flag of the buzzer if is setted successful
Outputs	None
Description	The response of SetBuzzerr
See also	

$2.7.39\,on Return Update IPEKR esult$

Signature	void onReturnUpdateIPEKResult(boolean b)
Inputs	None
Outputs	b:the flag to checking updating IPEK successful or not
Description	The response of updateIPEK
See also	

$2.7.40\,on Return Update EMVR esult$

Signature	void onReturnUpdateEMVResult(boolean isSuccess)
Inputs	isSuccess:the flag of updating EMV that id is AID if is



	successful
Outputs	None
Description	The response of updateEMV that id is AID
See also	

$2.7.41\,on Return Update EMVRIDRe sult$

Signature	void onReturnUpdateEMVRIDResult(boolean isSuccess)
Inputs	isSuccess:the flag of updating EMV that id is RID if is successful
Outputs	None
Description	The response of updateEMV that id is RID
See also	

$2.7.42\,on Request Device Scan Finished$

Signature	void onRequestDeviceScanFinished()
Inputs	None
Outputs	None
Description	The response of scan device finished
See also	

2.7.43 onDeviceFound

Signature	void onDeviceFound(BluetoothDevice arg0)
Inputs	Arg0: is the bluetoothDevice that searched
Outputs	None
Description	The response of scanQpos2mode



See also	The method of scanQpos2mode

$2.7.44\, on Request Update Key$

Signature	void onRequestUpdateKey(String result)
Inputs	The updated key
Outputs	None
Description	The response of getUpdateKey
See also	getUpdateKey

$2.7.45\,on Set Sleep Mode Time$

Signature	void onSetSleepModeTime(boolean isSuccess)
Inputs	isSuccess:the flag of setting sleepTime if is successful
Outputs	None
Description	The response of setSleepModeTime
See also	

$2.7.46\, on Request Generate Transport Key$

Signature	void onRequestGenerateTransportKey (final Hashtable result)
Inputs	None
Outputs	Result include two parameter for transportKey and checkValue,details as below: transportKey: transport key encrypted by the server's public key



	checkValue: transport key encrypted 8 byte 0
Description	The response of generateTransportKey
See also	

$2.7.47\,on Read Gas Card Result$

Signature	void onReadGasCardResult (boolean b, String result)
Inputs	None
Outputs	Return the data read by the gas card
Description	The response of readGasCard
See also	

2.7.48 on WriteGasCardResult

Signature	void onWriteGasCardResult (final boolean b)
Inputs	None
Outputs	Returns the status of write gas card
Description	The response of writeGasCard
See also	

$2.7.49\,on Return Operate LED By Type Result$

Signature	void onReturnOperateLEDByTypeResult (final boolean
	result)
Inputs	result: true means operate led success
	false means operate led failed
Outputs	None

Description	Returns the result of operate LED
See also	

$2.7.50\, on Return Play Buzzer By Type Result$

Signature	void onReturnPlayBuzzerByTypeResult (final boolean
	result)
Inputs	result: true means play buzzer success
	false means play buzzer failed
Outputs	None
Description	Returns the result of play buzzer
See also	

$2.7.51\,on Return Display QR Code Result$

Signature	void onReturnDisplayQRCodeResult (final boolean b)
Inputs	None
Outputs	Returns the result of display QR code
Description	The response of displayQRCode
See also	

2.7.52 onReturnNFCBatchData

Signature	void onRequestNFCBatchData(TransactionResult result,
	String tlv)
Inputs	None
Outputs	Returns the result of double tap and tlv data
Description	The callback of sendNfcProcessResult
See also	

$2.7.53\,on Lcd Show Custom Display$

Signature	void onLcdShowCustomDisplay(final boolean result)
Inputs	None
Outputs	Returns the result of set custom lcd show display
Description	The callback of lcdShowCustomDisplay
See also	

$2.7.54\,on Set Custom Logo Display$

Signature	void onSetCustomLogoDisplay(boolean result)
Inputs	None
Outputs	Returns the result of custom logo setting: true means success; false means failure;
Description	The callback of onSetCustomLogoDisplay
See also	

2.7.55 on Search Mifare Card Result

Signature	void onSearchMifareCardResult(Hashtable <string, string=""> cardData);</string,>
Inputs	None
Outputs	Returns the result of searching Mifare Card:
	true means success;
	false means failure;
Description	The callback of onSearchMifareCardResult



See also	pos.pollOnMifareCard()

$2.7.56\, on Verify Mifare Card Result$

Signature	void onVerifyMifareCardResult(boolean flag);
Inputs	None
Outputs	Returns the result of verifying Mifare Card: true means success; false means failure;
Description	The callback of onVerifyMifareCardResult
See also	pos.authenticateMifareCard()

$2.7.57\, on Operate Mifare Card Result$

Signature	void onOperateMifareCardResult(Hashtable <string, string=""></string,>
	flag);
Inputs	None
Outputs	Returns the result of operating Mifare Card:
	true means success;
	false means failure;
Description	The callback of onOperateMifareCardResult
See also	pos.operateMifareCardData()

$2.7.58\,on Read Mifare Card Result$

Signature	void onReadMifareCardResult(Hashtable <string, string=""></string,>
	flag);
Inputs	None



Outputs	Returns the result of reading Mifare Card:
	true means success;
	false means failure;
Description	The callback of onReadMifareCardResult
See also	pos.readMifareCard()

2.7.59 on Write Mifare Card Result

Signature	void onWriteMifareCardResult(boolean flag);
Inputs	None
Outputs	Returns the result of writing Mifare Card: true means success; false means failure;
Description	The callback of onWriteMifareCardResult
See also	pos.writeMifareCard()

2.7.60 on Finish Mifare Card Result

Signature	void onFinishMifareCardResult(boolean flag);
Inputs	None
Outputs	Returns the result of finishing Mifare Card: true means success; false means failure;
Description	The callback of onFinishMifareCardResult
See also	pos.finishMifareCard()



$2.7.61\,get Mifare Fast Read Data$

Signature	void getMifareFastReadData(Hashtable <string, string=""></string,>
	flag);
Inputs	None
Outputs	Returns the result of getting MifareFastReadData: true means success;
	false means failure;
Description	The callback of getMifareFastReadData
See also	pos.fastReadMifareCardData()

$2.7.62\,on Return update Key By TR_31 Result$

Signature	void onReturnupdateKeyByTR_31Result(boolean result,
	String keyType);
Inputs	None
Outputs	Returns the result of updating key by TR_31:
	true means success;
	false means failure;
Description	The callback of onReturnupdateKeyByTR_31Result
See also	pos.updateKeyByTR_31()

$2.7.63\ on Qpos Get Device ECC Public Key Result$

Signature	public void onQposGetDeviceECCPublicKeyResult(String devicePublicKey)
Inputs	None
Outputs	devicePublicKey: device PublicKey

roid

Description	The callback of onQposGetDeviceECCPublicKeyResult
See also	pos.getDeviceECCPublicKey(10);

$2.7.64\ on Qpos Update Server ECC Public Key Result$

Signature	public void onQposUpdateServerECCPublicKeyResult(boolean result)
Inputs	None
Outputs	result: true or false
Description	The callback of onQposUpdateServerECCPublicKeyResult
See also	pos.updateServerECCPublicKey("30819beed29",10);

$2.7.65\ on Return Update Key By TR_31 Result$

Signature	public void onReturnUpdateKeyByTR_31Result(boolean result)
Inputs	None
Outputs	result: true or false
Description	The callback of onReturnUpdateKeyByTR_31Result
Call back	public void onReturnUpdateKeyByTR_31Result(boolean result)
See also	pos.updateKeyByTR_31(0,"FFFFFFFFF1045200000001E","D0112B1 AX00E000092D825CC86CDB6167B01FAD5E038575C0D73AC7E48 5FC39543B5520D54A4BEFBEE7E7889531091855303EFB1CD12CF D8")