KVM-BOARD / FRISK case fit check

Actual size (1:1). Print at 100% - do not use 'fit to page'.

If the 100 mm scale at the bottom does not measure 100 mm, the print is scaled.

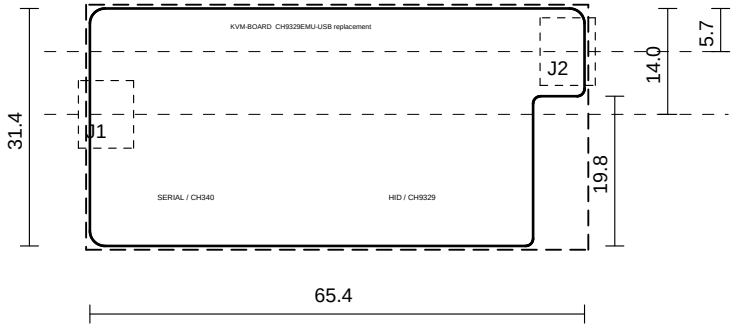

board outline (solid, 1:1)

case tray 66.4 x 32.4 (dashed)

connector centre line

100 mm scale check (mm)



HOW TO CHECK

1. Print this page at 100% / 'Actual size'.
2. Measure the 100 mm scale below with a steel rule.
3. Cut out the solid outline and drop it into the tray.
4. The dashed line is the tray: 66.4 x 32.4 mm; the board is 0.5 mm smaller on every side.
5. The notch (6.8 x 19.8 mm) must clear the latch island in the lower-right corner of the tray.
6. J1 (left) and J2 (right) mouths protrude 1.5 mm and 1.4 mm past the board edge. Cut 10 x 4 mm openings through the whole wall, 1.4 to 5.1 mm above the tray floor.
7. Chamfer the outside of each opening by about 0.3 mm, and centre the board in the tray.
8. There are no mounting holes: use tape or foam, with about 1 mm spacer under the board.

DIMENSIONS (mm)

board	65.4 x 31.4 x 1.6
case tray	66.4 x 32.4
case outer	69 x 37, tray depth 9.8
J1 centre	14.0 from the top edge
J2 centre	5.7 from the top edge
mouth	J1 1.5 / J2 1.4 mm past the edge
notch	6.8 x 19.8, lower-right

Generated by scripts/gen_print_sheet.py from kvm-board.kicad_pcb