GravityModel

5.1

Generated by Doxygen 1.8.14

## **Contents**

| 1 | Mod  | ule Index                            | 1  |
|---|------|--------------------------------------|----|
|   | 1.1  | Modules                              | 1  |
| 2 | Nam  | espace Index                         | 3  |
|   | 2.1  | Namespace List                       | 3  |
| 3 | Hier | archical Index                       | 5  |
|   | 3.1  | Class Hierarchy                      | 5  |
| 4 | Data | Structure Index                      | 7  |
|   | 4.1  | Data Structures                      | 7  |
| 5 | File | Index                                | 9  |
|   | 5.1  | File List                            | 9  |
| 6 | Mod  | ule Documentation                    | 11 |
|   | 6.1  | Models                               | 11 |
|   |      | 6.1.1 Detailed Description           | 11 |
|   | 6.2  | Environment                          | 12 |
|   |      | 6.2.1 Detailed Description           | 12 |
|   | 6.3  | Gravity                              | 13 |
|   |      | 6.3.1 Detailed Description           | 14 |
|   |      | 6.3.2 Macro Definition Documentation | 14 |
|   |      | 6.3.2.1 PATH                         | 14 |

ii CONTENTS

| 7 | Nam  | nespace   | Docume     | ntation                            | 15 |
|---|------|-----------|------------|------------------------------------|----|
|   | 7.1  | jeod N    | amespace   | Reference                          | 15 |
|   |      | 7.1.1     | Detailed   | Description                        | 16 |
|   |      | 7.1.2     | Variable   | Documentation                      | 16 |
|   |      |           | 7.1.2.1    | speed_of_light_sq                  | 16 |
| 8 | Data | a Structi | ure Docur  | mentation                          | 17 |
|   | 8.1  | jeod::G   | GravityCon | trols Class Reference              | 17 |
|   |      | 8.1.1     | Detailed   | Description                        | 19 |
|   |      | 8.1.2     | Construc   | ctor & Destructor Documentation    | 19 |
|   |      |           | 8.1.2.1    | GravityControls() [1/2]            | 19 |
|   |      |           | 8.1.2.2    | ~GravityControls()                 | 19 |
|   |      |           | 8.1.2.3    | GravityControls() [2/2]            | 19 |
|   |      | 8.1.3     | Member     | Function Documentation             | 19 |
|   |      |           | 8.1.3.1    | accel_mag_less_ptr()               | 19 |
|   |      |           | 8.1.3.2    | calc_nonspherical()                | 20 |
|   |      |           | 8.1.3.3    | calc_relativistic()                | 20 |
|   |      |           | 8.1.3.4    | calc_spherical()                   | 22 |
|   |      |           | 8.1.3.5    | gravitation() [1/2]                | 22 |
|   |      |           | 8.1.3.6    | gravitation() [2/2]                | 23 |
|   |      |           | 8.1.3.7    | initialize_control()               | 23 |
|   |      |           | 8.1.3.8    | operator=()                        | 24 |
|   |      |           | 8.1.3.9    | reset_control()                    | 24 |
|   |      | 8.1.4     | Friends /  | And Related Function Documentation | 24 |
|   |      |           | 8.1.4.1    | init_attrjeodGravityControls       | 24 |
|   |      |           | 8.1.4.2    | InputProcessor                     | 25 |
|   |      | 8.1.5     | Field Do   | cumentation                        | 25 |
|   |      |           | 8.1.5.1    | active                             | 25 |
|   |      |           | 8.1.5.2    | battin_method                      | 25 |
|   |      |           | 8.1.5.3    | body                               | 25 |
|   |      |           | 8.1.5.4    | gradient                           | 26 |

CONTENTS

|     |         | 8.1.5.5      | grav_accel                         | 26 |
|-----|---------|--------------|------------------------------------|----|
|     |         | 8.1.5.6      | grav_accel_magsq                   | 26 |
|     |         | 8.1.5.7      | grav_grad                          | 26 |
|     |         | 8.1.5.8      | grav_manager                       | 27 |
|     |         | 8.1.5.9      | grav_pot                           | 27 |
|     |         | 8.1.5.10     | perturbing_only                    | 27 |
|     |         | 8.1.5.11     | relativistic                       | 27 |
|     |         | 8.1.5.12     | skip_spherical                     | 28 |
|     |         | 8.1.5.13     | source_name                        | 28 |
|     |         | 8.1.5.14     | spherical                          | 28 |
|     |         | 8.1.5.15     | subscribed_to_inertial             | 28 |
|     |         | 8.1.5.16     | subscribed_to_pfix                 | 29 |
| 8.2 | jeod::G | GravityInte  | gFrame Class Reference             | 29 |
|     | 8.2.1   | Detailed     | Description                        | 30 |
|     | 8.2.2   | Construc     | ctor & Destructor Documentation    | 30 |
|     |         | 8.2.2.1      | GravityIntegFrame()                | 30 |
|     |         | 8.2.2.2      | ~GravityIntegFrame()               | 30 |
|     | 8.2.3   | Friends A    | And Related Function Documentation | 30 |
|     |         | 8.2.3.1      | init_attrjeodGravityIntegFrame     | 30 |
|     |         | 8.2.3.2      | InputProcessor                     | 30 |
|     | 8.2.4   | Field Doo    | cumentation                        | 30 |
|     |         | 8.2.4.1      | accel                              | 31 |
|     |         | 8.2.4.2      | is_third_body                      | 31 |
|     |         | 8.2.4.3      | pos                                | 31 |
|     |         | 8.2.4.4      | ref_frame                          | 31 |
|     |         | 8.2.4.5      | time                               | 32 |
| 8.3 | jeod::G | GravityInter | raction Class Reference            | 32 |
|     | 8.3.1   | Detailed     | Description                        | 33 |
|     | 8.3.2   | Construc     | ctor & Destructor Documentation    | 33 |
|     |         | 8.3.2.1      | GravityInteraction() [1/2]         | 33 |

iv CONTENTS

|     |         | 8.3.2.2    | ~GravityInteraction()              | 33 |
|-----|---------|------------|------------------------------------|----|
|     |         | 8.3.2.3    | GravityInteraction() [2/2]         | 34 |
|     | 8.3.3   | Member     | Function Documentation             | 34 |
|     |         | 8.3.3.1    | add_control()                      | 34 |
|     |         | 8.3.3.2    | initialize_controls()              | 34 |
|     |         | 8.3.3.3    | operator=()                        | 34 |
|     |         | 8.3.3.4    | remove_control()                   | 35 |
|     |         | 8.3.3.5    | reset_controls()                   | 35 |
|     |         | 8.3.3.6    | set_integ_frame()                  | 35 |
|     |         | 8.3.3.7    | sort_controls()                    | 36 |
|     | 8.3.4   | Friends /  | And Related Function Documentation | 36 |
|     |         | 8.3.4.1    | init_attrjeodGravityInteraction    | 36 |
|     |         | 8.3.4.2    | InputProcessor                     | 36 |
|     | 8.3.5   | Field Do   | cumentation                        | 36 |
|     |         | 8.3.5.1    | grav_accel                         | 36 |
|     |         | 8.3.5.2    | grav_controls                      | 37 |
|     |         | 8.3.5.3    | grav_grad                          | 37 |
|     |         | 8.3.5.4    | grav_pot                           | 37 |
|     |         | 8.3.5.5    | integ_frame_index                  | 38 |
| 8.4 | jeod::G | GravityMan | nager Class Reference              | 38 |
|     | 8.4.1   | Detailed   | Description                        | 39 |
|     | 8.4.2   | Construc   | ctor & Destructor Documentation    | 39 |
|     |         | 8.4.2.1    | GravityManager() [1/2]             | 39 |
|     |         | 8.4.2.2    | ~GravityManager()                  | 39 |
|     |         | 8.4.2.3    | GravityManager() [2/2]             | 39 |
|     | 8.4.3   | Member     | Function Documentation             | 39 |
|     |         | 8.4.3.1    | add_grav_source()                  | 39 |
|     |         | 8.4.3.2    | find_grav_source()                 | 40 |
|     |         | 8.4.3.3    | get_bodies()                       | 40 |
|     |         | 8.4.3.4    | gravitation() [1/2]                | 41 |
|     |         |            |                                    |    |

CONTENTS

|     |         | 8.4.3.5    | gravitation() [2/2]                | 41 |
|-----|---------|------------|------------------------------------|----|
|     |         | 8.4.3.6    | initialize_model()                 | 42 |
|     |         | 8.4.3.7    | initialize_state()                 | 42 |
|     |         | 8.4.3.8    | operator=()                        | 43 |
|     | 8.4.4   | Friends A  | And Related Function Documentation | 43 |
|     |         | 8.4.4.1    | init_attrjeodGravityManager        | 43 |
|     |         | 8.4.4.2    | InputProcessor                     | 43 |
|     | 8.4.5   | Field Do   | cumentation                        | 43 |
|     |         | 8.4.5.1    | sources                            | 43 |
| 8.5 | jeod::G | GravityMes | ssages Class Reference             | 44 |
|     | 8.5.1   | Detailed   | Description                        | 44 |
|     | 8.5.2   | Construc   | ctor & Destructor Documentation    | 44 |
|     |         | 8.5.2.1    | GravityMessages() [1/2]            | 45 |
|     |         | 8.5.2.2    | GravityMessages() [2/2]            | 45 |
|     | 8.5.3   | Member     | Function Documentation             | 45 |
|     |         | 8.5.3.1    | operator=()                        | 45 |
|     | 8.5.4   | Friends A  | And Related Function Documentation | 45 |
|     |         | 8.5.4.1    | init_attrjeodGravityMessages       | 45 |
|     |         | 8.5.4.2    | InputProcessor                     | 45 |
|     | 8.5.5   | Field Doo  | cumentation                        | 45 |
|     |         | 8.5.5.1    | domain_error                       | 46 |
|     |         | 8.5.5.2    | duplicate_entry                    | 46 |
|     |         | 8.5.5.3    | invalid_limit                      | 46 |
|     |         | 8.5.5.4    | invalid_name                       | 46 |
|     |         | 8.5.5.5    | invalid_object                     | 47 |
|     |         | 8.5.5.6    | missing_entry                      | 47 |
|     |         | 8.5.5.7    | null_pointer                       | 47 |
| 8.6 | jeod::G | GravitySou | rce Class Reference                | 48 |
|     | 8.6.1   | Detailed   | Description                        | 48 |
|     | 8.6.2   | Construc   | ctor & Destructor Documentation    | 49 |

vi

|     |                | 8.6.2.1   | GravitySource() [1/2]  | 49                               |
|-----|----------------|---|--|----------------------------------|
|     |                | 8.6.2.2   | ~GravitySource()   | 49                               |
|     |                | 8.6.2.3   | GravitySource() [2/2]  | 49                               |
|     | 8.6.3          | Member  | Function Documentation   | 49                               |
|     |                | 8.6.3.1   | initialize_state()   | 49                               |
|     |                | 8.6.3.2   | operator=()  | 50                               |
|     | 8.6.4          | Friends /   | And Related Function Documentation   | 50                               |
|     |                | 8.6.4.1   | init_attrjeodGravitySource   | 50                               |
|     |                | 8.6.4.2   | InputProcessor   | 50                               |
|     | 8.6.5          | Field Do  | cumentation  | 50                               |
|     |                | 8.6.5.1   | frames   | 50                               |
|     |                | 8.6.5.2   | inertial   | 51                               |
|     |                | 8.6.5.3   | mu   | 51                               |
|     |                | 8.6.5.4   | name   | 51                               |
|     |                | 8.6.5.5   | pfix   | 52                               |
| 8.7 | jeod::S        | phericalH   | larmonicsDeltaCoeffs Class Reference   | 52                               |
|     | 8.7.1          | Detailed  | Description  | 53                               |
|     | 8.7.2          | Construc  | ctor & Destructor Documentation  | 53                               |
|     |                | 8.7.2.1   | SphericalHarmonicsDeltaCoeffs()  | 53                               |
|     |                | 8.7.2.2   | ~SphericalHarmonicsDeltaCoeffs()   | 53                               |
|     | 8.7.3          | Member  | Function Documentation   | 53                               |
|     |                |   |  | 00                               |
|     |                | 8.7.3.1   | initialize()   | 53                               |
|     |                | 8.7.3.1<br>8.7.3.2                                      | initialize()   |                                  |
|     | 8.7.4          | 8.7.3.2   |  | 53                               |
|     | 8.7.4          | 8.7.3.2   | update()   | 53<br>54                         |
|     | 8.7.4          | 8.7.3.2<br>Friends /                                    | update()   | 53<br>54<br>54                   |
|     | 8.7.4<br>8.7.5 | 8.7.3.2<br>Friends <i>A</i><br>8.7.4.1<br>8.7.4.2       | update()          And Related Function Documentation          init_attrjeodSphericalHarmonicsDeltaCoeffs                         | 53<br>54<br>54<br>54             |
|     |                | 8.7.3.2<br>Friends <i>A</i><br>8.7.4.1<br>8.7.4.2       | update()          And Related Function Documentation          init_attrjeodSphericalHarmonicsDeltaCoeffs          InputProcessor | 53<br>54<br>54<br>54<br>54       |
|     |                | 8.7.3.2<br>Friends A<br>8.7.4.1<br>8.7.4.2<br>Field Doo | update()  And Related Function Documentation  init_attrjeodSphericalHarmonicsDeltaCoeffs  InputProcessor  cumentation            | 53<br>54<br>54<br>54<br>54<br>55 |

CONTENTS vii

|     |         | 8.7.5.4    | delta_Snm                                      | 56 |
|-----|---------|------------|--|----|
|     |         | 8.7.5.5    | grav_source                                    | 56 |
|     |         | 8.7.5.6    | order  | 56 |
| 8.8 | jeod::S | SphericalH | armonicsDeltaCoeffsInit Class Reference        | 57 |
|     | 8.8.1   | Detailed   | Description                                    | 57 |
|     | 8.8.2   | Construc   | ctor & Destructor Documentation                | 57 |
|     |         | 8.8.2.1    | SphericalHarmonicsDeltaCoeffsInit()            | 58 |
|     |         | 8.8.2.2    | ~SphericalHarmonicsDeltaCoeffsInit()           | 58 |
|     | 8.8.3   | Friends /  | And Related Function Documentation             | 58 |
|     |         | 8.8.3.1    | init_attrjeodSphericalHarmonicsDeltaCoeffsInit | 58 |
|     |         | 8.8.3.2    | InputProcessor                                 | 58 |
|     | 8.8.4   | Field Do   | cumentation                                    | 58 |
|     |         | 8.8.4.1    | degree   | 58 |
|     |         | 8.8.4.2    | delta_Cnm                                      | 59 |
|     |         | 8.8.4.3    | delta_Snm                                      | 59 |
|     |         | 8.8.4.4    | order  | 59 |
| 8.9 | jeod::S | SphericalH | armonicsDeltaControls Class Reference          | 59 |
|     | 8.9.1   | Detailed   | Description                                    | 60 |
|     | 8.9.2   | Construc   | ctor & Destructor Documentation                | 60 |
|     |         | 8.9.2.1    | SphericalHarmonicsDeltaControls()              | 60 |
|     |         | 8.9.2.2    | ~SphericalHarmonicsDeltaControls()             | 60 |
|     | 8.9.3   | Friends /  | And Related Function Documentation             | 61 |
|     |         | 8.9.3.1    | init_attrjeodSphericalHarmonicsDeltaControls   | 61 |
|     |         | 8.9.3.2    | InputProcessor                                 | 61 |
|     | 8.9.4   | Field Do   | cumentation                                    | 61 |
|     |         | 8.9.4.1    | active   | 61 |
|     |         | 8.9.4.2    | degree   | 61 |
|     |         | 8.9.4.3    | first_order_only                               | 62 |
|     |         | 8.9.4.4    | grav_effect                                    | 62 |
|     |         | 8.9.4.5    | grav_source                                    | 62 |
|     |         |            |  |    |

viii CONTENTS

|     |           | 8.9.4.6    | order   | 62 |
|-----|-----------|------------|---|----|
| 8.1 | 0 jeod::S | phericalHa | rmonicsGravityControls Class Reference  | 63 |
|     | 8.10.1    | Detailed [ | Description   | 65 |
|     | 8.10.2    | Construct  | or & Destructor Documentation   | 65 |
|     |           | 8.10.2.1   | SphericalHarmonicsGravityControls() [1/2]   | 65 |
|     |           | 8.10.2.2   | $\sim \! SphericalHarmonicsGravityControls() \ \ldots \ \ldots \ \ldots \ \ldots \ \ldots \ \ldots$ | 65 |
|     |           | 8.10.2.3   | SphericalHarmonicsGravityControls() [2/2]   | 65 |
|     | 8.10.3    | Member F   | Function Documentation  | 65 |
|     |           | 8.10.3.1   | add_deltacontrol()  | 65 |
|     |           | 8.10.3.2   | calc_nonspherical()   | 66 |
|     |           | 8.10.3.3   | check_validity()  | 67 |
|     |           | 8.10.3.4   | disable_min_radius_warnings()   | 67 |
|     |           | 8.10.3.5   | get_degree()  | 67 |
|     |           | 8.10.3.6   | get_degree_order()  | 67 |
|     |           | 8.10.3.7   | get_grad_degree()   | 68 |
|     |           | 8.10.3.8   | get_grad_degree_order()   | 68 |
|     |           | 8.10.3.9   | get_grad_order()  | 68 |
|     |           | 8.10.3.10  | get_order()   | 69 |
|     |           | 8.10.3.11  | initialize_control()  | 69 |
|     |           | 8.10.3.12  | operator=()   | 69 |
|     |           | 8.10.3.13  | set_degree()  | 70 |
|     |           | 8.10.3.14  | set_degree_order()  | 70 |
|     |           | 8.10.3.15  | set_grad_degree()   | 70 |
|     |           | 8.10.3.16  | set_grad_degree_order()   | 71 |
|     |           | 8.10.3.17  | set_grad_order()  | 71 |
|     |           | 8.10.3.18  | set_order()   | 71 |
|     |           | 8.10.3.19  | sum_deltacoeffs()   | 72 |
|     |           | 8.10.3.20  | update_deltacoeffs()  | 72 |
|     | 8.10.4    | Friends A  | nd Related Function Documentation   | 72 |
|     |           | 8.10.4.1   | init_attrjeodSphericalHarmonicsGravityControls  | 72 |

CONTENTS

|      |         | 8.10.4.2   | InputProcessor                               | 73 |
|------|---------|------------|--|----|
|      | 8.10.5  | Field Doc  | umentation                                   | 73 |
|      |         | 8.10.5.1   | degree                                       | 73 |
|      |         | 8.10.5.2   | delta_Cnm                                    | 73 |
|      |         | 8.10.5.3   | delta_degree                                 | 73 |
|      |         | 8.10.5.4   | delta_order                                  | 74 |
|      |         | 8.10.5.5   | delta_Snm                                    | 74 |
|      |         | 8.10.5.6   | gradient_degree                              | 74 |
|      |         | 8.10.5.7   | gradient_order                               | 74 |
|      |         | 8.10.5.8   | harmonics_source                             | 75 |
|      |         | 8.10.5.9   | min_radius_warn                              | 75 |
|      |         | 8.10.5.10  | order  | 75 |
|      |         | 8.10.5.11  | Pnm  | 76 |
|      |         | 8.10.5.12  | total_dC20                                   | 76 |
|      |         | 8.10.5.13  | var_effects                                  | 76 |
| 8.11 | jeod::S | phericalHa | rmonicsGravitySource Class Reference         | 77 |
|      | 8.11.1  | Detailed I | Description                                  | 78 |
|      | 8.11.2  | Construct  | or & Destructor Documentation                | 78 |
|      |         | 8.11.2.1   | SphericalHarmonicsGravitySource() [1/2]      | 78 |
|      |         | 8.11.2.2   | ~SphericalHarmonicsGravitySource()           | 79 |
|      |         | 8.11.2.3   | SphericalHarmonicsGravitySource() [2/2]      | 79 |
|      | 8.11.3  | Member F   | Function Documentation                       | 79 |
|      |         | 8.11.3.1   | add_deltacoeff()                             | 79 |
|      |         | 8.11.3.2   | find_deltacoeff()                            | 79 |
|      |         | 8.11.3.3   | initialize_body()                            | 80 |
|      |         | 8.11.3.4   | operator=()                                  | 80 |
|      | 8.11.4  | Friends A  | nd Related Function Documentation            | 80 |
|      |         | 8.11.4.1   | init_attrjeodSphericalHarmonicsGravitySource | 80 |
|      |         | 8.11.4.2   | InputProcessor                               | 80 |
|      | 8.11.5  | Field Doc  | umentation                                   | 81 |

X CONTENTS

|         | 8.11.5.1 a_by_rad  | 81 |
|---------|--|----|
|         | 8.11.5.2 alpha   | 81 |
|         | 8.11.5.3 beta  | 81 |
|         | 8.11.5.4 Cnm   | 82 |
|         | 8.11.5.5 degree  | 82 |
|         | 8.11.5.6 delta_coeffs  | 82 |
|         | 8.11.5.7 eta   | 83 |
|         | 8.11.5.8 int_to_double   | 83 |
|         | 8.11.5.9 nrdiag  | 83 |
|         | 8.11.5.10 order  | 84 |
|         | 8.11.5.11 radius   | 84 |
|         | 8.11.5.12 Snm  | 84 |
|         | 8.11.5.13 tide_free  | 85 |
|         | 8.11.5.14 tide_free_delta  | 85 |
|         | 8.11.5.15 upsilon  | 85 |
|         | 8.11.5.16 xi   | 86 |
|         | 8.11.5.17 zeta   | 86 |
| 8.12 je | d::SphericalHarmonicsGravitySource_default_data Class Reference              | 86 |
| 8.      | 2.1 Detailed Description   | 87 |
| 8.      | 2.2 Constructor & Destructor Documentation                                   | 87 |
|         | 8.12.2.1 ~SphericalHarmonicsGravitySource_default_data()                     | 87 |
| 8.      | 2.3 Member Function Documentation  | 87 |
|         | 8.12.3.1 initialize()  | 87 |
| 8.13 je | d::SphericalHarmonicsGravitySource_earth_GEMT1_default_data Class Reference  | 87 |
| 8.      | 3.1 Detailed Description   | 88 |
| 8.      | 3.2 Member Function Documentation  | 88 |
|         | 8.13.2.1 initialize()  | 88 |
| 8.14 je | d::SphericalHarmonicsGravitySource_earth_GGM02C_default_data Class Reference | 88 |
| 8.      | 4.1 Detailed Description   | 89 |
| 8.      | 4.2 Member Function Documentation  | 89 |

CONTENTS xi

|      |         | 8.14.2.1 initialize()   | 89 |
|------|---------|---|----|
| 8.15 | jeod::S | phericalHarmonicsGravitySource_earth_GGM05C_default_data Class Reference      | 89 |
|      | 8.15.1  | Detailed Description  | 90 |
|      | 8.15.2  | Member Function Documentation   | 90 |
|      |         | 8.15.2.1 initialize()   | 90 |
| 8.16 | jeod::S | phericalHarmonicsGravitySource_earth_spherical_default_data Class Reference   | 90 |
|      | 8.16.1  | Detailed Description  | 91 |
|      | 8.16.2  | Member Function Documentation   | 91 |
|      |         | 8.16.2.1 initialize()   | 91 |
| 8.17 | jeod::S | phericalHarmonicsGravitySource_jupiter_spherical_default_data Class Reference | 91 |
|      | 8.17.1  | Detailed Description  | 91 |
|      | 8.17.2  | Member Function Documentation   | 92 |
|      |         | 8.17.2.1 initialize()   | 92 |
| 8.18 | jeod::S | phericalHarmonicsGravitySource_mars_MRO110B2_default_data Class Reference     | 92 |
|      | 8.18.1  | Detailed Description  | 92 |
|      | 8.18.2  | Member Function Documentation   | 92 |
|      |         | 8.18.2.1 initialize()   | 93 |
| 8.19 | jeod::S | phericalHarmonicsGravitySource_mars_spherical_default_data Class Reference    | 93 |
|      | 8.19.1  | Detailed Description  | 93 |
|      | 8.19.2  | Member Function Documentation   | 93 |
|      |         | 8.19.2.1 initialize()   | 94 |
| 8.20 | jeod::S | phericalHarmonicsGravitySource_moon_GRAIL150_default_data Class Reference     | 94 |
|      | 8.20.1  | Detailed Description  | 94 |
|      | 8.20.2  | Member Function Documentation   | 94 |
|      |         | 8.20.2.1 initialize()   | 95 |
| 8.21 | jeod::S | phericalHarmonicsGravitySource_moon_LP150Q_default_data Class Reference       | 95 |
|      | 8.21.1  | Detailed Description  | 95 |
|      | 8.21.2  | Member Function Documentation   | 95 |
|      |         | 8.21.2.1 initialize()   | 96 |
| 8.22 | jeod::S | phericalHarmonicsGravitySource_moon_spherical_default_data Class Reference    | 96 |

xii CONTENTS

|      | 8.22.1  | Detailed Description   | 96  |
|------|---------|--|-----|
|      | 8.22.2  | Member Function Documentation  | 96  |
|      |         | 8.22.2.1 initialize()  | 97  |
| 8.23 | jeod::S | phericalHarmonicsGravitySource_sun_spherical_default_data Class Reference          | 97  |
|      | 8.23.1  | Detailed Description   | 97  |
|      | 8.23.2  | Member Function Documentation  | 97  |
|      |         | 8.23.2.1 initialize()  | 98  |
| 8.24 | jeod::S | phericalHarmonicsSolidBodyTides Class Reference                                    | 98  |
|      | 8.24.1  | Detailed Description   | 99  |
|      | 8.24.2  | Constructor & Destructor Documentation   | 99  |
|      |         | 8.24.2.1 SphericalHarmonicsSolidBodyTides()  | 99  |
|      |         | 8.24.2.2 ~SphericalHarmonicsSolidBodyTides()                                       | 99  |
|      | 8.24.3  | Member Function Documentation  | 99  |
|      |         | 8.24.3.1 initialize()  | 99  |
|      |         | 8.24.3.2 update()  | 100 |
|      | 8.24.4  | Friends And Related Function Documentation   | 100 |
|      |         | 8.24.4.1 init_attrjeodSphericalHarmonicsSolidBodyTides                             | 100 |
|      |         | 8.24.4.2 InputProcessor  | 100 |
| 8.25 | jeod::S | phericalHarmonicsSolidBodyTidesInit Class Reference                                | 101 |
|      | 8.25.1  | Detailed Description   | 101 |
|      | 8.25.2  | Constructor & Destructor Documentation   | 101 |
|      |         | 8.25.2.1 SphericalHarmonicsSolidBodyTidesInit()                                    | 101 |
|      |         | 8.25.2.2 ~SphericalHarmonicsSolidBodyTidesInit()                                   | 102 |
|      | 8.25.3  | Friends And Related Function Documentation   | 102 |
|      |         | 8.25.3.1 init_attrjeodSphericalHarmonicsSolidBodyTidesInit                         | 102 |
|      |         | 8.25.3.2 InputProcessor  | 102 |
| 8.26 | jeod::S | phericalHarmonicsSolidBodyTidesInit_earth_solid_tides_default_data Class Reference | 102 |
|      | 8.26.1  | Detailed Description   | 102 |
|      | 8.26.2  | Member Function Documentation  | 102 |
|      |         | 8.26.2.1 initialize()  | 103 |

CONTENTS xiii

| 8.27 | jeod::S | phericalHarmonicsTidalEffects Class Reference            | 03 |
|------|---------|--|----|
|      | 8.27.1  | Detailed Description                                     | 04 |
|      | 8.27.2  | Constructor & Destructor Documentation                   | 04 |
|      |         | 8.27.2.1 SphericalHarmonicsTidalEffects()                | 04 |
|      |         | 8.27.2.2 ~SphericalHarmonicsTidalEffects()               | 04 |
|      | 8.27.3  | Member Function Documentation                            | 04 |
|      |         | 8.27.3.1 initialize()                                    | 04 |
|      |         | 8.27.3.2 update()  | 05 |
|      | 8.27.4  | Friends And Related Function Documentation               | 05 |
|      |         | 8.27.4.1 init_attrjeodSphericalHarmonicsTidalEffects     | 05 |
|      |         | 8.27.4.2 InputProcessor                                  | 05 |
|      | 8.27.5  | Field Documentation                                      | 06 |
|      |         | 8.27.5.1 k2  | 06 |
|      |         | 8.27.5.2 Knm   | 06 |
|      |         | 8.27.5.3 num_tidal_bodies                                | 06 |
|      |         | 8.27.5.4 pfix  | 07 |
|      |         | 8.27.5.5 tidal_bodies                                    | 07 |
|      |         | 8.27.5.6 tidal_bodies_inertial                           | 07 |
|      |         | 8.27.5.7 xp  | 07 |
|      |         | 8.27.5.8 yp  | 80 |
| 8.28 | jeod::S | phericalHarmonicsTidalEffectsInit Class Reference        | 80 |
|      | 8.28.1  | Detailed Description                                     | 09 |
|      | 8.28.2  | Constructor & Destructor Documentation                   | 09 |
|      |         | 8.28.2.1 SphericalHarmonicsTidalEffectsInit()            | 09 |
|      |         | 8.28.2.2 ~SphericalHarmonicsTidalEffectsInit()           | 09 |
|      | 8.28.3  | Friends And Related Function Documentation               | 09 |
|      |         | 8.28.3.1 init_attrjeodSphericalHarmonicsTidalEffectsInit | 09 |
|      |         | 8.28.3.2 InputProcessor                                  | 09 |
|      | 8.28.4  | Field Documentation                                      | 10 |
|      |         | 8.28.4.1 k2  | 10 |
|      |         | 8.28.4.2 Knm   | 10 |
|      |         | 8.28.4.3 tidal_body_names                                | 10 |
|      |         | 8.28.4.4 xp  | 11 |
|      |         | 8.28.4.5 yp  | 11 |

XIV

| 9 | File I | Documentation                         | 113 |
|---|--------|---------------------------------------|-----|
|   | 9.1    | class_declarations.hh File Reference  | 113 |
|   |        | 9.1.1 Detailed Description            | 113 |
|   | 9.2    | earth_GEMT1.cc File Reference         | 113 |
|   |        | 9.2.1 Macro Definition Documentation  | 114 |
|   |        | 9.2.1.1 JEOD_FRIEND_CLASS             | 114 |
|   | 9.3    | earth_GEMT1.hh File Reference         | 114 |
|   | 9.4    | earth_GGM02C.cc File Reference        | 114 |
|   |        | 9.4.1 Macro Definition Documentation  | 115 |
|   |        | 9.4.1.1 JEOD_FRIEND_CLASS             | 115 |
|   | 9.5    | earth_GGM02C.hh File Reference        | 115 |
|   | 9.6    | earth_GGM05C.cc File Reference        | 115 |
|   |        | 9.6.1 Macro Definition Documentation  | 116 |
|   |        | 9.6.1.1 JEOD_FRIEND_CLASS             | 116 |
|   | 9.7    | earth_GGM05C.hh File Reference        | 116 |
|   | 9.8    | earth_solid_tides.cc File Reference   | 116 |
|   |        | 9.8.1 Macro Definition Documentation  | 117 |
|   |        | 9.8.1.1 JEOD_FRIEND_CLASS             | 117 |
|   | 9.9    | earth_solid_tides.hh File Reference   | 117 |
|   | 9.10   | earth_spherical.cc File Reference     | 117 |
|   |        | 9.10.1 Macro Definition Documentation | 117 |
|   |        | 9.10.1.1 JEOD_FRIEND_CLASS            | 118 |
|   | 9.11   | earth_spherical.hh File Reference     | 118 |
|   | 9.12   | gravity_controls.cc File Reference    | 118 |
|   |        | 9.12.1 Detailed Description           | 119 |
|   | 9.13   | gravity_controls.hh File Reference    | 119 |
|   |        | 9.13.1 Detailed Description           | 119 |
|   | 9.14   | gravity_integ_frame.hh File Reference | 119 |
|   |        | 9.14.1 Detailed Description           | 120 |
|   | 9.15   | gravity_interaction.cc File Reference | 120 |

CONTENTS xv

| 9.15.1 Detailed Description                | 120 |
|--|-----|
| 9.16 gravity_interaction.hh File Reference | 121 |
| 9.16.1 Detailed Description                | 121 |
| 9.17 gravity_manager.cc File Reference     | 121 |
| 9.17.1 Detailed Description                | 122 |
| 9.18 gravity_manager.hh File Reference     | 122 |
| 9.18.1 Detailed Description                | 122 |
| 9.19 gravity_messages.cc File Reference    | 122 |
| 9.19.1 Detailed Description                | 123 |
| 9.20 gravity_messages.hh File Reference    | 123 |
| 9.20.1 Detailed Description                | 123 |
| 9.21 gravity_source.cc File Reference      | 123 |
| 9.21.1 Detailed Description                | 124 |
| 9.22 gravity_source.hh File Reference      | 124 |
| 9.22.1 Detailed Description                | 124 |
| 9.23 jupiter_spherical.cc File Reference   | 124 |
| 9.23.1 Macro Definition Documentation      | 125 |
| 9.23.1.1 JEOD_FRIEND_CLASS                 | 125 |
| 9.24 jupiter_spherical.hh File Reference   | 125 |
| 9.25 mars_MRO110B2.cc File Reference       | 125 |
| 9.25.1 Macro Definition Documentation      | 126 |
| 9.25.1.1 JEOD_FRIEND_CLASS                 | 126 |
| 9.26 mars_MRO110B2.hh File Reference       | 126 |
| 9.27 mars_spherical.cc File Reference      | 126 |
| 9.27.1 Macro Definition Documentation      | 127 |
| 9.27.1.1 JEOD_FRIEND_CLASS                 | 127 |
| 9.28 mars_spherical.hh File Reference      | 127 |
| 9.29 moon_GRAIL150.cc File Reference       | 127 |
| 9.29.1 Macro Definition Documentation      | 128 |
| 9.29.1.1 JEOD_FRIEND_CLASS                 | 128 |

xvi CONTENTS

| 9.30 | moon_GRAIL150.hh File Reference                                   | 128 |
|------|---|-----|
| 9.31 | moon_LP150Q.cc File Reference                                     | 128 |
|      | 9.31.1 Macro Definition Documentation                             | 129 |
|      | 9.31.1.1 JEOD_FRIEND_CLASS  | 129 |
| 9.32 | moon_LP150Q.hh File Reference                                     | 129 |
| 9.33 | moon_spherical.cc File Reference                                  | 129 |
|      | 9.33.1 Macro Definition Documentation                             | 130 |
|      | 9.33.1.1 JEOD_FRIEND_CLASS  | 130 |
| 9.34 | moon_spherical.hh File Reference                                  | 130 |
| 9.35 | spherical_harmonics_calc_nonspherical.cc File Reference           | 130 |
|      | 9.35.1 Detailed Description                                       | 131 |
| 9.36 | spherical_harmonics_delta_coeffs.cc File Reference                | 131 |
|      | 9.36.1 Detailed Description                                       | 131 |
| 9.37 | spherical_harmonics_delta_coeffs.hh File Reference                | 131 |
|      | 9.37.1 Detailed Description                                       | 132 |
| 9.38 | spherical_harmonics_delta_coeffs_init.hh File Reference           | 132 |
|      | 9.38.1 Detailed Description                                       | 132 |
| 9.39 | spherical_harmonics_delta_controls.hh File Reference              | 132 |
|      | 9.39.1 Detailed Description                                       | 133 |
| 9.40 | spherical_harmonics_gravity_controls.cc File Reference            | 133 |
|      | 9.40.1 Detailed Description                                       | 133 |
| 9.41 | spherical_harmonics_gravity_controls.hh File Reference            | 133 |
|      | 9.41.1 Detailed Description                                       | 134 |
| 9.42 | spherical_harmonics_gravity_source.cc File Reference              | 134 |
|      | 9.42.1 Detailed Description                                       | 134 |
| 9.43 | spherical_harmonics_gravity_source.hh File Reference              | 135 |
|      | 9.43.1 Detailed Description                                       | 135 |
| 9.44 | spherical_harmonics_gravity_source_default_data.hh File Reference | 135 |
| 9.45 | spherical_harmonics_solid_body_tides.cc File Reference            | 135 |
|      | 9.45.1 Detailed Description                                       | 136 |

CONTENTS xvii

| Index |   | 141 |
|-------|---|-----|
| 9.52  | sun_spherical.hh File Reference                             | 139 |
|       | 9.51.1.1 JEOD_FRIEND_CLASS                                  | 139 |
|       | 9.51.1 Macro Definition Documentation                       | 139 |
| 9.51  | sun_spherical.cc File Reference                             | 138 |
|       | 9.50.1 Detailed Description                                 | 138 |
| 9.50  | spherical_harmonics_tidal_effects_init.hh File Reference    | 138 |
|       | 9.49.1 Detailed Description                                 | 138 |
| 9.49  | spherical_harmonics_tidal_effects.hh File Reference         | 137 |
|       | 9.48.1 Detailed Description                                 | 137 |
| 9.48  | spherical_harmonics_tidal_effects.cc File Reference         | 137 |
|       | 9.47.1 Detailed Description                                 | 137 |
| 9.47  | spherical_harmonics_solid_body_tides_init.hh File Reference | 136 |
|       | 9.46.1 Detailed Description                                 | 136 |
| 9.46  | spherical_harmonics_solid_body_tides.hh File Reference      | 136 |

# **Module Index**

### 1.1 Modules

Here is a list of all modules:

| Models      |  |  |      |  |  |  |  |      |      |      |  |  |  |  |      | <br> |  |  |  |  |  |      | 11 |
|-------------|--|--|------|--|--|--|--|------|------|------|--|--|--|--|------|------|--|--|--|--|--|------|----|
| Environment |  |  | <br> |  |  |  |  |      |      | <br> |  |  |  |  |      |      |  |  |  |  |  |      | 12 |
| Gravity .   |  |  | <br> |  |  |  |  | <br> | <br> |      |  |  |  |  | <br> |      |  |  |  |  |  | <br> | 13 |

2 Module Index

# Namespace Index

| 2.1 | Namespace | List |
|-----|-----------|------|
|     |           |      |

| riere is a list of all flamespaces with brief t | descriptions. |  |
|---|---------------|--|
|   |               |  |
| jeod  |               |  |

4 Namespace Index

# **Hierarchical Index**

### 3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

| jeod::GravityControls  |  |  |      |  | <br>1    |
|--|--|--|------|--|----------|
| jeod::SphericalHarmonicsGravityControls  |  |  |      |  | <br>. 6  |
| jeod::GravityIntegFrame  |  |  |      |  | <br>2    |
| jeod::GravityInteraction   |  |  |      |  | <br>. 3  |
| jeod::GravityManager   |  |  | <br> |  | <br>. 3  |
| jeod::GravityMessages  |  |  |      |  | <br>. 4  |
| jeod::GravitySource  |  |  |      |  | <br>4    |
| jeod::SphericalHarmonicsGravitySource  |  |  |      |  | <br>. 7  |
| jeod::SphericalHarmonicsDeltaCoeffs  |  |  | <br> |  | <br>5    |
| jeod::SphericalHarmonicsTidalEffects   |  |  |      |  | <br>. 10 |
| jeod::SphericalHarmonicsSolidBodyTides   |  |  |      |  | <br>. 9  |
| jeod::SphericalHarmonicsDeltaCoeffsInit  |  |  |      |  | <br>. 5  |
| jeod::SphericalHarmonicsTidalEffectsInit   |  |  |      |  | <br>. 10 |
| jeod::SphericalHarmonicsSolidBodyTidesInit   |  |  |      |  | <br>. 10 |
| jeod::SphericalHarmonicsDeltaControls  |  |  |      |  | <br>. 5  |
| jeod::SphericalHarmonicsGravitySource_default_data   |  |  |      |  |          |
| jeod::SphericalHarmonicsGravitySource earth GEMT1 default data                                 |  |  |      |  | <br>. 8  |
| jeod::SphericalHarmonicsGravitySource_earth_GGM02C_default_data                                |  |  |      |  | <br>. 8  |
| jeod::SphericalHarmonicsGravitySource_earth_GGM05C_default_data                                |  |  |      |  | <br>. 8  |
| jeod::SphericalHarmonicsGravitySource_earth_spherical_default_data                             |  |  |      |  | <br>. 9  |
| jeod::SphericalHarmonicsGravitySource_jupiter_spherical_default_data                           |  |  |      |  | <br>. 9  |
| jeod::SphericalHarmonicsGravitySource_mars_MRO110B2_default_data                               |  |  |      |  | <br>. 9  |
| jeod::SphericalHarmonicsGravitySource_mars_spherical_default_data                              |  |  |      |  |          |
| jeod::SphericalHarmonicsGravitySource_moon_GRAIL150_default_data                               |  |  |      |  | <br>. 9  |
| jeod::SphericalHarmonicsGravitySource_moon_LP150Q_default_data                                 |  |  |      |  |          |
| jeod::SphericalHarmonicsGravitySource_moon_spherical_default_data                              |  |  |      |  |          |
| jeod::SphericalHarmonicsGravitySource_sun_spherical_default_data                               |  |  |      |  |          |
| $jeod:: Spherical Harmonics Solid Body Tides Init\_earth\_solid\_tides\_default\_data \ . \ .$ |  |  | <br> |  | <br>10   |

6 Hierarchical Index

## **Data Structure Index**

### 4.1 Data Structures

Here are the data structures with brief descriptions:

| jeod::GravityControls   |    |
|---|----|
| Specifies whether and how a GravitySource affects a vehicle   | 17 |
| jeod::GravityIntegFrame   |    |
| Class that aids in determining whether gravity should be applied as a direct effect or a third body |    |
| effect  | 29 |
| jeod::GravityInteraction  |    |
| Specifies interactions between a vehicle and a set of gravitational bodies                          | 32 |
| jeod::GravityManager  |    |
| The master gravitational model for a simulation   | 38 |
| jeod::GravityMessages   |    |
| Specifies the message IDs used in the gravity model   | 44 |
| jeod::GravitySource   |    |
| Models the gravity for a specific planet;   | 48 |
| jeod::SphericalHarmonicsDeltaCoeffs   |    |
| Base class for tidal and temporal gravity models  | 52 |
| jeod::SphericalHarmonicsDeltaCoeffsInit   |    |
| Initialization data for a SphericalHarmonicsDeltaCoeffs instance                                    | 57 |
| jeod::SphericalHarmonicsDeltaControls   |    |
| Provides controls for how a variational model affects a vehicle                                     | 59 |
| jeod::SphericalHarmonicsGravityControls   |    |
| Specifies whether and how a SphericalHarmonicsGravitySource affects a vehicle                       | 63 |
| jeod::SphericalHarmonicsGravitySource   |    |
| Models the gravity for a specific planet using spherical harmonics                                  | 77 |
| jeod::SphericalHarmonicsGravitySource_default_data  | 86 |
| jeod::SphericalHarmonicsGravitySource_earth_GEMT1_default_data                                      | 87 |
| jeod::SphericalHarmonicsGravitySource_earth_GGM02C_default_data                                     | 88 |
| jeod::SphericalHarmonicsGravitySource_earth_GGM05C_default_data                                     | 89 |
| jeod::SphericalHarmonicsGravitySource_earth_spherical_default_data                                  | 90 |
| jeod::SphericalHarmonicsGravitySource_jupiter_spherical_default_data                                | 91 |
| jeod::SphericalHarmonicsGravitySource_mars_MRO110B2_default_data                                    | 92 |
| jeod::SphericalHarmonicsGravitySource_mars_spherical_default_data                                   | 93 |
| jeod::SphericalHarmonicsGravitySource_moon_GRAIL150_default_data                                    | 94 |
| jeod::SphericalHarmonicsGravitySource_moon_LP150Q_default_data                                      | 95 |
| jeod::SphericalHarmonicsGravitySource_moon_spherical_default_data                                   | 96 |
| jeod: Spherical Harmonics Gravity Source, sun, spherical, default, data                             | 97 |

8 Data Structure Index

| jeod::SphericalHarmonicsSolidBodyTides                                    |     |
|---|-----|
| Models solid body tidal effects   | 98  |
| jeod::SphericalHarmonicsSolidBodyTidesInit                                |     |
| Initializes a solid body tides model                                      | 101 |
| jeod::SphericalHarmonicsSolidBodyTidesInit_earth_solid_tides_default_data | 102 |
| jeod::SphericalHarmonicsTidalEffects                                      |     |
| Models tidal effects as a delta on top of a gravity model                 | 103 |
| jeod::SphericalHarmonicsTidalEffectsInit                                  |     |
| Initializes a tidal gravity model   | 108 |

# File Index

### 5.1 File List

Here is a list of all files with brief descriptions:

| class_declarations.hh   |     |
|---|-----|
| Forward declarations of classes defined for the gravity model                                   | 113 |
| earth_GEMT1.cc  | 113 |
| earth_GEMT1.hh  | 114 |
| earth_GGM02C.cc   | 114 |
| earth_GGM02C.hh   | 115 |
| earth_GGM05C.cc   | 115 |
| earth_GGM05C.hh   | 116 |
| earth_solid_tides.cc  | 116 |
| earth_solid_tides.hh  | 117 |
| earth_spherical.cc  | 117 |
| earth_spherical.hh  | 118 |
| gravity_controls.cc   |     |
| Define member functions for the GravityControls class   | 118 |
| gravity_controls.hh   |     |
| Define the gravity controls   | 119 |
| gravity_integ_frame.hh  |     |
| Define the gravity integration frame class  | 119 |
| gravity_interaction.cc  |     |
| Define methods for the GravityInteraction class   | 120 |
| gravity_interaction.hh  |     |
| Define the GravityInteraction class, used to represent the gravitational interaction betweens a |     |
| DynBody and a set of planetary bodies   | 121 |
| gravity_manager.cc  |     |
| Define member functions for the GravityManager class  | 121 |
| gravity_manager.hh  |     |
| Define the Gravity Manager  | 122 |
| gravity_messages.cc   |     |
| Implement the class GravityMessages   | 122 |
| gravity_messages.hh   |     |
| Define the class GravityMessages, the class that specifies the message IDs used in the gravity  |     |
| model   | 123 |
| gravity_source.cc   |     |
| Define member functions for the GravitySource class   | 123 |
| gravity_source.hh   |     |
| Define the gravity body base (pure virtual) class   | 124 |

10 File Index

| iupiter_spherical.cc   | 124 |
|--|-----|
| iupiter_spherical.hh   | 125 |
| mars_MRO110B2.cc   | 125 |
| mars_MRO110B2.hh   | 126 |
| mars_spherical.cc  | 126 |
| mars_spherical.hh  | 127 |
| moon_GRAIL150.cc   | 127 |
| moon_GRAIL150.hh   | 128 |
| moon_LP150Q.cc   | 128 |
| moon_LP150Q.hh   | 129 |
| moon_spherical.cc  | 129 |
| moon_spherical.hh  | 130 |
| spherical_harmonics_calc_nonspherical.cc   |     |
| Define SphericalHarmonicsGravityControl calc_nonspherical method, which computes non-                |     |
| spherical gravitational acceleration of a gravitational body on a given position                     | 130 |
| spherical_harmonics_delta_coeffs.cc  |     |
| Define member functions for the SphericalHarmonicsDeltaCoeffs class                                  | 131 |
| spherical_harmonics_delta_coeffs.hh  |     |
| Define the class SphericalHarmonicsDeltaCoeffs, the base class for tidal effects and temporal        |     |
| gravity sub-models   | 131 |
| spherical_harmonics_delta_coeffs_init.hh   |     |
| Define the class SphericalHarmonicsDeltaCoeffsInit, the base initialization class for tidal effects  |     |
| and temporal gravity sub-models  | 132 |
| spherical_harmonics_delta_controls.hh  |     |
| Define the gravity controls for the variational gravity models such as solid-body tides              | 132 |
| spherical_harmonics_gravity_controls.cc  |     |
| Define member functions for the SphericalHarmonicsGravityControls class                              | 133 |
| spherical_harmonics_gravity_controls.hh  |     |
| Define the gravity controls  | 133 |
| spherical_harmonics_gravity_source.cc  |     |
| Define member functions for the SphericalHarmonicsGravitySource class                                | 134 |
| spherical_harmonics_gravity_source.hh  |     |
| Define the spherical harmonics implementation of a gravity body                                      | 135 |
| spherical_harmonics_gravity_source_default_data.hh   | 135 |
| spherical_harmonics_solid_body_tides.cc  |     |
| Define member functions for the SphericalHarmonicsSolidBodyTides class                               | 135 |
| spherical_harmonics_solid_body_tides.hh  |     |
| Define the SphericalHarmonicsSolidBodyTides class, which models solid-body tidal effects             | 136 |
| spherical_harmonics_solid_body_tides_init.hh   |     |
| Define the SphericalHarmonicsSolidBodyTidesInit class, which is the initialization class for the     |     |
| solid body tides model   | 136 |
| spherical_harmonics_tidal_effects.cc   |     |
| Define member functions for the SphericalHarmonicsTidalEffects class                                 | 137 |
| spherical_harmonics_tidal_effects.hh   |     |
| Define the class SphericalHarmonicsTidalEffects, which is the base class for solid-body and          |     |
| ocean tidal effects  | 137 |
| spherical_harmonics_tidal_effects_init.hh  |     |
| Define the SphericalHarmonicsTidalEffectsInit class, the initialization class for tidal effects mod- |     |
| els  | 138 |
| sun spherical.cc   | 138 |
| sun_spherical.bb   | 139 |

# **Module Documentation**

6.1 Models

Modules

- Environment
- 6.1.1 Detailed Description

12 Module Documentation

### 6.2 Environment

### Modules

Gravity

### 6.2.1 Detailed Description

6.3 Gravity 13

### 6.3 Gravity

#### **Files**

· file class declarations.hh

Forward declarations of classes defined for the gravity model.

file gravity\_controls.hh

Define the gravity controls.

· file gravity integ frame.hh

Define the gravity integration frame class.

file gravity\_interaction.hh

Define the GravityInteraction class, used to represent the gravitational interaction betweens a DynBody and a set of planetary bodies.

file gravity\_manager.hh

Define the Gravity Manager.

· file gravity\_messages.hh

Define the class GravityMessages, the class that specifies the message IDs used in the gravity model.

· file gravity\_source.hh

Define the gravity body base (pure virtual) class.

file spherical\_harmonics\_delta\_coeffs.hh

Define the class SphericalHarmonicsDeltaCoeffs, the base class for tidal effects and temporal gravity sub-models.

· file spherical harmonics delta coeffs init.hh

Define the class SphericalHarmonicsDeltaCoeffsInit, the base initialization class for tidal effects and temporal gravity sub-models.

• file spherical\_harmonics\_delta\_controls.hh

Define the gravity controls for the variational gravity models such as solid-body tides.

• file spherical\_harmonics\_gravity\_controls.hh

Define the gravity controls.

• file spherical\_harmonics\_gravity\_source.hh

Define the spherical harmonics implementation of a gravity body.

• file spherical\_harmonics\_solid\_body\_tides.hh

Define the SphericalHarmonicsSolidBodyTides class, which models solid-body tidal effects.

• file spherical\_harmonics\_solid\_body\_tides\_init.hh

Define the SphericalHarmonicsSolidBodyTidesInit class, which is the initialization class for the solid body tides model.

file spherical\_harmonics\_tidal\_effects.hh

Define the class SphericalHarmonicsTidalEffects, which is the base class for solid-body and ocean tidal effects.

file spherical\_harmonics\_tidal\_effects\_init.hh

Define the SphericalHarmonicsTidalEffectsInit class, the initialization class for tidal effects models.

• file gravity\_controls.cc

Define member functions for the GravityControls class.

• file gravity\_interaction.cc

Define methods for the GravityInteraction class.

• file gravity\_manager.cc

Define member functions for the GravityManager class.

• file gravity\_messages.cc

Implement the class GravityMessages.

file gravity\_source.cc

Define member functions for the GravitySource class.

· file spherical harmonics calc nonspherical.cc

Define SphericalHarmonicsGravityControl calc\_nonspherical method, which computes non-spherical gravitational acceleration of a gravitational body on a given position.

14 Module Documentation

• file spherical\_harmonics\_delta\_coeffs.cc

Define member functions for the SphericalHarmonicsDeltaCoeffs class.

• file spherical\_harmonics\_gravity\_controls.cc

Define member functions for the SphericalHarmonicsGravityControls class.

• file spherical\_harmonics\_gravity\_source.cc

Define member functions for the SphericalHarmonicsGravitySource class.

• file spherical\_harmonics\_solid\_body\_tides.cc

 ${\it Define member functions for the Spherical Harmonics Solid Body Tides\ class.}$ 

• file spherical\_harmonics\_tidal\_effects.cc

Define member functions for the SphericalHarmonicsTidalEffects class.

### **Namespaces**

• jeod

Namespace jeod.

### **Macros**

- #define PATH "environment/gravity/"
- 6.3.1 Detailed Description
- 6.3.2 Macro Definition Documentation

#### 6.3.2.1 PATH

#define PATH "environment/gravity/"

Definition at line 36 of file gravity\_messages.cc.

### **Namespace Documentation**

### 7.1 jeod Namespace Reference

Namespace jeod.

#### **Data Structures**

· class GravityControls

Specifies whether and how a GravitySource affects a vehicle.

class GravityIntegFrame

Class that aids in determining whether gravity should be applied as a direct effect or a third body effect.

· class GravityInteraction

Specifies interactions between a vehicle and a set of gravitational bodies.

· class GravityManager

The master gravitational model for a simulation.

class GravityMessages

Specifies the message IDs used in the gravity model.

class GravitySource

Models the gravity for a specific planet;.

· class SphericalHarmonicsDeltaCoeffs

Base class for tidal and temporal gravity models.

· class SphericalHarmonicsDeltaCoeffsInit

Initialization data for a SphericalHarmonicsDeltaCoeffs instance.

• class SphericalHarmonicsDeltaControls

Provides controls for how a variational model affects a vehicle.

class SphericalHarmonicsGravityControls

Specifies whether and how a SphericalHarmonicsGravitySource affects a vehicle.

class SphericalHarmonicsGravitySource

Models the gravity for a specific planet using spherical harmonics.

- class SphericalHarmonicsGravitySource\_default\_data
- class SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data
- class SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data
- class SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data
- · class SphericalHarmonicsGravitySource earth spherical default data
- class SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data

- class SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data
- class SphericalHarmonicsGravitySource\_mars\_spherical\_default\_data
- class SphericalHarmonicsGravitySource moon GRAIL150 default data
- class SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data
- class SphericalHarmonicsGravitySource\_moon\_spherical\_default\_data
- class SphericalHarmonicsGravitySource\_sun\_spherical\_default\_data
- class SphericalHarmonicsSolidBodyTides

Models solid body tidal effects.

· class SphericalHarmonicsSolidBodyTidesInit

Initializes a solid body tides model.

- class SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data
- · class SphericalHarmonicsTidalEffects

Models tidal effects as a delta on top of a gravity model.

· class SphericalHarmonicsTidalEffectsInit

Initializes a tidal gravity model.

#### **Variables**

static constexpr double speed\_of\_light\_sq = 89875517873681764.0
 The speed of light squared, in m<sup>2</sup>/s<sup>2</sup>.

### 7.1.1 Detailed Description

Namespace jeod.

#### 7.1.2 Variable Documentation

```
7.1.2.1 speed_of_light_sq
```

```
constexpr double jeod::speed_of_light_sq = 89875517873681764.0 [static]
```

The speed of light squared, in  $m^2/s^2$ .

Definition at line 58 of file gravity\_controls.cc.

Referenced by jeod::GravityControls::calc\_relativistic().

# **Chapter 8**


# **Data Structure Documentation**

### 8.1 jeod::GravityControls Class Reference

Specifies whether and how a GravitySource affects a vehicle.

```
#include <gravity_controls.hh>
```

Inheritance diagram for jeod::GravityControls:

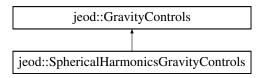

### **Public Member Functions**

- GravityControls ()=default
- virtual ∼GravityControls ()=default
- GravityControls (const GravityControls &)=delete
- GravityControls & operator= (const GravityControls &)=delete
- virtual void initialize\_control (GravityManager &grav\_man)

Initialize this GravityControl.

• virtual void reset\_control (BaseDynManager &dyn\_manager)

Reset subscriptions for this GravityControl.

 virtual void gravitation (const double integ\_pos[3], unsigned int integ\_frame\_idx, double body\_grav\_accel[3], double dgdx[3][3], double Pot[1])

Compute the gravitation at a given position toward a gravity body.

virtual void gravitation (const RefFrame &point\_of\_interest, unsigned int integ\_frame\_idx, double body\_
 grav\_accel[3], double dgdx[3][3], double &pot)

Compute the gravitation at a given position toward a gravity body.

### Static Public Member Functions

static bool accel\_mag\_less\_ptr (const GravityControls \*a, const GravityControls \*b)

Compares the magnitude of the two input gravity controls, returning true if a->grav\_accel\_magsq is less than b->grav\_accel\_magsq, false otherwise.

#### **Data Fields**

· std::string source name

Planet name.

bool active {}

Gravity for this body active?

bool spherical {}

Ignore non-spherical effects?

bool gradient {}

Compute gravity gradient matrix?

bool perturbing\_only {}

Compute only the perturbing gravity?

bool battin\_method {}

Compute third body gravity using Battin's method (Battin, Mathematics and Methods of Astrodynamics)?

bool relativistic {}

Indicates that the relativistic correction to Newtonian gravitation is to be computed.

GravitySource \* body {}

Pointer to the GravitySource object named by planet\_name.

double grav\_accel [3] {}

Gravitational acceleration toward the GravitySource at the location of the DynBody, including third body effects.

double grav\_grad [3][3] {}

Gradient of the gravitational acceleration.

· double grav\_pot {}

Gravitational potential.

double grav accel magsq {}

Square of the magnitude of grav\_accel.

### **Protected Member Functions**

• virtual void calc\_nonspherical (const double integ\_pos[3], const double posn[3], const GravityIntegFrame &grav\_source\_frame, double body\_grav\_accel[3], double dgdx[3][3], double &pot)=0

Nominally, compute the non-spherical contribution to gravity at a given position.

• void calc\_relativistic (const RefFrame &point\_of\_interest, const double rel\_pos[3], const double rel\_vel[3], double perturbing\_accel[3])

Calculates the relativistic correction to gravitational acceleration.

Calculate the spherical gravitational acceleration, either directly or as a third body acceleration.

#### **Protected Attributes**

GravityManager \* grav\_manager {}

Pointer to the simulation-wide GravityManager object.

bool subscribed\_to\_inertial {}

Indicates that a subscription to the planet-centered inertial frame of the planet associated with the gravity\_source been issued.

bool subscribed\_to\_pfix {}

Indicates that a subscription to the planet-centered, planet-fixed frame of the planet associated with the gravity\_source been issued.

bool skip\_spherical {}

Some derived classes' calc\_nonspherical method computes all contributions to gravitation, including spherical.

### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_GravityControls ()

### 8.1.1 Detailed Description

Specifies whether and how a GravitySource affects a vehicle.

Definition at line 89 of file gravity\_controls.hh.

#### 8.1.2 Constructor & Destructor Documentation

```
8.1.2.1 GravityControls() [1/2]

jeod::GravityControls::GravityControls ( ) [default]

8.1.2.2 ~GravityControls()

virtual jeod::GravityControls::~GravityControls ( ) [virtual], [default]

8.1.2.3 GravityControls() [2/2]

jeod::GravityControls::GravityControls ( const GravityControls & ) [delete]
```

### 8.1.3 Member Function Documentation

### 8.1.3.1 accel\_mag\_less\_ptr()

Compares the magnitude of the two input gravity controls, returning true if a->grav\_accel\_magsq is less than b->grav\_accel\_magsq, false otherwise.

### Returns

Result of comparison

#### **Parameters**

| а | First control to be compared.  |
|---|--------------------------------|
| b | Second control to be compared. |

Definition at line 228 of file gravity\_controls.hh.

Referenced by jeod::GravityInteraction::sort controls().

#### 8.1.3.2 calc\_nonspherical()

```
virtual void jeod::GravityControls::calc_nonspherical (
    const double integ_pos[3],
    const double posn[3],
    const GravityIntegFrame & grav_source_frame,
    double body_grav_accel[3],
    double dgdx[3][3],
    double & pot ) [protected], [pure virtual]
```

Nominally, compute the non-spherical contribution to gravity at a given position.

Derived classes whose override of this function computes the full gravitation model, including the spherical contribution, should set the skip\_spherical flag.

#### **Parameters**

| in  | posn            | Inertial position of the point of interest relative to the gravitional body. |  |
|-----|-----------------|--|--|
| out | body_grav_accel | Acceleration at the point of interest due to the gravitional body.           |  |
| out | dgdx            | Gravity gradient at the point of interest.                                   |  |
| out | Pot             | Specific gravitational potential energy.                                     |  |

Implemented in jeod::SphericalHarmonicsGravityControls.

Referenced by gravitation().

### 8.1.3.3 calc\_relativistic()

Calculates the relativistic correction to gravitational acceleration.

#### **Parameters**

| point_of_interest | The point of interest, as a reference frame.        |
|-------------------|---|
| rel_pos           | Displacement vector from the grav body to the POI.  |
| rel_vel           | Time derivative of rel_pos.                         |
| perturbing_accel  | Output relativistic accel, sans the Newtonian term. |

Implements equation 27 (Folkner) / equation 4 (Genova) to compute a parameteric post-Newtonian correction to gravitation. The referenced equation is of the form

$$\begin{split} \boldsymbol{a}_{\text{A,pm-pm}} &= \sum_{B \neq A} \frac{GM_B}{r_{AB}^3} (\boldsymbol{r}_B - \boldsymbol{r}_A) \big(1 + \frac{s_1}{c^2}\big) \\ &+ \frac{1}{c^2} \sum_{B \neq A} \frac{GM_B}{r_{AB}^3} (\boldsymbol{v}_A - \boldsymbol{v}_B) \Big( \big(\boldsymbol{r}_A - \boldsymbol{r}_B\big) \cdot \big((2 + 2\gamma)\boldsymbol{v}_A - (1 + 2\gamma)\boldsymbol{v}_B\big) \Big) \\ &+ \frac{3 + 4\gamma}{2c^2} \sum_{B \neq A} \frac{GM_B}{r_{AB}} \boldsymbol{a}_B \end{split}$$

where  $a_B$  is the net acceleration of gravitating body B toward the other gravitating bodies (typically taken to be the Newtonian gravitational acceleration) and

$$\begin{aligned} s_1 &= -2(\beta + \gamma) \sum_{C \neq A} \frac{GM_C}{r_{AC}} - (2\beta - 1) \sum_{C \neq A} \frac{GM_C}{r_{BC}} \\ &+ \gamma v_a^2 + (1 + \gamma) v_b^2 - 2(1 + \gamma) \boldsymbol{v}_A \cdot \boldsymbol{v}_B \\ &- \frac{3}{2} \left( \frac{(\boldsymbol{r}_A - \boldsymbol{r}_B) \cdot \boldsymbol{v}_B}{r_B} \right)^2 \\ &+ \frac{1}{2} (\boldsymbol{r}_B - \boldsymbol{r}_A) \cdot \boldsymbol{a}_B \end{aligned}$$

In terms of the referenced equation, the intent of this function is to compute the relativistic portion of the acceleration of body *A* toward body *B*. With this, the expression this function computes is

$$egin{align} oldsymbol{\Delta} a_{\mathsf{A},\mathsf{B}} &= rac{1}{c}^2 rac{G M_B}{r_{AB}} igg\{ & rac{oldsymbol{r}_B - oldsymbol{r}_A}{r_{AB}^2} s_1 \ &+ rac{oldsymbol{v}_A - oldsymbol{v}_B}{r_{AB}^2} \Big( ig( oldsymbol{r}_A - oldsymbol{r}_B ig) \cdot ig( (2 + 2 \gamma) oldsymbol{v}_A - (1 + 2 \gamma) oldsymbol{v}_B ig) \Big) \ &+ rac{3 + 4 \gamma}{2} oldsymbol{a}_B igg\} \end{aligned}$$

Note that the common factor  $\frac{1}{c} \frac{2GM_B}{r_{AB}}$  is unitless and thus each of the three terms in the braced expression has units of acceleration.

The referenced equations explicitly involve the parameterized post-Newtonian (PPN) factors  $\beta$  and  $\gamma$ . This function hardcodes both of those factors as one, consistent with general relativity. For example, the factor  $(3+4\gamma)/2$  becomes 3.5 in the code. Magic numbers that involve  $\beta$  or  $\gamma$ , including a factor of one (e.g.,  $2\beta-1$ ), are noted in comments.

#### References

 William M. Folkner, et al., Planetary and Lunar Ephemerides DE430 and DE431, IPN Progress Report 42-196, 15 February 2014.

 $\label{lem:masa.gov/pub/naif/generic_kernels/spk/planets/de430} $$ \operatorname{de430.pdf} $$ and_{de431.pdf} $$$ 

Antonio Genova, et al., Solar system expansion and strong equivalence principle as seen by the NA
 SA MESSENGER mission, Nature Communications 9:289, 18 January 2018, DOI: 10.1038/s41467-01702558-1.

```
https://www.nature.com/articles/s41467-017-02558-1
```

Definition at line 456 of file gravity\_controls.cc.

References body, jeod::GravityManager::get\_bodies(), grav\_manager, jeod::GravitySource::inertial, jeod::Gravity↔ Source::mu, and jeod::speed\_of\_light\_sq.

Referenced by gravitation().

#### 8.1.3.4 calc\_spherical()

Calculate the spherical gravitational acceleration, either directly or as a third body acceleration.

#### **Parameters**

| integ_pos         | Point of interest location, integ frame coordinates        |
|-------------------|--|
| posn              | Vector from gravitational body to point of interest        |
| grav_source_frame | Frame corresponding to the gravitational body              |
| body_grav_accel   | Acceleration at integ_pos due to the grav body             |
| dgdx              | Gravity gradient at integ_pos due to the grav body         |
| pot               | Gravitational potential at integ_pos due to the grav body. |

Definition at line 291 of file gravity controls.cc.

References battin\_method, body, gradient, jeod::GravityIntegFrame::is\_third\_body, jeod::GravitySource::mu, and jeod::GravityIntegFrame::pos.

Referenced by gravitation().

#### **8.1.3.5** gravitation() [1/2]

Compute the gravitation at a given position toward a gravity body.

#### **Parameters**

| in  | integ_pos       | Point of interest, integ coords |
|-----|-----------------|---------------------------------|
|     |                 | Units: M                        |
| in  | integ_frame_idx | Integ frame index               |
| out | body_grav_accel | Accel for given grav body       |
|     |                 | Units: M/s2                     |
| out | dgdx            | Gradient for given grav body    |
|     |                 | Units: 1/s2                     |
| out | Pot             | Potential                       |

Definition at line 187 of file gravity\_controls.cc.

References body, calc\_nonspherical(), calc\_spherical(), jeod::GravitySource::frames, jeod::GravitySource::inertial, perturbing\_only, jeod::GravityIntegFrame::pos, jeod::GravityIntegFrame::ref\_frame, skip\_spherical, and spherical.

Referenced by jeod::GravityManager::gravitation().

#### 8.1.3.6 gravitation() [2/2]

Compute the gravitation at a given position toward a gravity body.

### Parameters

| in  | point_of_interest | Point of interest, as a reference frame.              |
|-----|-------------------|---|
| in  | integ_frame_idx   | Integ frame index.                                    |
| out | body_grav_accel   | Accel for given grav body.                            |
| out | dgdx              | Gradient for given grav body.                         |
| out | pot               | Specific gravitational potential for given grev body. |

Definition at line 232 of file gravity\_controls.cc.

References body, calc\_nonspherical(), calc\_relativistic(), calc\_spherical(), jeod::GravitySource::frames, jeod ::GravitySource::inertial, perturbing\_only, jeod::GravityIntegFrame::pos, jeod::GravityIntegFrame::ref\_frame, relativistic, skip\_spherical, and spherical.

### 8.1.3.7 initialize\_control()

Initialize this GravityControl.

#### **Parameters**

| in | grav_man | Ref to Gravity Manager |
|----|----------|------------------------|
|----|----------|------------------------|

Reimplemented in jeod::SphericalHarmonicsGravityControls.

Definition at line 71 of file gravity\_controls.cc.

References body, jeod::GravityManager::find\_grav\_source(), grav\_manager, jeod::GravitySource::inertial, jeod::
GravityMessages::invalid\_object, jeod::GravityMessages::missing\_entry, jeod::GravitySource::name, and source
name.

Referenced by jeod::SphericalHarmonicsGravityControls::initialize\_control().

#### 8.1.3.8 operator=()

#### 8.1.3.9 reset\_control()

Reset subscriptions for this GravityControl.

#### **Parameters**

| in | dyn_manager | Ptr to dynamics manager |
|----|-------------|-------------------------|

Definition at line 119 of file gravity\_controls.cc.

References active, body, jeod::GravitySource::inertial, jeod::GravityMessages::null\_pointer, jeod::GravitySource :::pfix, source\_name, spherical, subscribed\_to\_inertial, and subscribed\_to\_pfix.

#### 8.1.4 Friends And Related Function Documentation

#### 8.1.4.1 init\_attrjeod\_\_GravityControls

```
void init_attrjeod__GravityControls ( ) [friend]
```

#### 8.1.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 91 of file gravity\_controls.hh.

#### 8.1.5 Field Documentation

#### 8.1.5.1 active

```
bool jeod::GravityControls::active {}
```

Gravity for this body active?

trick units(-)

Definition at line 101 of file gravity\_controls.hh.

Referenced by jeod::GravityManager::gravitation(), reset\_control(), jeod::GravityInteraction::sort\_controls(), and jeod::SphericalHarmonicsGravityControls::update\_deltacoeffs().

#### 8.1.5.2 battin method

```
bool jeod::GravityControls::battin_method {}
```

Compute third body gravity using Battin's method (Battin, Mathematics and Methods of Astrodynamics)?

trick\_units(-)

Definition at line 122 of file gravity\_controls.hh.

Referenced by calc\_spherical().

#### 8.1.5.3 body

```
GravitySource* jeod::GravityControls::body {}
```

Pointer to the GravitySource object named by planet\_name.

Note

Users should not set this data member in the input file.trick\_units(-)

Definition at line 135 of file gravity\_controls.hh.

Referenced by calc\_relativistic(), calc\_spherical(), gravitation(), jeod::SphericalHarmonicsGravityControls ::initialize\_control(), initialize\_control(), and reset\_control().

#### 8.1.5.4 gradient

```
bool jeod::GravityControls::gradient {}
```

Compute gravity gradient matrix?

trick\_units(-)

Definition at line 111 of file gravity\_controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), calc\_spherical(), and jeod:: SphericalHarmonicsGravityControls::check\_validity().

#### 8.1.5.5 grav\_accel

```
double jeod::GravityControls::grav_accel[3] {}
```

Gravitational acceleration toward the GravitySource at the location of the DynBody, including third body effects.

trick\_units(m/s2)

Definition at line 141 of file gravity\_controls.hh.

Referenced by jeod::GravityManager::gravitation(), and jeod::GravityInteraction::sort\_controls().

### 8.1.5.6 grav\_accel\_magsq

```
double jeod::GravityControls::grav_accel_magsq {}
```

Square of the magnitude of grav\_accel.

trick\_units(m2/s4)

Definition at line 156 of file gravity\_controls.hh.

Referenced by jeod::GravityInteraction::sort\_controls().

### 8.1.5.7 grav\_grad

```
double jeod::GravityControls::grav_grad[3][3] {}
```

Gradient of the gravitational acceleration.

trick\_units(1/s2)

Definition at line 146 of file gravity\_controls.hh.

Referenced by jeod::GravityManager::gravitation().

```
8.1.5.8 grav_manager
```

```
GravityManager* jeod::GravityControls::grav_manager {} [protected]
```

Pointer to the simulation-wide GravityManager object.

Note

Users should not set this data member in the input file.trick units(-)

Definition at line 163 of file gravity\_controls.hh.

Referenced by calc\_relativistic(), jeod::SphericalHarmonicsGravityControls::initialize\_control(), and initialize\_ $\leftarrow$  control().

#### 8.1.5.9 grav\_pot

```
double jeod::GravityControls::grav_pot {}
```

Gravitational potential.

trick\_units(m2/s2)

Definition at line 151 of file gravity\_controls.hh.

Referenced by jeod::GravityManager::gravitation().

### 8.1.5.10 perturbing\_only

```
bool jeod::GravityControls::perturbing_only {}
```

Compute only the perturbing gravity?

trick\_units(-)

Definition at line 116 of file gravity\_controls.hh.

Referenced by gravitation().

### 8.1.5.11 relativistic

```
bool jeod::GravityControls::relativistic {}
```

Indicates that the relativistic correction to Newtonian gravitation is to be computed.

The public methods enable\_relativistic\_correction and disable\_relativistic\_correction set / clear this flag.trick\_units(-)

Definition at line 129 of file gravity\_controls.hh.

Referenced by gravitation().

#### 8.1.5.12 skip\_spherical

```
bool jeod::GravityControls::skip_spherical {} [protected]
```

Some derived classes' calc\_nonspherical method computes all contributions to gravitation, including spherical.

Those classes need to set this flag. The flag is clear in the base class and in the SphericalHarmonicsGravityControls derived class.trick\_units(-)

Definition at line 185 of file gravity\_controls.hh.

Referenced by gravitation().

#### 8.1.5.13 source\_name

```
std::string jeod::GravityControls::source_name
```

Planet name.

trick units(-)

Definition at line 96 of file gravity\_controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity(), initialize\_control(), and reset\_control().

### 8.1.5.14 spherical

```
bool jeod::GravityControls::spherical {}
```

Ignore non-spherical effects?

trick\_units(-)

Definition at line 106 of file gravity\_controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity(), gravitation(), and reset\_control().

### 8.1.5.15 subscribed\_to\_inertial

```
bool jeod::GravityControls::subscribed_to_inertial {} [protected]
```

Indicates that a subscription to the planet-centered inertial frame of the planet associated with the gravity\_source been issued.

Note

Users should not set this data member in the input file.trick units(-)

Definition at line 170 of file gravity\_controls.hh.

Referenced by reset\_control().

#### 8.1.5.16 subscribed\_to\_pfix

```
bool jeod::GravityControls::subscribed_to_pfix {} [protected]
```

Indicates that a subscription to the planet-centered, planet-fixed frame of the planet associated with the gravity\_ cource been issued.

Note

Users should not set this data member in the input file.trick\_units(-)

Definition at line 177 of file gravity\_controls.hh.

Referenced by reset\_control().

The documentation for this class was generated from the following files:

- gravity\_controls.hh
- · gravity\_controls.cc

### 8.2 jeod::GravityIntegFrame Class Reference

Class that aids in determining whether gravity should be applied as a direct effect or a third body effect.

```
#include <gravity_integ_frame.hh>
```

### **Public Member Functions**

- GravityIntegFrame ()=default
- ∼GravityIntegFrame ()=default

#### **Data Fields**

const EphemerisRefFrame \* ref\_frame {}

Reference frame.

bool is\_third\_body {}

Is it a third body effect in this frame?

double pos [3] {}

Position of the integration frame origin with respect to a body.

double accel [3] {}

Acceleration of the frame origin with respect to the body.

double time {9e99}

Timestamp of last update to this class.

### Friends

- class InputProcessor
- void init\_attrjeod\_\_GravityIntegFrame ()

### 8.2.1 Detailed Description

Class that aids in determining whether gravity should be applied as a direct effect or a third body effect.

Definition at line 83 of file gravity\_integ\_frame.hh.

### 8.2.2 Constructor & Destructor Documentation

### 8.2.2.1 GravityIntegFrame()

```
jeod::GravityIntegFrame::GravityIntegFrame ( ) [default]
```

### 8.2.2.2 ~GravityIntegFrame()

```
jeod::GravityIntegFrame::~GravityIntegFrame ( ) [default]
```

### 8.2.3 Friends And Related Function Documentation

### 8.2.3.1 init\_attrjeod\_\_GravityIntegFrame

```
void init_attrjeod__GravityIntegFrame ( ) [friend]
```

### 8.2.3.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 85 of file gravity\_integ\_frame.hh.

### 8.2.4 Field Documentation

```
8.2 jeod::GravityIntegFrame Class Reference
8.2.4.1 accel
double jeod::GravityIntegFrame::accel[3] {}
Acceleration of the frame origin with respect to the body.
trick_units(m/s2)
Definition at line 104 of file gravity_integ_frame.hh.
8.2.4.2 is_third_body
bool jeod::GravityIntegFrame::is_third_body {}
Is it a third body effect in this frame?
trick_units(-)
Definition at line 94 of file gravity_integ_frame.hh.
Referenced by jeod::GravityControls::calc_spherical(), and jeod::GravitySource::initialize_state().
8.2.4.3 pos
double jeod::GravityIntegFrame::pos[3] {}
Position of the integration frame origin with respect to a body.
trick_units(m)
Definition at line 99 of file gravity_integ_frame.hh.
```

Referenced by jeod::GravityControls::calc\_spherical(), and jeod::GravityControls::gravitation().

```
8.2.4.4 ref_frame
```

```
const EphemerisRefFrame* jeod::GravityIntegFrame::ref_frame {}
```

Reference frame.

trick\_units(-)

Definition at line 89 of file gravity\_integ\_frame.hh.

 $Referenced \ by \ jeod::Gravity Controls::gravitation(), \ and \ jeod::Gravity Source::initialize\_state().$ 

#### 8.2.4.5 time

```
double jeod::GravityIntegFrame::time {9e99}
```

Timestamp of last update to this class.

trick\_units(s)

Definition at line 109 of file gravity\_integ\_frame.hh.

Referenced by jeod::GravitySource::initialize\_state().

The documentation for this class was generated from the following file:

· gravity\_integ\_frame.hh

### 8.3 jeod::GravityInteraction Class Reference

Specifies interactions between a vehicle and a set of gravitational bodies.

```
#include <gravity_interaction.hh>
```

#### **Public Member Functions**

• GravityInteraction ()

Construct a GravityInteraction instance.

virtual ∼GravityInteraction ()

Destruct a GravityInteraction instance.

- GravityInteraction (const GravityInteraction &frame)=delete
- GravityInteraction & operator= (const GravityInteraction &frame)=delete
- virtual void set\_integ\_frame (const EphemerisRefFrame &ref\_frame\_in, const BaseDynManager &dyn\_

   manager)

Set the integration frame and associated integration frame index.

virtual void add\_control (GravityControls \*control)

Add a new GravityControls to the grav\_controls list.

virtual void remove\_control (GravityControls \*control)

Remove a GravityControls from the grav\_controls list.

• virtual void initialize\_controls (BaseDynManager &dyn\_manager, GravityManager &grav\_manager)

Initialize all GravityControls in the grav\_controls list.

virtual void reset\_controls (BaseDynManager &dyn\_manager)

Reset all GravityControls in the grav\_controls list.

• virtual void sort controls ()

Sort the GravityControls in the grav\_controls list in increasing acceleration magnitude order.

#### **Data Fields**

• unsigned int integ frame index {9999}

The integration frame index number of the DynBody's integration frame.

double grav\_accel [3] {}

The total gravitational acceleration of the DynBody toward all planetary with which the vehicle interacts gravitationally.

double grav\_grad [3][3] {}

The gradient of the gravitational acceleration vector evaluated at the DynBody's position, expressed in the vehicle's integration frame.

double grav\_pot {}

The total gravitational potential at the location of the DynBody due to the gravity fields of all "active" gravitational bodies (i.e., planets).

• JeodPointerVector< GravityControls >::type grav\_controls

The gravity controls list for a DynBody specifies the planetary bodies with which the DynBody interacts and specifies the nature of those interactions.

### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_GravityInteraction ()

### 8.3.1 Detailed Description

Specifies interactions between a vehicle and a set of gravitational bodies.

Definition at line 96 of file gravity\_interaction.hh.

#### 8.3.2 Constructor & Destructor Documentation

```
8.3.2.1 GravityInteraction() [1/2]
jeod::GravityInteraction::GravityInteraction ( )
```

Construct a GravityInteraction instance.

Definition at line 58 of file gravity\_interaction.cc.

References grav\_controls.

#### 8.3.2.2 $\sim$ GravityInteraction()

```
jeod::GravityInteraction::~GravityInteraction ( ) [virtual]
```

Destruct a GravityInteraction instance.

Definition at line 68 of file gravity\_interaction.cc.

References grav\_controls.

#### 8.3.2.3 GravityInteraction() [2/2]

#### 8.3.3 Member Function Documentation

#### 8.3.3.1 add\_control()

Add a new GravityControls to the grav\_controls list.

#### **Parameters**

| in <i>control</i> | Control to be added |
|-------------------|---------------------|
|-------------------|---------------------|

Definition at line 91 of file gravity\_interaction.cc.

References jeod::GravityMessages::duplicate\_entry, and grav\_controls.

### 8.3.3.2 initialize\_controls()

Initialize all GravityControls in the grav\_controls list.

### **Parameters**

| in | dyn_manager  | Ref to Dyn Manager     |
|----|--------------|------------------------|
| in | grav_manager | Ref to Gravity Manager |

Definition at line 135 of file gravity\_interaction.cc.

References grav\_controls, and reset\_controls().

### 8.3.3.3 operator=()

#### 8.3.3.4 remove control()

Remove a GravityControls from the grav\_controls list.

#### **Parameters**

| in | control | GravityControls to be removed. |
|----|---------|--------------------------------|
|----|---------|--------------------------------|

Definition at line 113 of file gravity\_interaction.cc.

References grav\_controls, and jeod::GravityMessages::missing\_entry.

#### 8.3.3.5 reset\_controls()

Reset all GravityControls in the grav\_controls list.

Definition at line 150 of file gravity\_interaction.cc.

References grav\_controls.

Referenced by initialize\_controls().

### 8.3.3.6 set\_integ\_frame()

Set the integration frame and associated integration frame index.

### **Assumptions and Limitations**

• Provided frame is a valid integration frame.

#### **Parameters**

| in | ref_frame   | Integration frame |
|----|-------------|-------------------|
| in | dyn_manager | Dynamics manager  |

Definition at line 82 of file gravity\_interaction.cc.

References integ frame index.

#### 8.3.3.7 sort\_controls()

```
void jeod::GravityInteraction::sort_controls ( ) [virtual]
```

Sort the GravityControls in the grav\_controls list in increasing acceleration magnitude order.

Definition at line 163 of file gravity\_interaction.cc.

References jeod::GravityControls::accel\_mag\_less\_ptr(), jeod::GravityControls::active, jeod::GravityControls::grav\_accel, jeod::GravityControls::grav\_accel\_magsq, and grav\_controls.

#### 8.3.4 Friends And Related Function Documentation

#### 8.3.4.1 init\_attrjeod\_\_GravityInteraction

```
void init_attrjeod__GravityInteraction ( ) [friend]
```

#### 8.3.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 98 of file gravity\_interaction.hh.

#### 8.3.5 Field Documentation

### 8.3.5.1 grav\_accel

```
double jeod::GravityInteraction::grav_accel[3] {}
```

The total gravitational acceleration of the DynBody toward all planetary with which the vehicle interacts gravitationally.

The acceleration is expressed in the DynBody's integration frame. The gravitational acceleration of the integration frame itself toward the planetary bodies is excluded from this total acceleration. For example, for a vehicle integrated in Earth-centered inertial, the Sun component of the total gravitational acceleration is the Newtonian gravitation acceleration of the vehicle toward the Sun less the Newtonian gravitational acceleration of the Earth toward the Sun.trick units(m/s2)

Definition at line 118 of file gravity\_interaction.hh.

 $Referenced\ by\ jeod:: Gravity Manager:: gravitation ().$ 

#### 8.3.5.2 grav\_controls

```
JeodPointerVector<GravityControls>::type jeod::GravityInteraction::grav_controls
```

The gravity controls list for a DynBody specifies the planetary bodies with which the DynBody interacts and specifies the nature of those interactions.

```
trick_io(**)
```

Definition at line 138 of file gravity interaction.hh.

Referenced by add\_control(), jeod::GravityManager::gravitation(), GravityInteraction(), initialize\_controls(), remove\_controls(), sort\_controls(), and  $\sim$ GravityInteraction().

#### 8.3.5.3 grav\_grad

```
double jeod::GravityInteraction::grav_grad[3][3] {}
```

The gradient of the gravitational acceleration vector evaluated at the DynBody's position, expressed in the vehicle's integration frame.

```
trick_units(1/s2)
```

Definition at line 124 of file gravity\_interaction.hh.

Referenced by jeod::GravityManager::gravitation().

### 8.3.5.4 grav\_pot

```
double jeod::GravityInteraction::grav_pot {}
```

The total gravitational potential at the location of the DynBody due to the gravity fields of all "active" gravitational bodies (i.e., planets).

```
trick_units(m2/s2)
```

Definition at line 131 of file gravity\_interaction.hh.

Referenced by jeod::GravityManager::gravitation().

#### 8.3.5.5 integ\_frame\_index

```
unsigned int jeod::GravityInteraction::integ_frame_index {9999}
```

The integration frame index number of the DynBody's integration frame.

This data member must be kept in strict synchronization with the DynBody's integration frame.trick\_units(-)

Definition at line 105 of file gravity\_interaction.hh.

Referenced by jeod::GravityManager::gravitation(), and set\_integ\_frame().

The documentation for this class was generated from the following files:

- · gravity\_interaction.hh
- gravity\_interaction.cc

### 8.4 jeod::GravityManager Class Reference

The master gravitational model for a simulation.

```
#include <gravity_manager.hh>
```

#### **Public Member Functions**

• GravityManager ()

GravityManager constructor.

→GravityManager ()

GravityManager destructor.

- GravityManager (const GravityManager &)=delete
- GravityManager & operator= (const GravityManager &)=delete
- GravitySource \* find grav source (const std::string &source name) const

Find the gravitational body with the given name.

void add\_grav\_source (GravitySource &source)

Create a gravitational body, initialize it with the supplied gravity coefficients, and add it to the vector of bodies.

• void initialize\_model (BaseDynManager &manager)

Perform base initialization.

• void initialize\_state (const BaseDynManager &manager)

Pass the initialize\_state method to each GravitySource object registered with the gravity manager.

void gravitation (const double integ\_pos[3], GravityInteraction &grav)

Compute the gravitational attraction of gravitational bodies on the provided dynamic body.

void gravitation (const RefFrame &point, GravityInteraction &grav)

Compute the gravitational attraction of gravitational bodies on the provided dynamic body.

const std::vector< GravitySource \* > & get\_bodies () const

Get the vector of gravitational bodies.

### **Private Attributes**

JeodPointerVector < GravitySource >::type sources

The gravitational bodies.

#### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_GravityManager ()

### 8.4.1 Detailed Description

The master gravitational model for a simulation.

Definition at line 88 of file gravity\_manager.hh.

#### 8.4.2 Constructor & Destructor Documentation

```
8.4.2.1 GravityManager() [1/2]
jeod::GravityManager::GravityManager ( )
```

GravityManager constructor.

Definition at line 57 of file gravity\_manager.cc.

```
8.4.2.2 \sim GravityManager()
```

```
jeod::GravityManager::~GravityManager ( )
```

GravityManager destructor.

Definition at line 67 of file gravity\_manager.cc.

References sources.

### 8.4.2.3 GravityManager() [2/2]

### 8.4.3 Member Function Documentation

### 8.4.3.1 add\_grav\_source()

Create a gravitational body, initialize it with the supplied gravity coefficients, and add it to the vector of bodies.

#### **Parameters**

| in | source | Gravity source to be added |
|----|--------|----------------------------|
|----|--------|----------------------------|

Definition at line 109 of file gravity\_manager.cc.

References jeod::GravityMessages::duplicate\_entry, find\_grav\_source(), jeod::GravityMessages::invalid\_name, jeod::GravitySource::name, and sources.

### 8.4.3.2 find\_grav\_source()

Find the gravitational body with the given name.

#### Returns

Pointer to found body

#### **Parameters**

| in | source_name | Name of gravity source to be found |
|----|-------------|------------------------------------|
|----|-------------|------------------------------------|

Definition at line 78 of file gravity\_manager.cc.

References jeod::GravityMessages::invalid\_name, jeod::GravitySource::name, and sources.

 $Referenced \ by \ add\_grav\_source(), \ and \ jeod::GravityControls::initialize\_control().$ 

#### 8.4.3.3 get\_bodies()

```
const std::vector<GravitySource *>& jeod::GravityManager::get_bodies ( ) const [inline]
```

Get the vector of gravitational bodies.

### Warning

Do not modify the vector, or elements of it.

Definition at line 148 of file gravity\_manager.hh.

Referenced by jeod::GravityControls::calc\_relativistic().

```
8.4.3.4 gravitation() [1/2]
```

Compute the gravitational attraction of gravitational bodies on the provided dynamic body.

#### **Assumptions and Limitations**

• Only the gravitational bodies specified in the dynamic body's gravity controls have a bearing on the dynamic body's state.

#### Warning

This overload is deprecated.

#### **Parameters**

| in     | integ_pos | Dyn body location (integ frm)<br>Units: M |
|--------|-----------|---|
| in,out | grav      | Gravity interaction                       |

Definition at line 177 of file gravity\_manager.cc.

References jeod::GravityControls::active, jeod::GravityInteraction::grav\_accel, jeod::GravityControls::grav\_ $\leftarrow$  accel, jeod::GravityInteraction::grav\_controls, jeod::GravityInteraction::grav\_grad, jeod::GravityControls::grav\_ $\leftarrow$  grad, jeod::GravityInteraction::grav\_pot, jeod::GravityControls::grav\_pot, jeod::GravityControls::gravityInteraction::integ\_frame\_index.

#### **8.4.3.5** gravitation() [2/2]

Compute the gravitational attraction of gravitational bodies on the provided dynamic body.

### **Assumptions and Limitations**

- Only the gravitational bodies specified in the dynamic body's gravity controls have a bearing on the dynamic body's state.
- The supplied reference frame is assumed to be a direct child of the dynamic body's integration frame.

#### **Parameters**

| in     | point | Point of interest, as a reference frame |  |
|--------|-------|---|--|
| in,out | grav  | Gravity interaction                     |  |

Definition at line 222 of file gravity\_manager.cc.

References jeod::GravityControls::active, jeod::GravityInteraction::grav\_accel, jeod::GravityControls::grav\_ $\leftarrow$  accel, jeod::GravityInteraction::grav\_controls, jeod::GravityInteraction::grav\_grad, jeod::GravityControls::grav\_ $\leftarrow$  grad, jeod::GravityInteraction::grav\_pot, jeod::GravityControls::grav\_pot, jeod::GravityControls::gravityInteraction::integ\_frame\_index.

#### 8.4.3.6 initialize\_model()

Perform base initialization.

#### Note

This method differs from the other initialize\_models methods in that this method takes no coefficients as arguments. The S\_define must call add\_grav\_source explicitly when this signature is used.

#### **Parameters**

| in,out | manager | Dynamics manager |
|--------|---------|------------------|
|--------|---------|------------------|

Definition at line 144 of file gravity\_manager.cc.

#### 8.4.3.7 initialize\_state()

Pass the initialize\_state method to each GravitySource object registered with the gravity manager.

### **Assumptions and Limitations**

- Initialization phasing: The following must have been called prior to calling this method:
  - GravityManager::initialize\_model to register the GravityManager object with the dynamics manager
  - GravityManager::add\_grav\_source to register all GravitySource objects in the simulation with the gravity manager.
  - Planet::register\_model to associate the planet with a GravitySource.
  - DynamicsManager::activate\_ephemerides to identify which reference frames can serve as integration frames.

### **Parameters**

| in,out | manager | Dynamics manager |
|--------|---------|------------------|

Definition at line 165 of file gravity\_manager.cc.

References sources.

### 8.4.3.8 operator=()

### 8.4.4 Friends And Related Function Documentation

#### 8.4.4.1 init\_attrjeod\_\_GravityManager

```
void init_attrjeod__GravityManager ( ) [friend]
```

### 8.4.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 90 of file gravity\_manager.hh.

### 8.4.5 Field Documentation

### 8.4.5.1 sources

```
JeodPointerVector<GravitySource>::type jeod::GravityManager::sources [private]
```

The gravitational bodies.

```
trick_io(**)
```

Definition at line 97 of file gravity\_manager.hh.

Referenced by add\_grav\_source(), find\_grav\_source(), initialize\_state(), and ~GravityManager().

The documentation for this class was generated from the following files:

- gravity\_manager.hh
- gravity\_manager.cc

### 8.5 jeod::GravityMessages Class Reference

Specifies the message IDs used in the gravity model.

```
#include <gravity_messages.hh>
```

#### **Public Member Functions**

- GravityMessages ()=delete
- GravityMessages (const GravityMessages &)=delete
- GravityMessages & operator= (const GravityMessages &)=delete

### **Static Public Attributes**

- static const char \* duplicate\_entry = "environment/gravity/" "duplicate\_entry"
   Issued when a duplicate entry is detected.
- static const char \* missing\_entry = "environment/gravity/" "missing\_entry" Issued when a missing entry is detected.
- static const char \* invalid\_name = "environment/gravity/" "invalid\_name"
   Error issued when a name is invalid (null or empty).
- static const char \* invalid\_object = "environment/gravity/" "invalid\_object"

Error issued when an object is invalid (wrong type).

- static const char \* invalid\_limit = "environment/gravity/" "invalid\_limit"
   Issued when a limit is out of range.
- static const char \* domain\_error = "environment/gravity/" "domain\_error"

  Issued when a value is outside the known-to-be-valid range, e.g., a radial distance less than the planet's equatorial radius.
- static const char \* null\_pointer = "environment/gravity/" "null\_pointer"

  Error issued when a pointer is invalid (null or empty).

#### **Friends**

- class InputProcessor
- void init\_attrjeod\_\_GravityMessages ()

### 8.5.1 Detailed Description

Specifies the message IDs used in the gravity model.

Definition at line 82 of file gravity\_messages.hh.

#### 8.5.2 Constructor & Destructor Documentation

```
8.5.2.1 GravityMessages() [1/2]
jeod::GravityMessages::GravityMessages ( ) [delete]
8.5.2.2 GravityMessages() [2/2]
{\tt jeod::} {\tt Gravity Messages::} {\tt Gravity Messages} \ (
              const GravityMessages & ) [delete]
8.5.3 Member Function Documentation
8.5.3.1 operator=()
GravityMessages& jeod::GravityMessages::operator= (
              const GravityMessages & ) [delete]
8.5.4 Friends And Related Function Documentation
8.5.4.1 init_attrjeod__GravityMessages
void init_attrjeod__GravityMessages ( ) [friend]
8.5.4.2 InputProcessor
```

friend class InputProcessor [friend]

Definition at line 84 of file gravity\_messages.hh.

### 8.5.5 Field Documentation

#### 8.5.5.1 domain\_error

```
const char * jeod::GravityMessages::domain_error = "environment/gravity/" "domain_error" [static]
```

Issued when a value is outside the known-to-be-valid range, e.g., a radial distance less than the planet's equatorial radius.

trick\_units(-)

Definition at line 115 of file gravity\_messages.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical().

#### 8.5.5.2 duplicate\_entry

```
const char * jeod::GravityMessages::duplicate_entry = "environment/gravity/" "duplicate_entry"
[static]
```

Issued when a duplicate entry is detected.

trick\_units(-)

Definition at line 89 of file gravity\_messages.hh.

Referenced by jeod::GravityInteraction::add\_control(), jeod::SphericalHarmonicsGravitySource::add\_deltacoeff(), and jeod::GravityManager::add\_grav\_source().

#### 8.5.5.3 invalid\_limit

```
const char * jeod::GravityMessages::invalid_limit = "environment/gravity/" "invalid_limit"
[static]
```

Issued when a limit is out of range.

trick\_units(-)

Definition at line 109 of file gravity\_messages.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity().

#### 8.5.5.4 invalid\_name

```
const char * jeod::GravityMessages::invalid_name = "environment/gravity/" "invalid_name" [static]
```

Error issued when a name is invalid (null or empty).

trick\_units(-)

Definition at line 99 of file gravity\_messages.hh.

Referenced by jeod::GravityManager::add\_grav\_source(), jeod::GravityManager::find\_grav\_source(), and jeod::

SphericalHarmonicsTidalEffects::initialize().

#### 8.5.5.5 invalid\_object

```
const char * jeod::GravityMessages::invalid_object = "environment/gravity/" "invalid_object"
[static]
```

Error issued when an object is invalid (wrong type).

trick\_units(-)

Definition at line 104 of file gravity\_messages.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity(), jeod::SphericalHarmonicsTidalEffects ::initialize(), and jeod::GravityControls::initialize\_control().

#### 8.5.5.6 missing\_entry

```
const char * jeod::GravityMessages::missing_entry = "environment/gravity/" "missing_entry"
[static]
```

Issued when a missing entry is detected.

trick\_units(-)

Definition at line 94 of file gravity\_messages.hh.

Referenced by jeod::GravityControls::initialize\_control(), and jeod::GravityInteraction::remove\_control().

#### 8.5.5.7 null\_pointer

```
const char * jeod::GravityMessages::null_pointer = "environment/gravity/" "null_pointer" [static]
```

Error issued when a pointer is invalid (null or empty).

trick\_units(-)

Definition at line 120 of file gravity\_messages.hh.

Referenced by jeod::GravityControls::reset\_control().

The documentation for this class was generated from the following files:


- · gravity\_messages.hh
- gravity\_messages.cc

### 8.6 jeod::GravitySource Class Reference

Models the gravity for a specific planet;.

```
#include <gravity_source.hh>
```

Inheritance diagram for jeod::GravitySource:

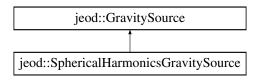

### **Public Member Functions**

• GravitySource ()

GravitySource constructor.

virtual ∼GravitySource ()

GravitySource destructor.

- GravitySource (const GravitySource &)=delete
- GravitySource & operator= (const GravitySource &)=delete
- virtual void initialize\_state (const std::vector< EphemerisRefFrame \*> &integ\_frames, const GravityManager &gravity\_manager)

Initialize frame states for the gravity body.

#### **Data Fields**

std::string name {""}

The name of the source (i.e.

• EphemerisRefFrame \* inertial {}

The pseudo-inertial frame associated with this gravity source.

EphemerisRefFrame \* pfix {}

Planetoid fixed frame.

double mu {}

The planet's standard gravitational parameter, G times planet mass.

GravityIntegFrame \* frames {}

Relative states with respect to this body, for each integration frame.

### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_GravitySource ()

### 8.6.1 Detailed Description

Models the gravity for a specific planet;.

Definition at line 89 of file gravity\_source.hh.

### 8.6.2 Constructor & Destructor Documentation

```
8.6.2.1 GravitySource() [1/2]
jeod::GravitySource::GravitySource ( )
```

GravitySource constructor.

Definition at line 51 of file gravity\_source.cc.

### 8.6.2.2 ~GravitySource()

```
jeod::GravitySource::~GravitySource ( ) [virtual]
```

GravitySource destructor.

Definition at line 59 of file gravity\_source.cc.

References frames.

### 8.6.2.3 GravitySource() [2/2]

### 8.6.3 Member Function Documentation

#### 8.6.3.1 initialize\_state()

Initialize frame states for the gravity body.

#### **Parameters**

| in | integ_frames    | All possible integration frames |
|----|-----------------|---------------------------------|
| in | gravity_manager | Gravity Manager                 |

Definition at line 69 of file gravity\_source.cc.

References frames, inertial, jeod::GravityIntegFrame::is\_third\_body, jeod::GravityIntegFrame::ref\_frame, and jeod::GravityIntegFrame::time.

### 8.6.3.2 operator=()

#### 8.6.4 Friends And Related Function Documentation

### 8.6.4.1 init\_attrjeod\_\_GravitySource

```
void init_attrjeod__GravitySource ( ) [friend]
```

#### 8.6.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 91 of file gravity\_source.hh.

#### 8.6.5 Field Documentation

#### 8.6.5.1 frames

```
GravityIntegFrame* jeod::GravitySource::frames {}
```

Relative states with respect to this body, for each integration frame.

```
trick_units(-)
```

Definition at line 123 of file gravity\_source.hh.

Referenced by jeod::GravityControls::gravitation(), initialize\_state(), and  $\sim$ GravitySource().

#### 8.6.5.2 inertial

```
EphemerisRefFrame* jeod::GravitySource::inertial {}
```

The pseudo-inertial frame associated with this gravity source.

Used for most basic gravity calculations planet represented by thistrick units(-)

Definition at line 106 of file gravity\_source.hh.

Referenced by jeod::GravityControls::calc\_relativistic(), jeod::GravityControls::gravitation(), jeod::GravityControls::initialize control(), initialize state(), and jeod::GravityControls::reset control().

#### 8.6.5.3 mu

```
double jeod::GravitySource::mu {}
```

The planet's standard gravitational parameter, G times planet mass.

trick units(m3/s2)

Definition at line 118 of file gravity source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc nonspherical(), jeod::GravityControls::calc ← relativistic(), jeod::GravityControls::calc spherical(), jeod::SphericalHarmonicsGravitySource earth spherical ← default data::initialize(), jeod::SphericalHarmonicsGravitySource moon GRAIL150 default data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data::initialize(), jeod::SphericalHarmonics←  $jeod::Spherical Harmonics Gravity Source\ mars\ M {\leftarrow}$ GravitySource earth GGM02C default data::initialize(), RO110B2 default data::initialize(), jeod::SphericalHarmonicsGravitySource mars spherical default data← ::initialize(), jeod::SphericalHarmonicsGravitySource sun spherical default data::initialize(), jeod::Spherical↔ HarmonicsGravitySource\_earth\_GGM05C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource← jeod::SphericalHarmonicsGravitySource moon spherical default ← earth GEMT1 default data::initialize(), data::initialize(), jeod::SphericalHarmonicsGravitySource jupiter spherical default data::initialize(), and jeod ← ::SphericalHarmonicsSolidBodyTides::update().

### 8.6.5.4 name

```
std::string jeod::GravitySource::name {""}
```

The name of the source (i.e.

associated planet or planetoid) The GravitySource object, the BasePlanet derived object that points to the GravitySource object, and the EphemerisPlanet that enables populating the planetoid's inertial RefFrame object must all have the exact same name.trick\_units(-)

Definition at line 99 of file gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravitySource::add deltacoeff(), jeod::GravityManager::add grav ← source(), jeod::SphericalHarmonicsGravityControls::calc nonspherical(), jeod::SphericalHarmonicsGravity← ieod::SphericalHarmonicsGravitySource::find\_deltacoeff(), ieod::GravityManager ← Controls::check validity(), ::find grav source(), jeod::SphericalHarmonicsGravitySource moon GRAIL150 default data::initialize(), jeod ← ::SphericalHarmonicsGravitySource earth spherical default data::initialize(), jeod::SphericalHarmonicsGravity↔ Source\_mars\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_spherical\_← jeod::SphericalHarmonicsGravitySource mars MRO110B2 default data::initialize(), default data::initialize(), jeod::SphericalHarmonics← jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), GravitySource\_sun\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GG← M05C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource moon LP150Q default data::initialize(), jeod::SphericalHarmonics← GravitySource jupiter spherical default data::initialize(), and jeod::GravityControls::initialize control().

#### 8.6.5.5 pfix

```
EphemerisRefFrame* jeod::GravitySource::pfix {}
```

Planetoid fixed frame.

The Cartesian reference frame centered and fixed on the associated gravity source. Used for advanced (e.g. nonspherical gravity effects.trick units(–)

Definition at line 113 of file gravity source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsTidal  $\leftarrow$  Effects::initialize(), and jeod::GravityControls::reset\_control().

The documentation for this class was generated from the following files:


- · gravity\_source.hh
- · gravity\_source.cc

## 8.7 jeod::SphericalHarmonicsDeltaCoeffs Class Reference

Base class for tidal and temporal gravity models.

```
#include <spherical_harmonics_delta_coeffs.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsDeltaCoeffs:

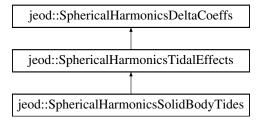

#### **Public Member Functions**

- SphericalHarmonicsDeltaCoeffs ()=default
- virtual ~SphericalHarmonicsDeltaCoeffs ()
   SphericalHarmonicsDeltaCoeffs destructor.
- virtual void initialize (SphericalHarmonicsDeltaCoeffsInit &var\_init, BaseDynManager &dyn\_manager)
   Initialize the class.
- virtual void update (SphericalHarmonicsGravityControls &controls)

Pure virtual update method.

#### **Data Fields**

SphericalHarmonicsGravitySource \* grav\_source {}

Pointer to the gravity body associated with this effect.

double \*\* delta\_Cnm {}

Normalized real (cosine) variational spherical harmonic coefficients.

double \*\* delta\_Snm {}

Normalized imaginary (sine) variational spherical harmonic coeffs.

unsigned int degree {}

Coefficient degree to be used for this SphericalHarmonicsDeltaCoeffs.

unsigned int order {}

Coefficient order to be used for this SphericalHarmonicsDeltaCoeffs.

double dC20 {}

delta C20 coefficient for first order effect

#### **Friends**

- class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsDeltaCoeffs ()

#### 8.7.1 Detailed Description

Base class for tidal and temporal gravity models.

Definition at line 88 of file spherical\_harmonics\_delta\_coeffs.hh.

#### 8.7.2 Constructor & Destructor Documentation

#### 8.7.2.1 SphericalHarmonicsDeltaCoeffs()

```
jeod::SphericalHarmonicsDeltaCoeffs::SphericalHarmonicsDeltaCoeffs ( ) [default]
```

#### 8.7.2.2 ~SphericalHarmonicsDeltaCoeffs()

```
{\tt jeod::Spherical HarmonicsDeltaCoeffs::} {\tt \sim} {\tt Spherical HarmonicsDeltaCoeffs \ (\ ) } \quad [{\tt virtual}]
```

SphericalHarmonicsDeltaCoeffs destructor.

Definition at line 51 of file spherical\_harmonics\_delta\_coeffs.cc.

References degree, delta\_Cnm, and delta\_Snm.

#### 8.7.3 Member Function Documentation

#### 8.7.3.1 initialize()

Initialize the class.

#### **Parameters**

| in     | var_init    | Init structure   |
|--------|-------------|------------------|
| in,out | dyn_manager | Dynamics manager |

Reimplemented in jeod::SphericalHarmonicsTidalEffects, and jeod::SphericalHarmonicsSolidBodyTides.

Definition at line 62 of file spherical\_harmonics\_delta\_coeffs.cc.

References jeod::SphericalHarmonicsDeltaCoeffsInit::degree, degree, jeod::SphericalHarmonicsDeltaCoeffs init::delta\_Cnm, delta\_Cnm, jeod::SphericalHarmonicsDeltaCoeffsInit::delta\_Snm, delta\_Snm, jeod::Spherical HarmonicsDeltaCoeffsInit::order, and order.

Referenced by jeod::SphericalHarmonicsGravitySource::add\_deltacoeff(), and jeod::SphericalHarmonicsTidal Effects::initialize().

#### 8.7.3.2 update()

Pure virtual update method.

#### **Parameters**

| in controls Ignored |
|---------------------|
|---------------------|

Reimplemented in jeod::SphericalHarmonicsTidalEffects, and jeod::SphericalHarmonicsSolidBodyTides.

Definition at line 96 of file spherical harmonics delta coeffs.cc.

#### 8.7.4 Friends And Related Function Documentation

#### 8.7.4.1 init\_attrjeod\_\_SphericalHarmonicsDeltaCoeffs

```
void init_attrjeod__SphericalHarmonicsDeltaCoeffs ( ) [friend]
```

#### 8.7.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 90 of file spherical\_harmonics\_delta\_coeffs.hh.

#### 8.7.5 Field Documentation

#### 8.7.5.1 dC20

```
double jeod::SphericalHarmonicsDeltaCoeffs::dC20 {}
```

delta C20 coefficient for first order effect

```
trick_units(-)
```

Definition at line 120 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs(), and jeod::SphericalHarmonicsSolid← BodyTides::update().

#### 8.7.5.2 degree

```
unsigned int jeod::SphericalHarmonicsDeltaCoeffs::degree {}
```

Coefficient degree to be used for this SphericalHarmonicsDeltaCoeffs.

```
trick_units(-)
```

Definition at line 110 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::add\_deltacontrol(), initialize(), jeod::Spherical $\leftarrow$  HarmonicsTidalEffects::initialize(), and  $\sim$ SphericalHarmonicsDeltaCoeffs().

#### 8.7.5.3 delta\_Cnm

```
double** jeod::SphericalHarmonicsDeltaCoeffs::delta_Cnm {}
```

Normalized real (cosine) variational spherical harmonic coefficients.

```
trick_units(-)
```

Definition at line 100 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by initialize(), jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs(), and  $\sim$ Spherical $\leftarrow$ HarmonicsDeltaCoeffs().

#### 8.7.5.4 delta\_Snm

```
double** jeod::SphericalHarmonicsDeltaCoeffs::delta_Snm {}
```

Normalized imaginary (sine) variational spherical harmonic coeffs.

```
trick_units(-)
```

Definition at line 105 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by initialize(), jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs(), and  $\sim$ Spherical $\leftarrow$ HarmonicsDeltaCoeffs().

#### 8.7.5.5 grav\_source

```
SphericalHarmonicsGravitySource* jeod::SphericalHarmonicsDeltaCoeffs::grav_source {}
```

Pointer to the gravity body associated with this effect.

```
trick_units(-)
```

Definition at line 95 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by jeod::SphericalHarmonicsGravitySource::add\_deltacoeff(), jeod::SphericalHarmonicsTidalEffects ::initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().

#### 8.7.5.6 order

```
unsigned int jeod::SphericalHarmonicsDeltaCoeffs::order {}
```

Coefficient order to be used for this SphericalHarmonicsDeltaCoeffs.

```
trick_units(-)
```

Definition at line 115 of file spherical\_harmonics\_delta\_coeffs.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::add\_deltacontrol(), initialize(), and jeod::Spherical← HarmonicsTidalEffects::initialize().

The documentation for this class was generated from the following files:


- · spherical harmonics delta coeffs.hh
- spherical\_harmonics\_delta\_coeffs.cc

# 8.8 jeod::SphericalHarmonicsDeltaCoeffsInit Class Reference

Initialization data for a SphericalHarmonicsDeltaCoeffs instance.

```
#include <spherical_harmonics_delta_coeffs_init.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsDeltaCoeffsInit:

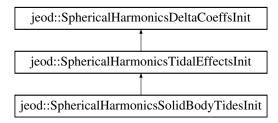

#### **Public Member Functions**

- SphericalHarmonicsDeltaCoeffsInit ()=default
- virtual ~SphericalHarmonicsDeltaCoeffsInit ()=default

#### **Data Fields**

double \*\* delta\_Cnm {}

Normalized real (cosine) variational spherical harmonic coefficients.

double \*\* delta\_Snm {}

Normalized imaginary (sine) variational spherical harmonic coeffs.

• unsigned int degree {}

Coefficient degree to be used for this SphericalHarmonicsDeltaCoeffs.

unsigned int order {}

Coefficient order to be used for this SphericalHarmonicsDeltaCoeffs.

# **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsDeltaCoeffsInit ()

#### 8.8.1 Detailed Description

Initialization data for a SphericalHarmonicsDeltaCoeffs instance.

Definition at line 78 of file spherical\_harmonics\_delta\_coeffs\_init.hh.

#### 8.8.2 Constructor & Destructor Documentation

#### 8.8.2.1 SphericalHarmonicsDeltaCoeffsInit()

jeod::SphericalHarmonicsDeltaCoeffsInit::SphericalHarmonicsDeltaCoeffsInit ( ) [default]

#### 8.8.2.2 ~SphericalHarmonicsDeltaCoeffsInit()

# 8.8.3 Friends And Related Function Documentation

#### 8.8.3.1 init\_attrjeod\_SphericalHarmonicsDeltaCoeffsInit

void init\_attrjeod\_\_SphericalHarmonicsDeltaCoeffsInit ( ) [friend]

#### 8.8.3.2 InputProcessor

friend class InputProcessor [friend]

Definition at line 80 of file spherical\_harmonics\_delta\_coeffs\_init.hh.

# 8.8.4 Field Documentation

#### 8.8.4.1 degree

unsigned int jeod::SphericalHarmonicsDeltaCoeffsInit::degree {}

Coefficient degree to be used for this SphericalHarmonicsDeltaCoeffs.

trick\_units(-)

Definition at line 95 of file spherical\_harmonics\_delta\_coeffs\_init.hh.

Referenced by jeod::SphericalHarmonicsDeltaCoeffs::initialize().

# 8.8.4.2 delta\_Cnm double\*\* jeod::SphericalHarmonicsDeltaCoeffsInit::delta\_Cnm {} Normalized real (cosine) variational spherical harmonic coefficients. trick\_units(-) Definition at line 85 of file spherical\_harmonics\_delta\_coeffs\_init.hh. Referenced by jeod::SphericalHarmonicsDeltaCoeffs::initialize().

```
8.8.4.3 delta_Snm
```

```
double** jeod::SphericalHarmonicsDeltaCoeffsInit::delta_Snm {}
```

Normalized imaginary (sine) variational spherical harmonic coeffs.

trick\_units(-)

Definition at line 90 of file spherical\_harmonics\_delta\_coeffs\_init.hh.

Referenced by jeod::SphericalHarmonicsDeltaCoeffs::initialize().

#### 8.8.4.4 order

```
unsigned int jeod::SphericalHarmonicsDeltaCoeffsInit::order {}
```

Coefficient order to be used for this SphericalHarmonicsDeltaCoeffs.

trick\_units(-)

Definition at line 100 of file spherical harmonics delta coeffs init.hh.

Referenced by jeod::SphericalHarmonicsDeltaCoeffs::initialize().

The documentation for this class was generated from the following file:

• spherical\_harmonics\_delta\_coeffs\_init.hh

# 8.9 jeod::SphericalHarmonicsDeltaControls Class Reference

Provides controls for how a variational model affects a vehicle.

```
#include <spherical_harmonics_delta_controls.hh>
```

#### **Public Member Functions**

- SphericalHarmonicsDeltaControls ()=default
- ~SphericalHarmonicsDeltaControls ()=default

#### **Data Fields**

SphericalHarmonicsDeltaCoeffs \* grav\_effect {}

Pointer to associated coefficient-altering gravitational effect.

SphericalHarmonicsGravitySource \* grav\_source {}

Pointer to the gravity body associated with this effect.

bool active {}

Is this variational gravity effect active for this body?

bool first\_order\_only {true}

Calculate first-order term of this effect only; default to true for 2.0.

unsigned int degree {}

Coefficient degree to be used for this gravity effect.

• unsigned int order {}

Coefficient order to be used for this gravity effect.

#### **Friends**

- · class InputProcessor
- · void init\_attrjeod\_\_SphericalHarmonicsDeltaControls ()

#### 8.9.1 Detailed Description

Provides controls for how a variational model affects a vehicle.

Definition at line 81 of file spherical\_harmonics\_delta\_controls.hh.

#### 8.9.2 Constructor & Destructor Documentation

#### 8.9.2.1 SphericalHarmonicsDeltaControls()

jeod::SphericalHarmonicsDeltaControls::SphericalHarmonicsDeltaControls () [default]

#### 8.9.2.2 ~SphericalHarmonicsDeltaControls()

 ${\tt jeod::Spherical Harmonics Delta Controls::} {\tt \sim} {\tt Spherical Harmonics Delta Controls \ (\ ) \quad [default]}$ 

#### 8.9.3 Friends And Related Function Documentation

# 8.9.3.1 init\_attrjeod\_\_SphericalHarmonicsDeltaControls

```
void init_attrjeod__SphericalHarmonicsDeltaControls ( ) [friend]
```

#### 8.9.3.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 83 of file spherical harmonics delta controls.hh.

#### 8.9.4 Field Documentation

#### 8.9.4.1 active

```
bool jeod::SphericalHarmonicsDeltaControls::active {}
```

Is this variational gravity effect active for this body?

trick\_units(-)

Definition at line 98 of file spherical\_harmonics\_delta\_controls.hh.

 $Referenced\ by\ jeod:: Spherical Harmonics Gravity Controls:: sum\_deltacoeffs ().$ 

#### 8.9.4.2 degree

```
unsigned int jeod::SphericalHarmonicsDeltaControls::degree {}
```

Coefficient degree to be used for this gravity effect.

trick\_units(-)

Definition at line 108 of file spherical harmonics delta controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs().

```
8.9.4.3 first_order_only
```

```
bool jeod::SphericalHarmonicsDeltaControls::first_order_only {true}
```

Calculate first-order term of this effect only; default to true for 2.0.

trick units(-)

Definition at line 103 of file spherical harmonics delta controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs().

#### 8.9.4.4 grav\_effect

```
SphericalHarmonicsDeltaCoeffs* jeod::SphericalHarmonicsDeltaControls::grav_effect {}
```

Pointer to associated coefficient-altering gravitational effect.

trick\_units(-)

Definition at line 88 of file spherical\_harmonics\_delta\_controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::add\_deltacontrol(), and jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs().

# 8.9.4.5 grav\_source

```
SphericalHarmonicsGravitySource* jeod::SphericalHarmonicsDeltaControls::grav_source {}
```

Pointer to the gravity body associated with this effect.

trick\_units(-)

Definition at line 93 of file spherical\_harmonics\_delta\_controls.hh.

#### 8.9.4.6 order

```
unsigned int jeod::SphericalHarmonicsDeltaControls::order {}
```

Coefficient order to be used for this gravity effect.

trick\_units(-)

Definition at line 113 of file spherical\_harmonics\_delta\_controls.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::sum\_deltacoeffs().

The documentation for this class was generated from the following file:


• spherical\_harmonics\_delta\_controls.hh

# 8.10 jeod::SphericalHarmonicsGravityControls Class Reference

Specifies whether and how a SphericalHarmonicsGravitySource affects a vehicle.

#include <spherical\_harmonics\_gravity\_controls.hh>

Inheritance diagram for jeod::SphericalHarmonicsGravityControls:

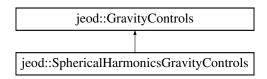

#### **Public Member Functions**

SphericalHarmonicsGravityControls ()

SphericalHarmonicsGravityControls constructor.

~SphericalHarmonicsGravityControls () override

SphericalHarmonicsGravityControls destructor.

- SphericalHarmonicsGravityControls (const SphericalHarmonicsGravityControls &)=delete
- SphericalHarmonicsGravityControls & operator= (const SphericalHarmonicsGravityControls &)=delete
- void initialize\_control (GravityManager &grav\_manager) override

Initialize this GravityControl.

virtual void add\_deltacontrol (SphericalHarmonicsDeltaControls \*delta\_control)

Add a new GravityDeltaControls to the var\_effects list.

unsigned int get\_degree ()

Output the current functional degree.

• unsigned int get order ()

Output the current functional order.

void get\_degree\_order (unsigned int &current\_degree, unsigned int &current\_order)

Output the current functional degree and order.

unsigned int get\_grad\_degree ()

Output the current functional gradient degree.

unsigned int get\_grad\_order ()

Output the current functional gradient order.

void get\_grad\_degree\_order (unsigned int &curr\_grad\_degree, unsigned int &curr\_grad\_order)

Output the current functional gradient degree and order.

void set\_degree (unsigned int new\_degree)

Update the functional degree.

void set\_order (unsigned int new\_order)

Update the functional order.

void set\_degree\_order (unsigned int new\_degree, unsigned int new\_order)

Update the functional degree and order.

void set\_grad\_degree (unsigned int new\_grad\_degree)

Update the functional gradient degree.

· void set grad order (unsigned int new grad order)

Update the functional gradient order.

void set grad\_degree\_order (unsigned int new\_grad\_degree, unsigned int new\_grad\_order)

Update the functional gradient degree and order.

void disable\_min\_radius\_warnings ()

Disable minimum radius warnings for this spherical harmonics gravity control.

#### **Data Fields**

SphericalHarmonicsGravitySource \* harmonics\_source {}

The GravitySource pointer from the base class, recast.

double \*\* Pnm {}

LeGendre polynomials used to calculate non-spherical attraction.

unsigned int delta\_degree {}

Coefficient degree to be used for totaling up all active delta\_coeffs.

unsigned int delta\_order {}

Coefficient order to be used for totaling up all active delta\_coeffs.

double \*\* delta Cnm {}

Array for collecting all active normalized real (cosine) variational spherical harmonic coefficients.

double \*\* delta Snm {}

Array for collecting all active normalized real (sine) variational spherical harmonic coefficients.

double total\_dC20 {}

delta C20 coefficient for collecting first order effects of all active delta\_coeffs.

unsigned int degree {}

Non-spherical degree to be used.

• unsigned int order {}

Non-spherical order to be used.

unsigned int gradient\_degree {}

Non-spherical degree to be used for computing gradient.

unsigned int gradient\_order {}

Non-spherical order to be used for computing gradient.

• JeodPointerVector < SphericalHarmonicsDeltaControls >::type var effects

List of controls for variational gravity effects like solid-body tides.

#### **Protected Member Functions**

Compute the gravitational acceleration at a given position toward a gravitational body assuming the body has a non-spherical mass distribution.

virtual void check\_validity ()

Check the validity of the gravity controls.

virtual void update\_deltacoeffs ()

Command all of the gravitational variation effects to update themselves.

• virtual void sum\_deltacoeffs ()

Loop over all of the active gravitational variation effects models and aggregate their changes to the gravity coefficients into the top-level delta-coeffs "bin" for this gravity body.

# **Protected Attributes**

bool min\_radius\_warn {}

Indicates that the minimum radius threshold has been crossed and that a warning has been issued for such.

#### **Friends**

- class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsGravityControls ()

#### **Additional Inherited Members**

#### 8.10.1 Detailed Description

Specifies whether and how a SphericalHarmonicsGravitySource affects a vehicle.

Definition at line 87 of file spherical\_harmonics\_gravity\_controls.hh.

#### 8.10.2 Constructor & Destructor Documentation

```
8.10.2.1 SphericalHarmonicsGravityControls() [1/2]
```

```
jeod::SphericalHarmonicsGravityControls::SphericalHarmonicsGravityControls ( )
```

SphericalHarmonicsGravityControls constructor.

Definition at line 55 of file spherical\_harmonics\_gravity\_controls.cc.

References var\_effects.

#### 8.10.2.2 ~SphericalHarmonicsGravityControls()

```
\verb|jeod::SphericalHarmonicsGravityControls:: \sim SphericalHarmonicsGravityControls () [override]|
```

SphericalHarmonicsGravityControls destructor.

Definition at line 65 of file spherical\_harmonics\_gravity\_controls.cc.

 $References\ jeod::Spherical Harmonics Gravity Source::degree,\ delta\_Cnm,\ delta\_degree,\ delta\_Snm,\ harmonics\_{\hookleftarrow}\ source,\ Pnm,\ and\ var\_effects.$ 

#### 8.10.2.3 SphericalHarmonicsGravityControls() [2/2]

```
{\tt jeod::Spherical Harmonics Gravity Controls::Spherical Harmonics Gravity Controls \ (} \\ {\tt const Spherical Harmonics Gravity Controls \ \& \ ) \ [delete]}
```

#### 8.10.3 Member Function Documentation

# 8.10.3.1 add\_deltacontrol()

```
\label{lem:control} void jeod::SphericalHarmonicsGravityControls::add\_deltacontrol \ ( \\ SphericalHarmonicsDeltaControls * delta\_control \ ) \ \ [virtual]
```

Add a new GravityDeltaControls to the var\_effects list.

#### **Parameters**

| in delta_control | Control to be added |
|------------------|---------------------|
|------------------|---------------------|

Definition at line 145 of file spherical\_harmonics\_gravity\_controls.cc.

References jeod::SphericalHarmonicsDeltaCoeffs::degree, delta\_Cnm, delta\_degree, delta\_order, delta\_Snm, jeod::SphericalHarmonicsDeltaControls::grav\_effect, jeod::SphericalHarmonicsDeltaCoeffs::order, and var\_effects.

#### 8.10.3.2 calc\_nonspherical()

Compute the gravitational acceleration at a given position toward a gravitational body assuming the body has a non-spherical mass distribution.

#### **Parameters**

| in  | posn            | Point of interest, inrtl coords |
|-----|-----------------|---------------------------------|
|     |                 | Units: M                        |
| out | body_grav_accel | Accel for given grav body       |
|     |                 | Units: M/s2                     |
| out | dgdx            | Gradient for given grav body    |
|     |                 | Units: 1/s2                     |
| out | Pot             | Potential                       |

Implements jeod::GravityControls.

Definition at line 54 of file spherical\_harmonics\_calc\_nonspherical.cc.

References jeod::SphericalHarmonicsGravitySource::alpha, jeod::SphericalHarmonicsGravitySource::beta, jeod ::SphericalHarmonicsGravitySource::cnm, degree, jeod::GravityMessages::domain\_error, jeod::Spherical + HarmonicsGravitySource::eta, jeod::GravityControls::gradient, gradient\_degree, gradient\_order, harmonics - \_\_source, jeod::SphericalHarmonicsGravitySource::int\_to\_double, min\_radius\_warn, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::ndiug, order, jeod::GravitySource::pfix, Pnm, jeod::SphericalHarmonicsGravitySource::radius, jeod::SphericalHarmonicsGravitySource::snm, sum\_- deltacoeffs(), jeod::SphericalHarmonicsGravitySource::tide\_- free\_delta, total\_dC20, update\_deltacoeffs(), jeod::SphericalHarmonicsGravitySource::upsilon, var\_effects, jeod-: :SphericalHarmonicsGravitySource::xi, and jeod::SphericalHarmonicsGravitySource::zeta.

```
8.10.3.3 check_validity()
```

```
void jeod::SphericalHarmonicsGravityControls::check_validity ( ) [protected], [virtual]
```

Check the validity of the gravity controls.

Definition at line 322 of file spherical\_harmonics\_gravity\_controls.cc.

References jeod::SphericalHarmonicsGravitySource::degree, degree, jeod::GravityControls::gradient, gradient\_cdegree, gradient\_order, harmonics\_source, jeod::GravityMessages::invalid\_limit, jeod::GravityMessages::invalidcobject, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, order, jeod::GravityControlscotted:.source\_name, and jeod::GravityControls::spherical.

Referenced by initialize\_control(), set\_degree(), set\_degree\_order(), set\_grad\_degree(), set\_grad\_degree(), set\_grad\_order(), set\_grad\_order().

#### 8.10.3.4 disable\_min\_radius\_warnings()

```
void jeod::SphericalHarmonicsGravityControls::disable_min_radius_warnings ( ) [inline]
```

Disable minimum radius warnings for this spherical harmonics gravity control.

Definition at line 227 of file spherical\_harmonics\_gravity\_controls.hh.

#### 8.10.3.5 get\_degree()

```
unsigned int jeod::SphericalHarmonicsGravityControls::get_degree ( )
```

Output the current functional degree.

Returns

Current degree

Definition at line 188 of file spherical\_harmonics\_gravity\_controls.cc.

References degree.

# 8.10.3.6 get\_degree\_order()

Output the current functional degree and order.

#### **Parameters**

| out | current_degree | Current degree |
|-----|----------------|----------------|
| out | current_order  | Current order  |

Definition at line 207 of file spherical\_harmonics\_gravity\_controls.cc.

References degree, and order.

#### 8.10.3.7 get\_grad\_degree()

```
unsigned\ int\ jeod:: Spherical Harmonics Gravity Controls:: get\_grad\_degree\ (\ )
```

Output the current functional gradient degree.

#### Returns

Current gradient degree

Definition at line 217 of file spherical\_harmonics\_gravity\_controls.cc.

References gradient\_degree.

#### 8.10.3.8 get\_grad\_degree\_order()

Output the current functional gradient degree and order.

#### Parameters

| out | curr_grad_degree | Current gradient degree |
|-----|------------------|-------------------------|
| out | curr_grad_order  | Current gradient order  |

Definition at line 236 of file spherical\_harmonics\_gravity\_controls.cc.

References gradient\_degree, and gradient\_order.

#### 8.10.3.9 get\_grad\_order()

```
unsigned\ int\ jeod:: Spherical Harmonics Gravity Controls:: get\_grad\_order\ (\ )
```

Output the current functional gradient order.

Returns

Current gradient order

Definition at line 226 of file spherical\_harmonics\_gravity\_controls.cc.

References gradient order.

```
8.10.3.10 get_order()
```

```
unsigned int jeod::SphericalHarmonicsGravityControls::get_order ( )
```

Output the current functional order.

Returns

Current order

Definition at line 197 of file spherical\_harmonics\_gravity\_controls.cc.

References order.

# 8.10.3.11 initialize\_control()

Initialize this GravityControl.

#### **Parameters**

| in | grav_manager | Ref to Gravity Manager |
|----|--------------|------------------------|

Reimplemented from jeod::GravityControls.

Definition at line 86 of file spherical\_harmonics\_gravity\_controls.cc.

 $References\ jeod::GravityControls::body,\ check\_validity(),\ jeod::SphericalHarmonicsGravitySource::degree,\ jeod::GravityControls::grav\_manager,\ harmonics\_source,\ jeod::GravityControls::initialize\_control(),\ and\ Pnm.$ 

#### 8.10.3.12 operator=()

#### 8.10.3.13 set\_degree()

Update the functional degree.

#### **Parameters**

| in | new_degree | New desired degree |
|----|------------|--------------------|
|----|------------|--------------------|

Definition at line 247 of file spherical\_harmonics\_gravity\_controls.cc.

References check\_validity(), and degree.

#### 8.10.3.14 set\_degree\_order()

Update the functional degree and order.

#### **Parameters**

| in | new_degree | New desired degree |
|----|------------|--------------------|
| in | new_order  | New desired order  |

Definition at line 272 of file spherical\_harmonics\_gravity\_controls.cc.

References check\_validity(), degree, and order.

# 8.10.3.15 set\_grad\_degree()

Update the functional gradient degree.

### **Parameters**

| in | new_grad_degree | New desired degree |
|----|-----------------|--------------------|

 $Definition\ at\ line\ 285\ of\ file\ spherical\_harmonics\_gravity\_controls.cc.$ 

References check\_validity(), and gradient\_degree.

#### 8.10.3.16 set\_grad\_degree\_order()

Update the functional gradient degree and order.

#### **Parameters**

| in | new_grad_degree | New desired degree |
|----|-----------------|--------------------|
| in | new_grad_order  | New desired order  |

Definition at line 310 of file spherical\_harmonics\_gravity\_controls.cc.

References check\_validity(), gradient\_degree, and gradient\_order.

#### 8.10.3.17 set\_grad\_order()

Update the functional gradient order.

#### **Parameters**

| in | new_grad_order | New desired order |
|----|----------------|-------------------|

Definition at line 297 of file spherical\_harmonics\_gravity\_controls.cc.

References check\_validity(), and gradient\_order.

#### 8.10.3.18 set\_order()

```
void jeod::SphericalHarmonicsGravityControls::set_order ( unsigned\ int\ \textit{new\_order}\ )
```

Update the functional order.

#### **Parameters**

| in | new_order | New desired order |  |  |
|----|-----------|-------------------|--|--|

Definition at line 259 of file spherical\_harmonics\_gravity\_controls.cc.

References check\_validity(), and order.

#### 8.10.3.19 sum\_deltacoeffs()

```
void jeod::SphericalHarmonicsGravityControls::sum_deltacoeffs ( ) [protected], [virtual]
```

Loop over all of the active gravitational variation effects models and aggregate their changes to the gravity coefficients into the top-level delta-coeffs "bin" for this gravity body.

Definition at line 469 of file spherical\_harmonics\_gravity\_controls.cc.

References jeod::SphericalHarmonicsDeltaControls::active, jeod::SphericalHarmonicsDeltaCoeffs::dC20, jeod  $\leftarrow$  ::SphericalHarmonicsDeltaControls::degree, jeod::SphericalHarmonicsDeltaCoeffs::delta\_Cnm, delta\_Cnm, jeod::SphericalHarmonicsGravitySource::delta\_coeffs, delta\_degree, delta\_order, jeod::SphericalHarmonics  $\leftarrow$  DeltaCoeffs::delta\_Snm, delta\_Snm, jeod::SphericalHarmonicsDeltaControls::first\_order\_only, jeod::Spherical $\leftarrow$  HarmonicsDeltaControls::grav\_effect, harmonics\_source, jeod::SphericalHarmonicsDeltaControls::order, total\_d  $\leftarrow$  C20, and var\_effects.

Referenced by calc\_nonspherical().

#### 8.10.3.20 update\_deltacoeffs()

```
void jeod::SphericalHarmonicsGravityControls::update_deltacoeffs ( ) [protected], [virtual]
```

Command all of the gravitational variation effects to update themselves.

Definition at line 450 of file spherical\_harmonics\_gravity\_controls.cc.

References jeod::GravityControls::active, jeod::SphericalHarmonicsGravitySource::delta\_coeffs, harmonics $\_\leftarrow$  source, and var effects.

Referenced by calc\_nonspherical().

#### 8.10.4 Friends And Related Function Documentation

#### 8.10.4.1 init\_attrjeod\_\_SphericalHarmonicsGravityControls

```
void init_attrjeod__SphericalHarmonicsGravityControls ( ) [friend]
```

#### 8.10.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 89 of file spherical\_harmonics\_gravity\_controls.hh.

#### 8.10.5 Field Documentation

#### 8.10.5.1 degree

```
unsigned int jeod::SphericalHarmonicsGravityControls::degree {}
```

Non-spherical degree to be used.

NOTE: this data being public is deprecated and should not be relied upon in future releases. Use the provided accessor methods instead.trick\_units(-)

Definition at line 146 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), check\_validity(), get\_degree(), get\_degree\_order(), set\_degree(), and set\_degree\_order().

### 8.10.5.2 delta\_Cnm

```
double** jeod::SphericalHarmonicsGravityControls::delta_Cnm {}
```

Array for collecting all active normalized real (cosine) variational spherical harmonic coefficients.

trick\_units(-)

Definition at line 127 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by add\_deltacontrol(), sum\_deltacoeffs(), and ~SphericalHarmonicsGravityControls().

#### 8.10.5.3 delta\_degree

```
unsigned int jeod::SphericalHarmonicsGravityControls::delta_degree {}
```

Coefficient degree to be used for totaling up all active delta\_coeffs.

trick\_units(-)

Definition at line 116 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by add\_deltacontrol(), sum\_deltacoeffs(), and  $\sim$ SphericalHarmonicsGravityControls().

#### 8.10.5.4 delta\_order

```
unsigned int jeod::SphericalHarmonicsGravityControls::delta_order {}
```

Coefficient order to be used for totaling up all active delta\_coeffs.

trick\_units(-)

Definition at line 121 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by add\_deltacontrol(), and sum\_deltacoeffs().

#### 8.10.5.5 delta Snm

```
double** jeod::SphericalHarmonicsGravityControls::delta_Snm {}
```

Array for collecting all active normalized real (sine) variational spherical harmonic coefficients.

trick\_units(-)

Definition at line 133 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by add\_deltacontrol(), sum\_deltacoeffs(), and ~SphericalHarmonicsGravityControls().

#### 8.10.5.6 gradient\_degree

```
unsigned int jeod::SphericalHarmonicsGravityControls::gradient_degree {}
```

Non-spherical degree to be used for computing gradient.

NOTE: this data being public is deprecated and should not be relied upon in future releases. Use the provided accessor methods instead.trick\_units(-)

Definition at line 160 of file spherical\_harmonics\_gravity\_controls.hh.

 $Referenced\ by\ calc\_nonspherical(),\ check\_validity(),\ get\_grad\_degree(),\ get\_grad\_degree\_order(),\ set\_grad\_degree\_order().$ 

#### 8.10.5.7 gradient\_order

```
unsigned int jeod::SphericalHarmonicsGravityControls::gradient_order {}
```

Non-spherical order to be used for computing gradient.

NOTE: this data being public is deprecated and should not be relied upon in future releases. Use the provided accessor methods instead.trick\_units(-)

Definition at line 167 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), check\_validity(), get\_grad\_degree\_order(), get\_grad\_order(), set\_grad\_ $\leftarrow$  degree\_order(), and set\_grad\_order().

#### 8.10.5.8 harmonics\_source

```
SphericalHarmonicsGravitySource* jeod::SphericalHarmonicsGravityControls::harmonics_source {}
```

The GravitySource pointer from the base class, recast.

#### Note

Users should not set this data member in the input file.trick\_units(-)

Definition at line 106 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), check\_validity(), initialize\_control(), sum\_deltacoeffs(), update\_deltacoeffs(), and ~SphericalHarmonicsGravityControls().

#### 8.10.5.9 min\_radius\_warn

```
bool jeod::SphericalHarmonicsGravityControls::min_radius_warn {} [protected]
```

Indicates that the minimum radius threshold has been crossed and that a warning has been issued for such.

This prevents a spew of messages regarding such under-threshold conditions.

#### Note

Users should not set this data member in the input file unless you wish to disable all such messages.trick $\_\leftarrow$  units( $\_$ )

Definition at line 99 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical().

# 8.10.5.10 order

```
unsigned int jeod::SphericalHarmonicsGravityControls::order {}
```

Non-spherical order to be used.

NOTE: this data being public is deprecated and should not be relied upon in future releases. Use the provided accessor methods instead.trick\_units(-)

Definition at line 153 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), check\_validity(), get\_degree\_order(), get\_order(), set\_degree\_order(), and set order().

#### 8.10.5.11 Pnm

```
double** jeod::SphericalHarmonicsGravityControls::Pnm {}
```

LeGendre polynomials used to calculate non-spherical attraction.

```
trick_units(-)
```

Definition at line 111 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), initialize\_control(), and ~SphericalHarmonicsGravityControls().

#### 8.10.5.12 total\_dC20

```
double jeod::SphericalHarmonicsGravityControls::total_dC20 {}
```

delta C20 coefficient for collecting first order effects of all active delta\_coeffs.

```
trick_units(-)
```

Definition at line 139 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by calc\_nonspherical(), and sum\_deltacoeffs().

# 8.10.5.13 var\_effects

List of controls for variational gravity effects like solid-body tides.

```
trick_io(**)
```

Definition at line 172 of file spherical\_harmonics\_gravity\_controls.hh.

Referenced by add\_deltacontrol(), calc\_nonspherical(), SphericalHarmonicsGravityControls(), sum\_deltacoeffs(), update\_deltacoeffs(), and  $\sim$ SphericalHarmonicsGravityControls().

The documentation for this class was generated from the following files:


- · spherical harmonics gravity controls.hh
- · spherical harmonics calc nonspherical.cc
- spherical\_harmonics\_gravity\_controls.cc

# 8.11 jeod::SphericalHarmonicsGravitySource Class Reference

Models the gravity for a specific planet using spherical harmonics.

```
#include <spherical_harmonics_gravity_source.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource:

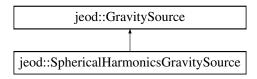

#### **Public Member Functions**

• SphericalHarmonicsGravitySource ()

SphericalHarmonicsGravitySource constructor.

• ~SphericalHarmonicsGravitySource () override

SphericalHarmonicsGravitySource destructor.

- SphericalHarmonicsGravitySource (const SphericalHarmonicsGravitySource &)=delete
- SphericalHarmonicsGravitySource & operator= (const SphericalHarmonicsGravitySource &)=delete
- virtual void initialize\_body ()

Initialize Gottlieb gravity coefficients.

• int find\_deltacoeff (const SphericalHarmonicsDeltaCoeffs &delta\_coeff) const

Find the given variational gravity effect if already exists.

 void add\_deltacoeff (SphericalHarmonicsDeltaCoeffsInit &var\_init, BaseDynManager &dyn\_manager, SphericalHarmonicsDeltaCoeffs &var\_effect)

Add a gravitational variation effect (i.e., a delta coeffs) to the vector of effects.

#### **Data Fields**

• double radius {}

Spherical harmonics distance scale, typically the planet's mean equatorial radius.

unsigned int degree {}

The degree of the spherical harmonics gravity coefficients.

unsigned int order {}

The order of the spherical harmonics gravity coefficients.

double \*\* Cnm {}

Normalized real (cosine) spherical harmonic coefficients.

double \*\* Snm {}

Normalized imaginary (sine) spherical harmonic coefficients.

bool tide\_free {}

Is C20 coefficient free of the permanent tide effect?

double tide\_free\_delta {}

Number to be added to C20 to remove the permanent tide.

double \* a\_by\_rad {}

(Planet radius/vehicle distance)^n

double \* alpha {}

Gottlieb coefficient alpha.

```
double * beta {}
      Gottlieb coefficient beta.

    double ** xi {}

      Gottlieb coefficient xi.

    double ** eta {}

      Gottlieb coefficient eta.
double ** zeta {}
      Gottlieb coefficient zeta.
double ** upsilon {}
      Gottlieb coefficient upsilon.
double * nrdiag {}
      Gottlieb coefficient nrdiag.
double * int_to_double {}
      0 to degree+1 cast as doubles

    JeodPointerVector < SphericalHarmonicsDeltaCoeffs >::type delta_coeffs

      List of all gravity coefficient altering effects such as solid-body tides.
```

#### **Friends**

- class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsGravitySource ()

# 8.11.1 Detailed Description

Models the gravity for a specific planet using spherical harmonics.

Definition at line 90 of file spherical\_harmonics\_gravity\_source.hh.

# 8.11.2 Constructor & Destructor Documentation

```
8.11.2.1 SphericalHarmonicsGravitySource() [1/2]
```

 ${\tt jeod::Spherical Harmonics Gravity Source::Spherical Harmonics Gravity Source} \end{\ref{fig:spherical Harmonics Gravity Source}} \end{\ref{fig:$ 

SphericalHarmonicsGravitySource constructor.

Definition at line 57 of file spherical\_harmonics\_gravity\_source.cc.

References delta coeffs.

#### 8.11.2.2 ~SphericalHarmonicsGravitySource()

```
{\tt jeod::Spherical Harmonics Gravity Source::} {\tt \sim} {\tt Spherical Harmonics Gravity Source \ (\ ) \ [override]}
```

SphericalHarmonicsGravitySource destructor.

Definition at line 67 of file spherical harmonics gravity source.cc.

References a\_by\_rad, alpha, beta, Cnm, degree, delta\_coeffs, eta, int\_to\_double, nrdiag, Snm, upsilon, xi, and zeta.

#### 8.11.2.3 SphericalHarmonicsGravitySource() [2/2]

#### 8.11.3 Member Function Documentation

#### 8.11.3.1 add\_deltacoeff()

Add a gravitational variation effect (i.e., a delta coeffs) to the vector of effects.

#### **Parameters**

| in | var_init    | Effect init structure   |
|----|-------------|-------------------------|
| in | dyn_manager | Dynamics manager        |
| in | var_effect  | Delta coeff to be added |

Definition at line 240 of file spherical\_harmonics\_gravity\_source.cc.

References delta\_coeffs, jeod::GravityMessages::duplicate\_entry, find\_deltacoeff(), jeod::SphericalHarmonics DeltaCoeffs::grav\_source, jeod::SphericalHarmonicsDeltaCoeffs::initialize(), and jeod::GravitySource::name.

# 8.11.3.2 find\_deltacoeff()

Find the given variational gravity effect if already exists.

#### Returns

Index number of delta-coeff; -1 if not found

#### **Parameters**

| in | delta_coeff | delta-coeff to be found |
|----|-------------|-------------------------|

Definition at line 211 of file spherical\_harmonics\_gravity\_source.cc.

References delta\_coeffs, and jeod::GravitySource::name.

Referenced by add\_deltacoeff().

#### 8.11.3.3 initialize\_body()

```
void jeod::SphericalHarmonicsGravitySource::initialize_body ( ) [virtual]
```

Initialize Gottlieb gravity coefficients.

Definition at line 86 of file spherical\_harmonics\_gravity\_source.cc.

References a\_by\_rad, alpha, beta, degree, eta, int\_to\_double, nrdiag, upsilon, xi, and zeta.

# 8.11.3.4 operator=()

# 8.11.4 Friends And Related Function Documentation

# 8.11.4.1 init\_attrjeod\_\_SphericalHarmonicsGravitySource

```
\verb"void init_attrjeod_\_Spherical Harmonics Gravity Source () [friend]
```

#### 8.11.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 92 of file spherical\_harmonics\_gravity\_source.hh.

#### 8.11.5 Field Documentation

```
8.11.5.1 a_by_rad
double* jeod::SphericalHarmonicsGravitySource::a_by_rad {}
(Planet radius/vehicle distance)^n
trick_units(-)
Definition at line 133 of file spherical harmonics gravity source.hh.
Referenced by initialize_body(), and \simSphericalHarmonicsGravitySource().
8.11.5.2 alpha
double* jeod::SphericalHarmonicsGravitySource::alpha {}
Gottlieb coefficient alpha.
trick_units(-)
Definition at line 138 of file spherical_harmonics_gravity_source.hh.
Referenced by jeod::SphericalHarmonicsGravityControls::calc_nonspherical(), initialize_body(), and ∼Spherical ←
HarmonicsGravitySource().
8.11.5.3 beta
double* jeod::SphericalHarmonicsGravitySource::beta {}
```

Definition at line 143 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

Gottlieb coefficient beta.

trick units(-)

#### 8.11.5.4 Cnm

```
double** jeod::SphericalHarmonicsGravitySource::Cnm {}
```

Normalized real (cosine) spherical harmonic coefficients.

trick\_units(-)

Definition at line 113 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsGravity 
Source\_moon\_GRAIL150\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_
default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data::initialize(), jeod::
SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), jeod::SphericalHarmonicsGravity
Source\_mars\_MRO110B2\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_
default\_data::initialize(), and ~SphericalHarmonicsGravitySource().

#### 8.11.5.5 degree

```
unsigned int jeod::SphericalHarmonicsGravitySource::degree {}
```

The degree of the spherical harmonics gravity coefficients.

trick\_units(-)

Definition at line 103 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity(), jeod::SphericalHarmonicsGravity  $\hookleftarrow$  Source\_earth\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_GRAIL150  $\hookleftarrow$  \_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150  $\hookleftarrow$  Q\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data::initialize(), initialize\_body(), jeod::SphericalHarmonicsGravityControls::initialize\_control(), jeod::SphericalHarmonicsGravity  $\hookleftarrow$  Controls:: $\sim$ SphericalHarmonicsGravityControls(), and  $\sim$ SphericalHarmonicsGravitySource().

#### 8.11.5.6 delta coeffs

List of all gravity coefficient altering effects such as solid-body tides.

trick io(\*\*)

Definition at line 179 of file spherical harmonics gravity source.hh.

Referenced by add\_deltacoeff(), find\_deltacoeff(), SphericalHarmonicsGravitySource(), jeod::Spherical $\leftarrow$  HarmonicsGravityControls::sum\_deltacoeffs(), jeod::SphericalHarmonicsGravityControls::update\_deltacoeffs(), and  $\sim$ SphericalHarmonicsGravitySource().

```
8.11.5.7 eta
```

```
double** jeod::SphericalHarmonicsGravitySource::eta {}
```

Gottlieb coefficient eta.

```
trick_units(-)
```

Definition at line 153 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

#### 8.11.5.8 int\_to\_double

```
double* jeod::SphericalHarmonicsGravitySource::int_to_double {}
```

0 to degree+1 cast as doubles

```
trick_units(-)
```

Definition at line 173 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

#### 8.11.5.9 nrdiag

```
double* jeod::SphericalHarmonicsGravitySource::nrdiag {}
```

Gottlieb coefficient nrdiag.

```
trick_units(-)
```

Definition at line 168 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

#### 8.11.5.10 order

```
unsigned int jeod::SphericalHarmonicsGravitySource::order {}
```

The order of the spherical harmonics gravity coefficients.

trick\_units(-)

Definition at line 108 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::check\_validity(), jeod::SphericalHarmonicsGravity  $\hookleftarrow$  Source\_earth\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_GRAIL150\_ $\hookleftarrow$  default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q $\hookleftarrow$  default\_data::initialize(), and jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize().

#### 8.11.5.11 radius

```
double jeod::SphericalHarmonicsGravitySource::radius {}
```

Spherical harmonics distance scale, typically the planet's mean equatorial radius.

trick\_units(m)

Definition at line 98 of file spherical harmonics gravity source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsGravity Source\_earth\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_gravitySource\_moon\_gravitySource\_moon\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_moon\_lengthgravitySource\_moon\_lengthgravitySource\_moon\_lengthgravitySource\_mars\_sphericalHarmonicsGravitySource\_moon\_lengthgravitySource\_mars\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_mars\_spherical\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_earth\_gravitySource\_gravitySource\_earth\_gravitySource\_gravitySource\_earth\_gravitySource\_gravitySource\_earth\_gravitySource\_gravitySource\_earth\_gravitySource\_gravitySource\_gravitySource\_gravitySource\_earth\_gravitySource\_gravity

#### 8.11.5.12 Snm

```
double** jeod::SphericalHarmonicsGravitySource::Snm {}
```

Normalized imaginary (sine) spherical harmonic coefficients.

trick\_units(-)

Definition at line 118 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsGravity 
Source\_moon\_GRAIL150\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_
default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data::initialize(), jeod::
SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), jeod::SphericalHarmonicsGravity
Source\_mars\_MRO110B2\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_
default\_data::initialize(), and ~SphericalHarmonicsGravitySource().

```
8.11.5.13 tide_free
```

```
bool jeod::SphericalHarmonicsGravitySource::tide_free {}
```

Is C20 coefficient free of the permanent tide effect?

trick units(-)

Definition at line 123 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsGravity  $\leftarrow$  Source\_moon\_GRAIL150\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_ $\leftarrow$  default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data::initialize(), jeod::SphericalHarmonicsCoravitySource\_earth\_co

```
8.11.5.14 tide_free_delta
```

```
double jeod::SphericalHarmonicsGravitySource::tide_free_delta {}
```

Number to be added to C20 to remove the permanent tide.

trick\_units(-)

Definition at line 128 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), jeod::SphericalHarmonicsGravity  $\hookleftarrow$  Source\_moon\_GRAIL150\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_ $\hookleftarrow$  default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data::initialize(), jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data::initialize(), and jeod::SphericalHarmonics  $\hookleftarrow$  GravitySource\_earth\_GEMT1\_default\_data::initialize().

# 8.11.5.15 upsilon

```
double** jeod::SphericalHarmonicsGravitySource::upsilon {}
```

Gottlieb coefficient upsilon.

trick\_units(-)

Definition at line 163 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

#### 8.11.5.16 xi

double\*\* jeod::SphericalHarmonicsGravitySource::xi {}

Gottlieb coefficient xi.

trick\_units(-)

Definition at line 148 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().

# 8.11.5.17 zeta

double\*\* jeod::SphericalHarmonicsGravitySource::zeta {}

Gottlieb coefficient zeta.

trick\_units(-)

Definition at line 158 of file spherical\_harmonics\_gravity\_source.hh.

Referenced by jeod::SphericalHarmonicsGravityControls::calc\_nonspherical(), initialize\_body(), and  $\sim$ Spherical $\leftarrow$ HarmonicsGravitySource().


The documentation for this class was generated from the following files:

- spherical\_harmonics\_gravity\_source.hh
- spherical\_harmonics\_gravity\_source.cc

# 8.12 jeod::SphericalHarmonicsGravitySource\_default\_data Class Reference

#include <spherical\_harmonics\_gravity\_source\_default\_data.hh>

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_default\_data:

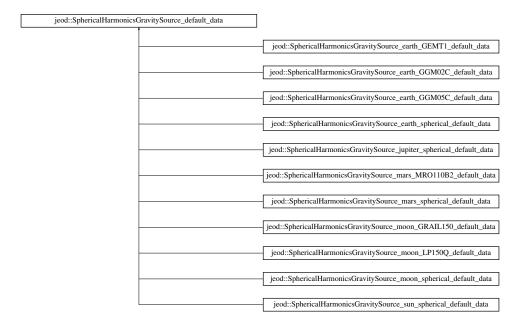

#### **Public Member Functions**

- virtual void initialize (SphericalHarmonicsGravitySource \*)=0
- virtual ~SphericalHarmonicsGravitySource\_default\_data ()=default

#### 8.12.1 Detailed Description

Definition at line 51 of file spherical harmonics gravity source default data.hh.

#### 8.12.2 Constructor & Destructor Documentation

#### 8.12.2.1 ~SphericalHarmonicsGravitySource\_default\_data()

```
\label{lem:control} virtual jeod::SphericalHarmonicsGravitySource\_default\_data::\simSphericalHarmonicsGravitySource \\ \_default\_data ( ) [virtual], [default]
```

#### 8.12.3 Member Function Documentation

#### 8.12.3.1 initialize()

Implemented in jeod::SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data, jeod::SphericalHarmonicsGravitySource\_earth\_ggM02C\_default\_data, jeod::SphericalHarmonicsGravitySource\_earth\_ggM05C\_d jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data, jeod::SphericalHarmonicsGravitySource\_mars\_spherical\_jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data, jeod::SphericalHarmonicsGravitySource\_moon\_spherical\_default\_data, jeod::SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data, jeod::SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data.

The documentation for this class was generated from the following file:

• spherical\_harmonics\_gravity\_source\_default\_data.hh

# 8.13 jeod::SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data Class Reference

```
#include <earth_GEMT1.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource earth GEMT1 default data:

```
jeod::SphericalHarmonicsGravitySource_default_data

jeod::SphericalHarmonicsGravitySource_earth_GEMT1_default_data
```

#### **Public Member Functions**

void initialize (SphericalHarmonicsGravitySource \*) override

#### 8.13.1 Detailed Description

Definition at line 55 of file earth\_GEMT1.hh.

#### 8.13.2 Member Function Documentation

#### 8.13.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 58 of file earth\_GEMT1.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::tide\_free, and jeod::SphericalHarmonicsGravitySource::tide\_free\_delta.

The documentation for this class was generated from the following files:

- · earth GEMT1.hh
- earth\_GEMT1.cc

# 8.14 jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data Class Reference

```
#include <earth_GGM02C.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data:

```
jeod::SphericalHarmonicsGravitySource_default_data

jeod::SphericalHarmonicsGravitySource_earth_GGM02C_default_data
```

#### **Public Member Functions**

void initialize (SphericalHarmonicsGravitySource \*) override

## 8.14.1 Detailed Description

Definition at line 55 of file earth\_GGM02C.hh.

#### 8.14.2 Member Function Documentation

#### 8.14.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 54 of file earth\_GGM02C.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::tide\_free, and jeod::SphericalHarmonicsGravitySource::tide\_free\_delta.

The documentation for this class was generated from the following files:

- earth GGM02C.hh
- earth\_GGM02C.cc

# 8.15 jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data Class Reference

```
#include <earth_GGM05C.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data:

```
jeod::SphericalHarmonicsGravitySource_default_data

jeod::SphericalHarmonicsGravitySource_earth_GGM05C_default_data
```

#### **Public Member Functions**

void initialize (SphericalHarmonicsGravitySource \*) override

## 8.15.1 Detailed Description

Definition at line 55 of file earth\_GGM05C.hh.

#### 8.15.2 Member Function Documentation

#### 8.15.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 32 of file earth\_GGM05C.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::Snm, jeod::SphericalHarmonicsGravitySource::tide\_free, and jeod::SphericalHarmonicsGravitySource::tide\_free\_delta.

The documentation for this class was generated from the following files:

- earth GGM05C.hh
- earth\_GGM05C.cc

# 8.16 jeod::SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data Class Reference

```
#include <earth_spherical.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data:

```
jeod::SphericalHarmonicsGravitySource_default_data

| jeod::SphericalHarmonicsGravitySource_earth_spherical_default_data
```

#### **Public Member Functions**

void initialize (SphericalHarmonicsGravitySource \*) override

## 8.16.1 Detailed Description

Definition at line 54 of file earth\_spherical.hh.

#### 8.16.2 Member Function Documentation

#### 8.16.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 37 of file earth\_spherical.cc.

References jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, and jeod::SphericalHarmonicsGravitySource::radius.

The documentation for this class was generated from the following files:

- · earth\_spherical.hh
- · earth\_spherical.cc

# 8.17 jeod::SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data Class Reference

```
#include <jupiter_spherical.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data:

```
jeod::SphericalHarmonicsGravitySource_default_data

| jeod::SphericalHarmonicsGravitySource_jupiter_spherical_default_data
```

#### **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

## 8.17.1 Detailed Description

Definition at line 55 of file jupiter\_spherical.hh.

#### 8.17.2 Member Function Documentation

## 8.17.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 36 of file jupiter\_spherical.cc.

References jeod::GravitySource::mu, jeod::GravitySource::name, and jeod::SphericalHarmonicsGravitySource::radius.


The documentation for this class was generated from the following files:

- jupiter\_spherical.hh
- jupiter\_spherical.cc

# 8.18 jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data Class Reference

```
#include <mars_MR0110B2.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource mars MRO110B2 default data:

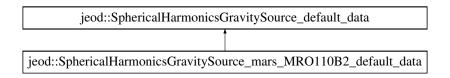

## **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

#### 8.18.1 Detailed Description

Definition at line 55 of file mars MRO110B2.hh.

## 8.18.2 Member Function Documentation

#### 8.18.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 48 of file mars\_MRO110B2.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod:: $\leftarrow$  SphericalHarmonicsGravitySource::radius, jeod::SphericalHarmonicsGravitySource::Snm, and jeod::Spherical $\leftarrow$  HarmonicsGravitySource::tide\_free.


The documentation for this class was generated from the following files:

- mars MRO110B2.hh
- mars\_MRO110B2.cc

# 8.19 jeod::SphericalHarmonicsGravitySource\_mars\_spherical\_default\_data Class Reference

```
#include <mars_spherical.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource mars spherical default data:

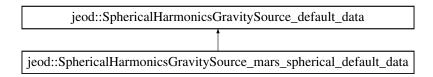

### **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

## 8.19.1 Detailed Description

Definition at line 55 of file mars\_spherical.hh.

#### 8.19.2 Member Function Documentation

## 8.19.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 37 of file mars\_spherical.cc.

References jeod::GravitySource::mu, jeod::GravitySource::name, and jeod::SphericalHarmonicsGravitySource ::radius.


The documentation for this class was generated from the following files:

- · mars\_spherical.hh
- mars\_spherical.cc

# 8.20 jeod::SphericalHarmonicsGravitySource\_moon\_GRAIL150\_default\_data Class Reference

```
#include <moon_GRAIL150.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_moon\_GRAIL150\_default\_data:

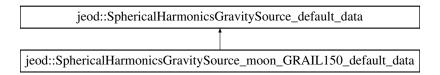

### **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

## 8.20.1 Detailed Description

Definition at line 54 of file moon\_GRAIL150.hh.

## 8.20.2 Member Function Documentation

#### 8.20.2.1 initialize()

 $Implements\ jeod:: Spherical Harmonics Gravity Source\_default\_data.$ 

Definition at line 51 of file moon\_GRAIL150.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::tide\_free, and jeod::SphericalHarmonicsGravitySource::tide\_free\_delta.


The documentation for this class was generated from the following files:

- moon GRAIL150.hh
- moon\_GRAIL150.cc

# 8.21 jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data Class Reference

```
#include <moon_LP150Q.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource moon LP150Q default data:

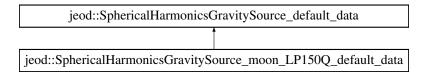

### **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

## 8.21.1 Detailed Description

Definition at line 55 of file moon\_LP150Q.hh.

#### 8.21.2 Member Function Documentation

#### 8.21.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 53 of file moon\_LP150Q.cc.

References jeod::SphericalHarmonicsGravitySource::Cnm, jeod::SphericalHarmonicsGravitySource::degree, jeod::GravitySource::mu, jeod::GravitySource::name, jeod::SphericalHarmonicsGravitySource::order, jeod::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::SphericalHarmonicsGravitySource::tide\_free, and jeod::SphericalHarmonicsGravitySource::tide\_free\_delta.


The documentation for this class was generated from the following files:

- · moon LP150Q.hh
- · moon LP150Q.cc

# 8.22 jeod::SphericalHarmonicsGravitySource\_moon\_spherical\_default\_data Class Reference

```
#include <moon_spherical.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource moon spherical default data:

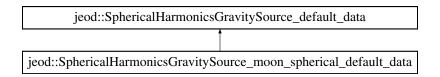

### **Public Member Functions**

• void initialize (SphericalHarmonicsGravitySource \*) override

## 8.22.1 Detailed Description

Definition at line 55 of file moon\_spherical.hh.

### 8.22.2 Member Function Documentation

#### 8.22.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource\_default\_data.

Definition at line 39 of file moon\_spherical.cc.


The documentation for this class was generated from the following files:

- · moon\_spherical.hh
- moon\_spherical.cc

# 8.23 jeod::SphericalHarmonicsGravitySource\_sun\_spherical\_default\_data Class Reference

```
#include <sun_spherical.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsGravitySource\_sun\_spherical\_default\_data:

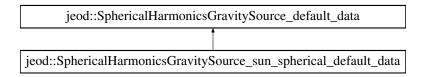

### **Public Member Functions**

void initialize (SphericalHarmonicsGravitySource \*) override

## 8.23.1 Detailed Description

Definition at line 55 of file sun\_spherical.hh.

## 8.23.2 Member Function Documentation

#### 8.23.2.1 initialize()

Implements jeod::SphericalHarmonicsGravitySource default data.

Definition at line 40 of file sun\_spherical.cc.

The documentation for this class was generated from the following files:


- · sun\_spherical.hh
- · sun\_spherical.cc

# 8.24 jeod::SphericalHarmonicsSolidBodyTides Class Reference

Models solid body tidal effects.

```
#include <spherical_harmonics_solid_body_tides.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsSolidBodyTides:

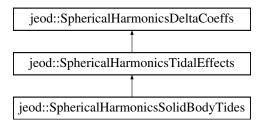

## **Public Member Functions**

- SphericalHarmonicsSolidBodyTides ()=default
- $\sim$ SphericalHarmonicsSolidBodyTides () override=default
- void initialize (SphericalHarmonicsDeltaCoeffsInit &var\_init, BaseDynManager &dyn\_manager) override
   Initialize the solid body tidal model.
- void update (SphericalHarmonicsGravityControls &controls) override
   Update the solid-body tidal delta-coefficients.

## **Friends**

- class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsSolidBodyTides ()

## **Additional Inherited Members**

## 8.24.1 Detailed Description

Models solid body tidal effects.

Definition at line 89 of file spherical\_harmonics\_solid\_body\_tides.hh.

## 8.24.2 Constructor & Destructor Documentation

## 8.24.2.1 SphericalHarmonicsSolidBodyTides()

```
jeod::SphericalHarmonicsSolidBodyTides::SphericalHarmonicsSolidBodyTides ( ) [default]
```

#### 8.24.2.2 ~SphericalHarmonicsSolidBodyTides()

```
{\tt jeod::Spherical Harmonics Solid Body Tides::} {\tt \sim Spherical Harmonics Solid Body Tides () [override], [default]}
```

#### 8.24.3 Member Function Documentation

# 8.24.3.1 initialize()

Initialize the solid body tidal model.

## Parameters

| in | var_init    | Effect init structure |
|----|-------------|-----------------------|
| in | dyn_manager | Dynamics manager      |

Reimplemented from jeod::SphericalHarmonicsDeltaCoeffs.

Definition at line 58 of file spherical\_harmonics\_solid\_body\_tides.cc.

References jeod::SphericalHarmonicsTidalEffects::initialize().

#### 8.24.3.2 update()

Update the solid-body tidal delta-coefficients.

#### **Parameters**

| in | controls | Gravity controls for planet |
|----|----------|-----------------------------|
|----|----------|-----------------------------|

 $Reimplemented\ from\ jeod::Spherical Harmonics Delta Coeffs.$ 

Definition at line 69 of file spherical\_harmonics\_solid\_body\_tides.cc.

#### 8.24.4 Friends And Related Function Documentation

#### 8.24.4.1 init\_attrjeod\_\_SphericalHarmonicsSolidBodyTides

```
\verb"void init_attrjeod_\_SphericalHarmonicsSolidBodyTides" ( ) \quad [friend]
```

# 8.24.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 91 of file spherical\_harmonics\_solid\_body\_tides.hh.

The documentation for this class was generated from the following files:


- spherical\_harmonics\_solid\_body\_tides.hh
- spherical\_harmonics\_solid\_body\_tides.cc

# 8.25 jeod::SphericalHarmonicsSolidBodyTidesInit Class Reference

Initializes a solid body tides model.

#include <spherical\_harmonics\_solid\_body\_tides\_init.hh>

Inheritance diagram for jeod::SphericalHarmonicsSolidBodyTidesInit:

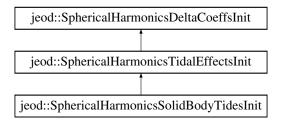

## **Public Member Functions**

- SphericalHarmonicsSolidBodyTidesInit ()=default
- $\bullet \ \sim \! \mathsf{SphericalHarmonicsSolidBodyTidesInit} \ () \ \mathsf{override=default} \\$

#### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsSolidBodyTidesInit ()

#### **Additional Inherited Members**

## 8.25.1 Detailed Description

Initializes a solid body tides model.

Definition at line 81 of file spherical\_harmonics\_solid\_body\_tides\_init.hh.

## 8.25.2 Constructor & Destructor Documentation

#### 8.25.2.1 SphericalHarmonicsSolidBodyTidesInit()

jeod::SphericalHarmonicsSolidBodyTidesInit::SphericalHarmonicsSolidBodyTidesInit ( ) [default]

## 8.25.2.2 ~SphericalHarmonicsSolidBodyTidesInit()

 ${\tt jeod::SphericalHarmonicsSolidBodyTidesInit::} {\tt \sim} {\tt SphericalHarmonicsSolidBodyTidesInit ( ) [override], [default]}$ 

#### 8.25.3 Friends And Related Function Documentation

## 8.25.3.1 init\_attrjeod\_\_SphericalHarmonicsSolidBodyTidesInit

void init\_attrjeod\_\_SphericalHarmonicsSolidBodyTidesInit ( ) [friend]

## 8.25.3.2 InputProcessor

friend class InputProcessor [friend]

Definition at line 83 of file spherical\_harmonics\_solid\_body\_tides\_init.hh.

The documentation for this class was generated from the following file:

• spherical\_harmonics\_solid\_body\_tides\_init.hh

# 8.26 jeod::SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data Class Reference

#include <earth\_solid\_tides.hh>

#### **Public Member Functions**

void initialize (SphericalHarmonicsSolidBodyTidesInit \*)

## 8.26.1 Detailed Description

Definition at line 55 of file earth\_solid\_tides.hh.

### 8.26.2 Member Function Documentation

#### 8.26.2.1 initialize()

Definition at line 39 of file earth\_solid\_tides.cc.

 $References\ jeod::Spherical Harmonics Tidal Effects Init:: k2,\ and\ jeod::Spherical Harmonics Tidal Effects Init:: tidal\_ \\ body\_names.$ 

The documentation for this class was generated from the following files:


- · earth solid tides.hh
- · earth solid tides.cc

# 8.27 jeod::SphericalHarmonicsTidalEffects Class Reference

Models tidal effects as a delta on top of a gravity model.

```
#include <spherical_harmonics_tidal_effects.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsTidalEffects:

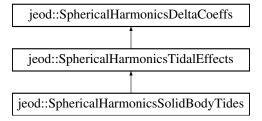

## **Public Member Functions**

- SphericalHarmonicsTidalEffects ()=default
- ~SphericalHarmonicsTidalEffects () override SphericalHarmonicsTidalEffects destructor.
- void initialize (SphericalHarmonicsDeltaCoeffsInit &var\_init, BaseDynManager &dyn\_manager) override
   Initialize a SphericalHarmonicsTidalEffects object.
- void update (SphericalHarmonicsGravityControls &controls) override

Pure virtual update method.

#### **Data Fields**

double xp {}

Copy of polar motion coefficient xp (from polar motion class).

double yp {}

Copy of polar motion coefficient yp (from polar motion class).

double k2 {}

The love number.

double \*\* Knm {}

A matrix of love numbers.

unsigned int num\_tidal\_bodies {}

The number of tidal bodies named in tidal\_bodies.

## **Protected Attributes**

```
    Planet ** tidal_bodies {}
        The tidal bodies.
    RefFrame ** tidal_bodies_inertial {}
        Pointers to the tidal_bodies inertial reference frames.
    RefFrame * pfix {}
```

#### **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsTidalEffects ()

The planet fixed reference frame of the subject body.

## 8.27.1 Detailed Description

Models tidal effects as a delta on top of a gravity model.

Definition at line 91 of file spherical\_harmonics\_tidal\_effects.hh.

## 8.27.2 Constructor & Destructor Documentation

#### 8.27.2.1 SphericalHarmonicsTidalEffects()

```
{\tt jeod::Spherical HarmonicsTidal Effects::Spherical HarmonicsTidal Effects () [default]}
```

#### 8.27.2.2 ~SphericalHarmonicsTidalEffects()

```
{\tt jeod::Spherical HarmonicsTidal Effects::} {\tt \sim} {\tt Spherical HarmonicsTidal Effects \ (\ ) \ \ [override]}
```

SphericalHarmonicsTidalEffects destructor.

Definition at line 65 of file spherical\_harmonics\_tidal\_effects.cc.

#### 8.27.3 Member Function Documentation

## 8.27.3.1 initialize()

Initialize a SphericalHarmonicsTidalEffects object.

This method overrides and calls the base class initialize method.

#### **Parameters**

| in | gen_var_init | Effect init structure |
|----|--------------|-----------------------|
| in | dyn_manager  | Dynamics manager      |

Reimplemented from jeod::SphericalHarmonicsDeltaCoeffs.

Definition at line 78 of file spherical harmonics tidal effects.cc.

References jeod::SphericalHarmonicsDeltaCoeffs::degree, jeod::SphericalHarmonicsDeltaCoeffs::grav\_source, jeod::SphericalHarmonicsDeltaCoeffs::initialize(), jeod::GravityMessages::invalid\_name, jeod::GravityMessages::invalid\_name, jeod::GravityMessages::invalid\_name, jeod::SphericalHarmonicsTidalEffectsInit::k2, k2, jeod::SphericalHarmonicsTidalEffectsInit::Knm, Knm, num\_tidal\_bodies, jeod::SphericalHarmonicsDeltaCoeffs::order, jeod::GravitySource::pfix, pfix, tidal\_bodies, tidal\_bodies\_inertial, jeod::SphericalHarmonicsTidalEffectsInit::tidal\_body\_names, jeod::SphericalHarmonicsTidalEffectsInit::xp, xp, jeod::SphericalHarmonicsTidalEffectsInit::yp, and yp.

Referenced by jeod::SphericalHarmonicsSolidBodyTides::initialize().

## 8.27.3.2 update()

Pure virtual update method.

#### **Parameters**

| in | controls | Gravity controls for planet |
|----|----------|-----------------------------|
|----|----------|-----------------------------|

Reimplemented from jeod::SphericalHarmonicsDeltaCoeffs.

Definition at line 174 of file spherical\_harmonics\_tidal\_effects.cc.

# 8.27.4 Friends And Related Function Documentation

# $8.27.4.1 \quad init\_attrjeod\_\_Spherical Harmonics Tidal Effects$

```
void init_attrjeod__SphericalHarmonicsTidalEffects ( ) [friend]
```

## 8.27.4.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 93 of file spherical\_harmonics\_tidal\_effects.hh.

## 8.27.5 Field Documentation

```
8.27.5.1 k2
double jeod::SphericalHarmonicsTidalEffects::k2 {}
The love number.
Only used for a first order tidal effect model.trick_units(-)
Definition at line 108 of file spherical_harmonics_tidal_effects.hh.
Referenced by initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().
8.27.5.2 Knm
double** jeod::SphericalHarmonicsTidalEffects::Knm {}
A matrix of love numbers.
Used for higher order (not first-order) tidal effects.trick_units(-)
Definition at line 114 of file spherical_harmonics_tidal_effects.hh.
Referenced by initialize().
8.27.5.3 num_tidal_bodies
unsigned int jeod::SphericalHarmonicsTidalEffects::num_tidal_bodies {}
The number of tidal bodies named in tidal_bodies.
trick units(count)
Definition at line 119 of file spherical_harmonics_tidal_effects.hh.
```

Referenced by initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().

```
8.27.5.4 pfix
RefFrame* jeod::SphericalHarmonicsTidalEffects::pfix {} [protected]
The planet fixed reference frame of the subject body.
trick_units(-)
Definition at line 136 of file spherical_harmonics_tidal_effects.hh.
Referenced by initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().
8.27.5.5 tidal_bodies
Planet** jeod::SphericalHarmonicsTidalEffects::tidal_bodies {} [protected]
The tidal bodies.
Filled out at initialization. Length after init is num_tidal_bodies.trick_units(-)
Definition at line 126 of file spherical_harmonics_tidal_effects.hh.
Referenced by initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().
8.27.5.6 tidal_bodies_inertial
RefFrame** jeod::SphericalHarmonicsTidalEffects::tidal_bodies_inertial {} [protected]
Pointers to the tidal_bodies inertial reference frames.
trick_units(-)
Definition at line 131 of file spherical_harmonics_tidal_effects.hh.
Referenced by initialize(), and jeod::SphericalHarmonicsSolidBodyTides::update().
8.27.5.7 xp
double jeod::SphericalHarmonicsTidalEffects::xp {}
Copy of polar motion coefficient xp (from polar motion class).
trick_units(-)
```

Referenced by initialize().

Definition at line 98 of file spherical\_harmonics\_tidal\_effects.hh.

```
8.27.5.8 yp
```

```
double jeod::SphericalHarmonicsTidalEffects::yp {}
```

Copy of polar motion coefficient yp (from polar motion class).

trick\_units(-)

Definition at line 103 of file spherical\_harmonics\_tidal\_effects.hh.

Referenced by initialize().

The documentation for this class was generated from the following files:


- · spherical\_harmonics\_tidal\_effects.hh
- spherical\_harmonics\_tidal\_effects.cc

# 8.28 jeod::SphericalHarmonicsTidalEffectsInit Class Reference

Initializes a tidal gravity model.

```
#include <spherical_harmonics_tidal_effects_init.hh>
```

Inheritance diagram for jeod::SphericalHarmonicsTidalEffectsInit:

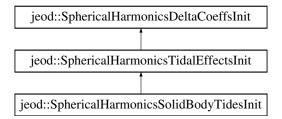

## **Public Member Functions**

- SphericalHarmonicsTidalEffectsInit ()=default
- ~SphericalHarmonicsTidalEffectsInit () override=default

#### **Data Fields**

double xp {}

Copy of polar motion coefficient xp (from polar motion class).

double yp {}

Copy of polar motion coefficient yp (from polar motion class).

double k2 {}

The love number.

double \*\* Knm {}

A matrix of love numbers.

std::vector< std::string > tidal\_body\_names

A named list of gravitational bodies contributing to this tidal efffect.

## **Friends**

- · class InputProcessor
- void init\_attrjeod\_\_SphericalHarmonicsTidalEffectsInit ()

## 8.28.1 Detailed Description

Initializes a tidal gravity model.

Definition at line 83 of file spherical\_harmonics\_tidal\_effects\_init.hh.

#### 8.28.2 Constructor & Destructor Documentation

#### 8.28.2.1 SphericalHarmonicsTidalEffectsInit()

```
jeod::SphericalHarmonicsTidalEffectsInit::SphericalHarmonicsTidalEffectsInit ( ) [default]
```

## 8.28.2.2 ~SphericalHarmonicsTidalEffectsInit()

```
jeod::SphericalHarmonicsTidalEffectsInit::~SphericalHarmonicsTidalEffectsInit ( ) [override],
[default]
```

#### 8.28.3 Friends And Related Function Documentation

# $8.28.3.1 \quad init\_attrjeod\_\_Spherical Harmonics Tidal Effects Init$

```
void init_attrjeod__SphericalHarmonicsTidalEffectsInit ( ) [friend]
```

## 8.28.3.2 InputProcessor

```
friend class InputProcessor [friend]
```

Definition at line 85 of file spherical\_harmonics\_tidal\_effects\_init.hh.

## 8.28.4 Field Documentation

#### 8.28.4.1 k2

```
double jeod::SphericalHarmonicsTidalEffectsInit::k2 {}
```

The love number.

Only used for a first order tidal effect modeltrick\_units(-)

Definition at line 100 of file spherical harmonics tidal effects init.hh.

Referenced by jeod::SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data::initialize(), and jeod  $\leftarrow$  ::SphericalHarmonicsTidalEffects::initialize().

#### 8.28.4.2 Knm

```
double** jeod::SphericalHarmonicsTidalEffectsInit::Knm {}
```

A matrix of love numbers.

Used for higher order (not first) tidal effectstrick\_units(-)

Definition at line 105 of file spherical\_harmonics\_tidal\_effects\_init.hh.

 $Referenced\ by\ jeod::Spherical Harmonics Tidal Effects::initialize().$ 

#### 8.28.4.3 tidal\_body\_names

```
std::vector<std::string> jeod::SphericalHarmonicsTidalEffectsInit::tidal_body_names
```

A named list of gravitational bodies contributing to this tidal efffect.

trick units(-)

Definition at line 110 of file spherical\_harmonics\_tidal\_effects\_init.hh.

 $Referenced \ by jeod::Spherical Harmonics Solid Body Tides Init\_earth\_solid\_tides\_default\_data::initialize(), \ and jeod \\ ::Spherical Harmonics Tidal Effects::initialize().$ 

```
8.28.4.4 xp

double jeod::SphericalHarmonicsTidalEffectsInit::xp {}

Copy of polar motion coefficient xp (from polar motion class).

trick_units(-)

Definition at line 90 of file spherical_harmonics_tidal_effects_init.hh.

Referenced by jeod::SphericalHarmonicsTidalEffects::initialize().

8.28.4.5 yp

double jeod::SphericalHarmonicsTidalEffectsInit::yp {}

Copy of polar motion coefficient yp (from polar motion class).

trick_units(-)
```

Definition at line 95 of file spherical\_harmonics\_tidal\_effects\_init.hh.

Referenced by jeod::SphericalHarmonicsTidalEffects::initialize().

The documentation for this class was generated from the following file:

• spherical\_harmonics\_tidal\_effects\_init.hh

# **Chapter 9**

# **File Documentation**

# 9.1 class\_declarations.hh File Reference

Forward declarations of classes defined for the gravity model.

## **Namespaces**

• jeod

Namespace jeod.

## 9.1.1 Detailed Description

Forward declarations of classes defined for the gravity model.

# 9.2 earth GEMT1.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/earth_GEMT1.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data

114 File Documentation

#### 9.2.1 Macro Definition Documentation

#### 9.2.1.1 JEOD FRIEND CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data

Definition at line 43 of file earth\_GEMT1.cc.

# 9.3 earth\_GEMT1.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

class jeod::SphericalHarmonicsGravitySource\_earth\_GEMT1\_default\_data

## **Namespaces**

• jeod

Namespace jeod.

# 9.4 earth\_GGM02C.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/earth_GGM02C.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### Macros

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data

#### 9.4.1 Macro Definition Documentation

#### 9.4.1.1 JEOD FRIEND CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data

Definition at line 39 of file earth\_GGM02C.cc.

# 9.5 earth\_GGM02C.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

## **Data Structures**

class jeod::SphericalHarmonicsGravitySource\_earth\_GGM02C\_default\_data

#### Namespaces

• jeod

Namespace jeod.

# 9.6 earth\_GGM05C.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/earth_GGM05C.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### Macros

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data

116 File Documentation

## 9.6.1 Macro Definition Documentation

## 9.6.1.1 JEOD\_FRIEND\_CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data

Definition at line 17 of file earth\_GGM05C.cc.

# 9.7 earth\_GGM05C.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

## **Data Structures**

• class jeod::SphericalHarmonicsGravitySource\_earth\_GGM05C\_default\_data

#### **Namespaces**

jeod

Namespace jeod.

## 9.8 earth solid tides.cc File Reference

```
#include "environment/gravity/include/spherical_harmonics_delta_coeffs_
init.hh"
#include "environment/gravity/include/spherical_harmonics_solid_body_tides
_init.hh"
#include "environment/gravity/include/spherical_harmonics_tidal_effects_
init.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/earth_solid_tides.hh"
```

#### **Namespaces**

jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data

#### 9.8.1 Macro Definition Documentation

#### 9.8.1.1 JEOD\_FRIEND\_CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data

Definition at line 23 of file earth solid tides.cc.

# 9.9 earth\_solid\_tides.hh File Reference

#### **Data Structures**

• class jeod::SphericalHarmonicsSolidBodyTidesInit\_earth\_solid\_tides\_default\_data

## **Namespaces**

· jeod

Namespace jeod.

# 9.10 earth\_spherical.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/earth_spherical.hh"
```

## **Namespaces**

• jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data

### 9.10.1 Macro Definition Documentation

118 File Documentation

#### 9.10.1.1 JEOD\_FRIEND\_CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_earth\_spherical\_default\_data

Definition at line 23 of file earth\_spherical.cc.

## 9.11 earth\_spherical.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

· class jeod::SphericalHarmonicsGravitySource earth spherical default data

### **Namespaces**

jeod

Namespace jeod.

# 9.12 gravity\_controls.cc File Reference

Define member functions for the GravityControls class.

```
#include <algorithm>
#include <cmath>
#include <cstddef>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "environment/ephemerides/ephem_interface/include/ephem_ref_frame. ←
hh"
#include "environment/planet/include/planet.hh"
#include "utils/math/include/matrix3x3.hh"
#include "utils/math/include/vector3.hh"
#include "utils/message/include/message_handler.hh"
#include "utils/ref_frames/include/ref_frame.hh"
#include "../include/gravity_controls.hh"
#include "../include/gravity_integ_frame.hh"
#include "../include/gravity_interaction.hh"
#include "../include/gravity_manager.hh"
#include "../include/gravity_messages.hh"
#include "../include/gravity_source.hh"
```

## **Namespaces**

jeod

Namespace jeod.

## **Variables**

static constexpr double jeod::speed\_of\_light\_sq = 89875517873681764.0
 The speed of light squared, in m<sup>2</sup>/s<sup>2</sup>.

## 9.12.1 Detailed Description

Define member functions for the GravityControls class.

# 9.13 gravity\_controls.hh File Reference

## Define the gravity controls.

```
#include <string>
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "gravity_source.hh"
```

#### **Data Structures**

• class jeod::GravityControls

Specifies whether and how a GravitySource affects a vehicle.

## **Namespaces**

• jeod

Namespace jeod.

## 9.13.1 Detailed Description

Define the gravity controls.

# 9.14 gravity\_integ\_frame.hh File Reference

Define the gravity integration frame class.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
```

120 File Documentation

#### **Data Structures**

· class jeod::GravityIntegFrame

Class that aids in determining whether gravity should be applied as a direct effect or a third body effect.

## **Namespaces**

jeod

Namespace jeod.

## 9.14.1 Detailed Description

Define the gravity integration frame class.

# 9.15 gravity\_interaction.cc File Reference

Define methods for the GravityInteraction class.

## **Namespaces**

• jeod

Namespace jeod.

## 9.15.1 Detailed Description

Define methods for the GravityInteraction class.

# 9.16 gravity\_interaction.hh File Reference

Define the GravityInteraction class, used to represent the gravitational interaction betweens a DynBody and a set of planetary bodies.

```
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
```

#### **Data Structures**

· class jeod::GravityInteraction

Specifies interactions between a vehicle and a set of gravitational bodies.

## **Namespaces**

· jeod

Namespace jeod.

### 9.16.1 Detailed Description

Define the GravityInteraction class, used to represent the gravitational interaction betweens a DynBody and a set of planetary bodies.

Note that while each DynBody instance has a GravityInteraction data member, this class is defined as a part of the gravity model rather than the dyn\_body model. This is because the coupling between this class and the other parts of the gravity model is much stronger than the coupling between this class and the dyn\_body model.

# 9.17 gravity\_manager.cc File Reference

Define member functions for the GravityManager class.

```
#include <cstddef>
#include <cstring>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "utils/math/include/matrix3x3.hh"
#include "utils/math/include/vector3.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "../include/gravity_controls.hh"
#include "../include/gravity_interaction.hh"
#include "../include/gravity_manager.hh"
#include "../include/gravity_messages.hh"
#include "../include/gravity_source.hh"
```

122 File Documentation

## **Namespaces**

• jeod

Namespace jeod.

## 9.17.1 Detailed Description

Define member functions for the GravityManager class.

# 9.18 gravity\_manager.hh File Reference

Define the Gravity Manager.

```
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
```

### **Data Structures**

· class jeod::GravityManager

The master gravitational model for a simulation.

# **Namespaces**

· jeod

Namespace jeod.

## 9.18.1 Detailed Description

Define the Gravity Manager.

# 9.19 gravity\_messages.cc File Reference

Implement the class GravityMessages.

```
#include "../include/gravity_messages.hh"
```

## **Namespaces**

• jeod

Namespace jeod.

## **Macros**

• #define PATH "environment/gravity/"

## 9.19.1 Detailed Description

Implement the class GravityMessages.

# 9.20 gravity\_messages.hh File Reference

Define the class GravityMessages, the class that specifies the message IDs used in the gravity model.

```
#include "utils/sim_interface/include/jeod_class.hh"
```

#### **Data Structures**

class jeod::GravityMessages

Specifies the message IDs used in the gravity model.

## **Namespaces**

• jeod

Namespace jeod.

## 9.20.1 Detailed Description

Define the class GravityMessages, the class that specifies the message IDs used in the gravity model.

# 9.21 gravity\_source.cc File Reference

Define member functions for the GravitySource class.

```
#include <cstddef>
#include "environment/ephemerides/ephem_interface/include/ephem_ref_frame.
hh"
#include "environment/planet/include/planet.hh"
#include "utils/math/include/vector3.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "../include/gravity_integ_frame.hh"
#include "../include/gravity_source.hh"
```

124 File Documentation

## **Namespaces**

· jeod

Namespace jeod.

## 9.21.1 Detailed Description

Define member functions for the GravitySource class.

# 9.22 gravity\_source.hh File Reference

Define the gravity body base (pure virtual) class.

```
#include <string>
#include <vector>
#include "environment/ephemerides/ephem_interface/include/class_declarations.
hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "gravity_integ_frame.hh"
```

## **Data Structures**

• class jeod::GravitySource

Models the gravity for a specific planet;.

## **Namespaces**

jeod

Namespace jeod.

## 9.22.1 Detailed Description

Define the gravity body base (pure virtual) class.

# 9.23 jupiter\_spherical.cc File Reference

```
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/jupiter_spherical.hh"
```

· jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data

#### 9.23.1 Macro Definition Documentation

```
9.23.1.1 JEOD_FRIEND_CLASS
```

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data

Definition at line 23 of file jupiter\_spherical.cc.

# 9.24 jupiter\_spherical.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

• class jeod::SphericalHarmonicsGravitySource\_jupiter\_spherical\_default\_data

## **Namespaces**

• jeod

Namespace jeod.

# 9.25 mars MRO110B2.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/mars_MRO110B2.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data

#### 9.25.1 Macro Definition Documentation

```
9.25.1.1 JEOD_FRIEND_CLASS
```

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_mars\_MR0110B2\_default\_data

Definition at line 33 of file mars MRO110B2.cc.

# 9.26 mars\_MRO110B2.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

## **Data Structures**

• class jeod::SphericalHarmonicsGravitySource\_mars\_MRO110B2\_default\_data

## **Namespaces**

• jeod

Namespace jeod.

# 9.27 mars\_spherical.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/mars_spherical.hh"
```

• jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_mars\_spherical\_default\_data

#### 9.27.1 Macro Definition Documentation

```
9.27.1.1 JEOD_FRIEND_CLASS
```

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_mars\_spherical\_default\_data

Definition at line 23 of file mars\_spherical.cc.

# 9.28 mars\_spherical.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

 $\bullet \ class\ jeod:: Spherical Harmonics Gravity Source\_mars\_spherical\_default\_data$ 

## **Namespaces**

• jeod

Namespace jeod.

# 9.29 moon\_GRAIL150.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/moon_GRAIL150.hh"
```

## **Namespaces**

• jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_moon\_GRAIL150\_default\_data

## 9.29.1 Macro Definition Documentation

```
9.29.1.1 JEOD_FRIEND_CLASS
```

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_moon\_GRAIL150\_default\_data

Definition at line 36 of file moon\_GRAIL150.cc.

# 9.30 moon\_GRAIL150.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

 $\bullet \ class\ jeod:: Spherical Harmonics Gravity Source\_moon\_GRAIL 150\_default\_data \\$ 

## **Namespaces**

jeod

Namespace jeod.

# 9.31 moon LP150Q.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/moon_LP150Q.hh"
```

jeod

Namespace jeod.

## **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data

#### 9.31.1 Macro Definition Documentation

```
9.31.1.1 JEOD_FRIEND_CLASS
```

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data

Definition at line 38 of file moon\_LP150Q.cc.

# 9.32 moon\_LP150Q.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

## **Data Structures**

• class jeod::SphericalHarmonicsGravitySource\_moon\_LP150Q\_default\_data

## **Namespaces**

• jeod

Namespace jeod.

# 9.33 moon\_spherical.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/moon_spherical.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_moon\_spherical\_default\_data

#### 9.33.1 Macro Definition Documentation

```
9.33.1.1 JEOD FRIEND CLASS
```

```
#define JEOD_FRIEND_CLASS SphericalHarmonicsGravitySource_moon_spherical_default_data
```

Definition at line 25 of file moon\_spherical.cc.

# 9.34 moon\_spherical.hh File Reference

```
#include "spherical_harmonics_gravity_source_default_data.hh"
```

#### **Data Structures**

• class jeod::SphericalHarmonicsGravitySource\_moon\_spherical\_default\_data

## **Namespaces**

jeod

Namespace jeod.

# 9.35 spherical\_harmonics\_calc\_nonspherical.cc File Reference

Define SphericalHarmonicsGravityControl calc\_nonspherical method, which computes non-spherical gravitational acceleration of a gravitational body on a given position.

```
#include <cmath>
#include "environment/planet/include/planet.hh"
#include "utils/math/include/matrix3x3.hh"
#include "utils/math/include/vector3.hh"
#include "../include/gravity_messages.hh"
#include "../include/spherical_harmonics_delta_controls.hh"
#include "../include/spherical_harmonics_gravity_controls.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
```

· jeod

Namespace jeod.

#### 9.35.1 Detailed Description

Define SphericalHarmonicsGravityControl calc\_nonspherical method, which computes non-spherical gravitational acceleration of a gravitational body on a given position.

# 9.36 spherical\_harmonics\_delta\_coeffs.cc File Reference

Define member functions for the SphericalHarmonicsDeltaCoeffs class.

```
#include <cstddef>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "../include/spherical_harmonics_delta_coeffs.hh"
#include "../include/spherical_harmonics_delta_coeffs_init.hh"
#include "../include/spherical_harmonics_delta_controls.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
```

## **Namespaces**

• jeod

Namespace jeod.

#### 9.36.1 Detailed Description

Define member functions for the SphericalHarmonicsDeltaCoeffs class.

# 9.37 spherical\_harmonics\_delta\_coeffs.hh File Reference

Define the class SphericalHarmonicsDeltaCoeffs, the base class for tidal effects and temporal gravity sub-models.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
```

## **Data Structures**

class jeod::SphericalHarmonicsDeltaCoeffs

Base class for tidal and temporal gravity models.

## **Namespaces**

jeod

Namespace jeod.

## 9.37.1 Detailed Description

Define the class SphericalHarmonicsDeltaCoeffs, the base class for tidal effects and temporal gravity sub-models.

# 9.38 spherical\_harmonics\_delta\_coeffs\_init.hh File Reference

Define the class SphericalHarmonicsDeltaCoeffsInit, the base initialization class for tidal effects and temporal gravity sub-models.

```
#include "utils/sim_interface/include/jeod_class.hh"
```

## **Data Structures**

class jeod::SphericalHarmonicsDeltaCoeffsInit
 Initialization data for a SphericalHarmonicsDeltaCoeffs instance.

## **Namespaces**

• jeod

Namespace jeod.

#### 9.38.1 Detailed Description

Define the class SphericalHarmonicsDeltaCoeffsInit, the base initialization class for tidal effects and temporal gravity sub-models.

# 9.39 spherical\_harmonics\_delta\_controls.hh File Reference

Define the gravity controls for the variational gravity models such as solid-body tides.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
```

## **Data Structures**

· class jeod::SphericalHarmonicsDeltaControls

Provides controls for how a variational model affects a vehicle.

• jeod

Namespace jeod.

## 9.39.1 Detailed Description

Define the gravity controls for the variational gravity models such as solid-body tides.

# 9.40 spherical harmonics gravity controls.cc File Reference

Define member functions for the SphericalHarmonicsGravityControls class.

```
#include <cmath>
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "../include/gravity_manager.hh"
#include "../include/gravity_messages.hh"
#include "../include/spherical_harmonics_delta_coeffs.hh"
#include "../include/spherical_harmonics_delta_controls.hh"
#include "../include/spherical_harmonics_gravity_controls.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
```

#### **Namespaces**

jeod

Namespace jeod.

## 9.40.1 Detailed Description

Define member functions for the SphericalHarmonicsGravityControls class.

# 9.41 spherical\_harmonics\_gravity\_controls.hh File Reference

Define the gravity controls.

```
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "gravity_controls.hh"
#include "spherical_harmonics_gravity_source.hh"
```

#### **Data Structures**

• class jeod::SphericalHarmonicsGravityControls

Specifies whether and how a SphericalHarmonicsGravitySource affects a vehicle.

## **Namespaces**

jeod

Namespace jeod.

## 9.41.1 Detailed Description

Define the gravity controls.

# 9.42 spherical\_harmonics\_gravity\_source.cc File Reference

Define member functions for the SphericalHarmonicsGravitySource class.

```
#include <cmath>
#include <cstddef>
#include <cstring>
#include <typeinfo>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "environment/ephemerides/ephem_interface/include/ephem_ref_frame.
hh"
#include "utils/math/include/numerical.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "../include/gravity_manager.hh"
#include "../include/gravity_messages.hh"
#include "../include/spherical_harmonics_delta_coeffs_init.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
```

## **Namespaces**

• jeod

Namespace jeod.

## 9.42.1 Detailed Description

Define member functions for the SphericalHarmonicsGravitySource class.

# 9.43 spherical\_harmonics\_gravity\_source.hh File Reference

Define the spherical harmonics implementation of a gravity body.

```
#include <vector>
#include "utils/container/include/pointer_vector.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "gravity_source.hh"
#include "spherical_harmonics_delta_coeffs.hh"
```

#### **Data Structures**

· class jeod::SphericalHarmonicsGravitySource

Models the gravity for a specific planet using spherical harmonics.

## **Namespaces**

jeod

Namespace jeod.

## 9.43.1 Detailed Description

Define the spherical harmonics implementation of a gravity body.

# 9.44 spherical\_harmonics\_gravity\_source\_default\_data.hh File Reference

#### **Data Structures**

· class jeod::SphericalHarmonicsGravitySource default data

### **Namespaces**

jeod

Namespace jeod.

## 9.45 spherical harmonics solid body tides.cc File Reference

Define member functions for the SphericalHarmonicsSolidBodyTides class.

```
#include <cmath>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "environment/planet/include/planet.hh"
#include "utils/math/include/vector3.hh"
#include "utils/ref_frames/include/ref_frame.hh"
#include "../include/spherical_harmonics_delta_coeffs_init.hh"
#include "../include/spherical_harmonics_gravity_controls.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
#include "../include/spherical_harmonics_solid_body_tides.hh"
```

## **Namespaces**

jeod

Namespace jeod.

## 9.45.1 Detailed Description

Define member functions for the SphericalHarmonicsSolidBodyTides class.

# 9.46 spherical\_harmonics\_solid\_body\_tides.hh File Reference

Define the SphericalHarmonicsSolidBodyTides class, which models solid-body tidal effects.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "spherical_harmonics_tidal_effects.hh"
```

## **Data Structures**

class jeod::SphericalHarmonicsSolidBodyTides

Models solid body tidal effects.

#### **Namespaces**

· jeod

Namespace jeod.

## 9.46.1 Detailed Description

Define the SphericalHarmonicsSolidBodyTides class, which models solid-body tidal effects.

SphericalHarmonicsSolidBodyTides inherits directly from the SphericalHarmonicsTidalEffects class.

# 9.47 spherical\_harmonics\_solid\_body\_tides\_init.hh File Reference

Define the SphericalHarmonicsSolidBodyTidesInit class, which is the initialization class for the solid body tides model.

```
#include "utils/sim_interface/include/jeod_class.hh"
#include "spherical_harmonics_tidal_effects_init.hh"
```

#### **Data Structures**

 class jeod::SphericalHarmonicsSolidBodyTidesInit Initializes a solid body tides model.

## **Namespaces**

jeod

Namespace jeod.

#### 9.47.1 Detailed Description

Define the SphericalHarmonicsSolidBodyTidesInit class, which is the initialization class for the solid body tides model.

# 9.48 spherical\_harmonics\_tidal\_effects.cc File Reference

Define member functions for the SphericalHarmonicsTidalEffects class.

```
#include <cstddef>
#include "dynamics/dyn_manager/include/base_dyn_manager.hh"
#include "environment/planet/include/planet.hh"
#include "utils/memory/include/jeod_alloc.hh"
#include "utils/message/include/message_handler.hh"
#include "utils/ref_frames/include/ref_frame.hh"
#include "../include/gravity_messages.hh"
#include "../include/spherical_harmonics_delta_coeffs_init.hh"
#include "../include/spherical_harmonics_gravity_source.hh"
#include "../include/spherical_harmonics_tidal_effects.hh"
#include "../include/spherical_harmonics_tidal_effects_init.hh"
```

## **Namespaces**

jeod

Namespace jeod.

#### 9.48.1 Detailed Description

 $\label{thm:prop} \mbox{Define member functions for the Spherical Harmonics Tidal Effects class.}$ 

# 9.49 spherical\_harmonics\_tidal\_effects.hh File Reference

Define the class SphericalHarmonicsTidalEffects, which is the base class for solid-body and ocean tidal effects.

```
#include "environment/planet/include/class_declarations.hh"
#include "utils/ref_frames/include/class_declarations.hh"
#include "utils/sim_interface/include/jeod_class.hh"
#include "class_declarations.hh"
#include "spherical_harmonics_delta_coeffs.hh"
```

#### **Data Structures**

• class jeod::SphericalHarmonicsTidalEffects

Models tidal effects as a delta on top of a gravity model.

### **Namespaces**

jeod

Namespace jeod.

## 9.49.1 Detailed Description

Define the class SphericalHarmonicsTidalEffects, which is the base class for solid-body and ocean tidal effects.

SphericalHarmonicsTidalEffects inherits directly from the SphericalHarmonicsDeltaCoeffs class.

# 9.50 spherical\_harmonics\_tidal\_effects\_init.hh File Reference

Define the SphericalHarmonicsTidalEffectsInit class, the initialization class for tidal effects models.

```
#include <string>
#include <vector>
#include "utils/sim_interface/include/jeod_class.hh"
#include "spherical_harmonics_delta_coeffs_init.hh"
```

## **Data Structures**

• class jeod::SphericalHarmonicsTidalEffectsInit

Initializes a tidal gravity model.

## **Namespaces**

• jeod

Namespace jeod.

## 9.50.1 Detailed Description

Define the SphericalHarmonicsTidalEffectsInit class, the initialization class for tidal effects models.

# 9.51 sun\_spherical.cc File Reference

```
#include "environment/gravity/include/gravity_source.hh"
#include "environment/gravity/include/spherical_harmonics_gravity_source.
hh"
#include "utils/named_item/include/named_item.hh"
#include "../include/sun_spherical.hh"
```

• jeod

Namespace jeod.

## **Macros**

• #define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_sun\_spherical\_default\_data

## 9.51.1 Macro Definition Documentation

## 9.51.1.1 JEOD\_FRIEND\_CLASS

#define JEOD\_FRIEND\_CLASS SphericalHarmonicsGravitySource\_sun\_spherical\_default\_data

Definition at line 26 of file sun\_spherical.cc.

# 9.52 sun\_spherical.hh File Reference

#include "spherical\_harmonics\_gravity\_source\_default\_data.hh"

#### **Data Structures**

 $\bullet \ class\ jeod::Spherical Harmonics Gravity Source\_sun\_spherical\_default\_data$ 

## **Namespaces**

• jeod

Namespace jeod.

# Index

| $\sim$ GravityControls                          | jeod::SphericalHarmonicsGravitySource, 81   |
|---|---|
| jeod::GravityControls, 19                       |   |
| $\sim$ GravityIntegFrame                        | battin_method                               |
| jeod::GravityIntegFrame, 30                     | jeod::GravityControls, 25                   |
| $\sim$ GravityInteraction                       | beta  |
| jeod::GravityInteraction, 33                    | jeod::SphericalHarmonicsGravitySource, 81   |
| $\sim$ GravityManager                           | body  |
| jeod::GravityManager, 39                        | jeod::GravityControls, 25                   |
| ~GravitySource                                  |   |
| jeod::GravitySource, 49                         | calc_nonspherical                           |
| $\sim$ SphericalHarmonicsDeltaCoeffs            | jeod::GravityControls, 20                   |
| jeod::SphericalHarmonicsDeltaCoeffs, 53         | jeod::SphericalHarmonicsGravityControls, 66 |
| ~SphericalHarmonicsDeltaCoeffsInit              | calc_relativistic                           |
| jeod::SphericalHarmonicsDeltaCoeffsInit, 58     | jeod::GravityControls, 20                   |
| ~SphericalHarmonicsDeltaControls                | calc_spherical                              |
| jeod::SphericalHarmonicsDeltaControls, 60       | jeod::GravityControls, 22                   |
| ~SphericalHarmonicsGravityControls              | check_validity                              |
| jeod::SphericalHarmonicsGravityControls, 65     | jeod::SphericalHarmonicsGravityControls, 66 |
| ~SphericalHarmonicsGravitySource                | class_declarations.hh, 113                  |
| jeod::SphericalHarmonicsGravitySource, 78       | Cnm   |
| ~SphericalHarmonicsGravitySource_default_data   | jeod::SphericalHarmonicsGravitySource, 81   |
| jeod::SphericalHarmonicsGravitySource_default←  |   |
| _data, 87                                       | dC20  |
| ~SphericalHarmonicsSolidBodyTides               | jeod::SphericalHarmonicsDeltaCoeffs, 55     |
| jeod::SphericalHarmonicsSolidBodyTides, 99      | degree                                      |
| ~SphericalHarmonicsSolidBodyTidesInit           | jeod::SphericalHarmonicsDeltaCoeffs, 55     |
| jeod::SphericalHarmonicsSolidBodyTidesInit, 101 | jeod::SphericalHarmonicsDeltaCoeffsInit, 58 |
| ~SphericalHarmonicsTidalEffects                 | jeod::SphericalHarmonicsDeltaControls, 61   |
| jeod::SphericalHarmonicsTidalEffects, 104       | jeod::SphericalHarmonicsGravityControls, 73 |
| ~SphericalHarmonicsTidalEffectsInit             | jeod::SphericalHarmonicsGravitySource, 82   |
| jeod::SphericalHarmonicsTidalEffectsInit, 109   | delta_Cnm                                   |
| ,,,,  | jeod::SphericalHarmonicsDeltaCoeffs, 55     |
| a_by_rad  | jeod::SphericalHarmonicsDeltaCoeffsInit, 58 |
| jeod::SphericalHarmonicsGravitySource, 81       | jeod::SphericalHarmonicsGravityControls, 73 |
| accel   | delta_Snm                                   |
| jeod::GravityIntegFrame, 30                     | jeod::SphericalHarmonicsDeltaCoeffs, 55     |
| accel_mag_less_ptr                              | jeod::SphericalHarmonicsDeltaCoeffsInit, 59 |
| jeod::GravityControls, 19                       | jeod::SphericalHarmonicsGravityControls, 74 |
| active  | delta_coeffs                                |
| jeod::GravityControls, 25                       | jeod::SphericalHarmonicsGravitySource, 82   |
| jeod::SphericalHarmonicsDeltaControls, 61       | delta degree                                |
| add control                                     | jeod::SphericalHarmonicsGravityControls, 73 |
| jeod::GravityInteraction, 34                    | delta_order                                 |
| add_deltacoeff                                  | jeod::SphericalHarmonicsGravityControls, 73 |
| jeod::SphericalHarmonicsGravitySource, 79       | disable_min_radius_warnings                 |
| add deltacontrol                                | jeod::SphericalHarmonicsGravityControls, 6  |
| jeod::SphericalHarmonicsGravityControls, 65     | domain_error                                |
| add_grav_source                                 | jeod::GravityMessages, 45                   |
| jeod::GravityManager, 39                        | duplicate_entry                             |
| alpha   | jeod::GravityMessages, 46                   |
| •   |   |

| earth_GEMT1.cc, 113                         | jeod::GravityInteraction, 37                   |
|---|--|
| JEOD_FRIEND_CLASS, 114                      | grav_manager                                   |
| earth_GEMT1.hh, 114                         | jeod::GravityControls, 26                      |
| earth_GGM02C.cc, 114                        | grav_pot                                       |
| JEOD_FRIEND_CLASS, 115                      | jeod::GravityControls, 27                      |
| earth_GGM02C.hh, 115                        | jeod::GravityInteraction, 37                   |
| earth_GGM05C.cc, 115                        | grav_source                                    |
| JEOD_FRIEND_CLASS, 116                      | jeod::SphericalHarmonicsDeltaCoeffs, 56        |
| earth_GGM05C.hh, 116                        | jeod::SphericalHarmonicsDeltaControls, 62      |
| earth solid tides.cc, 116                   | gravitation                                    |
| JEOD FRIEND CLASS, 117                      | jeod::GravityControls, 22, 23                  |
| earth_solid_tides.hh, 117                   | jeod::GravityManager, 40, 41                   |
| earth_spherical.cc, 117                     | Gravity, 13                                    |
| JEOD_FRIEND_CLASS, 117                      | PATH, 14                                       |
| earth_spherical.hh, 118                     | gravity_controls.cc, 118                       |
| Environment, 12                             | gravity_controls.hh, 119                       |
| eta   | gravity_integ_frame.hh, 119                    |
| jeod::SphericalHarmonicsGravitySource, 82   | gravity_interaction.cc, 120                    |
| <b>,</b>                                    | gravity_interaction.hh, 121                    |
| find_deltacoeff                             | gravity_manager.cc, 121                        |
| jeod::SphericalHarmonicsGravitySource, 79   | gravity_manager.hh, 122                        |
| find_grav_source                            | gravity_messages.cc, 122                       |
| jeod::GravityManager, 40                    | gravity_messages.hh, 123                       |
| first_order_only                            | gravity_source.cc, 123                         |
| jeod::SphericalHarmonicsDeltaControls, 61   | gravity_source.hh, 124                         |
| frames                                      | GravityControls                                |
| jeod::GravitySource, 50                     | jeod::GravityControls, 19                      |
| joodd. artiy ood. oo, oo                    | GravityIntegFrame                              |
| get_bodies                                  |  |
| jeod::GravityManager, 40                    | jeod::GravityIntegFrame, 30                    |
| get_degree                                  | GravityInteraction                             |
| jeod::SphericalHarmonicsGravityControls, 67 | jeod::GravityInteraction, 33                   |
| get_degree_order                            | GravityManager                                 |
| jeod::SphericalHarmonicsGravityControls, 67 | jeod::GravityManager, 39                       |
| get_grad_degree                             | GravityMessages                                |
| jeod::SphericalHarmonicsGravityControls, 68 | jeod::GravityMessages, 44, 45                  |
| get_grad_degree_order                       | GravitySource                                  |
| jeod::SphericalHarmonicsGravityControls, 68 | jeod::GravitySource, 49                        |
| get grad order                              | harmonics source                               |
| jeod::SphericalHarmonicsGravityControls, 68 | jeod::SphericalHarmonicsGravityControls, 74    |
| get_order                                   | jeodSprierical farmonics Gravity Controls, 74  |
| jeod::SphericalHarmonicsGravityControls, 69 | inertial                                       |
| gradient                                    | jeod::GravitySource, 50                        |
| jeod::GravityControls, 25                   | init attrieod GravityControls                  |
| gradient_degree                             | jeod::GravityControls, 24                      |
| jeod::SphericalHarmonicsGravityControls, 74 | init attrjeod GravityIntegFrame                |
| gradient_order                              | jeod::GravityIntegFrame, 30                    |
| jeod::SphericalHarmonicsGravityControls, 74 | init_attrjeod_GravityInteraction               |
| •   |  |
| grav_accel                                  | jeod::GravityInteraction, 36                   |
| jeod::GravityControls, 26                   | init_attrjeodGravityManager                    |
| jeod::GravityInteraction, 36                | jeod::GravityManager, 43                       |
| grav_accel_magsq                            | init_attrjeodGravityMessages                   |
| jeod::GravityControls, 26                   | jeod::GravityMessages, 45                      |
| grav_controls                               | init_attrjeodGravitySource                     |
| jeod::GravityInteraction, 36                | jeod::GravitySource, 50                        |
| grav_effect                                 | init_attrjeodSphericalHarmonicsDeltaCoeffs     |
| jeod::SphericalHarmonicsDeltaControls, 62   | jeod::SphericalHarmonicsDeltaCoeffs, 54        |
| grav_grad                                   | init_attrjeodSphericalHarmonicsDeltaCoeffsInit |
| jeod::GravityControls, 26                   | jeod::SphericalHarmonicsDeltaCoeffsInit, 58    |

| init_attrjeodSphericalHarmonicsDeltaControls<br>jeod::SphericalHarmonicsDeltaControls, 61<br>init_attrjeodSphericalHarmonicsGravityControls<br>jeod::SphericalHarmonicsGravityControls, 72<br>init_attrjeodSphericalHarmonicsGravitySource<br>jeod::SphericalHarmonicsGravitySource, 80 | jeod::GravityIntegFrame, 30<br>jeod::GravityInteraction, 36<br>jeod::GravityManager, 43<br>jeod::GravityMessages, 45<br>jeod::GravitySource, 50<br>jeod::SphericalHarmonicsDeltaCoeffs, 54 |
|---|--|
| init_attrjeodSphericalHarmonicsSolidBodyTides<br>jeod::SphericalHarmonicsSolidBodyTides, 100<br>init_attrjeodSphericalHarmonicsSolidBodyTidesInit   | jeod::SphericalHarmonicsDeltaCoeffsInit, 58<br>jeod::SphericalHarmonicsDeltaControls, 61<br>jeod::SphericalHarmonicsGravityControls, 72  |
| jeod::SphericalHarmonicsSolidBodyTidesInit, 102 init_attrjeodSphericalHarmonicsTidalEffects jeod::SphericalHarmonicsTidalEffects, 105   | jeod::SphericalHarmonicsGravitySource, 80<br>jeod::SphericalHarmonicsSolidBodyTides, 100<br>jeod::SphericalHarmonicsSolidBodyTidesInit, 102  |
| init_attrjeodSphericalHarmonicsTidalEffectsInit<br>jeod::SphericalHarmonicsTidalEffectsInit, 109  | jeod::SphericalHarmonicsTidalEffects, 105<br>jeod::SphericalHarmonicsTidalEffectsInit, 109<br>int_to_double  |
| initialize  | jeod::SphericalHarmonicsGravitySource, 83  |
| jeod::SphericalHarmonicsDeltaCoeffs, 53   | integ_frame_index  |
| jeod::SphericalHarmonicsGravitySource_default←  | jeod::GravityInteraction, 37   |
| _data, 87<br>jeod::SphericalHarmonicsGravitySource earth ↔  | invalid_limit  |
| GEMT1_default_data, 88  | jeod::GravityMessages, 46  |
| jeod::SphericalHarmonicsGravitySource_earth_←   | invalid_name   |
| GGM02C_default_data, 89   | jeod::GravityMessages, 46  |
| jeod::SphericalHarmonicsGravitySource_earth_←   | invalid_object   |
| GGM05C_default_data, 90   | jeod::GravityMessages, 46  |
| jeod::SphericalHarmonicsGravitySource_earth_←   | is_third_body  |
| spherical_default_data, 91  | jeod::GravityIntegFrame, 31  |
| jeod::SphericalHarmonicsGravitySource_jupiter↔  | IFOR FRIEND OLAGO  |
| _spherical_default_data, 92   | JEOD_FRIEND_CLASS  |
| jeod::SphericalHarmonicsGravitySource_mars_←  | earth_GEMT1.cc, 114  |
| MRO110B2_default_data, 92   | earth_GGM02C.cc, 115   |
| jeod::SphericalHarmonicsGravitySource_mars_←  | earth_GGM05C.cc, 116   |
| spherical_default_data, 93  | earth_solid_tides.cc, 117  |
| jeod::SphericalHarmonicsGravitySource_moon_←  | earth_spherical.cc, 117  |
| GRAIL150_default_data, 94   | jupiter_spherical.cc, 125  |
| jeod::SphericalHarmonicsGravitySource_moon_←  | mars_MRO110B2.cc, 126  |
| LP150Q_default_data, 95   | mars_spherical.cc, 127   |
| jeod::SphericalHarmonicsGravitySource_moon_←  | moon_GRAIL150.cc, 128  |
| spherical_default_data, 96  | moon_LP150Q.cc, 129  |
| jeod::SphericalHarmonicsGravitySource_sun_←   | moon_spherical.cc, 130   |
| spherical_default_data, 97  | sun_spherical.cc, 139  |
| jeod::SphericalHarmonicsSolidBodyTides, 99  | jeod, 15<br>speed_of_light_sq, 16  |
| jeod::SphericalHarmonicsSolidBodyTidesInit_   | jeod::GravityControls, 17  |
| earth_solid_tides_default_data, 102   | ~GravityControls, 19   |
| jeod::SphericalHarmonicsTidalEffects, 104   | accel_mag_less_ptr, 19   |
| initialize_body   | active, 25   |
| jeod::SphericalHarmonicsGravitySource, 80   | battin method, 25  |
| initialize_control  | body, 25   |
| jeod::GravityControls, 23   | calc_nonspherical, 20  |
| jeod::SphericalHarmonicsGravityControls, 69   | calc_relativistic, 20  |
| initialize_controls   | calc_spherical, 22   |
| jeod::GravityInteraction, 34  | gradient, 25   |
| initialize_model  | grav_accel, 26   |
| jeod::GravityManager, 42  | grav_accel_magsq, 26   |
| initialize_state  | grav_grad, 26  |
| jeod::GravityManager, 42  | grav_manager, 26   |
| jeod::GravitySource, 49   | grav_pot, 27   |
| InputProcessor  | gravitation, 22, 23  |
| jeod::GravityControls, 24   | GravityControls, 19  |

| init_attrjeodGravityControls, 24    | invalid_limit, 46                               |
|-------------------------------------|---|
| initialize_control, 23              | invalid_name, 46                                |
| InputProcessor, 24                  | invalid_object, 46                              |
| operator=, 24                       | missing_entry, 47                               |
| perturbing_only, 27                 | null_pointer, 47                                |
| relativistic, 27                    | operator=, 45                                   |
| reset_control, 24                   | jeod::GravitySource, 48                         |
| skip_spherical, 27                  | $\sim$ GravitySource, 49                        |
| source_name, 28                     | frames, 50                                      |
| spherical, 28                       | GravitySource, 49                               |
| subscribed_to_inertial, 28          | inertial, 50                                    |
| subscribed_to_pfix, 28              | init_attrjeodGravitySource, 50                  |
| jeod::GravityIntegFrame, 29         | initialize_state, 49                            |
| $\sim$ GravityIntegFrame, 30        | InputProcessor, 50                              |
| accel, 30                           | mu, 51  |
| GravityIntegFrame, 30               | name, 51  |
| init_attrjeodGravityIntegFrame, 30  | operator=, 50                                   |
| InputProcessor, 30                  | pfix, 51  |
| is_third_body, 31                   | jeod::SphericalHarmonicsDeltaCoeffs, 52         |
| pos, 31                             | $\sim$ SphericalHarmonicsDeltaCoeffs, 53        |
| ref_frame, 31                       | dC20, 55  |
| time, 31                            | degree, 55                                      |
| jeod::GravityInteraction, 32        | delta_Cnm, 55                                   |
| $\sim$ GravityInteraction, 33       | delta_Snm, 55                                   |
| add_control, 34                     | grav_source, 56                                 |
| grav_accel, 36                      | init_attrjeodSphericalHarmonicsDeltaCoeffs, 54  |
| grav_controls, 36                   | initialize, 53                                  |
| grav_grad, 37                       | InputProcessor, 54                              |
| grav_pot, 37                        | order, 56                                       |
| GravityInteraction, 33              | SphericalHarmonicsDeltaCoeffs, 53               |
| init_attrjeodGravityInteraction, 36 | update, 54                                      |
| initialize_controls, 34             | jeod::SphericalHarmonicsDeltaCoeffsInit, 57     |
| InputProcessor, 36                  | ~SphericalHarmonicsDeltaCoeffsInit, 58          |
| integ_frame_index, 37               | degree, 58                                      |
| operator=, 34                       | delta_Cnm, 58                                   |
| remove_control, 35                  | delta_Snm, 59                                   |
| reset_controls, 35                  | init_attrjeodSphericalHarmonicsDeltaCoeffsInit, |
| set_integ_frame, 35                 | 58  |
| sort_controls, 36                   | InputProcessor, 58                              |
| jeod::GravityManager, 38            | order, 59                                       |
| ∼GravityManager, 39                 | SphericalHarmonicsDeltaCoeffsInit, 57           |
| add_grav_source, 39                 | jeod::SphericalHarmonicsDeltaControls, 59       |
| find_grav_source, 40                | ~SphericalHarmonicsDeltaControls, 60            |
| get_bodies, 40                      | active, 61                                      |
| gravitation, 40, 41                 | degree, 61                                      |
| GravityManager, 39                  | first_order_only, 61                            |
| init_attrjeod_GravityManager, 43    | grav effect, 62                                 |
| initialize_model, 42                | grav_source, 62                                 |
| initialize_state, 42                | init_attrjeodSphericalHarmonicsDeltaControls,   |
| InputProcessor, 43                  | 61  |
| operator=, 43                       | InputProcessor, 61                              |
| sources, 43                         | order, 62                                       |
| jeod::GravityMessages, 44           | SphericalHarmonicsDeltaControls, 60             |
| domain_error, 45                    | jeod::SphericalHarmonicsGravityControls, 63     |
| duplicate_entry, 46                 | ~SphericalHarmonicsGravityControls, 65          |
| GravityMessages, 44, 45             | add_deltacontrol, 65                            |
| init_attrjeodGravityMessages, 45    | calc_nonspherical, 66                           |
| InputProcessor, 45                  | check_validity, 66                              |
| 1 / -                               |   |

| degree, 73                                      | upsilon, 85   |
|---|---|
| delta_Cnm, 73                                   | xi, <mark>85</mark>   |
| delta_Snm, 74                                   | zeta, 86  |
| delta_degree, 73                                | jeod::SphericalHarmonicsGravitySource_default_data,   |
| delta order, 73                                 | 86  |
| disable_min_radius_warnings, 67                 | ~SphericalHarmonicsGravitySource_default_data,  |
| get_degree, 67                                  | 87  |
| get_degree_order, 67                            | initialize, 87  |
| get_grad_degree, 68                             | jeod::SphericalHarmonicsGravitySource_earth_GEM↔  |
| get_grad_degree_order, 68                       | T1_default_data, 87   |
| get_grad_order, 68                              | initialize, 88  |
| get_grad_order, 69                              | jeod::SphericalHarmonicsGravitySource_earth_GG  |
| gradient_degree, 74                             | M02C_default_data, 88   |
| gradient_degree, 74 gradient_order, 74          | initialize, 89  |
| _   |   |
| harmonics_source, 74                            | jeod::SphericalHarmonicsGravitySource_earth_GG←   |
| init_attrjeodSphericalHarmonicsGravityControls, | M05C_default_data, 89   |
| 72  | initialize, 90  |
| initialize_control, 69                          | jeod::SphericalHarmonicsGravitySource_earth_←   |
| InputProcessor, 72                              | spherical_default_data, 90  |
| min_radius_warn, 75                             | initialize, 91  |
| operator=, 69                                   | jeod::SphericalHarmonicsGravitySource_jupiter_←   |
| order, 75                                       | spherical_default_data, 91  |
| Pnm, 75   | initialize, 92  |
| set_degree, 69                                  | jeod::SphericalHarmonicsGravitySource_mars_MR←  |
| set_degree_order, 70                            | O110B2_default_data, 92   |
| set_grad_degree, 70                             | initialize, 92  |
| set_grad_degree_order, 71                       | jeod::SphericalHarmonicsGravitySource_mars_←  |
| set_grad_order, 71                              | spherical_default_data, 93  |
| set_order, 71                                   | initialize, 93  |
| SphericalHarmonicsGravityControls, 65           | jeod::SphericalHarmonicsGravitySource_moon_GRA←   |
| sum_deltacoeffs, 72                             | IL150_default_data, 94  |
| total_dC20, 76                                  | initialize, 94  |
| update_deltacoeffs, 72                          | jeod::SphericalHarmonicsGravitySource_moon_L↔   |
| var_effects, 76                                 | P150Q_default_data, 95  |
| jeod::SphericalHarmonicsGravitySource, 77       | initialize, 95  |
| $\sim$ SphericalHarmonicsGravitySource, 78      | jeod::SphericalHarmonicsGravitySource_moon_←  |
| a_by_rad, 81                                    | spherical_default_data, 96  |
| add_deltacoeff, 79                              | initialize, 96  |
| alpha, 81                                       | $jeod:: Spherical Harmonics Gravity Source\_sun\_spherical \leftarrow (Continuous Continuous Conti$ |
| beta, 81  | _default_data, 97   |
| Cnm, 81   | initialize, 97  |
| degree, 82                                      | jeod::SphericalHarmonicsSolidBodyTides, 98  |
| delta_coeffs, 82                                | $\sim$ SphericalHarmonicsSolidBodyTides, 99   |
| eta, 82   | init_attrjeodSphericalHarmonicsSolidBodyTides,  |
| find_deltacoeff, 79                             | 100   |
| init_attrjeodSphericalHarmonicsGravitySource,   | initialize, 99  |
| 80  | InputProcessor, 100   |
| initialize_body, 80                             | SphericalHarmonicsSolidBodyTides, 99  |
| InputProcessor, 80                              | update, 99  |
| int_to_double, 83                               | jeod::SphericalHarmonicsSolidBodyTidesInit, 101   |
| nrdiag, 83                                      | $\sim$ SphericalHarmonicsSolidBodyTidesInit, 101  |
| operator=, 80                                   | init_attrjeodSphericalHarmonicsSolidBody⇔   |
| order, 83                                       | TidesInit, 102  |
| radius, 84                                      | InputProcessor, 102   |
| Snm, 84   | SphericalHarmonicsSolidBodyTidesInit, 101   |
| SphericalHarmonicsGravitySource, 78, 79         | jeod::SphericalHarmonicsSolidBodyTidesInit_earth_←  |
| tide_free, 84                                   | solid_tides_default_data, 102   |
| tide_free_delta, 85                             | initialize, 102   |
|   |   |

| jeod::SphericalHarmonicsTidalEffects, 103  ∼SphericalHarmonicsTidalEffects, 104   | jeod::GravitySource, 51   |
|---|---|
| init_attrjeodSphericalHarmonicsTidalEffects,  | name  |
| 105   | jeod::GravitySource, 51   |
| initialize, 104   | nrdiag  |
| InputProcessor, 105   | jeod::SphericalHarmonicsGravitySource, 83   |
| k2, 106   | null_pointer  |
| Knm, 106  | jeod::GravityMessages, 47   |
| num_tidal_bodies, 106   | num_tidal_bodies  |
| pfix, 106   | jeod::SphericalHarmonicsTidalEffects, 106   |
| SphericalHarmonicsTidalEffects, 104   |   |
| tidal_bodies, 107   | operator=   |
| tidal_bodies_inertial, 107  | jeod::GravityControls, 24   |
| update, 105   | jeod::GravityInteraction, 34  |
| xp, 107   | jeod::GravityManager, 43  |
| yp, 107   | jeod::GravityMessages, 45   |
| jeod::SphericalHarmonicsTidalEffectsInit, 108   | jeod::GravitySource, 50   |
| $\sim$ SphericalHarmonicsTidalEffectsInit, 109  | jeod::SphericalHarmonicsGravityControls, 69   |
| $init\_attrjeod\_\_SphericalHarmonicsTidalEffectsInit,$   | jeod::SphericalHarmonicsGravitySource, 80   |
| 109   | order   |
| InputProcessor, 109   | jeod::SphericalHarmonicsDeltaCoeffs, 56   |
| k2, 110   | jeod::SphericalHarmonicsDeltaCoeffsInit, 59   |
| Knm, 110  | jeod::SphericalHarmonicsDeltaControls, 62   |
| SphericalHarmonicsTidalEffectsInit, 109   | jeod::SphericalHarmonicsGravityControls, 75   |
| tidal_body_names, 110   | jeod::SphericalHarmonicsGravitySource, 83   |
| xp, 110   |   |
| yp, 111   | PATH  |
| jupiter_spherical.cc, 124   | Gravity, 14   |
| JEOD_FRIEND_CLASS, 125  | perturbing_only   |
| jupiter_spherical.hh, 125   | jeod::GravityControls, 27   |
|   |   |
|   | pfix  |
| k2  | jeod::GravitySource, 51   |
| jeod::SphericalHarmonicsTidalEffects, 106   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106   |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm   |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>Knm   | jeod::GravitySource, 51<br>jeod::SphericalHarmonicsTidalEffects, 106<br>Pnm<br>jeod::SphericalHarmonicsGravityControls, 75  |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>Knm<br>jeod::SphericalHarmonicsTidalEffects, 106  | jeod::GravitySource, 51<br>jeod::SphericalHarmonicsTidalEffects, 106<br>Pnm<br>jeod::SphericalHarmonicsGravityControls, 75<br>pos   |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>Knm   | jeod::GravitySource, 51<br>jeod::SphericalHarmonicsTidalEffects, 106<br>Pnm<br>jeod::SphericalHarmonicsGravityControls, 75  |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>Knm<br>jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31   |
| jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>Knm<br>jeod::SphericalHarmonicsTidalEffects, 106<br>jeod::SphericalHarmonicsTidalEffectsInit, 110<br>mars_MRO110B2.cc, 125  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31 radius  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31 radius jeod::SphericalHarmonicsGravitySource, 84  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31 radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31 radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31 radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic   |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control   |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry  | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 110 mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry jeod::GravityMessages, 47   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn     jeod::SphericalHarmonicsGravityControls, 75 missing_entry     jeod::GravityMessages, 47 Models, 11   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls   |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn     jeod::SphericalHarmonicsGravityControls, 75 missing_entry     jeod::GravityMessages, 47 Models, 11 moon_GRAIL150.cc, 127   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry jeod::GravityMessages, 47  Models, 11 moon_GRAIL150.cc, 127 JEOD_FRIEND_CLASS, 128   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry jeod::GravityMessages, 47  Models, 11 moon_GRAIL150.cc, 127 JEOD_FRIEND_CLASS, 128 moon_GRAIL150.hh, 128   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35 set_degree   |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry jeod::GravityMessages, 47  Models, 11 moon_GRAIL150.cc, 127 JEOD_FRIEND_CLASS, 128   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 110 mars_MRO110B2.cc, 125 JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126 JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn jeod::SphericalHarmonicsGravityControls, 75 missing_entry jeod::GravityMessages, 47 Models, 11 moon_GRAIL150.cc, 127 JEOD_FRIEND_CLASS, 128 moon_LP150Q.cc, 128   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  set_degree jeod::SphericalHarmonicsGravityControls, 69  |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn     jeod::SphericalHarmonicsGravityControls, 75 missing_entry     jeod::GravityMessages, 47 Models, 11 moon_GRAIL150.cc, 127     JEOD_FRIEND_CLASS, 128 moon_GRAIL150.hh, 128 moon_LP150Q.cc, 128     JEOD_FRIEND_CLASS, 129                       | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31  relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  set_degree jeod::SphericalHarmonicsGravityControls, 69 set_degree_order jeod::SphericalHarmonicsGravityControls, 70                |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn     jeod::SphericalHarmonicsGravityControls, 75 missing_entry     jeod::GravityMessages, 47 Models, 11 moon_GRAIL150.cc, 127     JEOD_FRIEND_CLASS, 128 moon_GRAIL150.hh, 128 moon_LP150Q.cc, 128     JEOD_FRIEND_CLASS, 129 moon_LP150Q.hh, 129   | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  set_degree jeod::SphericalHarmonicsGravityControls, 69 set_degree_order   |
| jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110 Knm jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffects, 106 jeod::SphericalHarmonicsTidalEffectsInit, 110  mars_MRO110B2.cc, 125     JEOD_FRIEND_CLASS, 126 mars_MRO110B2.hh, 126 mars_spherical.cc, 126     JEOD_FRIEND_CLASS, 127 mars_spherical.hh, 127 min_radius_warn     jeod::SphericalHarmonicsGravityControls, 75 missing_entry     jeod::GravityMessages, 47  Models, 11 moon_GRAIL150.cc, 127     JEOD_FRIEND_CLASS, 128 moon_LP150Q.cc, 128     JEOD_FRIEND_CLASS, 129 moon_LP150Q.hh, 129 moon_spherical.cc, 129 | jeod::GravitySource, 51 jeod::SphericalHarmonicsTidalEffects, 106 Pnm jeod::SphericalHarmonicsGravityControls, 75 pos jeod::GravityIntegFrame, 31  radius jeod::SphericalHarmonicsGravitySource, 84 ref_frame jeod::GravityIntegFrame, 31 relativistic jeod::GravityControls, 27 remove_control jeod::GravityInteraction, 35 reset_control jeod::GravityControls, 24 reset_controls jeod::GravityInteraction, 35  set_degree jeod::SphericalHarmonicsGravityControls, 69 set_degree_order jeod::SphericalHarmonicsGravityControls, 70 set_grad_degree |

| set_grad_order   | jeod::GravityControls, 28   |
|--|---|
| jeod::SphericalHarmonicsGravityControls, 71  | sum_deltacoeffs   |
| set_integ_frame  | jeod::SphericalHarmonicsGravityControls, 72   |
| jeod::GravityInteraction, 35   | sun_spherical.cc, 138   |
| set_order  | JEOD_FRIEND_CLASS, 139  |
| jeod::SphericalHarmonicsGravityControls, 71  | sun_spherical.hh, 139   |
| skip_spherical   |   |
| jeod::GravityControls, 27  | tidal_bodies  |
| Snm  | jeod::SphericalHarmonicsTidalEffects, 107   |
| jeod::SphericalHarmonicsGravitySource, 84  | tidal_bodies_inertial   |
| sort controls  | jeod::SphericalHarmonicsTidalEffects, 107   |
| jeod::GravityInteraction, 36   | tidal_body_names  |
| source name  | jeod::SphericalHarmonicsTidalEffectsInit, 110   |
| jeod::GravityControls, 28  | tide_free   |
| sources  | jeod::SphericalHarmonicsGravitySource, 84   |
| jeod::GravityManager, 43   | tide_free_delta   |
| speed_of_light_sq  | jeod::SphericalHarmonicsGravitySource, 85   |
| jeod, 16   | time  |
| spherical  | jeod::GravityIntegFrame, 31   |
| ·  | total_dC20  |
| jeod::GravityControls, 28  | jeod::SphericalHarmonicsGravityControls, 76   |
| spherical_harmonics_calc_nonspherical.cc, 130  |   |
| spherical_harmonics_delta_coeffs.cc, 131   | update  |
| spherical_harmonics_delta_coeffs.hh, 131   | jeod::SphericalHarmonicsDeltaCoeffs, 54   |
| spherical_harmonics_delta_coeffs_init.hh, 132  | jeod::SphericalHarmonicsSolidBodyTides, 99  |
| spherical_harmonics_delta_controls.hh, 132   | jeod::SphericalHarmonicsTidalEffects, 105   |
| spherical_harmonics_gravity_controls.cc, 133   | update_deltacoeffs  |
| spherical_harmonics_gravity_controls.hh, 133   | jeod::SphericalHarmonicsGravityControls, 72   |
| spherical_harmonics_gravity_source.cc, 134   | upsilon   |
| spherical_harmonics_gravity_source.hh, 135   | jeod::SphericalHarmonicsGravitySource, 85   |
| spherical_harmonics_gravity_source_default_data.hh,  |   |
|  |   |
| 135  | var_effects   |
| spherical_harmonics_solid_body_tides.cc, 135   | var_effects<br>jeod::SphericalHarmonicsGravityControls, 76  |
| spherical_harmonics_solid_body_tides.cc, 135<br>spherical_harmonics_solid_body_tides.hh, 136   | jeod::SphericalHarmonicsGravityControls, 76   |
| spherical_harmonics_solid_body_tides.cc, 135<br>spherical_harmonics_solid_body_tides.hh, 136<br>spherical_harmonics_solid_body_tides_init.hh, 136  | jeod::SphericalHarmonicsGravityControls, 76   |
| spherical_harmonics_solid_body_tides.cc, 135<br>spherical_harmonics_solid_body_tides.hh, 136<br>spherical_harmonics_solid_body_tides_init.hh, 136<br>spherical_harmonics_tidal_effects.cc, 137   | jeod::SphericalHarmonicsGravityControls, 76   |
| spherical_harmonics_solid_body_tides.cc, 135<br>spherical_harmonics_solid_body_tides.hh, 136<br>spherical_harmonics_solid_body_tides_init.hh, 136  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135<br>spherical_harmonics_solid_body_tides.hh, 136<br>spherical_harmonics_solid_body_tides_init.hh, 136<br>spherical_harmonics_tidal_effects.cc, 137   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138   | jeod::SphericalHarmonicsGravityControls, 76  xi     jeod::SphericalHarmonicsGravitySource, 85  xp     jeod::SphericalHarmonicsTidalEffects, 107     jeod::SphericalHarmonicsTidalEffectsInit, 110     |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs   | jeod::SphericalHarmonicsGravityControls, 76  xi     jeod::SphericalHarmonicsGravitySource, 85  xp     jeod::SphericalHarmonicsTidalEffects, 107     jeod::SphericalHarmonicsTidalEffectsInit, 110  yp |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs jeod::SphericalHarmonicsDeltaCoeffs, 53   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit   | jeod::SphericalHarmonicsGravityControls, 76  xi     jeod::SphericalHarmonicsGravitySource, 85  xp     jeod::SphericalHarmonicsTidalEffects, 107     jeod::SphericalHarmonicsTidalEffectsInit, 110  yp |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls jeod::SphericalHarmonicsDeltaControls, 60   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit, 101  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 Spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit, 101 SphericalHarmonicsTidalEffects  | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 Spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs.53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit, 101 SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffects, 104   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffects, 104 SphericalHarmonicsTidalEffectsInit   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit, 109 | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs   | jeod::SphericalHarmonicsGravityControls, 76  xi   |
| spherical_harmonics_solid_body_tides.cc, 135 spherical_harmonics_solid_body_tides.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_solid_body_tides_init.hh, 136 spherical_harmonics_tidal_effects.cc, 137 spherical_harmonics_tidal_effects.hh, 137 spherical_harmonics_tidal_effects_init.hh, 138 SphericalHarmonicsDeltaCoeffs     jeod::SphericalHarmonicsDeltaCoeffs, 53 SphericalHarmonicsDeltaCoeffsInit     jeod::SphericalHarmonicsDeltaCoeffsInit, 57 SphericalHarmonicsDeltaControls     jeod::SphericalHarmonicsDeltaControls, 60 SphericalHarmonicsGravityControls     jeod::SphericalHarmonicsGravityControls, 65 SphericalHarmonicsGravitySource     jeod::SphericalHarmonicsGravitySource, 78, 79 SphericalHarmonicsSolidBodyTides     jeod::SphericalHarmonicsSolidBodyTides, 99 SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsSolidBodyTidesInit     jeod::SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffects     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit     jeod::SphericalHarmonicsTidalEffectsInit, 109 | jeod::SphericalHarmonicsGravityControls, 76  xi   |