

← Go Back

Hardware

Nano 33 BLE Sense

Tutorials

Access Barometric Pressure
Sensor Data on Nano 33
BLE Sense

Connecting Nano 33 BLE
Devices over Bluetooth®

Controlling RGB LED
Through Bluetooth®

Nano 33 BLE Sense User
Manual

Nano 33 BLE Sense
Community Projects

Edge Impulse with the
Nano 33 BLE Sense

**Gesture Recognition with
the Nano 33 BLE Sense**

Get Started With Machine
Learning on Arduino

Getting Started with
OpenMV

Reading Temperature &
Humidity on Nano 33 BLE
Sense

Connecting Two Nano 33
BLE Sense Boards Through
I2C

Accessing Accelerometer
Data on Nano 33 BLE Sense

Accessing Gyroscope Data
on Nano 33 BLE Sense

Accessing Magnetometer
Data on Nano 33 BLE Sense

Debugging with Lauterbach
TRACE32 GDB Front-End
Debugger

Home / Hardware / Nano 33 BLE
Sense / **Gesture Recognition with
the Nano 33 BLE Sense**



This tutorial refers to a
product that has
reached its end-of-life
status.

Gesture Recognition with the Nano 33 BLE Sense

Learn how to use the built in gesture
sensor of the Nano 33 BLE Sense to
control the built in RGB LED.

Author · Nefeli Last · 07/17/2024
Alushi revision

In this tutorial we will use an
Arduino Nano 33 BLE Sense for
gesture recognition, made
possible by the embedded
APDS9960 sensor.

We will use the sensor to print
out simple hand gesture
directions and control the
board's RGB LED accordingly. In
addition, we will program our
board to blink the built-in LED
and change colors to the RGB
LED. according to the direction
of the set gestures. The code
will read simple **Up-Down-
Right-Left** hand motions.

Goals

ON THIS PAGE

Goals

Hardware & Software Needed

APDS9960 Sensor +

Creating the Program

Testing It Out +

Conclusion

Learn what a APDS9960 sensor is.

Use the APDS9960 library.

Learn how to output raw sensor data from the Arduino Nano 33 BLE Sense.

Create your own gesture detection monitor.

Learn how to control the built-in LED and RGB LED, through hand gestures.


Hardware & Software Needed

This project uses no external sensors or components.

In this tutorial we will use the [Arduino Create Cloud Editor](#) to program the board.

APDS9960 Sensor

The APDS9960 sensor is a multipurpose device that features advanced gesture detection, proximity detection, Digital Ambient Light Sense (ALS) and Color Sense (RGBC).

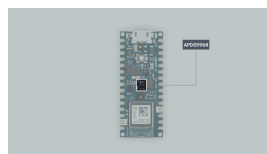

The APDS9960 sensor.

The sensor's gesture detection utilizes four directional

IR energy (sourced by the integrated LED) to convert physical motion information (i.e. velocity, direction and distance) into digital information.

It features:

- Four separate diodes sensitive to different directions.

- Ambient light rejection.

- Offset compensation.

- Programmable driver for IR LED current.

- 32 dataset storage FIFO.

- Interrupt driven I2C-bus communication.

If you want to read more about the APDS9960 sensor module see [here](#).

The Library

The APDS9960 library allows us to use the sensor available on the board, to read gestures, color, light intensity and proximity. The library includes some of the following functions:

```
1 begin()
2 end()
3 gestureAvailable()
4 readGesture()
5 colorAvailable()
6 readColor()
7 proximityAvailable()
8 readProximity()
9 setGestureSensitivity
10 setInterruptPin()
11 setLEDBoost()
```


If you want a deeper knowledge on any of the functions of the library, you can check the Arduino [reference](#) for this library.

For the purposes of this tutorial we will only focus on the gesture readings, which are based on the detection of the movement of the hand over four photodiodes inside the sensor.

Creating the Program

1. Setting up

Let's start by opening the Arduino Cloud Editor, click on the **Libraries** tab and search for the **APDS9960** library. Then in **> Examples**, open the **GestureSensor** sketch and once it opens, you could rename it as Gesture&LEDs.

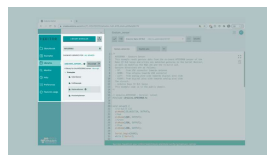


Finding the library in the Cloud Editor.

2. Connecting the board

Now, connect the Arduino Nano 33 BLE Sense to the computer and make sure that the Cloud Editor recognizes it, if so, the board and port should appear as shown in the image below. If they don't appear, follow the

that will allow the Editor to recognize your board.

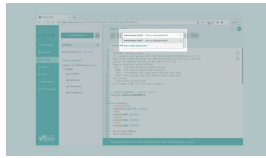

Selecting the board.

3. Blink patterns according to hand gestures

Now we will need to modify the code on the example, in order to change the color of the RGB LED and the built-in LED respectively according to the direction of our hand gesture.

After including the `Arduino_APDS9960.h` library, we will need to configure the specified pins (22, 23, 24, LED_BUILTIN) at the beginning of the `setup()` section, to behave as output:

```
1 //in-built LED
2 pinMode(LED_BUILTIN, OUTPUT);
3 //Red
4 pinMode(LED_R, OUTPUT);
5 //Green
6 pinMode(LED_G, OUTPUT);
7 //Blue
8 pinMode(LED_B, OUTPUT);
```

and then at the end, we need to turn all the LEDs OFF by adding the following statements

```
1 // Turning OFF the RGB LED
2 digitalWrite(LEDOR, LOW);
3 digitalWrite(LEDG, LOW);
4 digitalWrite(LEDB, LOW);
```

In the `loop()` section the `if()` statement is checking that the gesture sensor is available and if it is, it reads for any incoming gesture detection.

Next, in the `switch()` statement we will add different actions to be performed according to conditions, in this case the direction of the hand gesture will define those conditions.

If the sensor detects motions (up, down, left or right) we can add the following code snippets between the **`Serial.println()`** and the **`break;`** in each switch case, to activate the red, blue and green colors of the RGB LED and the orange on the built-in LED.

In the `GESTURE_UP` case, the RGB LED will glow **red** for a second:

```
1 digitalWrite(LEDOR, HIGH);
2 delay(1000);
3 digitalWrite(LEDOR, LOW);
```

In the `GESTURE_DOWN` case, the RGB LED will glow **green** for one second:

```
1 digitalWrite(LEDG, LOW);
2 delay(1000);
3 digitalWrite(LEDG, HIGH);
```

In the `GESTURE_LEFT` case, the RGB LED will glow **blue** for one second:

```
1 digitalWrite(LEDDB, LOW);
2 delay(1000);
3 digitalWrite(LEDDB, HIGH);
```

Lastly, in the `GESTURE_RIGHT` case, the small built-in LED will glow **orange** for one second:

```
1 digitalWrite(LED_BUILTIN, LOW);
2 delay(1000);
3 digitalWrite(LED_BUILTIN, HIGH);
```

Now the code is complete!

4. Complete code

```
1  /*
2   APDS9960 - Gesture
3   This example reads
4   Nano 33 BLE Sense
5   Gesture directions
6   - UP:    from USB
7   - DOWN:  from ante
8   - LEFT:  from ana
9   - RIGHT: from dig
10  The circuit:
11  - Arduino Nano 33
12  This example code
13  */
14
15  #include <Arduino_A
16
17  void setup() {
18    Serial.begin(9600);
19    //in-built LED
20    pinMode(LED_BUILT
21    //Red
22    pinMode(LED_R, OUT
23    //Green
24    pinMode(LED_G, OUT
25    //Blue
26    pinMode(LED_B, OUT
27
28    while (!Serial);
```

Testing It Out




Triggering the gesture sensor.

After you have successfully verified and uploaded the sketch to the board, open the Serial Monitor from the menu on the left.


In order to test out the code,

position in front of you (USB port facing down) and carry on by making directional UP-DOWN-RIGHT-LEFT hand gestures. Try to make your movement as clear as possible, yet subtle enough for the sensor to pick it up.

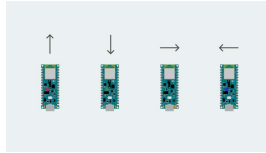

Direction of hand gestures.

Here is a screenshot example of the sketch returning values.

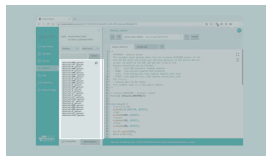

Gesture detections printed in the Serial Monitor.

Troubleshoot

Sometimes errors occur, if the code is not working there are some common issues we can troubleshoot:

- Missing a bracket or a semicolon

- Arduino board connected to the wrong port

- Accidental interruption of cable connection

Conclusion

In this tutorial we learned what a **APDS9960** sensor is, how to use the one embedded in the Arduino Nano 33 BLE Sense board and the APDS9960 library, as well as how to create your own gesture detection monitor which can operate the RGB and built-in LED in various color patterns.

Suggest changes	Need support?	License
The content on docs.arduino.cc is facilitated through a public GitHub repository. If you see anything wrong, you can edit this page here .	Help Center Ask the Arduino Forum Discover Arduino Discord	The Arduino documentation is licensed under the Creative Commons Attribution-Share Alike 4.0 license.

Was this article helpful?

