Playable Fashion
Fashion In Depth Module
Soft Button Worksheet
Kaho Abe & Ramsey Nasser
Eyebeam, NYC
updated 2/9/2017


MATERIALS:

Conductive Fabric Conductive Tape Adhesive Paper Craft Foam Cotton Jersey Work Gloves

TOOLS:

Scissors
Pencil & Ruler
Alligator Clips
FLORA & USB cord
Laptop with Internet

Iron & Ironing Surface 8" x 8" Cotton Scrap (to protect iron) Glue Gun & Sticks

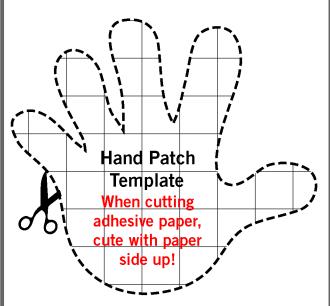


Conductive Fabric CUT



Adhesive Paper CUT

x1

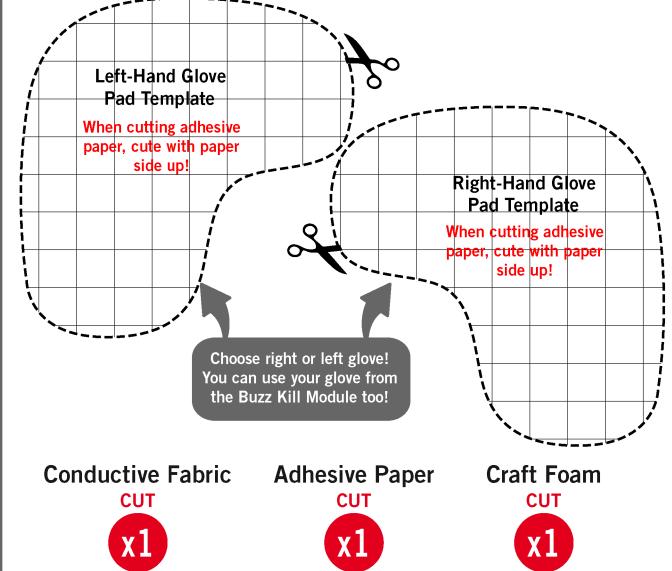

STEP 1

IRON THE ADHESIVE PAPER TO THE CONDUCTIVE FABRIC. PLACE CONDUCTIVE FABRIC PATCH DOWN FIRST. THEN PLACE THE ADHESIVE PAPER (PAPER SIDE UP) ON TOP OF CONDUCTIVE FABRIC. THEN PLACE COTTON SCRAP OVER BOTH PIECES BEFORE IRONING.



Iron for only 5 seconds.

Otherwise the melted glue will seep into the fabric.

Use a dry iron -- turn off steam! Steam can make the adhesive less effective.





TIP: When ironing with adhesive paper, use a scrap piece of cotton fabric to create a barrier between iron surface and the materials you are ironing. This will help your iron surface from getting ruined.




Iron all of the patch. If the adhesive paper is not stuck to the patch, iron again.



STACK AND IRON IN THE SAME WAY AS WITH PATCH.



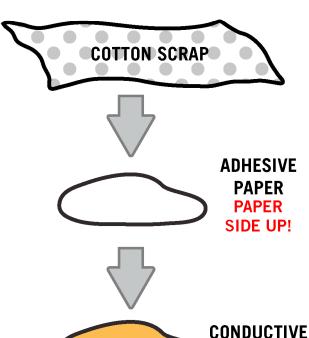

FABRIC

