

System Site Planning - 2

High-Performance Process Manager Planning

HP02-610

R610

02/2009

Notices and Trademarks

**Copyright 2005 – 2009 by Honeywell International Inc.
Release 610 February, 2009**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell and **TotalPlant** are registered trademarks of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell International
Process Solutions
2500 West Union Hills Drive
Phoenix, AZ 85027
1-800 223-8947

About This Document

This document is intended for planning the installation of a High-Performance Process Manager (HPM) subsystem at a TPS system site. The High-Performance Process Manager subsystem is a device on the Universal Control Network (UCN) that includes the Network Interface Module (NIM). Process Managers (PMs), Advanced Process Managers (APMs), and Logic Managers (LMs) may also be resident on the network.

Release Information

Document Name	Document ID	Release Number	Publication Date
High-Performance Process Manager Planning - HP02	HP02-610	610	02/2009

Document Category
Planning and Design

Revision Notes

The following list provides notes concerning all revisions of this document.

Doc ID	Rel ID	Date	Notes
High-Performance Process Manager Planning - HP02	610	01/2007	Par 1-3CDIAB

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
United States and Canada	Honeywell Solution Support Center	Honeywell TAC, MS P13, 2500 West Union Hills Drive, Phoenix, AZ, 85027	Phone: 1-800 822-7673 602- 313-5558 (In Arizona) Facsimile: (602) 313-3293
Note: Calls are answered by dispatcher between 6:00 A.M. and 4:00 P.M. Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.			
Europe	Honeywell TAC-EMEA	TAC-BE02 Hermes Plaza Hermeslaan, 1HB-1831 Diegem, Belgium	Phone: +32-2-728-2732 Facsimile: +32-2-728-2696
Pacific	Honeywell Global TAC – Pacific	Honeywell Limited Australia 5 Kitchener Way Burswood 6100, Western Australia Email: GTAC@honeywell.com	Phone: 1300-300-4822 (toll free within Australia) +61-8-9362-9559 (outside Australia) Facsimile: +61-8-9362-9564
India	Honeywell Global TAC – India	Honeywell Automation India Ltd. 56 and 57, Hadapsar Industrial Estate Hadapsar, Pune –411 013, India Email: Global-TAC- India@honeywell.com	Phone: +91-20- 66039400 Facsimile: +91-20- 66039800
Korea	Honeywell Global TAC – Korea	Honeywell Co., Ltd 17F, Kikje Center B/D, 191, Hangangro-2Ga Yongsan-gu, Seoul, 140- 702, Korea Email: Global-TAC- Korea@honeywell.com	Phone: +82-2-799-6317 +82-11-9227-6324 Facsimile: +82-2-792-9015

Location	Organization	Address	Phone/Facsimile
People's Republic of China	Honeywell Global TAC – China	Honeywell (China) Co., Ltd 33/F, Tower A, City Center, 100 Zunyi Rd., Shanghai 200051, People's Republic of China Email: Global-TAC-China@honeywell.com	Phone: +86- 21-52574568
Singapore	Global TAC – South East Asia	Honeywell Private Limited Honeywell Building 17, Changi Business Park Central 1, Singapore 486073 Email: GTAC-SEA@honeywell.com	Phone: +65-6580-3500 Facsimile: +65-6580-3501 +65-6445-3033
Taiwan	Global TAC – Taiwan	Honeywell Taiwan Ltd. 17F-1, No. 260, Jhongshan 2nd Road. Cianjhen District Kaohsiung, Taiwan, ROC Email: Global-TAC-Taiwan@honeywell.com	Phone: +886- 7- 536 2567 Facsimile: +886-7-536 2039
Japan	Global TAC – Japan	Honeywell Japan Inc. New Pier Takeshiba, South Tower Building, 20th Floor, 1-16-1 Kaigan, Minato-ku, Tokyo 105-0022, Japan Email: Global-TAC-JapanJA25@honeywell.com	Phone: +81-3-6730-7160 Facsimile: +81-3-6730-7228
Elsewhere	Call your nearest Honeywell office.		
World Wide Web	Honeywell Solution Support Online: http://www.honeywell.com/ps		
Training Classes	Honeywell Automation College: http://www.automationcollege.com		

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.
	REFERENCE -EXTERNAL: Identifies an additional source of information outside of the bookset.
	REFERENCE - INTERNAL: Identifies an additional source of information within the bookset.
CAUTION	Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.
	CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. CAUTION symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.
	WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death. WARNING symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.
	WARNING, Risk of electrical shock: Potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 VDC may be accessible.
	ESD HAZARD: Danger of an electro-static discharge to which equipment may be sensitive. Observe precautions for handling electrostatic sensitive devices
	Protective Earth (PE) terminal:. Provided for connection of the protective earth (green or green/yellow) supply system conductor.

Symbol	Definition
	Functional earth terminal: Used for non-safety purposes such as noise immunity improvement. NOTE: This connection shall be bonded to Protective Earth at the source of supply in accordance with national local electrical code requirements.
	Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.
	Chassis Ground: Identifies a connection to the chassis or frame of the equipment shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.

Contents

1.	Introduction	25
1.1	Overview.....	25
	The manual's purpose.....	25
	The manual's contents	25
	Information not covered	25
2.	HPM Description	27
2.1	Overview.....	27
	HPM major assemblies	27
	Nonredundant HPM cabinet layout	27
2.2	Card Files	29
	Introduction	29
	Non-CE Compliant card file models	29
	CE Compliant card file models.....	29
	Conversion kit	29
2.3	HPMM Card Files	30
	Three types of HPM card files	30
	HPMM description.....	30
	Left 7-Slot HPMM card file description	30
	Left 7-Slot HPMM card file illustration	31
	Right 7-Slot HPMM card file description.....	32
	Right 7-Slot HPMM card file illustration	32
	15-Slot HPMM card file description	33
	15-Slot HPMM card file illustration	33
	7-Slot HPMM card file usage.....	34
	15-Slot HPMM card file usage.....	34
	HPMM functionality	34
2.4	Input/Output Processor (IOP) Card Files	34
	IOP card file descriptions	34
	Non-CE Compliant card files	34
	CE Compliant card files.....	34
	Left 7-Slot IOP card file	35
	Right 7-Slot IOP card file.....	36
	15-Slot IOP card file	37
2.5	Input/Output Processor (IOP) Cards	38
	Types of Input/Output Processors (IOPs).....	38
	Card file configurations	38
	IOP redundancy	39
	Redundant HLAI IOPs.....	39
	Redundant AO IOPs	40
2.6	I/O Link Extender (Fiber Optic Link)	41
	Introduction	41
	Features	41
	Remote card files	41
	Fiber optic cable length	41
	I/O Link Extender planning	41
	Standard I/O Link Extender.....	41
	Standard I/O Link Extender connections nonredundant HPMM	42
	Standard I/O Link Extender connections redundant HPMMs	43

Long Distance I/O Link Extender.....	44
Long Distance I/O Link Extender connections nonredundant HPMM.....	44
Long Distance I/O Link Extender connections redundant HPMMs.....	45
2.7 Field Termination Assemblies (FTAs)	46
Description	46
FTAs types	46
Standard FTAs	46
Galvanically Isolated FTAs.....	48
Three physical sizes.....	49
FTA Mounting Channels	50
Mounting orientation.....	50
Typical cabinet layout.....	50
Compression or screw terminals available	52
FTA compression-type terminal connector.....	52
FTA fixed-screw terminal connector	53
FTA removable-screw connector	53
Galvanic Isolation Module connectors.....	54
Crimp pin-type terminal connector	54
Compression-type terminal connector.....	55
Marshalling Panel.....	56
2.8 Power Systems.....	57
Power System features	57
Two types of Power Systems	57
Standard Power System.....	57
Redundant Power Supply Modules	57
Model MU-PSRX03 Standard Power System	58
Model MU-PSRX04 Standard Power System	59
AC Only Power System.....	59
AC Only Power System illustration.....	60
2.9 Cabinet Configurations	61
Cabinet configurations	61
Redundant HPMMs in a single cabinet	61
Redundant HPMMs in complexed cabinets.....	62
Local and remote HPM cabinets	63
3. Power Requirements	65
3.1 Overview.....	65
Introduction	65
Power backup planning	65
3.2 Backup Strategy	65
Planning strategy	65
Power continuity.....	65
Two ac power sourcing methods.....	65
First method	66
Second method	66
Better continuity of HPM power.....	66
Uninterruptible Power Supply (UPS)	66
UPS description	66
UPS transfer switches	66
Power quality.....	66
3.3 Quality.....	67
Quality requirements	67
Verification	67
AC power and ground	68
3.4 Power Draw	70

Introduction	70
Power loading and initial inrush.....	70
Fuse clearing.....	70
Power System load requirements	70
Power System considerations	70
Provide adequate power	70
Typical 2Vdc Power Draw Calculations.....	70
Power calculation procedure	71
Assembly 24 Vdc power usage	71
Single Power System Calculation Example.....	76
Dual Power System Calculation Examples	77
HPM AC Power Draw.....	78
Crest Factor	78
Inrush Current	79
3.5 Substation Sizing.....	80
Conversion example	80
3.6 Circuit Breaker Sizing	81
AC feeder	81
Circuit breakers	81
One Power Supply Module.....	81
Two Power Supply Modules.....	81
Two Power Supply Modules on two ac feeders.....	81
3.7 Custom UPS and Power Factor	81
Introduction	81
Power Supply Module power factor.....	81
3.8 Automatic Bypass Switch	82
Introduction	82
Transfer time requirement	82
3.9 Surge Protection	82
Introduction	82
Protector usefulness	82
Power Supply Module performance	82
MOV protector	82
3.10 Grounded Conductor	83
Power source's grounded conductor	83
3.11 Redundant Safety Grounds	83
Introduction	83
Reference.....	83
3.12 Emergency Shutdown.....	83
Introduction	83
3.13 Trays and Conduits.....	83
Raised floor	83
FTA cables	83
Field circuit.....	83
Cable segregation	84
Intrinsic Safety.....	84
3.14 Existing TPS System AC Power	84
Power compatibility	84
4. Process Wiring	85
4.1 Overview.....	85
FTA mounting.....	85

FTA Mounting Channels	85
Power Distribution and Marshalling Panels	85
4.2 FTA Selection	86
Overview	86
Rules	86
FTA sizes	87
FTA types	89
Standard FTAs	89
Galvanically Isolated FTAs	92
4.3 Cabinet Entry	93
Cabinet Access	93
Bottom entry	93
Top entry	93
Cable clamping	93
Reference	93
4.4 Signal Tray Wiring Compatibility	94
Wiring rules	94
4.5 Process Wiring Termination	94
Compression terminals	94
Screw terminals	94
Pluggable connectors	94
FTA signal requirements	94
5. Hazardous Environment Planning	95
5.1 Overview	95
Introduction	95
5.2 Hazardous Area Classifications	95
National Electrical Code	95
Interpretation of Division 2 rules	96
5.3 Mounting and Operating the HPM in a Division Location	96
Factory Mutual approval	96
HPM placement considerations	96
HPM placement publications	96
Approved Division 2 area equipment (IOPs)	97
Approved Division 2 area equipment (Standard FTA Components)	97
5.4 Field Wiring in Hazardous Locations	106
Nonincendive FTAs (current limiting)	106
Cable and load parameters (entity parameters)	106
Electrical code approval	106
Current limiting resistor value	106
Nonincendive FTAs	106
Cable size and load parameters	107
6. Corrosion Protection Planning	109
6.1 Overview	109
Introduction	109
G3 rating	109
Environmental harshness levels	109
Gas concentrations	110
Conformal coating symbol	110
Harsh Environment Enclosure	110

6.2	Model Numbers	111
	Model numbers	111
	Assembly numbers.....	111
	Conformally coated model list	111
7.	CE Compliance	119
7.1	Overview.....	119
	Introduction	119
	Hardware differences	119
	CE Compliant hardware identification	119
	Master Reference Ground.....	119
	CE Compliant installation	119
7.2	Card Files	119
	Introduction	119
	Backpanel ground plane	120
	Rear backpanel shield panel.....	120
	IOP to FTA cables.....	120
	Model list.....	120
	Conversion kit	120
7.3	HPMM Cards	120
	Introduction	120
	Conformal coating	120
7.4	IOPs.....	121
	Introduction	121
	Conformal coating.....	121
	Nonconformally coated IOPs.....	121
	Conformally coated IOPs	122
7.5	FTAs	123
	Introduction	123
	Conformal coating.....	123
	Nonconformally coated FTAs	123
	Conformally coated FTAs.....	126
7.6	I/O Link Extender.....	130
	Introduction	130
	I/O Link Extender adapter kit.....	130
7.7	IOP to FTA Cables.....	131
	Introduction	131
	CE Compliant.....	131
	Model list.....	131
7.8	Power Cables	132
	Introduction	132
	New subsystems	132
	Non-CE Compliant subsystems	132
	CE Compliant subsystems	132
	Available power cables	133
	Non-CE Compliant subsystem power cables	133
	CE Compliant subsystem power cables	134
	Power cable without protector module	134
7.9	I/O Link Interface Cables	135
	Introduction	135
	51195479-xxx I/O Link Interface cables	135
	51204042-xxx I/O Link Interface cables	135
	Upgrading.....	135

Parts list	135
7.10 UCN Trunk Cable Taps.....	136
Introduction	136
Two-port UCN tap	136
Four-port UCN tap.....	137
Eight-port UCN tap.....	137
7.11 Cabinets	138
Introduction	138
Illustrations	138
UCN drop cable taps.....	138
UCN drop cables.....	138
8. Model MU-CBSM01/MU-CBDM01 Cabinets	139
8.1 Overview.....	139
Single-access cabinet	140
Dual-access cabinet.....	141
8.2 Cabinet Description	142
Cabinet dimensions.....	142
Top and bottom cabinet entry.....	142
Single-access bottom cable entry slots	142
Dual-access cable bottom entry slots.....	143
Independent cabinet entry.....	143
Cabinet complexing.....	143
NEMA 12.....	143
Cabinet cooling	144
Cabinet internal structure	144
8.3 Card File and Power System Configurations	145
Cabinet layout	145
Single-access cabinet equipment layout	145
Dual-access cabinet equipment layout.....	146
8.4 Card File and Power System Descriptions.....	147
Card file descriptions.....	147
7-Slot card file dimensions	147
15-Slot card file dimensions	148
Installing 7-Slot and 15-Slot card files	149
Power System dimensions	150
8.5 FTA Mounting Channel Descriptions.....	150
FTA sizes and styles	151
Three styles.....	151
Vertical or horizontal mounting.....	151
8.6 Vertical FTA Mounting Channels.....	151
Overview	151
FTA Mounting Channel configurations.....	152
Vertical FTA Mounting Channel configurations	152
FTA Mounting Channel widths	153
FTA installation holes.....	154
8.7 Horizontal FTA Mounting Channel	155
Overview	155
Single-access FTA Mounting Channel installation	155
Dual-Access FTA Mounting Channel installation	156
FTA Mounting Channel widths	157
Horizontal FTA Mounting Channel installation holes.....	158
8.8 Cabinet Floor Planning	159

Floor template	159
9. Model MU-CBSX01/MU-CBDX01 Cabinets	161
9.1 Overview	161
Introduction	161
CE Compliant	161
Single-access cabinet	162
Dual-access cabinet	163
CE Compliance	164
9.2 Cabinet Description	165
Cabinet dimensions	165
Top and bottom entry	165
Single-access cabinet bottom entry	165
Dual-access cabinet bottom entry	166
Independent cabinet entry	166
Cabinet complexing	166
NEMA 12	166
Cabinet cooling	167
Cabinet internal infrastructure	167
9.3 Card File and Power System Configurations	168
Cabinet layout	168
Single-access cabinet equipment layout	168
Dual-access cabinet equipment layout	169
9.4 Card File and Power System Descriptions	170
Card file descriptions	170
7-Slot card file dimensions	170
15-Slot card file dimensions	171
Installing 7-Slot and 15-Slot card files	172
Power System dimensions	173
9.5 FTA Mounting Channel Descriptions	174
FTA sizes	174
Three styles	174
Vertical or horizontal mounting	174
Vertical FTA Mounting Channels	175
Horizontal FTA Mounting Channel	178
9.6 Cabinet Floor Planning	182
Floor template	182
10. Redundancy Planning	183
10.1 Redundant HPM Configurations	183
HPMM card file types	183
Redundant 7-Slot HPMM card files	183
Redundant 15-Slot HPMM card files	183
Redundant HPMMs in a single cabinet	184
Redundant HPMMs in separate cabinets	185
Dual cabinet illustration	185
Redundancy interface cable	186
Additional power failure protection	186
10.2 Redundant IOP Placement	187
Recommendations	187
HPMM card files in separate cabinets	187
HPMM card files in same cabinet	187
Redundant HPMMs recommended for redundant IOPs	187

10.3	Redundancy Support	188
	Power System	188
	HPMM to I/O	188
11.	I/O Link Extender Planning	191
11.1	I/O Link Extender Description	191
	Introduction	191
	I/O Link Extender cards	191
	Standard I/O Link Interface fiber optic couplers	191
	Long Distance I/O Link Interface fiber optic couplers	191
	Remote card file requirements	191
	Standard I/O Link Interface assignment	191
	Single HPMM	192
	Standard I/O Link Extender Interconnections with Redundant HPMMs	193
	Long Distance I/O Link Interface assignment	194
	Long Distance I/O Link Extender Interconnections with Nonredundant HPMM	194
	Long Distance I/O Link Extender Interconnections with Redundant HPMMs	195
	Number of remote card files	195
	Maximum fiber optic cable length	196
	Remote card file installation	196
11.2	Fiber Optic Cable Routing	197
	Routing methods	197
	Cable A and B separation	197
	Direct Burial	197
	Aerial Lashing	197
	Vertical Installations	197
	Indoor Requirements	198
	Loose Buffered Cable	198
	Number of Fibers	198
	Cable Installation	198
11.3	Indoor Cable Bend Radius	199
	Cable bend requirements	199
11.4	Cable Construction	199
	Fiber optic cable selection	199
	Installation precautions	199
11.5	Cable Splices and Connections	200
	Planning the cabling	200
	Cable splice protection	200
	Cable breakout	200
	Use of a breakout kit	200
	Cables with connectors preinstalled	201
11.6	Signal Loss Budget	202
	Introduction	202
	Standard I/O Link Extender	202
	Long Distance I/O Link Extender	204
11.7	Power Level Measurement	205
	Record post installation measurements	205
12.	Low Level Multiplexer Planning	207
12.1	Overview	207
	Introduction	207
12.2	LLMux Version	207

LLMux Configurations	207
LLMux IOP Placement	209
LLMux Power Adapter Placement	210
LLMux FTA Placement	210
Remote CJR Installation	213
12.3 RHMUX Version	214
RHMUX Configurations	214
RHMUX IOP Placement	217
12.4 RHMUX Power Adapter Placement	218
Within 50 meters of IOP	218
IOP to Power Adapter cable	218
12.5 RHMUX FTA Placement	218
EMI sensitivity	218
Power Adapter to remote FTA cable length	218
Within 2000 meters of Power Adapter	218
Indoor environment FTA to Power Adapter cabling	219
Outdoor environment Power Adapter to FTA cabling	219
References	219
Power Adapter to FTA cable specifications	219
Model MU-KLXxxx power cable (indoor environment)	220
Model MU-KLO305 power cable (outdoor environment)	220
13. Serial Device Interface Planning	221
13.1 Serial Device Interface Configurations	221
Overview	221
FTA plug-in module determines application	221
EIA-232 and EIA-422/485 interfaces	221
SDI interface configuration	222
EIA-232 cable length limitation	223
13.2 Serial Device Interface IOP Placement	223
Locating the IOP	223
13.3 Power Adapter Placement	223
Install within 50 meters of IOP	223
Power Adapter size	223
13.4 IOP to Power Adapter Cabling	223
Non-CE-Compliant IOP to Power Adapter cabling	223
CE-Compliant IOP to Power Adapter cabling	223
13.5 Serial Device Interface FTA Placement	223
Install within 305 meters of Power Adapter	223
FTA size	223
13.6 FTA to Power Adapter Cabling	224
FTA to Power Adapter cable	224
Internal cabinet or cabinet complex cabling	224
External cabinet cabling	224
References	224
Power Adapter to FTA cable specifications	224
51304465-xxxx cable (Internal cabinet use)	224
Model MU-KLXxxx cable (External cabinet use)	225
13.7 FTA Field Cabling	225
FTA to field device cable specifications	225
Model MU-KSXxxx cable	225
Belden 9182 cable	225
Belden 9271 cable	226

13.8	Serial Device Interface FTA Models	226
	Model MU-TSDT02	226
	Model MU-TSDM02	226
	Model MU-TSDU02	226
14.	Serial Interface Planning	227
14.1	Serial Interface Configurations.....	227
	CE Compliance	227
	Introduction	227
	FTA plug-in module determines application	227
	EIA-232 and EIA-422/485 interfaces.....	227
	Modbus protocol device	228
	Model MU-TSIM12 FTA Modbus EIA-232 and EIA-422/485 interfaces	228
	Model MU-TSIM12 FTA Modbus EIA-422/485 interface	229
	Model MU-TSIM12 FTA peripheral device EIA-422/485 interface.....	230
	Model MU-TSIA12 FTA Allen-Bradley EIA-232 interface	231
14.2	Serial Interface IOP Placement.....	232
	Locating the IOP	232
14.3	Power Adapter Placement	232
	Install within 50 meters of IOP	232
	Power Adapter size	232
14.4	IOP to Power Adapter Cabling.....	232
	Non-CE Compliance IOP to Power Adapter cabling	232
	CE Compliance IOP to Power Adapter cabling	232
14.5	Serial Interface FTA Placement.....	232
	Install within 305 meters of Power Adapter	232
	FTA size	232
14.6	FTA to Power Adapter Cabling	233
	FTA to Power Adapter cable	233
	Internal cabinet or cabinet complex cabling	233
	External cabinet cabling	233
	References.....	233
	Power Adapter to FTA cable specifications.....	233
	51304465-xxx cable (Internal cabinet use).....	233
	Model MU-KLXxxx cable (External cabinet use)	234
14.7	FTA Field Cabling	234
	FTA to field device cable specifications	234
	Model MU-KSXxxx cable.....	234
	Belden 9182 cable	234
	Belden 9271 cable	235
14.8	Serial Interface FTA Models	235
	Model MU-TSIM12 Interface configurations	235
	Model MU-TSIM12 Modbus protocol.....	235
	Model MU-TSIA12 Allen-Bradley device	235
14.9	Communications Interface Specifications.....	236
	Specifications	236
	Reference.....	236
15.	Galvanically Isolated FTA Planning.....	237
15.1	Overview	237
	Introduction	237

Installation references	237
Description	237
Usage advantages	237
CE Compliance	237
Nonconformally coated FTAs	237
Conformally coated FTAs.....	238
FTA mounting.....	240
FTA to IOP cable.....	240
Galvanic Isolation Module	241
Compression or crimp terminal connectors.....	241
Crimp-type terminal connectors	242
Compression-type terminal connectors	243
Types of FTAs.....	243
15.2 Features	244
Overview	244
IOP Redundancy.....	244
Analog and Digital Output Standby Manual Devices.....	244
Auxiliary Inputs/Outputs	244
Power Requirements.....	246
Field Wiring Connections	247
Ambient Temperature Limits	247
FTA Mounting Channels	247
15.3 Power Distribution	251
Power Distribution Assembly.....	251
Cabling to Power Distribution Assemblies.....	252
Cabling to FTAs	253
Power Considerations	253
15.4 High Level Analog Input (HLAI) FTAs.....	254
Model MU-GAIH12/MU-GAIH8FTA.....	254
Model MU-GAIH13/MU-GAIH8FTA.....	255
Model MU-GAIH14/MU-GAIH8FTA.....	257
Model MU-GAIH22/MU-GAIH9FTA.....	259
15.5 12Vdc Digital Input FTAs	261
Model MU-GDID12/MU-GDID8FTA	261
Model MU-GDID13/MU-GDID8FTA	263
15.6 Analog Output FTAs	265
Model MU-GAOX02/7and MU-GAOX12/8FTAs.....	265
Model MC-GHAO1and MU-GHAO1FTAs	266
15.7 12Vdc digital Output FTAs	268
Model MU-GDOD12/MU-GDOD8FTA.....	268
Model MU-GDOL12/MU-GDO8FTA	269
Combiner Panel connection	270
Marshalling Panel connection	270
Indicators.....	271
Standby Manual Device Connector.....	271
Current Consumption	271
Isolation and Safety.....	271
Combiner Panel	271
Marshalling Panel.....	272
Configurations	273
15.8 High Level Analog Input FTAs	273
Introduction	273
15.9 Digital Input FTAs.....	274
Model MU-GDID12/82 FTA configuration.....	274

15.10 Digital Output FTAs.....275

Model MU-GDOD12/82 FTA configuration.....275

Model MU-GDOL12/82 configuration275

Tables

Table 1	Card File Models	29
Table 2	Standard Field Termination Assembly Types	46
Table 3	Galvanically Isolated Field Termination Assembly Types	48
Table 4	HPM Assembly 24 Vdc Power Usage	71
Table 5	Single Power System Calculation Example	76
Table 6	Dual Power System Calculation Example (Power System 1)	77
Table 7	Dual Power System Calculation Example (Power System 2)	77
Table 8	Standard FTAs and Associated Assemblies	89
Table 9	Galvanically Isolated FTAs and Associated Assemblies	92
Table 10	Hazardous Area Classifications	95
Table 11	HPM Equipment Approved for Use in a Division 2 Area (IOPs)	97
Table 12	Nonincendive FTA Types	106
Table 13	FTA Cable and Load Parameters	107
Table 14	Environment Minimum Equipment Requirement	109
Table 15	Harsh Environment Definitions from ANSI/ISA-S71.04-1985	109
Table 16	Conformally Coated Assembly Model Numbers	111
Table 17	Card Files	120
Table 18	IOPs—Nonconformally Coated	121
Table 19	IOPs—Conformally Coated	122
Table 20	Field Termination Assemblies—Nonconformally Coated	123
Table 21	Field Termination Assemblies—Conformally Coated	126
Table 22	IOP to FTA Cables	131
Table 23	Non-CE Compliant Subsystem Power Cables	133
Table 24	CE Compliant Subsystem Power Cables	134
Table 25	Power Cables without I/O Link Protector Module	134
Table 26	0 I/O Link Interface Cable Sets	135
Table 27	Minimum Bend Radius for Indoor Cable	199
Table 28	Standard Optical Power Loss	203
Table 29	Standard Fiber Optic Cable Losses (@ 850 nm)	203
Table 30	Long Distance Optical Power Loss	205
Table 31	Long Distance Fiber Optic Cable Losses (@ 1300 nm)	205
Table 32	LLMux Assemblies	207
Table 33	RHMUX Assemblies	214
Table 34	Serial Interface FTAs	227
Table 35	Serial Interface EIA-232 Specifications	236
Table 36	Serial Interface EIA-422/485 Specifications	236
Table 37	CE Compliant Galvanically Isolated FTAs— Nonconformally Coated	237
Table 38	CE Compliant Galvanically Isolated FTAs— Conformally Coated	238
Table 39	Galvanically Isolated FTA Power Requirements	246

Figures

Figure 1	Nonredundant HPMM Cabinet Layout.....	28
Figure 2	Left 7-Slot HPMM Card File.....	31
Figure 3	Right 7-Slot HPMM Card File	32
Figure 4	15-Slot HPMM Card File	33
Figure 5	Left 7-Slot IOP Card File.....	35
Figure 6	Right 7-Slot IOP Card File	36
Figure 7	15-Slot IOP Card File.....	37
Figure 8	HLAI FTA with Redundant HLA IOPs	39
Figure 9	Analog Output FTA with Redundant Analog Output IOPs.....	40
Figure 10	Standard I/O Link Extender Interconnections with Nonredundant HPMM	42
Figure 11	Standard I/O Link Extender Interconnections with Redundant HPMMs.....	43
Figure 12	Long Distance I/O Link Extender Interconnections with Nonredundant HPMM.....	44
Figure 13	Long Distance I/O Link Extender Interconnections with Redundant HPMMs	45
Figure 14	Field Termination Assembly (FTA) Sizes	49
Figure 15	Typical Vertical FTA Mounting Channel Layout	51
Figure 16	Typical FTA Compression Terminal Connector.....	52
Figure 17	Typical FTA Fixed-Screw Terminal Connector	53
Figure 18	Typical FTA Removable-Screw Terminal Connector	53
Figure 19	Crimp-Pin Galvanic Isolation Module Terminal Connector.....	54
Figure 20	Compression-Type Galvanic Isolation Module Terminal Connector	55
Figure 21	FTA Marshalling Panel Assembly Layout.....	56
Figure 22	Standard Power System—Model MU-PSRX03.....	58
Figure 23	Standard Power System—Model MU-PSRX04.....	59
Figure 24	AC Only Power System—Not for CE Compliant Applications.....	60
Figure 25	Single Cabinet with Redundant HPMMs	61
Figure 26	Complexed Cabinets with Redundant HPMMs	62
Figure 27	Local Complexed Cabinets with Redundant HPMMs and a Remote I/O Cabinet.....	63
Figure 28	Subsystem AC Power and Ground Connections—Multi-Ground System.....	68
Figure 29	Subsystem AC Power and Ground Connections—Single-Ground System	69
Figure 30	Field Termination Assembly (FTA) Sizes	87
Figure 31	Field Termination Assembly (FTA) Mounting Dimensions	88
Figure 32	Conformal Coating Symbol.....	110
Figure 33	I/O Link Extender Adapter Kit	130
Figure 34	Two-Port UCN Cable Tap.....	136
Figure 35	Four-Port UCN Cable Tap	137
Figure 36	Eight-Port UCN Cable Tap	137
Figure 37	Single-Access Cabinet.....	140
Figure 38	Dual-Access Cabinet	141
Figure 39	Single-Access Cabinet Bottom Cable Entry Slots	142
Figure 40	Dual-Access Cabinet Bottom Cable Entry Slots.....	143
Figure 41	Cabinet Interior Dimensions	144
Figure 42	Typical Single-Access Cabinet Assembly Layout.....	145
Figure 43	Typical Dual-Access Cabinet Assembly Layout	146
Figure 44	7-Slot Card File Installation Dimensions.....	147
Figure 45	15-Slot Card File Installation Dimensions.....	148
Figure 46	Installation of 7-Slot and 15-Slot Card Files	149
Figure 47	Power System Installation Dimensions	150
Figure 48	Typical Vertical FTA Mounting Channel Configurations.....	152
Figure 49	Vertical FTA Mounting Channel Dimensions.....	153
Figure 50	Vertical FTA Mounting Channel Installation Holes	154
Figure 51	Horizontal FTA Mounting Channel Cabinet Layout	156
Figure 52	Horizontal FTA Mounting Channel Dimensions.....	157
Figure 53	Horizontal FTA Mounting Channel Installation Holes	158

Figure 54 Cabinet Floor Planning Template	159
Figure 55 Single-Access Cabinet.....	162
Figure 56 Dual-Access Cabinet	163
Figure 57 Cabinet Base Panel Grounding Procedure	164
Figure 58 Cabinet Panel and Door Grounding Procedure.....	164
Figure 59 Single-Access Cabinet Bottom Cable Entry	165
Figure 60 Dual-Access Cabinet Bottom Cable Entry.....	166
Figure 61 Cabinet Interior Dimensions	167
Figure 62 Typical Single-Access Cabinet Assembly Layout.....	168
Figure 63 Typical Dual-Access Cabinet Assembly Layout	169
Figure 64 7-Slot Card File Installation Dimensions.....	170
Figure 65 15-Slot Card File Installation Dimensions.....	171
Figure 66 Installation of 7-Slot and 15-Slot Card Files	172
Figure 67 Power System Installation Dimensions	173
Figure 68 FTA Mounting Channel Configurations	175
Figure 69 FTA Mounting Channel Dimensions.....	177
Figure 70 FTA Mounting Channel Mounting FTA Installation Holes	178
Figure 71 Horizontal FTA Mounting Channel Cabinet Layout	179
Figure 72 Horizontal FTA Mounting Channel Dimensions.....	180
Figure 73 Horizontal FTA Mounting Channel Installation Holes.....	181
Figure 74 Cabinet Floor Planning Template	182
Figure 75 Single Cabinet with Redundant HPMMs	184
Figure 76 Dual Cabinets with Redundant HPMMs	185
Figure 77 Redundant HPMM Configuration Cabling	186
Figure 78 Local/Remote Cabinet Configuration.....	189
Figure 79 Standard I/O Link Extender Interconnections with Single HPMM	192
Figure 80 Standard I/O Link Extender Interconnections with Redundant HPMMs.....	193
Figure 81 Long Distance I/O Link Extender Interconnections with Single HPMM.....	194
Figure 82 Long Distance I/O Link Extender Interconnections with Redundant HPMMs	195
Figure 83 Remote Site Multi-IOP Card File I/O Link Interface Cabling	196
Figure 84 ST-Type Connector	201
Figure 85 LLMux Configuration Interconnections – CE Compliant.....	209
Figure 86 Remote CJR Installation	213
Figure 87 Nonincendive RHMUX Configuration Interconnections.....	216
Figure 88 Intrinsically Safe RHMUX Configuration Interconnections	217
Figure 89 Serial Device Interface Interconnections.....	222
Figure 90 Serial Interface FTA to Modbus Device EIA-232 and EIA-422/485 Interconnections	228
Figure 91 Serial Interface FTA to Modbus Device EIA-422/485 Interconnections	229
Figure 92 Serial Interface FTA to Peripheral Device EIA-422/485 Interconnections.....	230
Figure 93 Serial Interface FTA to Allen-Bradley Device EIA-232 Interconnections.....	231
Figure 94 Typical Galvanically Isolated FTA.....	240
Figure 95 Galvanic Isolation Module.....	241
Figure 96 Crimp-Type Galvanic Isolation Module Terminal Connector	242
Figure 97 Compression-Type Galvanic Isolation Module Terminal Connector	243
Figure 98 Galvanically Isolated FTA with Auxiliary Connector	245
Figure 99 Cabinet with Horizontally Installed FTA Mounting Channels.....	248

1. Introduction

1.1 Overview

The manual's purpose

This manual is intended for planning the installation of a High-Performance Process Manager (HPM) subsystem at a TPS system site. The High-Performance Process Manager subsystem is a device on the Universal Control Network (UCN) that includes the Network Interface Module (NIM). Process Managers (PMs), Advanced Process Managers (APMs), and Logic Managers (LMs) may also be resident on the network.

For information on planning the installation of a fieldbus, refer to the *TPS Fieldbus Planning, Installation, and Service* document.

The manual's contents

Planning includes the consideration of the High-Performance Process Manager cabinet layout, process wiring techniques, Division 2 environment equipment approval, conformal coating of the assemblies to protect against a corrosive environment, HPMM and IOP redundancy, and unique hardware features, such as fiber optic I/O Link Extenders, Low Level Analog Input Multiplexer FTAs, Serial Device Interface FTAs, Serial Interface FTAs, and Galvanically Isolated FTAs.

Information not covered

Neither installation, power on checkout, or service of the High-Performance Process Manager, nor planning for the Local Control Network (LCN) is addressed in this manual. See the related reference documentation for information about these topics.

1. Introduction

1.1. Overview

2. HPM Description

2.1 Overview

HPM major assemblies

The High-Performance Process Manager subsystem (HPM) consists of major assemblies described in the following subsections. The major High-Performance Process Manager assemblies are

High-Performance Process Manager Module (HPMM) card file

- Input/Output Processor ;(IOP) card file
- Input/Output Processor (IOP) card
- I/O Link Extender
- Field Termination Assembly (FTA)
- Power System

Nonredundant HPM cabinet layout




SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

The following figure is an illustration of a single High-Performance Process Manager cabinet containing a nonredundant High-Performance Process Manager Module (HPMM) with supporting assemblies. The HPMM cards (2) and the IOPs cards are installed in 15-Slot HPMM card files. IOP cards occupy the IOP card files.

Figure 1 Nonredundant HPMM Cabinet Layout

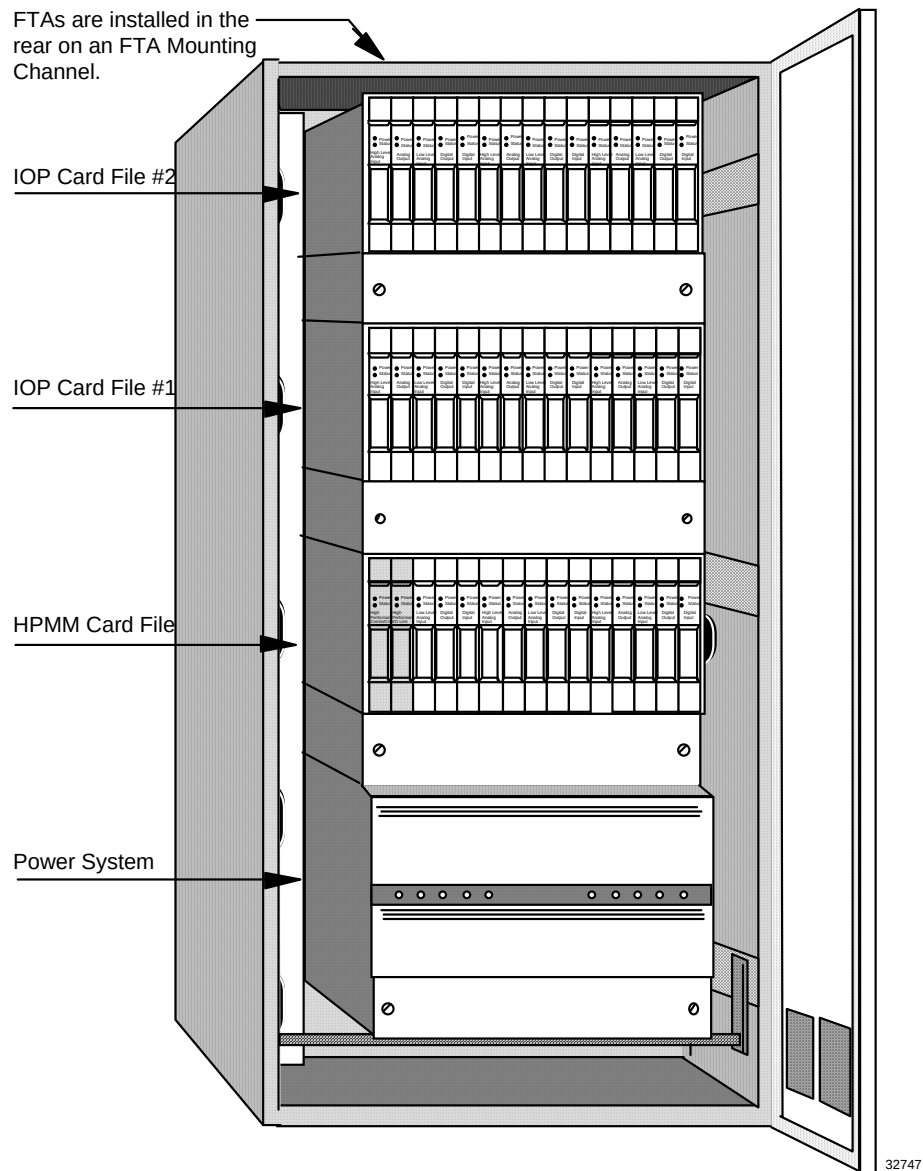

2.2 Card Files

Introduction

There are nine card file models. Three models are not CE Compliant and six models are CE Compliant. The following table lists the nine card file models. All models are also available with conformal coating (a model number with a prefix of MC, rather than MU).

Table 1 Card File Models

Card File Description	CE Compliant	Non-CE Compliant
Left 7-Slot HPMM or IOP	N/A	MU-HPFH01
Right 7-Slot HPMM or IOP	N/A	MU-HPFH11
15-Slot HPMM or IOP	N/A	MU-HPFX02
Left 7-Slot HPMM	MU-HPFH03	N/A
Right 7-Slot HPMM	MU-HPFH13	N/A
15-Slot HPMM	MU-HPFX03	N/A
Left 7-Slot IOP	MU-HPFI03	N/A
Right 7-Slot IOP	MU-HPFI13	N/A
15-Slot IOP	MU-HPFI23	N/A

Non-CE Compliant card file models

The non-CE Compliant card file models can be designated as an HPMM card file or an IOP card file by either installing an HPMM card set in the two left-most card slots or installing IOP cards.

CE Compliant card file models

Unlike the non-CE Compliant card file models, the CE Compliant card file models are designated either an HPMM card file or an IOP card file because even though there is no electrical difference in the backpanel, they differ mechanically. The addition of a ground plate and filtered IOP connectors in the two left-most slots prohibits the installation of an HPMM card set.

The card file is designated an IOP card file when the ground plate and filtered connectors are present.

The card file is designated an HPMM card file when the ground plate and filtered connectors are absent.

Conversion kit

A CE Compliant HPMM card file can be converted to an IOP card file with a model MU-ZPFI03 upgrade kit. The kit adds 2 filtered IOP adapter connectors to the two left-most card slots and a ground plate extension.

2.3 HPMM Card Files

Three types of HPM card files

There are three types of HPMM card files. The two left-most slots of each type are populated by the three assemblies that comprise the HPMM. The remaining slots accommodate IOPs.

If the card file is a non-CE Compliant card file, the two left-most slots of each type can also accommodate IOPs with no alterations. The card file is then designated an IOP card file.

HPMM description

The High-Performance Process Manager Module (HPMM) is composed of two card assemblies that install in the two left-most slots in a 7-Slot or 15-Slot card file, and a UCN interface module that mounts and connects to the 50-pin connector that is directly below the left-most card.

The three HPMM assemblies are identified as follows:

- High-Performance Communications/Control (High-Performance Comm/Control) card
- High-Performance I/O Link Interface (High-Performance I/O Link) card
- High-Performance UCN Interface (HPM UCN Interface) module

The HPM UCN Interface module connects to the 50-pin connector below the High-Performance Comm/Control card.

Left 7-Slot HPMM card file description

The Left 7-Slot card file accepts the two HPMM cards and the HPM UCN Interface module that comprise the HPMM, and accommodates up to five IOP cards. The card slots are numbered 1 through 7, starting at the left-most position.


The High-Performance Comm/Control and High-Performance I/O Link cards occupy slots 1 and 2, while the HPM UCN Interface module mounts below slot 1 and connects to its 50-pin connector.

Slots 3 through 7 can accommodate IOP cards. The IOP card slots assume numerical I/O Link Interface addresses of 3 through 7 and binary I/O Link Interface addresses of 2 through 6.

Left 7-Slot HPMM card file illustration

The following figure is an illustration of a Left 7-Slot HPMM card file and the two HPMM cards that occupy slots 1 and 2.

Figure 2 Left 7-Slot HPMM Card File

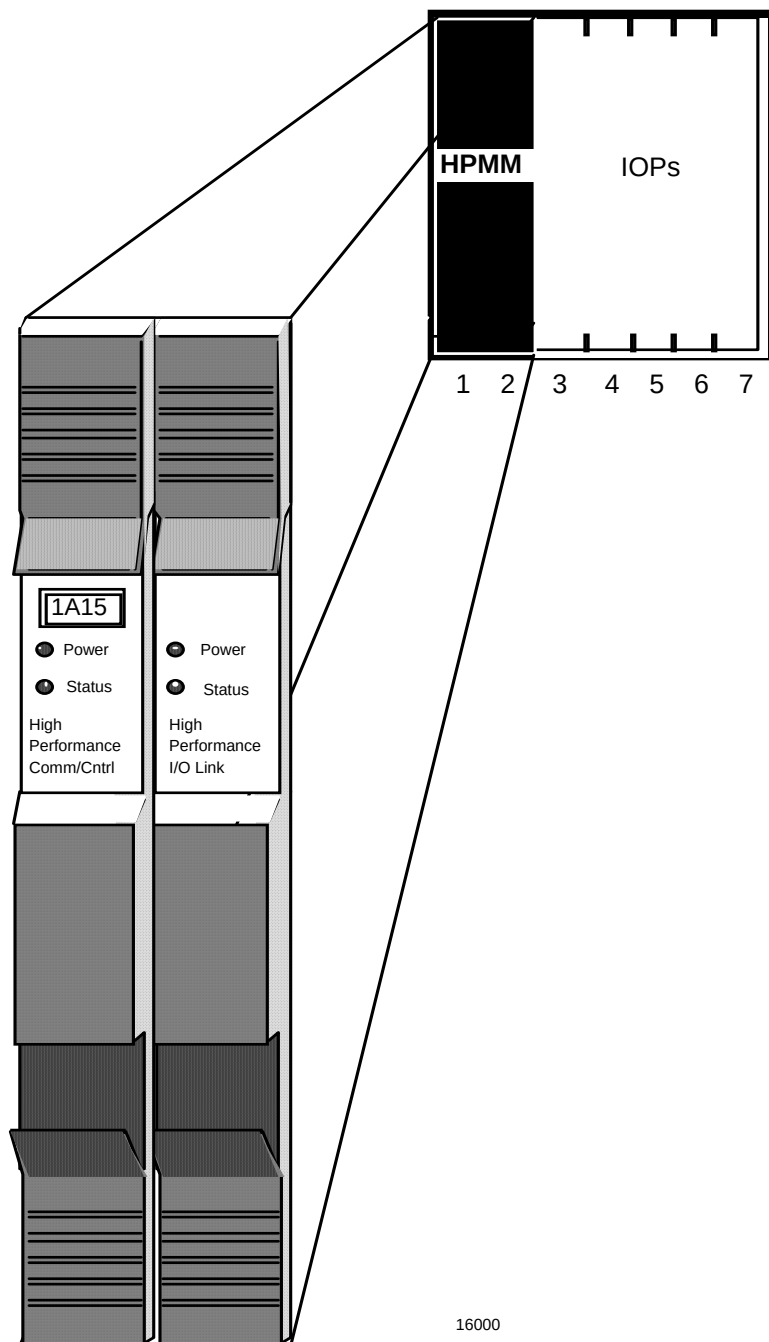

Right 7-Slot HPMM card file description


The description of the Right 7-Slot HPMM card file is identical to the Left 7-Slot HPMM card file, except the two HPMM cards and the UCN interface module occupy slots 9 and 10. The card slots are numbered 9 through 15.

Slots 11 through 15 accommodate IOP cards. The IOP card slots assume numerical I/O Link Interface addresses of 11 through 15 and binary I/O Link Interface addresses of 10 through 14.

Right 7-Slot HPMM card file illustration

The following figure is an illustration of a Right 7-Slot HPMM card file and the two HPMM cards that occupy slots 9 and 10.

Figure 3 Right 7-Slot HPMM Card File

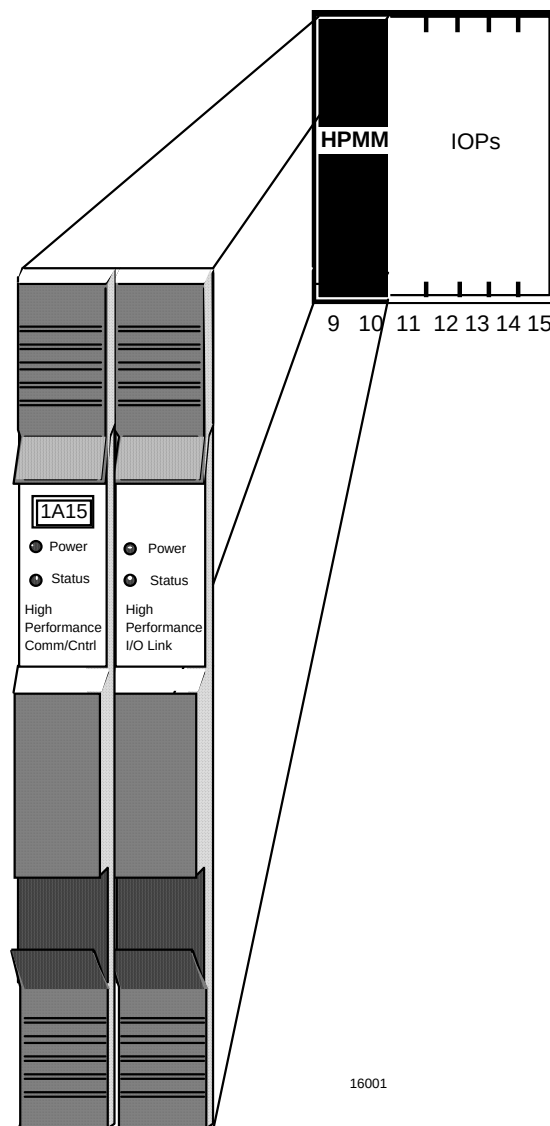

15-Slot HPMM card file description

The 15-Slot card file accepts the two HPMM cards and the UCN interface module that comprise the HPMM, and accommodates up to thirteen IOP cards. The card slots are numbered 1 through 15, starting at the left-most position.

The High-Performance Comm/Control and High-Performance I/O Link cards occupy slots 1 and 2, while the HPM UCN Interface module mounts below slot 1 in its 50-pin connector.


Slots 3 through 15 can accommodate IOP cards. The IOP card slots assume numerical I/O Link Interface addresses of 3 through 15 and binary I/O Link Interface addresses of 2 through 14.

When populated with the HPMM cards, the card file is designated a 15-Slot HPMM card file.

15-Slot HPMM card file illustration

The following figure is an illustration of a 15-Slot HPMM card file and the two HPMM cards that occupy slots 1 and 2.

Figure 4 15-Slot HPMM Card File

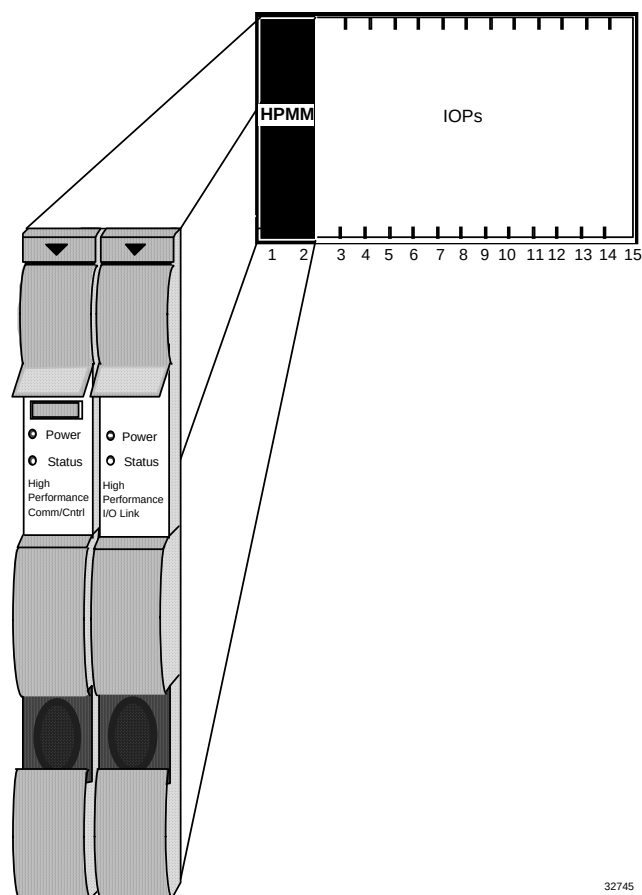

2. HPM Description

2.4. Input/Output Processor (IOP) Card Files

7-Slot HPMM card file usage

The two types of 7-Slot HPMM card files are intended to be used in a small HPM subsystem.

When the subsystem consists of nonredundant HPMMs, a Left 7-Slot HPMM card file must be installed. For a subsystem that requires redundant HPMMs, Left and Right 7-Slot HPMM card files are installed. Both card files are assigned the same I/O Link Interface address. There is no slot 8 because the card file slots are numbered 1 through 7 and 9 through 15.

15-Slot HPMM card file usage

The 15-Slot HPMM card file is intended for use in a larger HPM subsystem, either with nonredundant or redundant HPMMs. Unlike the 7-Slot HPMM card file, there is no “loss” of a card slot.

HPMM functionality

The HPMM provides the following functions:

- Communications with the Local Control Network (LCN) Network Interface Module (NIM) through the Universal Control Network (UCN)
- A Communications processor (Motorola 68LC040)
- Communications through the I/O Link Interface with Input/Output Processors (IOPs) and I/O Link Extenders
- A Control processor (Motorola 68040)
- Separate and shared memory for the Communications and Control processors
- An I/O Link processor (Intel 80C32) with SRAM
- HPMM redundancy control

2.4 Input/Output Processor (IOP) Card Files

IOP card file descriptions

The 7-Slot and 15-Slot IOP card files are electrically identical to the HPMM card files, except that an HPMM card set is not installed in the card file. IOPs can be installed in the two left-most card slots.

Non-CE Compliant card files

Non-CE Compliant HPMM and IOP card files differ only in the application. Electrically and mechanically, their backpanels are the same. The card file model numbers are the same.


CE Compliant card files

CE Compliant HPMM and IOP card files differ mechanically. IOP card files have filtered IOP connectors and connector ground plates. Electrically, their backpanels are the same. The card file model numbers are different.

Left 7-Slot IOP card file

The following figure illustrates a Left 7-Slot IOP card file.

Figure 5 Left 7-Slot IOP Card File

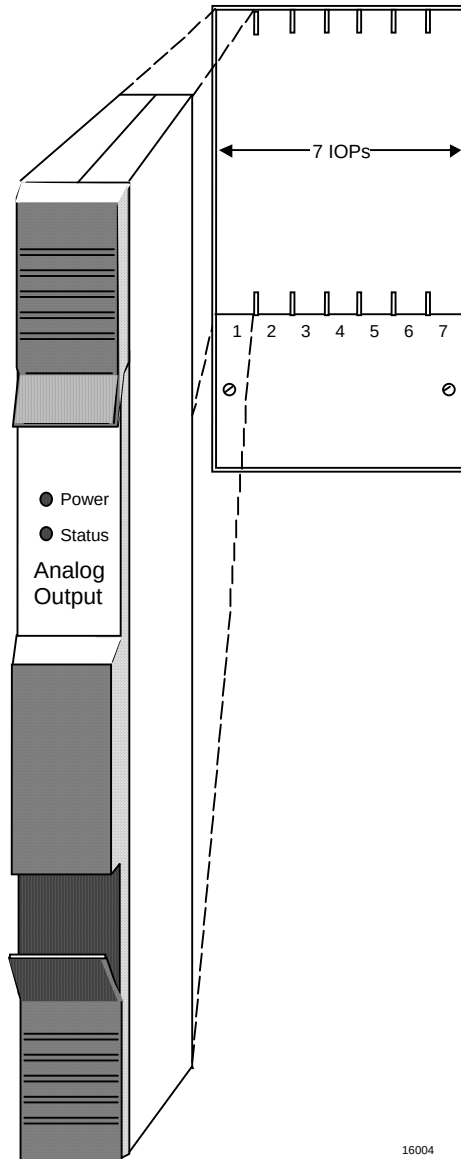


2. HPM Description

2.4. Input/Output Processor (IOP) Card Files

Right 7-Slot IOP card file

The following figure illustrates a Left 7-Slot IOP card file.


Figure 6 Right 7-Slot IOP Card File

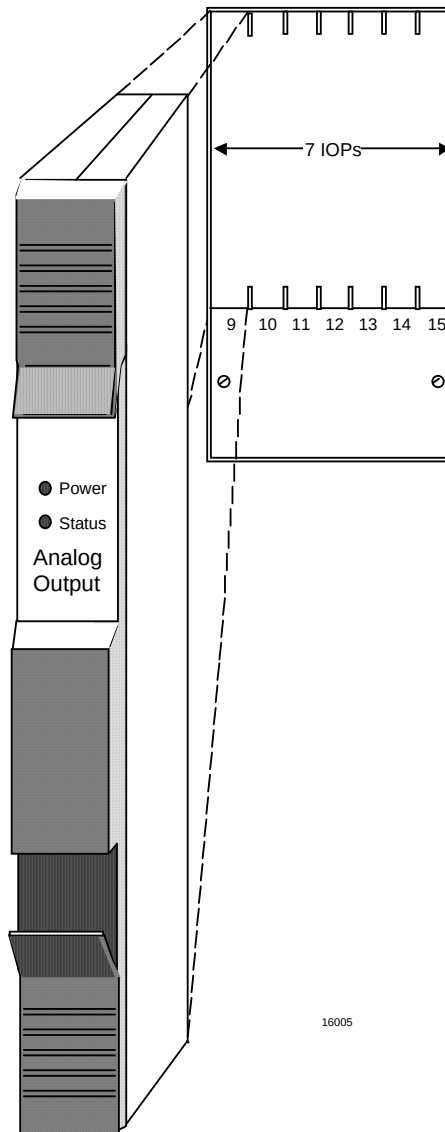

15-Slot IOP card file

The following figure illustrates a 15-Slot IOP card file.

Figure 7 15-Slot IOP Card File

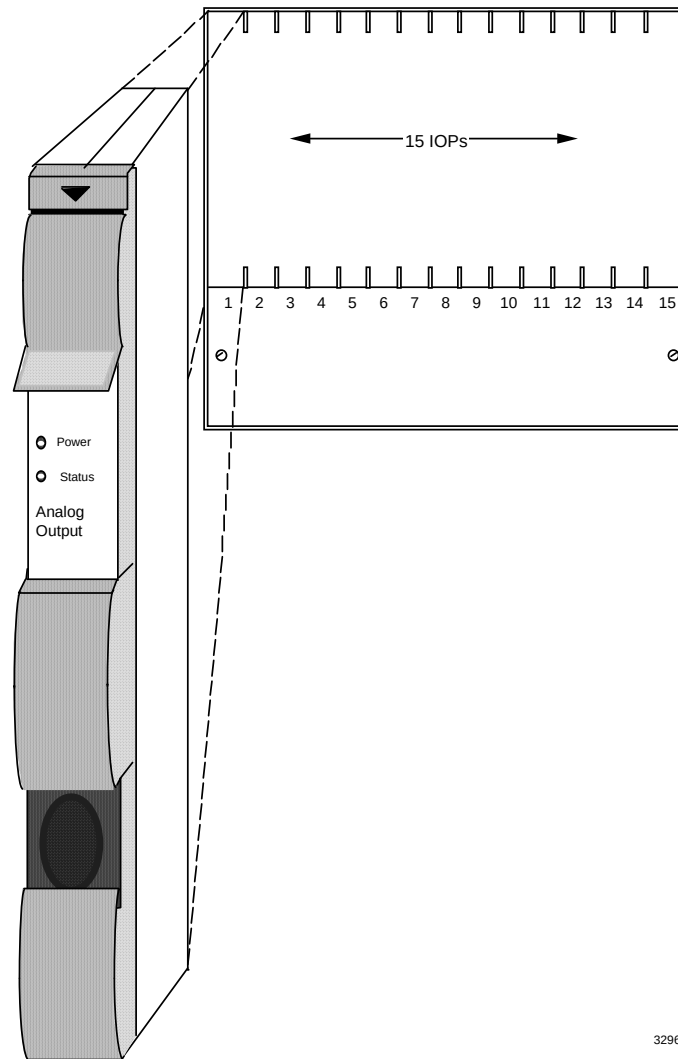

32962

2.5 Input/Output Processor (IOP) Cards

Types of Input/Output Processors (IOPs)

There are thirteen types of Input/Output Processor (IOP) card assemblies. Some IOP card types interface with more than one type of Field Termination Assembly (FTA). The functional types of IOPs are

- High Level Analog Input (HLAI)
- Low Level Analog Input (LLAI)
- Low Level Analog Multiplexer (LLMux)
- Remote Hardened Low Level Analog Multiplexer (RHMUX)
- Digital Input (DI)
- Analog Output (AO)
- Digital Output (DO)
- Smart Transmitter Interface (STI)
- Smart Transmitter Interface Multivariable; (STIM)
- Pulse Input (PI)
- Digital Input Sequence of Events (DISOE)
- Serial Device Interface (SDI)
- Serial Interface (SI)
- Fieldbus (FBUS)

Card file configurations

Additional IOP card file slots can be added to any High-Performance Process Manager subsystem. Each IOP card file accommodates up to 7 or 15 IOPs as illustrated in the following figures:

Figure 2

Figure 3

Figure 4

A total of eight 15-Slot card files or 7-Slot card file pairs (Left and Right), including HPMM card files, can exist in a High-Performance Process Manager subsystem. However, the limit is eight because each 15-Slot card file and pair of 7-Slot card files must be assigned an I/O Link Interface address between 0 and 7.

IOP card files can be installed at remote locations with the use of fiber optic I/O Link Extenders, as well as locally in the cabinet or cabinet complex containing the HPMM card file(s).

A total of 40 primary IOPs, 40 secondary (redundant) IOPs, and 3 I/O Link Extenders (a maximum of 8 I/O Link Extender cards) can exist in a single High-Performance Process Manager subsystem.

IOP redundancy

The HPM subsystem supports IOP redundancy for the following types of IOPs:


- High Level Analog Input (HLAI)
- Smart Transmitter Interface (STI or STIM)
- Analog Output (AO)
- Digital Input (DI)
- Digital Input Sequence of Events (DISOE)
- Digital Output (DO)

Presently, not all Digital Input and Digital Output IOP models support redundancy.

Redundant HLAI IOPs

A pair of IOPs can be connected in a redundant configuration with both IOPs connected by separate cables to the same FTA. The following figure illustrates an HLAI FTA that interfaces with a pair of HLAI IOPs that are installed in separate card files.


Figure 8 HLAI FTA with Redundant HLAI IOPs

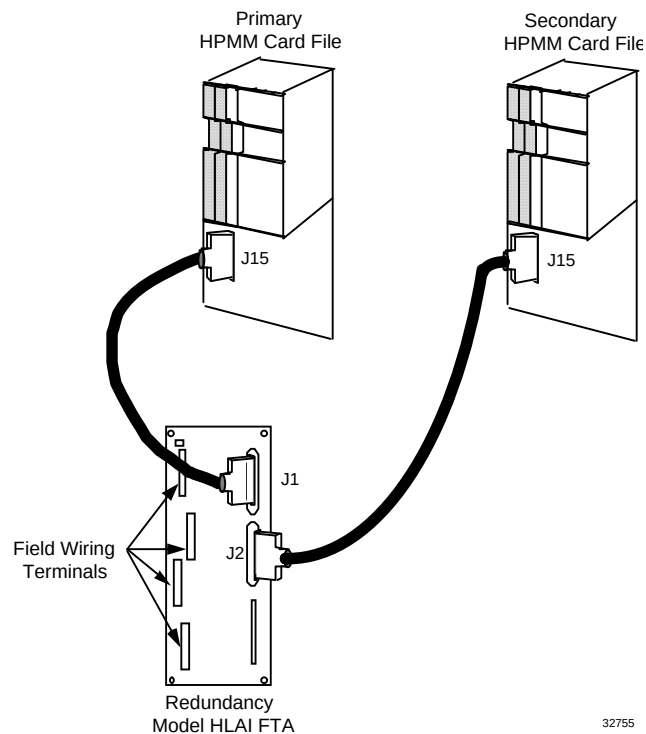

Redundant AO IOPs

Output type FTAs can also interface with two IOPs with separate cables, and an automatic selector switch on the FTA selects which IOP's output drives the field wiring terminal connectors on the FTA. The following figure is an illustration of an Analog Output (AO) FTA interface with two Analog Output IOPs.

Figure 9 Analog Output FTA with Redundant Analog Output IOPs

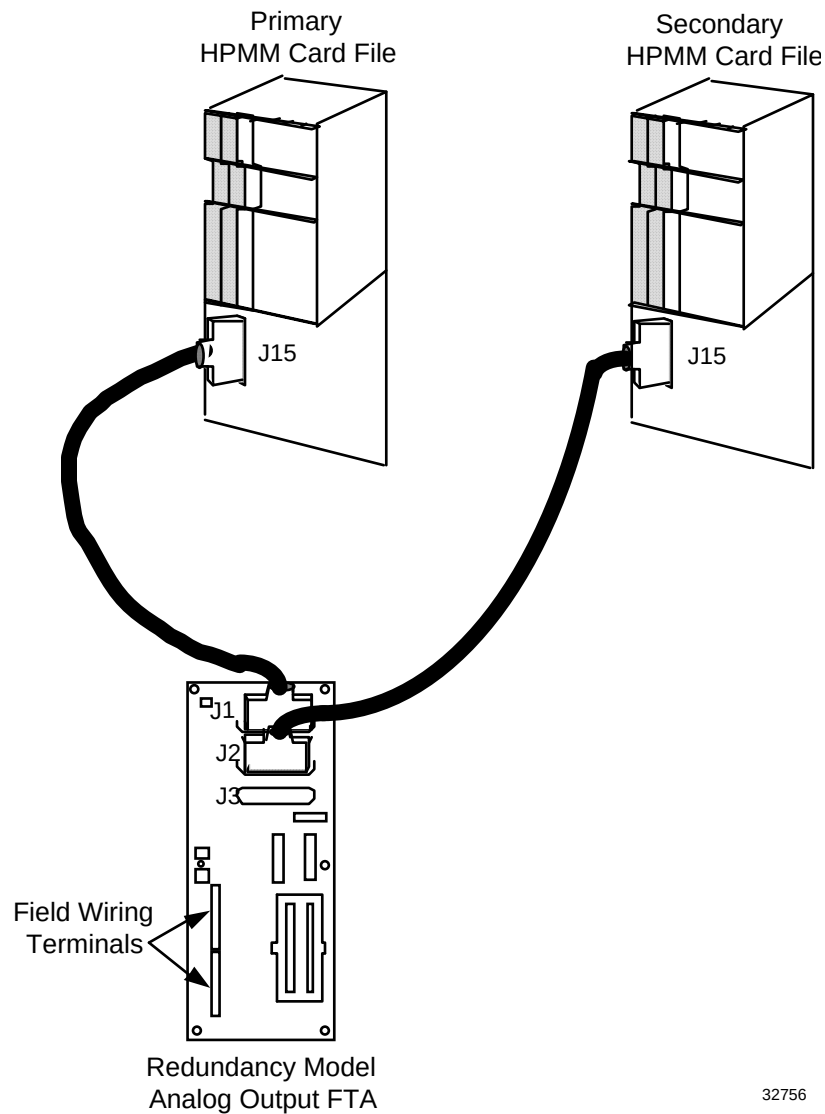

32756

2.6 I/O Link Extender (Fiber Optic Link)

Introduction

The I/O Link Extender provides the ability to locate 7-Slot or 15-Slot IOP card files and associated FTAs up to 8 kilometers (5 miles) from the HPMM(s). Two types of I/O Link Extenders and their associated fiber optic couplers are available, the “Standard” I/O Link Extender that provides up to a 1.3 kilometer (4000 feet) link, and the “Long Distance” I/O Link Extender which provides up to an 8 kilometers (5 miles) link. The connection is made using a pair of fiber optic transmission cables, driven and terminated by a fiber optic coupler that mates with the connector located directly below the card file slot in which the I/O Link Extender card is installed.

Features

An I/O Link Extender consists of two pairs I/O Link Extender cards, one for Link A and one for Link B, and associated fiber optic couplers at each end of the fiber optic link. The I/O Link Extender cards and their fiber optic couplers occupy two slots in an HPMM or IOP card file.

Remote card files

Every remote card file, or complex of IOP card files, requires two I/O Link Extender cards and two fiber optic couplers, one for Link A and one for Link B.

Fiber optic cable length

The maximum fiber optic cable length is dependent upon the number of splices and quality of the cable (dB loss per meter of cable). This maximum can be between 0.98 and 1.3 kilometers for the Standard I/O Link Extender and 8 kilometers for the Long Distance I/O Link Extender.

I/O Link Extender planning

Complete information on I/O Link Extender planning can be found in the "I/O Link Extender Planning" section of this manual.

Standard I/O Link Extender

Each Standard I/O Link Extender card has an associated fiber optic coupler that can drive up to three pair of fiber optic cables. Each cable pair is terminated by a fiber optic coupler that terminates one fiber optic pair.


The Standard I/O Link Extender card will drive and terminate Link A or Link B, depending upon the card file number and slot number. If the card file number and slot number are both odd or both even, the card will drive Link A. If the card file number and slot number are not both odd or both even, the card will drive Link B.

Two Standard I/O Link Extender cards, connecting up to six remote card files, can be installed in a HPMM card file, but the maximum number of primary IOPs is still 40 (plus 40 redundant IOPs).

Standard I/O Link Extender connections nonredundant HPMM

The following figure illustrates the interconnections for a Standard I/O Link Extender in a High-Performance Process Manager that contains a nonredundant HPMM.

Figure 10 Standard I/O Link Extender Interconnections with Nonredundant HPMM

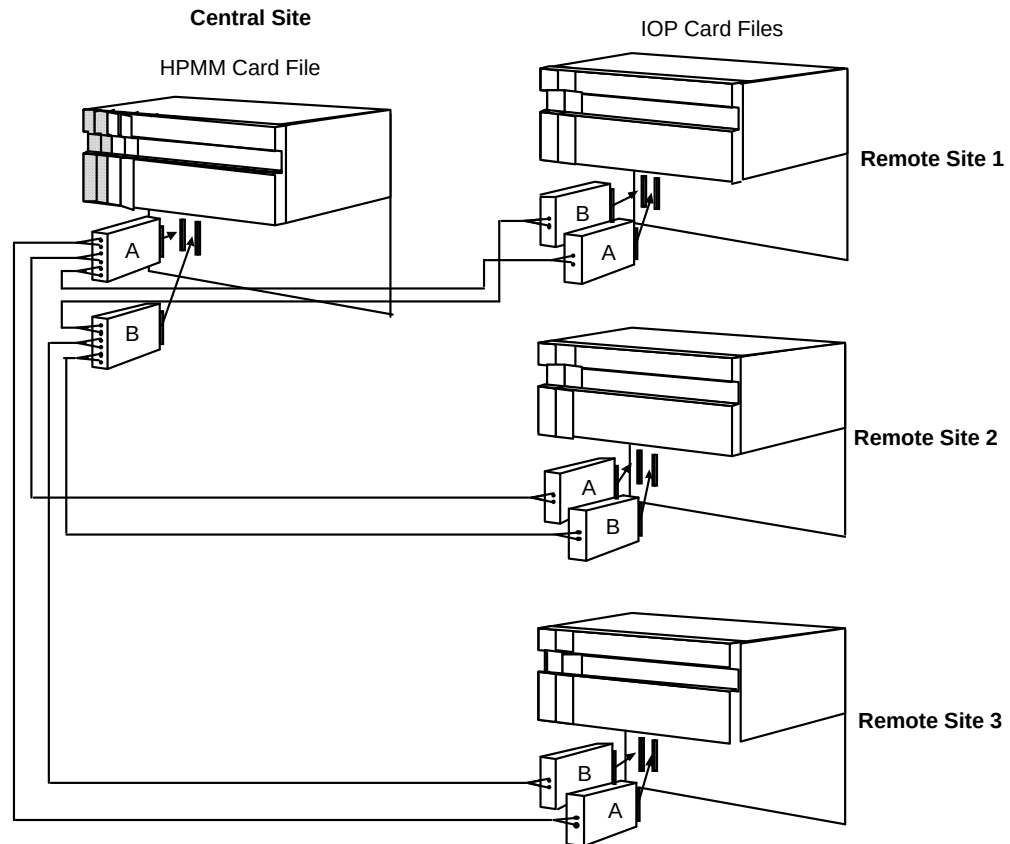

NOTE

The following High-Performance Process Manager subsystem configuration is assumed.


1. The HPMM card file is configured as card file #1 (I/O Link address of 0).
2. Remote Site #1's IOP card file is configured as card file #2 (I/O Link address of 1).
3. Remote Site #2's IOP card file is configured as card file #3 (I/O Link address of 2).
4. Remote Site #3's IOP card file is configured as card file #4 (I/O Link address of 3).

32777

Standard I/O Link Extender connections redundant HPMMs

The following figure illustrates the interconnections for a Standard I/O Link Extender in a High-Performance Process Manager that contains redundant HPMMs.

Figure 11 Standard I/O Link Extender Interconnections with Redundant HPMMs

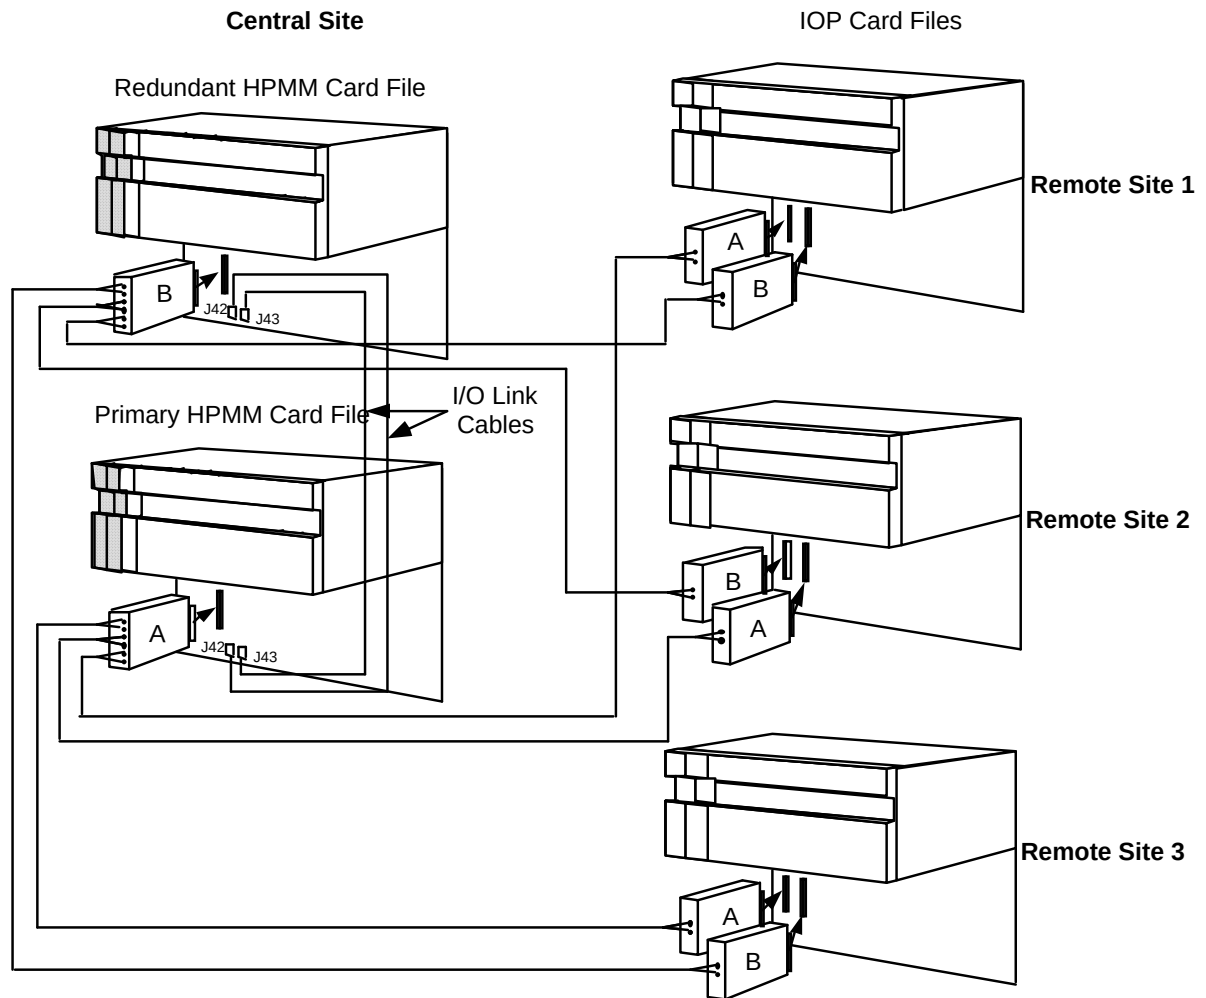

NOTE

The following High-Performance Process Manager subsystem configuration is assumed.

1. The lower HPMM card file is configured as card file #1 (I/O Link Address of 0).
2. The upper HPMM card file is configured as card file #2 (I/O Link Address of 1).
3. Remote Site #1's IOP card file is configured as card file #3 (I/O Link Address of 2).
4. Remote Site #2's IOP card file is configured as card file #4 (I/O Link Address of 3).
5. Remote Site #3's IOP card file is configured as card file #5 (I/O Link Address of 4).

32778

Long Distance I/O Link Extender


Each Long Distance I/O Link Extender card has an associated fiber optic coupler that drives a single pair of fiber optic cables. Each cable pair is terminated by a fiber optic coupler that terminates one fiber optic pair.

The Link A or Link B selection for the Long Distance I/O Link Extender is determined by a jumper on the card.

Long Distance I/O Link Extender connections nonredundant HPMM

The following figure illustrates the interconnections for a Long Distance I/O Link Extender in a High-Performance Process Manager that has a nonredundant HPMM.

Figure 12 Long Distance I/O Link Extender Interconnections with Nonredundant HPMM

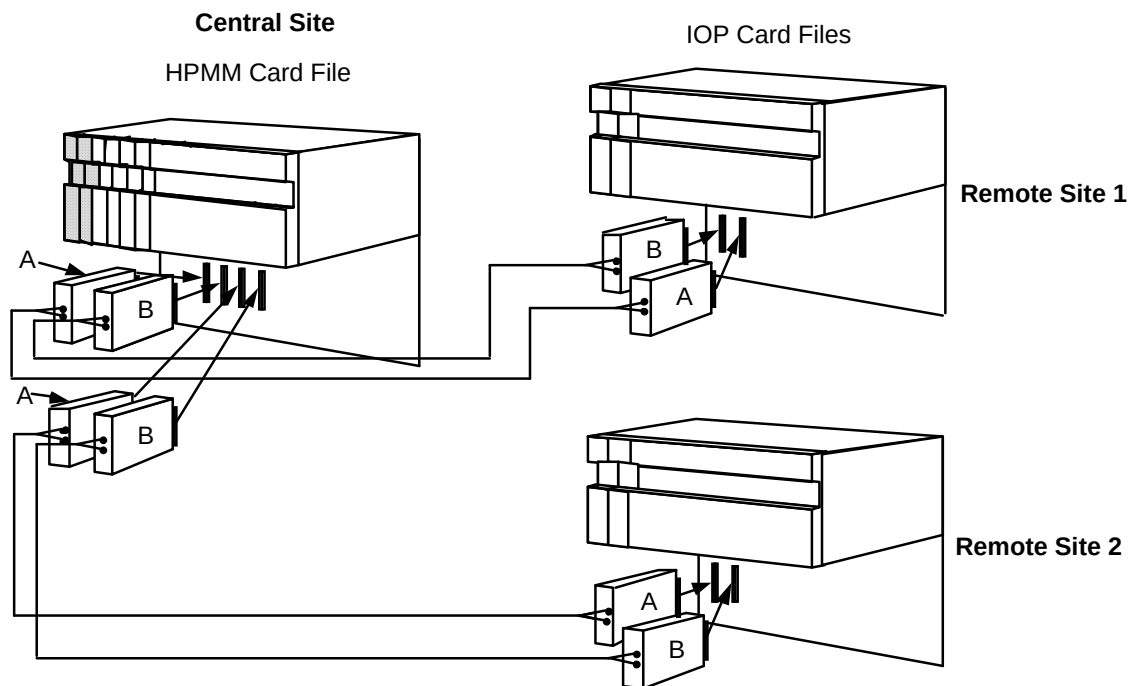

NOTE

The following High-Performance Process Manager subsystem is assumed.


1. The HPMM card file is configured as card file #1 (I/O Link Address of 0).
2. Remote Site #1's IOP card file is configured as card file #2 (I/O Link Address of 1).
3. Remote Site #2's IOP card file is configured as card file #3 (I/O Link Address of 2).

32779

Long Distance I/O Link Extender connections redundant HPMMs

The following figure illustrates the interconnections for a Long Distance I/O Link Extender in a High-Performance Process Manager that has redundant HPMMs.

Figure 13 Long Distance I/O Link Extender Interconnections with Redundant HPMMs

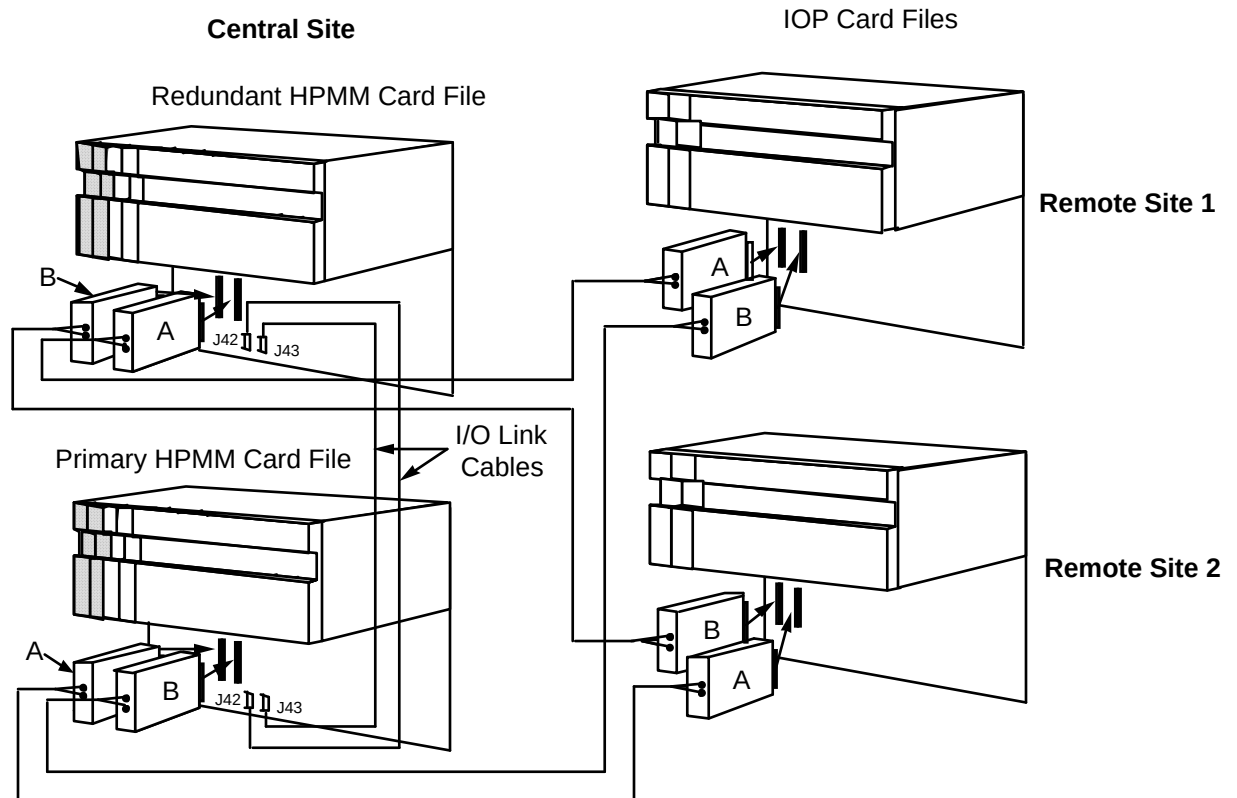

NOTE

The following High-Performance Process Manager subsystem configuration is assumed.

1. The lower HPMM card file is configured as card file #1 (I/O Link address of 0).
2. The upper HPMM card file is configured as card file #2 (I/O Link address of 1).
3. Remote Site #1's IOP card file is configured as card file #3 (I/O Link address of 2).
4. Remote Site #2's IOP card file is configured as card file #4 (I/O Link address of 3).

32780

2.7 Field Termination Assemblies (FTAs)

Description

Terminal connectors on the Field Termination Assembly (FTA) provide the connection points for the process control wiring. Fuses, relays, and resistors protect the FTA circuitry, and sense, condition, or operate the connected device. The FTA communicates with an associated IOP, which in turn communicates with the HPMM(s) through the I/O Link Interface.

FTAs types

Standard types of FTAs, as described in Table 2, interface the field wiring and provide communication with an associated IOP. They are categorized as “standard” because Galvanically Isolated FTAs are also available as described in Table 3.

Standard FTAs

Standard FTA types are listed in the following table.

Table 2 Standard Field Termination Assembly Types

FTA Type	Description
High Level Analog Input/ Smart Transmitter Interface (HLAI/STI)	Accepts high level analog inputs. The inputs are configurable as single-ended or differential in relation to logic ground. The FTA is also used to interface Smart Transmitter devices.
High Level Analog Input (HLAI)	Accepts high level analog inputs. The inputs are configurable as single-ended or differential in relation to logic ground.
Smart Transmitter Interface (STI)	Interfaces with Smart Transmitter devices. The interface is referenced to logic ground. The Smart Transmitter provides field isolation.
Low Level Analog Input (LLAI)	Can be configured to accept low-level or high-level analog inputs. Low-level analog inputs include Thermocouples (TC), Resistance Temperature Detectors (RTDs), or millivolt sources. High-level inputs such as voltage sources (0-5 V) and 4-20 milliamp current loop devices are acceptable. The inputs are isolated from each other and the HPM, but share a common bus for field wire shields.
Low Level Analog Input Multiplexer (LLMux or RHMUX)	The FTA accepts one set of low level analog inputs, such as thermocouples (TC) or Resistance Temperature Detectors (RTDs). The set of inputs must be either thermocouples or RTDs. The inputs are sequentially multiplexed. One or two FTAs of either type can be connected to one Power Adapter assembly and its IOP.
Analog Output (AO)	Provides 4-20 mA analog outputs to proportioning loads such as valves.
Analog Output (AO) HART	The above AO functionality plus the ability to connect HART devices to the FTA without external filtering. This FTA also provides a connector to interface to an external HART multiplexer system.
120 Vac Digital Input (DI)	Accepts ac digital inputs. All inputs are isolated from each other. Two versions of the FTA are available, with pluggable and without pluggable input modules.

FTA Type	Description
240 Vac Digital Input (DI)	Similar to the 120 Vac DI FTA, except it has a higher operating voltage and a lower sense current. The inputs are in four groups of eight circuits with a common return for each group. Groups are isolated from each other.
24 Vdc Digital Input (DI)	Accepts contacts grouped with an isolated common return. Two versions of the FTA are available, with pluggable and without pluggable input modules.
120/240 Vac Solid-State Digital Output (DO)	Provides solid-state ac digital outputs that are isolated from each other and the HPM.
3-30 Vdc Solid-State Digital Output (DO)	Provides dc digital outputs that are isolated from each other and the HPM.
31-200 Vdc Solid-State Digital Output (DO)	Provides dc digital outputs that are isolated from each other and the HPM.
24 Vdc Nonisolated Digital Output (DO)	Provides nonisolated digital outputs to loads such as lamps and relays. The signals are referenced to logic common.
120 Vac/125 Vdc Relay Digital Output (DO)	Provides independent electromechanical relays for ac or dc digital outputs.
240 Vac/125 Vdc Relay Digital Output (DO)	Provides independent electromechanical relays for ac or dc digital outputs.
Pulse Input (PI)	Accepts eight inputs, each with a 32-bit counter, and have a frequency range of dc to 20 kHz. The inputs are referenced to logic ground.
Serial Device interface (SDI Toledo)	The SDI FTA provides an EIA-232 (RS-232) asynchronous serial communications interface for a model 8142-2084 or 8142-2184 Toledo Weigh Cell peripheral manufactured by Toledo Scale Inc.
Serial Device interface (SDI M/A Station)	The SDI FTA provides an EIA-422/485 (RS-422/485) asynchronous serial communications interface for up to four model MU-MASX02 Manual/Auto Station peripherals manufactured by Honeywell Inc.
Serial Device interface (SDI UDC 6000)	The SDI FTA provides an EIA-422/485 (RS-422/485) asynchronous serial communications interface for up to four UDC 6000 Modbus peripherals manufactured by Honeywell Inc.
Serial Interface (SI Modbus RTU)	The SI FTA provides either an EIA-232 (RS-232) asynchronous serial communications interface for one Modbus compatible device or an EIA-422/485 (RS-422/485) asynchronous serial communications interface for up to 15 Modbus RTU compatible devices
Serial Interface (Allen-Bradley)	The SI FTA accommodates a single EIA-232 compatible Allen-Bradley device through its EIA-232 interface.
Fieldbus	Interfaces to the FOUNDATION TM Fieldbus. Can include a power supply module to power the bus.

2. HPM Description

2.7. Field Termination Assemblies (FTAs)

Galvanically Isolated FTAs

Galvanically Isolated FTA types are listed in the following table.


Table 3 Galvanically Isolated Field Termination Assembly Types

FTA Type	Description
Remote Hardened Low Level Analog Input Multiplexer (RHMUX)	Accepts one set of low-level analog inputs. The inputs are sequentially multiplexed and can be either thermocouple (TC) or millivolt (Mv). One or two FTAs can be connected to its Power Adapter assembly and IOP.
Remote Hardened Multiplexer Non-Incentive Power Adapter (RHMUX NIPA)	The RHMUX NI Power Adapter provides the interface between an RHMUX IOP and one or two RHMUX FTAs, which can be mounted in a Division 2, Zone 1, or nonhazardous location.
Remote Hardened Multiplexer Intrinsically Safe Power Adapter (RHMUX ISPA)	The RHMUX IS Power Adapter provides the interface between an RHMUX IOP and one or two RHMUX FTAs, which can be mounted in a Division 1 or Zone 0 location.
High Level Analog Input (HLAI/STI)	The HLAI/STI FTA accepts high level analog inputs. All inputs are isolated from ground and each other. The FTA is also used to interface Smart Transmitter devices.
High Level Analog Input (HLAI)	The HLAI FTA accepts high level analog inputs. All inputs are isolated from ground and each other.
24 Vdc Digital Input (DI)	The 24 Vdc DI FTA accepts contact inputs. All inputs are isolated from each other.
Analog Output (AO)	The AO FTA provides isolated 4-20 mA outputs to proportioning loads such as valves.
Analog Output (AO) HART	The above AO functionality plus the ability to connect HART devices to the FTA without external filtering. This FTA also provides a connector to interface to an external HART multiplexer system.
24 Vdc Digital Output (DO)	The 24 Vdc DO FTA provides isolated digital outputs to loads such as solenoid valves or lamps.
Fieldbus (FBUS)	Interfaces to the FOUNDATION TM Fieldbus. Includes a power supply module that powers the bus.

Three physical sizes

The standard FTAs have three physical sizes as illustrated in the following figure. The Galvanically Isolated FTAs are one size only, B-size.

Figure 14 Field Termination Assembly (FTA) Sizes

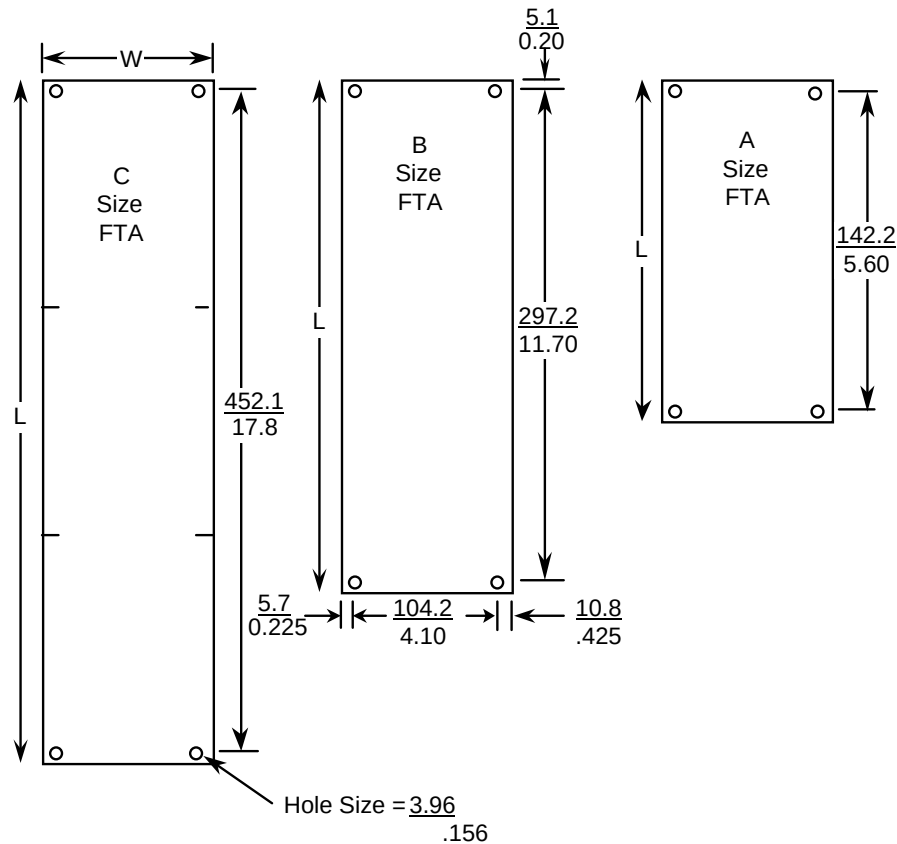

Size	Length L	Width W
A	152.4/6.00	120.7/4.75
B	307.3/12.10	120.7/4.75
C	462.3/18.20	120.7/4.75

All measurements are in: millimeters
inches

Note:

The center of the mounting holes is a constant distance from the edge of the assembly board for all three FTA sizes as shown for size B.

Sizes B and C, depending on the type of FTA, can have additional mounting holes along the length (sides) of the FTA. The additional mounting holes all fall on a grid established for mounting adjacent A-size FTAs.

2770

2. HPM Description

2.7. Field Termination Assemblies (FTAs)

FTA Mounting Channels

The FTAs are installed at the rear or front of a dual-access cabinet on one or more FTA Mounting Channels. In a single-access cabinet, the FTAs are mounted on FTA Mounting Channels at the front of the cabinet. The FTA Mounting Channels also function as cable and wiring channels, or troughs. The standard and Galvanically Isolated FTAs must not be mounted on the same FTA Mounting Channel. Mounting both types of FTAs on the same FTA Mounting Channel is an Intrinsic Safety violation because the field wiring must not be routed in the same channel.

Mounting orientation

Both standard (non-Galvanically Isolated) and Galvanically Isolated FTAs can be mounted on vertically oriented 3-foot long FTA Mounting Channel segments; however, Standard and Galvanically Isolated FTAs must not be mounted on the same FTA Mounting Channels.

Galvanically Isolated FTAs can be mounted on an FTA Mounting Channel that is above or below an FTA Mounting Channel that has standard FTAs mounted on it.

Optionally, Galvanically Isolated FTAs can also be mounted on horizontally oriented 2-foot long FTA Mounting Channels. Standard FTAs must not be mounted on horizontal FTA Mounting Channels.

Typical cabinet layout




SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

A typical cabinet layout of FTA Mounting Channels that demonstrates the installation of standard FTAs in a dual-access High-Performance Process Manager cabinet is shown in the following figure.

Figure 15 Typical Vertical FTA Mounting Channel Layout

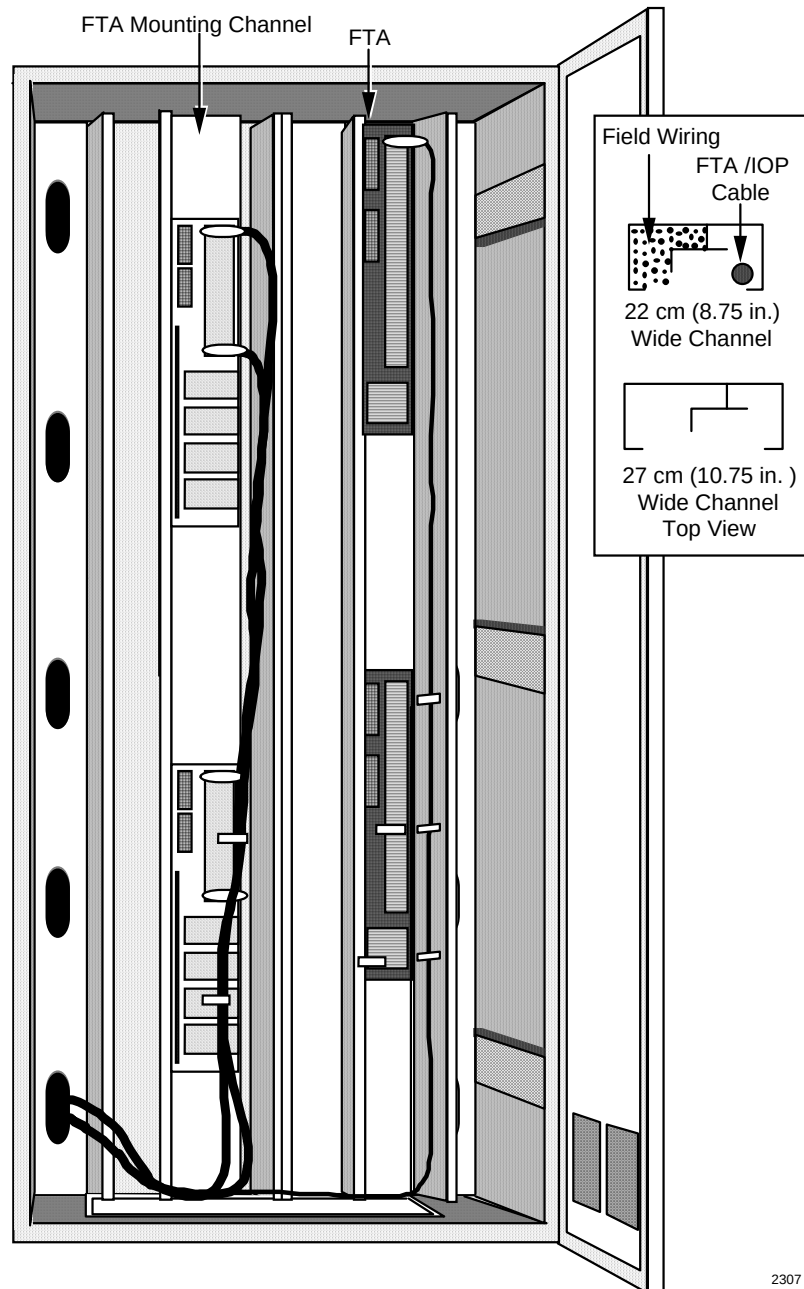

Compression or screw terminals available


Most standard FTA types are available with either compression-type or screw-type terminal connectors. Some exceptions are the 6-inch Analog Output (AO), 6-inch High Level Analog Input (HLAI), 6-inch Low Level Analog Input Multiplexer (LLMux), and the 6-inch Digital Input Power Distribution Assembly, which are available with compression-type terminal connectors only. The Remote Hardened Low Level Analog Input Multiplexer (RHMUX) mounts in a separate enclosure and is available only with screw-type terminal connectors. The number of terminals for both the compression-type and screw-type terminal connector can vary depending on the type of standard FTA.

All Galvanically Isolated FTAs are available with both crimp pin-type and compression-type terminal connectors. The Marshalling Panel that is used with Galvanically Isolated FTAs is available only with screw-type terminal connectors. See "Galvanically Isolated FTA Planning" section for a description of the Marshalling Panel.

FTA compression-type terminal connector

The following figure is an illustration of a typical compression-type terminal connector connection to a standard FTA.

Figure 16 Typical FTA Compression Terminal Connector

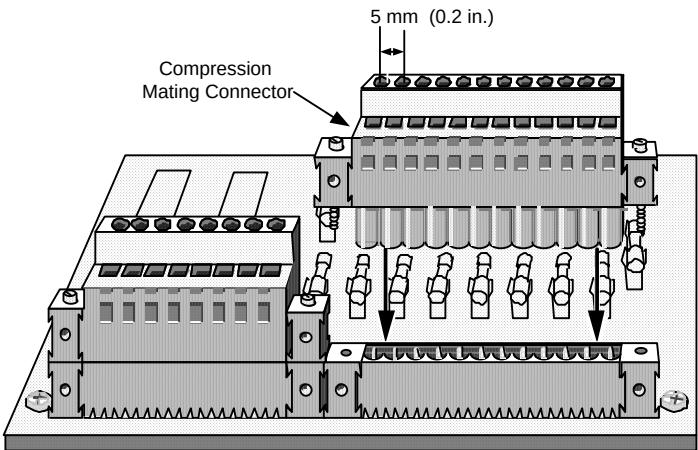

Compression Mating Connector


Number of Connections	Honeywell Part Number
8	511190694 - 108, - 208, - 408
11	- 111, - 411
12	- 112, - 412

4401

FTA fixed-screw terminal connector

The following figure illustrates a typical fixed-screw terminal connector as it would appear on a standard FTA.

Figure 17 Typical FTA Fixed-Screw Terminal Connector

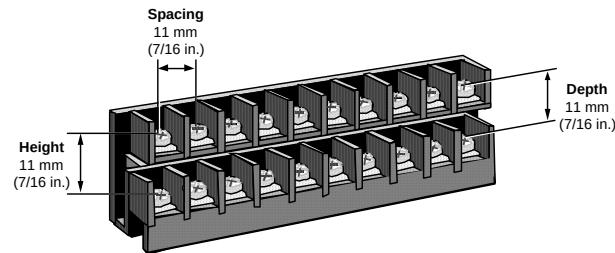


Screw Terminal Strip Sizes

Number of Terminals	Connector Length
8	52 mm (2.0 in.)
12	74 mm (2.9 in.)
24	140 mm (5.5 in.)

FTA removable-screw connector

The following figure illustrates a typical removable-screw terminal connector.

Figure 18 Typical FTA Removable-Screw Terminal Connector

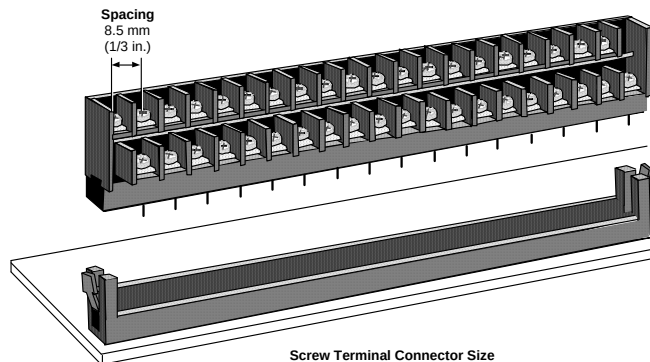

Screw Terminal Connector Size

Number of Terminals	Connector Length
40	176 mm (6.9 in.)

2. HPM Description

2.7. Field Termination Assemblies (FTAs)

Galvanic Isolation Module connectors


Figures 19 and 20 illustrate the crimp pin-type and compression-type terminal connectors for the Galvanically Isolated FTAs, respectively. The connectors on the Galvanic Isolation Modules have six terminals. Depending on the type of terminal connector, the terminals accept size 0.3 to 3.5 mm² (12 to 22 AWG) wiring.

Crimp pin-type terminal connector

The following figure illustrates the crimp-pin type Galvanic Isolation Module terminal connector.

Figure 19 Crimp-Pin Galvanic Isolation Module Terminal Connector

<u>Wire Size</u>	<u>Crimp Pin Part Number</u>	<u>Crimp Tool Part Number</u>
0.5-2.5 mm ² (14-20 AWG)	51191737-201	51191787-100

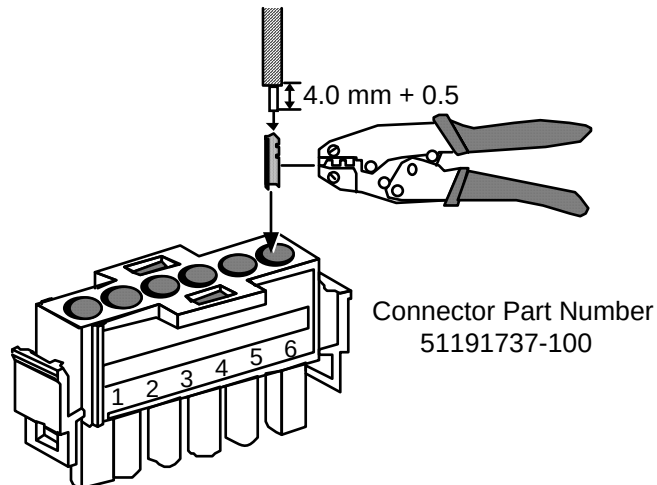


11373

Compression-type terminal connector

The following figure illustrates the compression-type Galvanic Isolation Module terminal connector.

Figure 20 Compression-Type Galvanic Isolation Module Terminal Connector

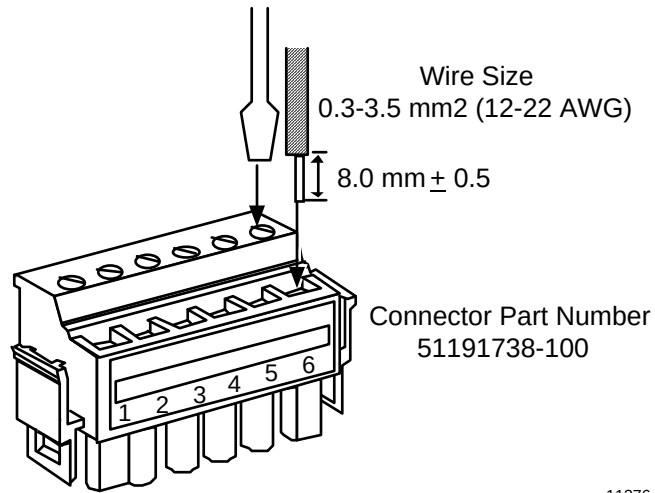


11376

Marshalling Panel

The Marshalling Panel was developed to provide access to the signals from the auxiliary connectors on the Galvanically Isolated FTAs. It can also be used as a general purpose Marshalling Panel in the High-Performance Process Manager subsystem.

The following figure illustrates an assembly layout of the panel. The Marshalling Panel, model MU-GMAR52, is similar in shape and appearance to a “B” size FTA. The assembly provides surge and ESD protection for the field wiring terminals. A 50-pin connector is provided on the assembly that accepts an IOP to FTA cable.

Figure 21 FTA Marshalling Panel Assembly Layout

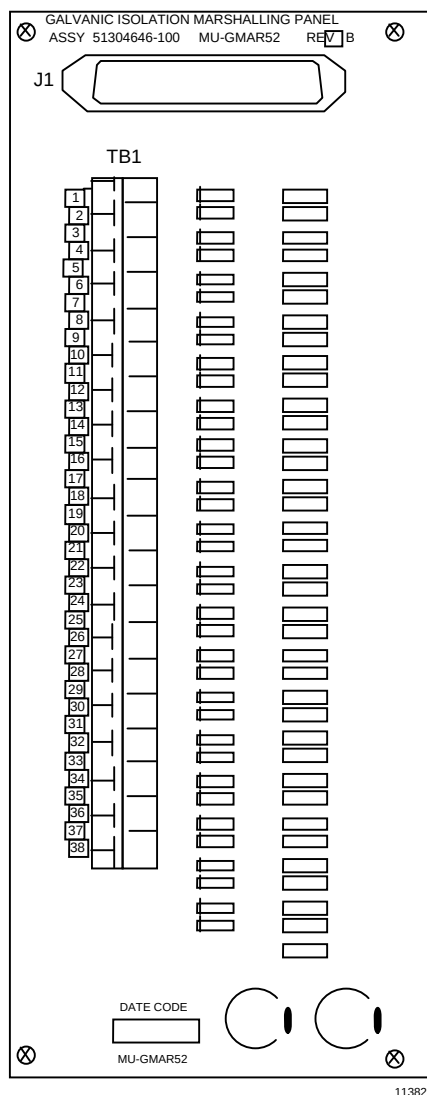

2.8 Power Systems



SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

Power System features

The High-Performance Process Manager Power System provides

- 24 Vdc power for operation of all HPMM cards, IOP cards, and FTAs
- A nominal 3.6 Vdc battery output for backup of the HPMM and IOP memory circuits.
- A nominal 0.25 ampere, 6 Vac output for operation of a LLAI line frequency clock circuit.

Two types of Power Systems

There are two types of Power Systems.

- Standard Power System
- AC Only Power System

Standard Power System

The Standard Power System has many features that include

- An optional redundant Power Supply Module (model MU-PSRX03/04).
- Either 120 Vac or 240 Vac input power. A single or dual source of input power can be connected when the optional redundant Power Supply Module option is implemented.
- Single and redundant Power Supply Module failure detection.
- CMOS memory NiCad battery backup (3.6 Vdc) for 12 hours (model MU-PSRX03) or 45 hours (model MU-PSRX04) backup with failure detection.
- An optional 48 Vdc Battery Backup Module (model MU-PSRB03/04) with a disconnect switch that backs up the 24 Vdc for 25 minutes.


Redundant Power Supply Modules

Redundant Power Supply Modules are recommended when the Power System provides power for redundant HPMMs. If the redundant HPMMs are resident in separate cabinets with their own Power System, a Power System with a single Power Supply Module is acceptable, though not fully recommended.

Model MU-PSRX03 Standard Power System

The layout of the model MU-PSRX03 Standard Power System is illustrated in the following figure.

Figure 22 Standard Power System—Model MU-PSRX03

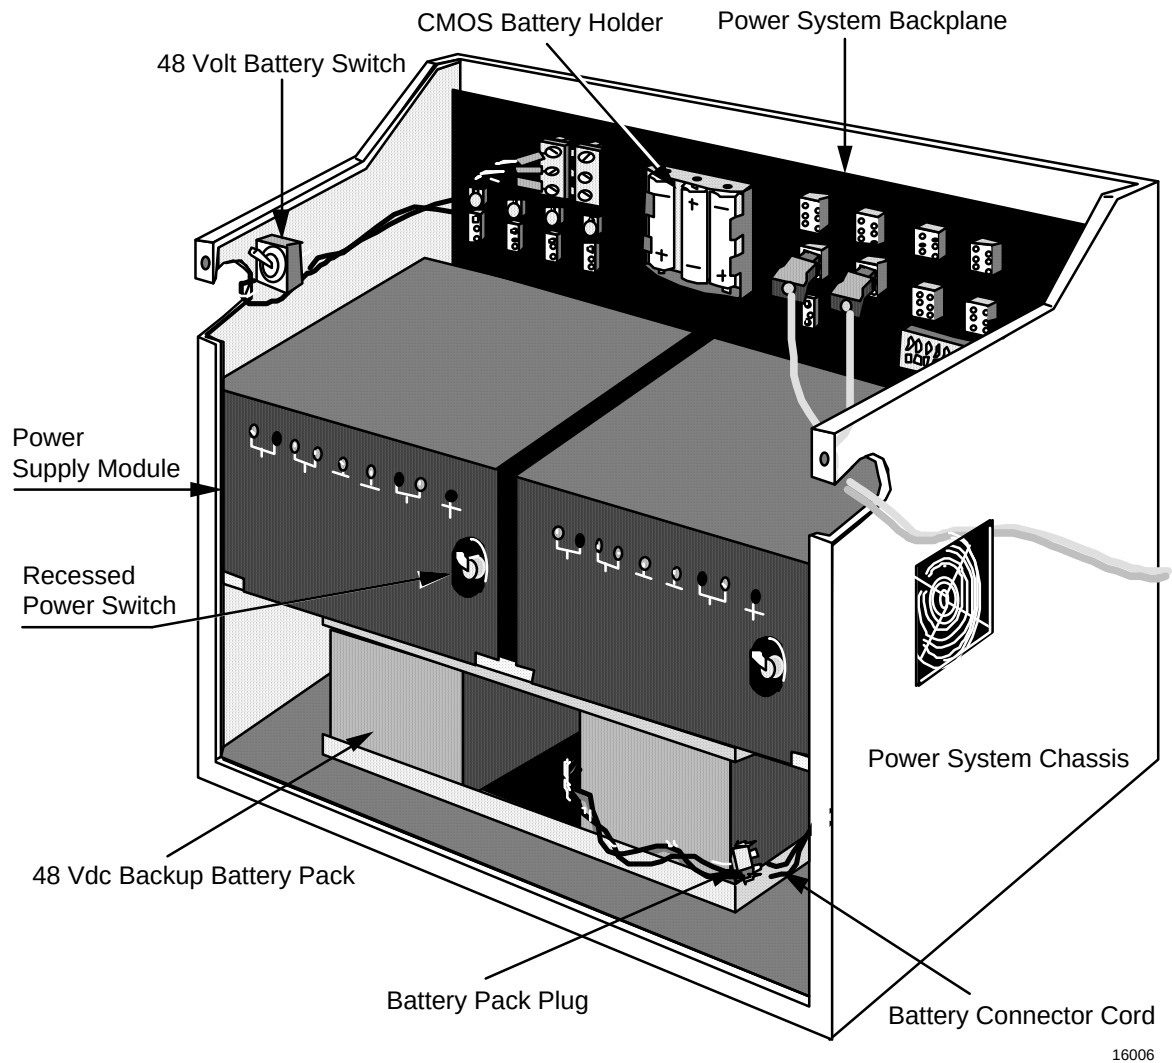


16006

Model MU-PSRX04 Standard Power System

The layout of the model MU-PSRX04 Standard Power System is illustrated in the following figure.

Figure 23 Standard Power System—Model MU-PSRX04

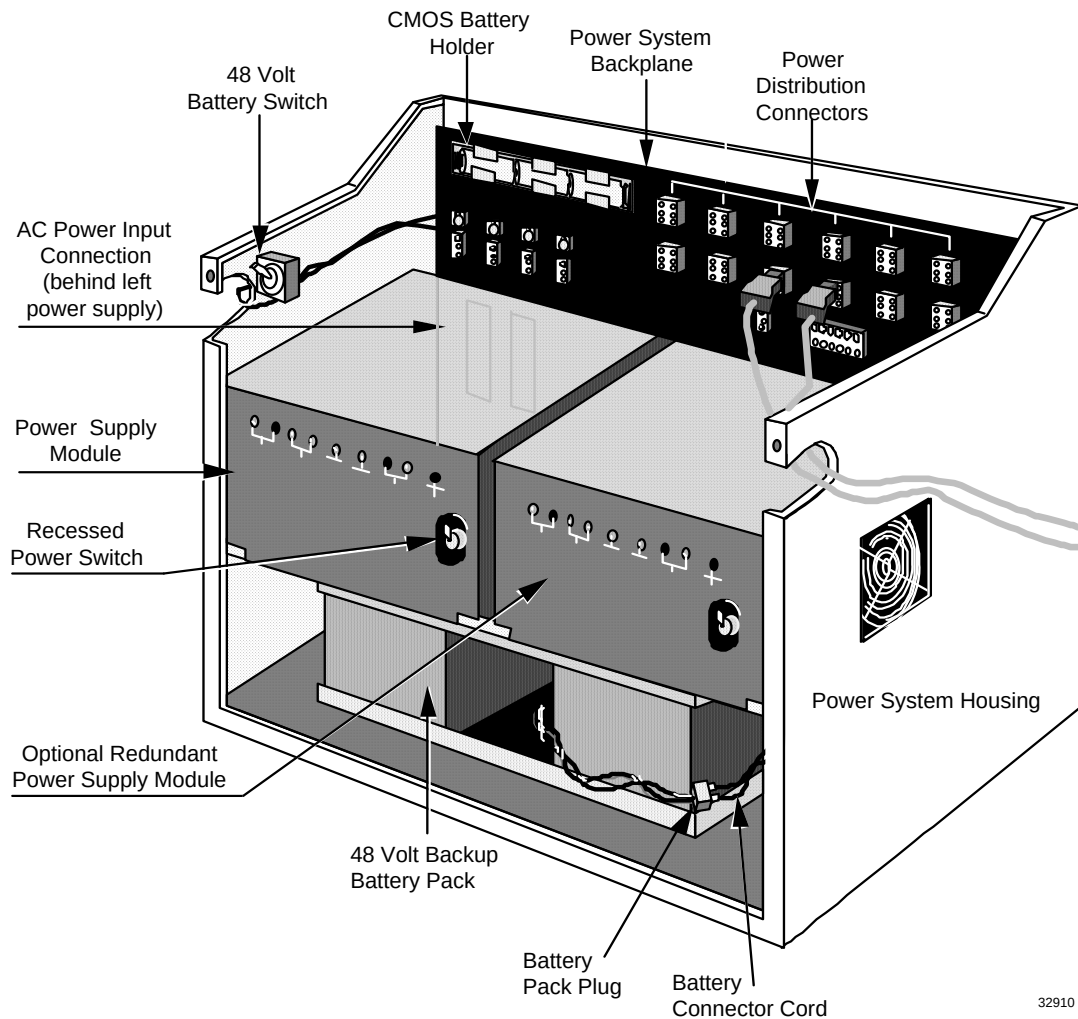

AC Only Power System

The AC Only Power System offers optional 8- or 16-ampere redundant Power Supply Modules, but does not offer the optional 48 Vdc Battery Backup module feature and rechargeable NiCad CMOS memory backup power.

Alkaline batteries are used instead of rechargeable NiCad batteries for CMOS data retention in the AC Only Power System.




ATTENTION

The AC Only Power System must not be used in CE Compliant applications.

AC Only Power System illustration

The layout of the AC Only Power System is illustrated in the following figure.

Figure 24 AC Only Power System—Not for CE Compliant Applications

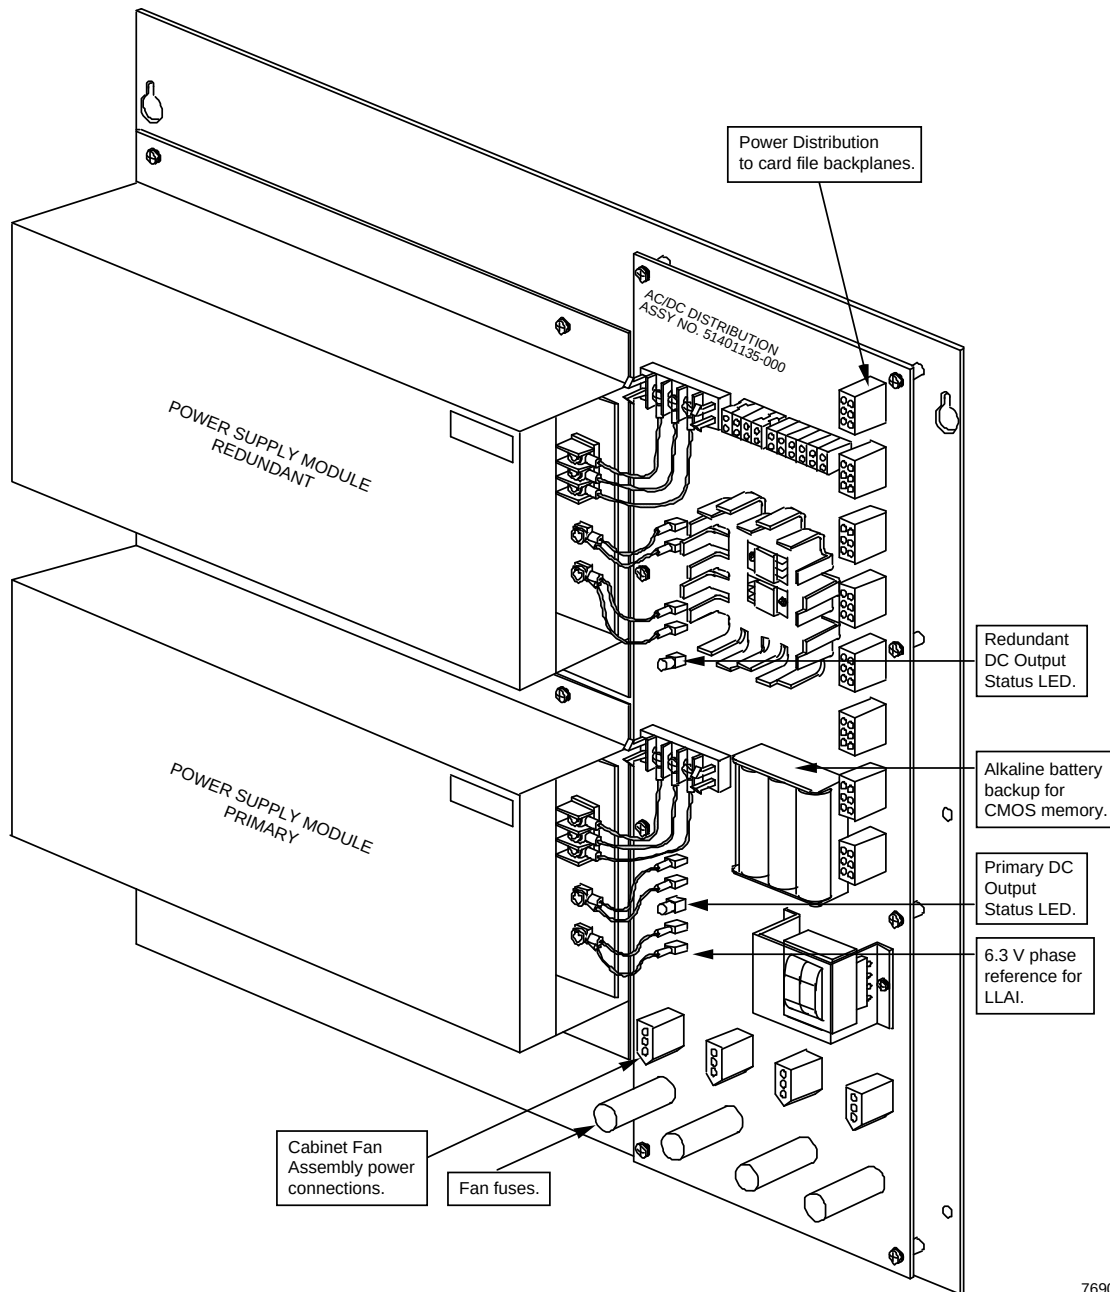

7690

2.9 Cabinet Configurations


Cabinet configurations

The High-Performance Process Manager subsystem can have various cabinet configurations. Cabinets can be complexed together or remotely separated. The HPMM and IOP card files can share the same Power System or have independent Power Systems. If the HPMMs share the same Power System, the Power System should contain redundant Power Supply Modules.

Redundant HPMMs in a single cabinet

The following figure is an illustration of a single High-Performance Process Manager cabinet containing two HPMM card files in a redundant HPMM configuration and one IOP card file. The HPMM card files and the IOP card file share the same Power System.


Figure 25 Single Cabinet with Redundant HPMMs

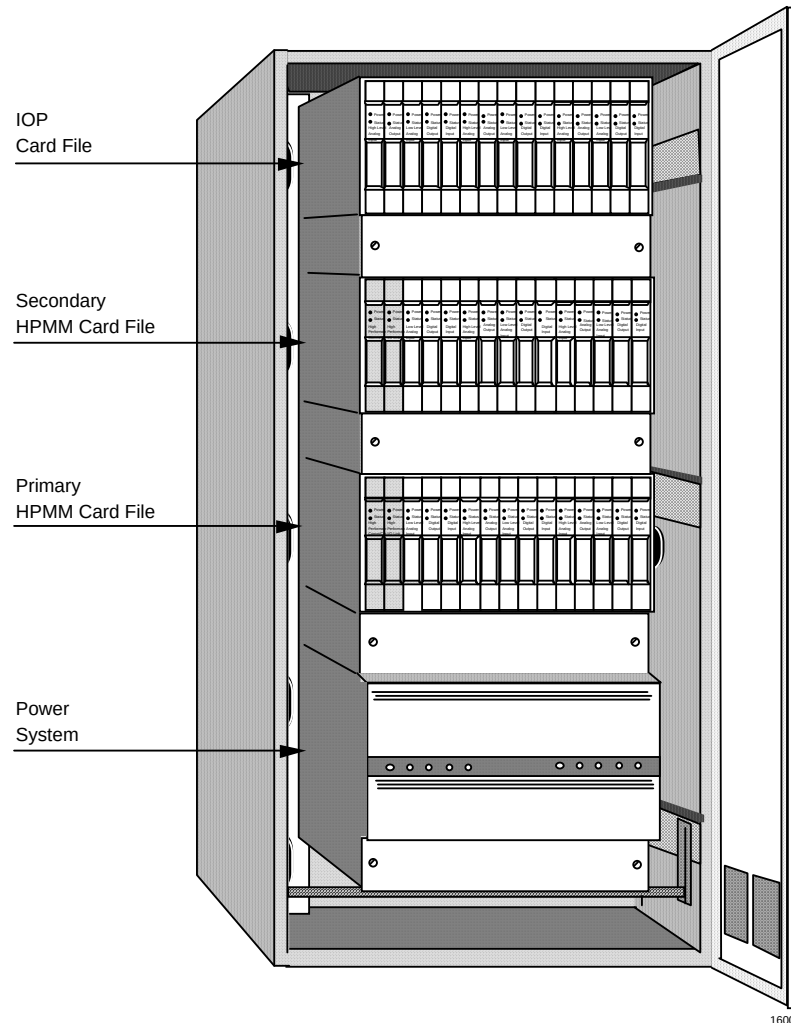

Redundant HPMMs in complexed cabinets

Two cabinets that are complexed together is illustrated in the following figure. The redundant pair of HPMM card files are installed in separate cabinets. The purpose is to provide independent power for the HPMM card files and their associated IOP card files.


Figure 26 Complexed Cabinets with Redundant HPMMs

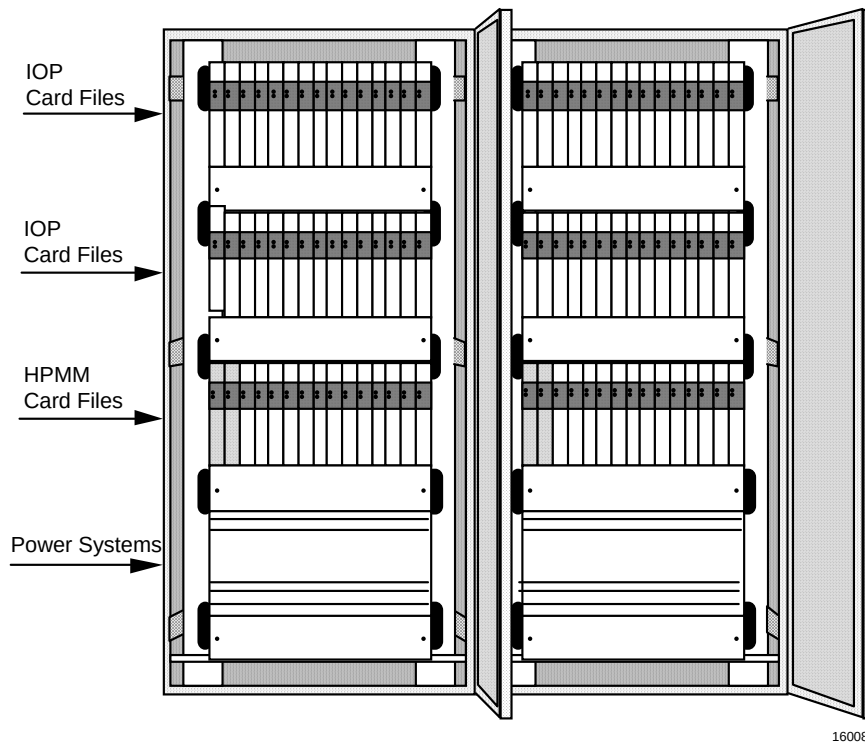

Local and remote HPM cabinets

The following figure illustrates a 2-cabinet complex with redundant HPMM card files and a remote cabinet that contains IOP card files. Communication with the remote cabinet is provided by fiber optic I/O Link Extenders.

Figure 27 Local Complexed Cabinets with Redundant HPMMs and a Remote I/O Cabinet

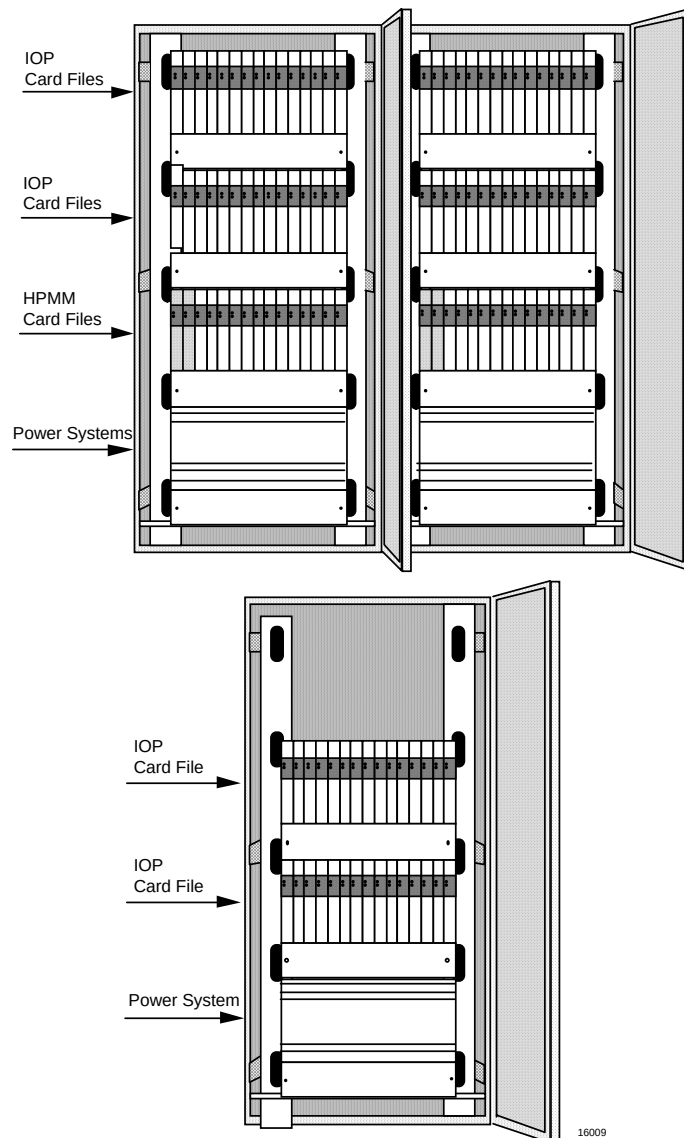

3. Power Requirements

3.1 Overview

Introduction



SHOCK HAZARD

Troubleshooting, opening any equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

This section provides the user with information to plan adequate ac power service for his High-Performance Process Manager (HPM) subsystem. The section also aids the user in planning a power backup strategy when the primary source fails.

Power backup planning

A well planned power system for the High-Performance Process Manager minimizes subsystem downtime. In this section, we explore various paths for handling the loss of subsystem ac power. The selected path dictates whether a given HPM needs the optional dual Power Supply Modules and/or a battery backup for the 24 Vdc. This definition of the power equipment in an HPM allows the ac power system requirements to be defined in detail.

3.2 Backup Strategy

Planning strategy

There are several planning strategies for handling a loss of ac power to the HPM. This strategy takes advantage of any or all of the following:

- An optional battery backup for the 24 Vdc
- An optional secondary Power Supply Module
- An optional automatic ac transfer switch
- An Uninterruptible Power Supply (UPS)

Power continuity

Power continuity is established by the use of the optional battery backup for 24 Vdc. This battery backup option is available with the redundant Power Supply Module option. When an ac power loss occurs, the battery carries a full load of 20 amperes for minimum of 25 minutes. If 25 minutes is not sufficient, consider another backup source to provide ac power.

Two ac power sourcing methods

There are two methods in which two separate sources of ac power for an HPM subsystem can be implemented.

3. Power Requirements

3.2. Backup Strategy

First method

The first method takes advantage of the HPM's redundant Power Supply Module option. The two Power Supply Modules can be wired to operate from two separate ac feeder sources as illustrated in Figure 28 or Figure 29. The two ac feeder sources do not have to be of the same phase, frequency, voltage, or from the same service as long as each meets the power quality requirements discussed in the "Quality" section of "Power Requirements."

Second method

The second method, by which two ac feeder sources can be implemented, is through an automatic transfer switch. The HPM does not need redundant Power Supply Modules or dual ac feeders for this approach because the transfer switch provides only one ac output. The automatic transfer switch can detect an ac failure and execute a transfer of its load from one service to another in 5 milliseconds. The HPM will perform without compromise even if this cycle requires 10 milliseconds.

Better continuity of HPM power

The use of the battery backup option in an HPM with redundant Power Supply Modules further enhances the continuity of power.

Uninterruptible Power Supply (UPS)

A second source of ac power can come from a public utility, another plant, or can be generated from an Uninterruptible Power Supply (UPS). In any case, an automatic or manual transfer switch is needed to complete the installation. Consider the case in which a nearby public utility ac feeder provides backup for the process facility steam plant. An automatic transfer switch should be installed to transfer from the steam plant's ac feeder to the public utility's ac feeder. A switch with maximum transfer time of 10 ms in both directions is recommended. The UPS offers even more possibilities.

UPS description

The UPS consists of a battery charger, a large battery, and a chopper to convert the battery's dc power into quality ac power. The UPS is always on and is always supplying power to its load through the battery that is on a float charge. Should the ac input fail, the UPS continues to serve the load without any changes and it will continue to operate until the battery is discharged, or the ac input to the UPS charger is restored. The capacity of the battery pack is specified by the UPS manufacturer and will provide many hours of backup.

UPS transfer switches

The UPS usually has two transfer switches. A switch on the output of the UPS automatically transfers the loads to plant power in case of failure in the UPS. A second transfer switch to the UPS input charger allows manual transfer to public utility power if there is extended failure of plant power. A UPS with two ac sources provides the means for several backup strategies. The HPM offers additional permutations with its optional redundant Power Supply Modules, dual-feeds, and battery backup. The need for all of this backup redundancy depends on how important it is to have a working control system when plant power is out for an extended period.

Power quality

After the overall power system strategy is selected, the quality and the quantity of power must next be determined.

3.3 Quality

Quality requirements

The HPM is typically connected to ac power as illustrated in Figure 28 or Figure 29. It operates on any ac source that meets the following requirements:

- Voltage: 100-132/187-264 Vac, single phase
- Frequency: 47-63 Hz
- Total Harmonic Distortion (THD): 8% maximum
- Power dropout: 10 ms maximum


Verification

Techniques and equipment for verifying the above electrical power system parameters are described in the *High-Performance Process Manager Checkout* manual. Existing instrument power at most sites usually meets the above requirements.

AC power and ground

Figure 28 illustrates the ac power and ground connections for a typical multi-ground HPM installation that includes Master Reference Ground (MRG). The ground system is non-CE Compliant.

Figure 28 Subsystem AC Power and Ground Connections—Multi-Ground System

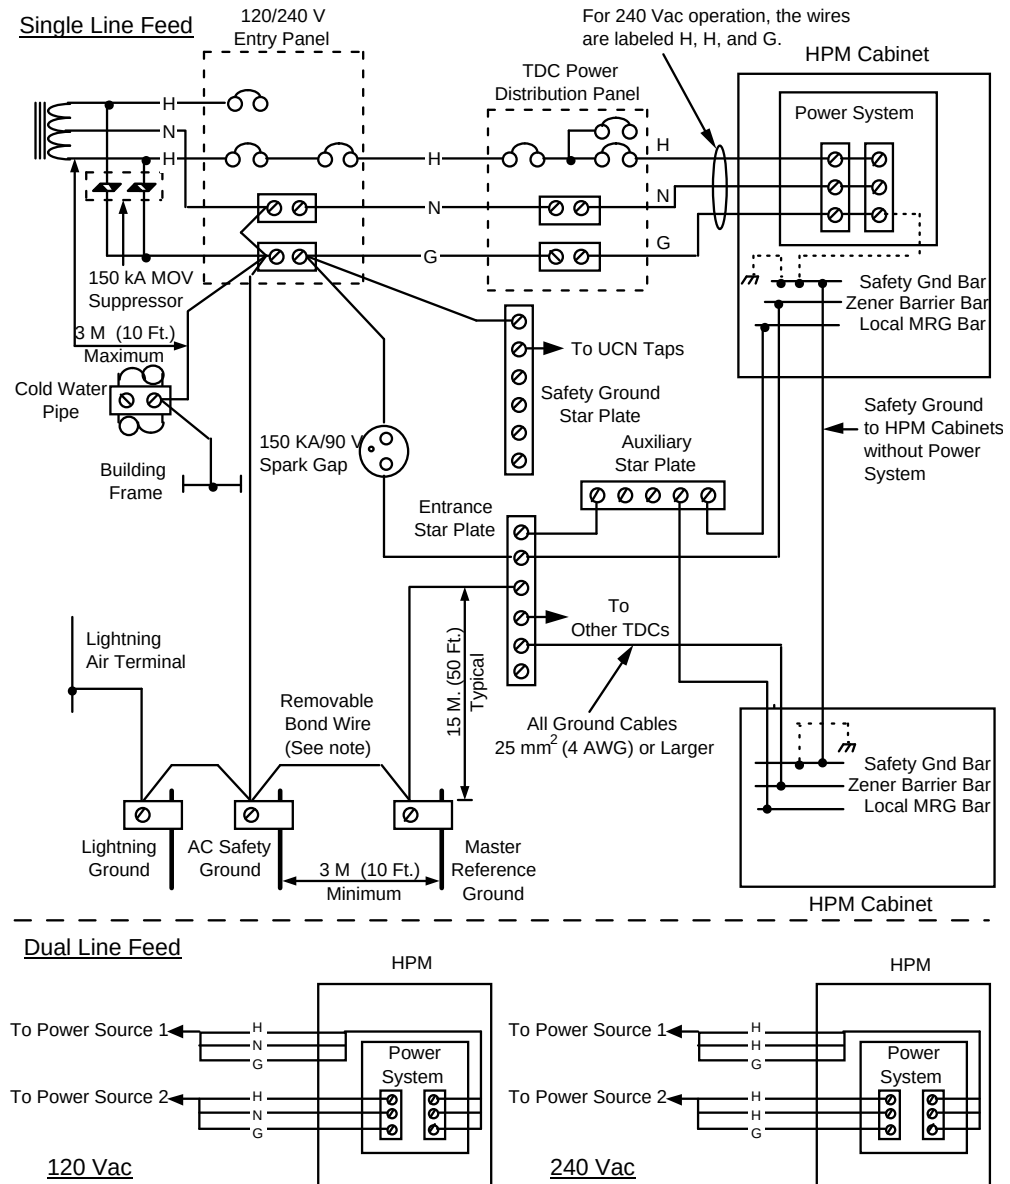


Note: Justification for the implementation of the bond wire between AC Safety Ground and Master Reference Ground is found in the *TPS System Site Planning* manual.

16003-A

Figure 29 illustrates the ac power and ground connections for a typical single-ground HPM installation that is designated Safety Ground. The Safety Ground system is CE Compliant.

Figure 29 Subsystem AC Power and Ground Connections—Single-Ground System

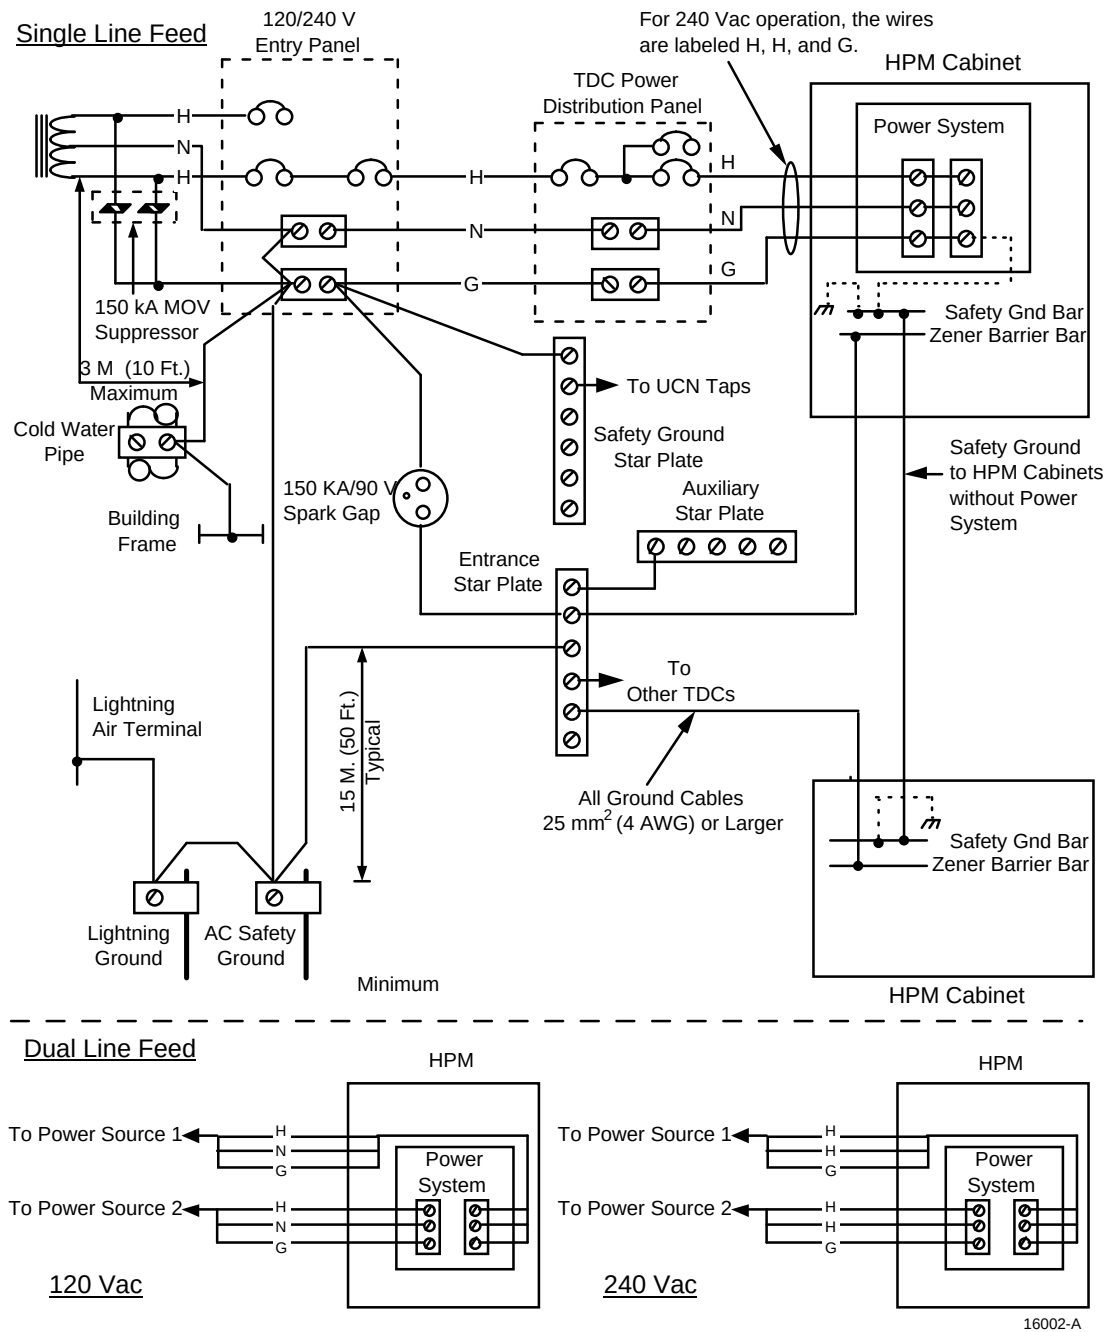

3.4 Power Draw

Introduction

The power requirements for a High-Performance Process Manager (HPM) can necessitate the installation of one or more Power Systems in a cabinet complex. This requirement depends on the number and types of High-Performance Process Manager Modules (HPMMs), Input Output Processors (IOPs), and Field Termination Assemblies (FTAs) in the subsystem. In a large High-Performance Process Manager subsystem with redundant HPMMs and redundant IOPs, it may be desirable to install the HPMMs in separate cabinets with a Power System in each cabinet. With this configuration, a power failure in one Power System does not result in the failure of both the primary and secondary HPMMs and IOPs.

Power loading and initial inrush

Other considerations are the nonlinear loading and initial inrush that the Power System subassembly applies to the ac source when power is applied.

Fuse clearing

Clearing of the fuse (3 A) in the High-Performance I/O Link card in the HPMM may require additional current that a single Power Supply cannot adequately provide; therefore, a Power System with redundant Power Supply Modules is recommended.

Power System load requirements

Each Power System's load requirements must be examined as a function of the options that are installed in the High-Performance Process Manager. These demands are discussed in the *TPS System Site Planning* manual.

Power System considerations

Each Power System can provide up to 20 A of 24 Vdc power. By calculating the total current requirement, you can determine how many Power Systems are required. If more than one Power System is required, it may be desirable to connect each High-Performance Process Manager Module (HPMM) to a separate Power System. It may also be desirable to connect the "A" IOP and "B" IOP of a redundant pair to separate Power Systems.

Previously, the following figure illustrated a typical High-Performance Process Manager subsystem with redundant HPMMs in the same cabinet. Figure 26 illustrated a typical large subsystem in a cabinet complex with the redundant HPMMs in separate cabinets. Figure 25 illustrated a local cabinet complex with the redundant HPMMs in separate cabinets, and a remote cabinet with IOP card files.

Provide adequate power

Generally, power for a subsystem with redundant HPMMs with up to 35 IOPs can be adequately provided by one Power System. A subsystem with redundant I/O may need additional Power Systems. The power calculation is made using the information provided in this subsection.

Subsystems with either remote I/O, or remote cabinets containing one or more IOP card files must be self-contained with at least one Power System.

Typical 2Vdc Power Draw Calculations

Two examples of +24 Vdc power requirement calculations are illustrated in the Quality and Power Draw subsections of the "Power Requirements" section. The [Single Power System Example](#) assumes a single cabinet with a dedicated Power System. The [Dual Power System Example](#) assumes a dual cabinet complex with each cabinet having a dedicated separate Power System.

Power calculation procedure

The calculations are based on the power requirements of the assemblies listed in Table 4. The current requirements are based on the typical maximum, assuming all channels are in use. Use the following steps to calculate the number of each type of IOP and associated FTA that an individual Power System must support.

1. Determine the number of channels needed for each type of IOP and associated FTA. Divide the total number by the number of channels that are available in the IOP. For example, using Table 4, if 256 High Level Analog Input (HLAI) IOP channels are needed, 16 IOPs and FTAs are required ($256 \text{ channels} \div 16 \text{ channels per IOP} = 16 \text{ IOPs and 16 FTAs}$).
2. Multiply the number of IOPs by the current requirement for the type of IOP. For example, 16 model MU-PAIH02 HLA IOPs require 2928 mA ($16 \text{ HLA IOPs} \times 183 \text{ mA} = 2928 \text{ mA or } 2.928 \text{ A}$). The current requirement is added to the Total Module Current for the Power System.
3. Multiply the number of FTAs by the current requirement for the type of FTA. For example, 16 model MU-TAIH12/52 HLA I FTAs require 5120 mA ($16 \text{ HLA I FTAs} \times 320 \text{ mA} = 5120 \text{ mA or } 5.12 \text{ A}$). The current requirement is added to the Total Module Current for the Power System.
4. If redundant IOPs are required in the same Power System, double the IOP type count. For example, 16 redundant HLA I channels, A and B, require two IOPs ($16 \text{ channels} \div 16 \text{ channels per IOP} \times 2 = 2 \text{ IOPs}$). When the redundant IOPs reside in separate Power Systems, half the IOP power requirement is added to each Power System's Module Current power requirement (IOP A and IOP B).
5. To determine the Total Module Current, add together the total current for both the IOPs and their associated FTAs. For example, using Table 4, 256 HLA I channels require 2928 mA of IOP current and 5120 mA of FTA current ($256 \text{ HLA I channels} = 2928 \text{ mA} + 5120 \text{ mA} = 8048 \text{ mA or } 8.048 \text{ A}$).

Assembly 24 Vdc power usage

The following table is a list of the power usage for High-Performance Process Manager assemblies.

Table 4 HPM Assembly 24 Vdc Power Usage

Description	Model Number	Channels	Current (Ma)
Left 7-Slot Card File-Slots 1-7, non-CE Compliant	MU-HPFH01	N/A	0
Left 7-Slot HPMM Card File-Slots 1-7, CE Compliant	MU-HPFH03	N/A	0
Right 7-Slot Card File-Slots 9-15, non-CE Compliant	MU-HPFH11	N/A	0
Right 7-Slot HPMM Card File-Slots 9-15, CE Compliant	MU-HPFH13	N/A	0
15-Slot Card File-Slots 1-15, non-CE Compliant	MU-HPFX02	N/A	0
15-Slot HPMM Card File-Slots 1-15, CE Compliant	MU-HPFX03	N/A	0
Left 7-Slot IOP Card File-Slots 1-7, CE Compliant	MU-HPFI03	N/A	0
Right 7-Slot IOP Card File-Slots 9-15, CE Compliant	MU-HPFI13	N/A	0
15-Slot IOP Card File-Slots 1-15, CE Compliant	MU-HPFI23	N/A	0
IOP Card File	MU-IOFX02	N/A	0
Nonredundant HPMM Card Set	MU-HPMS01	N/A	1375
Redundant HPMM Card Set	MU-HPMR01	N/A	2700

3. Power Requirements

3.4. Power Draw

Description	Model Number	Channels	Current (Ma)
LLAI IOP Card	MU-PAIL02	8	58
LLMux IOP Card	MU-PLAM02	16	70
RHMUX IOP Card (requires an IS or NI Power Adapter)	MU-PRHM01	32	100
HLAI IOP Card	MU-PAIH02	16	183
HLAI IOP Card	MU-PAIH03	16	155
STI IOP Card	MU-PSTX02	16	100
STIM IOP Card	MU-PSTX03	16	100
AO IOP Card	MU-PAOX02	8	100
AO IOP Card	MU-PAOX03	8	100
AO IOP Card	MU-PAOY22	16	112
DI IOP Card	MU-PDIX02	32	90
DI IOP Card	MU-PDIY22	32	89
DISOE IOP Card	MU-PDIS11	32	210
DISOE IOP Card	MU-PDIS12	32	210
DO IOP Card	MU-PDOX02	16	64
DO IOP Card	MU-PDOY22	32	98
PI IOP Card	MU-PPIX02	8	208
PI IOP Card	MU-PPIX02	8	208
SDI IOP Card	MU-PSDX02	2	70
SI IOP Card	MU-PSIM11	2	70
FBUS IOP Card	MU-PFBS01	4	700 typical 1250 max.
LLAI FTA	MU-TAIL02	8	350
LLAI FTA	MU-TAIL03	8	350
LLMux—RTD FTA	MU-TAMR02	16	185
LLMux—RTD FTA	MU-TAMR03	16	185
LLMux—TC/Local CJR FTA	MU-TAMT02	16	185
LLMux—TC/Local CJR FTA	MU-TAMT03	16	185
LLMux—TC/Remote CJR FTA	MU-TAMT12	16	185
LLMux—TC/Remote CJR FTA	MU-TAMT13	16	185
RHMUX—TC/Local CJR FTA (ISPA or NIPA provides power to FTA)	MC-GRMT01	16	0

Description	Model Number	Channels	Current (Ma)
RHMUX GI/IS Power Adapter (ISPA)	MU-GRPA01	32 *	300
RHMUX GI/NI Power Adapter (NIPA)	MU-TRPA01	32 *	575
HLAI/STI FTA	MU-TAIH02	16	320
HLAI FTA	MU-TAIH03	16	320
HLAI/STI FTA	MU-TAIH12/52	16	320
HLAI FTA	MU-TAIH13/53	16	320
HLAI/STI FTA	MU-TAIH22/62	16	320
HLAI FTA	MU-TAIH23	16	320
STI FTA	MU-TSTX03	16	320
STI FTA	MU-TSTX13/53	16	320
AO FTA	MU-TAOX02	8	160
AO FTA	MU-TAOX12/52	8	171
AO HART FTA	MU-THAO11	16	324
AO FTA	MU-TAOY22/52	16	324
AO FTA	MU-TAOY23/53	16	324
24 Vdc DI FTA	MU-TDID12/52	32	408
24 Vdc DI FTA	MU-TDID72	32	410
24 Vdc Power Distribution Assembly	MU-TDPR02	12	200
24 Vdc DI FTA	MU-TDIY22/62	32	196
120 Vdc DI FTA	MU-TDIA12/52	32	192
120 Vdc DI FTA	MU-TDIA72	32	200
240 Vdc DI FTA	MU-TDIA22/62	32	192
24 Vdc Nonisolated DO FTA	MU-TDON12/52	16	0
24 Vdc Isolated DO FTA	MU-TDOY22/62	32	004
3-30 Vdc Solid-State DO FTA	MU-TDOD12/52	16	160
3-30 Vdc Solid-State DO FTA	MU-TDOD13/53	16	160

3. Power Requirements

3.4. Power Draw

Description	Model Number	Channels	Current (Ma)
3-30 Vdc Solid-State DO FTA	MU-TDOD14/54	16	160
31-200 Vdc Solid-State DO FTA	MU-TDOD22/62	16	160
5-200 Vdc Solid-State DO FTA	MU-TDOD23/63	16	160
24-240 Vac Solid-State DO FTA	MU-TDOA12/52	16	160
120/240 Vac Solid-State DO FTA	MU-TDOA13/53	16	160
120 Vac/125 Vdc Relay DO FTA	MU-TDOR12/52	16	470
240 Vac/125 Vac Relay DO FTA	MU-TDOR22/62	16	470
240 Vac/125 Vac Relay DO FTA	MU-TDOY23/63	16	228
PI FTA	MU-TPIX12/52	8	136
SDI FTA-Toledo Scale Cell	MU-TSDT02	1	65
SDI FTA-Manual/Auto Station	MU-TSDM02	1	65
SDI FTA-Manual/Auto Station	MU-TSDM02	1	65
SDI FTA-UDC6000	MU-TSDU02	1	65
Manual/Auto Station	MU-MASX02	N/A	800
SI FTA-Allen-Bradley	MU-TSIA12	1	65
SI FTA-Modbus	MU-TSIM12	1	65
Power Adapter (LLMux, SDI, SI FTAs)	MU-TLPA02	2	360
FBUS-with power supply module	MU-TFBS01	4	960 typical @ 24 V in + 200 mA per segment
FBUS-without power supply module	MU-TFBS11	4	2000 max. @ 20 V in + 350 mA per segment
Galvanically Isolated HLAI FTA	MU-GAIH12/82	16	1200
Galvanically Isolated HLAI/STI FTA	MU-GAIH13/83	16	1200

Description	Model Number	Channels	Current (Ma)
Galvanically Isolated HLAI/STI FTA	MU-GAIH14/84	16	1200
Galvanically Isolated HLAI FTA	MU-GAIH22/92	16	1200
Galvanically Isolated AO FTA	MU-GAOX02/72	8	440
Galvanically Isolated AO HART FTA	MU-GHAO11	16	1252
Galvanically Isolated AO FTA	MU-GAOX12/82	8	440
Galvanically Isolated 24 Vdc DI FTA	MU-GDID12/82	32	800
Galvanically Isolated 24 Vdc DI FTA	MU-GDID13/83	32	800
Galvanically Isolated 24 Vdc DO FTA	MU-GDOD12/82	16	1800
Galvanically Isolated 24 Vdc DO FTA	MU-GDOL12/82	16	1800
Combiner Panel	MU-GLFD02	N/A	0
Marshalling Panel	MU-GMAR02	N/A	0
Galvanic Isolation Power Distribution Assembly	MU-GPRD02	N/A	160
Galvanically Isolated/Intrinsic Safe FBUS FTA with power supply module	MU-GFBS01	4	540 typical @ 24 V in + 80 mA per segment
Long Distance I/O Link Extender Cards/Couplers	MU-ILDX02	N/A	300
Long Distance I/O Link Extender Cards/Couplers	MU-ILDX03	N/A	300
Standard I/O Link Extender Cards/Couplers	MU-IOLM02	N/A	196
Standard I/O Link Extender Cards/Couplers	MU-IOLX02	N/A	190
Analog Output Standby Manual with case	MU-SMAC02	4	250
Analog Output Standby Manual—Digital	51401926-100	8	2200
Digital Output Standby Manual with case	MU-SMDC02	16	70
Digital Output Standby Manual without case	MU-SMDX02	16	100

* An RHMUX Power Adapter provides the interface between one RHMUX IOP and one or two RHMUX FTAs. Each RHMUX FTA has 16 input channels providing a total of 32 inputs for the RHMUX subsystem.

3. Power Requirements

3.4. Power Draw

Single Power System Calculation Example

The example in the following table meets the requirement that the total calculated current for an individual Power System be less than, or equal to 20 amperes.

Table 5 Single Power System Calculation Example

Assemblies	Total IOP/Module Current	Total FTA Current
Redundant HPMMs	2.700 A	N/A
High Level Analog Input (HLAI) IOPs, nonredundant (256 channels ÷ 16 channels/IOP = 16 IOPs x 183 mA = 2928 mA) (16 FTAs x 320 mA = 5120 mA)	2.928 A	5.120 A
High Level Analog Input (HLAI) IOPs, redundant A & B (16 channels x 2 = 32 channels ÷ 16 channels/IOP = 2 IOPs x 183 mA = 366 mA) (1 FTA x 320 mA = 320 mA)	0.366 A	0.320 A
Analog Output (AO) IOPs, nonredundant (120 channels ÷ 8 channels/IOP = 15 IOPs x 100 mA = 1500 mA) (8 FTAs x 171 mA = 1368 mA)	1.500 A	1.368 A
Analog Output (AO) IOPs, redundant A & B (16 channels x 2 = 32 channels ÷ 8 channels/IOP = 4 IOPs x 100 mA = 400 mA) (2 FTAs x 171 mA = 342 mA)	0.400 A	0.342 A
Subtotals	7.894 A	7.150 A
Total Power System Current = 7.894 + 7.150 = 15.044 A		

Dual Power System Calculation Examples

The following examples in Table 6 and Table 7 meet the requirement that the total calculated current for an individual Power System be less than, or equal to 20 amperes.

Table 6 Dual Power System Calculation Example (Power System 1)

Power System 1		
Assemblies	Total IOP/Module Current	Total FTA Current
Single HPMM	1.375 A	N/A
High Level Analog Input (HLAI) IOPs, nonredundant (80 channels ÷ 16 channels/IOP = 5 IOPs x 183 mA = 915 mA) (16 FTAs x 320 mA = 5120 mA)	0.915 A	1.600 A
High Level Analog Input (HLAI) IOPs, redundant A (240 channels = 16 channels/IOP = 15 IOPs x 183 mA = 2740 mA) (15 FTA x 320 mA = 4800 mA)	2.740 A	4.800 A
Analog Output (AO) IOPs, nonredundant (40 channels ÷ 8 channels/IOP = 5 IOPs x 100 mA = 500 mA) (5 FTAs x 171 mA = 855 mA)	0.500 A	0.855 A
Analog Output (AO) IOPs, redundant A (120 channels ÷ 8 channels/IOP = 15 IOPs x 100 mA = 1500 mA) (15 FTAs x 171 mA = 2565 mA)	1.500 A	2.565 A
Subtotals	7.030 A	9.820 A
Total Power System 1 Current = 7.03 + 9.82 = 16.85 A		

Table 7 Dual Power System Calculation Example (Power System 2)

Power System 2		
Assemblies	Total IOP/Module Current	Total FTA Current
Single HPMM	1.375 A	N/A
High Level Analog Input (HLAI) IOPs, redundant B (240 channels = 16 channels/IOP = 15 IOPs x 183 mA = 2740 mA) (15 FTA x 320 mA = 4800 mA)	2.740 A	4.800 A
Analog Output (AO) IOPs, redundant B (120 channels ÷ 8 channels/IOP = 15 IOPs x 100 mA = 1500 mA) (15 FTAs x 171 mA = 2565 mA)	1.500 A	2.565 A
Subtotals	6.615 A	7.365 A
Total Power System 2 Current = 6.615 + 7.365 = 13.98 A		

3. Power Requirements

3.4. Power Draw

HPM AC Power Draw

After you have determined the number of Power Systems that will be required, the subsystem's ac power, substation sizing requirement, and heat generation can be determined.

Maximum power requirements

Provide enough power for fully loaded HPM Power Systems rather than designing only for the existing dc power loads. A Power System with redundant Power Supply Modules that is providing 20 amperes of 24 Vdc power and is charging its 48 vdc backup battery has an ac line draw of 7.6 amperes rms at 120 Vac.

A Power System with a single Power Supply Module that has a 20 ampere 24 Vdc load has an ac line draw of 7.1 amperes rms at 120 Vac.

When operating at 240 Vac, halve the ac current requirement.

Crest Factor

Introduction

Power Systems that were manufactured before November 1994 used a Power Supply Module that is black-colored and was manufactured by the Cherokee Company. The Power Supply Module has a higher crest factor than the Power Supply Module that is currently used in the Power System. The current Power Supply Module is silver-colored and manufactured by Bikor Corporation.

Early production Power Supply Module

The crest factor for the black-colored Cherokee Power Supply Module is 2.2. This means that the current draw from the ac power line is not sinusoidal but has a peak value of 2.2 times the rms current value.

A linear load has a peak current value of 1.414 times the rms value; therefore, the peak value of the current draw from the ac line for this type of Power Supply Module is 1.6 times higher than it would be if the Power Supply Module is a perfect linear load.

Later production Power Supply Module

The crest factor for the silver-colored Bikor Power Supply Module is 1.7 (worst case). The peak current drawn from the ac power line is 1.7 times the rms current value. The peak value of the current draw from the ac line for the Power Supply Module is 1.2 times higher than it would be if the Power Supply Module is a perfectly linear load.

AC power source sizing

Size the ac substation transformer and/or the UPS to accommodate peak current rather than rms current. This will prevent a distortion problem in the line voltage that is caused by current spikes in the load. Circuit breakers and conductors are still sized by using rms values.

The substation transformer and/or UPS may be providing power to different loads at the facility that have different crest factors. To properly size the substation transformer and/or UPS, you must calculate a crest factor for the aggregate load. To do this, calculate the total peak current and the total rms current for all the loads. The aggregate load crest factor is the ratio of these two values.

Inrush Current

Introduction

This discussion assumes that the Power Supply Module is operating from a 120 Vac line source.

Power systems that were manufactured before November 1994 used a Power Supply Module that was black-colored and was manufactured by the Cherokee Company. The Power Supply Module has a higher inrush current than the Power Supply Module that is currently used in the Power System. The current Power Supply Module is silver-colored and manufactured by Bikor Corporation.

Early production Power Supply Module

When power is initially applied, the black-colored Cherokee Power Supply Module has a worst case instantaneous peak inrush of 85 amperes that declines to 27 amperes peak within two milliseconds. Within five seconds, it then declines to the normal operating repetitive peak current.

For 240 volt operation, the inrush current is doubled.

Two Power Supply Modules on the same circuit breaker will draw twice as much current.

Later production Power Supply Module

The silver-colored Bikor Power Supply Module has an inrush current of 35 amperes for the first half-cycle. After initially applying power to the Power Supply Module, the current diminishes during each half-cycle until the steady-state current is reached within five ac line cycles.

Two Power Supply Modules on the same circuit breaker will draw twice as much current.

Solving the Inrush problem

A substation or UPS can handle the Inrush current by using one of several methods:

- When powering up a large system with many devices, the surge is large and the ac source may take 10 cycles or more to reach specifications; however, because the system is not operational, a slow power-up is not important.
- A substation transformer or a UPS may already include an inherent surge allowance, such as a 50% overload capability while meeting all other specification requirements.
- A larger substation may be purposely selected to include the Inrush as steady state current. For example, applying power to a redundant HPM Power System creates an Inrush of 54 amperes peak. Because the redundant Power Supply Modules already requires a steady state operating current of 8.6 amperes ac rms with a Crest Factor of 2.09, the substation already provides $(8.6 \times 2.09 =)$ 18 amperes peak. Therefore, the example substation needs to be increased in size by $(54 - 18 =)$ 36 amperes peak to handle the surge to service the particular HPM Power System.
- When the UPS is too small to provide a workable Inrush capability, it can be split into even smaller units so that each HPM has its own unit. As such, servicing an HPM may cause a momentary fold-back of its UPS, but the other units are unaffected.

The following discussion on substation sizing considers all the previous current requirements and allows an extra 36 amperes peak for Inrush to service one redundant HPM Power Supply Module at a time. The discussion also assumes that the current production silver-colored Bikor Power Supply Module is in use.

3.5 Substation Sizing

Conversion example

The published current rating for a substation transformer or UPS is created with the assumption that it will be used for a linear load. A linear load has a Crest Factor of $\sqrt{2}$. Because the load Crest Factor for electronic equipment is not $\sqrt{2}$, conversion is required. This is accomplished by converting all the TPS system rms amperages to peak values as illustrated in the following example.

Load Description	RMS Draw (Amperes)	Crest Factor	Peak Draw (Amperes)
HPMMs (5)	38.0	1.7	$38 \times 1.7 = 64.6$
Operator Console CRTs	<u>35.0</u>	2.27	$35 \times 2.27 = \underline{79.5}$
Subtotals	73.0		144.1
Future Expansion	x 1.33		x 1.33
HPM Inrush Allowance			36.0
Total	97.0		228.0

No Inrush allowance for the LCN Operator Console is required. The soft-start power supplies have a maximum Inrush of 10 amperes, so they are easily accommodated by the 36 ampere allowance for the HPMs.

The 228 ampere peak is derated by $\sqrt{2}$ for the purpose of selecting a transformer; thus, a 161 ampere (228 amperes peak $\div \sqrt{2}$) linear-load handling capacity transformer is required. In other words, it is now known that a 161 linear-ampere ac rms transformer can deliver the required 228 ampere peaks.

You will need a 20 kVA (120 V x 161 A) transformer, either for 120 V, 240 V, or 208 V line-to-line grounded Y. Conductors and breakers are sized using the 97 amperes rms calculation.

Substation and UPS requirements

As previously calculated, an off-the-shelf substation or UPS must have a Volt-Amperes (VA) capacity that is significantly greater than the rms total for the load. A custom designed substation or UPS can be designed so that the peak and RMS requirements for electronic loads coincide. Significant economies are possible. See the "Custom UPS and Power Factor" section in "Power Requirements."

3.6 Circuit Breaker Sizing

AC feeder

For an HPM with one 24 Vdc Power Supply Module, one ac feeder is used. With two Power Supply Modules, one or two feeders may be used. See Figure 28 and Figure 29.

Circuit breakers

The ac feeder conductors require current limiting for protection. Circuit breakers used for this purpose are to be sized for the ac rms current and are not to be adjusted for the Crest Factor.

One Power Supply Module

An HPM with one 24 Vdc Power Supply Module requires one ac feeder and has a worst case ac line draw of 7.1 amperes ac rms. Local electrical codes usually require that the feeder circuit breaker be sized at 125% of its noncontinuous-plus-continuous load. The ac feeder requires a 10-ampere circuit breaker. This is the nearest common size that gives a 125% over sizing allowance.

Two Power Supply Modules

For an HPM with two 24 Vdc Power Supply Modules on one ac feeder, the total worst case draw is 7.6 amperes ac rms. Again, a 10-ampere circuit breaker is required.

Two Power Supply Modules on two ac feeders

For an HPM with two Power Supply Modules on two ac feeders, either Power Supply Module can draw 7.6 amperes ac rms, or there can be some random proportioning. As such, each feeder needs a 10-ampere circuit breaker. When using two Power Systems for one HPM, two ac feeders are required. Both Power Systems should be connected to both ac feeders.

ATTENTION—Do not use a circuit breaker larger than 15 amperes. The Power System wiring is not rated to handle a larger feeder.

3.7 Custom UPS and Power Factor

Introduction

Frequently, the UPS and substation components are designed specifically for each installation. Significant economies are possible by specifying the load as thoroughly as possible. The designers will then optimize the design for the exact combination of ac rms current, repetitive peak current, Inrush, and distortion.

Power Supply Module power factor

Power systems that were manufactured before November 1994 used a Power Supply Module that was black-colored and was manufactured by the Cherokee Company. The current Power Supply Module is silver-colored and manufactured by Bikor Corporation. The black-colored Cherokee Power Supply Module has a power factor of 0.8 over a broad range of loads. The current silver-colored Bikor Power Supply Module has a power factor-correction feature incorporated into the design. Its power factor is greater than 0.95.

3.8 Automatic Bypass Switch

Introduction

An automatic bypass switch is often included in the power source to allow instantaneous transfer between two ac sources. Both the primary and backup power sources should be of instrument grade. Transfer to a substandard power source in an emergency does not always happen.

Transfer time requirement

The switch transfer time should be less than 10 milliseconds in both directions. This allows maintenance personnel to freely operate the switch without disturbing the operation. Additional discussion about transfer switches can be found in the "Backup Strategy" subsection of "Power Requirements."

3.9 Surge Protection

Introduction

Any instrument power distribution panel should have some transient protection. See Figure 28 and Figure 29.

Protector usefulness

A protector is useful under the following conditions:

- Should an ac feeder develop a short circuit, its circuit breaker may not open until peak currents have reached 10,000 amperes or more. The sudden interruption of such a large current when a circuit breaker opens injects a severe transient into the rest of the electrical system.
- HPM servicing may require that the Power Supply Modules be turned off and on. Even at normal load currents, significant transients may be generated in the distribution panel.
- Lightning may strike the facility power feeder and send significant transients into the instrument system.

Power Supply Module performance

The HPM Power Supply Module is rated to perform to all its specifications while handling a variety of transients, such as a 3 kV impulse for 8 x 20 microseconds. This provides a safety factor to allow for feed through when the surge protector operates.

MOV protector

A Metallic Oxide Varistor (MOV) is the preferred power line protector. Compared to a protector based on a spark gap, the MOV protector does not short circuit the power along with the transient. Use a 150 kA unit. Over capacity here does not carry a penalty.

A suitable protector can be purchased from Lightning Protection Corporation in Santa Barbara, CA at telephone number 805-967-5089. For a 120/240 Vac system, use Model 20208.

3.10 Grounded Conductor

Power source's grounded conductor

The power source to the HPM may or may not have a grounded conductor. This does not make any difference to the HPM as long as local electrical codes are satisfied.

3.11 Redundant Safety Grounds

Introduction

The electronics in the HPM are insulated from its enclosures. The use of metal conduits to the enclosures does not affect operation of the equipment. The placement of cabinets on metal floors, the bonding of the cabinets to metal floor supports, cabinets touching metal structure, or the purposeful installation of redundant safety grounds also does not effect the operation of the equipment.

Reference

Grounding is discussed in the *TPS System Site Planning* manual. Grounding also relates to lightning protection that is also discussed in the *TPS System Site Planning* manual.

3.12 Emergency Shutdown

Introduction

Electrical codes may require the ability to shut down system power from principal exit doors. This emergency shutdown requirement is satisfied most economically by placing the instrument power distribution panel within arm's length of the room exit. See the room layout in Figure 1.

3.13 Trays and Conduits

Raised floor

Power and signal wiring in the electronics room is easily accommodated by using a raised floor. The space underneath the floor becomes one large wiring tray. Power and signal cables for the HPM may be routed together as long as the cabling is approved for the circuits being handled. Contact or relay signals must be in shielded cables to prevent contact arcing from inducing Electromagnetic Interference (EMI) into other signal cables.

FTA cables

The 50-conductor FTA cables may exit the HPM cabinets and go to facility terminal panels that incorporate FTAs. This is discussed in detail in the *High-Performance Process Manager Installation* manual. The cables have 24 volts from a Class 1 Power Limited source as defined in the National Electrical Code (NEC) in the USA. This usually requires that the FTA cables are installed in their own trays (the connectors are too big to pull through conduit) if they leave the cabinet. The dedicated trays are considered as an extension of the HPM cabinet.

Field circuit

Field circuits are different. Most are limited in the FTAs to Class 2 Power Limited source requirements. This allows a great deal of freedom in their installation as discussed in the "Hazardous Environment Planning" section of this manual.

3. Power Requirements

3.14. Existing TPS System AC Power

Cable segregation

Refer to Figure 1 for the following discussion. Local codes may require that all wiring be placed in enclosed metal trays or conduit. It is then recommended that the circuits to an HPM be segregated into separate trays or compartment as follows:

- Power cables should be placed in one tray/conduit. The need for a cover depends on local codes. All safety ground conductors also use this tray. The ac circuit cables in this tray usually originate at the instrument ac distribution panel.
- Process signals at 30 volts ac/dc peak or less go into their own tray/conduit. This includes 1-5 V/4-20 mA, alarm contacts, UCN coaxial cables, and Master Reference Ground (MRG) cables. All signals in the tray usually originate at the 0-30 volt signal terminal panel.
- Signals above 30 volts, although normally considered as power circuits, should route through their own tray/conduit. All signals in this tray usually originate at the facility 31-250 volt signal terminal panel.
- FTA cables leaving cabinets usually need their own tray as discussed previously.

Intrinsic Safety

Intrinsic Safety systems with zener barriers or current limiting resistors usually require another conduit or tray compartment. This is covered in the "Hazardous Environment Planning" section of this manual.

3.14 Existing TPS System AC Power

Power compatibility

The power required for the HPM is compatible with power provided for all other TPS systems. Connect the HPM to existing TPS system's power when it is convenient.

4. Process Wiring

4.1 Overview

The process control signal wires connect to the High-Performance Process Manager (HPM) at the Field Termination Assemblies (FTAs). The type of FTA selected is dependent upon the process equipment. There are 16 types of FTAs to choose from. Some of the FTA types support IOP redundancy. Some FTA types provide Galvanic Isolation and are for Intrinsically Safe applications.

ATTENTION—In the past, it was a requirement that Galvanically Isolated, Intrinsically Safe (GI/IS) FTAs had to be mounted on horizontally oriented FTA Mounting Channels in an HPM cabinet. The requirement is no longer needed because of component and design improvements.

Galvanically Isolated FTAs can now be mounted on vertically oriented FTA Mounting Channels; however, there is still a requirement that Galvanically Isolated FTAs and standard (non-Galvanically Isolated) FTAs, and the wiring to them, be properly separated in the cabinet.

Any FTA Mounting Channels on which Galvanically Isolated FTAs will be mounted must be installed in an inverted (upside down from the normal) position.

FTA mounting

FTAs are installed on FTA Mounting Channels that are located in the front of a single-access HPM cabinet, and in the rear and/or front of a dual-access cabinet. The number of FTA Mounting Channels that can be accommodated in a cabinet is dependent upon whether the cabinet is single access or dual access, and whether standard or wide FTA Mounting Channels are installed. See "Model MU-CBSM01/MU-CBDM01 Cabinets" section or "Model MU-CBSX01/MU-CBDX0 Cabinets" section for a detailed description of the cabinets and their FTA Mounting Channels.

The field wiring to Galvanically Isolated FTAs must be routed such that a strict 2-inch minimum separation is maintained between any other wiring, cable, or electrical part, or be separated by a divider that is grounded metal or nonconductive material.

FTA Mounting Channels

FTA Mounting Channels are available in two sizes, standard and wide, to better accommodate the amount of process control wiring that connects to the FTAs. The FTA Mounting Channels provide both a mounting surface for the FTAs and dual channels (troughs) to route the FTA to IOP cabling, and the process control wiring. The standard (non-Galvanically Isolated) FTA to IOP or Power Distribution Assembly cabling is routed in the right channel, and the process control wiring is routed in the left channel. The reverse is true for Galvanically Isolated FTAs because the FTA Mounting Channel is installed in an inverted position.

Power Distribution and Marshalling Panels

The model MU/MC-GPRD02 Power Distribution Panel can be mounted on any FTA Mounting Channel that is installed in the normal or inverted position; however, proper wiring separation must be observed.

The model MU/MC-GMAR52 Marshalling Panel must not be mounted on an FTA Mounting Channel that has a Galvanically Isolated FTA mounted on it.

4.2 FTA Selection

Overview

The FTA has circuits that convert the process control signals to voltage and current levels that can be accommodated by the High-Performance Process Manager electronics. There are a number of FTA types with each type designed for a specific type of signal.


Rules

Rules for selecting the appropriate FTAs, installing, configuring, and the connections to the associated IOP and the process control signals, are discussed in detail in the *Process Manager I/O Installation* manual.

FTA sizes


The assembly layouts of three physical sizes of FTAs are illustrated in the following figure.

Figure 30 Field Termination Assembly (FTA) Sizes

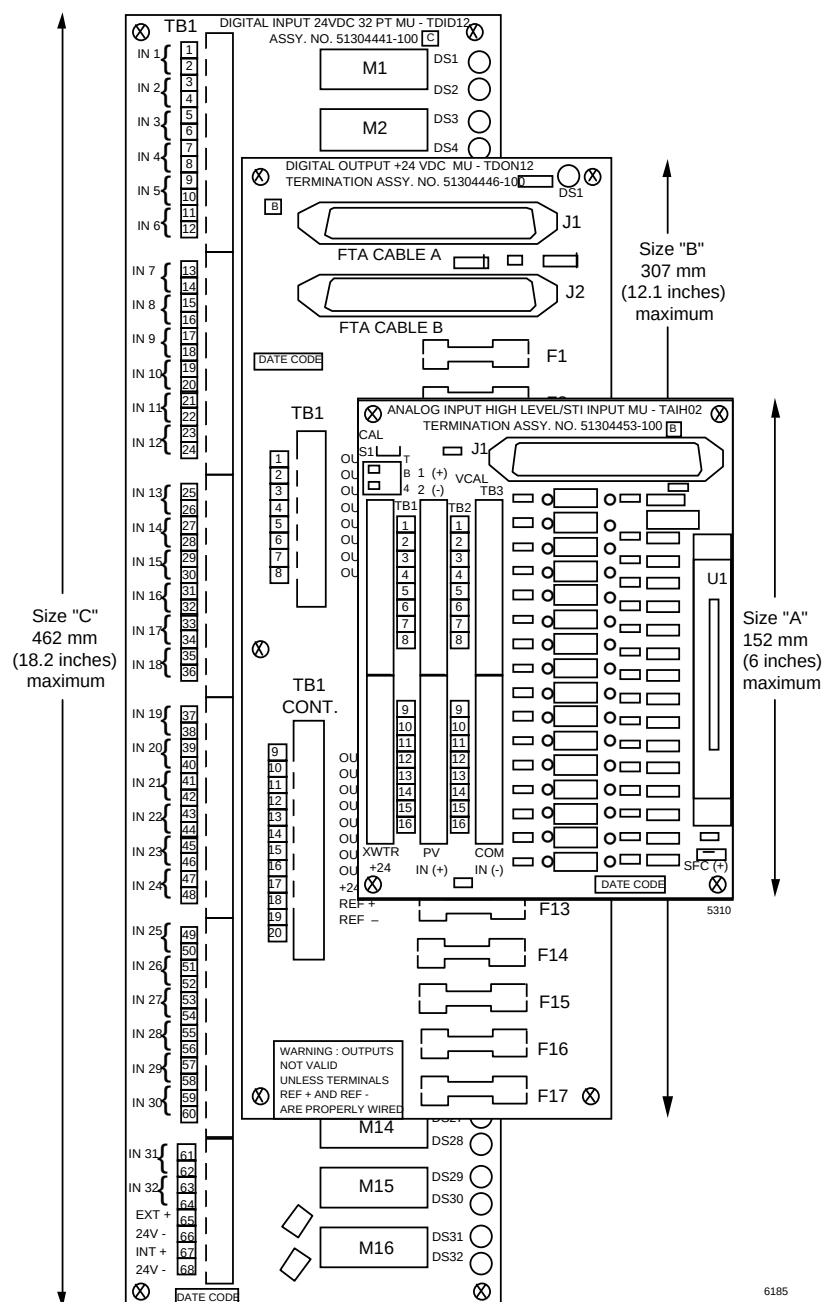

As a function of the type and number of process control signals the FTA interfaces, FTAs are produced in three different sizes, size A, B, and C. The size dimensions are shown in the following figure.

Figure 31 Field Termination Assembly (FTA) Mounting Dimensions

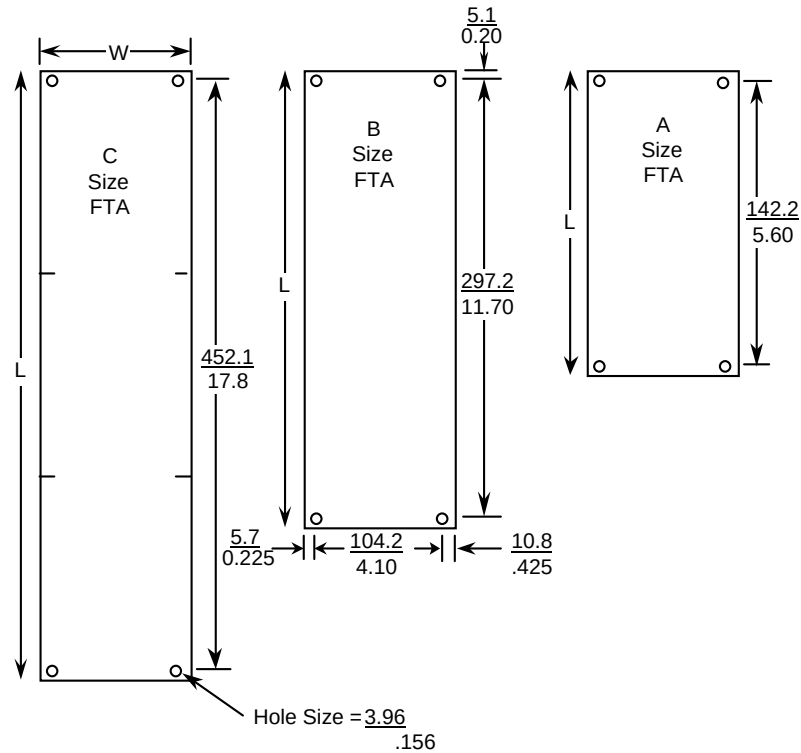

Size	Length L	Width W
A	152.4/6.00	120.7/4.75
B	307.3/12.10	120.7/4.75
C	462.3/18.20	120.7/4.75

All measurements are in: millimeters
inches

Note:

The center of the mounting holes is a constant distance from the edge of the assembly board for all three FTA sizes as shown for size B.

Sizes B and C, depending on the type of FTA, can have additional mounting holes along the length (sides) of the FTA. The additional mounting holes all fall on a grid established for mounting adjacent A-size FTAs.

2770

FTA types

Because of FTA size differences, the number of FTAs that can be installed in a cabinet will vary. Table 8 and Table 9 are lists of FTAs and support assemblies by model number. When appropriate, the FTA's or supporting assembly's field terminal connector type, number of input or output signal channels, and mounting size are listed.

Standard FTAs

For standard types of FTAs, the terminal connector types are compression (C), nonremovable screw (S), and removable screw (RS).

Table 8 Standard FTAs and Associated Assemblies

Model Number	Description	Terminal Type	Channels	Mounting Size
MU-TAIH02	High Level Analog Input/STI (Single IOP)	C	16	A
MU-TAIH03	High Level Analog Input (Single IOP)	C	16	A
MU-TAIH12	High Level Analog Input/STI	C	16	B
MU-TAIH13	High Level Analog Input	C	16	B
MU-TAIH22	Enhanced Power High Level Analog Input/STI	C	16	B
MU-TAIH23	Enhanced Power High Level Analog Input	C	16	B
MU-TAIH52	High Level Analog Input/STI	S	16	B
MU-TAIH53	High Level Analog Input	S	16	B
MU-TAIH62	Enhanced Power High Level Analog Input/STI	S	16	B
MU-TSTX03	Smart Transmitter Interface (Single IOP)	C	16	A
MU-TSTX13	Smart Transmitter Interface	C	16	B
MU-TSTX53	Smart Transmitter Interface	S	16	B
MU-TAIL02	Low Level Analog Input (Single IOP)	C	8	B
MU-TAIL03	Low Level Analog Input (Single IOP)	C	8	B
MU-TAMR02	Low Level Analog Input Multiplexer—RTD (Single IOP)	C	16	B
MU-TAMR03	Low Level Analog Input Multiplexer—RTD (Single IOP)	C	16	B
MU-TAMT02	Low Level Analog Input Multiplexer—TC—Local CJR (Single IOP)	C	16	B
MU-TAMT03	Low Level Analog Input Multiplexer—TC—Local CJR (Single IOP)	C	16	B
MU-TAMT12	Low Level Analog Input Multiplexer—TC—Remote CJR (Single IOP)	C	16	B
MU-TAMT13	Low Level Analog Input Multiplexer—TC —Remote CJR (Single IOP)	C	16	B

4. Process Wiring

4.2. FTA Selection

Model Number	Description	Terminal Type	Channels	Mounting Size
MC-GRMT01	Remote Hardened Low Level Analog Input Multiplexer TC Local CJR	S	16	Non Standard
MU-GRPA01	RHMUX GI/IS Power Adapter	C	2	A
MU-TRPA01	RHMUX GI/NI Power Adapter	C	2	B
MU-TAOX02	Analog Output (Single IOP)	C	8	A
MU-TAOX12	Analog Output	C	8	B
MU-TAOX52	Analog Output	S	8	B
MU-TAOY22	Analog Output with Standby Manual Connector	C	16	B
MC-THAO11	Analog Output with Standby Manual Connector and HART connection capability	C	16	B
MU-THAO11	Analog Output with Standby Manual Connector and HART connection capability	C	16	B
MU-TAOY23	Analog Output without Standby Manual Connector	C	16	B
MU-TAOY52	Analog Output with Standby Manual Connector	S	16	B
MU-TAOY53	Analog Output without Standby Manual Connector	S	16	B
MU-TDID12	24 Vdc Digital Input	C	32	C
MU-TDID52	24 Vdc Digital Input	S	32	C
MU-TDID72	24 Vdc Digital Input (Single IOP)	RS	32	C
MU-TDIY22	24 Vdc Digital Input	C	32	B
MU-TDIY62	24 Vdc Digital Input	S	32	B
MU-TDIA12	120 Vdc Digital Input	C	32	C
MU-TDIA52	120 Vdc Digital Input	S	32	C
MU-TDIA72	120 Vdc Digital Input (Single IOP)	RS	32	C
MU-TDIA22	240 Vdc Digital Input	C	32	C
MU-TDIA62	240 Vdc Digital Input	S	32	C
MU-TDON12	24 Vdc Nonisolated Digital Output	C	16	B
MU-TDON52	24 Vdc Nonisolated Digital Output	S	16	B
MU-TDOY22	24 Vdc Isolated Digital Output	C	32	B
MU-TDOY62	24 Vdc Isolated Digital Output	S	32	B
MU-TDOD12	3-30 Vdc Solid-State Digital Output	C	16	B
MU-TDOD13	3-30 Vdc Solid-State Digital Output	C	16	B
MU-TDOD14	3-30 Vdc Solid-State Digital Output	C	16	B

Model Number	Description	Terminal Type	Channels	Mounting Size
MU-TDOD52	3-30 Vdc Solid-State Digital Output	S	16	B
MU-TDOD53	3-30 Vdc Solid-State Digital Output	S	16	B
MU-TDOD54	3-30 Vdc Solid-State Digital Output	S	16	B
MU-TDOD22	31-200 Vdc Solid-State Digital Output	C	16	B
MU-TDOD23	31-200 Vdc Solid-State Digital Output	C	16	B
MU-TDOD62	31-200 Vdc Solid-State Digital Output	S	16	B
MU-TDOD63	31-200 Vdc Solid-State Digital Output	S	16	B
MU-TDOA12	120/240 Vac Solid-State Digital Output	C	16	B
MU-TDOA13	120/240 Vac Solid-State Digital Output	C	16	B
MU-TDOA52	120/240 Vac Solid-State Digital Output	S	16	B
MU-TDOA53	120/240 Vac Solid-State Digital Output	S	16	B
MU-TDOR12	120 Vac/125 Vdc Relay Digital Output	C	16	B
MU-TDOR52	120 Vac/125 Vdc Relay Digital Output	S	16	B
MU-TDOY23	120 Vac/125 Vdc Relay Digital Output	C	16	B
MU-TDOY63	120 Vac/125 Vdc Relay Digital Output	S	16	B
MU-TDOR22	240 Vac/125 Vdc Relay Digital Output	C	16	B
MU-TDOR62	240 Vac/125 Vdc Relay Digital Output	S	16	B
MU-TPIX12	Pulse Input	C	8	B
MU-TPIX52	Pulse Input	S	8	B
MU-TSDT02	Serial Device Interface—Toledo Weigh Cell	DB-25	1	A
MU-TSDM02	Serial Device Interface—Manual/Auto Station	C	1	A
MU-TSDU02	Serial Device Interface—UDC 6000 Modbus	C	1	A
MU-TSIA12	Serial Interface—Allen-Bradley	DB-25	1	A
MU-TSIM12	Serial Interface—Modbus RTU	C/DB-25	1	A
MU-TDPR01	Digital Input Power Distribution Assembly—16 outputs	S	N/A	A
MU-TDPR02	Digital Input Power Distribution Assembly—12 outputs	S	N/A	A
MU-TLPA02	Power Adapter (supports LLMux, SDI, and SI)	C	2	A
MU-TFBS01	Fieldbus—with power supply module	C	4	B
MU-TFBS11	Fieldbus—without power supply module	C	4	B

4. Process Wiring

4.2. FTA Selection

Galvanically Isolated FTAs

For Galvanically Isolated FTAs, the terminal connector types are compression (C) and crimp pin (CP). The Marshalling Panel has nonremovable screw (S) terminals.

Table 9 Galvanically Isolated FTAs and Associated Assemblies

Model Number	Description	Terminal Type	Channels	Mounting Size
MC-GRMT01	Remote Hardened Low Level Analog Input Multiplexer TC with Local CJR	S	16	Non Standard
MU-TRPA01 *	Remote Hardened Non-Incentive Power Adapter	C	2	B
MU-GRPA01 *	Remote Intrinsically Safe Power Adapter	C	2	A
MU-GAIH12	High Level Analog Input	C	16	B
MU-GAIH82	High Level Analog Input	CP	16	B
MU-GAIH13	High Level Analog Input/Smart Transmitter Interface	C	16	B
MU-GAIH83	High Level Analog Input/Smart Transmitter Interface	CP	16	B
MU-GAIH14	High Level Analog Input/Smart Transmitter Interface (High drive)	C	16	B
MU-GAIH84	High Level Analog Input/Smart Transmitter Interface (High drive)	CP	16	B
MU-GAIH22	High Level Analog Input (Auxiliary receiver output)	C	16	B
MU-GAIH92	High Level Analog Input (Auxiliary receiver output)	CP	16	B
MU-GAOX02	Analog Output (Single IOP)	C	8	B
MU-GAOX72	Analog Output (Single IOP)	CP	8	B
MU-GAOX12	Analog Output	C	8	B
MC-GHAO11	Analog Output with HART connection capability	C	16	B
MU-GHAO11	Analog Output with HART connection capability	C	16	B
MU-GAOX82	Analog Output	CP	8	B
MU-GDID12	24 Vdc Digital Input (Contact output to IOP)	C	32	B
MU-GDID82	24 Vdc Digital Input (Contact output to IOP)	CP	32	B
MU-GDID13	24 Vdc Digital Input (Solid-state output to IOP)	C	32	B
MU-GDID83	24 Vdc Digital Input (Solid-state output to IOP)	C	32	B
MU-GDOD12	24 Vdc Digital Output (Contact output to IOP)	C	16	B
MU-GDOD82	24 Vdc Digital Output (Contact output to IOP)	CP	16	B
MU-GDOL12	24 Vdc Digital Input (Line Fault Detection)	C	16	B
MU-GDOL82	24 Vdc Digital Input (Line Fault Detection)	CP	16	B
MU-GLFD02	Combiner Panel	N/A	N/A	A

Model Number	Description	Terminal Type	Channels	Mounting Size
MU-GPRD02	Power Distribution Assembly	N/A	N/A	A
MU-GMAR52	Marshalling Panel	S	N/A	B
MU-GFBS01	Fieldbus—with GI/IS power supply module	C	4	B

* The RHMUX Power Adapter receives +24 V power through the cable that interfaces with the RHMUX IOP, not the GI Power Distribution Assembly (MU-GPDR02). The Power Adapter provides the interface between one RHMUX IOP and two RHMUX FTAs.

4.3 Cabinet Entry

Cabinet Access



SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

The process control signal cables enter the High-Performance Process Manager cabinet through either the top or bottom.

Bottom entry

For bottom entry, the cabinet floor has sliding plates that are retained by cage nuts or Allen screws. The plates can be adjusted to vary the size of the entry slots.

Top entry

When top entry is desired, the top panel is removed by extracting the cabinet lifting eye-bolts, and then punching entry holes in the panel as needed.

CAUTION—Do not attempt to punch holes in the panel while it is still mounted on the cabinet. This may cause metal debris from the panel to drop down onto the cabinet equipment and result in electrical damage when power is applied to the equipment.

Cable clamping

For either top or bottom entry, the cables should be clamped firmly to the inside of the cabinet. The clamping should be able to withstand approximately a 45 kg (100 pound) pull. The cabinet is special because it includes a cable clamp rail at the bottom. The rail can be remounted at the top if required.

Reference

See "Model MU-CBSM01/MU-CBDM01 Cabinets" section or "Model MU-CBSX01/MU-CBDX0 Cabinets" section for illustrations that show the floor FTA cable entry points for the type of cabinet installed.

4.4 Signal Tray Wiring Compatibility

Wiring rules

The process wiring to the High-Performance Process Manager should be segregated by signal level in different trays or conduits to minimize cross talk. The segregation rules are as follows:

- Millivolt signals from electrical components, such as thermocouples, low voltage dc signals, 1-5 V/4-20 mA, and digital/contact circuits with voltages less than 30 Vac peak/DC, should be in individual cables that provide a protective shield. They can all be routed in the same cable tray. The tray can also include UCN coaxial cables, Master Reference Ground cables (Safety Ground cables in a CE Compliant installation) cables, and 50-conductor FTA to IOP cables.
- Circuits running at higher voltages, or nonshielded circuits at any voltage, belong in their own metal tray compartment or conduit. Thermocouple signals with a common mode of over 30 Vdc are also in this latter category.
- Wiring to Galvanically Isolated FTA must be separated from all other wiring.

More information can be found in the *High-Performance Process Manager Installation*, *Process Manager I/O Installation*, or the *TPS System Site Planning* manuals.

4.5 Process Wiring Termination

Compression terminals

Most of the standard types of FTAs are available with compression-type terminal connectors that mate with the FTA's connectors. To connect to an FTA with compression-type terminal connectors, the wire insulation is stripped for 75 millimeters (3/8 inch), plus or minus 3 millimeters (1/8 inch), inserted into the connector terminal, and then held by tightening the individual terminal screw. The connector accepts 0.3 to 2.5 mm² (14 to 22 AWG) stranded wire. It also accepts two 1.0 mm² (18 AWG) stranded wires, or a single 3.5 mm² (12 AWG) solid wire. Figure 16 is a illustration of a typical compression-type terminal connector.

Screw terminals

Some standard FTAs are available with screw-type terminal connectors that can accept the installation of a wire lug at the end of the wire. Refer to Figure 17 for an illustration of a typical fixed-screw type terminal connector and Figure 18 for an illustration of a typical removable-screw type terminal connector.

Pluggable connectors

The Galvanically Isolated FTAs do not have field terminal connectors mounted directly on the assembly's printed circuit board as the standard FTAs do, but instead field wires are connected to compression-type or crimp pin-type pluggable connectors that mate with the connector on the individual Galvanic Isolation Module. The compression-type connectors accommodate size 0.3 to 3.5 mm² (12 to 22 AWG) wiring, while the crimp-type terminal connectors accommodate size 0.5 to 2.5 mm² (14 to 20 AWG) wiring. Figure 19 and Figure 20 are illustrations of the crimp pin-type and compression-type pluggable terminal connectors, respectively.

FTA signal requirements

The wiring schematics, terminal connections, and other details for wiring each type of FTA are discussed in detail in the *Process Manager I/O Installation* manual. Refer to this manual for special installation requirements for some FTAs, such as the Low Level Analog Input Multiplexer, Serial Device Interface, and Serial Interface FTAs.

5. Hazardous Environment Planning

5.1 Overview

Introduction

Certain processes handle ignitable or explosive materials. Local electrical codes require that electrical devices that are located in, or connected to, such process areas have some type of control to prevent accidental ignition of the process material. Terminology used to discuss these installations is defined in this section, followed by specific requirements for the High-Performance Process Manager (HPM). For information about intrinsic safety applications, see your Honeywell Sales Engineer.

5.2 Hazardous Area Classifications

National Electrical Code

Hazardous materials are classified by a variety of terms. The terminology for the National Electrical Code (NEC) that is used in the United States is summarized in the following table. The table is not complete. Check your own local electrical codes for additional information and definition.

Table 10 Hazardous Area Classifications

NEC	Environment
Class I	Explosive gases or vapors are present.
Class II	Combustible dusts are present.
Class III	Ignitable fibers or flying's are present.
Division 1	A location where a hazardous concentration of gases or vapors exists approximately 10-100% of the time (subject to interpretation as above).
Division 1	A location where a hazardous concentration of gases or vapors exists approximately 1-10% of the time (subject to interpretation as above).
Division 2	A location where a hazardous concentration of gases or vapors exists approximately 0.1-1% of the time (subject to interpretation as above).
Nonhazardous	Hazardous vapors exist less than .1% of the time.
Group A	A hazardous atmosphere containing acetylene or other similar gases or vapors.
Group B	A hazardous atmosphere containing hydrogen or other similar gases or vapors.
Group C	A hazardous atmosphere containing ethylene or other similar gases or vapors.
Group D	A hazardous atmosphere containing pentane or other similar gases or vapors.
Group E	A hazardous atmosphere containing metal dust, such as aluminum.
Group F	A hazardous atmosphere containing carbon black, coal, or coke dust.

5. Hazardous Environment Planning

5.3. Mounting and Operating the HPM in a Division Location

Interpretation of Division 2 rules

Electrical equipment can be mounted in an NEC Division 2 location as long as it does not create a fire hazard during normal operation or routine maintenance. In other words, the equipment does not produce electrical sparks or have hot surface temperatures that are sufficient to ignite the hazardous vapors that may be present.

The equipment is allowed to produce sparks or hot surfaces if it malfunctions because there is a low probability that there will be hazardous vapors present at the same time as the malfunction.

The equipment is allowed to produce sparks or hot surfaces during repair or restorative maintenance because the personnel performing the maintenance are expected to be aware of the danger and to detect the presence of hazardous vapors before starting the work.

5.3 Mounting and Operating the HPM in a Division Location

Factory Mutual approval

Many of the devices in a High-Performance Process Manager subsystem have been examined and certified by Factory Mutual (FM) as safe for mounting in Class 1, Division 2 locations. Certain other devices such as a Field Termination Assembly (FTA) that contains unsealed relay contacts is not approved for these applications. Table 11 is a list of the approved devices. When an HPM cabinet is intended to be mounted in a Division 2 location, it must contain only the approved devices. A label that displays the FM logo is attached to the cabinet.

HPM placement considerations

The considerations for High-Performance Process Manager placement are

- Use only those High-Performance Process Manager assemblies that have been certified for safe usage in Division 2 locations, or
- Locate the High-Performance Process Manager in a nonhazardous area, or
- Purge the High-Performance Process Manager enclosure or the High-Performance Process Manager area of gasses or vapors.

HPM placement publications

In the USA, the Division 2 or nonhazardous area for placing High-Performance Process Manager enclosures can be selected by using publications such as the National Fire Protection Agency (NFPA) publication #497, *Classification of Class I Hazardous Locations for Electrical Installations in Chemical Plants*. Should no Division 2 or nonhazardous area exist, purged/pressurized enclosures or buildings are needed. Suitable purge techniques are described in local electrical code documents such as the NFPA #496, *Purged and Pressurized Enclosures for Electrical Equipment*.

Approved Division 2 area equipment (IOPs)

The following table lists the High-Performance Process Manager equipment that is approved for operation in Division 2 areas.

Table 11 HPM Equipment Approved for Use in a Division 2 Area (IOPs)

Model Number	Description
IOPs	
MU-PAIH03	High Level Analog Input (HLAI)
MU-PAIL02	Low level Analog Input (LLAI)
MU-PAOX03	Analog Output (AO)
MU-PAOY22	Analog Output (AO)
MU-PDIS12	Digital Input Sequence of Events (DI)
MU-PDIX02	Digital Input (DI)
MU-PDIY22	Digital Input (DI)
MU-PDOX02	Digital Output (DO)
MU-PDOY22	Digital Output (DO)
MU-PLAM02	Low Level Multiplexer (LLMux)
MU-PRHM01	Remote Hardened Low Level Multiplexer (RHMUX)
MU-PPIX02	Pulse Input (PI)
MU-PSDX02	Serial Device Interface (SDI)
MU-PSIM11	Serial Interface (SI)
MU-PSTX03	Smart Transmitter Interface (STIM)
MU-PFBS01	Fieldbus (FBUS)

Approved Division 2 area equipment (Standard FTA Components)

The following table lists the High-Performance Process Manager equipment that is approved for operation in Division 2 areas.

Model Number	Description
Standard FTA Components	
MU-TAIH02	High Level Analog Input/STI with compression terminals
MU-TAIH03	High Level Analog Input/STI with compression terminals
MU-TAIH12	High Level Analog Input/STI with compression terminals
MU-TAIH13	High Level Analog Input/STI with compression terminals
MU-TAIH22	High Level Analog Input/STI with compression terminals
MU-TAIH23	High Level Analog Input with compression terminals

5. Hazardous Environment Planning

5.3. Mounting and Operating the HPM in a Division Location

Model Number	Description
MU-TAIH52	High Level Analog Input/STI with screw terminals
MU-TAIH53	High Level Analog Input/STI with screw terminals
MU-TAIH62	High Level Analog Input/STI with screw terminals
MU-TAIL02	Low Level Analog Input with compression terminals
MU-TAIL03	Low Level Analog Input with compression terminals
MU-TAMR02	LLMux Analog Input RTD with compression terminals
MU-TAMR03	LLMux Analog Input RTD with compression terminals
MU-TAMT02	LLMux Analog Input TC with compression terminals
MU-TAMT03	LLMux Analog Input TC with compression terminals
MU-TAMT12	LLMux Analog Input TC with remote CJR, compression term
MU-TAMT13	LLMux Analog Input TC with remote CJR, compression term
MU-TAOX02	Analog Output with compression terminals
MU-TAOX12	Analog Output with compression terminals
MU-TAOX52	Analog Output with screw terminals
MC-THAO11	AO with HART with compress term, with Standby Manual
MU-THAO11	AO with HART with compress term, with Standby Manual
MU-TAOY22	Analog Output with compress term, with Standby Manual
MU-TAOY23	Analog Output with comp terminals, without Standby Manual
MU-TAOY52	Analog Output with screw terminals, with Standby Manual
MU-TAOY53	Analog Output with screw terminals, without Standby Manual
MU-TDIA12	120 Vac Digital Input with compression terminals
MU-TDIA22	240 Vac Digital Input with compression terminals
MU-TDIA52	120 Vac Digital Input with fixed screw terminals
MU-TDIA62	240 Vac Digital Input with fixed screw terminals
MU-TDID12	24 Vdc Digital Input with compression terminals
MU-TDID52	24 Vdc Digital Input with fixed-screw terminals
MU-TDID72	24 Vdc Digital Input with removable-screw terminals
MU-TDIY22	24 Vdc Digital Input with compression terminals
MU-TDIY62	24 Vdc Digital Input with screw terminals
MU-TDOA12	120/240 Vac Solid-State Digital Output with Comp terminals
MU-TDOA13	120/240 Vac Solid-State Digital Output with Comp terminals
MU-TDOA52	120/240 Vac Solid-State Digital Output with Screw terminals

Model Number	Description
MU-TDOA53	120/240 Vac Solid-State Digital Output with Screw terminals
MU-TDOD12	3-30 Vdc Digital Output with compression terminals
MU-TDOD13	3-30 Vdc Digital Output with compression terminals
MU-TDOD14	3-30 Vdc Digital Output with compression terminals
MU-TDOD22	31-200 Vdc Digital Output with compression terminals
MU-TDOD23	5-200 Vdc Digital Output with compression terminals
MU-TDOD52	3-30 Vdc Digital Output with screw terminals
MU-TDOD53	3-30 Vdc Digital Output with screw terminals
MU-TDOD54	3-30 Vdc Digital Output with screw terminals
MU-TDOD62	31-200 Vdc Digital Output with fixed-screw terminals
MU-TDOD63	5-200 Vdc Digital Output with screw terminals
MU-TDON12	24 Vdc Nonisolated Digital Output with compress terminals
MU-TDON52	24 Vdc Nonisolated Digital Output with screw terminals
MU-TDOY22	24 Vdc Isolated Digital Output with compression terminals
MU-TDOY62	24 Vdc Isolated Digital Output with screw terminals
MU-TDPR02	Digital Input Power Distribution Assembly
MU-TLPA02	Power Adapter (LLMux, SDI, SI)
MU-TPIX12	Pulse Input with compression terminals
MU-TPIX52	Pulse Input with screw terminals
MU-TSDM02	Serial Device Interface—Manual/Auto Station
MU-TSDT02	Serial Device Interface—Toledo Weigh Cell
MU-TSIM12	Serial Interface—Modbus EIA-232
MU-TSTX03	Smart Transmitter Interface with compression term
MU-TSTX13	Smart Transmitter Interface with compression term
MU-TSTX53	Smart Transmitter Interface with screw terminals
MU-TFBS01	Fieldbus with power supply modules
MU-TFBS01	Fieldbus without power supply modules
Galvanically Isolated FTA Components	
MC-GRMT01	RHMUX Analog Input TC with screw terminals
MU-GRPA01	RHMUX GI/IS Power Adapter with compression terminals
MU-TRPA01	RHMUX GI/NI Power Adapter with compression terminals
MU-GAIH12	High Level Analog Input with compression terminals

5. Hazardous Environment Planning

5.3. Mounting and Operating the HPM in a Division Location

Model Number	Description
MU-GAIH13	HLAI/STI with compression terminals
MU-GAIH14	HLAI/STI with compression terminals
MU-GAIH22	High Level Analog Input with compression terminals
MU-GAIH82	High Level Analog Input with crimp terminals
MU-GAIH83	HLAI/STI with crimp terminals
MU-GAIH84	HLAI/STI with crimp terminals
MU-GAIH92	High Level Analog Input with crimp terminals
MC-GHA011	Analog Output with HART and compression terminals
MU-GHA011	Analog Output with HART and compression terminals
MU-GAOX02	Analog Output with compression terminals
MU-GAOX12	Analog Output with compression terminals
MU-GAOX72	Analog Output with crimp term
MU-GAOX82	Analog Output with crimp terminals
MU-GDID12	Digital Input with compression terminals
MU-GDID13	Digital Input with compression terminals
MU-GDID82	Digital Input with crimp terminals
MU-GDID83	Digital Input with crimp terminals
MU-GDOD12	24 Vdc Digital Output with compression terminals
MU-GDOD82	24 Vdc Digital Output with crimp terminals
MU-GDOL12	24 Vdc Digital Output with compression terminals
MU-GDOL82	24 Vdc Digital Output with crimp terminals
MU-GLFD02	Combiner Panel
MU-GMAR52	Marshalling Panel
MU-GPRD02	Power Distribution Assembly
MU-GFBS01	Fieldbus—GI/IS Power Supply Module with compress term
MU-GFBS11	Fieldbus—GI/IS Power Supply Module with crimp term
I/O Link Extenders	
MU-IOLM02	Standard I/O Link Extender—Local Card File
MU-IOLX02	Standard I/O Link Extender—Remote Card File
MU-ILDX03	Long Distance I/O Link Extender
HPMM Card Sets	
MU-HPMS01	Nonredundant HPMM Card Set

Model Number	Description
MU-HPMR01	Redundant HPMM Card Sets
Card File Assemblies	
MU-HPFH01	Left 7-Slot Card File Assembly
MU-HPFH03	Left 7-Slot HPMM Card File Assembly
MU-HPFH11	Right 7-Slot Card File Assembly
MU-HPFH13	Right 7-Slot HPMM Card File Assembly
MU-HPFX02	15-Slot Card File Assembly
MU-HPFX03	15-Slot HPMM Card File Assembly
MU-HPFI03	Left 7-Slot IOP Card File Assembly
MU-HPFI13	Right 7-Slot IOP Card File Assembly
MU-HPFI23	15-Slot IOP Card File Assembly
Cables	
MU-KTPC00	FTA to IOP, DIN to DIN connector
MU-KTPC05	FTA to IOP, DIN to DIN connector—5 meters
MU-KTPC10	FTA to IOP, DIN to DIN connector—10 meters
MU-KTPC15	FTA to IOP, DIN to DIN connector—15 meters
MU-KTPC20	FTA to IOP, DIN to DIN connector—20 meters
MU-KTPC25	FTA to IOP, DIN to DIN connector—25 meters
MU-KTPC30	FTA to IOP, DIN to DIN connector—30 meters
MU-KTPC35	FTA to IOP, DIN to DIN connector—35 meters
MU-KTPC40	FTA to IOP, DIN to DIN connector—40 meters
MU-KTPC45	FTA to IOP, DIN to DIN connector—45 meters
MU-KTPC50	FTA to IOP, DIN to DIN connector—50 meters
MU-KFTA00	FTA to IOP, phone to phone connector
MU-KFTA05	FTA to IOP, phone to phone connector—5 meters
MU-KFTA10	FTA to IOP, phone to phone connector—10 meters
MU-KFTA15	FTA to IOP, phone to phone connector—15 meters
MU-KFTA20	FTA to IOP, phone to phone connector—20 meters
MU-KFTA25	FTA to IOP, phone to phone connector—25 meters
MU-KFTA30	FTA to IOP, phone to phone connector—30 meters
MU-KFTA35	FTA to IOP, phone to phone connector—35 meters
MU-KFTA40	FTA to IOP, phone to phone connector—40 meters

5. Hazardous Environment Planning

5.3. Mounting and Operating the HPM in a Division Location

Model Number	Description
MU-KFTA45	FTA to IOP, phone to phone connector—45 meters
MU-KFTA50	FTA to IOP, phone to phone connector—50 meters
MU-KFTS00	FTA to IOP, phone to phone connector
MU-KFTS05	FTA to IOP, phone to phone connector—5 meters
MU-KFTS10	FTA to IOP, phone to phone connector—10 meters
MU-KFTS15	FTA to IOP, phone to phone connector—15 meters
MU-KFTS20	FTA to IOP, phone to phone connector—20 meters
MU-KFTS25	FTA to IOP, phone to phone connector—25 meters
MU-KFTS30	FTA to IOP, phone to phone connector—30 meters
MU-KFTS35	FTA to IOP, phone to phone connector—35 meters
MU-KFTS40	FTA to IOP, phone to phone connector—40 meters
MU-KFTS45	FTA to IOP, phone to phone connector—45 meters
MU-KFTS50	FTA to IOP, phone to phone connector—50 meters
MU-KSPR00	Remote Power Distribution
MU-KSPR05	Remote Power Distribution—5 meters
MU-KSPR10	Remote Power Distribution—10 meters
MU-KSPR15	Remote Power Distribution—15 meters
MU-KSPR20	Remote Power Distribution—20 meters
MU-KSPR25	Remote Power Distribution—25 meters
MU-KSPR30	Remote Power Distribution—30 meters
MU-KSPR35	Remote Power Distribution—35 meters
MU-KSPR40	Remote Power Distribution—40 meters
MU-KSPR45	Remote Power Distribution—45 meters
MU-KSPR50	Remote Power Distribution—50 meters
MU-KFTD00	FTA to IOP, DIN to phone connector
MU-KFTD05	FTA to IOP, DIN to phone connector—5 meters
MU-KFTD10	FTA to IOP, DIN to phone connector—10 meters
MU-KFTD15	FTA to IOP, DIN to phone connector—15 meters
MU-KFTD20	FTA to IOP, DIN to phone connector—20 meters
MU-KFTD25	FTA to IOP, DIN to phone connector—25 meters
MU-KFTD30	FTA to IOP, DIN to phone connector—30 meters
MU-KFTD35	FTA to IOP, DIN to phone connector—35 meters

Model Number	Description
MU-KFTD40	FTA to IOP, DIN to phone connector—40 meters
MU-KFTD45	FTA to IOP, DIN to phone connector—45 meters
MU-KFTD50	FTA to IOP, DIN to phone connector—50 meters
MU-KDPR00	Power Distribution
MU-KDPR05	Power Distribution—5 meters
MU-KDPR10	Power Distribution—10 meters
MU-KDPR15	Power Distribution—15 meters
MU-KDPR20	Power Distribution—20 meters
MU-KDPR25	Power Distribution—25 meters
MU-KDPR30	Power Distribution—30 meters
MU-KDPR35	Power Distribution—35 meters
MU-KDPR40	Power Distribution—40 meters
MU-KDPR45	Power Distribution—45 meters
MU-KDPR50	Power Distribution—50 meters
MU-KLAM00	LLMux FTA to Power Adapter (internal to cabinet)
MU-KLX076	SDI, SI, LLMux, RHMUX FTA to Power Adapter – 76 meters (external to cabinet)
MU-KLX152	SDI, SI, LLMux, RHMUX FTA to Power Adapter – 152 meters (external to cabinet)
MU-KLX305	SDI, SI, LLMux, RHMUX FTA to Power Adapter – 305 meters (external to cabinet)
MU-KLO305	RHMUX FTA to Power Adapter – 305 meters (external to cabinet)
MU-KSX030	SDI/SI FTA to EIA-422/485—30 meters
MU-KSX152	SDI/SI FTA to EIA-422/485—152 meters
MU-KSX305	SDI/SI FTA to EIA-422/485—305 meters
MU-KGPR00	Galvanic Isolation Power Distribution Cable
MU-KGPR05	Galvanic Isolation Power Distribution Cable—5 meters
MU-KGPR10	Galvanic Isolation Power Distribution Cable—10 meters
MU-KBFT01	FTA I/O Bridge—0.5 meter
MU-KBFT02	FTA I/O Bridge—2 meters
UCN Cables	
MU-NKT002	UCN Trunk Cable—2.5 meters
MU-NKT005	UCN Trunk Cable—5 meters

5. Hazardous Environment Planning

5.3. Mounting and Operating the HPM in a Division Location

Model Number	Description
MU-NKT010	UCN Trunk Cable—10 meters
MU-NKT020	UCN Trunk Cable—20 meters
MU-NKT030	UCN Trunk Cable—30 meters
MU-NKT050	UCN Trunk Cable—50 meters
MU-NKT100	UCN Trunk Cable—100 meters
MU-NKT200	UCN Trunk Cable—200 meters
MU-NKT400	UCN Trunk Cable—400 meters
MU-NKT600	UCN Trunk Cable—600 meters
MU-NKD000	UCN Drop Cable Set (pair)
MU-NKD002	UCN Drop Cable Set—2 meters (pair)
MU-NKD005	UCN Drop Cable Set—5 meters (pair)
MU-NKD010	UCN Drop Cable Set—10 meters (pair)
MU-NKD020	UCN Drop Cable Set—20 meters (pair)
MU-NKD030	UCN Drop Cable Set—30 meters (pair)
MU-NKD040	UCN Drop Cable Set—40 meters (pair)
MU-NKD050	UCN Drop Cable Set—50 meters (pair)
MU-NTAP02	UCN 2-Drop Tap Assembly Kit (pair)
MU-NTAP04	UCN 4-Drop Tap Assembly Kit (pair)
MU-NTAP08	UCN 8-Drop Tap Assembly Kit (pair)
MU-NKTK01	UCN Drop Connector Kit/RG-11
MU-NKDK01	UCN Drop Connector Kit/RG-6
MU-NCSK01	UCN Trunk Splice Kit
Power Systems	
MU-PSSX03	Power System, single Power Supply Module (PSM)
MU-PSRX03	Power System, redundant Power Supply Modules
MU-PSRB03	Power System, redundant PSMs with Battery Pack
MU-PSSX04	Power System, single Power Supply Module
MU-PSRX04	Power System, redundant Power Supply Modules
MU-PSRB04	Power System, redundant PSMs with Battery Pack
MU-PAS121	AC Only Power System, single PSM, 120 Vac 16 A
MU-PAR121	AC Only Power System, redund PSMs, 120 Vac 16 A
MU-PAS221	AC Only Power System, single PSM, 220 Vac 16 A

Model Number	Description
MU-PAR221	AC Only Power System, redund PSMs, 220 Vac 16 A
MU-PAS111	AC Only Power System, single PSM, 120 Vac 8 A
MU-PAR111	AC Only Power System, redundant PSMs, 120 Vac 8 A
MU-PAS211	AC Only Power System, single PSM, 220 Vac 8 A
MU-PAR211	AC Only Power System, redundant PSMs, 220 Vac 8 A
Standby Manual Devices	
MU-SMAC02	Analog Output Standby Manual Device with case and cable
MU-SMDC02	Digital Output Standby Manual Device with case
MU-SMDX02	Digital Output Standby Manual Device with cable
Miscellaneous	
MU-MASX02	Manual/Auto Station model PC6001U2M040A0
Cabinet Hardware	
MU-CBDX01	Dual Access Cabinet, Rittal
MU-CBSX01	Single Access Cabinet, Rittal
MU-TMCN01	Narrow FTA Mounting Channel, Rittal
MU-TMCN02	Narrow FTA Mounting Channel with ground bar, Rittal
MU-TMCW01	Wide FTA Mounting Channel, Rittal
MU-TMCW02	Wide FTA Mounting Channel with ground bar, Rittal
MU-CBDM01	Dual Access Cabinet, NEMA 1
MU-CBSM01	Single Access Cabinet, NEMA 1
MU-TMCN11	Narrow FTA Mounting Channel, NEMA 1
MU-TMCN12	Narrow FTA Mounting Channel with ground bar, NEMA 1
MU-TMCW11	Wide FTA Mounting Channel, NEMA 1
MU-TMCW12	Wide FTA Mounting Channel with ground bar, NEMA 1
MU-TSGB01	FTA Shield Grounding Bar
Cabinet Fan Assemblies	
MU-FAN501	Cabinet Fan Assembly, 240 Vac
MU-FAN601	Cabinet Fan Assembly, 120 Vac
MU-FAN511	Cabinet Fan Assembly with alarm, 240 Vac
MU-FAN611	Cabinet Fan Assembly with alarm, 120 Vac

5.4 Field Wiring in Hazardous Locations

Nonincendive FTAs (current limiting)

Some of the Field Termination Assemblies (FTAs) that are used in the High-Performance Process Manager subsystem have resistors in the output circuits to limit the current available to the field terminals. These output circuits have been examined and certified by Factory Mutual as being Nonincendive.

This means that if the field wires are accidentally opened, shorted, or grounded and the HPM is operating normally, the wiring will not release enough energy to cause ignition in the specified flammable atmosphere.

Table 12 is a list of the analog input, analog output, and digital input FTAs that have Nonincendive outputs.

Also, when digital output circuits of a digital output FTA are current and voltage limited to suitable levels by the user, the digital output FTA can also be considered Nonincendive.

Cable and load parameters (entity parameters)

To ensure that the field circuits are incapable of igniting a specified flammable vapor, the size of the cable and load parameters must be known and controlled. Table 11 provides the maximum permissible values of the parameters for each of FTAs that are listed in the table.

Electrical code approval

In general, field wiring in Division 2 hazardous locations must be done according to local codes; however, in some jurisdictions, Nonincendive wires need not conform to the normal Division 2 wiring rules but can use wiring methods that are suitable for ordinary locations.

See ANSI/ISA S12.12, the section “Electrical Equipment For Use In Class I, Division 2 Hazardous [Classified] Locations.”

Current limiting resistor value

The value of the resistors on the listed FTAs were selected to assure worst case short circuit currents in a hazardous area of less than 150 milliamps for normal operating equipment. According to NFPA publication #493, *Intrinsically Safe Apparatus for Use in Division 1 Hazardous Locations*, 150 milliamps from a 24 Vdc source is below the ignition threshold in a resistive circuit for gases in Groups A through D environments.

Nonincendive FTAs

Wiring to the FTAs that are listed in the following table has been approved as Nonincendive wiring by Factory Mutual Research, Inc. When the wiring is opened, shorted, or grounded and the High-Performance Process Manager is in its normal operating state, the wiring cannot release enough energy to cause the ignition of a flammable atmosphere.

Table 12 Nonincendive FTA Types

FTA Type	FTA Models
Low Level Analog Input	MU/MC-TAIL01 MU/MC-TAIL02 MU/MC-TAIL03

FTA Type	FTA Models
High Level Analog Input	MU/MC-TAIH01 MU/MC-TAIH02 MU/MC-TAIH03 MU/MC-TAIH12 MU/MC-TAIH13 MU/MC-TAIH52 MU/MC-TAIH53
Smart Transmitter Interface Input	MU/MC-TSTX03 MU/MC-TSTX13 MU/MC-TSTX53
Pulse Input	MU/MC-TPIX12 MU/MC-TPIX52
4-20 mA Analog Output	MU/MC-THAO11 (HART) MU/MC-TAOX01 MU/MC-TAOX02 MU/MC-TAOX12 MU/MC-TAOX52 MU/MC-TAOY22 MU/MC-TAOY23 MU/MC-TAOY52 MU/MC-TAOY53
24 Vdc Digital Input	MU/MC-TDID11 MU/MC-TDID12 MU/MC-TDID52 MU/MC-TDID72 MU/MC-TDIY22 MU/MC-TDIY62
Fieldbus	MU/MC-TFBS01 MU/MC-TFBS11

Cable size and load parameters

To ensure that the circuits are incapable of igniting a specific flammable atmosphere, the size of cable and load parameters must be controlled. The maximum values are given in the following table.

Table 13 FTA Cable and Load Parameters

Parameter	Maximum Allowable Values					
FTA Model Number (MU- or MC-)	TPIX12 TPIX52	TAIL01 TAIL02 TAIL03	TAIH01 TAIH02 TAIH03 TAIH12 TAIH13 TAIH52 TAIH53 TSTX03 TSTX13 TSTX53	TAIH22 TAIH23 TAIH62	TAOX01 TAOX02 TAOX12 TAOX52 TAOY22 TAOY23 TAOY52 TAOY53	TDID12 TDID52 TDID72
VOC*—Maximum Open Circuit Voltage	26 Vdc	9 Vdc	26 Vdc	26 Vdc	26 Vdc	30 Vdc
ISC*—Maximum Short Circuit Current	63 mA	0.3 mA	186 mA	40 mA	22 mA	152 mA

5. Hazardous Environment Planning

5.4. Field Wiring in Hazardous Locations

Parameter	Maximum Allowable Values					
C_a —Maximum Allowable Connected Cable Capacitance	0.4 μ F	15 μ F	0.4 μ F	0.4 μ F	0.4 μ F	0.25 μ F
L_a —Maximum Allowable Cable Inductance	17 mH	1 H	2.3 mH	35 mH	130 mH	3 mH
C_n —Maximum Allowable Connected Capacitance (Cable + Load)	0.4 μ F	15 μ F	0.4 μ F	0.4 μ F	0.4 μ F	0.25 μ F
L_n —Maximum Allowable Connected Inductance (Cable + Load)	17 mH	1 H	150 mH	150 mH	130 mH	400 mH

* Controlled by the High-Performance Process Manager design.



ATTENTION

The data in Table 13 is controlled by the Honeywell drawing 51109499 and cannot be changed without the approval of Factory Mutual Research, Inc.

6. Corrosion Protection Planning

6.1 Overview

Introduction

Corrosion is one of the leading causes of electronic printed circuit assembly board failure in harsh environments. Conformal coating of the assembly's printed circuits and components provides a solution for the problem. Conformally coated assemblies are completely covered with a thin layer of a special plastic material that is resistant to the corrosive effects of humidity and most chemical gases.

The following table recommends the minimum equipment requirement that is based on environmental classification tests at the site where the equipment is installed.

Table 14 Environment Minimum Equipment Requirement

Environment Classification	Minimum Equipment Requirement
Mild (G1)	Non-conformally coated
Moderate (G2)	Conformally coated
Harsh (G3)	Conformally coated
Severe (Gx)	Conformally coated and installed in an environmentally hardened enclosure

G3 rating

All coated assemblies will withstand the effects of a G3 (harsh) rated environment. Uncoated boards are rated for mild (G1) environments. A harsh environment is defined by ANSI/ISA-S71.04-1985, "Environmental Conditions for Process Measurement and Control Systems: Airborne Contaminates."

Environmental harshness levels

The following table defines environmental harshness levels for airborne contaminants.

Table 15 Harsh Environment Definitions from ANSI/ISA-S71.04-1985

Severity Level	G1 (Mild)	G2 (Moderate)	G3 (Harsh)	Gx (Severe)
Copper Reactivity Level (Angstroms/Month)	<300	<1000	<2000	≥ 2000
Contaminant Gas	Concentration (Parts/Billion)			
Group A H ₂ S	<3	<10	<50	≥ 50
SO ₂ , SO ₃	<10	<100	<300	≥ 300
Cl ₂	<1	<2	<10	≥ 10
NO _x	<50	<125	<1250	≥ 1250
Group B HF	<1	<2	<10	≥ 10
NH ₃	<500	<10,000	<25,000	≥ 25,000

6. Corrosion Protection Planning

6.1. Overview

Severity Level	G1 (Mild)	G2 (Moderate)	G3 (Harsh)	Gx (Severe)
O ₃	<2	<25	<100	≥ 100


Gas concentrations

Gas concentrations are for reference purposes only and are believed to approximate the reactivity levels, assuming relative humidity is less than 50%. For each 10% increase in relative humidity above 50%, or change in relative humidity by greater than 6%/hour, the severity level can be expected to increase by one level.

Conformal coating symbol

Conformally coated assemblies can be easily identified by a distinctive symbol located on the assembly. The symbol consists of a “C” that is surrounded by a solid diamond. The diamond universally symbolizes hardness. The symbol is intended to represent the hardened protection against harsh environments that conformal coating provides. The following figure illustrates the symbol on the faceplate of an Analog Output IOP.

Figure 32 Conformal Coating Symbol

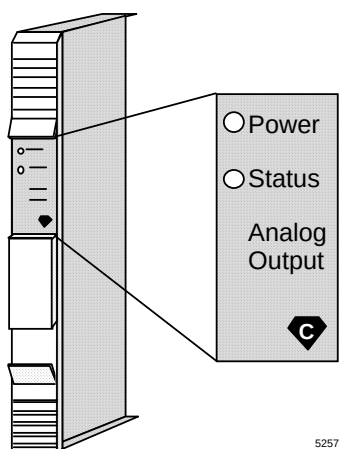

Harsh Environment Enclosure

For those users who want to locate their IOPs closer to the process and outside the control room in a severe environment, another level of protection is required. Honeywell offers the availability of a harsh environment IOP enclosure that is capable of withstanding a Gx rated atmosphere. The product includes a sealed NEMA 4x stainless steel enclosure, a special 7-Slot card file with fans for air circulation to house conformally coated IOP and I/O Link Extender cards, and a 24 Vdc Power System that uses components found in the HPM AC Only Power System. There is no active external cooling required for external ambient temperatures of up to 60°C. The IOPs interface with the HPMM(s) in the control room by fiber optic I/O Link Extender. Standard IOP to FTA cables that are enclosed in sealed conduit provide the IOP to associated FTA interface. The FTAs are mounted in sealed NEMA 4x stainless steel enclosures that are provided by the user.

6.2 Model Numbers

Model numbers

Model numbers for conformally coated assemblies and upgrade kits are identified by a “MC” prefix, instead of the normal “MU” prefix for a noncoated assembly. An example would be a conformally coated Low Level Analog Input IOP. Its model number is MC-PAIL02. The model number of the noncoated version of the IOP is MU-PAIL02.

ATTENTION—The High Level Analog Input and Analog Output IOPs are available only as conformally coated assemblies. There are no noncoated versions available. The model numbers are MC-PAIH03 and MC-PAOX03, respectively.

Assembly numbers

Typically, the part number’s tab for a conformally coated assembly has the format “x5x” (non-CE Compliant) or “x7x” (CE Compliant), where “x” can be any number, 1 through 9. This provides a standard method of identifying conformally coated assemblies.

Conformally coated model list

The following table is a list of conformally coated High-Performance Process Manager assemblies.

Table 16 Conformally Coated Assembly Model Numbers

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
IOPs			
MC-PAIH03	N/A	51304754-150	High Level Analog Input (HLAI)
MC-PAIL02	N/A	51304481-150	Low level Analog Input (LLAI)
MC-PAOX03	51304672-150	51309152-175	Analog Output (AO)
MC-PAOY22	N/A	80363969-150	Analog Output (AO)
MC-PDIS12	N/A	51402625-175	Digital Input Sequence of Events (DI)
MC-PDIX02	N/A	51304485-150	Digital Input (DI)
MC-PDIY22	N/A	80363972-150	Digital Input (DI)
MC-PDOX02	N/A	51304487-150	Digital Output (DO)
MC-PDOY22	N/A	80363975-150	Digital Output (DO)
MC-PLAM02	N/A	51304362-150	Low Level Multiplexer (LLMux)
MC-PRHM01	N/A	51404109-175	Remote Hardened Low Level Multiplexer (RHMUX)
MC-PPIX02	N/A	51304386-150	Pulse Input (PI)
MC-PSDX02	N/A	51304362-250	Serial Device Interface (SDI)
MC-PSIM11	N/A	51304362-350	Serial Interface (SI)
MC-PSTX02	51304516-150	N/A	Smart Transmitter Interface (STI)

6. Corrosion Protection Planning

6.2. Model Numbers

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-PSTX03	N/A	51304516-250	Smart Transmitter Interface Multivariable (STIM)
MC-PFBS01	N/A	51309510-175	Fieldbus (FBUS)
Standard FTAs			
MC-TAIH02	51304453-150	N/A	High Level Analog Input/STI with compression term
MC-TAIH03	N/A	51309136-175	High Level Analog Input with compression terminals
MC-TAIH12	51304337-150	N/A	High Level Analog Input/STI with compression term
MC-TAIH13	N/A	51309138-175	High Level Analog Input with compression terminals
MC-TAIH22	80366195-150	N/A	High Level Analog Input/STI with compression term
MC-TAIH23	N/A	80366195-175	High Level Analog Input with compression terminals
MC-TAIH52	51304337-250	N/A	High Level Analog Input/STI with screw terminals
MC-TAIH53	N/A	51309138-275	High Level Analog Input with screw terminals
MC-TAIH62	80366192-150	N/A	High Level Analog Input/STI with screw terminals
MC-TSTX03	N/A	51309140-175	Smart Transmitter Interface with Compression Term
MC-TSTX13	N/A	51309142-175	Smart Transmitter Interface with Compression Term
MC-TSTX53	N/A	51309142-275	Smart Transmitter Interface with Screw Terminals
MC-TAIL02	51304437-150	N/A	Low Level Analog Input with compression terminals
MC-TAIL03	N/A	51309202-175	Low Level Analog Input with compression terminals
MC-TAMR02	51304477-150	N/A	LLMux Analog Input RTD with compression terminals
MC-TAMR03	N/A	51309218-175	LLMux Analog Input RTD with compression terminals
MC-TAMT02	51401491-150	N/A	LLMux Analog Input TC with compression terminals
MC-TAMT03	N/A	51301491-175	LLMux Analog Input TC with compression terminals
MC-TAMT12	51401573-150	N/A	LLMux Analog Input TC with remote CJR, comp term
MC-TAMT13	N/A	51301573-175	LLMux Analog Input TC with remote CJR, comp term
MC-TAOX02	51304476-150	51304476-175	Analog Output with compression terminals
MC-TAOX12	51304335-150	51304335-175	Analog Output with compression terminals
MC-TAOX52	51304335-250	51304335-275	Analog Output with screw terminals
MC-THAO11	N/A	51309542-175	Analog Output with HART and compression terminals
MC-TAOY22	80366177-150	80366177-175	Analog Output with compression terminals
MC-TAOY23	80366177-250	80366177-275	Analog Output with compression terminals
MC-TAOY52	80364007-150	80364007-175	Analog Output with screw terminals
MC-TAOY53	80364007-250	80364007-275	Analog Output with screw terminals

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-TDIA12	51304439-150	51304439-175	120 Vac Digital Input with compression terminals
MC-TDIA52	51304439-250	51304439-275	120 Vac Digital Input with fixed-screw terminals
MC-TDIA72	51303930-150	N/A	120 Vac Digital Input with removable-screw term
MC-TDIA22	51304431-150	51304431-175	240 Vac Digital Input with compression terminals
MC-TDIA62	51304431-250	51304431-275	240 Vac Digital Input with fixed-screw terminals
MC-TDID12	51304441-150	51304441-175	24 Vdc Digital Input with compression terminals
MC-TDID52	51304441-250	51304441-275	24 Vdc Digital Input with fixed-screw terminals
MC-TDID72	51303928-150	N/A	24 Vdc Digital Input with removable-screw terminals
MC-TDIY22	80366180-150	80366180-175	24 Vdc Digital Input with compression terminals
MC-TDIY62	80366180-250	80366180-275	24 Vdc Digital Input with fixed-screw terminals
MC-TDOA13	51304648-150	51304648-175	120/240 Vac Solid-State Digital Output w/comp term
MC-TDOA53	51304648-250	51304648-275	120/240 Vac Solid-State Digital Output w/screw term
MC-TDOD13	51304650-150	N/A	3-30 Vdc Digital Output with compression terminals
MC-TDOD14	N/A	51309153-175	3-30 Vdc Digital Output with compression terminals
MC-TDOD22	51304428-150	N/A	31-200 Vdc Digital Output with compression terminals
MC-TDOD23	N/A	51309154-175	31-200 Vdc Digital Output with compression terminals
MC-TDOD53	51304650-250	N/A	3-30 Vdc Digital Output with screw terminals
MC-TDOD54	N/A	51309153-275	3-30 Vdc Digital Output with screw terminals
MC-TDOD62	51304428-250	N/A	31-200 Vdc Digital Output with screw terminals
MC-TDOD63	N/A	51309154-275	31-200 Vdc Digital Output with screw terminals
MC-TDON12	51304446-150	N/A	24 Vdc Nonisolated Digital Output with comp term
MC-TDON52	51304446-250	N/A	24 Vdc Nonisolated Digital Output with screw term
MC-TDOY22	80366183-150	80366183-175	24 Vdc Isolated Digital Output with compression term
MC-TDOY62	80364013-150	80364013-175	24 Vdc Isolated Digital Output with screw terminals
MC-TDOR12	51304443-150	51309148-175	120 Vac/125 Vdc Relay Digital Output with comp term
MC-TDOR52	51304443-250	51309148-275	120 Vac/125 Vdc Relay Digital Output with screw term
MC-TDOR22	51304427-150	51309150-175	240 Vac/125 Vdc Relay Digital Output with comp term
MC-TDOR62	51304427-250	51309150-275	240 Vac/125 Vdc Relay Digital Output with screw term

6. Corrosion Protection Planning

6.2. Model Numbers

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-TDOY23	80366189-150	80366189-175	240 Vac/125 Vdc Relay Digital Output with comp term
MC-TDOY63	80366185-150	80366185-175	240 Vac/125 Vdc Relay Digital Output with screw term
MC-TDPR02	51304425-150	51304425-175	Digital Input Power Distribution Assembly
MC-TLPA02	51304467-150	51309204-175	Power Adapter
MC-TPIX12	51304084-150	51304084-175	Pulse Input with compression terminals
MC-TPIX52	51304084-250	51304084-275	Pulse Input with screw terminals
MC-TSDM02	51303932-252	N/A	Serial Device Interface—Manual/Auto Station
MC-TSDT02	51303932-251	N/A	Serial Device Interface—Toledo Weigh Cell
MC-TSDU02	51303932-253	N/A	Serial Device Interface—UDC 6000 Modbus
MC-TSIA12	51303932-453	51303932-478	Serial Interface—Allen-Bradley
MC-TSIM12	51303932-451	51303932-476	Serial Interface—Modbus EIA-232
MC-TFBS01	N/A	51309254-175	Foundation Fieldbus with power supply module
MC-TFBS11	N/A	51309254-375	Foundation Fieldbus without power supply module
Galvanically Isolated FTAs			
MC-GRMT01	N/A	51404106-175	RHMUX Analog Input with local CJR, screw term
MC-GRPA01	N/A	51304724-175	RHMUX GI/IS Power Adapter with compression term
MC-TRPA01	N/A	51304722-175	RHMUX GI/NI Power Adapter with compression term
MC-GAIH12	51304636-150	N/A	High Level Analog Input with compression terminals
MC-GAIH13	51304718-150	51304718-175	High Level Analog Input/STI with compression term
MC-GAIH14	51304730-150	51304730-175	High Level Analog Input/STI with compression term
MC-GAIH22	51304748-150	51304748-175	High Level Analog Input with compression terminals
MC-GAIH82	51304636-350	N/A	High Level Analog Input with crimp terminals
MC-GAIH83	51304718-350	51304718-375	High Level Analog Input/STI with crimp terminals
MC-GAIH84	51304730-350	51304730-375	High Level Analog Input/STI with crimp terminals
MC-GAIH92	51304748-350	51304748-375	High Level Analog Input with crimp terminals
MC-GAOX02	51304638-150	51304638-175	Nonredundant Analog Output with compression term
MC-GAOX12	51304638-250	51304638-275	Redundant Analog Output with compression terminal
MC-GAOX72	51304638-350	51304638-375	Nonredundant Analog Output with crimp terminals
MC-GHAO11	N/A	51309540-175	Redundant Analog Output with HART and compression terminals
MC-GAOX82	51304638-750	51304638-775	Redundant Analog Output with crimp terminals

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-GDID12	51304640-150	51304640-175	Digital Input with compression terminals
MC-GDID13	51304728-150	51304728-175	Digital Input with compression terminals
MC-GDID82	51304640-350	51304640-375	Digital Input with crimp terminals
MC-GDID83	51304728-350	51304728-375	Digital Input with crimp terminals
MC-GDOD12	51304642-150	51304642-175	24 Vdc Digital Output with compression terminals
MC-GDOD82	51304642-350	51304642-375	24 Vdc Digital Output with crimp terminals
MC-GDOL12	51304736-150	51304736-175	24 Vdc Digital Output with compression terminals
MC-GDOL82	51304736-350	51304736-375	24 Vdc Digital Output with crimp terminals
MC-GLFD02	51304732-150	51304732-175	Combiner Panel
MC-GMAR52	51304646-150	51309156-175	Marshalling Panel
MC-GPRD02	51304644-150	51304644-175	Power Distribution Assembly
MC-GFBS01	N/A	51309254-275	Foundation Fieldbus with GI/IS mod and comp term
MC-GFBS11	N/A	51309254-475	Foundation Fieldbus with GI/IS mod and crimp term
I/O Link Extender			
MC-IOLM02			Standard I/O Link Extender—Local Card File
	N/A	51304419-150	Standard I/O Link Extender Card
	N/A	51201557-350	Standard I/O Link Extender Coupler
MC-IOLX02			Standard I/O Link Extender—Remote Card File
	N/A	51304419-150	Standard I/O Link Extender Card
	N/A	51201557-150	Standard I/O Link Extender Coupler
MC-ILDX03			Long Distance I/O Link Extender
	N/A	51304532-150	Long Distance I/O Link Extender Card
	N/A	51309208-150	Long Distance I/O Link Extender Coupler
Card Files			
MC-HPFH01	51404125-150	N/A	Left 7-Slot Card File Assembly
MC-HPFH03	N/A	51404191-175	Left 7-Slot HPMM Card File Assembly
MC-HPFH11	51404126-150	N/A	Right 7-Slot Card File Assembly
MC-HPFH13	N/A	51404192-175	Right 7-Slot HPMM Card File Assembly
MC-HPFX02	51404127-150	N/A	15-Slot Card File Assembly
Card Files			
MC-HPFX03	N/A	51404193-175	15-Slot HPMM Card File Assembly

6. Corrosion Protection Planning

6.2. Model Numbers

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-HPFI03	N/A	51404191-275	Left 7-Slot IOP Card File Assembly
MC-HPFI13	N/A	51404192-275	Right 7-Slot IOP Card File Assembly
MC-HPFI23	N/A	51404193-275	15-Slot IOP Card File Assembly
HPMM Card Sets			
MC-HPMS01			Nonredundant HPMM Card Set
	N/A	51301635-150	High-Performance Comm/Control Card
	N/A	51301642-150	High-Performance I/O Link Card
	N/A	51302573-150	HPM UCN Interface Module
MC-HPMR01			Redundant HPMM Card Sets
	N/A	51301635-150	High-Performance Comm/Control Card (2)
	N/A	51301642-150	High-Performance I/O Link Card (2)
	N/A	51302573-150	HPM UCN Interface Module (2)
	N/A	51201667-100	Redundancy Cable
Power System			
MC-PSSX03	N/A	51401217-450	Power System, single Power Supply Module
MC-PSSX04	N/A	51404174-175	Power System, single Power Supply Module
MC-PSRX03	N/A	51401217-550	Power System, redundant Power Supply Modules
MC-PSRX04	N/A	51404174-275	Power System, redundant Power Supply Modules
MC-PSRB03	N/A	51401217-650	Power System, redundant PSMs with Battery Pack
MC-PSRB04	N/A	51404174-375	Power System, redundant PSMs with Battery Pack
MC-PAS121	51401140-150	N/A	AC Only Power System, single PSM, 115 Vac 16 A
MC-PAR121	51401140-250	N/A	AC Only Power System, redund PSMs, 115 Vac 16 A
MC-PAS221	51401140-350	N/A	AC Only Power System, single PSM, 230 Vac 16 A
Cabinet Fan Assemblies			
MC-PAR221	51401140-450	N/A	AC Only Power System, redund PSMs, 230 Vac 16 A
MC-PAS111	51401140-550	N/A	AC Only Power System, single PSM, 115 Vac 8 A
MC-PAR111	51401140-650	N/A	AC Only Power System, redund PSMs, 115 Vac 8 A
MC-PAS211	51401140-750	N/A	AC Only Power System, single PSM, 230 Vac 8 A
MC-PAR211	51401140-850	N/A	AC Only Power System, redund PSMs, 230 Vac 8 A
Standby Manual Devices			
MC-SMAC02	N/A	51401277-250	Analog Output Standby Manual Device w/case, cable

Model Number	Non CE Compliant Part Number	CE Compliant Part Number	Description
MC-SMDC02	N/A	51304526-150	Digital Output Standby Manual Device w/case, cable
MC-SMDX02	N/A	51304527-150	Digital Output Standby Manual Device with cable
MC-FAN511			Cabinet Fan Assembly with alarm, 240 Vac
	N/A	51303940-250	Cabinet Fan Assembly with alarm, 240 Vac
MC-FAN611			Cabinet Fan Assembly with alarm, 120 Vac
	N/A	51303940-150	Cabinet Fan Assembly with alarm, 120 Vac
Miscellaneous			
MC-CBSS01			NEMA 4x Stainless Steel Enclosure (.6 m W x .5 m D x .6 m H) with Left 7-Slot card file
MC-CBSS02			NEMA 4x Stainless Steel Enclosure (.6 m W x .5 m D x .6 m H) with Right 7-Slot card file

7. CE Compliance

7.1 Overview

Introduction

To meet CE Compliance directives, card files, High-Performance Process Manager Module (HPMM) cards, Field Termination Assemblies (FTAs), Power Systems, and cables, namely IOP to FTA cables, power cables, and I/O Link Interface cables, are available and identified either by model number or by the assembly part number.

Hardware differences

Where applicable, this section describes general differences between the CE Compliant hardware and non-CE Compliant hardware.

Also discussed are the hardware combinations and rules that must be considered for CE Compliance.

CE Compliant hardware identification

Finally, where applicable, each subsection that is devoted to a particular type of hardware identifies the CE Compliant and the non-CE Compliant hardware.

Master Reference Ground

The use of a Master Reference Ground (MRG), which is separate from Safety Ground, is not acceptable for a CE Compliant installation. References to Master Reference Ground must be ignored and a single Safety Ground must be substituted.

CE Compliant installation

Only recommended CE Compliant hardware, cabling, and practices must be considered for a CE Compliant installation. Install only a single ground system.

7.2 Card Files

Introduction

All three card file types are available for CE Compliant applications. The CE Compliant models have three unique features. They are

- Filtered backpanel IOP connectors
- IOP connector ground panel(s)
- Rear backpanel shield

Unlike the non-CE Compliant 7-Slot and 15-Slot card files that are not dedicated HPMM or IOP card files, the CE-Compliant 7-Slot and 15-Slot card files are mechanically either HPMM or IOP card files. 7-Slot or 15-Slot IOP card files will not accept an HPMM card set.

Backpanel ground plane

The backpanel ground panel provides a ground plane for the body of the IOP connectors. The body of the connector in turn provides ground for the IOP to FTA cable shield when mated with the IOP connector.

Rear backpanel shield panel

Like the UCN connector shield enclosure, the backpanel shield panel provides EMI protection at the back of the backpanel.

IOP to FTA cables

Both the model MU-KFTAxx and MU-KFTSxx IOP to FTA cables can be used with both the CE Compliant and non-CE Compliant card files. However, only the CE Compliant card file models and the model MU-KFTSxx IOP to FTA cables together are acceptable as CE Compliant.

Model list

The following table lists the model numbers of the CE Compliant card files. All models are available without conformal coating (MU) and with conformal coating (MC). The PM/APM technology IOP Only card file is also included because it may exist when a PM or APM is upgraded to an HPM.

Table 17 Card Files

Card File Description	Non-Conformally Coated Model Number	Conformally Coated Model Number
Left 7-Slot HPMM	MU-HPFH03	MC-HPFH03
Right 7-Slot HPMM	MU-HPFH13	MC-HPFH13
15-Slot HPMM	MU-HPFX03	MC-HPFX03
Left 7-Slot IOP	MU-HPFI03	MC-HPFI03
Right 7-Slot IOP	MU-HPFI13	MC-HPFI13
15-Slot IOP	MU-HPFI23	MC-HPFI23
IOP Only (PM/APM)	MU-IOFX03	MC-IOFX03

Conversion kit

A model MU-ZPFI03 upgrade kit will convert a 7-Slot or 15-Slot HPMM card file to an IOP card file.

7.3 HPMM Cards

Introduction

The High-Performance Process Manager Module (HPMM) card set is CE Compliant.

Conformal coating

The HPMM card set is available with and without conformal coating.

7.4 IOPs

Introduction

Only the model MU-PAOX03 Analog Output IOP is available in a CE Compliant and non-CE Compliant version. All other IOP models are CE Compliant only.

Conformal coating

All IOP cards are available with and without conformal coating.

Nonconformally coated IOPs

The following table lists the model numbers of the CE Compliant and non-CE Compliant IOP cards that are not conformally coated. Model numbers and part numbers identify the assemblies.

Table 18 IOPs—Nonconformally Coated

IOP Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
LLAI	MU-PAIL02	N/A	51304481-100
LLMux	MU-PLAM02	N/A	51304362-100
RHMUX	MU-PRHM01	N/A	51404109-125
HLAI	MU-PAIH03	N/A	51304754-100
STIM	MU-PSTX03	N/A	51304516-200
AO	MU-PAOX03	51304672-100	51309152-125
AO	MU-PAOY22	N/A	80363969-100
DI	MU-PDIX02	N/A	51304485-100
DI	MU-PDIY22	N/A	80363972-100
DISOE	MU-PDIS12	51402625-125	N/A
DO	MU-PDOX02	N/A	51304487-100
DO	MU-PDOY22	N/A	80363975-100
PI	MU-PPIX02	N/A	51304386-100
SDI	MU-PSDX02	N/A	51304362-200
SI	MU-PSIM11	N/A	51304362-300
FBUS	MU-PFBS01	N/A	51309510-125

7. CE Compliance

7.4. IOPs

Conformally coated IOPs

The following table lists the model numbers of the CE Compliant and non-CE Compliant IOP cards that are conformally coated. Model numbers and part numbers identify the assemblies.

Table 19 IOPs—Conformally Coated

IOP Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
LLAI	MC-PAIL02	N/A	51304481-150
LLMux	MC-PLAM02	N/A	51304362-150
RHMUX	MC-PRHM01	N/A	51404109-175
HLAI	MC-PAIH03	N/A	51304754-150
STI	MC-PSTX02	N/A	51304516-150
STIM	MC-PSTX03	N/A	51304516-250
AO	MC-PAOX03	51304672-150	51309152-175
AO	MC-PAOY22	N/A	80363969-150
DI	MC-PDIX02	N/A	51304485-150
DI	MC-PDIY22	N/A	80363972-150
DISOE	MC-PDIS12	N/A	51402625-175
DO	MC-PDOX02	N/A	51304487-150
DO	MC-PDOY22	N/A	80363975-150
PI	MC-PPIX02	N/A	51304386-150
SDI	MC-PSDX02	N/A	51304362-250
SI	MC-PSIM11	N/A	51304362-350
FBUS	MC-PFBS01	N/A	51309510-175

7.5 FTAs

Introduction

Many types of FTAs are available that are CE Compliant. Some are identified by a model number that is different than the model number for the non-CE Compliant FTA. Other CE Compliant FTA types have the same model number as the non-CE Compliant FTA, but are generally identified by the tab number of the part number that ends in “25.”

The CE Compliant FTAs feature filtered connectors to interface the CE Compliant model MU-KFTSxx IOP to FTA cable(s).

Conformal coating

All FTAs are available with and without conformal coating.

Nonconformally coated FTAs

The following table is a list of CE Compliant and non-CE Compliant FTAs that are not conformally coated. Model numbers and part numbers identify the assemblies.

Table 20 Field Termination Assemblies—Nonconformally Coated

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
LLAI	MU-TAIL02	51304437-100	N/A
LLAI	MU-TAIL03	N/A	51309202-125
LLMux RTD	MU-TAMR02	51304477-100	N/A
LLMux RTD	MU-TAMR03	N/A	51309218-125
LLMux TC	MU-TAMT02	51401491-100	N/A
LLMux TC	MU-TAMT03	N/A	51309223-125
LLMux TC Remote	MU-TAMT12	51401573-100	N/A
LLMux TC Remote	MU-TAMT13	N/A	51309213-125
RHMUX GI/IS Power Adapter	MU-GRPA01	N/A	51304724-125
RHMUX GI/NI Power Adapter	MU-TRPA01	N/A	51304722-125
HLAI/STI	MU-TAIH02	51304453-100	N/A
HLAI/STI	MU-TAIH12	51304337-100	N/A
HLAI/STI	MU-TAIH22	80366195-100	N/A
HLAI/STI	MU-TAIH52	51304337-200	N/A
HLAI/STI	MU-TAIH62	80366192-100	N/A
HLAI	MU-TAIH03	N/A	51309136-125
HLAI	MU-TAIH13	N/A	51309138-125

7. CE Compliance

7.5. FTAs

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
HLAI	MU-TAIH23	N/A	80369165-125
HLAI	MU-TAIH53	N/A	51309138-225
STI	MU-TSTX03	N/A	51309136-125
STI	MU-TSTX13	N/A	51309138-125
STI	MU-TSTX53	N/A	51309138-225
AO	MU-TAOX02	51304476-100	51304476-125
AO	MU-TAOX12	51304335-100	51304335-125
AO	MU-TAOX52	51304335-200	51304335-225
AO	MU-TAOY22	80366177-100	80366481-125
AO	MU-THAO11	N/A	51309542-125
AO	MU-TAOY23	80366177-200	N/A
AO	MU-TAOY52	80364007-100	80366484-125
AO	MU-TAOY53	80364007-200	N/A
24 Vdc DI	MU-TDID12	51304441-100	51304441-125
24 Vdc DI	MU-TDID52	51304441-200	51304441-225
24 Vdc DI	MU-TDID72	51303928-100	N/A
24 Vdc DI	MU-TDIY22	80366180-100	80366180-125
24 Vdc DI	MU-TDIY62	80364010-100	80364010-125
120 Vac DI	MU-TDIA12	51304439-100	51304439-125
120 Vac DI	MU-TDIA52	51304439-200	51304439-225
120 Vac DI	MU-TDIA72	51303930-100	N/A
240 Vac DI	MU-TDIA22	51304431-100	51304431-125
240 Vac DI	MU-TDIA62	51304431-200	51304431-225
24 Vdc Nonisolated DO	MU-TDON12	51304446-100	N/A
24 Vdc Nonisolated DO	MU-TDON52	51304446-200	N/A
24 Vdc Isolated DO	MU-TDOY22	80366183-100	80366183-125
24 Vdc Isolated DO	MU-TDOY62	80364013-100	80364013-125
3-30 Vdc SS DO	MU-TDOD12	51304423-100	N/A
3-30 Vdc SS DO	MU-TDOD13	51304650-100	N/A
3-30 Vdc SS DO	MU-TDOD14	N/A	51309153-125
3-30 Vdc SS DO	MU-TDOD52	51304423-200	N/A
3-30 Vdc SS DO	MU-TDOD53	51304650-200	N/A

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
3-30 Vdc SS DO	MU-TDOD54	N/A	51309153-225
31-200 Vac SS DO	MU-TDOD22	51304428-100	N/A
31-200 Vac SS DO	MU-TDOD23	N/A	51309154-125
31-200 Vac SS DO	MU-TDOD62	51304428-200	N/A
31-200 Vac SS DO	MU-TDOD63	N/A	51309154-225
120/240 Vac SS DO	MU-TDOA12	51304408-100	N/A
120/240 Vac SS DO	MU-TDOA13	51304648-100	51304648-125
120/240 Vac SS DO	MU-TDOA52	51304408-200	N/A
120/240 Vac SS DO	MU-TDOA53	51304648-200	51304648-225
120 Vac/125 Vdc Relay DO	MU-TDOR12	51304443-100	51309148-125
120 Vac/125 Vdc Relay DO	MU-TDOR52	51304443-200	51309148-225
240 Vac/125 Vdc Relay DO	MU-TDOR22	51304427-100	51309150-125
240 Vac/125 Vdc Relay DO	MU-TDOR62	51304427-200	51309150-225
240 Vac/125 Vdc Relay DO	MU-TDOY23	80366189-100	80366189-125
240 Vac/125 Vdc Relay DO	MU-TDOY63	80366185-100	80366185-125
PI	MU-TPIX12	51304084-100	51304084-125
PI	MU-TPIX52	51304084-200	51304084-225
SDI—Toledo	MU-TSDT02	51303932-201	N/A
SDI—Manual/Auto	MU-TSDM02	51303932-202	N/A
SDI—Toledo	MU-TSDU02	51303932-203	N/A
SI—Modbus	MU-TSIM12	51303932-401	51303932-426
SI—Allen-Bradley	MU-TSIA12	51303932-403	51303932-428
Power Adapter	MU-TLPA02	51304467-100	51309204-125
DI Power Distribution Assembly	MU-TDPR02	51304425-100	51304425-125
FBUS	MU-TFBS01	N/A	51309254-125
FBUS	MU-TFBS11	N/A	51309254-325
GI Power Distribution Assembly	MU-GPRD02	51304644-100	51304644-125
GI HLAI/STI	MU-GAIH13	51304718-100	51304718-125
GI HLAI/STI	MU-GAIH14	51304730-100	51304730-125
GI HLAI/STI	MU-GAIH83	51304718-300	51304718-325
GI HLAI/STI	MU-GAIH84	51304730-300	51304730-325
GI HLAI	MU-GAIH12	51304636-100	N/A

7. CE Compliance

7.5. FTAs

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
GI HLAI	MU-GAIH22	51304748-100	51304748-125
GI HLAI	MU-GAIH82	51304636-300	N/A
GI HLAI	MU-GAIH92	51304748-300	51304748-325
GI AO	MU-GAOX02	51304638-100	51304638-125
GI AO	MU-GAOX12	51304638-500	51304638-525
GI AO	MU-GAOX72	51304638-300	51304638-325
GI AO	MU-GAOX82	51304638-700	51304638-725
GI AO	MU-GHAO11	N/A	51309540-125
GI 24 Vdc DI	MU-GDID12	51304640-100	51304640-125
GI 24 Vdc DI	MU-GDID13	51304728-100	51304728-125
GI 24 Vdc DI	MU-GDID82	51304640-300	51304640-325
GI 24 Vdc DI	MU-GDID83	51304728-300	51304728-325
GI 24 Vdc DO	MU-GDOD12	51304642-100	51304642-125
GI 24 Vdc DO	MU-GDOD82	51304642-300	51304642-325
GI DO with LFD	MU-GDOL12	51304736-100	51304736-125
GI DO with LFD	MU-GDOL82	51304736-300	51304736-325
GI Combiner Panel	MU-GLFD02	51304732-100	51304732-125
GI Marshalling Panel	MU-GMAR52	51304646-100	51309156-125
GI/IS FBUS	MU-GFBS01	N/A	51309254-225

Conformally coated FTAs

The following table is a list of CE Compliant and non-CE Compliant FTAs that are conformally coated. Model numbers and part numbers identify the assemblies.

Table 21 Field Termination Assemblies—Conformally Coated

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
LLAI	MC-TAIL02	51304437-150	N/A
LLAI	MC-TAIL03	N/A	51309202-175
LLMux RTD	MC-TAMR02	51304477-150	N/A
LLMux RTD	MC-TAMR03	N/A	51309218-175
LLMux TC	MC-TAMT02	51401491-150	N/A
LLMux TC	MC-TAMT03	N/A	51309223-175
LLMux TC Remote	MC-TAMT12	51401573-150	N/A

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
LLMux TC Remote	MC-TAMT13	N/A	51309213-175
RHMUX TC Local CJR	MC-GRMT01	N/A	51404106-175
RHMUX GI/IS Power Adapter	MC-GRPA01	N/A	51304724-175
RHMUX GI/NI Power Adapter	MC-TRPA01	N/A	51304722-175
HLAI/STI	MC-TAIH02	51304453-150	N/A
HLAI/STI	MC-TAIH12	51304337-150	N/A
HLAI/STI	MU-TAIH22	80366195-150	N/A
HLAI/STI	MU-TAIH52	51304337-250	N/A
HLAI/STI	MU-TAIH62	80366192-150	N/A
HLAI	MC-TAIH03	N/A	51309136-175
HLAI	MC-TAIH13	N/A	51309138-175
HLAI	MU-TAIH23	N/A	80369165-175
HLAI	MC-TAIH53	N/A	51309138-275
STI	MC-TSTX03	N/A	51309136-175
STI	MC-TSTX13	N/A	51309138-175
STI	MC-TSTX53	N/A	51309138-275
AO	MC-TAOX02	51304476-150	51304476-175
AO	MC-TAOX12	51304335-150	51304335-175
AO	MC-TAOX52	51304335-250	51304335-275
AO	MC-TAOY22	80366177-150	80366481-175
AO	MC-THAO11	N/A	51309542-175
AO	MC-TAOY23	80366177-250	N/A
AO	MC-TAOY52	80364007-150	80366484-175
AO	MC-TAOY53	80364007-250	N/A
24 Vdc DI	MC-TDID12	51304441-150	51304441-175
24 Vdc DI	MC-TDID52	51304441-250	51304441-275
24 Vdc DI	MC-TDID72	51303928-150	N/A
24 Vdc DI	MC-TDIY22	80366180-150	80366180-175
24 Vdc DI	MC-TDIY62	80364010-150	80364010-175
120 Vac DI	MC-TDIA12	51304439-150	51304439-175
120 Vac DI	MC-TDIA52	51304439-250	51304439-275
120 Vac DI	MC-TDIA72	51303930-150	N/A

7. CE Compliance

7.5. FTAs

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
240 Vac DI	MC-TDIA22	51304431-150	51304431-175
240 Vac DI	MC-TDIA62	51304431-250	51304431-275
24 Vdc Nonisolated DO	MC-TDON12	51304446-150	N/A
24 Vdc Nonisolated DO	MC-TDON52	51304446-250	N/A
24 Vdc Isolated DO	MC-TDOY22	80366183-150	80366183-175
24 Vdc Isolated DO	MC-TDOY62	80364013-150	80364013-175
3-30 Vdc SS DO	MC-TDOD12	51304423-150	N/A
3-30 Vdc SS DO	MC-TDOD13	51304650-150	N/A
3-30 Vdc SS DO	MC-TDOD14	N/A	51309153-175
3-30 Vdc SS DO	MC-TDOD52	51304423-250	N/A
3-30 Vdc SS DO	MC-TDOD53	51304650-250	N/A
3-30 Vdc SS DO	MC-TDOD54	N/A	51309153-275
31-200 Vac SS DO	MC-TDOD22	51304428-150	N/A
31-200 Vac SS DO	MC-TDOD23	N/A	51309154-175
31-200 Vac SS DO	MC-TDOD62	51304428-250	N/A
31-200 Vac SS DO	MC-TDOD63	N/A	51309154-275
120/240 Vac SS DO	MC-TDOA12	51304408-150	N/A
120/240 Vac SS DO	MC-TDOA13	51304648-150	51304648-175
120/240 Vac SS DO	MC-TDOA52	51304408-250	N/A
120/240 Vac SS DO	MC-TDOA53	51304648-250	51304648-275
120 Vac/125 Vdc Relay DO	MC-TDOR12	51304443-150	51309148-175
120 Vac/125 Vdc Relay DO	MC-TDOR52	51304443-250	51309148-275
240 Vac/125 Vdc Relay DO	MC-TDOR22	51304427-150	51309150-175
240 Vac/125 Vdc Relay DO	MC-TDOR62	51304427-250	51309150-275
240 Vac/125 Vdc Relay DO	MC TDOY23	80366189-150	80366189-175
240 Vac/125 Vdc Relay DO	MC TDOY63	80366185-150	80366185-175
PI	MC-TPIX12	51304084-150	51304084-175
PI	MC-TPIX52	51304084-250	51304084-275
SDI—Toledo	MC-TSDT02	51303932-251	N/A
SDI—Manual/Auto	MC-TSDM02	51303932-252	N/A
SDI—Toledo	MC-TSDU02	51303932-253	N/A
SI—Modbus	MC-TSIM12	51303932-451	51303932-476

FTA Type	Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
SI—Allen-Bradley	MC-TSIA12	51303932-453	51303932-478
Power Adapter	MC-TLPA02	51304467-150	51309204-175
DI Power Dist Assy	MC-TDPR02	51304425-150	51304425-175
FBUS	MC-TFBS01	N/A	51309254-175
FBUS	MC-TFBS11	N/A	51309254-375
GI Power Dist Assy	MC-GPRD02	51304644-150	51304644-175
GI HLAI/STI	MC-GAIH13	51304718-150	51304718-175
GI HLAI/STI	MC-GAIH14	51304730-150	51304730-175
GI HLAI/STI	MC-GAIH83	51304718-350	51304718-375
GI HLAI/STI	MC-GAIH84	51304730-350	51304730-375
GI HLAI	MU-GAIH12	51304636-150	N/A
GI HLAI	MU-GAIH22	51304748-150	51304748-175
GI HLAI	MU-GAIH82	51304636-350	N/A
GI HLAI	MU-GAIH92	51304748-350	51304748-375
GI AO	MC-GAOX02	51304638-150	51304638-175
GI AO	MC-GAOX12	51304638-550	51304638-575
GI AO	MC-GAOX72	51304638-350	51304638-375
GI AO	MC-GAOX82	51304638-750	51304638-775
GI AO	MC-GHAO11	N/A	51309540-175
GI 24 Vdc DI	MC-GDID12	51304640-150	51304640-175
GI 24 Vdc DI	MC-GDID13	51304728-150	51304728-175
GI 24 Vdc DI	MC-GDID82	51304640-350	51304640-375
GI 24 Vdc DI	MC-GDID83	51304728-350	51304728-375
GI 24 Vdc DO	MC-GDOD12	51304642-150	51304642-175
GI 24 Vdc DO	MC-GDOD82	51304642-350	51304642-375
GI DO with LFD	MC-GDOL12	51304736-150	51304736-175
GI DO with LFD	MC-GDOL82	51304736-350	51304736-375
GI Combiner Panel	MC-GLFD02	51304732-150	51304732-175
GI Marshalling Panel	MC-GMAR52	51304646-150	51309156-175
GI/IS FBUS	MC-GFBS01	N/A	51309254-275

7.6 I/O Link Extender


Introduction

The I/O Link Extender cards and Fiber Optic Coupler modules are CE Compliant. There are no non-CE Compliant versions.

I/O Link Extender adapter kit

The model MU-ILES01 adapter kit must be used to install the Fiber Optic Coupler module in the CE Compliant card files. The kit consists of a connector adapter, shroud, and mounting spacers as illustrated in the following figure. See the *Process Manager I/O Installation* manual for installation instructions.

Figure 33 I/O Link Extender Adapter Kit

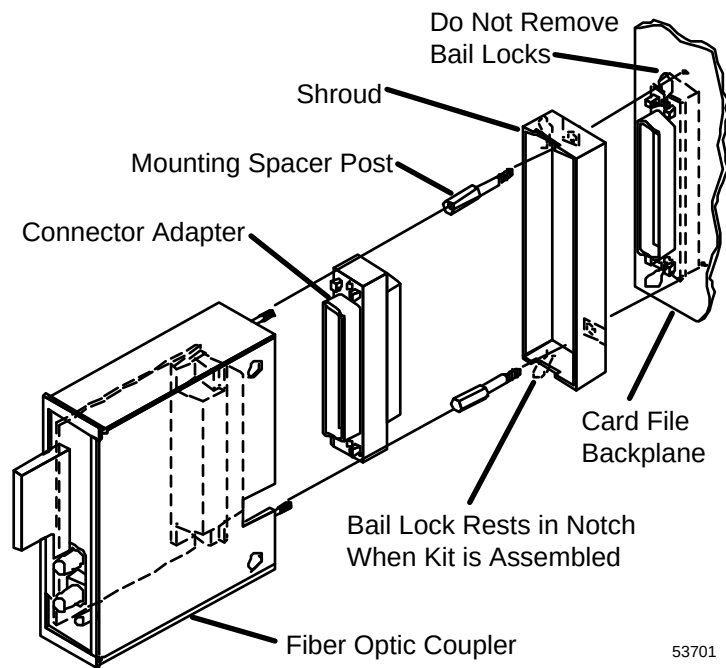

53701

7.7 IOP to FTA Cables

Introduction

Model MU-KFTSxx IOP to FTA cables are shielded cables and are for CE Compliant applications. They are identified by metal connector cases. The non-CE Compliant model MU-KFTAxx IOP to FTA cables are not shielded cables and are identified by the plastic connector case.

CE Compliant

CE Compliance is provided only when the mating connector on the card file backpanel is a filtered connector with a metal case and the mating connector on the FTA is a connector with a metal case. The metal connector case grounds the cable shield at both ends of the cable.

Both the card file and the FTA must be CE Compliant assemblies. See subsections "Card Files" and "FTAs" in the "CE Compliance" section for a list of CE Compliant assemblies.

Model list

The following table lists the model numbers of CE Compliant and non-CE Compliant IOP to FTA cables.

Table 22 IOP to FTA Cables

Cable Length (Meters/Feet)	Non-CE Compliant Model Number	CE Compliant Model Number
1.0/3.3	Part Number 51201420-001	Part Number 51204033-001
1.5/4.9	Part Number 51201420-915	Part Number 51204033-915
2.0/6.6	MU-KFTA02	MU-KFTS02
3.0/9.8	MU-KFTA03	MU-KFTS03
4.0/13.1	MU-KFTA04	MU-KFTS04
5.0/16.4	MU-KFTA05	MU-KFTS05
6.0/19.7	MU-KFTA06	MU-KFTS06
8.0/26.2	MU-KFTA08	MU-KFTS08
10.0/32.8	MU-KFTA10	MU-KFTS10
15.0/49.2	MU-KFTA15	MU-KFTS15
20.0/65.6	MU-KFTA20	MU-KFTS20
25.0/82.0	MU-KFTA25	MU-KFTS25
30.0/98.4	MU-KFTA30	MU-KFTS30
35.0/114.8	MU-KFTA35	MU-KFTS35
40.0/131.2	MU-KFTA40	MU-KFTS40
45.0/147.6	MU-KFTA45	MU-KFTS45
50.0/164.0	MU-KFTA50	MU-KFTS50

7.8 Power Cables

Introduction

Table 23, Table 24, and Table 25 list the model and part numbers for power cables that are available for use in an HPM. The power cables that are listed in Table 23 and Table 24, have an integral I/O Link protector module attached to the cable. The module protects the I/O Link Interface transceivers from surges when each I/O link Interface cable is routed through a protector module at the card file. The cables that are listed in Table 25 do not have protector modules.

For the feature to be effective, all card files in the subsystem (for example, a subsystem being all the card files that are connected to the HPMM(s) through the metallic I/O Link Interface cable) must have the I/O Link protector module feature installed.

New subsystems

New subsystems will have this I/O Link protector module feature. If a subsystem that is without protector modules is being modified, and the I/O Link protector module feature is desired, all the existing power cables that are connected to card files can be upgraded by adding an I/O Link protector module adapter cable to the card file end of each power cable. Since there are two power cables per card file, the adapters are available in sets of two. Power cables to Power Distribution Assemblies do not require any modification (for example, the Digital Input and Galvanic Isolation Power Distribution Assemblies).

The 51195479-xxx I/O Link Interface cable must always be used with the I/O Link protector module in both CE and Non-CE Compliant subsystems.

Non-CE Compliant subsystems

In non-CE Compliant subsystems the 51204126-xxx power cable set must be used to provide power to the card files (see Table 23). These power cables have the integral I/O Link protector module feature.

If a system without I/O Link protector modules is being modified, and the feature is desired, all 51201397-xxx power cables must be upgraded by adding a 51204140-100 CE Compliant type I/O Link protector module adapter cable set to the card file end of each power cable set. The appropriate I/O Link Interface cables must then be used with the I/O Link protector modules. The cables are listed in Table 25.

For the Digital Input and Galvanic Isolation Power Distribution Assemblies that are mounted inside the cabinet, use the 51201397-xxx power cable.

For power distribution to Digital Input and Galvanic Isolation Power Distribution Assemblies that are located external to the cabinet, use the shielded model MU-KSPRxx power cables that are listed in Table 24.

CE Compliant subsystems

For CE Compliant subsystems, a 51204138-xxx power cable set is required to provide power to a card file. This power cable has the integral I/O Link protector module feature. Refer to Table 23 for the list of power cables set lengths that are available.

If a subsystem without I/O Link protector modules is being upgraded, and the feature is desired, all 51201397-xxx power cables must be upgraded by adding CE Compliant type 51204140-100 I/O Link protector module adapter cable sets to the card file ends of the existing power cables. The adapter cables are available as a set of two cables that are labeled Link A and Link B. The appropriate I/O Link Interface cables must then be used with the I/O Link protector modules. Refer to Table 26 for the list of available I/O Link Interface cable sets.

For the Digital Input and Galvanic Isolation Power Distribution Assemblies that are mounted inside the cabinet, use the 51201397-xxx power cable.

For power distribution to Digital Input and Galvanic Isolation Power Distribution Assemblies that are located external to the cabinet, use the model MU-KSPRxx shielded power cables that are listed in Table 24.

Available power cables

Table 23, Table 24, and Table 25 list the model and part numbers for power cables that are available. Power cable part numbers that provide a set of two cables (51204126-xxx and 51204138-xxx) have I/O Link protector modules labeled Link A and Link B and accommodate the I/O Link A and I/O Link B Interface cables, respectively. The other power cable part number (51201397-xxx) and model numbers (MU-KDPRxx and MU-KSPRxx) provide only a single power cable with no I/O Link protector module.

Non-CE Compliant subsystem power cables

Table 23 Non-CE Compliant Subsystem Power Cables

Cable Length (Meters)	Part Number To Card File With I/O Link Protector Module (Cable Set)	Model/Part Number To DI or GI Power Distribution Assembly Without I/O Link Protector Module (Single Cable – Internal or External to Cabinet)
1.0	51204126-001	51201397-001
1.5	51204126-915	51201397-915
2.0	51204126-002	51201397-002
3.0	51204126-003	51201397-003
4.0	51204126-004	51201397-004
5.0	51204126-005	MU-KDPR05
6.0	51204126-006	51201397-006
10.0	N/A	MU-KDPR10
15.0	N/A	MU-KDPR15
20.0	N/A	MU-KDPR20
30.0	N/A	MU-KDPR30
40.0	N/A	MU-KDPR40
50.0	N/A	MU-KDPR50

7. CE Compliance

7.8. Power Cables

CE Compliant subsystem power cables

Table 24 CE Compliant Subsystem Power Cables

Cable Length (Meters)	Part Number To Card File With I/O Link Protector Module (Cable Set)	Model/Part Number To DI or GI Power Distribution Assembly Without I/O Link Protector Module (Single Cable)	
		Internal to Cabinet	External to Cabinet
1.0	51204138-001	51201397-001	N/A
1.5	51204138-915	51201397-915	N/A
2.0	51204138-002	51201397-002	N/A
3.0	51204138-003	51201397-003	N/A
4.0	51204138-004	51201397-004	N/A
5.0	51204138-005	MU-KDPR05	MU-KSPR05
6.0	51204138-006	51201397-006	N/A
10.0	N/A	N/A	MU-KSPR10
15.0	N/A	N/A	MU-KSPR15
20.0	N/A	N/A	MU-KSPR20
30.0	N/A	N/A	MU-KSPR30
40.0	N/A	N/A	MU-KSPR40
50.0	N/A	N/A	MU-KSPR50

Power cable without protector module

When the I/O Link protection is not implemented, the power cables that are listed in The following table are used to provide power to the card files in both CE Compliant and non-CE Compliant subsystems. These cables are used in place of the 51204126-xxx and 51204138-xxx power cables that have a I/O Link protector module and are listed in Table 23 and Table 24. Two cables are required for each card file.

Table 25 Power Cables without I/O Link Protector Module

Cable Length (Meters)	Part Number To Card File Without I/O Link Protector Module (Single Cable)
1.0	51204138-001
1.5	51204138-915
2.0	51204138-002
3.0	51204138-003
4.0	51204138-004

Cable Length (Meters)	Part Number To Card File Without I/O Link Protector Module (Single Cable)
5.0	51204138-005
6.0	51204138-006

7.9 I/O Link Interface Cables

Introduction

For CE Compliance, the shield of an I/O Link Interface cable must be grounded to the card file's metal chassis. FASTON terminals are used to provide the connection.

51195479-xxx I/O Link Interface cables

The 51195479-xxx I/O Link Interface cables are used in both CE and Non-CE Compliant subsystems. This cable does not have a shield grounding lead or terminal. The shield is grounded through a grounding lead that is attached to the I/O Link protector module on the power cable. The end of the grounding lead has a FASTON terminal which must be connected to the appropriate FASTON terminal on the card file's metal chassis.

51204042-xxx I/O Link Interface cables

Prior to the introduction of the I/O Link protection feature, the CE Compliant subsystems used the 51204042-xxx I/O Link Interface cables. This cable can be identified by its shield wires with FASTON terminals.

Upgrading

If a system without I/O Link protector modules is being modified and the feature is desired, all power cables must be upgraded by adding a pair of CE Compliant I/O Link protector module adapter cables to each set of power cables. The 51204042-xxx adapter cables are a set of cables that are labeled Link A and Link B. The set of I/O Link Interface cables must then be replaced with a set 5195479-xxx I/O Link cables . DO NOT use the 51204042-xxx I/O Link Interface cables with the I/O Link protector modules.

Parts list

The following table lists the part numbers of I/O Link Interface cable sets. Two cables are provided when ordered by the part number.

Table 26 0 I/O Link Interface Cable Sets

Connector Drops	CE/Non-CE Compliant Part Number (Used with I/O Link Protector)	CE Compliant Part Number (Used without I/O Link Protector)
2	51195479-100	51204042-100
3	51195479-200	51204042-200
4	51195479-300	51204042-300
5	51195479-400	51204042-400

Connector Drops	CE/Non-CE Compliant Part Number (Used with I/O Link Protector)	CE Compliant Part Number (Used without I/O Link Protector)
6	51195479-500	51204042-500

7.10 UCN Trunk Cable Taps

Introduction


A bracket has been added to the UCN cable taps, model numbers

MU-NTAP02, MU-NTAP04, and MU-NTAP08, to ensure that the assembly case is properly grounded and CE Compliant. The part numbers for the UCN cable tap models are the same with or without the bracket.

Two-port UCN tap

The following figure is an illustration of the 2-port UCN cable tap with the added grounding bracket for CE Compliance.


Figure 34 Two-Port UCN Cable Tap

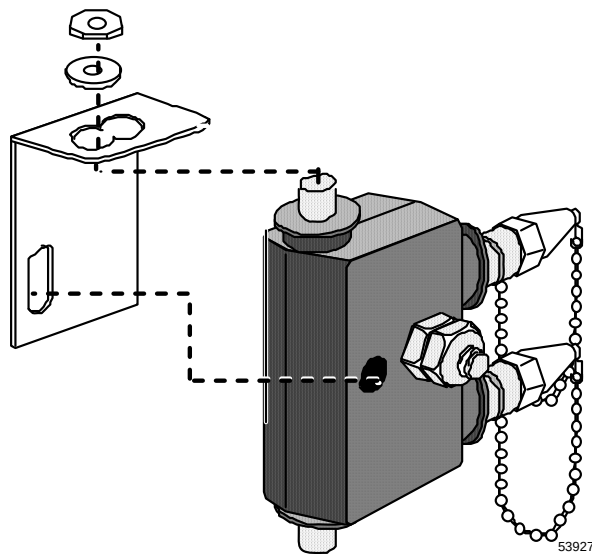

Four-port UCN tap

The following figure is an illustration of the 4-port UCN cable tap with the added grounding bracket for CE Compliance.


Figure 35 Four-Port UCN Cable Tap

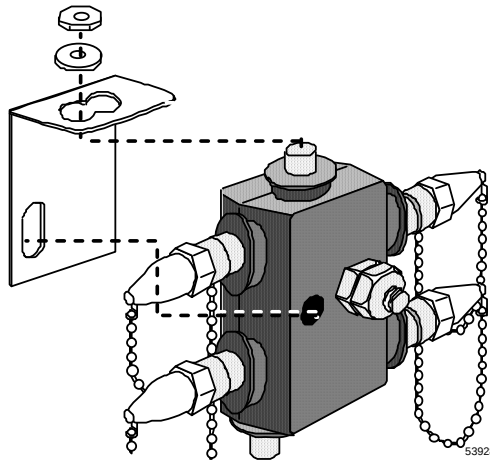

Eight-port UCN tap

The following figure is an illustration of the 8-port UCN cable tap with the added grounding bracket for CE Compliance.

Figure 36 Eight-Port UCN Cable Tap

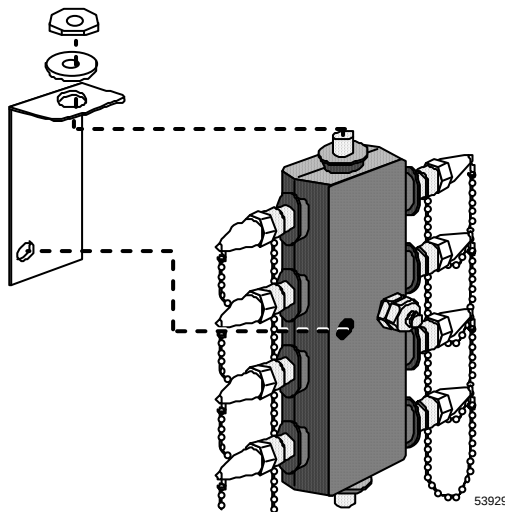

7.11 Cabinets

Introduction



SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

Only the Rittal model MU-CBSX01 and MU-CBDX01 cabinets are CE Compliant; however, older versions of the cabinets are not CE Compliant because the cabinet panels and doors are not appropriately grounded to the cabinet frame. The CE Compliant cabinets are identified by the abundance of ground straps between the cabinet panels and doors.

Illustrations

See Figure 57 and Figure 58 in the "Model MU-CBSX01/MU-CBDX01 Cabinets" section for illustrations of the CE Compliant cabinets. Note that all cabinet panels and doors are grounded to the cabinet frame. The cabinet frame must be connected to Safety Ground as described in the *TPS System Site Planning* manual.

UCN drop cable taps

For European site installations, all UCN drop cable taps must be installed inside the cabinet or cabinet complex.

UCN drop cables

Drop cables cannot leave the cabinet unless they are routed in metal conduit that is connected to Safety Ground.

8. Model MU-CBSM01/MU-CBDM01 Cabinets

8.1 Overview



SHOCK HAZARD


Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

The High-Performance Process Manager (HPM) model MU-CBSM01 and MU-CBDM01 cabinets provide single and dual access, respectively. Access is defined as having a single front door entry or dual front and rear door entry. The model MU-CBSM01 and MU-CBDM01 cabinets are also referred to as Markhon cabinets because Markhon is the manufacturer.

Single-access cabinet

The single-access cabinet has one equipment entry point and that is in the front of the cabinet through a single door. The High-Performance Process Manager card files, Power System, and the FTA Mounting Channels are installed inside the single-access door. The cabinet side panels can be removed for access. The following figure is an illustration of a single-access cabinet.

Figure 37 Single-Access Cabinet

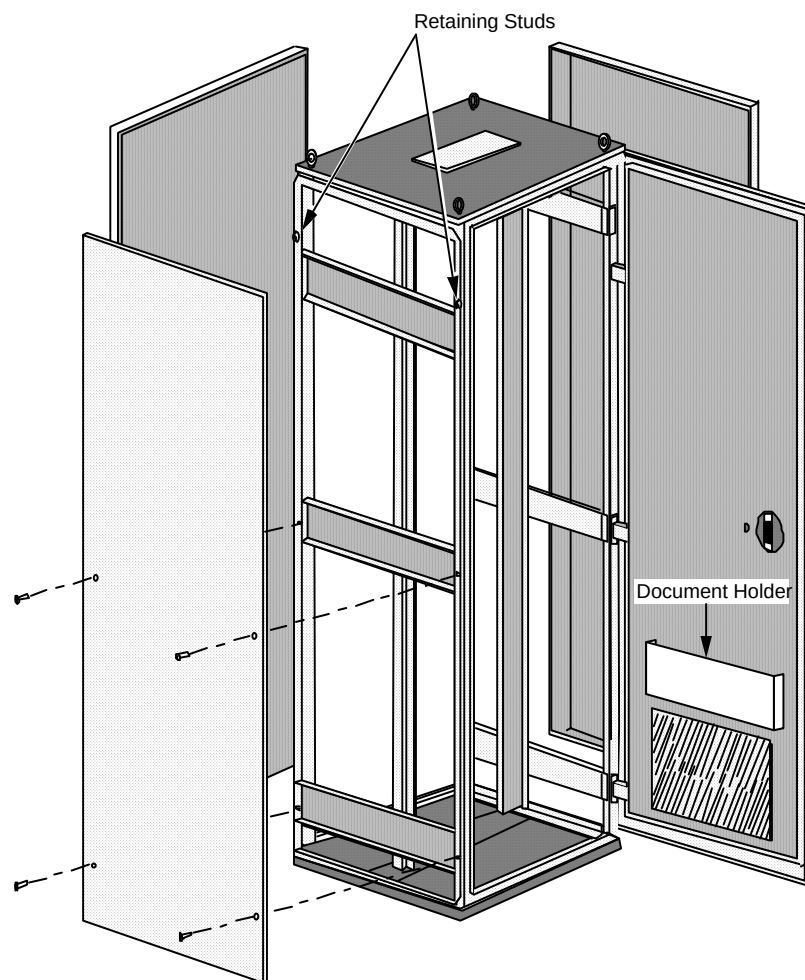


Dimension	Width	Depth	Height
Single Access	.8 m/31.5 in.	.55 m/21.75	2.1 m/81.5 in.

Dual-access cabinet

The dual-access cabinet has two entry doors. The High-Performance Process Manager card files and the Power System are mounted inside the front access door. The FTA Mounting Channels are normally installed inside the rear door. The cabinet side panels can be removed for access. The following figure is an illustration of a dual-access cabinet.

Figure 38 Dual-Access Cabinet

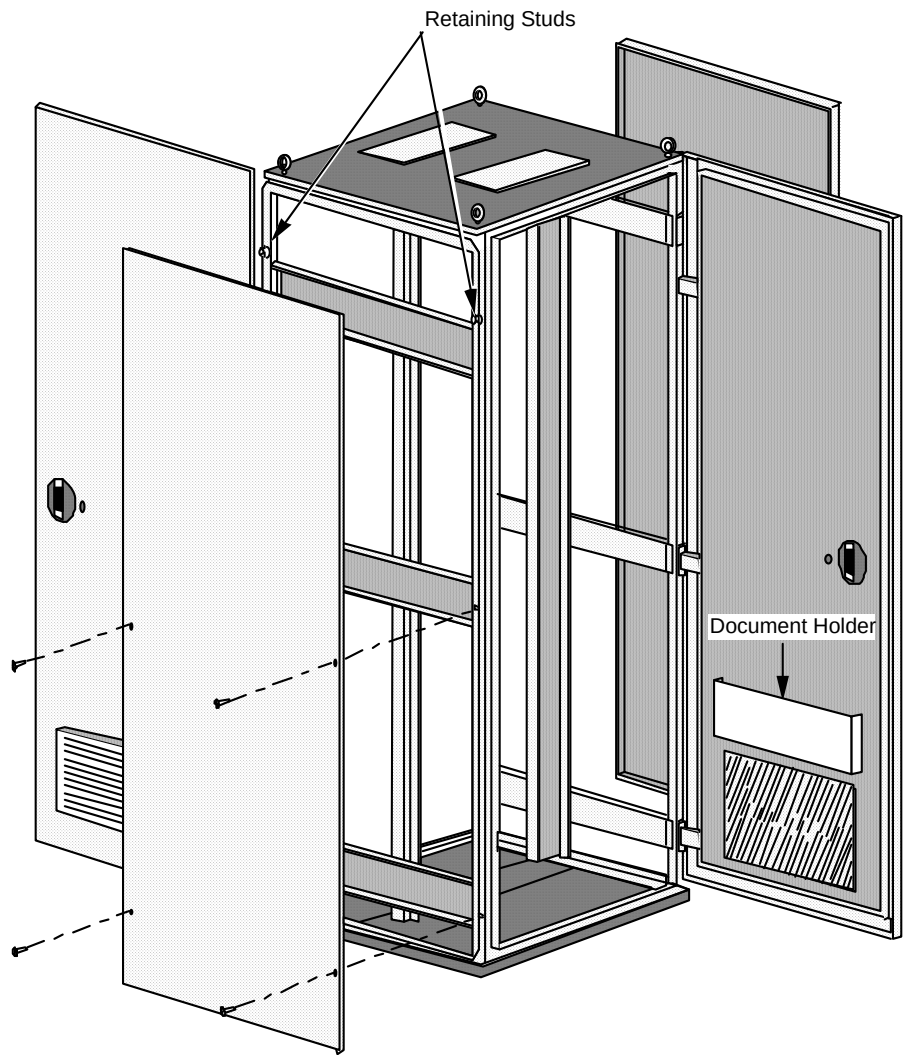

Dimensions	Width	Depth	Height
Dual Access	.8 m/31.5 in.	.8 m/31.5 in.	2.1 m/81.5 in.

8.2 Cabinet Description

Cabinet dimensions

The single-access cabinet, with the front door, side and rear panels installed, has the following exterior dimensions.

0.8 meters wide x 0.55 meters deep x 2.1 meters high

(31.5 inches x 21.75 inches x 81.5 inches)

The dual access cabinet, with the front and rear doors, and side panels installed, has the following exterior dimensions.

0.8 meters wide x 0.55 meters deep x 2.1 meters high

(31.5 inches x 21.75 inches x 81.5 inches)


Top and bottom cabinet entry

Both cabinets are NEMA 1 rated and support top and bottom entry for process control wiring. Top entry requires removal of the top panel(s), and/or associated fan assemblies, before entry holes can be punched in the panel. Honeywell will prepunch the holes if specified when ordering the cabinet. Figures 8-3 and 8-4 are illustrations of the bottom cable entry slots for the single and dual cabinets, respectively.

Single-access bottom cable entry slots

The following figure illustrates the bottom cable entry slots in the single-access cabinet.

Figure 39 Single-Access Cabinet Bottom Cable Entry Slots

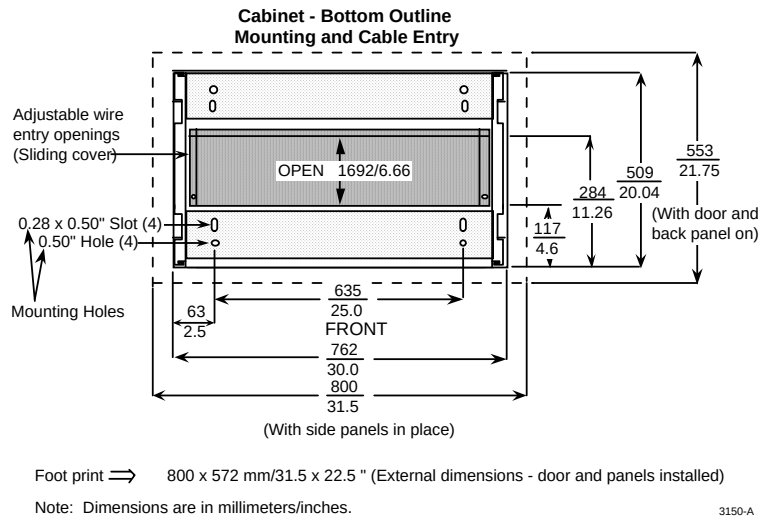

The following figure illustrates the bottom cable entry slots in the dual-access cabinet.

Cabinet - Bottom Outline Mounting and Cable Entry

This diagram illustrates the bottom outline of a 42U server cabinet, focusing on mounting and cable entry specifications. The cabinet is shown with its side panels installed, resulting in an overall width of 31.5 inches (800 mm) and a depth of 31.22 inches (793 mm) when doors are open. The rear panel features two large rectangular openings, each 1692 mm (6.66 feet) wide and 284 mm (11.26 inches) high, with a total height of 749 mm (29.50 inches) for both. These openings are adjustable via sliding covers. The mounting holes are specified as 0.28 x 0.50 inch slots (4) and 0.50 inch holes (4). The cable entry opening at the top is 653 mm (25.7 inches) wide. The front panel has a width of 762 mm (30.0 inches) and a height of 800 mm (31.5 inches). The diagram also shows the rear panel's width of 635 mm (25.0 inches) and the front panel's width of 63 mm (2.5 inches). The overall height of the cabinet is 793 mm (31.22 inches) when doors are open, and 749 mm (29.50 inches) when closed. The diagram includes dimensions for the mounting holes, cable entry opening, and the overall footprint of the cabinet.

(Wire entry opening)

Adjustable wire entry openings (Sliding cover)

0.28 x 0.50" Slot (4)
0.50" Hole (4)

Mounting holes

REAR

OPEN 1692/6.66

OPEN 1692/6.66

FRONT

(With doors on)

(With side panels in place)

Foot print $\Rightarrow$ 800 x 800 mm/31.5 x 31.5 " (External dimensions - doors and panels installed)

Note: Dimensions are in millimeters/inches.

3098-A

The dual-access cabinet has two independent entry doors. A single access cabinet has only one entry side. Card files and the Power System, or FTA Mounting Channels can be installed in either side of the cabinet without being constrained by the equipment installed in the other side of the cabinet.

A maximum of four cabinets can be complexed together without intervening side panels by a complexing kit, Honeywell part number 51109532-200 (single access cabinet) or 51109532-100 (dual access cabinet).

NEMA 12 rated cabinets can be ordered from Honeywell.

8. Model MU-CBSM01/MU-CBDM01 Cabinets

8.2. Cabinet Description

Cabinet cooling

Cabinet cooling is accomplished by the use of one or more fan assemblies that are mounted over appropriate cutouts in the cabinet top. Use of a fan assembly is mandatory for a cabinet entry side containing card files or a Power System. Because of power dissipation, the cabinet configuration determines if a fan assembly is required for a cabinet entry side containing Field Termination Assemblies (FTAs). A fan assembly is mandatory when Galvanically Isolated FTAs are installed. Fan assemblies are available for voltages and frequencies noted below:

Cabinet Fan Assembly (240 Vac, 50/60 Hz)


Cabinet Fan Assembly (120 Vac, 50/60 Hz)

A blank plate is available to cover the hole(s) in the top of the cabinet in the event a fan assembly is not needed. The fan opening cabinet top cover plate is Honeywell part number 51304098-200.

Cabinet internal structure

As shown in the following figure, the cabinet is provided with an internal structure ("infrastructure") that is capable of accepting card file assemblies, Power Systems, and FTA Mounting Channels. When installing FTAs, FTA Mounting Channels must be specified as discussed in the "FTA Mounting Channel Descriptions" subsection of "Model MU-CBSM01/MU-CBDM01 Cabinets" section.

Figure 41 Cabinet Interior Dimensions

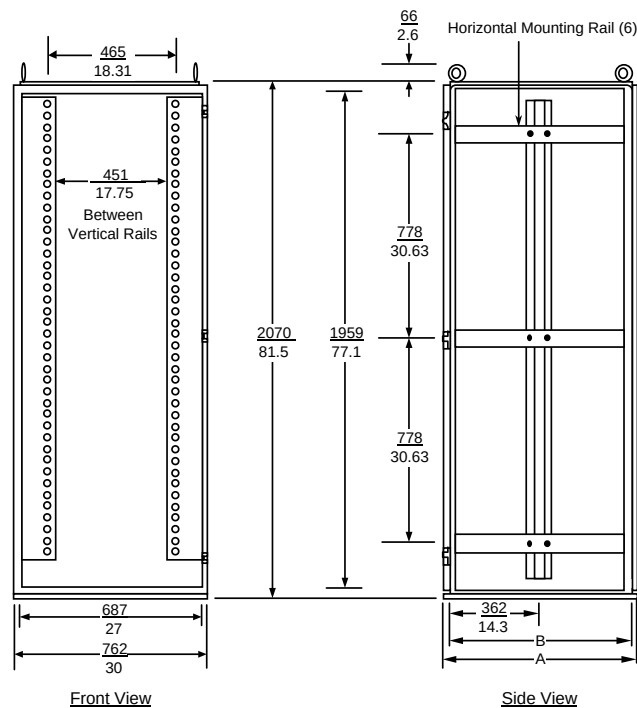

Cabinet	A	B
Dual Access	793 31.2	749 29.5
Single Access	552 21.7	508 20

Note: Dimensions are in millimeters/inches.

8.3 Card File and Power System Configurations

Cabinet layout



SHOCK HAZARD


Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

The High-Performance Process Manager card files, Power System, and FTA Mounting Channels install in the single- and dual-access cabinets as shown in Figures 8-6 and 8-7, respectively.

Single-access cabinet equipment layout

The following figure illustrates the equipment layout in a single-access cabinet.

Figure 42 Typical Single-Access Cabinet Assembly Layout

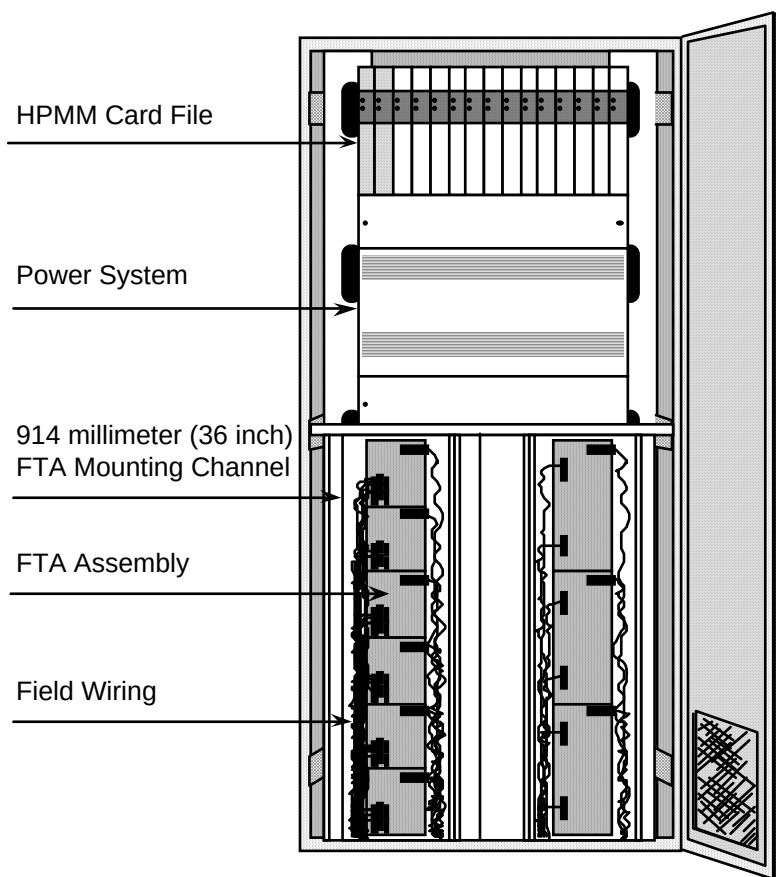


16010

Dual-access cabinet equipment layout

The following figure illustrates the equipment layout in a dual-access cabinet.

Figure 43 Typical Dual-Access Cabinet Assembly Layout

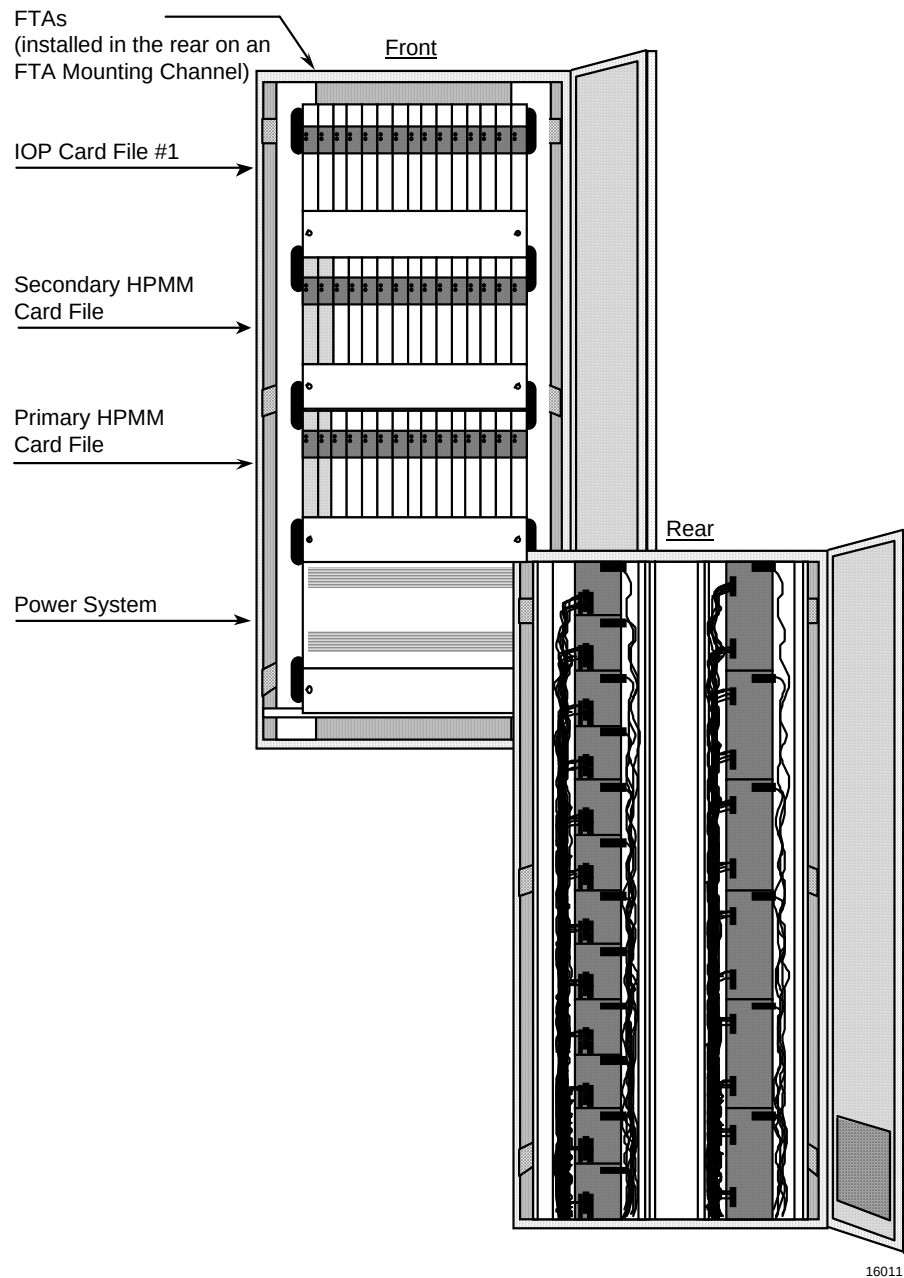

8.4 Card File and Power System Descriptions

Card file descriptions



SHOCK HAZARD


Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

There are three types of card file assemblies, Left 7-Slot, Right 7-Slot, and 15-Slot. The Left and Right 7-Slot card files are the same size and are intended to be mounted adjacent to each other on the cabinet's 19" RETMA mounting infrastructure by using appropriate hardware. The 15-Slot card file mounts alone on the 19" RETMA mounting infrastructure.

7-Slot card file dimensions

The following figure illustrates the 7-Slot card file's installation dimensions.

Figure 44 7-Slot Card File Installation Dimensions

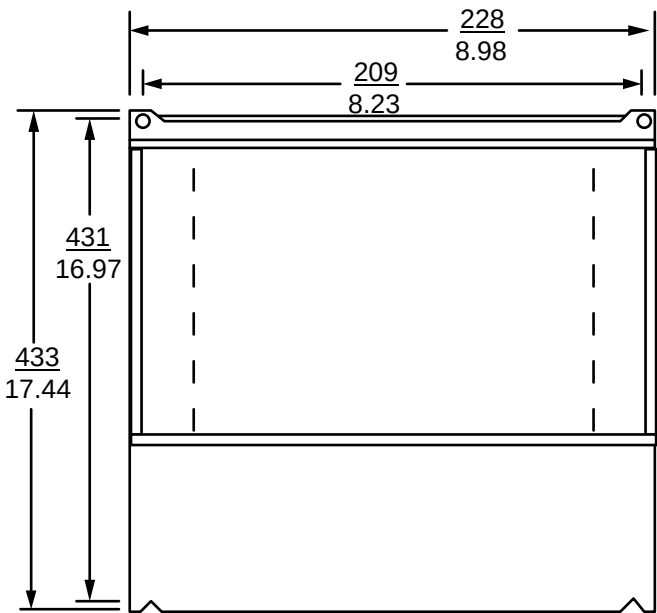


Note: Dimensions are in millimeters/inches.

16012

15-Slot card file dimensions

The following figure illustrates the 15-Slot card file's installation dimensions.

Figure 45 15-Slot Card File Installation Dimensions

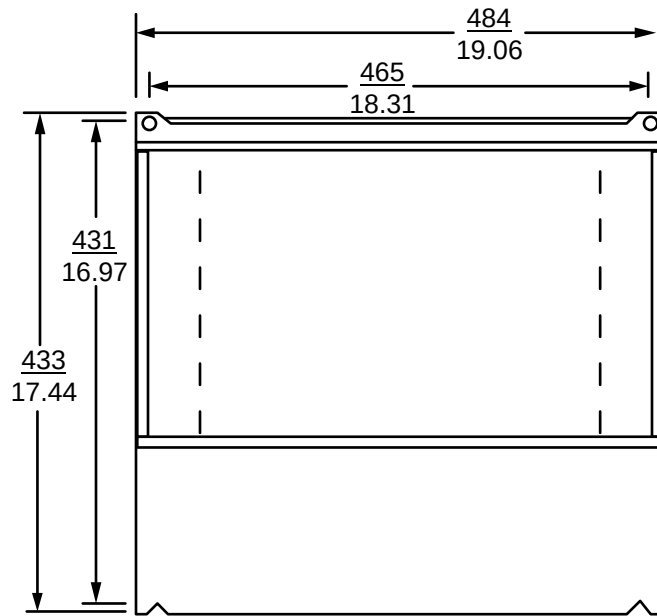


Note: Dimensions are in millimeters/inches.

53135

Installing 7-Slot and 15-Slot card files

The following figure illustrates the installation of Left and Right 7-Slot and 15-Slot card files in a side-by-side configuration.


Figure 46 Installation of 7-Slot and 15-Slot Card Files

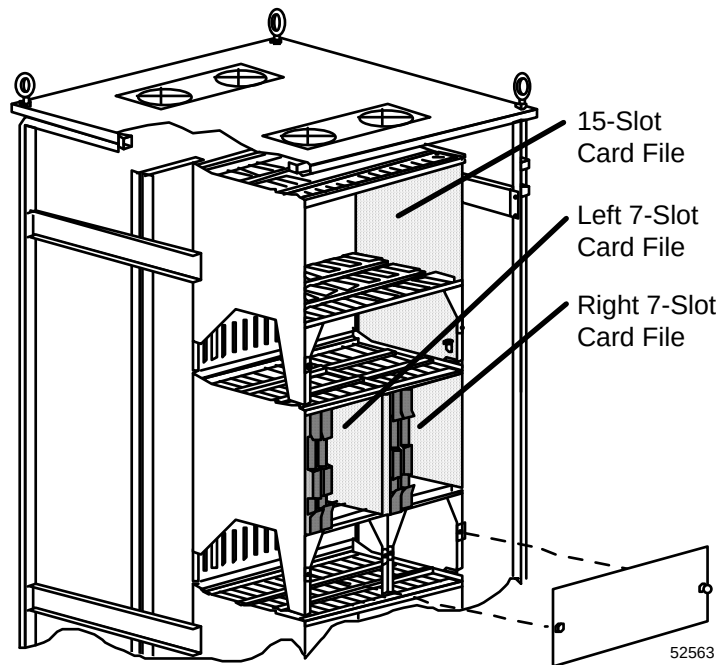

Power System dimensions

The Power System dimensions are shown in the following figure; it also installs on a 19" RETMA mounting infrastructure.

Figure 47 Power System Installation Dimensions

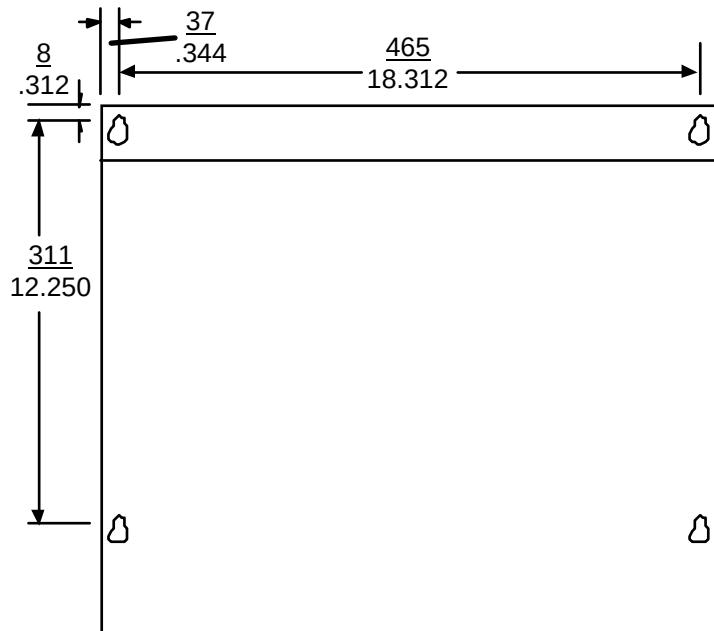

Note: Dimensions are in millimeters/inches.

53136

8.5 FTA Mounting Channel Descriptions



ATTENTION

In the past, it was a requirement that Galvanically Isolated, Intrinsically Safe (GI/IS) FTAs had to be mounted on horizontally oriented FTA Mounting Channels in an HPM cabinet. The requirement is no longer needed because of component and design improvements.

Galvanically Isolated FTAs can now be mounted on vertically oriented FTA Mounting Channels; however, there is still a requirement that Galvanically Isolated FTAs and standard (non-Galvanically Isolated) FTAs, and the wiring to them, be properly separated in the cabinet.

Any FTA Mounting Channels on which Galvanically Isolated FTAs will be mounted must be installed in an inverted (upside down from the normal) position.

The horizontal FTA Mounting Channel information in this section is reference information because some existing installations use horizontal FTA Mounting Channels that may require the installation of additional horizontal FTA Mounting Channels for equipment expansion.

FTA sizes and styles

Field Termination Assemblies (FTAs) are produced in three standard sizes that are dependent on the FTA type and circuit requirements.

- Size A 15.20 cm (6.0 in.) x 12.0 cm (4.75 in.)
- Size B 30.48 cm (12.1 in.) x 12.0 cm (4.75 in.)
- Size C 46.22 cm (18.2 in.) x 12.0 cm (4.75 in.)

They mount on FTA Mounting Channels that are attached to the cabinet's infrastructure.

Three styles

Three styles of FTA Mounting Channels are available:

- Wide vertical
- Narrow vertical
- Horizontal

Selection is based on whether standard (non-Galvanically Isolated) or Galvanically Isolated FTAs are installed in the cabinet.

Vertical or horizontal mounting

The FTA Mounting Channels used to mount standard or Galvanically Isolated FTAs are vertically oriented in the cabinet, and the FTA Mounting Channels used to mount Galvanically Isolated FTAs are horizontally oriented in the cabinet.

8.6 Vertical FTA Mounting Channels

Overview

Both standard (non-Galvanically Isolated) and Galvanically Isolated FTAs are mounted on a vertically oriented FTA Mounting Channel in the cabinet. The vertical FTA Mounting Channel has two channels (troughs), right and left.

When standard FTAs are mounted on the vertical FTA Mounting Channel, the FTA Mounting Channel is installed in its "normal" position where field wiring enters the left channel and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s) or Power Distribution Assemblies are routed in the right channel of the FTA Mounting Channel.

When Galvanically Isolated FTAs are mounted on the vertical FTA Mounting Channel, the FTA Mounting Channel is installed in its "inverted" position where field wiring enters the right channel and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s) or Power Distribution Assemblies are routed in the left channel of the FTA Mounting Channel.

Galvanically Isolated FTAs and standard FTAs must not be mounted on the same FTA Mounting Channel.

FTA Mounting Channel configurations

The vertical FTA Mounting Channel length, approximately 93 centimeters (36 inches) is approximately half the height of the cabinet. The FTA Mounting Channels can be mounted adjacent to each other in this vertical area. The FTA mounting configurations will allow

- up to four narrow channels or
- up to three wide channels.


The FTA Mounting Channel configurations can be mounted adjacent to each other in the area below the Power System in a single-access cabinet as shown in Figure 42.

In the dual-access cabinet, one FTA Mounting Channel is normally installed above another, adjacently in pairs, as shown in Figure 43.

Vertical FTA Mounting Channel configurations

The following figure illustrates four typical vertical FTA Mounting Channel cabinet configurations.

Figure 48 Typical Vertical FTA Mounting Channel Configurations

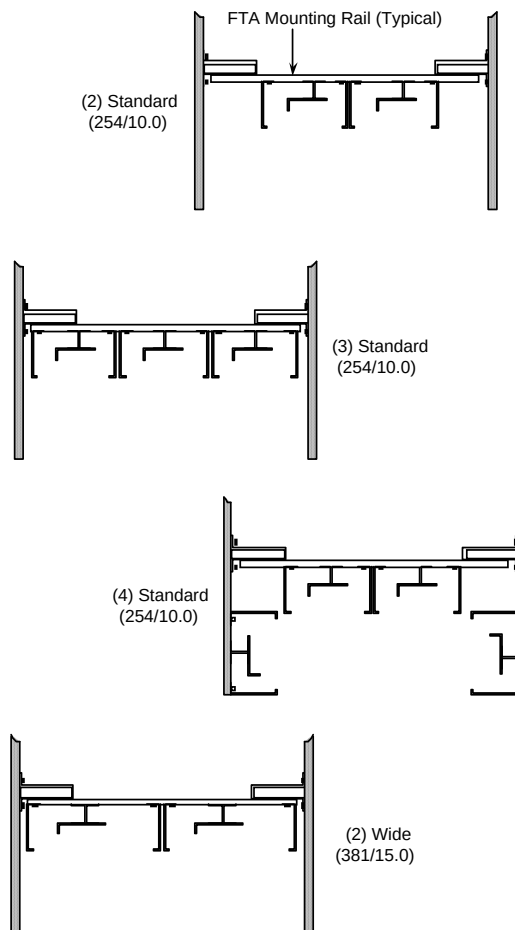

Note: Dimensions are in millimeters/inches.


FTA Mounting Channel widths

Vertical FTA Mounting Channels are available in two widths:

- Standard 25.4 cm (10 in.) W x 10.8 cm (4.25 in.) D x 93 cm (36.6 in.) L
- Wide 38.1 cm (15 in.) W x 10.8 cm (4.25 in.) D x 93 cm (36.6 in.) L

Figures 8-13 illustrates the FTA Mounting Channel dimensions.


Figure 49 Vertical FTA Mounting Channel Dimensions

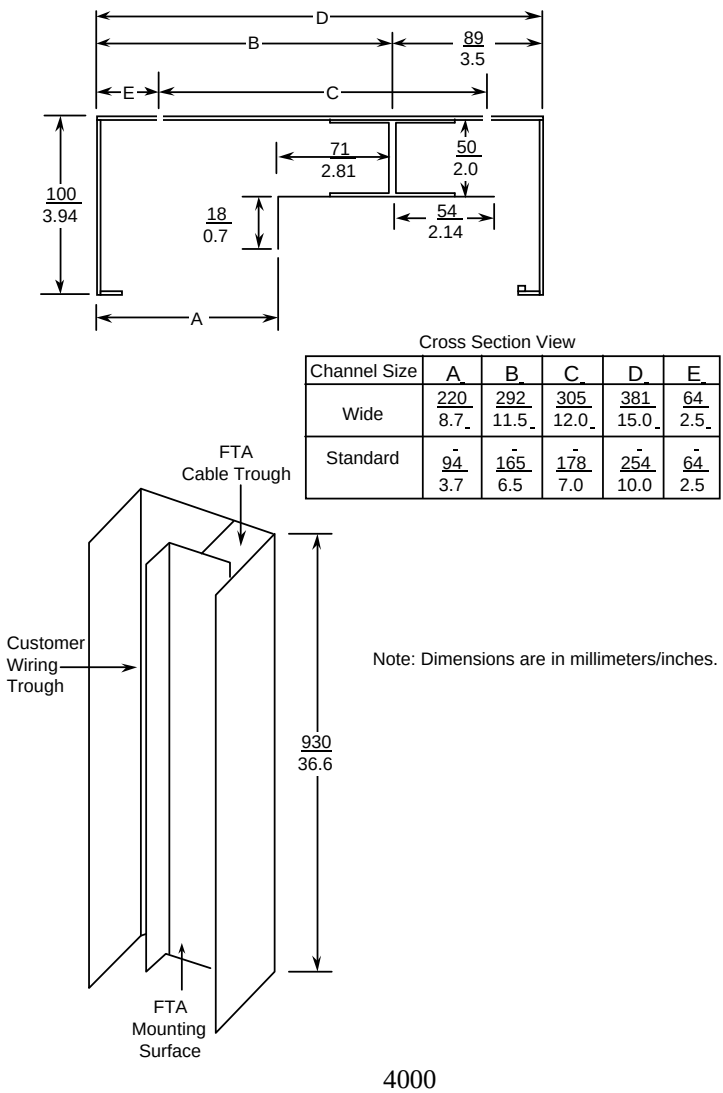

FTA installation holes

The following figure illustrates the locations of the FTA mounting holes on the FTA Mounting Channel and the holes used to install the FTA Mounting Channel.

Figure 50 Vertical FTA Mounting Channel Installation Holes

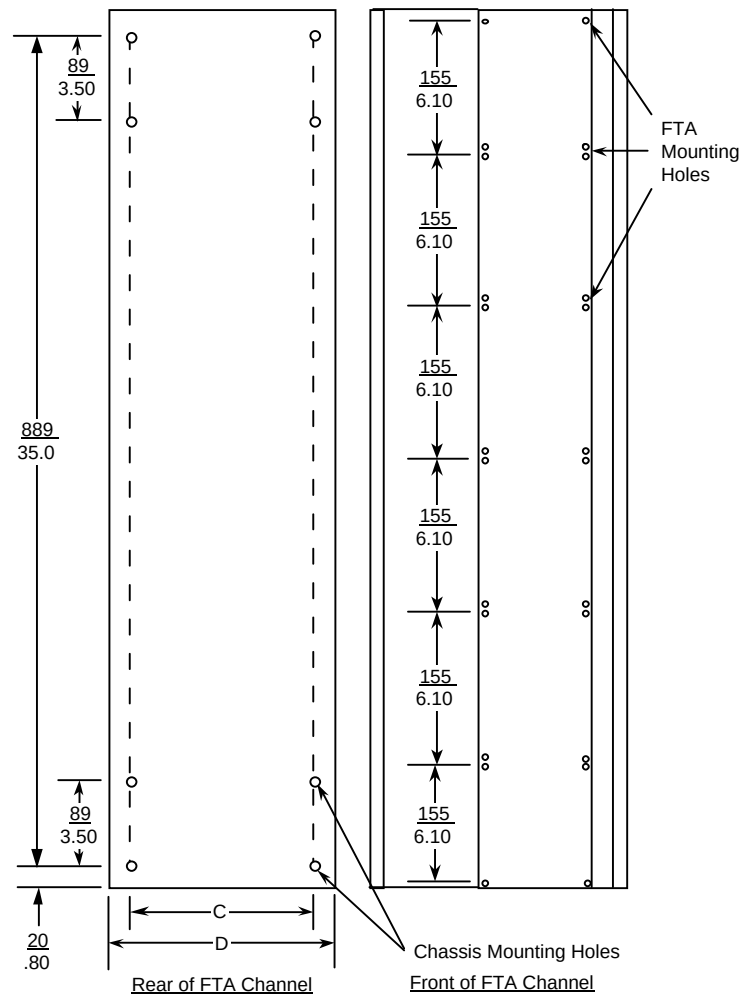

Note: See the previous figure for C and D dimensions.
Dimensions are in millimeters/inches.

4001

8.7 Horizontal FTA Mounting Channel

Overview

Only Galvanically Isolated FTAs can be mounted on horizontal FTA Mounting Channels in the cabinet. The FTA Mounting Channels have two channels (troughs), upper and lower. Field wiring enters the lower channel from the right side of the cabinet and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s), Power Distribution Assemblies, and Marshalling Panels, if present, are routed in the upper channel of the FTA Mounting Channel from the left side of the cabinet.


Single-access FTA Mounting Channel installation

Up to three of the 62-centimeter (24.4-inch) long horizontal FTA Mounting Channels can be installed below the Power System in a single-access cabinet. A gap of approximately 22.9 centimeters (9 inches), the approximate width of a horizontal FTA Mounting Channel, must be maintained between the FTA Mounting Channels and the Power System.

Dual-Access FTA Mounting Channel installation

In the dual-access cabinet, up to eight horizontal FTA Mounting Channels can be installed on one side of a cabinet as shown in the following figure.

Figure 51 Horizontal FTA Mounting Channel Cabinet Layout

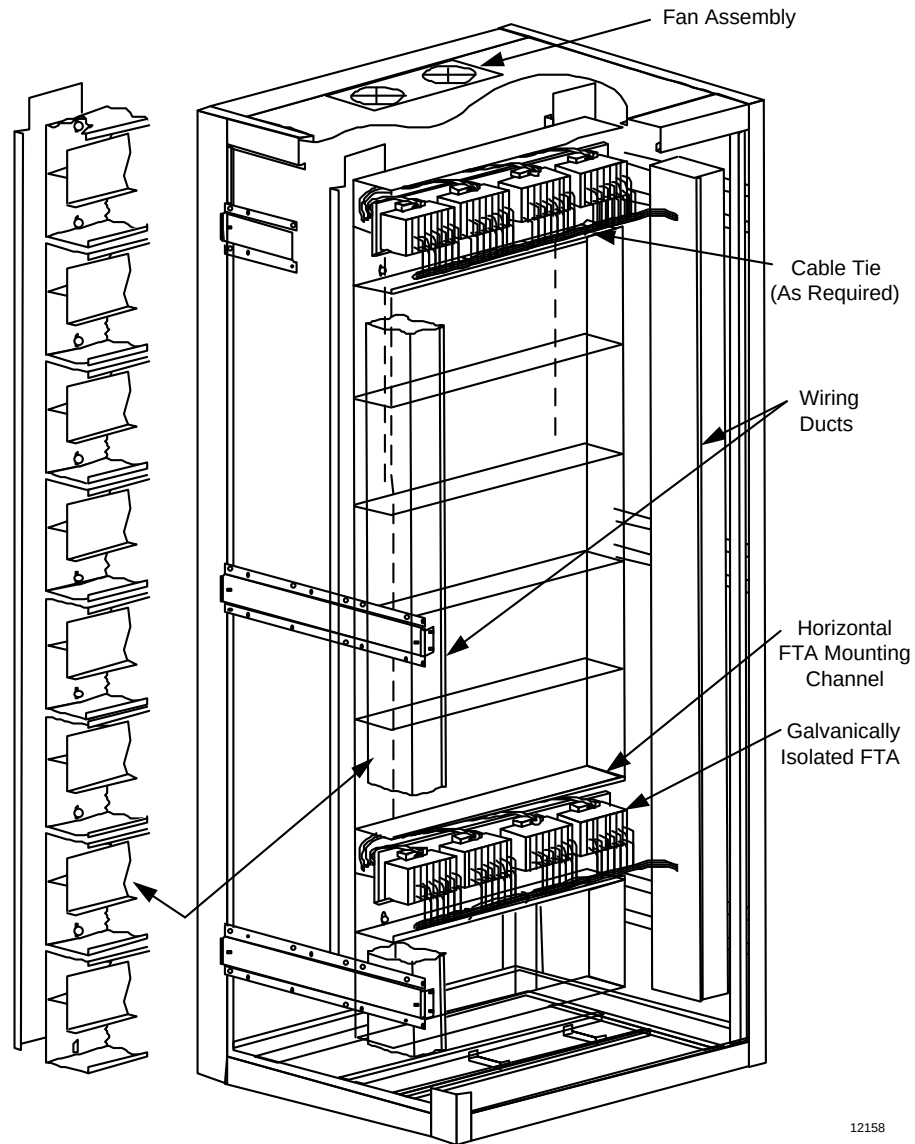


FTA Mounting Channel widths

Horizontal FTA Mounting Channels are available in a single width.

- 22.2 cm (8.75 in.) W x 10.8 cm (4.25 in.) D x 62.0 cm (24.4 in.) L

The following figure illustrates the FTA Mounting Channel dimensions.

Figure 52 Horizontal FTA Mounting Channel Dimensions

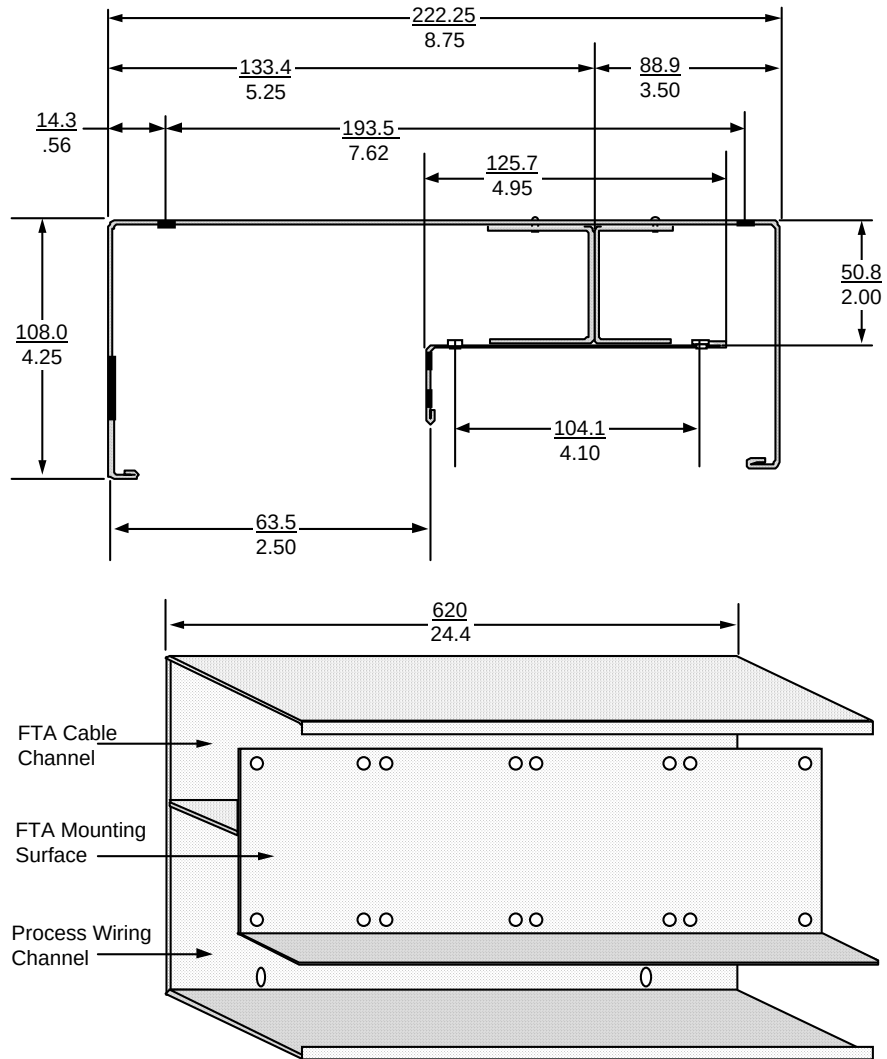


Note: Dimensions are in millimeters/inches.

12136

Horizontal FTA Mounting Channel installation holes

The following figure illustrates the locations of the FTA mounting holes on the FTA Mounting Channel and the holes used to install the FTA Mounting Channel in the cabinet.

Figure 53 Horizontal FTA Mounting Channel Installation Holes

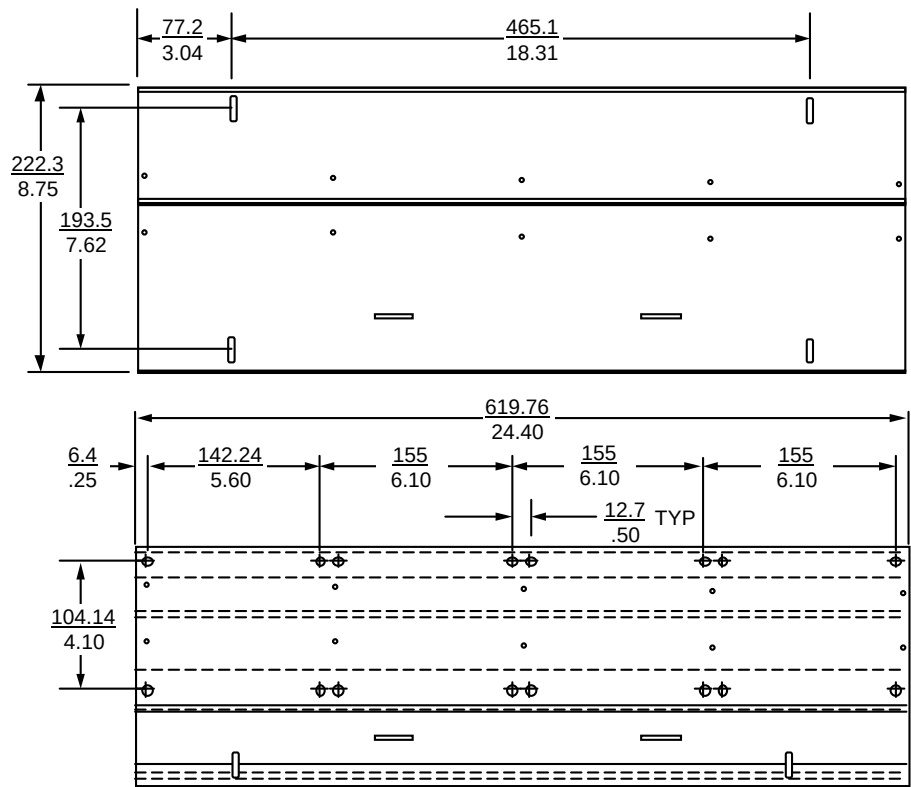


12138

8.8 Cabinet Floor Planning


Floor template

The following figure is cabinet floor template that will help you in plan your facility layout when installing High-Performance Process Manager cabinets.


Figure 54 Cabinet Floor Planning Template




Single Dual Access Cabinet




Single Single Access Cabinet




Dual Dual Access Cabinet Complex




Dual Single Access Cabinet Complex




Triple Dual Access Cabinet Complex



Triple Single Access Cabinet Complex



Quad Dual Access Cabinet Complex



Quad Single Access Cabinet Complex

Note:

1. Cabinet scale is 1/4 inch = 1 foot.
2. A dual access cabinet is approximately 30 inches by 30 inches. The side and door panels add 1.5 inches to each cabinet dimension. When cabinets are complexed, 1.5 inches is added to the total complex dimensions.
3. A single access cabinet is approximately 30 inches wide and 21 inches deep. The side panels and the single door panel add 3/4 inch to the cabinet depth and 1.5 inches to the cabinet width. When cabinets are complexed, 3/4 inch is added to the complex depth and 1.5 inches is added to the total complex width.

2868

8. Model MU-CBSM01/MU-CBDM01 Cabinets

8.8. Cabinet Floor Planning

9. Model MU-CBSX01/MU-CBDX01 Cabinets

9.1 Overview

Introduction



SHOCK HAZARD

Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

The High-Performance Process Manager model MU-CBSX01 and MU-CBDX01 cabinets provide single and dual access, respectively. Access is defined as having a single front door entry or dual front and rear door entry. The model MU-CBSX01 and MU-CBDX01 cabinets are also referred to as Rittal cabinets because Rittal is the manufacturer.


CE Compliant

The model MU-CBSX01 and MU-CBDX01 cabinets are CE Compliant.

Single-access cabinet

The single-access cabinet has one equipment entry point and that is in the front of the cabinet through a single door. The High-Performance Process Manager card files, Power System, and the FTA Mounting Channels are installed inside the single-access door. The cabinet side panels can be removed for access. The following figure is an illustration of a single-access cabinet.

Figure 55 Single-Access Cabinet

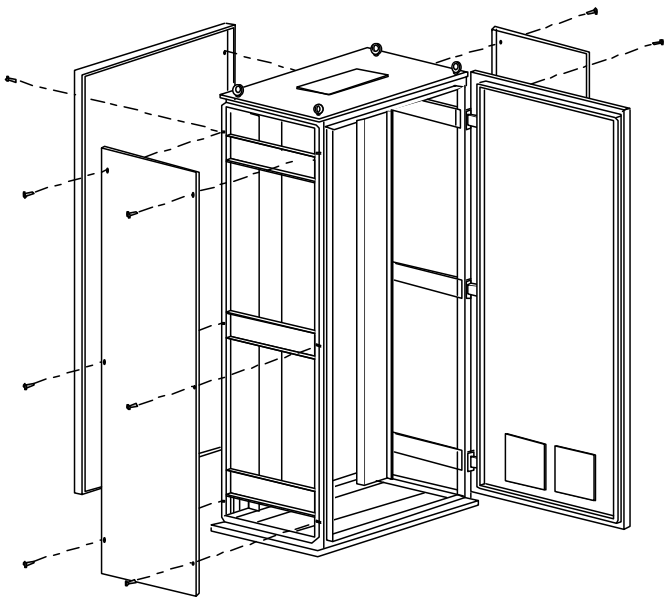


Dimension	Width	Depth	Height
Single Access	0.8 m/31.49 in.	0.5 m/19.68 in.	2 m/78.9 in.

2808

Dual-access cabinet

The dual-access cabinet has two entry doors. The High-Performance Process Manager card files and the Power System are mounted inside the front access door. The FTA Mounting Channels are normally installed inside the rear door. The cabinet side panels can be removed for access. The following figure is an illustration of a dual-access cabinet.

Figure 56 Dual-Access Cabinet

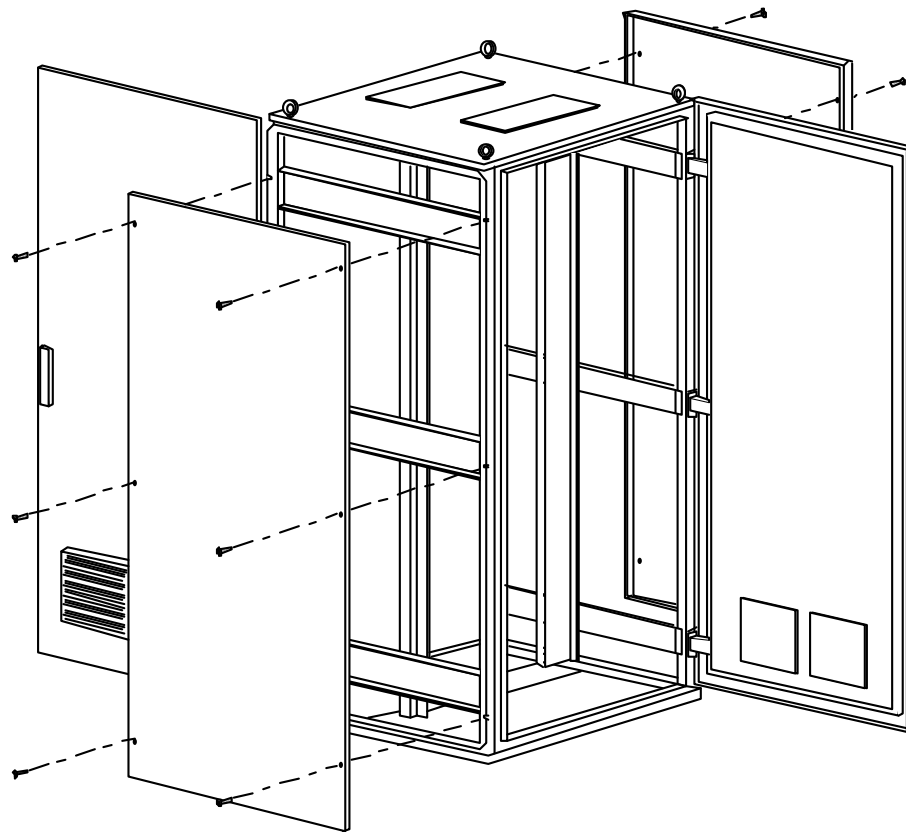

Dimensions	Width	Depth	Height
Dual Access	0.8 m/31.49 in.	0.8 m/31.49 in.	2 m/78.9 in.

2791

CE Compliance

CE Compliance versions of the cabinet are identified by the abundance of grounding straps inside the cabinet. All panels and doors are grounded to the cabinet frame by the straps. Figures 9-3 and 9-4 illustrate the mechanisms used to ground the cabinet panels and doors.

Figure 57 Cabinet Base Panel Grounding Procedure


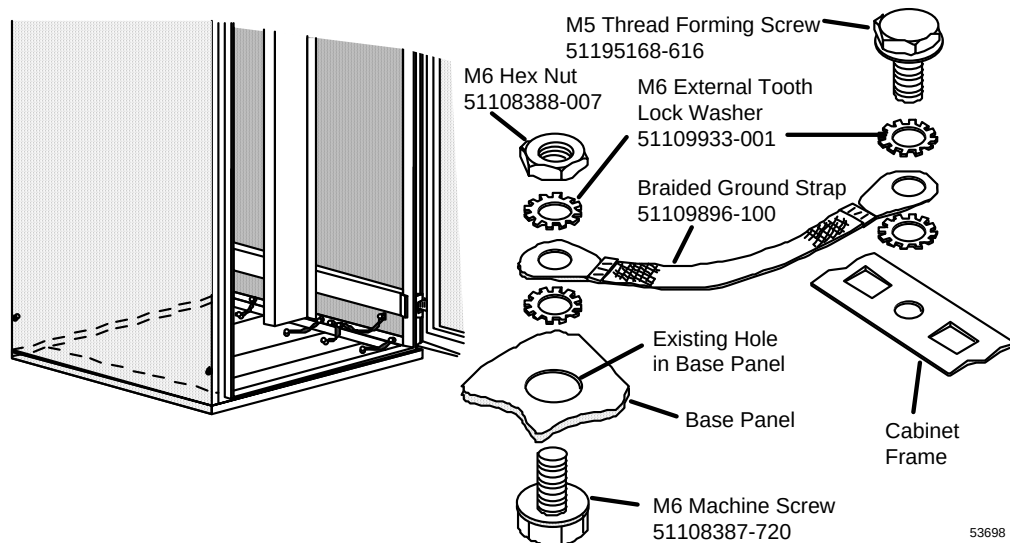


Figure 58 Cabinet Panel and Door Grounding Procedure

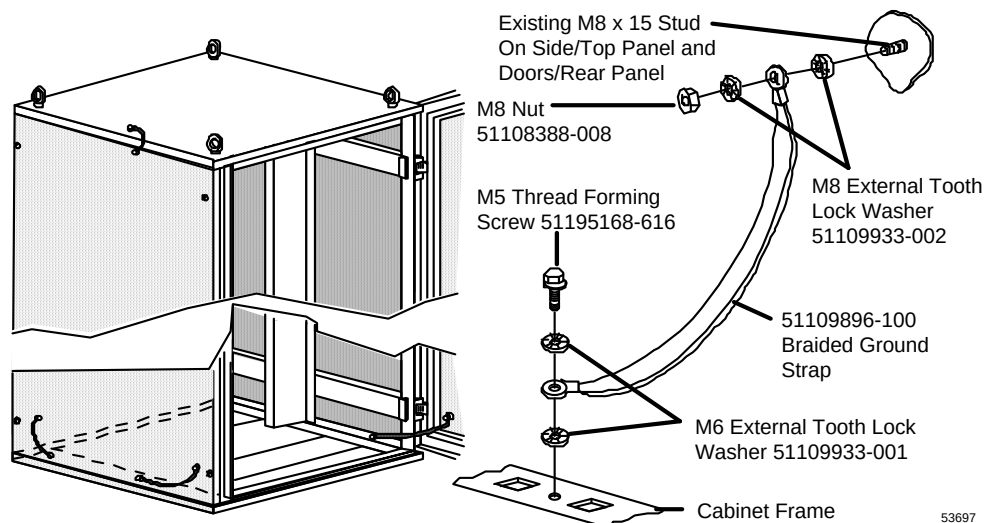

9.2 Cabinet Description

Cabinet dimensions

The single-access cabinet, with the front door, side and rear panels installed, has the following exterior dimensions.

0.8 meters wide x 0.5 meters deep x 2 meters high

(31.5 inches x 19.7 inches x 78.9 inches)

The dual-access cabinet, with the front and rear doors, and side panels installed, has the following exterior dimensions.

0.8 meters wide x 0.55 meters deep x 2.1 meters high

(31.5 inches x 31.5 inches x 78.9 inches)


Top and bottom entry

Both cabinets are NEMA 1 rated and support top and bottom entry for process control wiring. Top entry requires removal of the top panel(s), and/or associated fan assemblies, before entry holes can be punched in the panel. Honeywell will prepunch the holes if specified when ordering the cabinet. Figures 9-5 and 9-6 are illustrations of the bottom cable entry slots for the single- and dual-access cabinets, respectively.

Single-access cabinet bottom entry

The following figure is an illustration of the bottom cable entry for the single-access cabinet.

Figure 59 Single-Access Cabinet Bottom Cable Entry

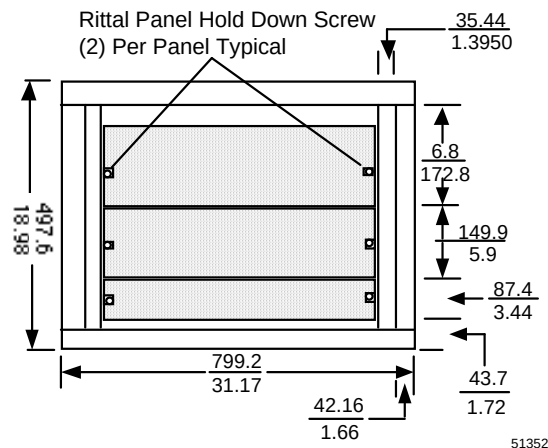

The following figure is an illustration of the bottom cable entry for the dual-access cabinet.

Technical drawing of a panel assembly showing dimensions and callouts. The drawing includes a central panel with a grid pattern, surrounded by a frame. Dimensions are provided in inches and millimeters.

Dimensions and Callouts:

- Top Callout: Rittal Panel Hold Down Screw (2) Per Panel Typical
- Top Right Dimension: 35.44 (901.76 mm)
- Top Right Dimension: 1.3950 (35.44 mm)
- Left Side Dimension: 783.4 (20024.32 mm)
- Left Side Dimension: 30.83 (783.4 mm)
- Right Side Dimension: 285.9 (7261.26 mm)
- Right Side Dimension: 11.25 (285.9 mm)
- Right Side Dimension: 6.8 (172.8 mm)
- Right Side Dimension: 172.8 (4398.72 mm)
- Right Side Dimension: 149.9 (3796.26 mm)
- Right Side Dimension: 5.9 (149.9 mm)
- Bottom Right Dimension: 87.4 (2220.16 mm)
- Bottom Right Dimension: 3.44 (87.4 mm)
- Bottom Dimension: 799.2 (20290.88 mm)
- Bottom Dimension: 31.17 (799.2 mm)
- Bottom Dimension: 42.16 (1070.6 mm)
- Bottom Dimension: 1.66 (42.16 mm)
- Bottom Right Dimension: 43.7 (1110.38 mm)
- Bottom Right Dimension: 1.72 (43.7 mm)

The dual-access cabinet has two independent entry doors. A single-access cabinet has only one entry door. Card files and the Power System, or FTA Mounting Channels can be installed in either side of the cabinet without being constrained by the equipment installed in the other side of the cabinet.

A maximum of four cabinets can be complexed together without intervening side panels by a complexing kit, Honeywell part number 51109524-200 (single access cabinet) or 51109524-100 (dual access cabinet).


NEMA 12 rated cabinets can be ordered from Honeywell.

Cabinet cooling is accomplished by the use of one or more fan assemblies that are mounted over appropriate cutouts in the cabinet top. Use of a fan assembly is mandatory for each cabinet side containing card files or a Power System. Because of power dissipation, the cabinet configuration determines if a fan assembly is required for a cabinet entry side containing Field Termination Assemblies (FTAs). A fan assembly is mandatory when Galvanically Isolated FTAs are installed. Fan assemblies are available for voltages and frequencies noted below:

A blank plate is available to cover the hole(s) in the top of the cabinet in the event a fan assembly is not needed. The fan opening cabinet top cover plate is Honeywell part number 51304098-200.

As shown in the following figure, the cabinet is provided with an internal structure (“intrastructure”) that is capable of accepting card file assemblies, Power Systems, and FTA Mounting Channels. When installing FTAs, FTA Mounting Channels must be specified as discussed in the "FTA Mounting Channel Descriptions" subsection of the "Model MU-CBSX01/MU-CBDX0 Cabinets" section.

Figure 61 Cabinet Interior Dimensions

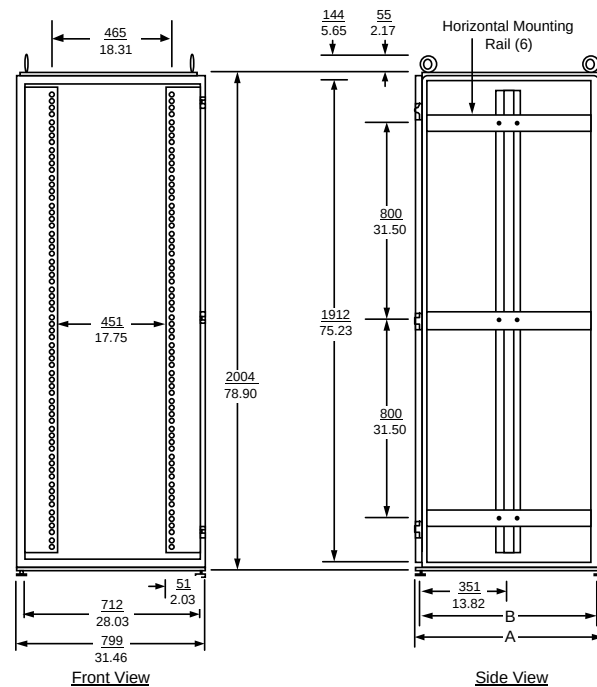

Cabinet	A	B
Dual Access	<u>789</u> 31.06	<u>702</u> 27.64
Single Access	<u>489</u> 19.25	<u>402</u> 15.83

Note: Dimensions are in millimeters/inches.

2810

9.3 Card File and Power System Configurations


Cabinet layout

The High-Performance Process Manager card files, Power System and FTA Mounting Channels install in the single and dual access cabinets as shown in Figure 62 and Figure 63 respectively.

Single-access cabinet equipment layout

The following figure illustrates the equipment layout in a single-access cabinet.


Figure 62 Typical Single-Access Cabinet Assembly Layout

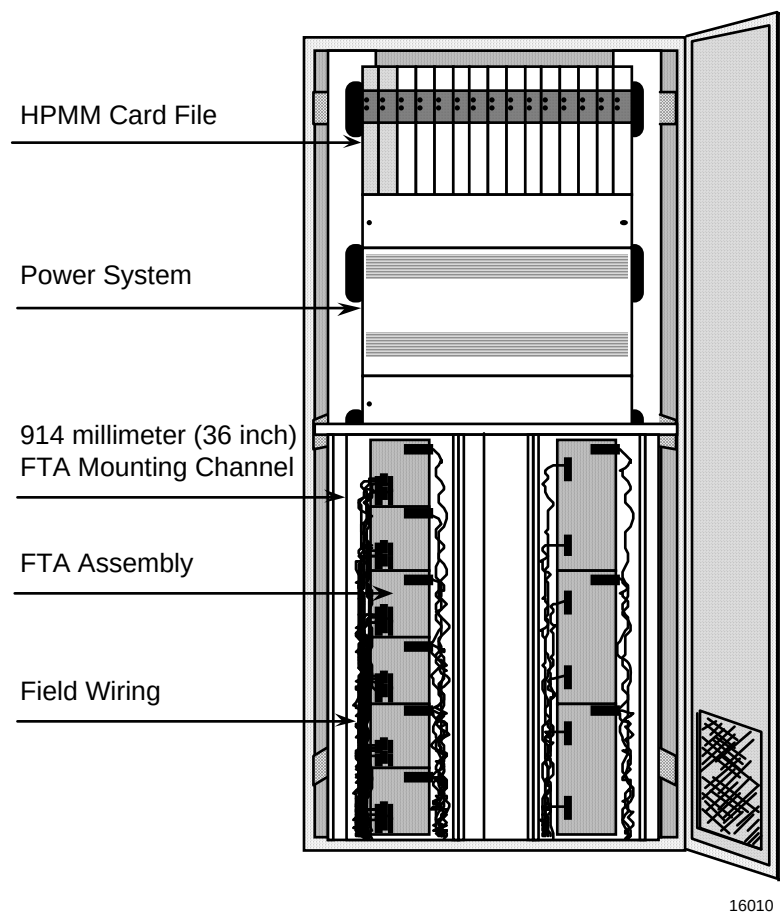

Dual-access cabinet equipment layout

The following figure illustrates the equipment layout in a dual-access cabinet.

Figure 63 Typical Dual-Access Cabinet Assembly Layout

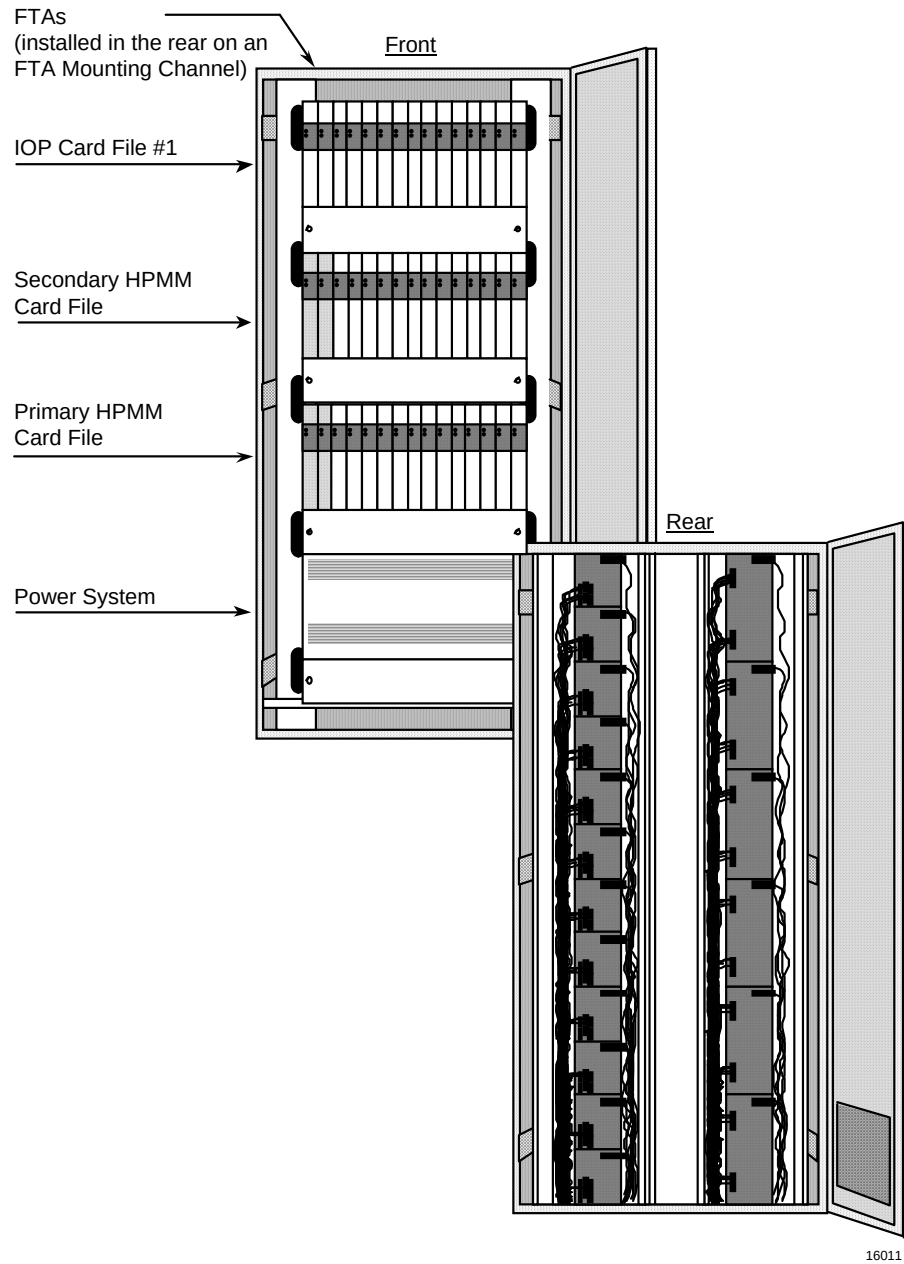

9.4 Card File and Power System Descriptions

Card file descriptions



SHOCK HAZARD


Troubleshooting, opening this equipment and removing any panels or covers will expose the **user** to the risk of a shock hazard. There are no **user** serviceable parts inside this equipment. Refer all servicing only to **qualified service personnel**.

There are three types of card file assemblies, Left 7-Slot, Right 7-Slot, and 15-Slot. The Left and Right 7-Slot card files are the same size and are intended to be mounted adjacent to each other on the cabinet's 19" RETMA mounting infrastructure using appropriate hardware. The 15-Slot card file mounts alone on the 19" RETMA mounting infrastructure.

7-Slot card file dimensions

The following figure illustrates the 7-Slot card file's installation dimensions.

Figure 64 7-Slot Card File Installation Dimensions

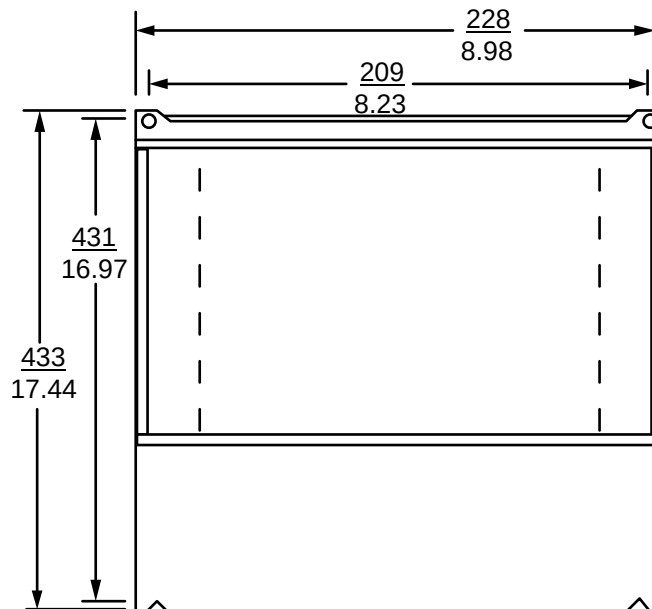


Note: Dimensions are in millimeters/inches.

16012

15-Slot card file dimensions

The following figure illustrates the 15-Slot card file's installation dimensions.

Figure 65 15-Slot Card File Installation Dimensions

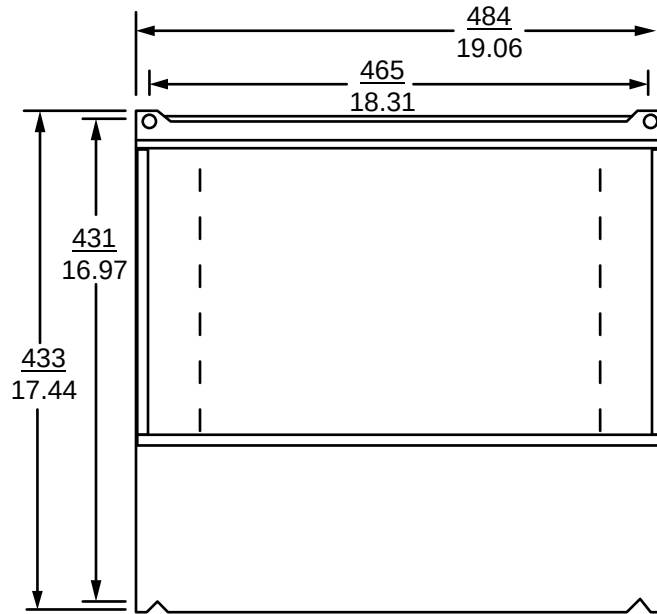


Note: Dimensions are in millimeters/inches.

53135

Installing 7-Slot and 15-Slot card files

The following figure illustrates the installation of Left and Right 7-Slot and 15-Slot card files in a side-by-side configuration.


Figure 66 Installation of 7-Slot and 15-Slot Card Files

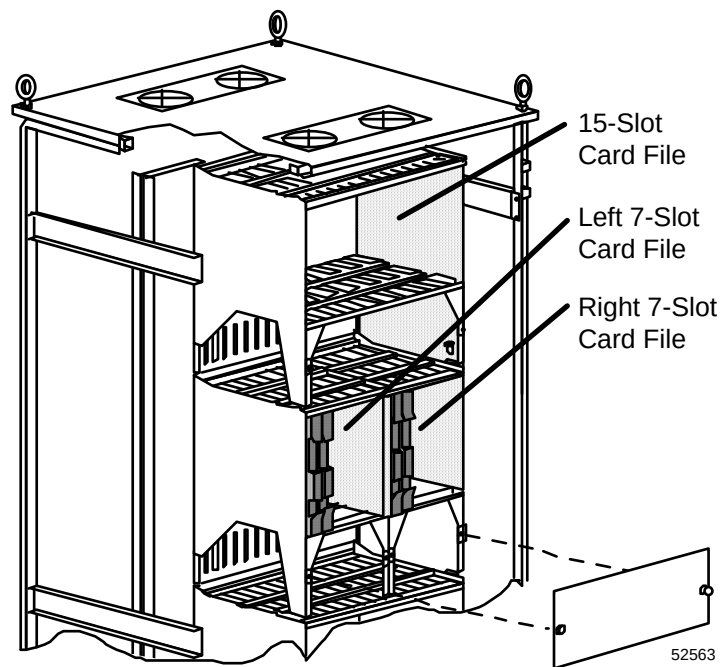

Power System dimensions

The Power System dimensions are shown in the following figure and it also installs on a 19" RETMA mounting infrastructure.

Figure 67 Power System Installation Dimensions

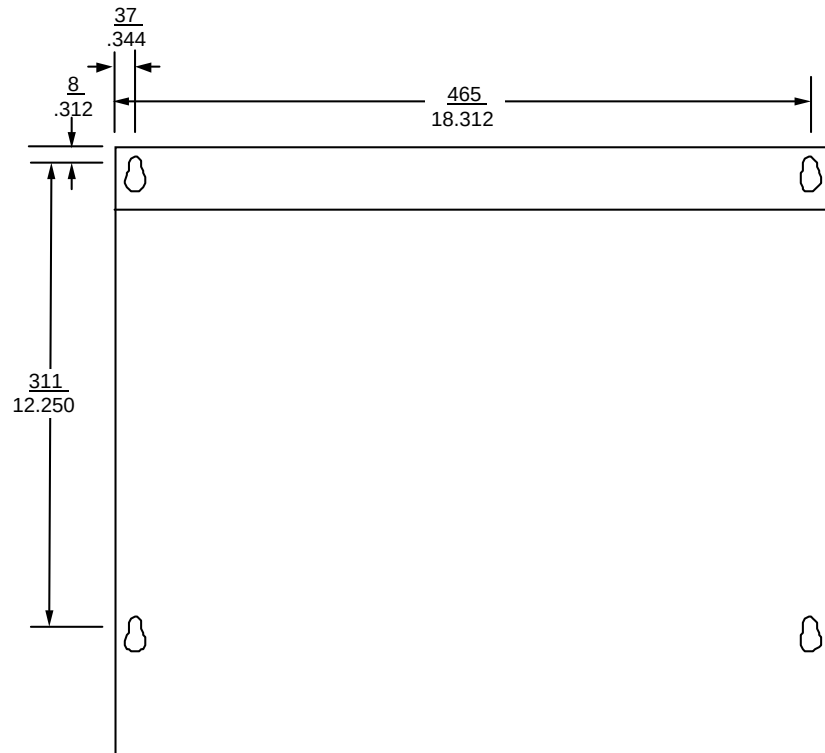

Note: Dimensions are in millimeters/inches.

2818

9.5 FTA Mounting Channel Descriptions



ATTENTION

In the past, it was a requirement that Galvanically Isolated, Intrinsically Safe (GI/IS) FTAs had to be mounted on horizontally oriented FTA Mounting Channels in an HPM cabinet. The requirement is no longer needed because of component and design improvements.

Galvanically Isolated FTAs can now be mounted on vertically oriented FTA Mounting Channels; however, there is still a requirement that Galvanically Isolated FTAs and standard (non-Galvanically Isolated) FTAs, and the wiring to them, be properly separated in the cabinet.

Any FTA Mounting Channels on which Galvanically Isolated FTAs will be mounted must be installed in an inverted (upside down from the normal) position.

The horizontal FTA Mounting Channel information in this section is reference information because some existing installations use horizontal FTA Mounting Channels that may require the installation of additional horizontal FTA Mounting Channels for equipment expansion..

FTA sizes

Field Termination Assemblies (FTAs) are produced in three standard sizes that are dependent on the FTA type and circuit requirements:

- Size A 15.20 cm (6.0 in.) x 12.0 cm(4.75 in.)
- Size B 30.48 cm (12.1 in.) x 12.0 cm (4.75 in.)
- Size C 46.22 cm (18.2 in.) x 12.0 cm (4.75 in.)

They mount on FTA Mounting Channels that are attached to the cabinet's infrastructure.

Three styles

Three styles of FTA Mounting Channels are available:

- Wide vertical
- Narrow vertical
- Horizontal

Selection is based on whether standard or Galvanically Isolated FTAs are installed in the cabinet.

Vertical or horizontal mounting

The FTA Mounting Channels used to mount standard (non-Galvanically Isolated) or Galvanically Isolated FTAs are vertically oriented in the cabinet, and the FTA Mounting Channels used to mount Galvanically Isolated FTAs are horizontally oriented in the cabinet.

Vertical FTA Mounting Channels

Overview

Both standard (non-Galvanically Isolated) and Galvanically Isolated FTAs are mounted on a vertically oriented FTA Mounting Channel in the cabinet. The vertical FTA Mounting Channel has two channels (troughs), right and left.

When standard FTAs are mounted on the vertical FTA Mounting Channel, the FTA Mounting Channel is installed in its “normal” position where field wiring enters the left channel and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s) or Power Distribution Assemblies are routed in the right channel of the FTA Mounting Channel.

When Galvanically Isolated FTAs are mounted on the vertical FTA Mounting Channel, the FTA Mounting Channel is installed in its “inverted” position where field wiring enters the right channel and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s) or Power Distribution Assemblies are routed in the left channel of the FTA Mounting Channel.

Galvanically Isolated FTAs and standard FTAs must not be mounted on the same FTA Mounting Channel.

Single-access cabinet

The vertical FTA Mounting Channel length of approximately 93 centimeters (36 inches) is approximately half the height of the cabinet, so up to four narrow FTA Mounting Channels and three wide FTA Mounting Channels can be mounted adjacent to each other below the Power System in a single-access cabinet as shown in Figure 60.

Dual-access cabinet

In the dual-access cabinet, one FTA Mounting Channel is normally installed above another, adjacently in pairs, as shown in Figure 41.


Vertical FTA Mounting Channel configurations

The following figure illustrates four typical vertical FTA Mounting Channel cabinet configurations.

Figure 68 FTA Mounting Channel Configurations

9. Model MU-CBSX01/MU-CBDX01 Cabinets

9.5. FTA Mounting Channel Descriptions

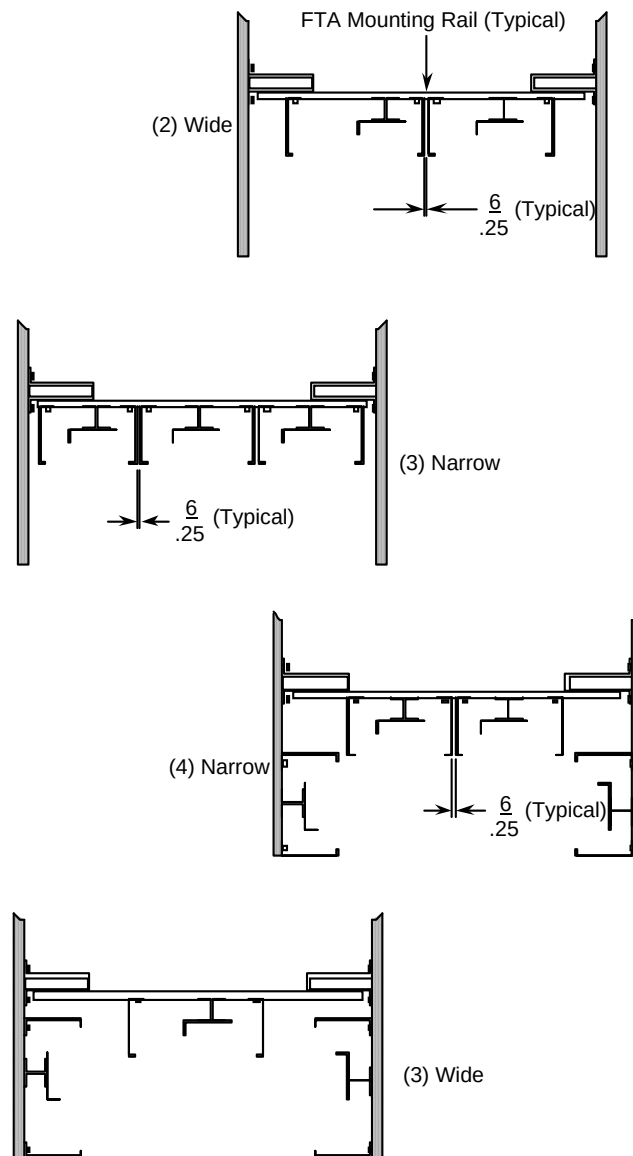

Note: Dimensions are in millimeters/inches.

2823

Vertical FTA Mounting Channel widths


Vertical FTA Mounting Channels are available in two widths:

Narrow 22.2 cm (8.75 in.) W x 10.8 cm (4.25 in.) D x 93 cm (36.6 in.) L

Wide 27.3 cm (10.75 in.) W x 10.8 cm (4.25 in.) D x 93 cm (36.6 in.)

The following figure illustrates the FTA Mounting Channel dimensions.


Figure 69 FTA Mounting Channel Dimensions

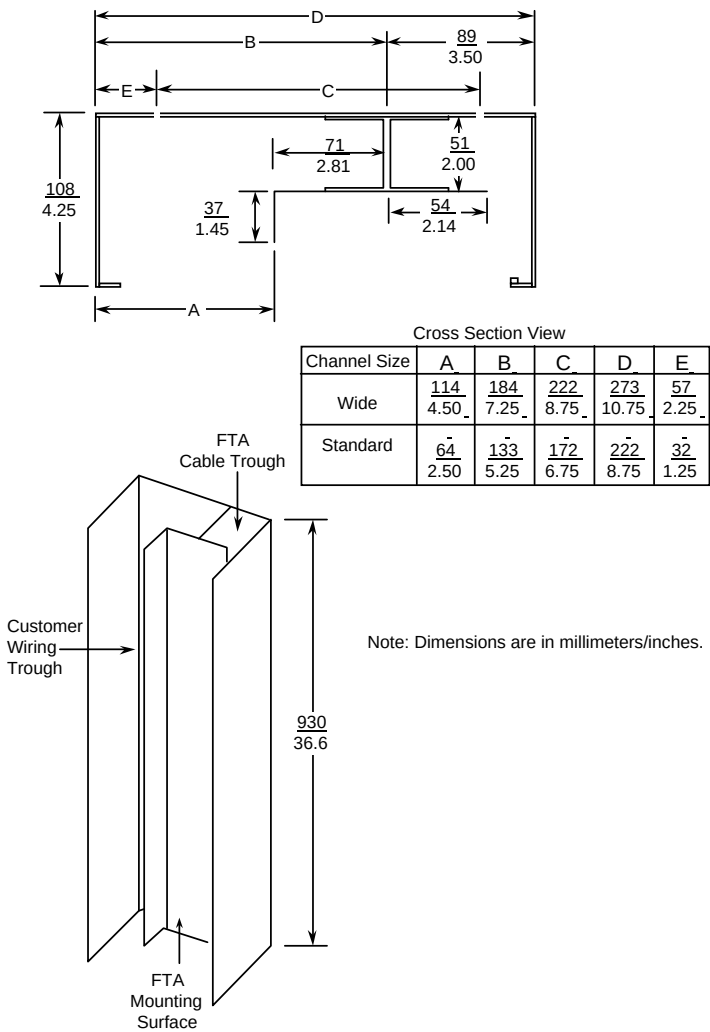

2820

Vertical FTA Mounting Channel installation holes

The following figure illustrates the locations of the FTA mounting holes on the FTA Mounting Channel and the holes used to install the FTA Mounting Channel.

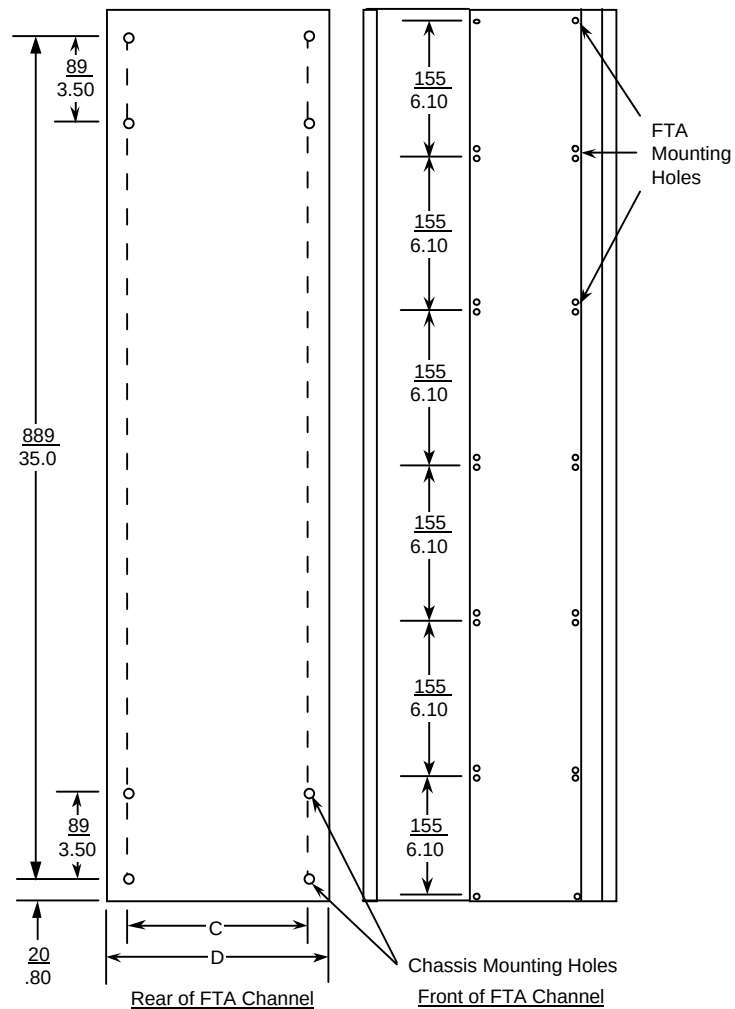Figure 70 FTA Mounting Channel Mounting FTA Installation Holes

Note: See the previous figure for C and D dimensions.
Dimensions are in millimeters/inches.

2821

Horizontal FTA Mounting Channel**Overview**

Only Galvanically Isolated FTAs can be mounted on horizontal FTA Mounting Channels in the cabinet. The FTA Mounting Channels have two channels (troughs), upper and lower. Field wiring enters the lower channel from the right side of the cabinet and connects to the FTAs. The cables connecting the FTAs to their associated IOP(s), Power Distribution Assemblies, and Marshalling Panels, if present, are routed in the upper channel of the FTA Mounting Channel from the left side of the cabinet.


Single-access FTA Mounting Channel installation

Up to three of the 62-centimeter (24.4-inch) long horizontal FTA Mounting Channels can be installed below the Power System in a single-access cabinet. A gap of approximately 22.9 centimeters (9 inches), the approximate width of a horizontal FTA Mounting Channel, must be maintained between the FTA Mounting Channels and the Power System.

Dual-access FTA Mounting Channel installation

In the dual-access cabinet, up to eight FTA Mounting Channels can be installed on one side of a cabinet as shown in the following figure.

Figure 71 Horizontal FTA Mounting Channel Cabinet Layout

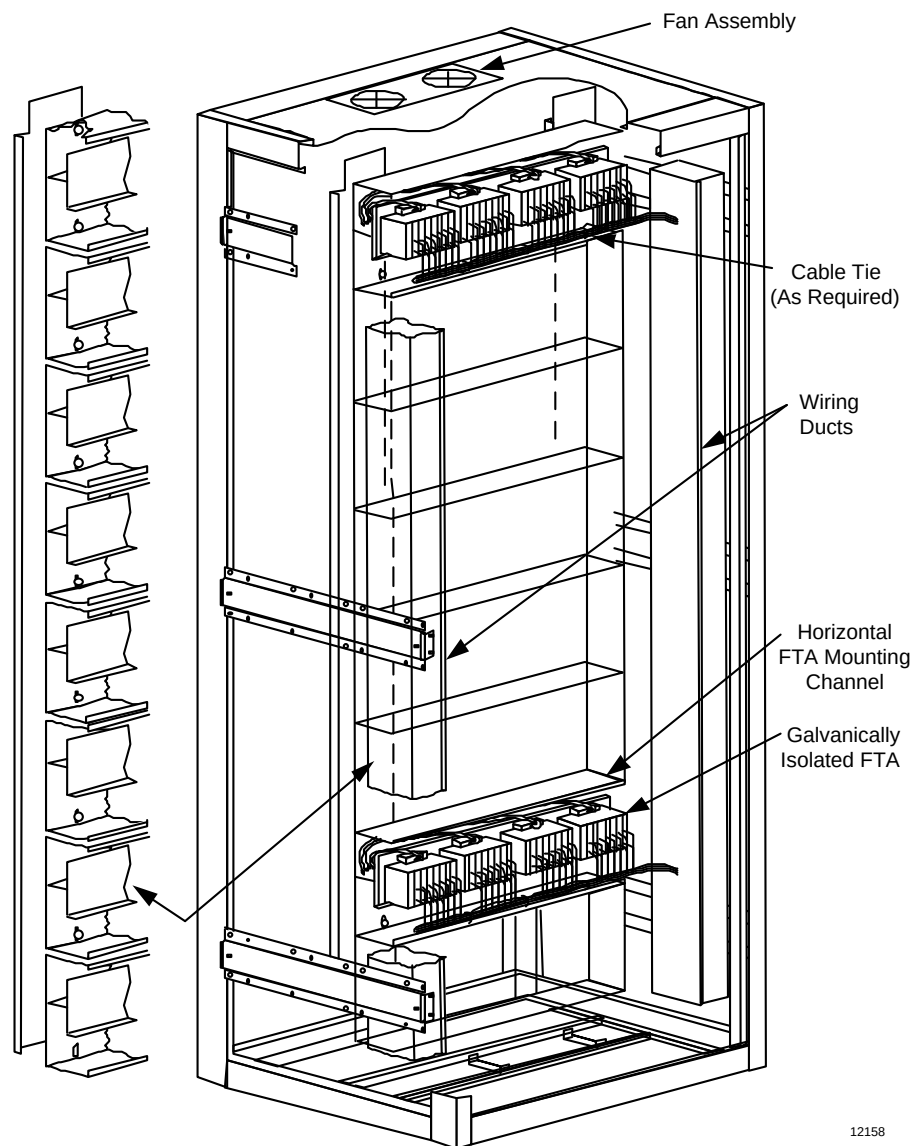


FTA Mounting Channel widths

Horizontal FTA Mounting Channels are available in a single width.

- 22.2 cm (8.75 in.) W x 10.8 cm (4.25 in.) D x 62.0 cm (24.4 in.) L

The following figure illustrates the FTA Mounting Channel dimensions.

Figure 72 Horizontal FTA Mounting Channel Dimensions

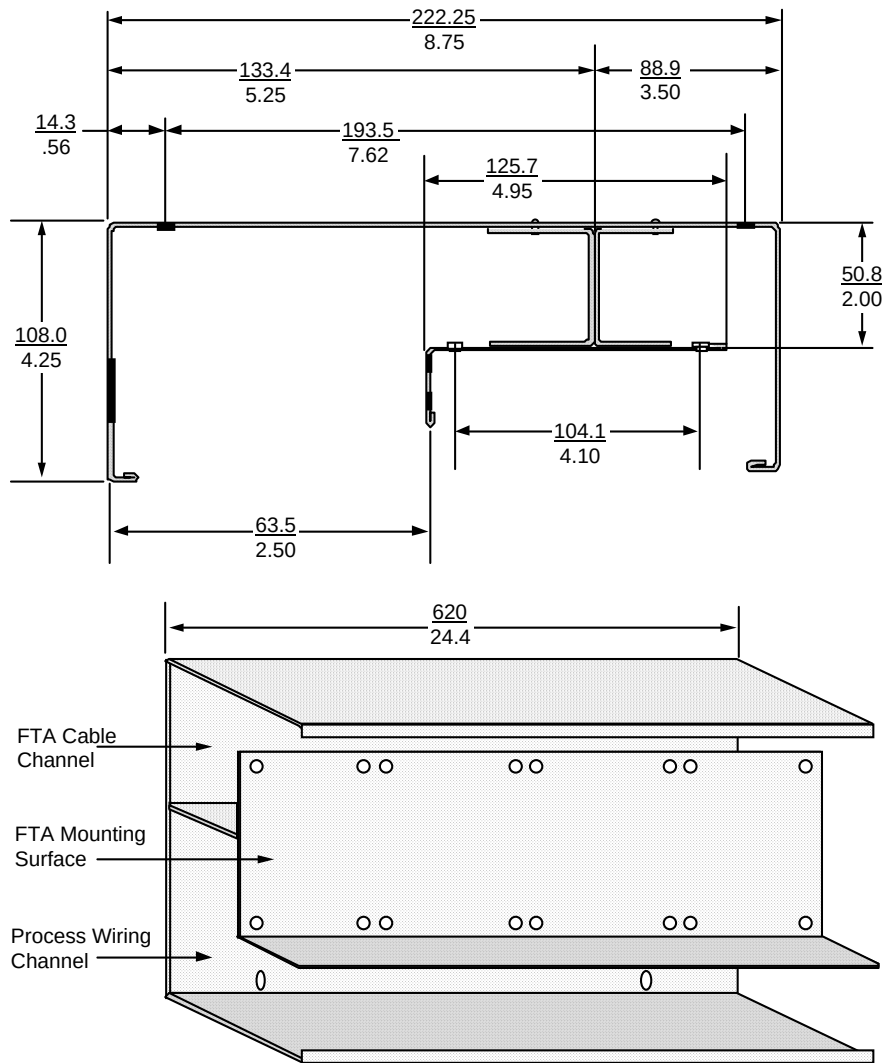


Note: Dimensions are in millimeters/inches.

12136

Horizontal FTA Mounting Channel installation holes

The following figure illustrates the locations of the FTA mounting holes on the FTA Mounting Channel and the holes used to install the FTA Mounting Channel in the cabinet.

Figure 73 Horizontal FTA Mounting Channel Installation Holes

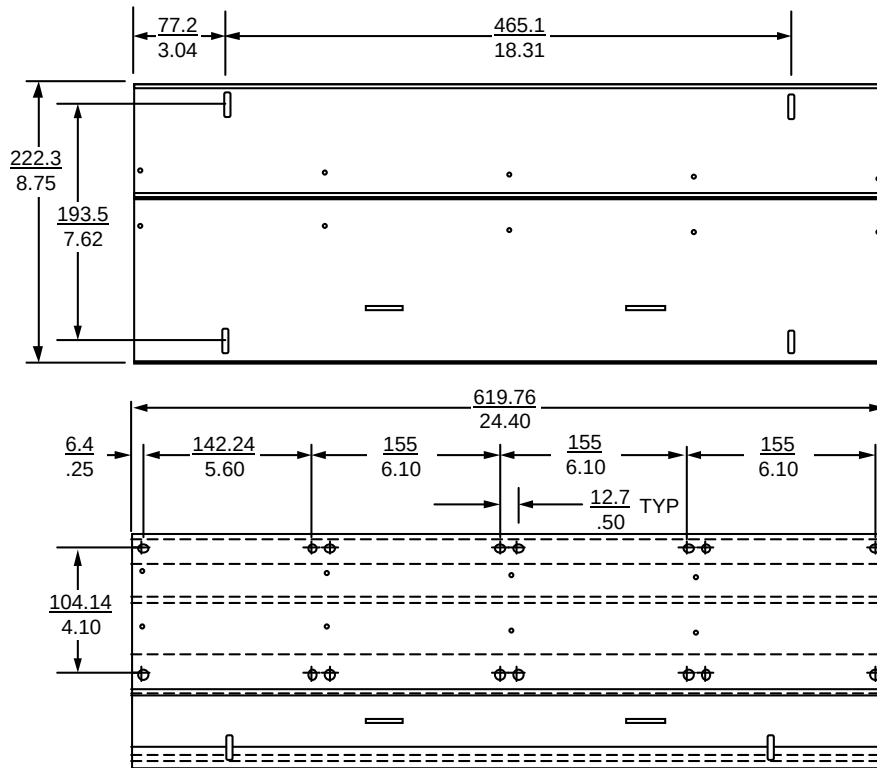

Note: Dimensions are in millimeters/inches.


12138

9.6 Cabinet Floor Planning


Floor template

The following figure is cabinet floor template That will help you in plan your facility layout when installing High-Performance Process Manager cabinets.


Figure 74 Cabinet Floor Planning Template




Single Dual Access Cabinet




Single Single Access Cabinet




Dual Dual Access Cabinet Complex




Dual Single Access Cabinet Complex




Triple Dual Access Cabinet Complex



Triple Single Access Cabinet Complex



Quad Dual Access Cabinet Complex



Quad Single Access Cabinet Complex

Note:

1. Cabinet scale is 1/4 inch = 1 foot.
2. A dual access cabinet is approximately 30 inches by 30 inches. The side and door panels add 1.5 inches to each cabinet dimension. When cabinets are complexed, 1.5 inches is added to the total complex dimensions.
3. A single access cabinet is approximately 30 inches wide and 21 inches deep. The side panels and the single door panel add 3/4 inch to the cabinet depth and 1.5 inches to the cabinet width. When cabinets are complexed, 3/4 inch is added to the complex depth and 1.5 inches is added to the total complex width.

2868

10. Redundancy Planning

10.1 Redundant HPM Configurations

HPMM card file types

HPMM hardware, which consists of the High-Performance Comm/Control and High-Performance I/O Link cards and the HPM UCN Interface module, is available in three unique card file configurations. They are

- Left 7-Slot HPMM card file—An HPMM card set occupies the two left-most card slots (1-2) with five card slots (3-7) that dedicated to IOP cards.
- Right 7-Slot HPMM card file—An HPMM card set occupies the two left-most card slots (9-10) with five card slots (11-15) that are dedicated to IOP cards.
- 15-Slot HPMM card file—An HPMM card set occupies the two left-most card slots (1-2) with thirteen card slots (3-15) that dedicated to IOP cards.

Redundant 7-Slot HPMM card files

The two types of 7-Slot HPMM card files are intended to be used in a small HPM subsystem.

For a subsystem that requires redundant HPMMs, Left and Right 7-Slot card files are installed. Both card files are assigned the same the same I/O Link Interface address. There is no slot 8 because the card file slots are numbered 1 through 7 and 9 through 15.

Both card files are normally installed in the same cabinet, adjacent to each other, and share the same Power System. If they share the same Power System, it is recommended the Power System have redundant Power Supply Modules.

However, they can be installed in separate cabinets of a cabinet complex and not share the same Power System. If the system is large enough, installing the card files in separate cabinets with separate Power Systems is preferred because subsystem reliability is increased by the use of separate Power Systems.

Redundant 15-Slot HPMM card files


Redundant 15-Slot HPMM card files are ideal for a larger HPM subsystem. They can be installed in the same cabinet, one above the other, and share the same Power System or in separate cabinets of a cabinet complex and not share the same Power System. Installing the card files in separate cabinets with separate Power Systems is preferred because subsystem security is increased greatly by the use of separate Power Systems.

Unlike Left and Right 7-Slot HPMM card files, each 15-Slot HPMM card files must be assigned a unique I/O link address.

Redundant HPMMs in a single cabinet

The following figure illustrates a High-Performance Process Manager subsystem with redundant HPMMs that share the same Power System in a single cabinet. The card files are shown with redundant pairs of AO and HLAI IOPs that are labeled “A” and “B.” When power is removed from one card file, the backup IOP can maintain communication with their associated FTA.

Figure 75 Single Cabinet with Redundant HPMMs

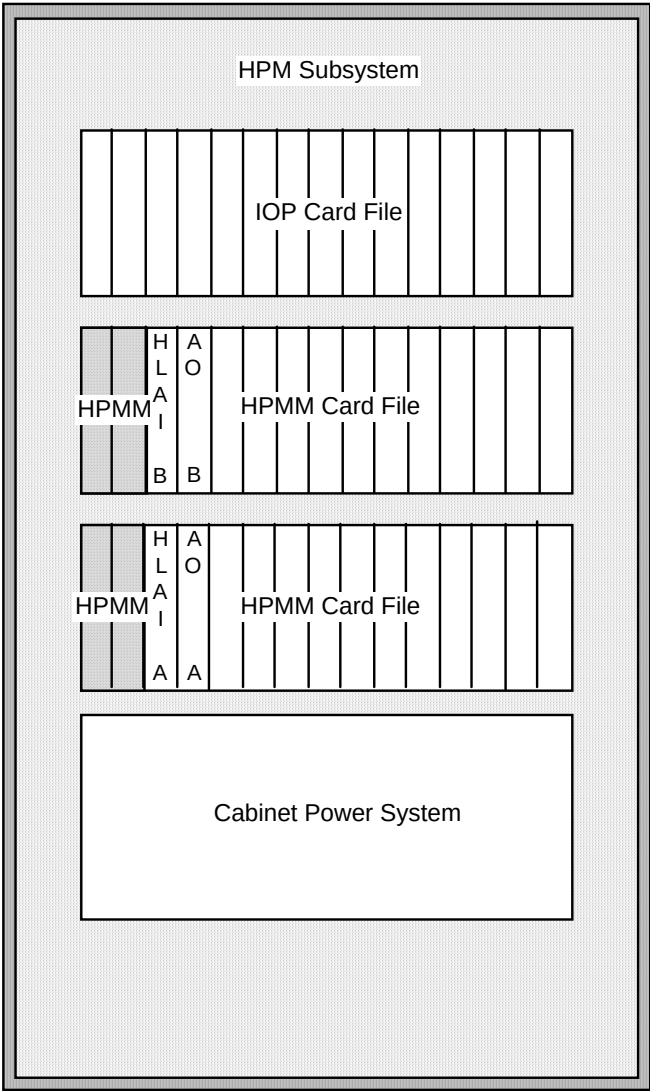

16013

Redundant HPMMs in separate cabinets

HPMM card files can be located in an adjacent cabinet in a cabinet complex, with each cabinet having an independent Power System.




ATTENTION

This configuration offers the most reliable operation.

Dual cabinet illustration

The following figure illustrates a High-Performance Process Manager subsystem with redundant HPMMs in separate cabinets, each with an independent Power System. Redundant pairs of HLAI, AO, and STI IOPs are shown and are labeled “A” and “B.”

Figure 76 Dual Cabinets with Redundant HPMMs

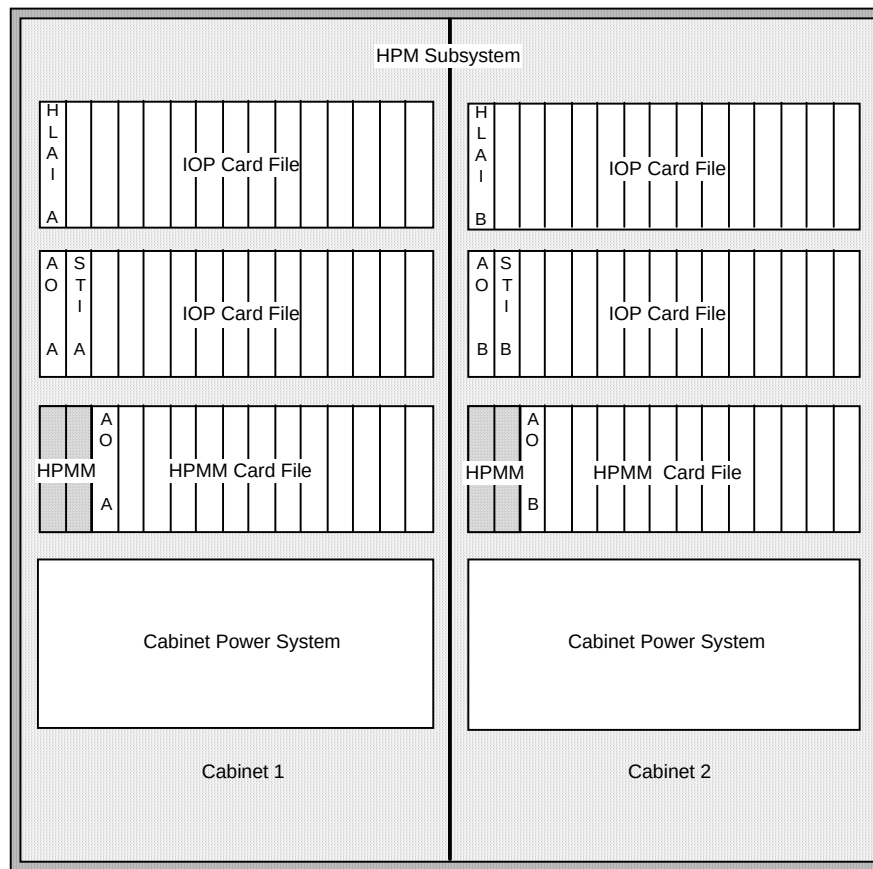


16014

Redundancy interface cable

If the HPMM card files are located in separate cabinets, the cabinets must be adjacent because the redundancy interface cable between the card files cannot exceed 2 meters (6.5 feet). The following figure illustrates the redundancy cable connection between the two card files.

Figure 77 Redundant HPMM Configuration Cabling

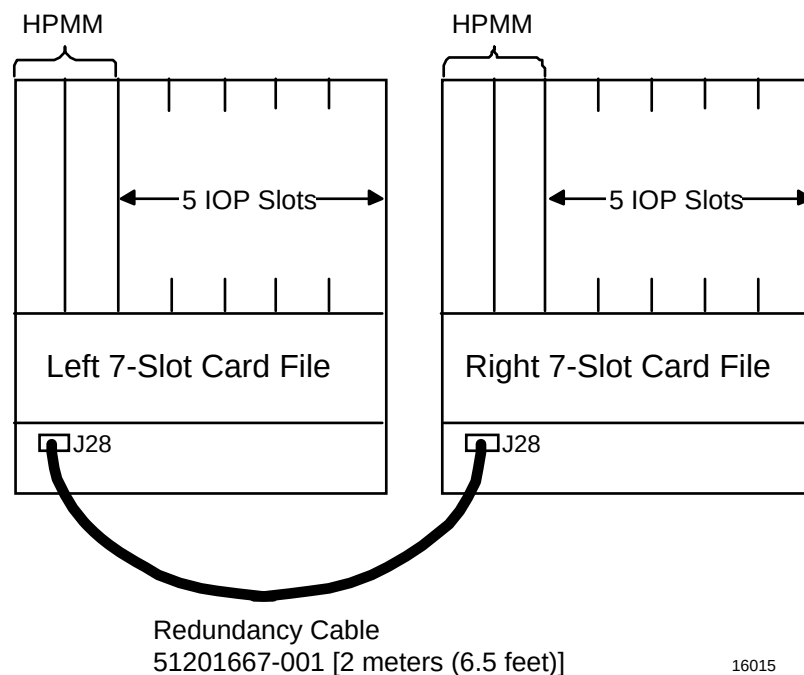

16015

Additional power failure protection

If HPMM card files are located in separate cabinets with independent Power Systems, the installed IOP cards are provided with additional subsystem failure protection. The Power Systems can be connected to different ac line power sources.

It is recommended, however, that the cabinets be complexed together to reduce ground loops that may occur because of ground potential differences.

10.2 Redundant IOP Placement

Recommendations

Most High Level Analog Input (HLAI)/Smart Transmitter Interface (STI), Analog Output (AO), Digital Input (DI), and Digital Output (DO) FTAs support redundant IOP card capability. The redundant IOP card pairs can be installed in any available slot in the card file and function properly; however, to take full advantage of IOP redundancy, consider the following recommendations.

HPMM card files in separate cabinets

Redundant IOP card pairs in a High-Performance Process Manager subsystem with the redundant HPMMs that are located in HPMM card files in separate cabinets of a complex, should be installed in separate card files in separate cabinets. Card files in separate cabinets, with independent Power Systems for both the redundant HPMM card set and IOP cards, provide the maximum subsystem security and availability. Figure 76 is an illustration of a typical cabinet complex configuration.

As an aid to system maintenance, the IOP card pairs should also be installed in the same slot number in the separate card files.

HPMM card files in same cabinet

Redundant IOP card pairs in a High-Performance Process Manager subsystem with redundant HPMMs that are located in HPMM card files within the same cabinet should be installed in separate card files. The separate card files can consist of HPMM card files, or an additional IOP card file in the same cabinet as illustrated in Figure 75.

If the High-Performance Process Manager subsystem is large enough, an additional card file in another cabinet in the same cabinet complex would provide an ideal location for the installation of one of the IOP card pair. The separate cabinet could have an independent Power System.

As an aid to subsystem maintenance, the IOP card pairs should also be installed in the same slot number in both card files.

Redundant HPMMs recommended for redundant IOPs

Redundant IOP card pairs in a High-Performance Process Manager subsystem with a nonredundant HPMM is not recommended, but is feasible. The pair of IOPs should be installed in separate card files, with independent Power Systems if possible, and installed in the same slot number in each card file as an aid to system maintenance.



ATTENTION

A remote redundant IOP card installation is functionally possible provided an I/O Link Extender is not installed between the redundant IOP cards.

Both IOP cards of a redundant pair must be located within the distance permitted for the 50-meter FTA to IOP cables.

10.3 Redundancy Support

Power System

Power System capabilities

Assuming no Galvanically Isolated FTAs are installed in a High-Performance Process Manager subsystem, a single Power System can probably support the following HPMM and IOP combinations:

- One HPMM card file and up to 40 physical IOP cards with associated FTAs. This implies support for up to 20 redundant IOP card pairs.
- Two HPMM card files and up to 40 physical IOP cards with their associated FTAs. The Power System will support up to 20 redundant IOP card pairs.
- When only IOP card files are used, such as at a remote location, up to 40 physical IOP cards with their associated FTAs can be installed in the subsystem. The Power System will support up to 20 redundant IOP card pairs.
- Normally, two Power Systems will support 40 redundant IOPs in two cabinets. The exception may be Galvanically Isolated FTAs because they have above normal power requirements.

HPMM to I/O

Guidelines

For a redundant High-Performance Process Manager subsystem, use the following guidelines for HPMM and IOP card file combinations:

- Up to four IOP card files and two HPMM card files can be supported in a redundant local I/O subsystem as shown in Figure 76.
- A maximum of 40 redundant IOP card pairs, installed in up to six IOP card files in a remote redundant I/O subsystem, can be supported.
- The total number of card files (a Left and Right 7-Slot card file pair count as one) in a High-Performance Process Manager subsystem cannot exceed eight (the maximum number of I/O Link Interface addresses available).

Local/remote cabinet configuration

The following figure is an illustration of a local/remote High-Performance Process Manager subsystem cabinet configuration. Redundant IOP pairs, “A” and “B,” are shown for a hypothetical installation.

Figure 78 Local/Remote Cabinet Configuration



16016

11. I/O Link Extender Planning

11.1 I/O Link Extender Description

Introduction

I/O Link Extenders provide the ability to locate a single IOP card file, or a complex of IOP card files, with IOPs and attached FTAs up to 8 kilometers (5 miles) from the HPMM. Two types of I/O Link Extenders and their associated fiber optic couplers are available, the “Standard” I/O Link Extender with up to a 1.3 kilometers link, and the “Long Distance” I/O Link Extender with up to a 8 kilometers link. The connection is made using a pair of fiber optic transmission cables, driven and terminated by a fiber optic coupler that mates with the connector located directly below the I/O Link Extender card in the card file.

I/O Link Extender cards

Each I/O Link Extender consists of two I/O Link Extender cards, one for Link A and one for Link B, that occupy two slots in the HPMM and IOP card file.

Standard I/O Link Interface fiber optic couplers

Each Standard I/O Link Extender card has an associated fiber optic coupler that can drive up to three pair of fiber optic cables. Each cable pair is terminated by a fiber optic coupler that terminates one fiber optic pair.

Long Distance I/O Link Interface fiber optic couplers

Each Long Distance I/O Link Extender card has an associated fiber optic coupler that drives a single pair of fiber optic cables. Each cable pair is terminated by a fiber optic coupler that terminates one fiber optic pair.

Remote card file requirements

Every remote card file requires two I/O Link Extender cards and two fiber optic couplers, one for Link A and one for Link B.

Standard I/O Link Interface assignment

The Standard I/O Link Extender card will drive and terminate Link A or Link B, depending upon the card file number and card file’s slot number in which the card is installed. If the card file number and card file’s slot number are both odd or both even, the card will drive I/O Link A. If the card file number and card file’s slot number are not both odd or both even, the card will drive I/O Link B.

Metallic I/O Link Interface cable required


A metallic I/O Link Interface cable is required between redundant HPMM card files for communication with the IOP card slots in the backup HPMM card file.

Single HPMM

The following figure illustrates the interconnections for a Standard I/O Link Extender in a High-Performance Process Manager that contains a single HPMM. The following HPM subsystem configuration is assumed:

- The HPMM card file is configured as card file #1 (I/O Link Interface address of 0).
- Remote site # 1's I/O card file is configured as card file # 2 (I/O Link Interface address of 1).
- Remote site # 2's I/O card file is configured as card file # 3 (I/O Link Interface address of 2).
- Remote site # 3's I/O card file is configured as card file # 4 (I/O Link Interface address of 3).

Figure 79 Standard I/O Link Extender Interconnections with Single HPMM

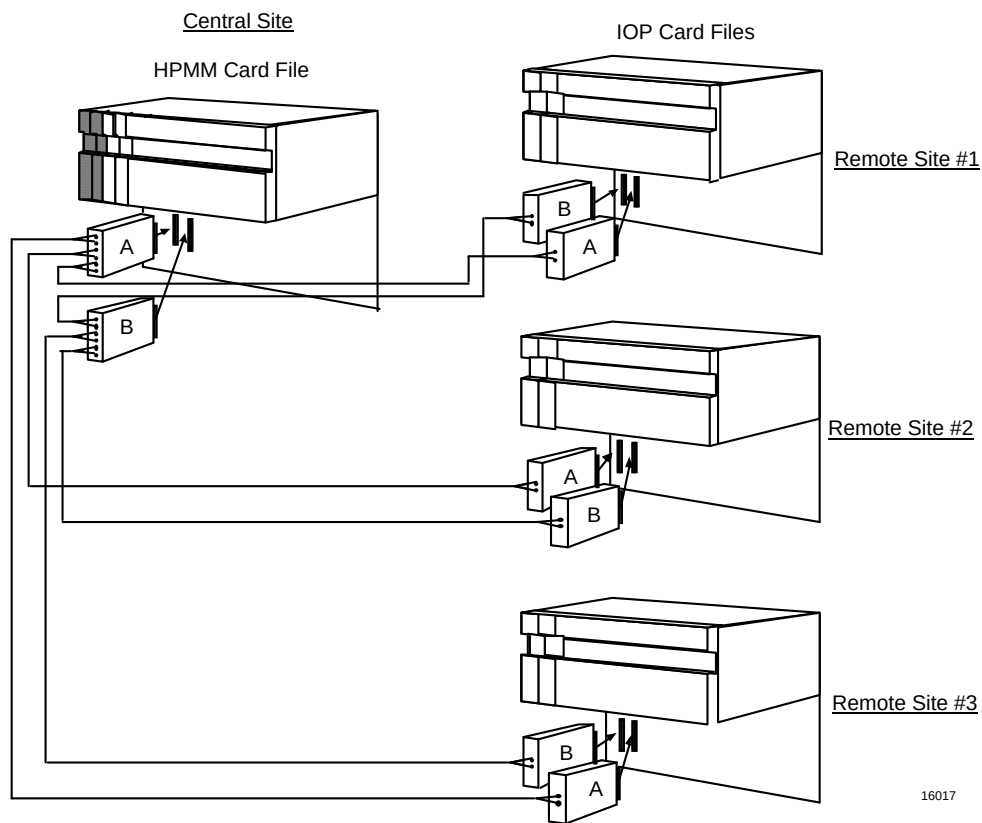


Standard I/O Link Extender Interconnections with Redundant HPMMs

The following figure illustrates the interconnections for a Standard I/O Link Extender in a High-Performance Process Manager that contains redundant HPMMs. The following HPMM subsystem configuration is assumed:

- The lower HPMM card file is configured as card file #1 (I/O Link Interface address of 0).
- The upper HPMM card file is configured as card file #2 (I/O Link Interface address of 1).
- Remote site # 1's I/O card file is configured as card file # 3 (I/O Link Interface address of 2).
- Remote site # 2's I/O card file is configured as card file # 4 (I/O Link Interface address of 3).
- Remote site # 3's I/O card file is configured as card file # 5 (I/O Link Interface address of 4).

Figure 80 Standard I/O Link Extender Interconnections with Redundant HPMMs

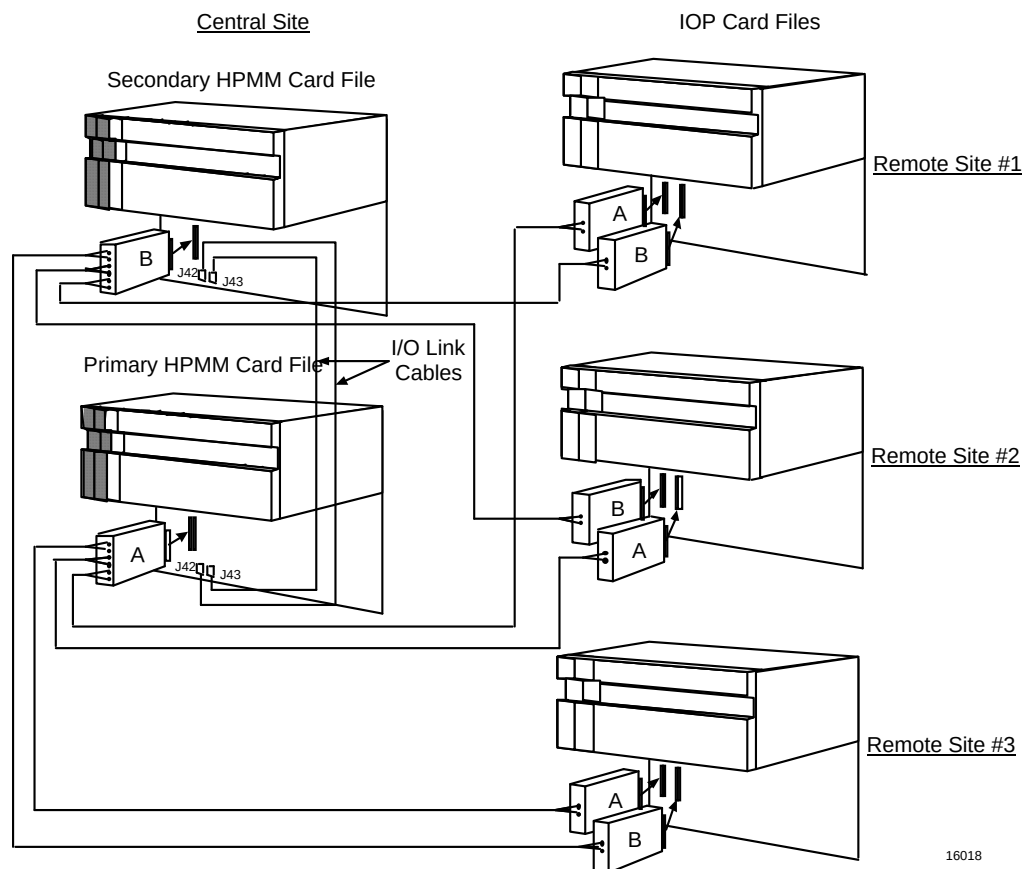

Long Distance I/O Link Interface assignment

Configuration of the A and B Long Distance I/O Link Extender is determined by a jumper on the I/O Link Extender card.

Metallic I/O Link Interface cable required


A metallic I/O Link Interface cable is required between redundant HPMM card files for communications with the IOP card slots in the backup HPMM card file.

Long Distance I/O Link Extender Interconnections with Nonredundant HPMM

The following figure illustrates the interconnections for a Long Distance I/O Link Extender in a High-Performance Process Manager that has a single HPMM. The following HPM subsystem configuration is assumed:

- The HPMM card file is configured as card file #1 (I/O Link Interface address of 0).
- Remote site # 1's I/O card file is configured as card file # 2 (I/O Link Interface address of 1).
- Remote site # 2's I/O card file is configured as card file # 3 (I/O Link Interface address of 2).
- Remote site # 3's I/O card file is configured as card file # 4 (I/O Link Interface address of 3).

Figure 81 Long Distance I/O Link Extender Interconnections with Single HPMM

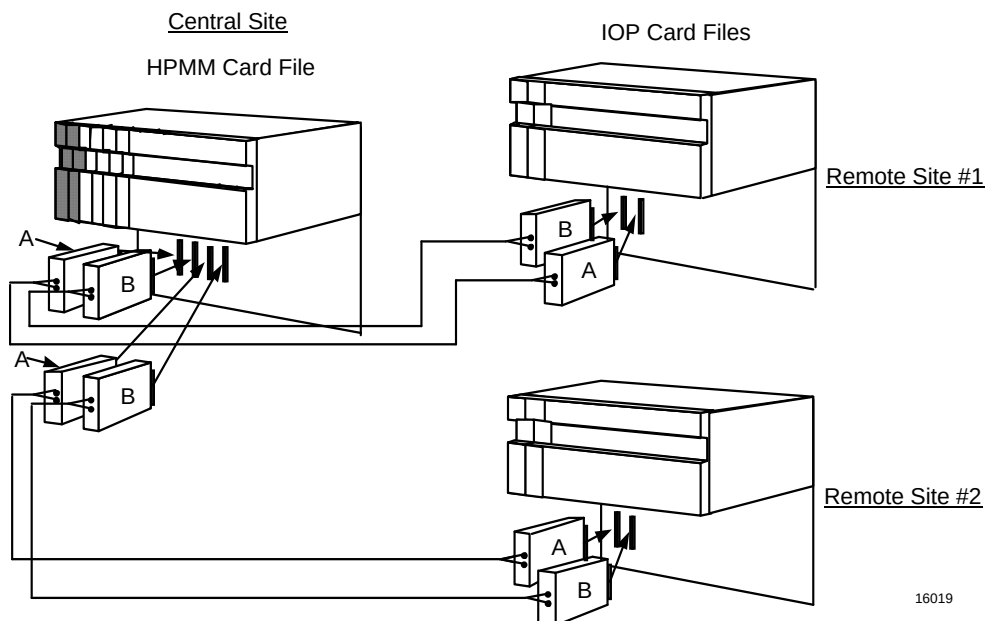


Long Distance I/O Link Extender Interconnections with Redundant HPMMs

The following figure illustrates the interconnections for a Long Distance I/O Link Extender in a High-Performance Process Manager that has redundant HPMMs. The following HPM subsystem configuration is assumed:

- The lower HPMM card file is configured as card file #1 (I/O Link Interface address of 0).
- The upper HPMM card file is configured as card file #2 (I/O Link Interface address of 1).
- Remote site # 1's I/O card file is configured as card file # 3 (I/O Link Interface address of 2).
- Remote site # 2's I/O card file is configured as card file # 4 (I/O Link Interface address of 3).

Figure 82 Long Distance I/O Link Extender Interconnections with Redundant HPMMs

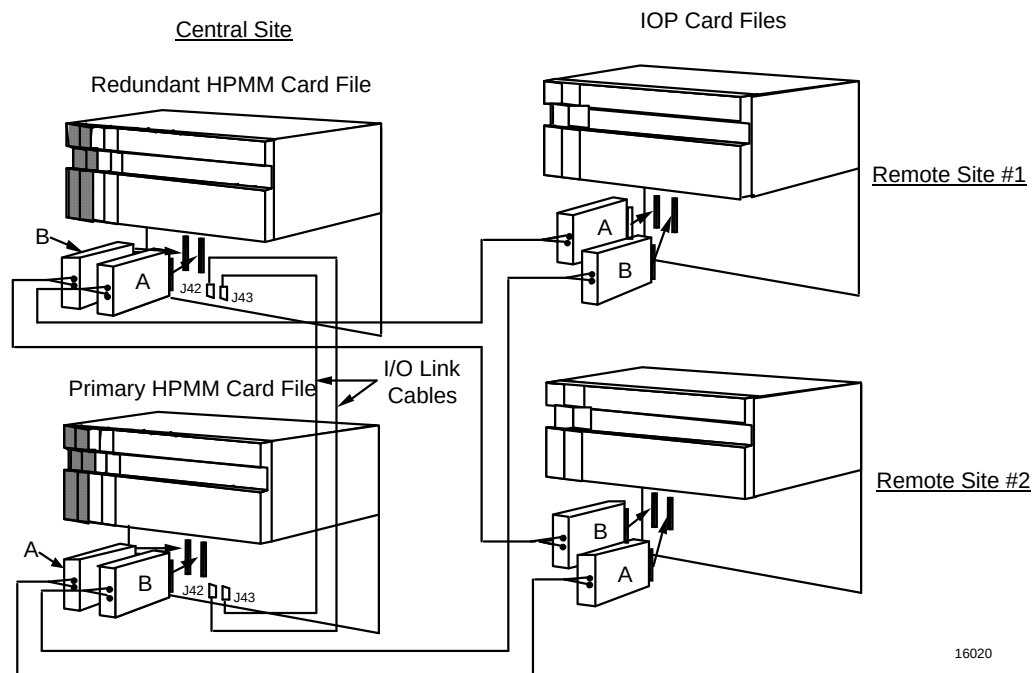

Number of remote card files

Two Standard I/O Link Extenders, connecting up to six remote card files, can be installed in a HPMM card file, but the maximum number of other primary IOPs is still 40 (plus 40 redundant IOPs).

Maximum fiber optic cable length


The maximum fiber cable length is dependent upon the number of splices and quality of the cable (dB loss per meter of cable). This maximum can be between 0.98 and 1.3 kilometers for the Standard I/O Link Extender and up to 8 kilometers for the Long Distance I/O Link Extender. See the "Signal Loss Budget" subsection of the "I/O Link Extender Planning" section for the loss budget calculation.

Remote card file installation

For remote locations consisting of more than one IOP card file, the A and B I/O Link Extender cards are installed in separate card files, and the card files are interconnected with the standard metallic I/O Link Interface cables as shown in the following figure. The following HPM subsystem configuration is assumed:

- The Primary HPMM card file is configured as card file #1 (I/O Link address of 0).
- The Secondary HPMM card file is configured as card file #2 (I/O Link address of 1).
- The remote site's Lower IOP card file is configured as card file #3 (I/O Link address of 2).
- The remote site's Upper IOP card file is configured as card file #4 (I/O Link address of 3).

Figure 83 Remote Site Multi-IOP Card File I/O Link Interface Cabling

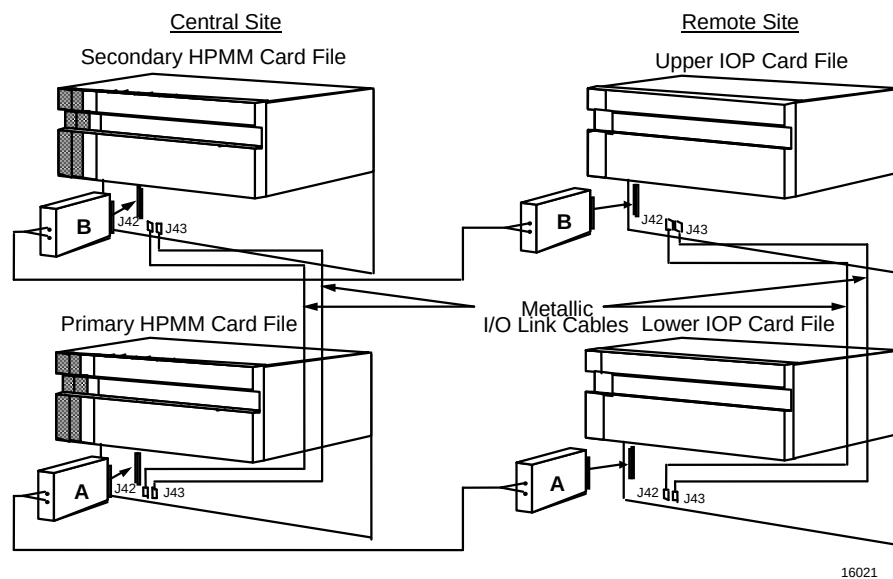

11.2 Fiber Optic Cable Routing

Routing methods

Fiber optic cable can be routed underground (with direct burial cable), through the air (with outdoor aerial cable), or in cable and electrical wiring trays. Fiber optic cable is immune to interference from electromagnetic fields or transmissions. Fiber optic cable is safe to route through intrinsic safety areas with no danger of explosion.

Cable A and B separation

The A and B fiber links should be routed to the destination by different routes to avoid simultaneous damage or cutting to both cables; however, the maximum difference in fiber optic cable length between Link A and Link B must be less than 500 meters (1640 feet) to limit the communications delay difference between Link A and Link B.

Direct Burial

Under ground burial hazards

Heavy duty cables can be buried directly in the ground. Care should be taken to minimize the effects of freezing water, the heaving of rocks caused by the ground freezing, ground disruption because of construction, and rodents.

Type of cable to use

The most durable jacket material for environmental hazards, such as crushing and abrasion, is polyethylene. An inner layer of steel armor provides additional protection from rodents. Use of heavy duty cables can sometimes be avoided by protecting the cable with conduit or polyethylene pipe.

Aerial Lashing

Aerial lashing methods

Aerial Lashing methods are similar to those used for electrical cables. Most cables are compatible with helical lashing, clamping, or tied mounting.

Vertical Installations

Cable clamping

Cable in vertical trays, raceways, shafts, etc., should be firmly clamped at frequent intervals so that cable weight is supported evenly. Clamping intervals can be as short as one meter (3.3 feet) outdoors to prevent wind slapping and minimize ice loading, or as long as 15 meters (49.2 feet) in interior locations.

Fiber migration

Fiber in vertical installations does not break because of its own weight; however, for vertical runs of 15 meters (49.2 feet), and greater, excess fiber can migrate downward. The crowding of excess fiber at the bottom can cause an increase in attenuation.

Cable loops

This downward migration of fiber in vertical runs can be reduced by placing loops in the cable, approximately 0.3 to 0.5 meter (1 to 1.5 feet) in diameter, at the top, bottom, and at 15-meter (50-foot) intervals.

Indoor Requirements

Cable jacket building code restrictions

Building code requirements frequently do not allow cables with polyethylene jackets. Jackets of polyvinyl chloride are frequently restricted to conduits, while fluoropolymer or other approved jacketed material is required for use in cable trays and air plenums. Cable with suitable jacket material must be selected for the application.

Loose Buffered Cable

Ambient temperature variations

Where ambient temperature variations are 20°C or greater on a daily basis, the life of the fibers can be significantly reduced. In applications where the ambient temperature is not controlled, loose buffered cable must be specified.

Fire code requirements

Loose buffered cable is available in polyethylene jacket material only. Fire codes may dictate that the indoor portion of the cable installation be in metal conduit, or if the temperature is controlled, a splice may be required to convert to a tight buffer cable with a PVC or Fluoride Co-Polymer jacket material.

Number of Fibers

Multi-fiber cable required

Two fibers are required for one link, one for transmit and one for receive. Fiber loss is measured at 22°C $\pm 3^\circ$ and is usually stated as a mean value. Individual fiber losses may be as much as 25% greater than the mean.

Cable damage possible

As insurance against future damage, such as fiber breakage, or encountering excessive loss in any one fiber, the inclusion of spare fibers should be considered. This is especially important for cables that have high installation cost.

Cable Installation

Use professional installers

It is recommended that the fiber optic cable be installed by professional installation contractors. The installers will provide the cable, install the cable, attach ST-type connectors, and do the OTDR test.

62.5 micron cables

62.5 micron cable usage is controlled by Honeywell purchase specification 51190918 for indoor cable and Honeywell purchase specification 51190919 for outdoor cable.

Indoor cables are available with 2, 4, or 6 fibers.

Outdoor aerial and direct burial cables are available with 4, 6, or 8 fibers.

11.3 Indoor Cable Bend Radius

Cable bend requirements

Fiber optic cable is easily damaged by over bending or kinking the cable, so a minimum bend radius is established for each different cable size and cable construction. Indoor cable is the most flexible and outdoor direct burial cable is the least flexible. Table 27 specifies the minimum bend radius for indoor cable.

In the table, short term minimum bend radius refers to the minimum bend radius that is safe during installation. Long term minimum bend radius refers to the minimum bend radius that is safe after the cable installation is completed and settled.

Table 27 Minimum Bend Radius for Indoor Cable

Fibers Per Cable	Minimum Bend Radius (Short Term)	Minimum Bend Radius (Long Term)
2	17.0 cm (6.7 in.)	13.0 cm (5.1 in.)
4	22.0 cm (8.7 in.)	16.5 cm (6.6 in.)
6	26.0 cm (6.7 in.)	20.0 cm (7.9 in.)
8	30.0 cm (6.7 in.)	23.0 cm (9.0 in.)

11.4 Cable Construction

Fiber optic cable selection

The selection of fiber optic cable is dependent upon satisfying installation and environmental requirements without exceeding the maximum optical losses. The factors to be considered when selecting the cable are

- The total fiber optic cable losses
- The cable requirements caused by the desired routing. Routing requirements can include direct burial, conduits, trays, raceways, plenums, etc.
- Construction code requirements

Installation precautions

The installation procedures for placement of fiber optic cables are the same as for electrical wires. Care should be taken to avoid yanking, flipping, or wrapping that can result in unnecessary tightening of the fibers. Fiber optic cables should not be subject to foot traffic or crushing forces. Sharp bending and scraping at entrances and covers should be avoided.

11.5 Cable Splices and Connections

Planning the cabling

When planning a system installation, design the system to have the minimum number of splices. For example, convert outdoor cable to indoor cable when entering a cabinet where the bend radius of outdoor cable will not fit in the cabinet. Where this splicing must be made, sufficient cable length must be provided for a splice loop. Thirty to 45 centimeters (12 to 18 inches) on each cable end is the usual allowance for a service loop. Also, when entering the equipment cabinet, sufficient cable length must be allowed for breakout (stripping and fanning out) and termination of the individual fibers.

Cable splice protection

Completed splices cannot withstand tensile forces and must be housed in a strain relief assembly. Moisture entry into the splice can cause degradation of performance; therefore, the splice enclosure must be sealed, and if necessary, the splice encapsulated to minimize moisture entry.

Cable breakout

Breakout eliminates the outer sheath, leaving the more flexible individual fibers for routing within the cabinet. Tight buffer indoor cables (discussed in the "Loose Buffered Cable" subsection of "I/O Link Extender Planning") provide strength members with each fiber, eliminating the need to use breakout kits to add strength members for each fiber.


Use of a breakout kit

In outdoor loose-buffered, gel-filled cable designs, there is no strength member or protective jacket for the individual fibers. To terminate and use this type of cable requires the use of a breakout or fan-out kit. The kit provides strength members with flexible jackets that are placed over the fibers after the outer jacket is removed. These kits can be installed over fibers as much as ten meters (33 feet) in length. The kit provides fiber protection for in-cabinet routing and termination.

Cables with connectors preinstalled

If the cable length is accurately determined and the cable does not have to be pulled through a conduit, the cables can be ordered with connectors installed on the ends. This requires less field skill and installation time. ST-type connectors, as shown in the following figure, can also be used as a means of splicing two cables; however, to minimize losses at or near maximum cable lengths, professional installation is required using fusion splices.

Figure 84 ST-Type Connector

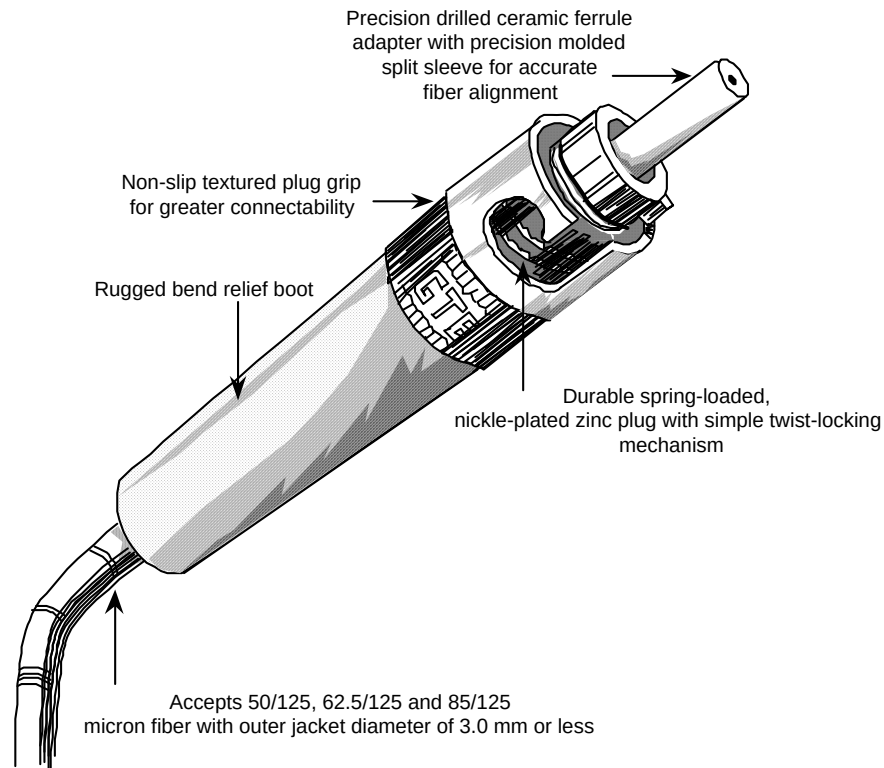

11.6 Signal Loss Budget

Introduction

The fiber cable signal loss budget is the difference between the transmit power and the minimum receiver sensitivity, minus the desired signal loss margin.

Standard I/O Link Extender

Signal loss budget calculation

The signal loss budget for the Standard I/O Link Extender is calculated as follows.

Transmit Power - Receiver Sensitivity = Budgeted Losses

<u>Component</u>	<u>dB Level</u>
Transmitter (62.5 micron fiber)	-16.0
Receiver	<u>(-) -24.0</u>
	8.0
Less power loss over time	<u>(-) 2.5</u>
Available optical cable power	5.5



ATTENTION

The receiver may be overdriven on a short link and may require a 3 dB attenuator. Because the maximum transmitter output level is -7 dB, and the maximum receiver input level is -10 dB. Connector allowances for the transmitter and receiver are included in the above power declaration.

Types of splices

Two types of splices are available, mechanical and fusion.

The mechanical-type of splice consists of a glass tube into which the fiber is secured by ultra violet (UV) curable epoxy.

The fusion-type splice is produced by carefully aligning the fibers and then fusing them together by heating the fibers.

In both cases, the signal loss in the resulting splice is very dependent upon the skill of the installer. The losses at all splices and cable installations need to be certified and recorded at the time of installation for future reference as described in the "I/O Link Extender Planning" section.

Cable span distance formula

To calculate the maximum distance the cable can reliably span:

$$5.5 - (\text{losses in splices}) = D, \text{ the distance}$$

Maximum cable loss in dB/km

The maximum distance for a Premium Performance cable with two fusion splices can be calculated using Table 28 and Table 29.

$$\frac{5.5 - (2 \times 0.3)}{4} = 1.22 \text{ km}$$

4

The maximum distance for High Performance cable with two mechanical splices can be calculated using and Table 29.

$$\frac{5.5 - (2 \times 0.5)}{4} = 1.12 \text{ km}$$

4

Table 28 Standard Optical Power Loss

Type of Splice	Average Loss (dB)	Maximum Loss (dB)
Fusion	0.2	0.3
Mechanical	0.3	0.5
ST-Connector	0.5	0.9

Table 29 Standard Fiber Optic Cable Losses (@ 850 nm)

Type of Cable	Average Loss (dB/km)	Maximum Loss (dB/km)
High Performance	3.75	4.0
Premium	3.50	4.0

Long Distance I/O Link Extender

Signal loss budget calculation

The signal loss budget for the Long Distance I/O Link Extender is calculated as follows.

Transmit Power - Receiver Sensitivity = Budgeted Losses

Component	dB Level
Transmitter (62.5 micron fiber)	-18.0
Receiver	(-) -31.5
	13.5
Less power loss over time	(-) 4.5
Available optical cable power	9.0



ATTENTION

Connector allowances for the transmitter and receiver are included in the optical cable power calculation shown above.

Types of splices

Two types of splices are available, mechanical and fusion.

The mechanical-type of splice consists of a glass tube into which the fiber is secured by ultra violet (UV) curable epoxy.

The fusion-type splice is produced by carefully aligning the fibers and then fusing them together by heating the fibers.

In both cases, the signal loss in the resulting splice is very dependent upon the skill of the installer. The losses at all splices and cable installations need to be certified and recorded at the time of installation for future reference as described in the "I/O Link Extender Planning" section.

Cable span distance formula

To calculate the maximum distance the cable can reliably span for the model MU-ILDX03 I/O Link Extender, use the following formula.

$$\frac{9.0 - (\text{losses in splices})}{\text{Maximum cable loss in dB/km}} = D, \text{ the distance}$$

The maximum distance for a Premium Performance cable with two fusion splices can be calculated using Table 30 and Table 31.

$$\frac{9.0 - (2 \times 0.3)}{2} = 4.2 \text{ km}$$

The maximum distance for High Performance cable with two mechanical splices can be calculated using Table 30 and Table 31.

$$\frac{9.0 - (2 \times 0.5)}{2} = 4.0 \text{ km}$$

Table 30 Long Distance Optical Power Loss

Type of Splice	Average Loss (dB)	Maximum Loss (dB)
Fusion	0.2	0.3
Mechanical	0.3	0.5
ST-Connector	0.5	0.9

Table 31 Long Distance Fiber Optic Cable Losses (@ 1300 nm)

Type of Cable	Average Loss (dB/km)	Maximum Loss (dB/km)
High Performance	1.5	2.0
Premium	1.0	2.0

11.7 Power Level Measurement

Record post installation measurements

After the cables have been connected to the fiber optic transmitters and power has been applied to the equipment, measurements of transmitter output, cable loss and power input to the fiber optic receivers should be recorded for future reference. This procedure is detailed in the *Process Manager I/O Installation* manual.

12. Low Level Multiplexer Planning

12.1 Overview

Introduction

Low Level Analog Input Multiplexer (LLMux) is comprised of three assemblies. They are:

- an IOP
- a Power Adapter
- an FTA

There are two versions of the LLMux and their assemblies are not compatible with each other.

For clarity, the two versions are described as an LLMux and a Remote Hardened Multiplexer (RHMUX). The RHMUX is Approved as Intrinsically Safe and Nonincendive for use in hazardous locations. However, the RHMUX assemblies can also be used in areas that are classified as nonhazardous.

The RHMUX subsystem has the added advantage that the FTA can be located up to 2 kilometers from its Power Adapter.

12.2 LLMux Version

LLMux Configurations

CE Compliance

All models of the Low Level Analog Input Multiplexer (LLMux) Field Termination Assemblies (FTAs), the Power Adapter, and its IOP can be used in a CE Compliant application. However, they must be used with the model MU-KFTSxx IOP to FTA cable and the IOP must be installed in a CE Compliant card file. Table 32 lists FTA, Power Adapter, and IOP model and part numbers.

Table 32 LLMux Assemblies

Model Number	Description	Part Number
MU-TAMR03	LLMux RTD FTA	51309218-125
MC-TAMR03	LLMux RTD FTA – Conformally Coated	51309218-175
MU-TAMT03	LLMux TC FTA	51309223-125
MC-TAMT03	LLMux TC FTA – Conformally Coated	51309223-175
MU-TAMT13	LLMux TC FTA with Remote CJR	51309213-125
MC-TAMT13	LLMux TC FTA with Remote CJR – Conformally Coated	51309213-175
MU-TLPA02	Power Adapter	51309204-125
MC-TLPA02	Power Adapter – Conformally Coated	51309204-175
MU-PLAM02	LLMux IOP	51304362-100
MC-PLAM02	LLMux IOP – Conformally Coated	51304362-150

Compatibility

The LLMux assemblies are compatible only with each other. The assemblies are not compatible with the RHMUX assemblies that are discussed in the subsection of the "Low Level Multiplexer Planning" section.

Non-CE Compliance

The FTAs and the Power Adapter can also be used for a non-CE Compliant applications.

Conformal coating

The LLMux FTA, Power Adapter, and IOP assemblies are available with conformal coating. See Table 32.

Power Adapter

A CE Compliant version of the model MU-TLPA02 Power Adapter (part number 51309204-125 or 51309204-175) must be used with the LLMux FTA models for CE Compliant applications.

Description

Figure 85 illustrates a Low Level Analog Input Multiplexer (LLMux) configuration.

In Figure 85, the LLMux FTA, model MU-TAMR03 or MU-TAMT03/13, communicates with a model MU-PLAM02 LLMux IOP through the model MU-TLPA02 Power Adapter. This can be a non-CE Compliant or CE-Compliant application depending upon the model of the card file that is used.

Two types of LLMux FTAs

The LLMux FTAs that connect to the Power Adapter can be either of two types of FTAs; the model MU-TAMT03/13 Thermocouple (TC) FTA or the model MU-TAMR03 Resistive Temperature Device (RTD) FTA. The combination of the FTA mother board and the daughter board determines the type of FTA.

The two LLMux FTAs that connect to the Power Adapter can be the same type, or different types.

Two thermocouple LLMux FTAs


There are two versions of the Thermocouple LLMux FTA. The model MU-TAMT03 FTA has a single local Cold Junction Reference (CJR) interface, while the model MU-TAMT13 FTA has a remote CJR interface. This allows the CJR to be located up to 50 meters (164 feet) from the FTA with the use of appropriate cabling.

16 LLMux FTA channels

Each type of LLMux FTA has 16 channels that accept low level analog inputs. Two LLMux FTAs connected to a Power Adapter provide 32 channel inputs to the LLMux IOP. This concept causes the LLMux to be known also as the 32 point LLMux.

CE Compliant LLMux configuration

Figure 85 LLMux Configuration Interconnections – CE Compliant

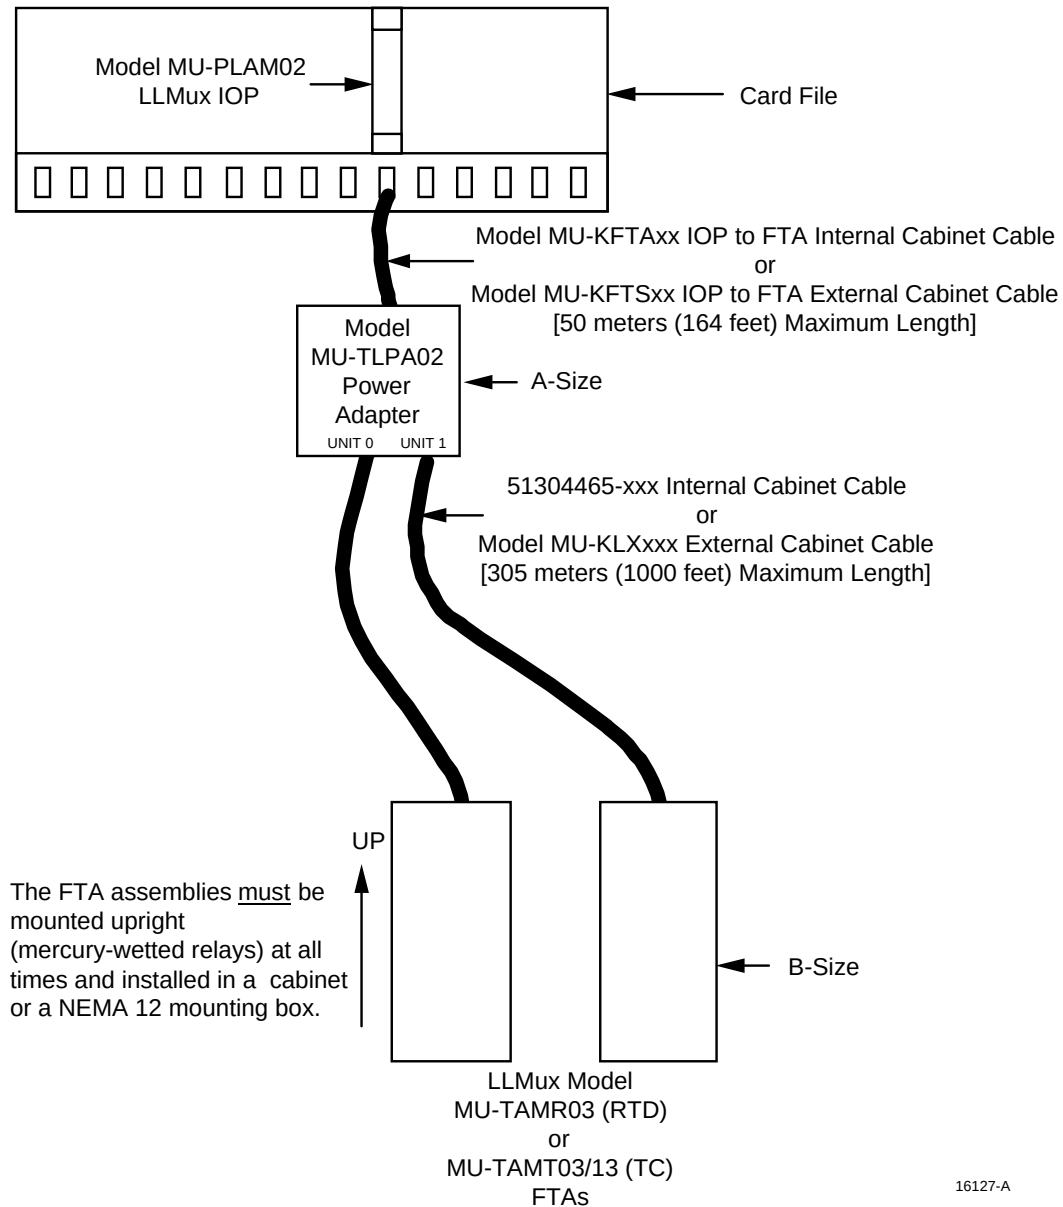

16127-A

LLMux IOP Placement

Install the IOP in any card file

The LLMux IOP can be installed in any available slot in an HPMM or IOP card file.

LLMux Power Adapter Placement

Within 50 meters of IOP

The LLMux Power Adapter can be installed on any available FTA Mounting Channel that is within 50 meters (164 feet) of the LLMux IOP. The restriction is that the longest IOP to FTA cable cannot exceed 50 meters.

IOP to Power Adapter cable

The IOP to Power Adapter interconnection is provided by a model MU-KFTAxx nonshielded cable (the suffix “xx” represents the length of the cable in meters) in 12 sizes, up to 50 meters (164 feet) in length for internal cabinet applications. A model MU-KFTSxx shielded cable is used for external cabinet applications. See the *High-Performance Manager Service or Process Manager/Advanced Process Manager Installation* manual for the lengths that are available.

Power Adapter size

The Power Adapter has the same dimensions as an A-size (6 inches) FTA.

LLMux FTA Placement

FTA size

The LLMux FTA is a B-size (12 inches) FTA

EMI sensitivity

The LLMux FTA is designed to be mounted in a shielded enclosure. This can be accomplished in either of two ways

- Install the FTA in a standard High-Performance Process Manager cabinet on an FTA Mounting Channel. The FTA must be grounded to the cabinet and the cabinet must be grounded to Safety Ground (building ground).
- Install the FTA in a NEMA 12 box with the FTA Mounting Channel grounded to the box, and the box connected to Safety Ground.



WARNING

The practice of mounting an FTA on panel rails is not acceptable because the installed FTA can not be adequately shielded. The FTA must mount on an FTA Mounting Channel.

Within 305 meters of Power Adapter

The remote LLMux FTA cabinet or NEMA 12 box can be located up to 305 meters (1000 feet) from the Power Adapter. The restriction is that the longest Power Adapter to FTA cable cannot exceed 305 meters (1000 feet).



CAUTION

The remotely-installed FTA's environment must meet the same environmental conditions imposed on equipment installed in Process Manager or Advanced Process Manager cabinets. See the "Hazardous Environment Planning" section of this manual and the TPS System Site Planning and Process Manager I/O Installation manuals for additional information.

Mercury-wetted relay contacts

LLMux FTAs contain relays with mercury-wetted contacts and must be positioned with the LLMux power connector-side up.

Local FTA to Power Adapter cabling

When the LLMux FTA is installed in the same cabinet, or cabinet complex, as the Power Adapter FTA, a 51304465-xxx cable ("xxx" represents five sizes – 30, 66, 100, 200, and 300 centimeters) with stripped wire ends is used for the interconnection. See the *High-Performance Process Manager Service* manual for part numbers.

The cable can be used for both non-CE Compliant and CE Compliant applications.

The cable has two individually shielded, twisted-pair wires. For non-CE Compliant applications, the shields must be connected to ground at the Power Adapter end only, and for CE Compliant applications, the shields must be connected to ground at both ends of the cable. The wire connections are made using the compression terminals in a 6-pin connector at the Power Adapter end and in a 4-pin or 6-pin connector at the FTA end.

External Power Adapter to FTA cabling

When LLMux FTA is not installed in the same cabinet, or cabinet complex, as the Power Adapter and up to 305 meters (1000 feet) from the Power Adapter, a model MU-KLXxxx cable ("xxx" represents three sizes – 76, 152, and 305 meters for external cabinet installation). This is a single-twist, four-conductor Belden type 83654 cable with a braided shield and must be used for the interconnection for a CE Compliance application. See the *High-Performance Process Manager Service* manual for part numbers.

References

For additional LLMux IOP and FTA information, see the *Process Manager I/O Installation* or *High-Performance Process Manager Service* manual.

Power Adapter to FTA cable specifications

The 51304465-xxx (internal cabinet) and model MU-KLXxxx (external cabinet) cables have the following specifications.

51304465-xxx power cable (internal cabinet use)

- Manufacturer Type – Belden 9406
- Configuration – Shielded double pair
- Flame Resistance Conformity – CSA FT 4
- CSA Type – CMG
- NEC Type – CMG

Model MU-KLXxxx power cable (external cabinet use)

- Manufacturer Type—Belden 83654
- Cable Configuration—Shielded 18-gauge four-conductor single twist (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6 and UL910
- CSA Type—CMP
- NEC Type—CMP
- Temperature Rating: -70°C to +200°C

Model MU-KRCJ00 remote CJR cable

- Manufacturer Type – Belden model 83653
- Conductors – Three 1.0 mm² (18 AWG) conductors
- Insulation and Jacket – Teflon conductor insulation and jacket
- Shielding – Braid over foil
- Flame Resistance Conformity – CSA PCC FT4/FT 6 and UL910
- NEC Type – CMP
- Use – Air plenum


Remote CJR Installation

Installation requirements

The following figure illustrates remote CJR installation requirements. Model MU-KRCJ00 cable must be used between the remote CJR sensor and the model MU-TAMT13 or MC-TAMT13 FTA. Its length is restricted to 50 meters (164 feet). The cable shield must be connected to Safety Ground at both ends of the cable.

The installation as illustrated is CE Compliant.

Figure 86 Remote CJR Installation

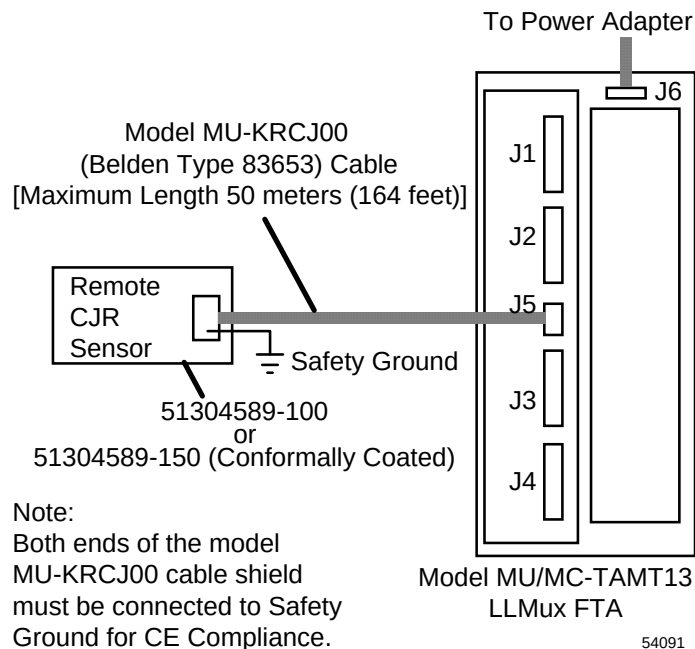

12.3 RHMUX Version

RHMUX Configurations

CE Compliance

All models of the Remote Hardened Low Level Analog Input Multiplexer (RHMUX) Field Termination Assembly (FTA), Power Adapters, and IOP can be used in a CE Compliant application. However, they must be used with the model MU-KFTSxx IOP to FTA cable and the IOP must be installed in a CE Compliant card file. A model MU-KLXxxx or MU-KLO305 Power Adapter to FTA four-conductor cable must also be used with a single ferrite shield or six solid ferrite beads, respectively, installed inside the remote enclosure at the FTA end of the cable. Both types of ferrites are included with the Honeywell enclosure.

Table 33 lists the FTA, Power Adapter, and IOP model part numbers.

Table 33 RHMUX Assemblies

Model Number	Description	Part Number
MC-GRMT01	RHMUX TC FTA with Local CJR Screw Terminals – Conformally Coated	51404106-175
MU-GRPA01	Intrinsically Safe RHMUX Power Adapter	51304724-125
MC-GRPA01	Intrinsically Safe RHMUX Power Adapter Conformally Coated	51304724-175
MU-TRPA01	Non-Incentive RHMUX Power Adapter	51304722-125
MC-TRPA01	Non-Incentive RHMUX Power Adapter Conformally Coated	51304722-175
MU-PRHM01	RHMUX IOP	51404109-125
MC-PRHM01	RHMUX IOP—Conformally Coated	51404109-175
MU-CMSS03	NEMA 4X Stainless Steel Enclosure (35.6 cm wide x 40.7 cm high x 15.2 cm deep)	51309250-100
MU-CMSC03	NEMA 4 Painted Carbon Steel Enclosure (35.6 cm wide x 40.7 cm high x 15.2 cm deep)	51309250-200

Non-CE Compliance

The RHMUX FTA, Power Adapters, and IOP can also be used for non-CE Compliant applications. The model MU-KFTAxx IOP to FTA cable can be substituted for the model MU-KFTSxx cable and a ferrite shield or ferrite beads are not required for the model MU-KLXxxx or MU-KLO305 Power Adapter to FTA cable.

Galvanically Isolated Power Adapters

Both models of the Power Adapter provide Galvanic Isolation between the FTA and the IOP.

Hazardous locations

The RHMUX is designed primarily for Intrinsically Safe applications. However, the RHMUX assemblies can be used in Nonincendive and nonhazardous locations.

Control drawings

The approvals for the RHMUX subsystem are valid only if the appropriate Honeywell control drawing is followed. Drawing 51204105 covers Intrinsically Safe installations and drawing 51204185 covers Nonincendive installations.

Compatibility

The RHMUX assemblies are compatible only with each other. The assemblies are not compatible with the LLMux assemblies that are discussed in the "LLMux Version" subsection of the "Low Lever Multiplexer Planning" section.

Conformal coating

The RHMUX TC FTA is available only with conformal coating. The RHMUX Power Adapter and IOP assemblies are available with or without conformal coating. See Table 33.

Description

One or two RHMUX Thermocouple (TC) FTAs can be connected to either an Intrinsically Safe (IS) Power Adapter or a Non-Incentive (NI) Power Adapter. The Power Adapter also connects to a model MU/MC-PRHM01 RHMUX IOP as illustrated in Figure 87 and Figure 88. Figure 87 illustratea a Nonincendive RHMUX application, and Figure 88, an Intrinsically Safe RHMUX application.

The model MU/MC-GRPA01 Intrinsically Safe RHMUX Power Adapter and the model MU/MC-TRPA01 Non-Incentive Power Adapter are functionally the same.

The RHMUX FTA supports 0 to 100-millivolt and thermocouple inputs. RTD inputs are not supported.

The model MU/MC-PRHM01 IOP supports 32 inputs from two RHMUX FTAs.

RHMUX FTA mounting

The RHMUX FTA dimensions of approximately 13 inches by 13 inches cannot be accommodated by an FTA Mounting Channel in an HPM cabinet and is not intended to be mounted in an HPM cabinet.

The RHMUX agency approvals are valid only when the FTA is mounted in a 35.6 W x 40.7 H x 15.2 D-centimeter (14 W x 16 H x 6 D-inch) model MU-CMSC03 NEMA 4 or model MU-CMSS03 NEMA 4X sealed enclosure that are offered by Honeywell.

The model MU-CMSS03 enclosure is Approved for Division 1 and Division 2, Class I, II, and III locations. The model MU-CMSC03 enclosure is Approved for Division 1 and Division 2, Class I locations only.

Model MU/MC-GRPA01 Power Adapter mounting

The model MU/MC-GRPA01 Power Adapter is the same size as an A-size (6-inch) FTA and can be installed on a standard vertical or horizontal FTA Mounting Channel.


Model MU/MC-TRPA01 Power Adapter mounting

The model MU/MC-TRPA01 Power Adapter is the same size as a B-size (12-inch) FTA and can be installed on a standard vertical or horizontal FTA Mounting Channel.

Nonincendive RHMUX application

The following figure illustrates a Nonincendive application of the RHMUX assemblies. For valid agency approvals, the installation must comply with Honeywell control drawing 51204185.

Figure 87 Nonincendive RHMUX Configuration Interconnections

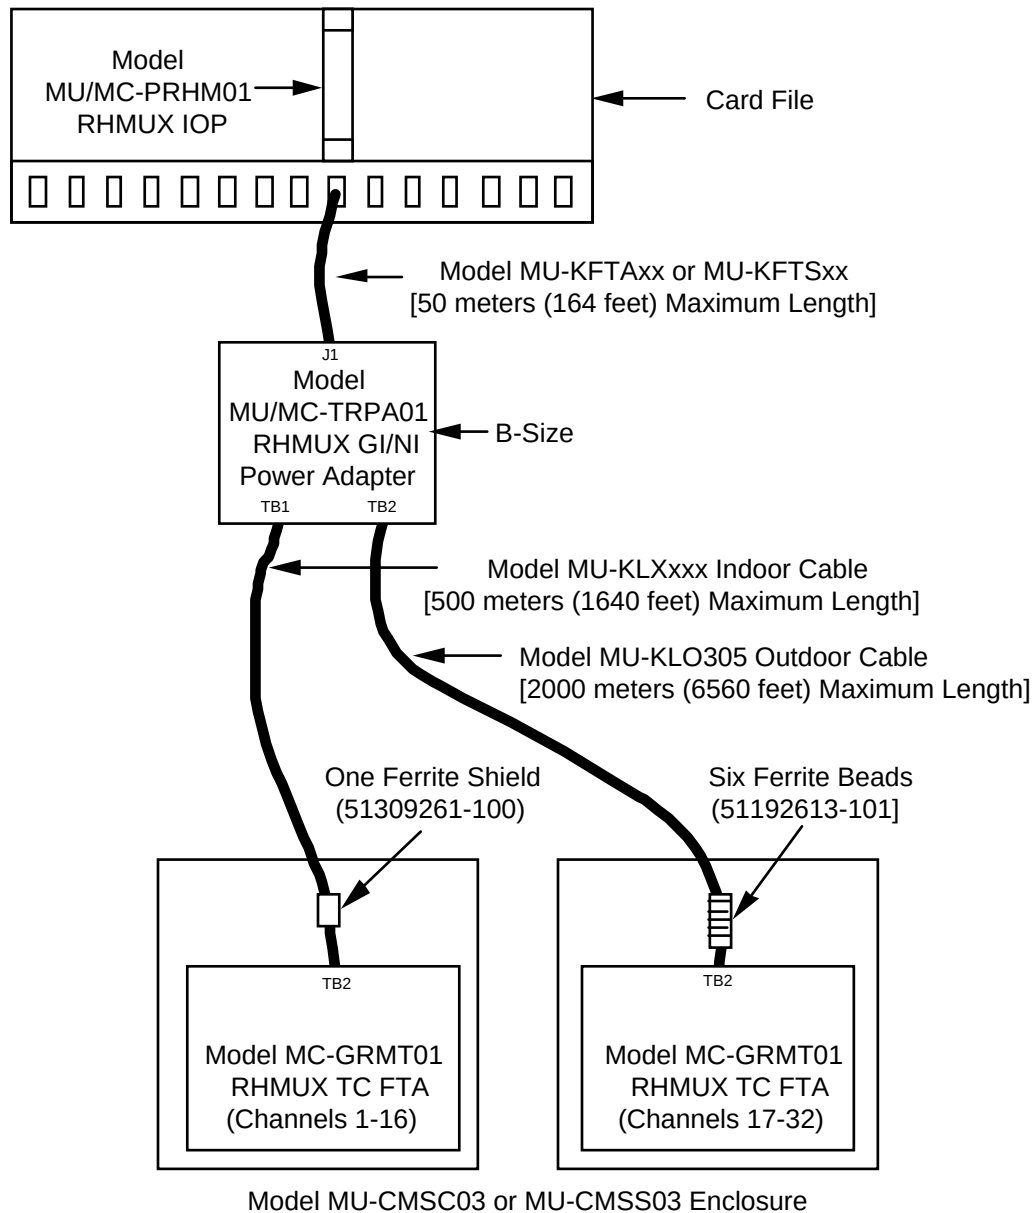


Note: For CE Compliance, use ferrite shield or beads.

16665-A

Intrinsically Safe RHMUX application

The following figure illustrates an Intrinsically Safe application of the RHMUX assemblies. For valid agency approvals, the installation must comply with Honeywell control drawing 51204105.

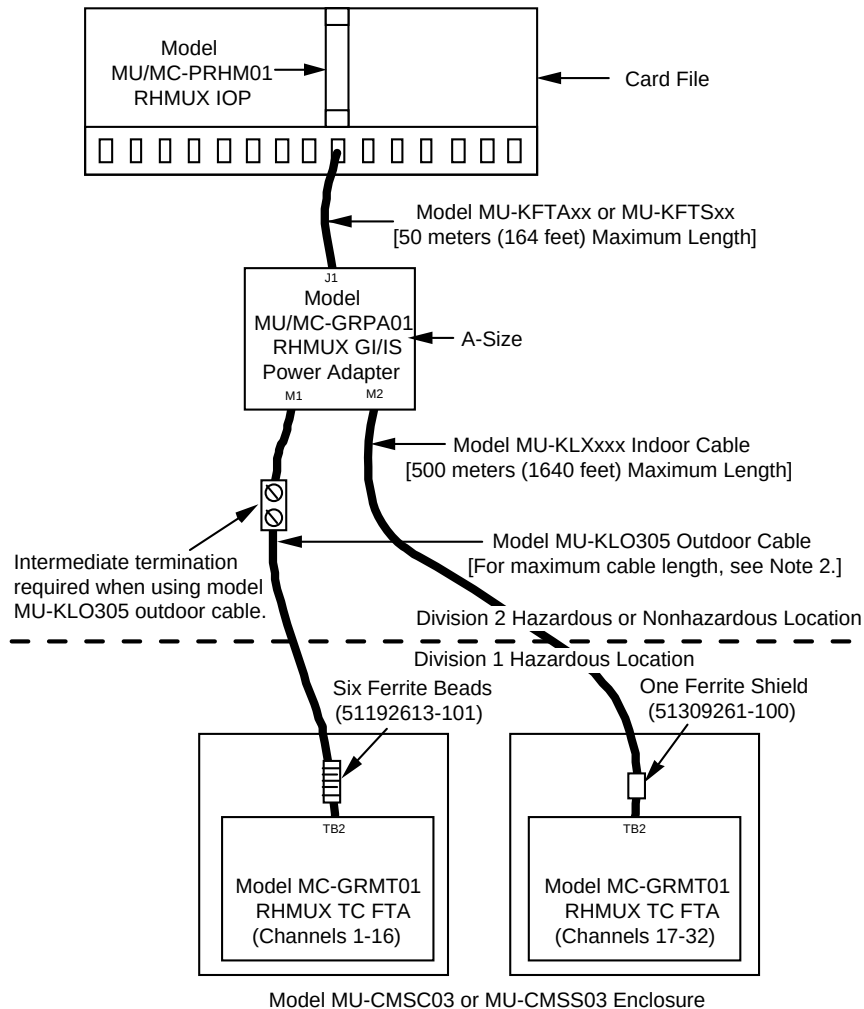Figure 88 Intrinsically Safe RHMUX Configuration Interconnections

Notes: 1. For CE Compliance, use ferrite shield or beads.

2. 1400 meters (4590 feet) Maximum Length for Class I, Group A or B.
2000 meters (6560 feet) Maximum Length for all other locations. 16666-A

RHMUX IOP Placement**Install the IOP in any card file**

The RHMUX IOP can be installed in any available slot in an HPMM or IOP card file.

12.4 RHMUX Power Adapter Placement

Within 50 meters of IOP

The Intrinsically Safe RHMUX and Nonincendive RHMUX Power Adapters can be installed on any available FTA Mounting Channel that is within 50 meters (164 feet) of the RHMUX IOP. The restriction is that the longest IOP to FTA cable cannot exceed 50 meters.

IOP to Power Adapter cable

The IOP to Power Adapter interconnection is provided by a model MU-KFTAxx nonshielded cable (the suffix “xx” represents the length of the cable in meters) in 12 sizes, up to 50 meters (164 feet) in length in a non-CE Compliance application. A model MU-KFTSxx shielded cable must be used for a CE Compliant application. See the *Process High-Performance Process Manager Service or High-Performance Process Manager Installation* manual for the lengths that are available.

12.5 RHMUX FTA Placement

EMI sensitivity

The RHMUX FTA is designed to be mounted in a shielded enclosure.

The recommended method is to install the FTA in a model MU-CMSC03 NEMA 4 enclosure or model MU-CMSS03 NEMA 4X enclosure with the enclosure connected to Safety Ground.

Power Adapter to remote FTA cable length

The maximum acceptable cable length between the Power Adapter and the FTA depends primarily upon the type of cable that is used. For Division 1, Class I, Group A and B locations, there is an additional length restriction.

The model MU-KLXxxx or MU-KLO305 cable can be used in any location for runs of up to 500 meters (1640 feet) between the Power Adapter and the FTA, as long as the cable is does not get wet. If the cable is exposed to precipitation, the model MU-KLO305 cable must be used.

For Division 1, Class I, Group A and B hazardous locations, the model MU-KLO305 cable is used for runs of up to 1400 meters (4590 feet) between the Power Adapter and the FTA. For all other locations, the model MU-KLO305 cable is used for runs of up to 2000 meters (6560 feet).

Within 2000 meters of Power Adapter

Depending on the type of cable used, the remote RHMUX FTA enclosure can be located up to 2000 meters (6560 feet) from the Power Adapter. The restriction is that the longest Power Adapter to FTA cable cannot exceed 2000 meters (6560 feet).

ATTENTION—The environmental conditions imposed on remotely-installed RHMUX FTA's are less restrictive than the environmental conditions imposed on equipment that is installed in Process Manager or Advanced Process Manager cabinets. The RHMUX FTA has a wider temperature range and can tolerate a condensing atmosphere. . See the "Hazardous Environment Planning" section of this manual and the *TPS System Site Planning*, *Process Manager I/O Installation*, and *Process Manager I/O Specification and Technical Data* manuals for additional information.

Indoor environment FTA to Power Adapter cabling

When the Power Adapter to RHMUX FTA cable will be less than 500 meters in length and will be installed indoors or in conduit without the threat of moisture, the model MU-KLXxxx cable (“xxx” represents three lengths – 76, 152, and 305 meters) with stripped wire ends can be used for the interconnection. Custom lengths of the cable can also be ordered with the 51192139-104 assembly number.

The cable can be used for non-CE Compliant, CE Compliant, Intrinsically Safe, Nonincendive, and nonhazardous applications.

The cable is Belden type 83654, which is a four-conductor, single-twist, shielded cable with a Teflon jacket. Each conductor is 18 gauge. The outside diameter of the cable is 5.26 millimeters (0.207 inches) with a minimum bend radius of 57 millimeters (2.25 inches).

The cable’s shield must be connected to the shield ground terminals (S) that are provided at both the Power Adapter and FTA ends of the cable as illustrated in the *Process Manager I/O Installation* manual. The shield must not be connected to Safety Ground. For CE Compliant applications, a single snap-on ferrite shield (Honeywell part number 51309261-100) must be attached to the cable at the FTA end of the cable, inside the remote enclosure.

Outdoor environment Power Adapter to FTA cabling

When the Power Adapter to RHMUX FTA cable will be installed outdoors with the threat of moisture, or a cable length greater than 500 meters is required, a 305-meter model MU-KLO305 cable with stripped wire ends is used for the interconnection. Refer to the *High-Performance Process Manager Service* manual for the cable part numbers.

The cable can be used for non-CE Compliant, CE Compliant, Intrinsically Safe, Nonincendive, and nonhazardous applications.

The cable is a Belden model YC41926 cable which is a four-conductor, shielded, with an armored jacket. Each conductor is 12 gauge. The outside diameter of the cable is 15.7 millimeters (0.62 inches) with a minimum bend radius of 191 millimeters (7.5 inches). The cable can be ordered directly from Belden. Consult with Belden for the spool lengths that are available.

The cable will tolerate moisture from normal precipitation, but the cable must not be submerged and is not suitable for direct burial in this application.

The cable’s shield must be connected to the shield ground terminals (S) that are provided at both the Power Adapter and FTA ends of the cable as illustrated in the *Process Manager I/O Installation* manual. The shield must not be connected to Safety Ground. For CE Compliant applications, six ferrite beads (Honeywell part number 51192613-100) must be installed on the cable at the FTA end of the cable, inside the remote enclosure.

The cable’s 12-gauge conductors will not fit the terminals on the Power Adapter. An intermediate terminal block, such as a Weidmuller DIN-rail terminal block, is required. No intermediate termination is required for the RHMUX FTA if crimp terminals are used.

References

For additional RHMUX IOP, FTA, and Power Adapter information, refer to the *Process Manager I/O Installation* manual.

Power Adapter to FTA cable specifications

The model MU-KLXxxx (indoor environment) and model MU-KLO305 (outdoor environment) cables have the following specifications.

Model MU-KLXxxx power cable (indoor environment)

- Manufacturer Type—Belden 83654
- Cable Configuration—Shielded, 18-gauge, four-conductor, single twist (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6 and UL910
- CSA Type—CMP
- NEC Type—CMP
- Temperature Rating: -70°C to +200°C

Model MU-KLO305 power cable (outdoor environment)

- Manufacturer Type—Belden YC41926
- Cable Configuration—Shielded, 12-gauge, four-conductor, single twist (armored jacket)
- CE Compliant
- PLTC or ITC, 300 volts
- Vertical Tray Flame Test—UL1581/IEEE383
- Temperature Rating: -30°C to +90°C

13. Serial Device Interface Planning

13.1 Serial Device Interface Configurations

Overview

There are three models of the Serial Device Interface (SDI) FTA, MU-TSDT02, MU-TSDM02, and MU-TSDU02. All the FTA models interface with the model MU-PSDX02 Serial Device Interface IOP. One or two Serial Device Interface FTAs can communicate with a single model MU-PSDX02 Serial Device Interface IOP through the model

MU-TLPA02 Power Adapter.

FTA plug-in module determines application

All models of the Serial Device Interface use the same Serial Device Interface FTA assembly. The firmware that is resident in the FTA's plug-in module, M1, determines the selected serial communications interface type (EIA-232 or EIA-422/485) and the interface application. The FTA is assigned a unique FTA model number depending upon the user's application.


EIA-232 and EIA-422/485 interfaces

The Serial Device Interface FTA has both EIA-232 (RS-232) and EIA-422/485 (RS-422/485) asynchronous serial communications interfaces, one of which is active depending on the FTA model number, using either a DB-25 or a 5-terminal compression terminal connector, respectively. The model MU-TSDT02 FTA supports the EIA-232 interface, and the model MU-TSDM02 and MU-TSDU02 FTAs support the EIA-422/485 interface.

SDI interface configuration

The following figure illustrates a typical Serial Device Interface configuration.

Figure 89 Serial Device Interface Interconnections

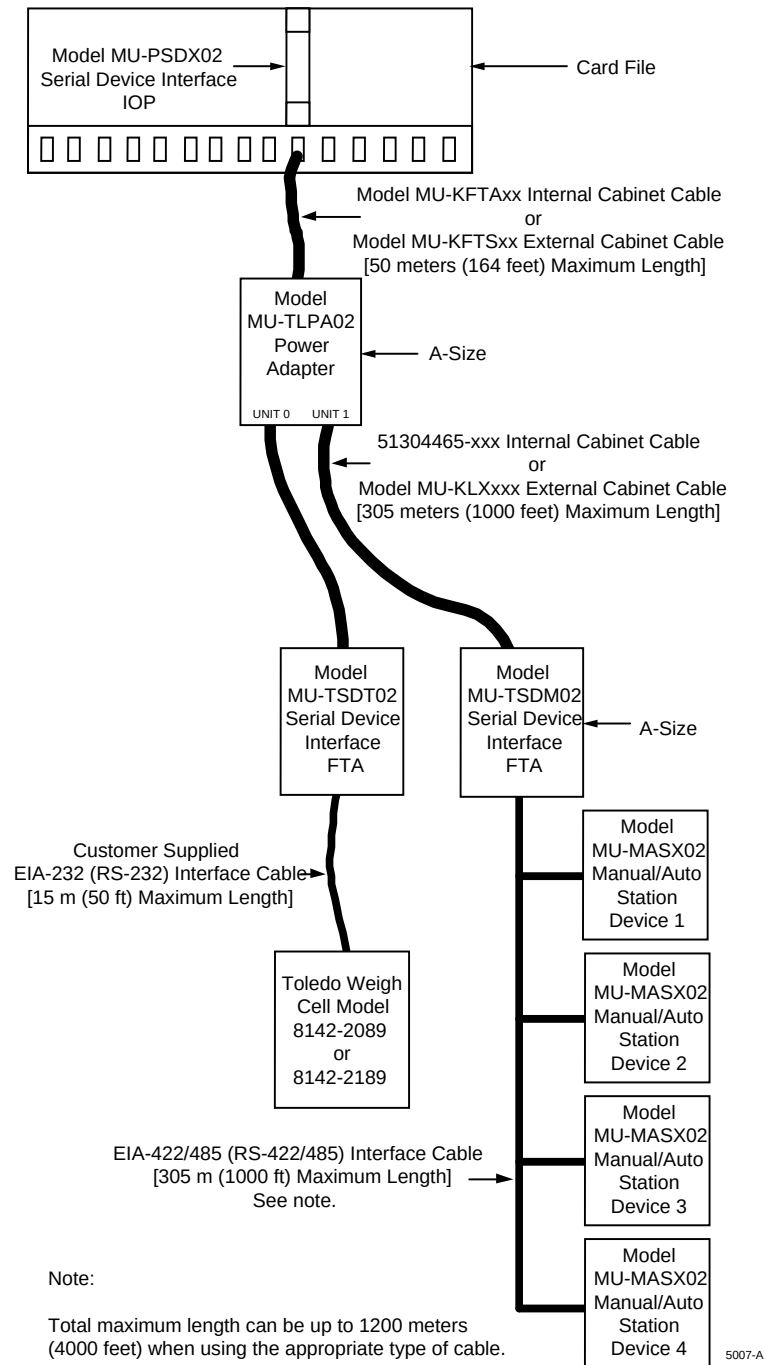

EIA-232 cable length limitation

The EIA-232 cable is limited to a distance of 15 meters (50 feet). The cable must be supplied by the user and terminate in a DB-25 connector.

ATTENTION—The EIA-232 interface is a point-to-point interface in which only one serial device can be connected. The EIA-422/485 interface can be configured as a multidrop interface on which up to 15 serial devices can be connected.

13.2 Serial Device Interface IOP Placement

Locating the IOP

The Serial Device Interface IOP can be installed in any available card file slot.

13.3 Power Adapter Placement

Install within 50 meters of IOP

The Power Adapter can be installed on any available FTA Mounting Channel that is within 50 meters (164 feet) of the Serial Device Interface IOP.

Power Adapter size

The Power Adapter has the same dimensions as an A-size (6 inches) FTA.

13.4 IOP to Power Adapter Cabling

Non-CE-Compliant IOP to Power Adapter cabling

The interconnection between the IOP and the Power Adapter is provided by a model MU-KFTAxx cable. The cable is used in non-CE Compliant applications. The suffix “xx” in the model number represents the length of the cable in meters. The cable is available in 12 lengths, up to 50 meters (164 feet). See the *High-Performance Process Manager Service* manual for the exact lengths that are available.

CE-Compliant IOP to Power Adapter cabling

Presently, the Serial Device Interface FTA cannot be used for CE Compliant application.

13.5 Serial Device Interface FTA Placement

Install within 305 meters of Power Adapter

The Serial Device Interface FTA can be installed in the same Process Manager or Advanced Process Manager cabinet as the Serial Device Interface IOP, or remotely, up to 305 meters (1000 feet) from the Power Adapter.

FTA size

The FTA is an A-size (6 inches) FTA and can be installed on an FTA Mounting Channel.

13.6 FTA to Power Adapter Cabling

FTA to Power Adapter cable

The cable connecting the Serial Device Interface FTA to the Power Adapter is a shielded, twisted-pair cable that is supplied by Honeywell. Two types of cables are available, an internal cabinet cable, 51304465-xxx, and an external cabinet cable, model MU-KLXxxx.

The suffix “xxx” represents the length of the cable in centimeters for the 51304465-xxx cable. Five lengths are available, 30, 66, 100, 200, and 300 centimeters.

The suffix “xxx” represents the length of the cable in meters for the model MU-KLXxxx cable. Three lengths are available, 76, 152, and 305 meters.

Internal cabinet or cabinet complex cabling

When the Serial Device Interface FTA is installed in the same cabinet, or cabinet complex, as the Power Adapter, a 51304465-xxx cable with stripped wire ends is used for the interconnection. See the *High-Performance Process Manager Service* manual for available cable lengths.

The cable has two individually shielded, twisted-pair wires. The shields must be connected to ground at the Power Adapter end only. The wire connections are made by using the compression terminals in a 6-pin connector at the Power Adapter end and in a 4-pin or 6-pin connector at the Serial Device Interface FTA end.

External cabinet cabling

When the Serial Device Interface FTA is installed remotely from the Power Adapter, a model MU-KLXxxx cable is used for the interconnection. See the *High-Performance Process Manager Service* manual for available cable lengths.

The cable has a braided shield with twisted-pair wires. The shields must be connected to ground at both Power Adapter end and the FTA end of the cable. The wire connections are made by using the compression terminals in a 6-pin connector at the Power Adapter end and in a 4-pin or 6-pin connector at the Serial Device Interface FTA end.

References

For additional Serial Device Interface IOP and FTA information, see the *Process Manager I/O Installation* or *High-Performance Process Manager Service* manual.

Power Adapter to FTA cable specifications

The 51304465-xxx (internal) and model MU-KLXxxx (external) cables have the following specifications.

51304465-xxxx cable (Internal cabinet use)

- Manufacturer Type—Belden 9406
- Configuration—Shielded double pair
- Flame Resistance Conformity—CSA FT4
- CSA Type—CMG
- NEC Type—CMG

Model MU-KLXxxx cable (External cabinet use)

- Manufacturer Type—Belden 83654
- Configuration—Shielded double pair (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6 and UL910
- CSA Type—CMP
- NEC Type—CMP
- Temperature Rating: -70°C to +200°C

13.7 FTA Field Cabling

FTA to field device cable specifications

The cables that follow are recommended as EIA-422/485 FTA to field device interface cables and have the following specifications. Honeywell offers the model MU-KSXxxx cable (three lengths—76, 152, and 305 meters, the suffix “xxx” represents the length of the cable in meters). The other two recommended cable types can be purchased directly from the manufacturer.

All the cables are available in lengths up to 305 meters (1000 feet). The total combined length between the FTA and the field devices can be 1200 meters (4000 feet) for the Model MU-KSXxxx and Belden 9182 cables, and 305 meters (1000 feet) for the Belden 9271 cable.

Model MU-KSXxxx cable

- Manufacturer Type—Belden model 89182
- Configuration—Shielded single pair (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6
- CSA Type—CMP
- NEC Type—CL2P and CMP (Plenum)
- Temperature Rating: -70°C to +200°C

Belden 9182 cable

- Manufacturer Type—Belden model 9182
- Cable Configuration—Shielded single pair
- Flame Retardant
- Flame Resistance Conformity—CSA FT1
- CSA Type—CMX
- NEC Type—CL2X and CMX
- Temperature Rating: -20°C to +60°C

Belden 9271 cable

- Manufacturer Type—Belden model 9271
- Cable Configuration—Shielded single pair
- Flame Retardant
- Flame Resistance Conformity—CSA FT1
- CSA Type—CM
- NEC Type—CM
- Temperature Rating: -40°C to +80°C

13.8 Serial Device Interface FTA Models

Model MU-TSDT02

The model MU-TSDT02 Serial Device Interface FTA accommodates the model 8142-2084 or 8142-2184 Toledo Weigh Cell device, manufactured by Toledo Scale Inc., through its EIA-232 (RS-232) interface.

Model MU-TSDM02

The model MU-TSDM02 Serial Device Interface FTA accommodates up to four model MU-MASX02 Manual/Auto Station devices, manufactured by Honeywell Inc., through its EIA-422/485 (RS-422/485) interface.

Model MU-TSDU02

The model MU-TSDU02 Serial Device Interface FTA accommodates up to four model MU-MASX02 UDC 6000 devices, manufactured by Honeywell Inc., through its EIA-422/485 (RS-422/485) interface.

14. Serial Interface Planning

14.1 Serial Interface Configurations

CE Compliance

Some Serial Interface (SI) Field Termination Assemblies (FTAs) are CE Compliant, while others are not. The CE Compliant and non-CE Compliant models with their part numbers are listed in Table 34. CE Compliant SI assemblies are identified by the tab number of the part number that ends in “26” or “28.” They do not have a unique model number.

CE Compliant FTA assemblies have a FASTON terminal that is located at one corner of the FTA. It is secured by the FTA mounting screw and ensures a Safety Ground connection. The terminal is used only when the FTA is mounted at a remote location that is external to the cabinet or cabinet complex in which the Power Adapter is mounted.

For CE Compliant installations, if the Power Adapter is remotely mounted in a cabinet that is separate from the cabinet in which its associated IOP is mounted, it is mandatory that a model MU-KFTSxx shielded IOP to FTA cable be used between the assemblies.

Table 34 Serial Interface FTAs

Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
MU-TSIM12	51303932-401	51303932-426
MU-TSIA12	51303932-403	51303932-428

Introduction

The model MU-TSIM12 or MU-TSIA12 Serial Interface (SI) FTA communicates with the model MU-PSIM11 Serial Interface IOP through the model MU-TLPA02 Power Adapter.

FTA plug-in module determines application

The firmware that is resident in the FTA’s plug-in module, M1, identifies it as a Serial Interface FTA and determines the selected serial communications interface type (EIA-232 or EIA-422/485) and the interface application. The FTA is assigned a unique model number depending upon the application.

EIA-232 and EIA-422/485 interfaces

The Serial Interface FTA has both EIA-232 (RS-232) and EIA-422/485 (RS-422/485) asynchronous serial communications interfaces, one of which is active depending on the software-selected application, using either a DB-25 or a 5-terminal compression-type connector, respectively.

The EIA-232 cable is limited to a distance of 15 meters (50 feet). The cable must be supplied by the user and terminate in a DB-25 connector.



ATTENTION

The EIA-232 interface is a point-to-point interface on which only one serial device can be connected. The EIA-422/485 interface is configured as a multidrop interface on which up to fifteen serial devices can be connected.


Modbus protocol device

A Modbus protocol device that interfaces with the Serial Interface FTA must qualify as compatible though Honeywell's Multivendor Interface Program.

Model MU-TSIM12 FTA Modbus EIA-232 and EIA-422/485 interfaces

The following figure illustrates the model MU-TSIM12 Serial Interface FTA to Modbus device EIA-232 and EIA-422/485 interfaces.


Figure 90 Serial Interface FTA to Modbus Device EIA-232 and EIA-422/485 Interconnections

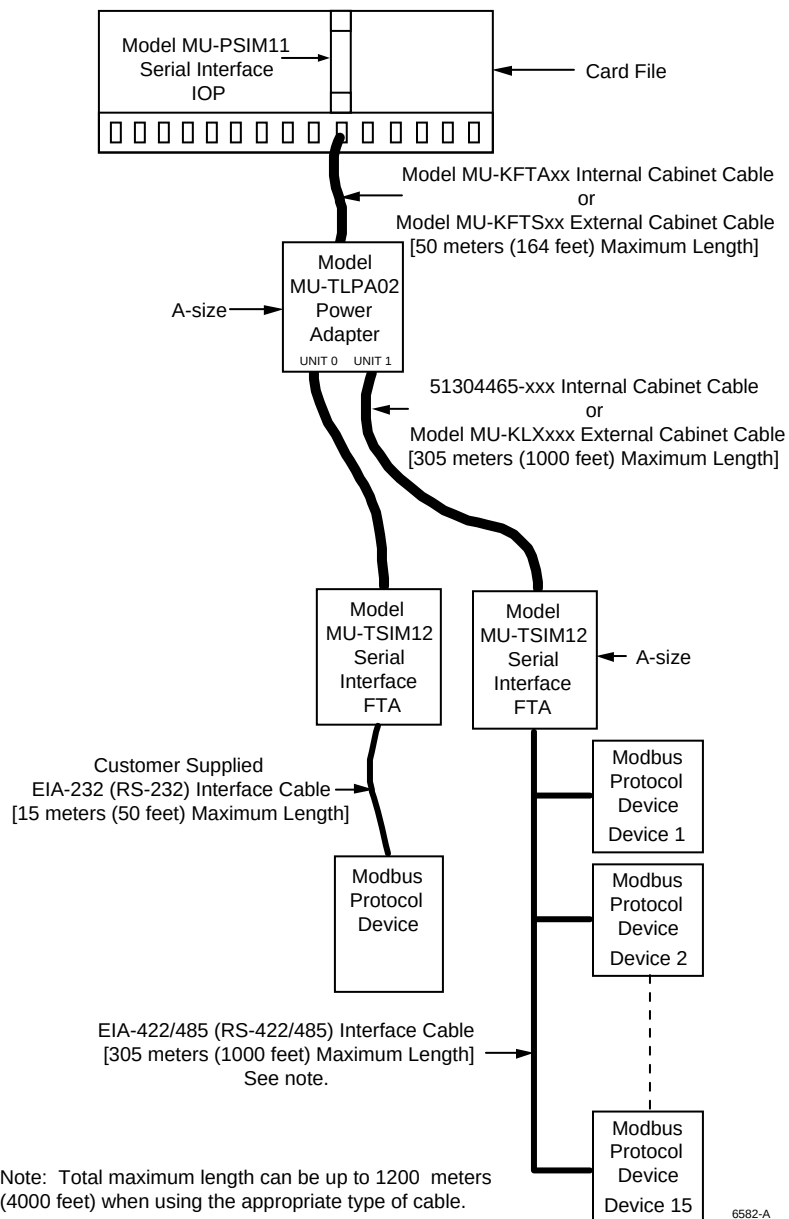

Model MU-TSIM12 FTA Modbus EIA-422/485 interface

The following figure illustrates the model MU-TSIM12 Serial Interface FTA to Modbus device EIA-422/485 interface.


Figure 91 Serial Interface FTA to Modbus Device EIA-422/485 Interconnections

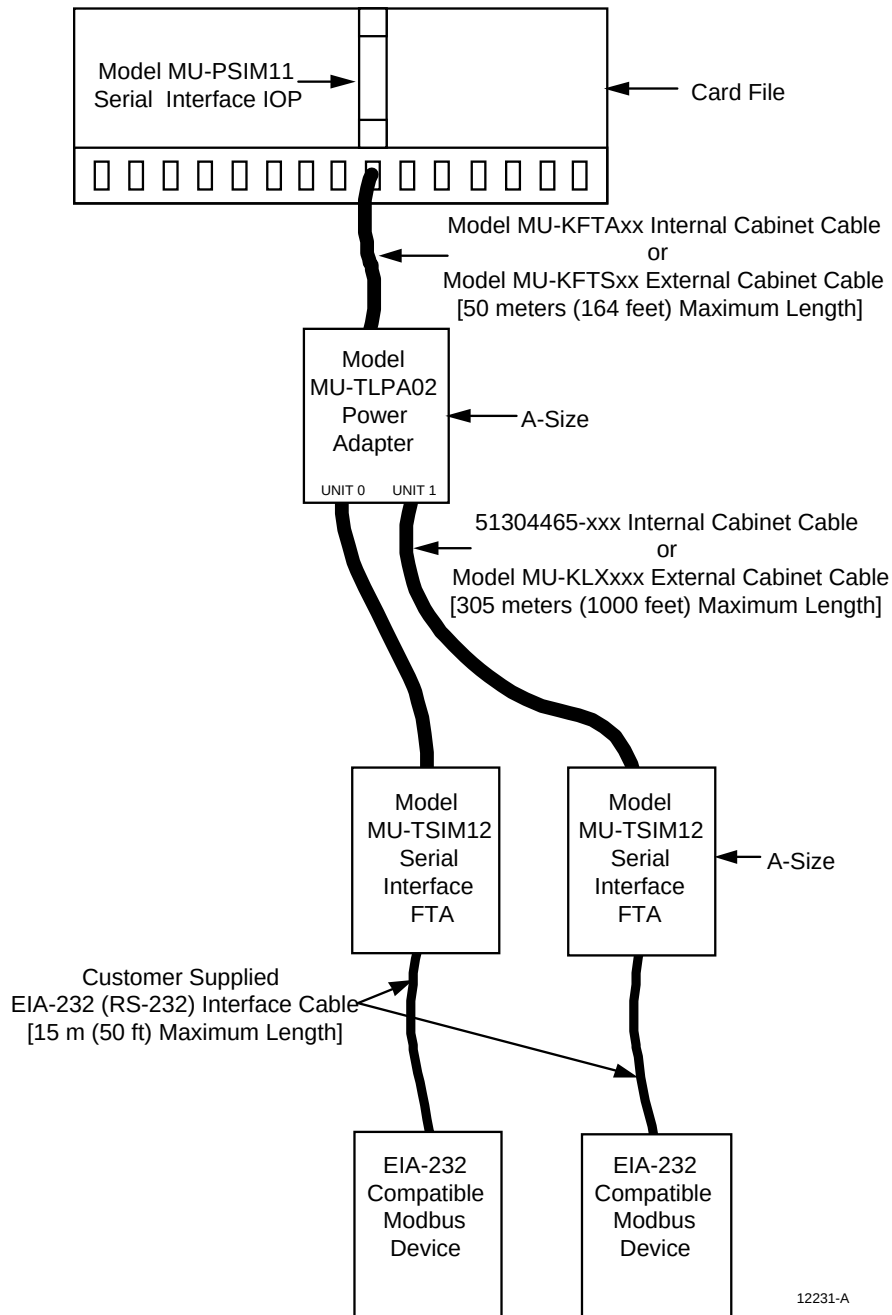

Model MU-TSIM12 FTA peripheral device EIA-422/485 interface

The following figure illustrates the model MU-TSIM12 Serial Interface FTA to peripheral device EIA-422/485 interface.

Figure 92 Serial Interface FTA to Peripheral Device EIA-422/485 Interconnections

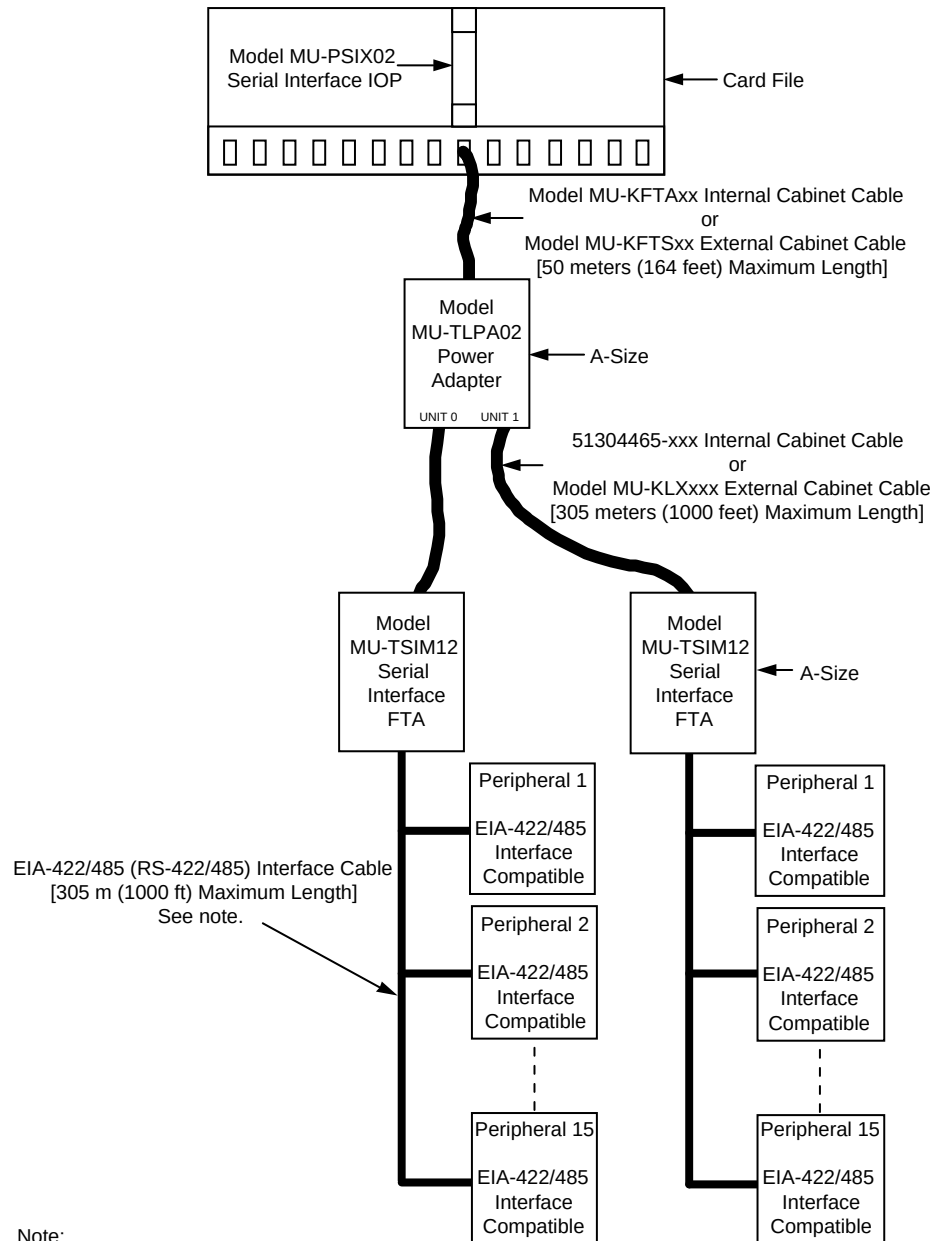


11238-A

Model MU-TSIA12 FTA Allen-Bradley EIA-232 interface

The following figure illustrates the model MU-TSIA12 Serial Interface FTA to Allen-Bradley device EIA-232 interface.

Figure 93 Serial Interface FTA to Allen-Bradley Device EIA-232 Interconnections

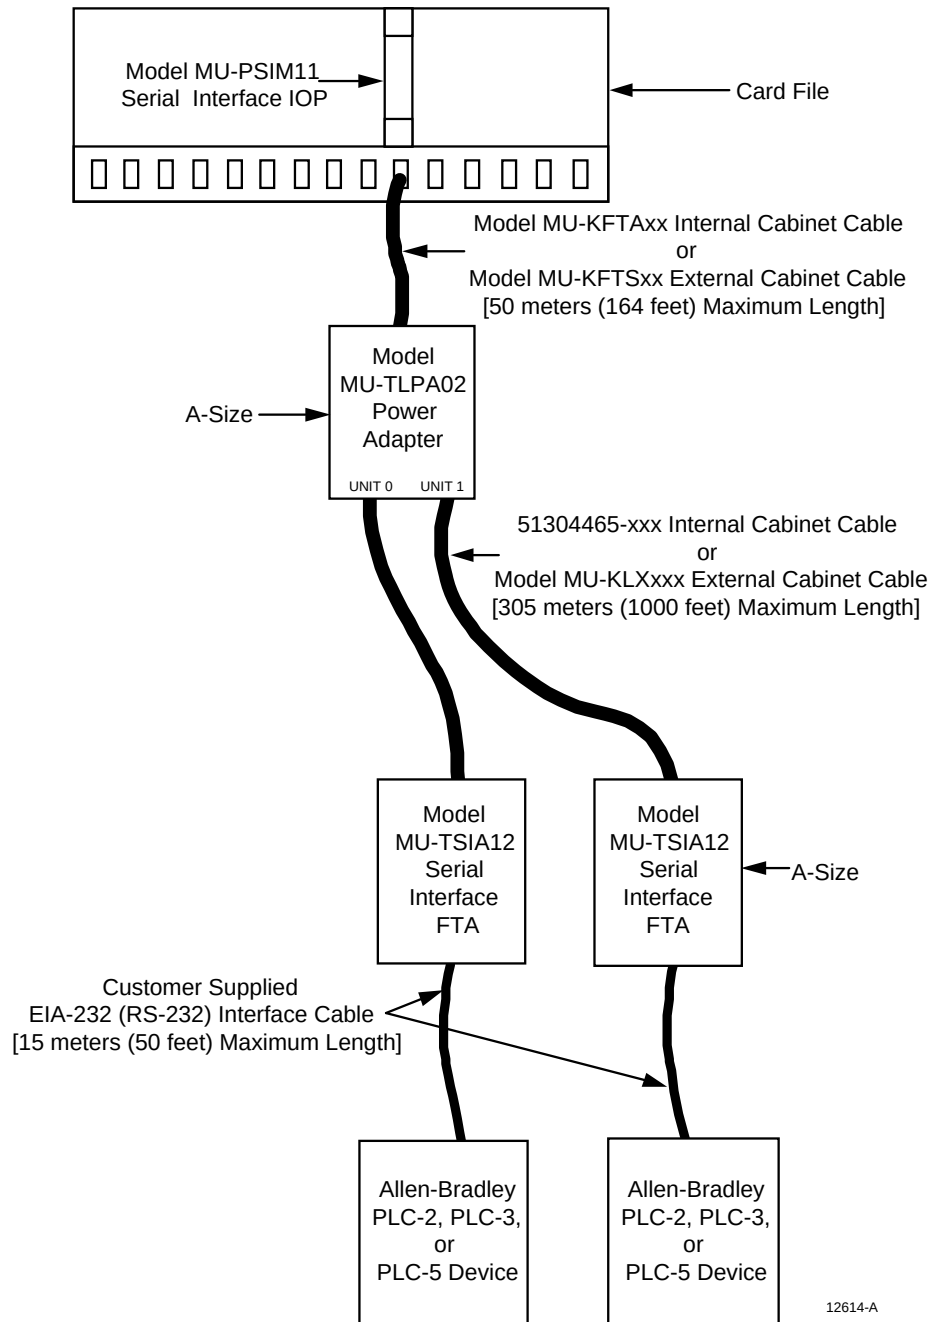

14.2 Serial Interface IOP Placement

Locating the IOP

The Serial Interface IOP can be installed in any available card file slot.

14.3 Power Adapter Placement

Install within 50 meters of IOP

The Power Adapter can be installed on any available FTA Mounting Channel that is within 50 meters (164 feet) of the Serial Interface IOP.

Power Adapter size

The Power Adapter has the same dimensions as an A-size (6 inches) FTA.

14.4 IOP to Power Adapter Cabling

Non-CE Compliance IOP to Power Adapter cabling

The interconnection between the IOP and the Power Adapter is provided by a model MU-KFTAxx cable. The cable is used in non-CE Compliant applications. The suffix “xx” in the model number represents the length of the cable in meters. The cable is available in 12 lengths, up to 50 meters (164 feet). See the *High-Performance Process Manager Service* manual for the exact lengths that are available.

CE Compliance IOP to Power Adapter cabling

The interconnection between the IOP and the Power Adapter for a CE Compliant application is provided by a model MU-KFTSxx shielded cable. The suffix “xx” represents the length of the cable in meters. The cable is available in 12 lengths, up to 50 meters (164 feet). See the *High-Performance Process Manager Service* manual for the exact lengths that are available.

If the IOP and Power Adapter are located in the same cabinet, or a cabinet complex, the model MU-KFTAxx unshielded IOP to FTA cable can be used instead of the shielded model MU-KFTSxx IOP to FTA cable. See Figure 90, Figure 91, Figure 92, and Figure 93.

14.5 Serial Interface FTA Placement

Install within 305 meters of Power Adapter

The Serial Interface FTA can be installed in the same cabinet as the Power Adapter, or remotely, up to 305 meters (1000 feet) from the Power Adapter.

FTA size

The FTA is an A-size (6 inches) FTA and is generally installed on an FTA Mounting Channel.

14.6 FTA to Power Adapter Cabling

FTA to Power Adapter cable

The cable connecting the Serial Interface FTA to the Power Adapter is a shielded, twisted-pair cable that is supplied by Honeywell. Two types of cables are available, an internal cabinet cable, 51304465-xxx, and an external cabinet cable, model MU-KLXxxx.

The suffix “xxx” represents the length of the cable in centimeters for the 51304465-xxx cable. Five lengths are available, 30, 66, 100, 200, and 300 centimeters.

The suffix “xxx” represents the length of the cable in meters for the model MU-KLXxxx cable. Three lengths are available, 76, 152, and 305 meters.

Internal cabinet or cabinet complex cabling

When the Serial Interface FTA is installed in the same cabinet, or cabinet complex, as the Power Adapter, a 51304465-xxx cable with stripped wire ends is used for the interconnection. See the *High-Performance Process Manager Service* manual for available cable lengths.

The cable has two individually shielded, twisted-pair wires. The shields must be connected to ground at the Power Adapter end only. The wire connections are made by using the compression terminals in a 6-pin connector at the Power Adapter end and in a 4-pin or 6-pin connector at the Serial Device Interface FTA end.

External cabinet cabling

When the Serial Interface FTA is installed remotely from the Power Adapter, a model MU-KLXxxx cable is used for the interconnection. See the *High-Performance Process Manager Service* manual for available cable lengths.

The cable has a braided shield with twisted-pair wires. The shields must be connected to ground at both the Power Adapter end and the FTA end of the cable. The wire connections are made by using the compression terminals in a 6-pin connector at the Power Adapter end and in a 4-pin or 6-pin connector at the Serial Interface FTA end.

References

For additional Serial Interface IOP and FTA information, see the *Process Manager I/O Installation* or *High-Performance Process Manager Service* manual.

Power Adapter to FTA cable specifications

The 51304465-xxx (internal) and model MU-KLXxxx (external) cables have the following specifications.

51304465-xxx cable (Internal cabinet use)

- Manufacturer Type—Belden 9406
- Configuration—Shielded double pair
- Flame Resistance Conformity—CSA FT4
- CSA Type—CMG
- NEC Type—CMG

Model MU-KLXxxx cable (External cabinet use)

- Manufacturer Type—Belden 83654
- Configuration—Shielded double pair (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6 and UL910
- CSA Type—CMP
- NEC Type—CMP
- Temperature Rating: -70°C to +200°C

14.7 FTA Field Cabling

FTA to field device cable specifications

The cables that follow are recommended as EIA-422/485 FTA to field device interface cables and have the listed specifications. Honeywell offers the model MU-KLXxxx cable (three lengths – 76, 152, and 305 meters, the suffix “xxx” represents the length of the cable in meters). The other two recommended cable types can be purchased directly from the manufacturer.

All the cables are available in lengths up to 305 meters (1000 feet). The total combined length between the FTA and the field devices can be 1200 meters (4000 feet) for the model MU-KLXxxx and Belden model 9182 cables, and 305 meters (1000 feet) for the Belden model 9271 cable.

Model MU-KSXxxx cable

- Manufacturer Type—Belden model 89182
- Configuration—Shielded single pair (TEFLON jacket)
- Flame Resistance Conformity—CSA FT4/FT6
- CSA Type—CMP
- NEC Type—CL2P and CMP (Plenum)
- Temperature Rating: -70°C to +200°C

Belden 9182 cable

- Manufacturer Type—Belden model 9182
- Cable Configuration—Shielded single pair
- Flame Retardant
- Flame Resistance Conformity—CSA FT1
- CSA Type—CMX
- NEC Type—CL2X and CMX
- Temperature Rating: -20°C to +60°C

Belden 9271 cable

- Manufacturer Type—Belden model 9271
- Cable Configuration—Shielded single pair
- Flame Retardant
- Flame Resistance Conformity—CSA FT1
- CSA Type—CM
- NEC Type—CM
- Temperature Rating: -40°C to +80°C

14.8 Serial Interface FTA Models

Model MU-TSIM12 Interface configurations

By configuration, the Honeywell model MU-TSIM12 Serial Interface FTA will accommodate either a single EIA-232 Modbus-compatible device through its EIA-232 interface, or up to 15 EIA-422/485 Modbus-compatible devices through its EIA-422/485 interface.

Model MU-TSIM12 Modbus protocol

The type of device that interfaces the model MU-TSIM12 Serial Interface FTA must be compatible with Modbus RTU protocol. When the EIA-422/485 interface is active, the subsystem performance is dependent upon the number of devices, their baud rate, the number of transactions, and the FTA device driver firmware.

Model MU-TSIA12 Allen-Bradley device

The model MU-TSIA12 Serial Interface FTA accommodates a single EIA-232 compatible Allen-Bradley device through its EIA-232 interface.

14.9 Communications Interface Specifications

Specifications

The EIA-232 or EIA-422/485 interface is configurable for baud rates of 1200, 2400, 4800, 9600, or 19200 with odd, even or no parity, and one stop bit. The default setting is 19200 baud, odd parity with one stop bit.

Table 35 lists the EIA-232 interface specifications, while Table 36 lists the EIA-422/485 interface specifications.

Table 35 Serial Interface EIA-232 Specifications

Description	Specification
Interface Type	Asynchronous serial data
Interface Signals Supported	TXD, \, RTS, CTS, DSR, DTR, DCD, logic ground, chassis ground.
Interface Length	15 meters (maximum cable capacitance of 2500 pF)

Table 36 Serial Interface EIA-422/485 Specifications

Description	Specification
Interface Type	Asynchronous half-duplex serial data
Interface Signals Supported	Two-wire differential pair (Terminals A and B) and shield connections
Interface Length	305 meters (up to 1220 meters with Honeywell approved cable)
Number of Devices	15 maximum

Reference

Refer to the *Process Manager I/O Specifications and Technical Data* manual for additional information.

15. Galvanically Isolated FTA Planning

15.1 Overview

Introduction

This section will assist you in planning the installation of Galvanically Isolated FTAs and suggest ways to take advantage of the hardware's versatility.

Installation references

Additional information concerning the FTAs can be found in the *Process Manager I/O Installation* manual and the *Process Manager I/O Specification and Technical Data* manual.

Description

A family of Field Termination Assemblies (FTAs) are available that accept plug-in Galvanic Isolation Modules. These FTAs are used for connecting input and output signals to field devices in Division 1 (Zone 0 and Zone 1) hazardous areas. The FTAs are compatible with the IOPs that support the companion standard FTAs.

Usage advantages

The isolating nature of the intrinsically safe connection removes the necessity to install a potential-equalizing conductor where it is called for in any certification. The resultant simplification and reduction in cost of the installation is a considerable advantage, and makes the use of the Galvanic Isolators the preferred method over conventional shunt-diode safety barriers for this type of installation. There are many occasions when the lack of information about the precise site conditions is solved by using the isolators to minimize installation and security problems.

CE Compliance

Some Galvanically Isolated Field Termination Assemblies and their supporting assemblies, such as a Combiner Panel, are CE Compliant, while others are not CE Compliant. The CE Compliant and non-CE Compliant models with their part numbers are listed in Table 37 and Table 38. Generally, CE Compliant Galvanically Isolation assemblies are identified by the tab number of the part number that ends in "25." They do not have a unique model number.

The CE Compliant FTAs feature filtered connectors that interface with the CE Compliant model MU-KFTSxx IOP to FTA cable(s).

Nonconformally coated FTAs

Table 37 CE Compliant Galvanically Isolated FTAs— Nonconformally Coated

Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
MU-GAIH12	51304636-100	N/A
MU-GAIH13	51304718-100	51304718-125
MU-GAIH14	51304730-100	51304730-125
MU-GAIH22	51304748-100	51304748-125

15. Galvanically Isolated FTA Planning

15.1. Overview

Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
MU-GAIH82	51304636-300	N/A
MU-GAIH83	51304718-300	51304718-325
MU-GAIH84	51304730-300	51304730-325
MU-GAIH92	51304748-300	51304748-325
MU-GHA011	N/A	51309540-125
MU-GAOX02	51304638-100	51304638-125
MU-GAOX12	51304638-500	51304638-525
MU-GAOX72	51304638-300	51304638-325
MU-GAOX82	51304638-700	51304638-725
MU-GDID12	51304640-100	51304640-125
MU-GDID13	51304728-100	51304728-125
MU-GDID82	51304640-300	51304640-325
MU-GDID83	51304728-300	51304728-325
MU-GDOD12	51304642-100	51304642-125
MU-GDOD82	51304642-300	51304642-325
MU-GDOL12	51304736-100	51304736-125
MU-GDOL82	51304736-300	51304736-325
MU-GPRD02	51304644-100	51304644-125
MU-GLFD02	51304732-100	51304732-125
MU-GMAR52	51304646-100	51309156-125
MU-GFBS01	N/A	51309254-225

Conformally coated FTAs

Table 38 CE Compliant Galvanically Isolated FTAs— Conformally Coated

Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
MC-GAIH12	51304636-150	N/A
MC-GAIH13	51304718-150	51304718-175
MC-GAIH14	51304730-150	51304730-175
MC-GAIH22	51304748-150	51304748-175
MC-GAIH82	51304636-350	N/A
MC-GAIH83	51304718-350	51304718-375

Model Number	Non-CE Compliant Part Number	CE Compliant Part Number
MC-GAIH84	51304730-350	51304730-375
MC-GAIH92	51304748-350	51304748-375
MC-GHA011	N/A	51309540-175
MC-GAOX02	51304638-150	51304638-175
MC-GAOX12	51304638-550	51304638-575
MC-GAOX72	51304638-350	51304638-375
MC-GAOX82	51304638-750	51304638-775
MC-GDID12	51304640-150	51304640-175
MC-GDID13	51304728-150	51304728-175
MC-GDID82	51304640-350	51304640-375
MC-GDID83	51304728-350	51304728-375
MC-GDOD12	51304642-150	51304642-175
MC-GDOD82	51304642-350	51304642-375
MC-GDOL12	51304736-150	51304736-175
MC-GDOL82	51304736-350	51304736-375
MC-GPRD02	51304644-150	51304644-175
MC-GLFD02	51304732-150	51304732-175
MC-GMAR52	51304646-150	51309156-175
MC-GFBS01	N/A	51309254-275

**ATTENTION**

In the past, it was a requirement that Galvanically Isolated, Intrinsically Safe (GI/IS) FTAs had to be mounted on horizontally oriented FTA Mounting Channels in an HPM cabinet. The requirement is no longer needed because of component and design improvements.

Galvanically Isolated FTAs can now be mounted on vertically oriented FTA Mounting Channels. However, there is still a requirement that Galvanically Isolated FTAs and standard (non-Galvanically Isolated) FTAs, and the wiring to them, be properly separated in the cabinet.


Any FTA Mounting Channels on which Galvanically Isolated FTAs will be mounted must be installed in an inverted (upside down from the normal) position .

The horizontal FTA Mounting Channel information in this section is reference information because some existing installations use horizontal FTA Mounting Channels that may require the installation of additional horizontal FTA Mounting Channels for equipment expansion.

FTA mounting

All the FTA assemblies are approximately 309 by 124 millimeters (12 by 4.9 inches), which is a B-size FTA classification for mounting purposes. The FTAs can be installed on FTA Mounting Channels that are vertically or horizontally positioned in the cabinet. Figure 94 is an illustration of a typical Galvanically Isolated FTA.

Figure 94 Typical Galvanically Isolated FTA

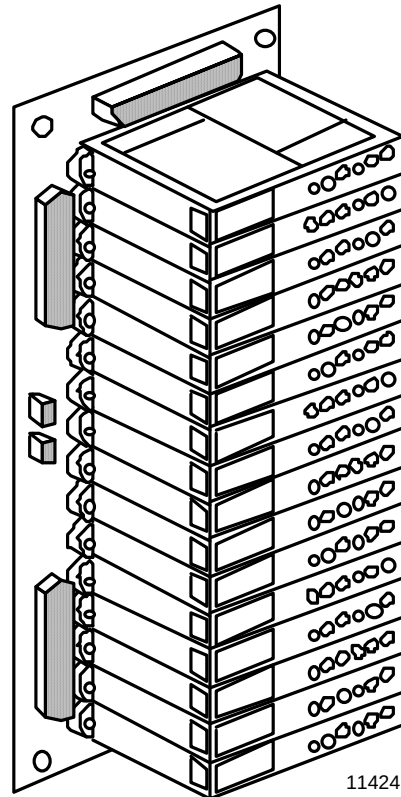


FTA to IOP cable

A 50-pin FTA to IOP cable, model MU-KFTAxx (the suffix “xx” represents the length of the cable in meters), is used to connect non-CE Compliant FTAs to their associated IOP(s). The model MU-KFTSxx IOP to FTA cable is a shielded cable that is used to connect CE Compliant FTAs to their IOP(s) when the cable leaves the cabinet.

Galvanic Isolation Module

Field signal connections are made at the plug-in Galvanic Isolation Module on the FTA. In general, each module provides a terminal connector for one field device connection. The exception is the Galvanic Isolation Module on the Digital Input FTA. This Galvanic Isolation Module provides terminal connectors for two field devices. The following figure is an illustration of the Galvanic Isolation Module and its mounting orientation on the FTA.

Figure 95 Galvanic Isolation Module

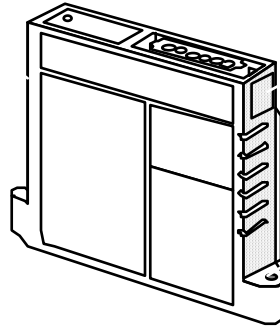

Compression or crimp terminal connectors

Compression-type or crimp-type pluggable 6-terminal connectors can be specified for the Galvanic Isolation Modules. The model number for the FTA specifies the connector type. If the model number ends in 02, 12, 13, 14, or 22, such as MU-GAOX02, MU-GAIH12, MU-GAIH13, MU-GAIH14, or MU-GAIH22, compression-type terminal connectors are provided. If the model number ends in 72, 82, 83, 84, or 92, such as MU-GAOX72, MU-GAIH82, MU-GAIH83, MU-GAIH84, or MU-GAIH92, crimp-type terminal connectors are provided.


Crimp-type terminal connectors

The crimp-type of terminal connector accepts size 0.5 to 2.5 mm² (14 to 20 AWG) size field wiring. The crimp pin is installed over the end of the field wire that is stripped to a length of 4.0 millimeters with a crimp tool prior to its insertion into the terminal connector. The crimp tool is available in the model MU-GCTK01 Crimp Tool Kit.

The female crimp pin, with the attached field wire, mates with the Galvanic Isolation Module’s connector pin, one of six. The following figure illustrates this procedure.

Figure 96 Crimp-Type Galvanic Isolation Module Terminal Connector

<u>Wire Size</u>	<u>Crimp Pin Part Number</u>	<u>Crimp Tool Part Number</u>
0.5-2.5 mm2 (14-20 AWG)	51191737-201	51191787-100

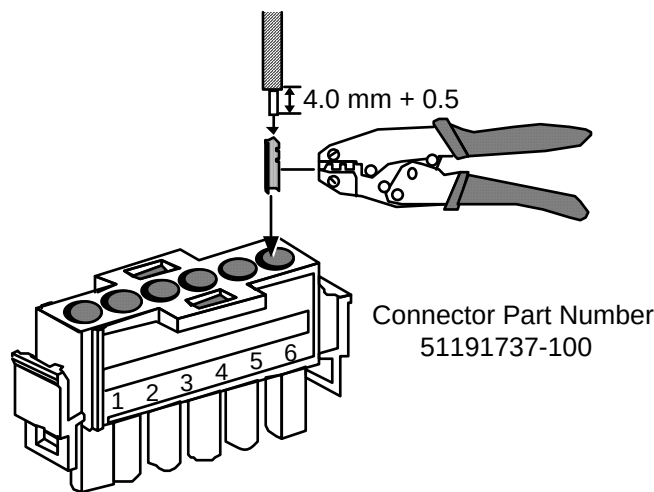


11373

Compression-type terminal connectors

The compression-type of terminal connector accepts size 0.3 to 3.5 mm² (12 to 22 AWG) size field wiring. The end of the field wire is stripped to a length of 8.0 millimeters (0.3 inches), inserted into the proper terminal position, one of six, and secured in place by the tightening of a dedicated screw. The following figure illustrates this procedure. The terminal connector itself provides the pins that mate with the Galvanic Isolation Module's connector pins.

Figure 97 Compression-Type Galvanic Isolation Module Terminal Connector

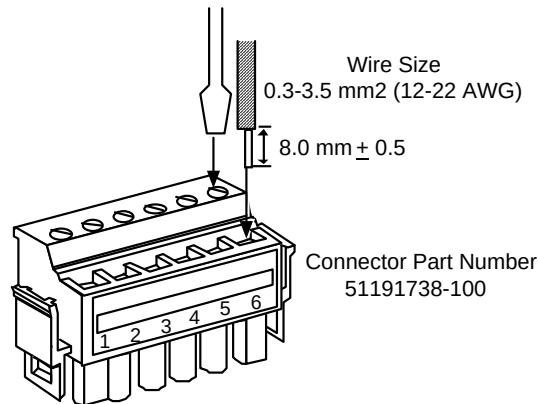

11376

Types of FTAs

Numerous types of Galvanically Isolated FTAs are available. They areas follows:

- High Level Analog Input (HLAI), models MU-GAIH12 and MU-GAIH82, with voltage outputs to both the IOP and an auxiliary connector
- High Level Analog Input /Smart Transmitter Interface (HLAI/STI), models MU-GAIH13 and MU-GAIH83, with voltage outputs to both the IOP and an auxiliary connector
- High Level Analog Input /Smart Transmitter Interface (HLAI/STI), models MU-GAIH14 and MU-GAIH84, with higher loop resistance capability and voltage output to both the IOP and an auxiliary connector
- High Level Analog Input (HLAI), models MU-GAIH22 and MU-GAIH92, with voltage outputs to the IOP and current outputs to an auxiliary connector
- 24 Vdc Digital Input (DI), models MU-GDID12 and MU-GDID82, with relay outputs to the IOP and an auxiliary connector and Line Fault Detection in the IOP
- 24 Vdc Digital Input (DI), models MU-GDID13 and MU-GDID83, with solid-state voltage outputs to the IOP and no auxiliary connector
- Analog Output (AO), models MU-GAOX02, MU-GAOX12, MU-GAOX72, and MU-GAOX82 with Line Fault Detection in the IOP
- Analog Output (AO), models MU-GHA011 with HART and Line Fault Detection in the IOP
- Digital Output (DO), models MU-GDOL12 and MU-GDOL82 with Line Fault Detection outputs to an auxiliary connector

15.2 Features

Overview

The subsections that follow describe the features that the Galvanically Isolated FTAs provide. Many of the features are standard FTA features.

IOP Redundancy

FTAs support redundancy

Each type of FTA has two 50-pin FTA cable connectors that provide connections to two IOPs to support redundancy. A green LED on the FTA indicates which IOP has control when it is an output type FTA or is active when it is an input type FTA. The indicator identifies the primary IOP (A) FTA.

IOP redundancy support

Only the High Level Analog Input, High Level Analog Input/Smart Transmitter Interface, and Analog Output types of the FTAs have software available that supports IOP redundancy. The nonredundant models of the Analog Output FTA, models MU-GAOX02 and MU-GAOX72, cannot support IOP redundancy.

Analog and Digital Output Standby Manual Devices

Standby Manual Device connector

A 50-pin connector on the Analog Output and 24 Vdc Digital Output FTAs accepts control signals from the Analog Standby Manual Device and Digital Output Standby Manual Device, respectively.

Note that the GI/IS HART FTA (MU-GHA011) FTA does not support standby manual.

Analog Output FTA

The Analog Output FTA has three 50-pin connectors. Two of the connectors are for redundant IOP connections, and a unique third connector is for connection to the Analog Output Standby Manual Device.

24 Vdc Digital Output FTA

The 24 Vdc Digital Output FTA also has three 50-pin connectors. Two of the connectors provide connection to redundant IOPs, or like the standard 24 Vdc Digital Output FTA, connection to a Digital Output Standby Manual Device. The third connector supports auxiliary signals that are described in the following subsection.

Auxiliary Inputs/Outputs

HLAI/STI FTAs

In addition to the IOP redundancy connectors, the High Level Analog Input/Smart Transmitter Interface FTAs have an auxiliary connector that provides PV signals for recording or monitoring subsystems.

24 Vdc Digital Output FTAs

The model MU-GDOD12/82 24 Vdc Digital Output FTA has an auxiliary connector through which the user can provide signals from a shutdown subsystem to individually deenergize the FTA outputs. The model MU-GDOL12/82 Digital Output FTA provides Line Fault Detection (LFD) signals through the auxiliary connector.


24 Vdc Digital Input FTAs

The model MU-GDID12/82 24 Vdc Digital Input FTA has an auxiliary connector to provide signals that can be used to monitor the condition of the FTA's individual input contact sets. There are two sets of contacts per plug-in Galvanic Isolation Module. The contacts are isolated from the subsystem, but not from each other.

Marshalling Panel

Access to the auxiliary signals is available at screw-type terminals on a Marshalling Panel that is connected by a 50-pin cable to the FTA's auxiliary connector. The following figure is an illustration of the connections between the Galvanically Isolated FTA, its associated IOP, and the Marshalling Panel.

Figure 98 Galvanically Isolated FTA with Auxiliary Connector

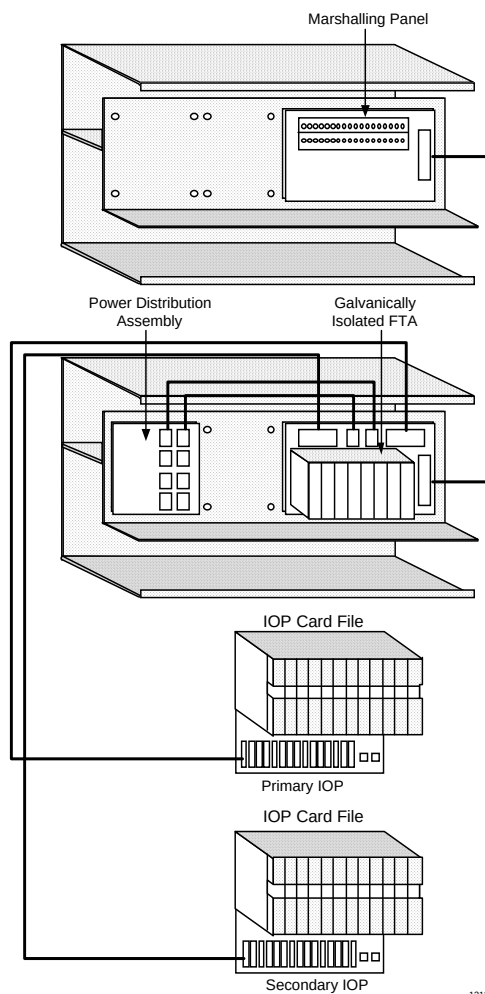

15. Galvanically Isolated FTA Planning

15.2. Features

Power Requirements

Overview

The power requirement for the FTAs is a nominal 24 Vdc. Because of the large additional amount of power the Galvanically Isolated FTAs require, power to the FTA is not provided directly from the Power System through the associated IOP, as it is for standard FTAs, but instead through a Power Distribution Assembly. The Power Distribution Assembly is discussed in the "Power Distribution Assembly" subsection.

Dual power connectors

The FTAs have dual 2-pin power connectors for power redundancy. Power for the two connectors can be provided by a single power source or a separate power source. Diodes on the FTA that "or" the two power sources prevent the two power sources from shorting together.

Galvanic Isolation Module fuses

Each Galvanic Isolation Module is internally fused. The fuse cannot be replaced in the field.

Power Distribution Assembly fuses

Fuses provided on the Power Distribution Assembly can be replaced in the field.

FTA fuses

Fuses provided on the FTA assembly can be replaced in the field.

FTA power requirements

Table 39 is a listing of the power requirements at 24 Vdc for the types of Galvanically Isolated FTAs that assumes all inputs/outputs are active.

Table 39 Galvanically Isolated FTA Power Requirements

FTA Type	Power Requirement (Amperes)
High Level Analog Input/Smart Transmitter Interface MU-GAIH12/82 MU-GAIH13/83 MU-GAIH14/84 MU-GAIH22/92	1.28 1.28 1.20 1.20
Analog Output MU-GAOX02/12/72/82 MU-GHAO11	0.45 1.252
24 Vdc Digital Input MU-GDID12/82 MU-GDID13/83	0.72 0.56
24 Vdc Digital Output MU-GDOD12/82 MU-GDOL12/82	1.10 1.10

Field Wiring Connections

Location of terminal connectors

The FTAs do not have field terminal connectors mounted directly on the assembly's printed circuit board as the standard FTAs do, but instead, field wires are connected to crimp-type or screw-type connectors on the individual Galvanic Isolation Module. The connectors accommodate 0.3 to 3.5 mm² (12 to 22 AWG) size wiring when not using crimp pins on the wiring ends; 0.5 to 2.5 mm² (14 to 20 AWG) size wiring when crimp pins are used.

Prewiring

The FTAs and their Galvanic Isolation Modules can be in place during the installation of the field wiring, but it is not necessary because of the connector's plug-in capability.

Galvanic Isolation Module replacement

A failed Galvanic Isolation Module can be replaced simply by unplugging the field wire connector on the module, then removing and replacing the module. The individual wires do not have to be disconnected.

Bus bar

Spare wires and cable shields are terminated in the normal manner. Because the FTA does not have a built-in shield bus, the accommodation of a large number of shield wires requires the use of a bus bar that is part of the FTA Mounting Channel and connected to the local Master Reference Ground (Safety Ground for CE Compliance).

Ambient Temperature Limits

Operation limits

The ambient temperature limits of the Galvanic Isolation Modules are -20 to +60 degrees centigrade (working) and -40 to +80 degrees centigrade (storage). The humidity limits are 5 to 95% relative humidity.

FTA Mounting Channels

Overview

Standard (non-Galvanically Isolated) FTAs always mount on 92-centimeter (36-inch) long FTA Mounting Channels that are installed vertically in the High-Performance Processor Manager cabinet.

Galvanically Isolated FTAs can be mounted on 61-centimeter (24-inch) long FTA Mounting Channels that are installed horizontally in the cabinet to provide better cooling for the FTAs or on inverted (upside-down from normal orientation) vertical FTA Mounting Channels.

Horizontal FTA Mounting Channel installation

Up to eight horizontal FTA Mounting Channels can be installed in a cabinet with a 6-millimeter (.25-inch) gap between them to accommodate the use of cable ties as necessary.

The horizontal FTA Mounting Channel is installed with the field wiring channel (trough) toward the bottom of the cabinet. The channel (trough) that contains the cables that connect the FTA to its associated IOP(s), the Power Distribution Assembly, and the Combiner Panel, if applicable, is toward the top of the cabinet.

One or two FTAs can be mounted on each horizontal FTA Mounting Channel.

Vertical FTA Mounting Channel installation


The vertical FTA Mounting Channel is installed in an inverted position with the field wiring channel (trough) toward the right side of the cabinet. The channel (trough) that contains the cables that connect the FTA to its associated IOP(s), the Power Distribution Assembly, and the Combiner Panel, if applicable, is toward the left side of the cabinet.

Up to three FTAs can be mounted on each vertical FTA Mounting Channel.

Cabinet with Horizontal FTA Mounting Channels

The following figure is an illustration of a cabinet with horizontal FTA Mounting Channels installed.

Figure 99 Cabinet with Horizontally Installed FTA Mounting Channels

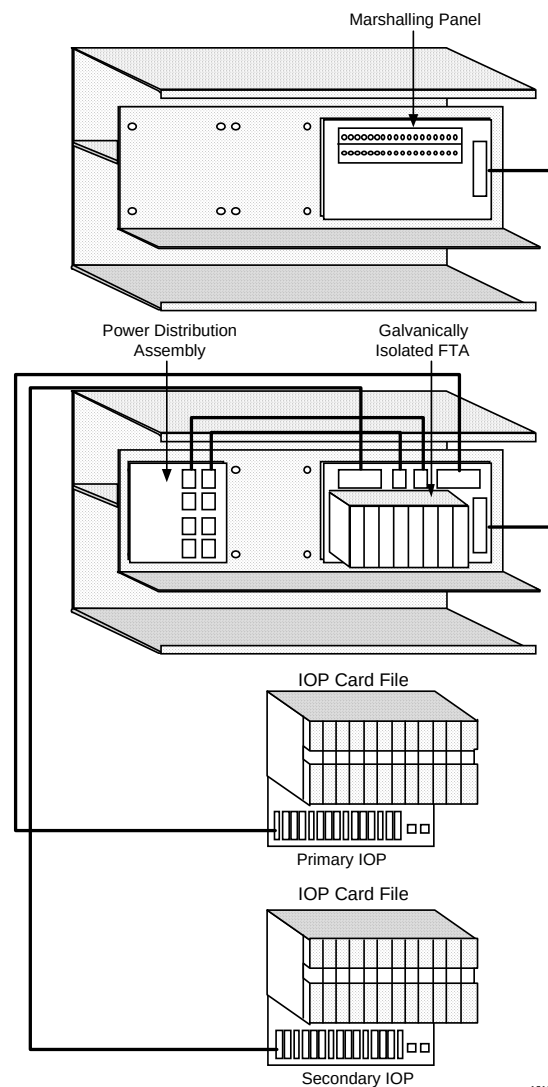

12137

Previous horizontal mounting advantages

Previously, there were two reasons for mounting the Galvanically Isolated FTAs on horizontally oriented FTA Mounting Channels.

- Installation of Galvanically Isolated and standard FTAs on the same FTA Mounting Channel is not permitted. Both types of FTAs mounted on the same FTA Mounting Channel would be an Intrinsic Safety violation.
- The design and current requirements of the Galvanic Isolation Modules was such that they operated cooler when they had horizontal orientation.

The heat dissipation requirement is no longer needed because of component and design improvements. The FTAs can now be vertically oriented.

Field wire routing

When FTAs are mounted on a horizontal FTA Mounting Channel, the field wires that connect to the FTA are routed to the right in the lower channel and out of the cabinet by going up or down the right side of the cabinet.

When FTAs are mounted on a vertical FTA Mounting Channel that is installed in an inverted position, the field wires that connect to the FTA are routed in the right channel and out of the cabinet by going up or down the right side of the cabinet.

The field wires must be routed so that a minimum 2-inch separation is maintained between other wires or electrical components. The wiring can be separated from other wiring by a grounded metal divider or a nonconductive divider.

IOP to FTA cable routing

When FTAs are mounted on a horizontal FTA Mounting Channel, the cables that connect the FTA to its associated IOP(s), the Power Distribution Assembly, and the Marshalling Panel, if applicable, must be routed in the upper channel of the FTA Mounting Channel. The routing is to the left in the channel and up or down the left side of the cabinet.

When FTAs are mounted on a vertical FTA Mounting Channel that is installed in an inverted position, the cables that connect the FTA to its associated IOP(s), the Power Distribution Assembly, Combiner Panel, and the Marshalling Panel, if applicable, must be routed in the left channel of the FTA Mounting Channel. The routing is up or down the left side of the cabinet.

Cabinet fan assembly requirements

Because of the greater heat dissipation requirements of Galvanically Isolated FTAs, cabinet fan assemblies are mandatory on both sides of a dual-access cabinet. The single-access cabinet also requires a cabinet fan assembly. FTA Mounting Channels must be installed only on the cabinet's center infrastructure and not at the sides of the cabinet.

Both FTA Mounting Channels types permitted

Although it is not permissible to mount standard FTAs and Galvanically Isolated FTAs on the same FTA Mounting Channel, it is permissible, but not preferable, to install both the vertical FTA Mounting Channels and the horizontal FTA Mounting Channels in the same cabinet.

If it is a requirement, up to three vertical FTA Mounting Channels can be installed in the lower portion of the cabinet, and up to three horizontal FTA Mounting Channels can be installed in the upper portion of the cabinet. A fourth horizontal FTA Mounting Channel is omitted, even though the space is available, to provide separation between the vertical and horizontal FTA Mounting Channels.

15. Galvanically Isolated FTA Planning

15.2. Features

Marshalling Panel mounting

The model MU-GMAR52 Marshalling Panel can be mounted on either a horizontally or vertically oriented FTA Mounting Channel. No Galvanically Isolated FTAs can be mounted on the same FTA Mounting Channel.

Power Distribution Assembly mounting

The model MU-GPRD02 Power Distribution Assembly can be mounted on either a horizontally or vertically oriented FTA Mounting Channel. If a Galvanically Isolated FTA is also mounted on the FTA Mounting Channel, the Power Distribution Assembly must be mounted with at least a 6-inch gap separating the assemblies.

Cabling to the Power Distribution Assembly must be routed in the upper or left channel and to the left side of the cabinet, except for the cables carrying power to an FTA mounted on the same FTA Mounting Channel.

Additional Power System

If an additional Power System is required in the cabinet to power the Galvanically Isolated FTAs, it can be installed on the same side of the cabinet as the FTA Mounting Channels. The Power System should be installed at the top of the cabinet if the FTA's field wiring entry is at the bottom of the cabinet so the field wires are not routed near the Power System. If the field wiring entry is at the top of the cabinet, install the Power System at the bottom of the cabinet.

15.3 Power Distribution

Power Distribution Assembly

Galvanically isolated FTAs use more 24 Vdc power than standard FTAs. Because of the increased demand, the Power Distribution Assembly, model MU-GPRD02, is used to supply power directly to the FTAs. The power for a standard FTA is provided from the IOP through the cable that connects the IOP to the FTA. The Power Distribution Assembly can be installed on the same FTA Mounting Channel as an FTA, but a spacing of at least 6 inches must exist between a Power Distribution Assembly and an FTA mounted on the same FTA Mounting Channel.

Power Distribution Assembly placement

If a Power Distribution Assembly is installed on an FTA Mounting Channel with a Galvanically Isolated FTA, it must be installed with its eight 2-pin power connectors at the top of the assembly. When the Power Distribution Assembly is installed on a vertical FTA Mounting Channel, it is installed with its 6-pin power connectors at the top of the assembly.

Field wiring restrictions

Field wires terminating on Galvanically Isolated FTAs must be routed at least 2 inches away from any other wires or electrical components, or a nonconductive material or grounded metal barrier must be provided for separation.

Field wiring routing

If the field wires leaving the Galvanically Isolated FTAs are dressed downward toward the bottom of the cabinet, the Power Distribution Assembly(s) must be installed above the FTAs. As a result, the field wires will not pass close to a Power Distribution Assembly. If the field wires are routed upward toward the top of the cabinet, the Power Distribution Assembly(s) must be installed below the FTAs.

Horizontal FTA Mounting Channel cabling assignment

All power cables must be routed in the upper channel of a horizontal FTA Mounting Channel. The field wires to the Galvanically Isolated FTAs must always be routed in the lower channel of a horizontal FTA Mounting Channel. No other wires, other than field wires to Galvanically Isolated FTAs, can be routed in the lower channel of the horizontal FTA Mounting Channel.

Vertical FTA Mounting Channel cabling assignment

All power cables must be routed in the left channel of a vertical FTA Mounting Channel. The field wires to the Galvanically Isolated FTAs must always be routed in the right channel of a vertical FTA Mounting Channel. No other wires, other than field wires to Galvanically Isolated FTAs, can be routed in the right channel of the vertical FTA Mounting Channel.

Power Distribution Assembly Overview

The model MU-GPRD02 Galvanic Isolation Power Distribution Assembly provides individually fused 24 Vdc power for the Galvanically Isolated FTAs.

The dc power is supplied to the Galvanic Isolation Power Distribution Assembly by the same type of 6-pin connector cable, model MU-KDPRxx (the suffix “xx” represents the length of the cable in meters), used to supply power to the card files from the High-Performance Process Manager’s Power System when the assembly is located in the same cabinet or cabinet complex.

If the Galvanic Isolation Power Distribution Assembly is located external to the cabinet or cabinet complex and CE Compliance is a requirement, model MU-KSPRxx cables must be used. The 2-conductor cable provides only 24 Vdc power.

A single-source or dual-source (redundant) of power can be supplied because the Power Distribution Assembly has two input power connectors.

Eight 2-pin power connectors

The Power Distribution Assembly has eight 2-pin connectors to which 2-wire power cables can be connected to supply the 24 Vdc power to the power connectors on the Galvanically Isolated FTAs.

Model MU-KGPRxx cables

Two power cable lengths can be ordered by model number. Model MU-KGPR05 is a 5-meter cable and model MU-KGPR10 is a 10-meter cable. Other lengths are available, but the cable must be ordered by part number. Standard lengths are 0.5, 0.75, 1, 1.25, 2, 3, 4, 5 (MU-KGPR05), and 10 (MU-KGPR10) meters (20, 30, 40, 50, 80, 120, 160, 195, and 395 inches). Order by Honeywell part number 51109620-xxx, where “xxx” represents the length of the cable in inches.

Same size as A-size FTA

The Power Distribution Assembly has the same mounting dimensions as an A-size FTA.

Cabling to Power Distribution Assemblies

Overview

Model MU-KDPRxx (the suffix “xx” represents the length of the cable in meters) power cables connect the 6-pin power connectors on the Power System with 6-pin connectors on the Power Distribution Assembly. Cable redundancy is provided by two power cables connected to each Power Distribution Assembly.

The cables can be daisy-chained to up to four Power Distribution Assemblies, provided the current through the series of MU-KDPRxx cables to the most distant Power Distribution Assembly from the Power System does not exceed 12 amperes of 24 Vdc power. The 12-ampere limitation assumes that one of the redundant cables has failed and broke the power loop.

Cable length restrictions

The allowable total length of the model MU-KDPRxx cables is also determined by the current through them. The length in meters cannot exceed 33 divided by the amount of current in amperes in the series of cables. This allows a 1/2 volt drop for the series of cables. Once again, assume that one of the redundant cables has failed when calculating the length.

Cabling to FTAs

Overview

The Power Distribution Assembly has eight 2-pin connectors that supply 24 Vdc power to the FTAs through model MU-KGPRxx (the suffix “xx” represents the length of the cable in inches) cables. The cable is not shielded and must not exit the cabinet, unless in conduit, for a CE Compliance application. Each FTA must have two cables connected to it to provide a redundant source of power. The cabling must not be daisy-chained to the FTAs.

Cable length restrictions

The allowable total length of the model MU-KGPRxx cables is also determined by the current through them. The length in meters cannot exceed 13 divided by the amount of current in amperes in the series of cables. In any case, the total length cannot exceed 10 meters. This allows a 1/2 volt drop for the series of cables. When calculating the length, assume that one of the redundant cables has failed, and the other cable(s) is carrying all the current.

Typical cabinet configuration

A typical cabinet side might have 12 FTAs and 3 Power Distribution Assemblies, and a 12-inch unused length of FTA Mounting Channel.

Power Considerations

Recommendations

Use the following recommendations for planning your Galvanically isolated FTA power system configuration and power cabling when the subsystem consists of either nonredundant or redundant IOPs.

Avoid using a non-HPM power source

Avoid providing 24 Vdc power to the Galvanically Isolated FTAs from a separate power system that is “disassociated” from the High-Performance Process Manager Power System. A “disassociated” power system is one that is part of a larger system. Try to use power systems that are local to the loads that they serve.

Use surplus power for the FTAs

If redundant HPMMs are both powered from one Power System, use whatever surplus power there is in the system to power the Galvanically Isolated FTAs. Add another Power System, if necessary.

If redundant HPMMs are each powered by their own Power System, use surplus power from both systems to power the FTAs. If more power is needed for the FTAs, use power from an additional Power System.

15.4 High Level Analog Input (HLAI) FTAs

Model MU-GAIH12/MU-GAIH8FTA

Introduction

The model MU-GAIH12 and MU-GAIH82 High Level Analog Input (HLAI) FTAs accommodate up to 16 high level dc signals. The FTA provides floating dc power to energize a 2-wire or 3-wire, 4-20 mA transmitter in a hazardous area and repeats the current accurately in another circuit to drive a range spool in the safe area that generates a 1 to 5 Vdc signal to the associated HLA IOP.

Field transmitter compatibility

The FTA is suitable for conventional transmitters only.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. A nonredundant configuration is also acceptable.

One auxiliary connector

One 50-pin auxiliary connector provides signals for remote monitoring and alarming equipment.

Field wiring Input Signals

Signal limits

The acceptable input signal is from a 4-20 mA 2-wire or 3-wire transmitter. It is not expected that any self-powered transmitters will be the source.

With an open circuit, the voltage to the transmitter wires is a maximum 28 volts. At 20 mA of transmitter current, the voltage is a minimum 15 volts.

Field device connections

Each Galvanic Isolation Module accepts one field device connection.

Auxiliary Connector Output

Description

The 1 to 5 Vdc PV signals are available at the auxiliary connector. By the use of a model MU-KFTAxx cable (the suffix "xx" represents the cable length of the cable in meters), the signals can be connected to a model MU-GMAR52 Marshalling Panel where they are available at screw terminals. If these signals are connected to monitoring or recording devices, the devices should have at least 1 megohm of input resistance to avoid loading the signals. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Maximum power requirement

The FTA consumes 1.28 amperes at 24 Vdc with a 20 mA signal present at all inputs. This represents 30.7 watts of power.

Power dissipation

The power dissipation is 25.0 watts with a 20 mA signal at all inputs.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module separates the two sides.

The safety description for the Galvanic Isolation Module input is

- 28 volts maximum
- 300 ohms
- 93 milliamps maximum

Model MU-GAIH13/MU-GAIH8FTA

Introduction

The model MU-GAIH13 and MU-GAIH83 High Level Analog Input/Smart Transmitter Interface (HLAI/STI) FTAs accommodate up to 16 high level dc signals. The FTA provides floating dc power to energize a 2-wire or 3-wire, 4-20 mA transmitter in a hazardous area and repeats the current accurately in another circuit to drive a range spool in the safe area that generates a 1 to 5 Vdc signal to the associated HLA IOP.

Field transmitter compatibility

The FTA is suitable for conventional and “smart” transmitters whose digital communication signals are superimposed on a standard 4-20 mA signal. The smart transmitter can be calibrated, interrogated, or tested from the TPS system, or from a hand-held communicator connected to the hazardous-side connector terminals on the Galvanic Isolation Module or connected across points on the FTA board.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA’s specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. A nonredundant configuration is also acceptable.

One auxiliary connector

One 50-pin auxiliary connector provides signals for remote monitoring and alarming equipment.

Field Wiring Input Signals

Signal limits

Each Galvanic Isolation Module on the HLA/STI FTA provides a floating dc source for energizing conventional 2-wire or 3-wire 4-20 mA transmitters or smart transmitters, such as the Honeywell model ST3000 SMARTLINE transmitter, whose digital communications signal is superimposed on a 4-20 mA signal.

With an open circuit, the voltage to the transmitter wires is a maximum 28 volts. At 20 mA of transmitter current, the voltage is a minimum 15 volts.

Field device connections

Each Galvanic Isolation Module accepts one field device connection.

Auxiliary Connector Output

Description

The 1 to 5 Vdc PV signals are available at the auxiliary connector. By the use of a model MU-KFTAxx cable (the suffix "xx" represents the cable length of the cable in meters), the signals can be connected to a model MU-GMAR52 Marshalling Panel where they are available at screw terminals. If these signals are connected to monitoring or recording devices, the devices should have at least 1 megohm of input resistance to avoid loading the signals. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Hand-Held Communicator

Smart Transmitter communication

Terminals 3 and 4 on the Galvanic Isolation Module are internally connected to the two field terminals and can be used to communicate with a smart transmitter.

Current Consumption

Maximum power requirement

The FTA consumes 1.28 amperes at 24 Vdc with a 20 mA signal present at all inputs. This represents 30.7 watts of power.

Power dissipation

The power dissipation is 25.0 watts with a 20 mA signal at all inputs.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module separates the two sides.

The safety description for the Galvanic Isolation Module input is

- 28 volts maximum
- 300 ohms
- 93 milliamps maximum

Model MU-GAIH14/MU-GAIH8FTA

Introduction

The model MU-GAIH13 and MU-GAIH83 High Level Analog Input/Smart Transmitter Interface (HLAI/STI) FTAs accommodate up to 16 high level dc signals. The model MU-GAIH14/MU-GAIH84 FTA is similar to the model MU-GAIH13/MU-GAIH83 FTA, except for its safety specifications and the available field terminal voltage is higher. This permits longer field wiring.

The FTA provides floating dc power to energize 2-wire or 3-wire, 4-20 mA transmitters in a hazardous area and repeats the current accurately in another circuit to drive a range spool in the safe area that generates a 1 to 5 Vdc signal to the associated HLA IOP.

Field transmitter compatibility

The FTA is suitable for conventional and “smart” transmitters whose digital communication signals are superimposed on a standard 4-20 mA signal. The smart transmitter can be calibrated, interrogated, or tested from the TPS system, or from a hand-held communicator connected to the hazardous-side connector terminals on the Galvanic Isolation Module or connected across points on the FTA board. The communicator can also be connected to the field-side terminals on the Galvanic Isolation Module.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA’s specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. A nonredundant configuration is also acceptable.

One auxiliary connector

One 50-pin auxiliary connector provides signals for remote monitoring and alarming equipment.

Field wiring Input Signals

Signal limits

Each Galvanic Isolation Module on the HLA/STI FTA provides a floating dc source for energizing conventional 2-wire or 3-wire 4-20 mA transmitters or smart transmitters, such as the Honeywell model ST3000 Smartline transmitter, whose digital communications signal is superimposed on a 4-20 mA signal.

With an open circuit, the voltage to the transmitter wires is a maximum 28 volts. At 20 mA of transmitter current, the voltage is a minimum 15 volts.

Field device connections

Each Galvanic Isolation Module accepts one field device connection.

Auxiliary Connector Output

Description

The 1 to 5 Vdc PV signals are available at the auxiliary connector. By the use of a model MU-KFTAxx cable (the suffix "xx" represents the cable length of the cable in meters), the signals can be connected to a model MU-GMAR52 Marshalling Panel where they are available at screw terminals. If these signals are connected to monitoring or recording devices, the devices should have at least 1 megohm of input resistance to avoid loading the signals. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Hand-Held Communicator

Smart Transmitter communication

Terminals 3 and 4 on the Galvanic Isolation Module are internally connected to the two field terminals and can be used to communicate with a smart transmitter.

Current Consumption

Maximum power requirement

The FTA consumes 1.2 amperes at 24 Vdc with a 20 mA signal present at all inputs. This represents 28.2 watts of power.

Power dissipation

The power dissipation is 20.8 watts with a 20 mA signal at all inputs.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module separates the two sides.

The safety description for the Galvanic Isolation Module input is

- 28 volts maximum
- 234 ohms
- 119 milliamps maximum

Model MU-GAIH22/MU-GAIH9FTA

Introduction

The model MU-GAIH22 and MU-GAIH92 High Level Analog Input (HLAI) FTAs accommodate up to 16 high level dc signals. The FTA provides floating dc power to energize a 2-wire or 3-wire, 4-20 mA transmitter in a hazardous area and repeats the current accurately in another circuit to drive a range spool in the safe area that generates a 1 to 5 Vdc signal to the associated HLA IOP.

The model MU-GAIH22 and MU-GAIH92 FTAs is similar to the model MU-GAIH14 and MU-GAIH84 FTAs, except the 4-20 mA output signal from the Galvanic Isolation Module can be routed to an auxiliary receiver through an auxiliary connector before it is sent to the range spool on the FTA to generate the 1-5 Vdc input to the IOP.

Field transmitter compatibility

The FTA is suitable for conventional transmitters only.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. A nonredundant configuration is also acceptable.

One auxiliary connector

One 50-pin auxiliary connector provides 4-20 mA signals to auxiliary devices.

Field Wiring Input Signals

Signal limits

The acceptable input signal is from a 4-20 mA 2-wire or 3-wire transmitter. It is not expected that any self-powered transmitters will be the source.

With an open circuit, the voltage to the transmitter wires is a maximum 28 volts. At 20 mA of transmitter current, the voltage is a minimum 15 volts.

Field device connections

Each Galvanic Isolation Module accepts one field device connection.

Auxiliary Connector Output

Description

The 1 to 5 Vdc PV signals are available at the auxiliary connector. By the use of a model MU-KFTAxx cable (the suffix “xx” represents the cable length of the cable in meters), the signals can be connected to a model MU-GMAR52 Marshalling Panel where they are available at screw terminals. Because it is the same 4-20 mA signal that the range spool is exposed to, the recording or monitoring system connected to the screw terminals of the Marshalling Panel must provide a low impedance of 250 ohms, or less. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Maximum power requirement

The FTA consumes 1.2 amperes at 24 Vdc with a 20 mA signal present at all inputs. This represents 28.8 watts of power.

Power dissipation

The power dissipation is 20.8 watts with a 20 mA signal at all inputs.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module separates the two sides.

The safety description for the Galvanic Isolation Module input is

- 28 volts maximum
- 300 ohms
- 93 milliamps maximum

15.5 12Vdc Digital Input FTAs

Model MU-GDID12/MU-GDID8FTA

Introduction

The model MU-GDID12 and MU-GDID82 24 Vdc Digital Input (DI) FTAs accommodate up to 32 switch or proximity detector inputs from a hazardous area, isolate the signal, and presents them to the FTA's associated 24 Vdc Digital Input FTA in the safe area. The phase of the input signals is selectable, which allows the alarm condition to be chosen for either state of the sensor. This is accomplished with independent switches on the top of the Galvanic Isolation Modules.

Fault-line detection

Individual line-fault detection is provided, that signals a contact change in the event the field wires are shorted or open. Switches are provided on the Galvanic Isolation Module to optionally defeat the line-fault detection on an individual input basis.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. Presently, redundant Digital Input IOPs are not supported.

One auxiliary connector

One 50-pin auxiliary connector provides signals for remote monitoring and alarming systems.

Field Wiring Input Signals

Specifications

The input signal specifications and assumptions are as follows:

- Input from a contact or proximity switch.
- A sensed current of less than 2 k-ohms resistance is interpreted as a closure.
- The hysteresis is nominally 650 ohms.
- The voltage applied to the sensor is 7.7 to 9.0 Vdc for 1 k-ohms resistance.

Line-Fault Detection

Definition

The Galvanic Isolation Module signals a change of state to the IOP if the field wires are open or shorted. An open wire is defined as an input current of less than 100 μ A, and a shorted wire is defined as an input current of greater than 6.5 mA.

ATTENTION—To prevent false triggering of the line-fault detection feature, proximity sensors must be used. If switch inputs are used, they must be fitted with series and shunt resistors so that an open switch provides 22 k-ohms resistance and a closed switch provides 620 ohms resistance. If this feature is not wanted, it can be disabled by placing two switches on the top of the Galvanic Isolation Module, one for each input, in the “off” position.

Auxiliary Connector Output

Auxiliary contact signals

Duplicate floating dry contacts that track the action of the signals presented to the IOP are provided by the auxiliary connector. There are two contacts in each module, isolated from the system, but not isolated from each other (three wires per isolator).

Marshalling Panel connection

By the use of a model MU-KFTAx x cable (the suffix “ xx ” represents the length of the cable in meters), the signals can be connected to the model MU-GMAR52 Marshalling Panel where the signals are available at screw terminals. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

GI module signal indicators

Two amber indicators on each Galvanic Isolation Module, one for each input, illuminates when a “closed” signal is sent to the IOP.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Specifications

The FTA consumes 0.72 amperes at 24 Vdc with all inputs in use. This represents 17.3 watts of power.

The power dissipation is 16 watts with all inputs active.

Isolation and Safety

Specifications

Isolation is 250 Vac between each input, each auxiliary set of contacts, and the High-Performance Process Manager.

The safety description for each Galvanic Isolation Module input is:

- 10.5 volts maximum
- 800 ohms
- 14 milliamps maximum

Model MU-GDID13/MU-GDID8FTA

Introduction

The model MU-GDID12 and MU-GDID82 24 Vdc Digital Input (DI) FTAs accommodate up to 32 switch or proximity detector inputs from a hazardous area, isolate the signal, and presents them to the FTA's associated 24 Vdc Digital Input FTA in the safe area. The FTA is similar to the model MU-GDID12/MU-GDID82 FTA, except the phase of the Galvanic Isolation Module's input to output signals are not selectable on the module, and the module's signal outputs are solid-state, instead of contacts. Also, the FTA has no auxiliary output connector.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs. Presently, redundant Digital Input IOPs are not supported.

Field Wiring Input Signals

Specifications

The input signal specifications and assumptions are as follows:

- Input from a contact or proximity switch.
- A sensed current of less than 2 k-ohms resistance is interpreted as a closure.
- The hysteresis is nominally 650 ohms.
- The voltage applied to the sensor is 7.7 to 9.0 Vdc for 1 k-ohms resistance.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) is active.

15. Galvanically Isolated FTA Planning

15.5. 12Vdc Digital Input FTAs

GI module signal indicators

Two amber indicators on each Galvanic Isolation Module, one for each input, illuminates when a “closed” signal is sent to the IOP.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Specifications

The FTA consumes 0.56 amperes at 24 Vdc with all inputs in use. This represents 13.4 watts of power.

The power dissipation is 14.4 watts with all inputs active.

Isolation and Safety

Specifications

Isolation is 250 Vac between each input, each auxiliary set of contacts, and the High-Performance Process Manager.

The safety description for each Galvanic Isolation Module input is

- 10.5 volts maximum
- 800 ohms
- 14 milliamps maximum

15.6 Analog Output FTAs

Model MU-GAOX02/7and MU-GAOX12/8FTAs

Overview

The nonredundant model, MU-GAOX02 and MU-GAOX72, and the redundant model, MU-GAOX12 and MU-GAOX82, Analog Output (AO) FTAs isolate up to eight 4-20 mA signals that can drive current-to-pressure (I/P) transducers, position actuators, or any load of 750 ohms or less, from an associated Analog Output IOP. The two models are identical in performance, with the redundant model capable of being controlled from redundant IOPs.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors on the redundant model of the FTA provide the interfaces to one or two IOPs.

Analog Output Standby Manual connector

One 50-pin connector accepts signals from an Analog Output Standby Manual Device, permitting removal and replacement of an IOP during normal operation of the FTA.

Field Wiring Output Signals

Specifications

The FTA provides, nominally, 4-20 mA for control of field devices that are Galvanically Isolated from all other circuits. The load resistance can be no greater than 750 ohms. The signal output's dynamic impedance is greater than 1 megohm.

Line-Fault Detection

Description

In the event of an open or short circuit in the field wiring, the resistance sensed at the input to the Galvanic Isolation Module will be a high value. This permits the readback feature of the associated 4-20 mA Analog Output IOP to detect the open or shorted field circuit and report a soft failure to the user.

Calibration

Calibration terminals

Four screw terminals are provided on the FTA, two pairs for calibrating the primary and secondary IOPs. A touch pad is provided that initiates the calibration procedure in primary or secondary IOP.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) has control of the FTA.

GI module indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Specifications

Both models of the FTA consume 0.42 amperes at 24 Vdc with a 20 mA signal on all outputs. This represents 10.5 watts of power.

The power dissipation for the FTA is 9.6 watts with all outputs providing 20 mA of current.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module divides the two sides.

The safety description for the output of each Galvanic Isolation Module is

- 28 volts maximum
- 300 ohms
- 93 milliamps maximum

Model MC-GHAO1 and MU-GHAO1 FTAs

Overview

The redundant model MC-GHAO11 and MU-GHAO11 Analog Output (AO) FTAs isolate up to sixteen 4-20 mA signals that can drive current-to-pressure (I/P) transducers, position actuators, or any load of 870 ohms or less, from an associated Analog Output IOP.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

Signal Connectors

Two IOP connectors

Two 50-pin connectors provide the interfaces to one or two IOPs.

HART Interface Connector

A 20-pin connector that provides the interface to an external HART multiplexer.

Power Connectors

The two 2-pin power connectors that provide the interfaces to the GI/IS Power Distribution Panel.

Field Wiring Output Signals

Specifications

The FTA provides, nominally, 4-20 mA for control of field devices that are Galvanically Isolated from all other circuits. The load resistance can be no greater than 870 ohms. The signal output's dynamic impedance is greater than 1 megohm.

Line-Fault Detection

Description

In the event of an open or short circuit in the field wiring, the resistance sensed at the input to the Galvanic Isolation Module will be a high value. This permits the readback feature of the associated 4-20 mA Analog Output IOP to detect the open or shorted field circuit and report a soft failure to the user.

Calibration

Calibration terminals

Four screw terminals are provided on the FTA, two pairs for calibrating the primary and secondary IOPs. A touch pad is provided that initiates the calibration procedure in primary or secondary IOP.

Indicators

Primary IOP active indicator

A green indicator on the FTA illuminates when the primary IOP (A) has control of the FTA.

GI module indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

Current Consumption

Specifications

Both models of the FTA consume 928 mA at 24 Vdc with a 20 mA signal on all outputs.

The power dissipation for the FTA is 21.6 watts with all outputs providing 20 mA of current.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module divides the two sides.

The safety description for the output of each Galvanic Isolation Module is

- 28 volts maximum
- 240 ohms
- 116 milliamps maximum
- $U_m = 250 \text{ Vrms AC or DC}$.

15.7 12Vdc digital Output FTAs

Model MU-GDOD12/MU-GDOD8FTA

Introduction

The model MU-GDOD12 and MU-GDOD82 24 Vdc Digital Output (DO) FTA can drive up to 16 suitably certified, intrinsically safe loads in a hazardous area. The loads can be a solenoid or alarm, as well as a nonenergy storing “simple apparatus,” such as an LED.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA’s specifications and additional information.

Signal Connectors

IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs through model MU-KFTAxx cables (the suffix “xx” represents the length of the cable in meters). Presently, Digital Output IOP redundancy is not supported.

Auxiliary connector

One 50-pin auxiliary connector accepts signals from an emergency shutdown system.

Field Wiring Output Signals

Specifications

Each output is a voltage source that provides a maximum output voltage of 25.5 Vdc through 232 ohms. The minimum output voltage varies from 22 volts at zero current to 10 volts at 50 milliamps.

Auxiliary Connector

Introduction

The auxiliary connector provides an input for control signals from an emergency shutdown system that is user-supplied. The shutdown system must provide potential-free floating sets of contacts. When one of the contacts is closed, a corresponding FTA output is disabled (deenergized), regardless of the output state command from the IOP.

Marshalling Panel connection

By the use of a model MU-KFTAxx cable (the suffix “xx” represents the length of the cable in meters), the signals can be connected to a model MU-GMAR52 Marshalling Panel where the input signals can be connected to screw terminals. See the “Marshalling Panel” subsection for a description.

Indicators

Primary IOP control indicator

A green indicator on the FTA illuminates when the primary IOP (A) has control of the FTA.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

GI module output indicator

An amber indicator on the Galvanic Isolation Module illuminates when the module's output is active.

Standby Manual Device Connector

No dedicated connector

There is no dedicated Standby Manual Device connector on the FTA. An IOP connector interface is used by the Digital Output Standby Manual device to control the output of the FTA.

Current Consumption

Power consumption

At 25 Vdc and with all outputs active into a 350 ohm load (typical for a solenoid value), the FTA consumes 1.10 amperes.

Power dissipation

The power dissipation is 18.7 watts with all outputs active.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module divides the two sides.

The safety description for the output of each Galvanic Isolation Module is

- 25.5 volts maximum
- 232 ohms
- 110 milliamps maximum

Model MU-GDOL12/MU-GDO8FTA

Description

The model MU-GDOL12 and MU-GDOL82 24 Vdc Digital Output (DO) FTA can drive up to 16 suitably certified, intrinsically safe loads in a hazardous area. The loads can be a solenoid or alarm, as well as a nonenergy storing "simple apparatus," such as an LED.

No output signal override capability

The FTA is similar to the MU-GDOD12/MU-GDOD82 FTA, except it does not have the capability to accept output override signals from a shut-down device through an auxiliary connector.

Line fault detection capability

Instead, each input channel has line fault detection circuitry that causes a contact closure that is present at an auxiliary connector.

References

The *Process Manager I/O Specification and Technical Data* and *Process Manager I/O Installation* manuals provide a more detailed description of the FTA's specifications and additional information.

IOP connectors

Two 50-pin connectors provide the interfaces to redundant IOPs through model MU-KFTAx_x cables (the suffix "xx" represents the length of the cable in meters). Presently, Digital Output IOP redundancy is not supported.

Auxiliary connector

A 50-pin connector provides contact closure line fault signals from each of the 16 channels.

Field Wiring Output Signals

Specifications

Each output is a voltage source that provides a maximum output voltage of 25.5 Vdc through 232 ohms. The minimum output voltage varies from 22 volts at zero current to 10 volts at 50 milliamps.

Auxiliary Connector

The auxiliary connector provides Line Fault Detection signals that are represented by a solid-state signal for each of the FTA's 16 channels. Upon detection of a line fault, the Galvanic Isolation Module deenergizes a solid-state switch that has its emitter connected to logic ground. The collector is the output to the auxiliary connector and is not terminated in the module or on the FTA assembly.

The solid-state switch has the following characteristics:

- Maximum off-state voltage = 35 Vdc
- Maximum on-state voltage = 2 Vdc
- Maximum off-state leakage current = 10 μ A
- Maximum on-state current = 50 mA

Combiner Panel connection

By the use of a model MU-KFTAx_x cable (the suffix "xx" represents the length of the cable in meters), the signals can be connected to the model MU-GLFD02 Combiner Panel where the signals are combined with 16 other LFD signals from another FTA. The combined 32 signals are available as inputs to redundant Digital Input IOPs, model MU-PDIX02. See the "Combiner Panel" subsection for a description of the Combiner Panel.

Marshalling Panel connection

Using the same cable, the signals can also be connected to the model MU-GMAR02 Marshalling Panel where the signals are available at screw terminals. See the "Marshalling Panel" subsection for a description of the Marshalling Panel.

Indicators

Primary IOP control indicator

A green indicator on the FTA illuminates when the primary IOP (A) has control of the FTA.

GI module power indicator

A green indicator on each Galvanic Isolation Module illuminates when power is applied to the module.

GI module output indicator

An amber indicator on the Galvanic Isolation Module illuminates when the module's output is active.

GI module LFD indicator

A red indicator on the Galvanic Isolation Module illuminates when a line fault is detected.

Standby Manual Device Connector

No dedicated connector

There is no dedicated Standby Manual Device connector on the FTA. An IOP connector interface is used by the Digital Output Standby Manual device to control the output of the FTA.

Current Consumption

Power consumption

At 25 Vdc and with all outputs active into a 350 ohm load (typical for a solenoid valve), the FTA consumes 1.10 amperes.

Power dissipation

The power dissipation is 18.7 watts with all outputs active.

Isolation and Safety

Specifications

The isolation between the safe-side and hazardous-side of the FTA is 250 Vac. The Galvanic Isolation Module divides the two sides.

The safety description for the output of each Galvanic Isolation Module is

- 25.5 volts maximum
- 170 ohms
- 150 milliamps maximum

Combiner Panel

Introduction

The model MU-GLFD02 Combiner Panel is similar in shape and appearance to an "A" size FTA and contains four 50-pin phone-type connectors and a single green LED indicator.

Purpose

The purpose of the panel is to combine the Line Fault Detection (LFD) outputs (16) of two Digital Output FTAs and present the signals (32) to redundant Digital Input IOPs for integration.

LFD input connectors

Two connectors on the panel connect to the auxiliary connector on two Digital Output FTAs that have line fault detection capability. Presently, these are the MU-GDOL12/MU-GDOL82 FTAs. The standard IOP to FTA cable is used to provide the connections.

IOP output connectors

The combined 32 LFD outputs are available at two output connectors. One output connector connects to IOP A and the other connector connects to its redundant partner, IOP B. The standard IOP to FTA cable is used to provide the connections.

Primary IOP active indicator

The green LED indicator is illuminated when IOP A is active.

Marshalling Panel

Description

The model MU-GMAR52 Marshalling Panel is similar in shape and appearance to a “B” size FTA. It has 38 screw terminal connections. There is only one version of the Marshalling Panel. The Marshalling Panel has one 50-pin connector that receives or sends signals to the safe side of the FTA to which it is connected.

Complementary

The Marshalling Panel is complementary and provides the ability to repeat signals into or out of the safe side of the Galvanic Isolation Modules mounted on the FTA.

Signals not intrinsically safe

Although the Marshalling Panel is used with the FTAs, the signals present are not intrinsically safe or inherently Galvanically Isolated. Therefore, the signals on the Marshalling Panel cannot be exposed to a Division 1, Zone 0 or Zone 1 environment.

Bus bar may be required

Because the Marshalling Panel does not have a built-in shield bus, providing termination for a large number of shield wires requires the use of a horizontal or vertical bus bar. The horizontal or vertical bus bar is connected to the local Master Reference Ground (Safety Ground for CE Compliance).

Can have general purpose usage

The Marshalling Panel was developed primarily to provide user-accessibility to the signals from the auxiliary connectors on the Galvanically Isolated FTAs, but it can also be used as a general purpose marshalling panel in the High-Performance Process Manager subsystem.

Marshalling Panel mounting

The model MU-GMAR52 Marshalling Panel can be mounted on either a horizontally or vertically oriented FTA Mounting Channel. No Galvanically Isolated or standard (non-Galvanically Isolated) FTAs can also be mounted on the FTA Mounting Channel. Cabling to the Marshalling Panel must be routed in the upper channel and to the left in a horizontal FTA Mounting Channel and in the right channel and to the right in a vertical FTA Mounting Channel.

Configurations

Six configurations

The screw terminals connection of the Marshalling Panel can assume six configurations, depending upon the model of FTA to which its 50-pin connector is connected through a model MU-KFTAx_x cable (the suffix “xx” represents the length of the cable in meters).

The configurations are described in the following subsections.

15.8 High Level Analog Input FTAs

Introduction

When used with High Level Analog Input (HLAI) FTA or High Level Analog Input/Smart Transmitter Interface (HLAI/STI) FTA, the Marshalling Panel provides either 1 to 5 volt or 4 to 20 mA PV signals.

1 to 5 V signals

The 1 to 5 volt signals are the same signals that the HLAI or STI IOP receives.

4-20 mA signals

The 4 to 20 mA signals must be returned to the FTA to produce the 1 to 5 volt signal across a spool resistor that the IOP requires.

Recording or monitoring devices

The signals are intended to be connected to a recording or monitoring device that the user provides.

1-5 Vdc FTAs

The following FTAs provide 1 to 5 volt signals:

- Model MU-GAIH12/82 HLAI FTA
- Model MU-GAIH13/83 HLAI/STI FTA
- Model MU-GAIH14/84 HLAI/STI FTA

Subsystem input impedance

The subsystem must have an input impedance of 1 megohm, or greater, to avoid loading down the signals and introducing errors into the IOP.

4-20 mA FTA

The following FTA provides 4 to 20 mA signals:

- Model MU-GAIH22/92 HLAI FTA

Subsystem input impedance

The subsystem must have an input impedance of 250 ohms or less.

Cable routing

The signal wires must be separated from other wires or cables that might induce noise onto the signals. It is suggested that you use a properly grounded, shielded, twisted-pair cable to carry the signals to the recording or monitoring device.

Reference

A list of the signals available at the screw terminals of the Marshalling Panel when it is connected to a High Level Analog Input FTA or High Level Analog Input/Smart Transmitter Interface FTA through its 50-pin auxiliary connector can be found in the *Process Manager I/O Installation* manual.

15.9 Digital Input FTAs

Model MU-GDID12/82 FTA configuration

The model MU-GDID12/82 FTA provides potential free sets of contacts that are isolated from the input to the IOP to which the FTA is connected are available.

Relay contact interface

Each Digital Input Galvanic Isolation Module mounted on the FTA has two double-pole on/off reed relays. One set of the reed relay contacts is connected to the IOP, the second set of relay contacts is connected to the Marshalling Panel. The contact rating is 10 W, 0.5 A at 35 Vdc.

Application

The typical applications for the sets of contacts are inputs to sequence of events recorders, monitoring systems, and shutdown systems.

Reference

A list of the signals available at the screw terminals of the Marshalling Panel when it is connected to a Digital Input FTA through its 50-pin auxiliary connector can be found in the *Process Manager I/O Installation* manual.

15.10 Digital Output FTAs

Model MU-GDOD12/82 FTA configuration

The Digital Output configuration provides control by contacts or transistors to individually deenergize each Galvanic Isolation Module digital output. For example, an “on” output command from the IOP for a channel can be “overwritten” by a control signal from the Marshalling Panel that forces the output signal “off.” The override signal cannot force the output signal “on.”

Application

The inputs can be control signals from an emergency shutdown subsystem that is user-supplied.

Reference

A list of the signals available at the screw terminals of the Marshalling Panel when it is connected to a model MU-GDOD12/82 FTA through its 50-pin auxiliary connector can be found in the *Process Manager I/O Installation* manual.

To disable a particular channel, a designated pair of terminals is shorted together.

Model MU-GDOL12/82 configuration

The Digital Output configuration for the model MU-GDOL12/82 FTA is an interface that represents input channel line fault detection from the FTA. Line Fault Detection (LFD) circuitry in each Galvanic Isolation Module controls a solid-state switch output at the FTA’s auxiliary connector. Upon detection of a line fault, the Galvanic Isolation Module deenergizes the solid-state switch that has its emitter connected to logic ground.

Solid-state switch inputs

The collector of the solid-state switch is the output to the auxiliary connector and is not terminated in the module or on the FTA assembly.

Reference

A list of the signals that are available at the screw terminals of the Marshalling Panel when it is connected to a model MU-GDOL12/82 FTA through its 50-pin auxiliary connector can be found in the *Process Manager I/O Installation* manual.

15. Galvanically Isolated FTA Planning

15.10. Digital Output FTAs

Honeywell

Honeywell International
Process Solutions
2500 West Union Hills
Phoenix, AZ 85027