



PART	QTY	DIMENSIONS (mm)	MATERIAL
Lid	1	840 x 460	Plywood
Front	1	780 x 400	Plywood
Back	1	780 x 400	Plywood
Ends	2	400 x 400	Plywood
Bottom	1	780 x 400	Plywood

23 chain links (for lid support)


OVERALL ASSEMBLED DIMENSIONS

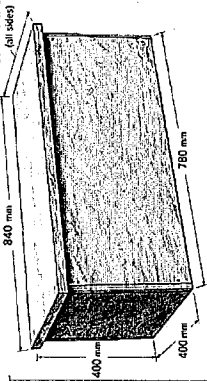


EXPLODED VIEW

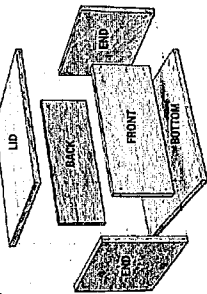

PANEL DIAGRAM (NOT TO SCALE)

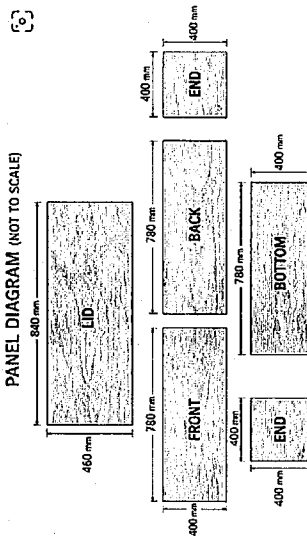

SECTION VIEW (FRONT)

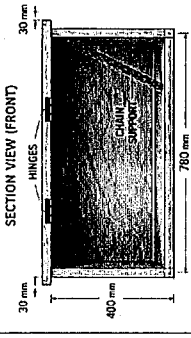

LID OVERHANG

The lid overhangs approximately 30 mm on all sides for weather protection and ease of opening.

BUILD PLAN (STEP-BY-STEP)

- 1 PREPARE PANELS**
Cut all panels to the dimensions shown in the cutting list.
- 2 BUILD BASE**
Place the bottom panel flat. Attach the two end panels to the bottom panel using glue and screws.
- 3 ADD ENDS**
Attach the end panels to the front and back panels. Use glue and screws.
- 4 CHECK FOR SQUARE**
Measure diagonals. Adjust with shims. Then tighten screws.
- 5 ATTACH LID**
Attach two hinges. Attach the lid to the back panel. The lid is hinged to the back panel.
- 6 INSTALL CHAIN**
Attach chain to the lid. Attach chain to the front panel to support the lid.

INSIDE DIMENSIONS (APPROX.)



NOTES & TIPS

- 12-18 mm plywood is ideal for strength and durability.
- Pre-drill screw holes to prevent splitting.
- Sand all edges smooth.
- Add handles on the ends, if desired.
- Seal or paint to protect the wood.

HARDWARE

- 2 Hinges (approx. 100-150 mm in from each side)
- Chain (23 links)
- Wood Screws (30-50 mm)
- Wood Glue

LID CLEAR OPENING

The chain links the lid opening to about 95-100°.