Instruction sheet - PDU

	Novum PDU installation	03/08/2026
#72	Aftersales	V.M.

Once the PDU and the cables have been completely refurbished, you will be able to reinstall them in the boat. Please note that the charger connector (the one that plugs into the PDU) must be replaced before reassembly.

For all the cables, please use zip ties to ensure that they can't move freely. You'll find hooks along the walls for hanging the zip ties.

The first step is to route the inverters cables through the designated channels.

Inverters are located on both sides of the boat, in front of the battery.






Once the cables are in the right place, you can connect them to the inverters.

You will need to unscrew the top cover of the inverters to access the connections.


Please ensure that the cable glands are fitted correctly to prevent any risk of moisture entering the inverters.

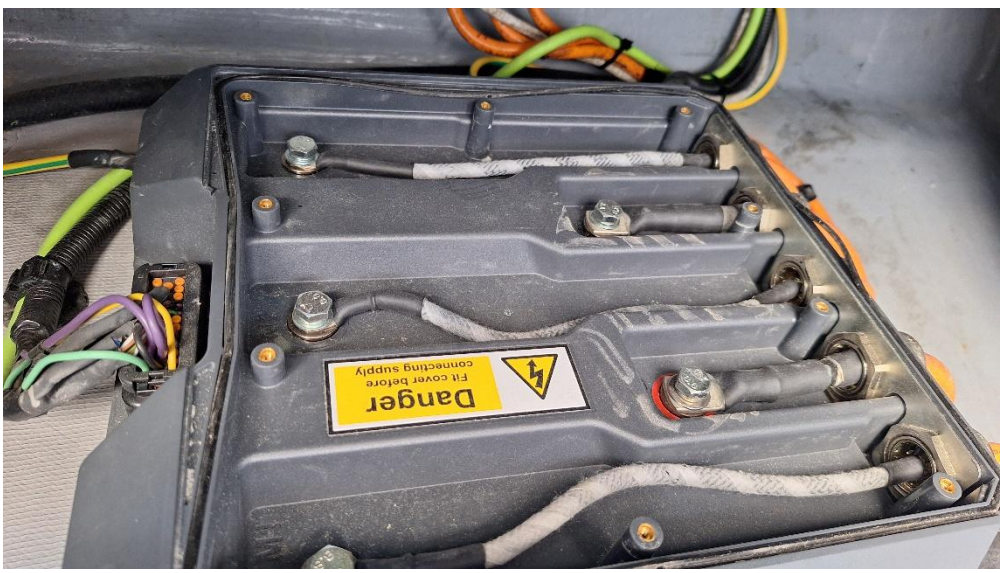

Next step is to mount the PDU back in place.

Please use the plastic washers between the stainless-steel washer and the aluminium bracket for all 4 screws.

Now, if it’s not already the case, remove the large orange security plug from the PDU.

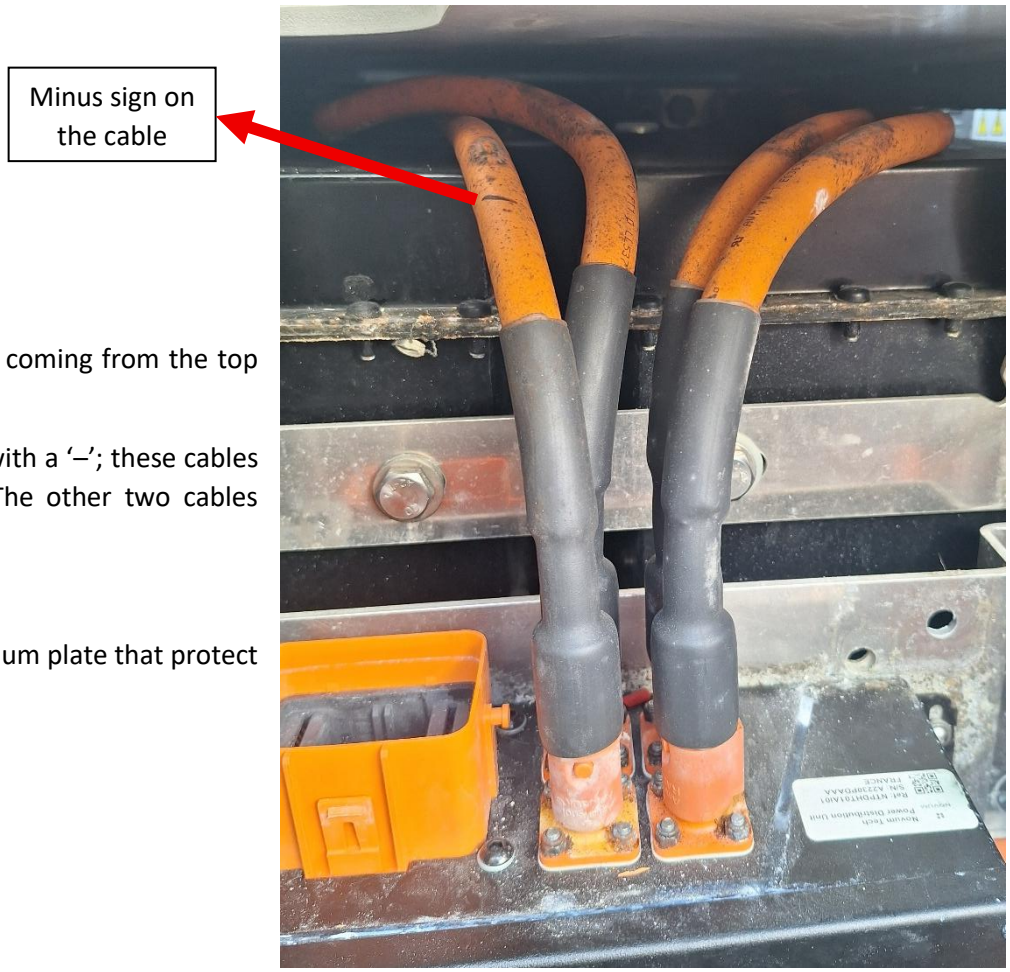

Then, plug back the four connectors coming from the top of the battery.


You should find two cables marked with a ‘–’; these cables connect to the front of the PDU. The other two cables connect to the back of the PDU.


Now you can mount back the aluminium plate that protect those 4 cables.

You can now connect all the connectors that need to be connected to the PDU.



Bottom of the PDU

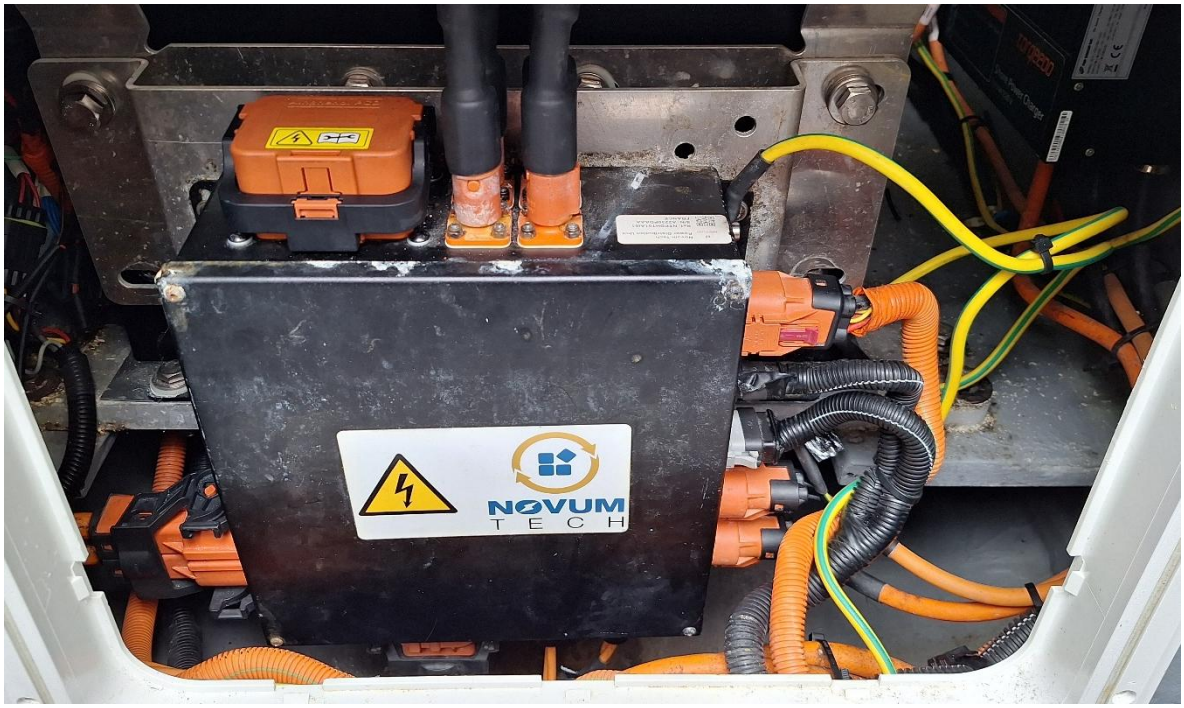


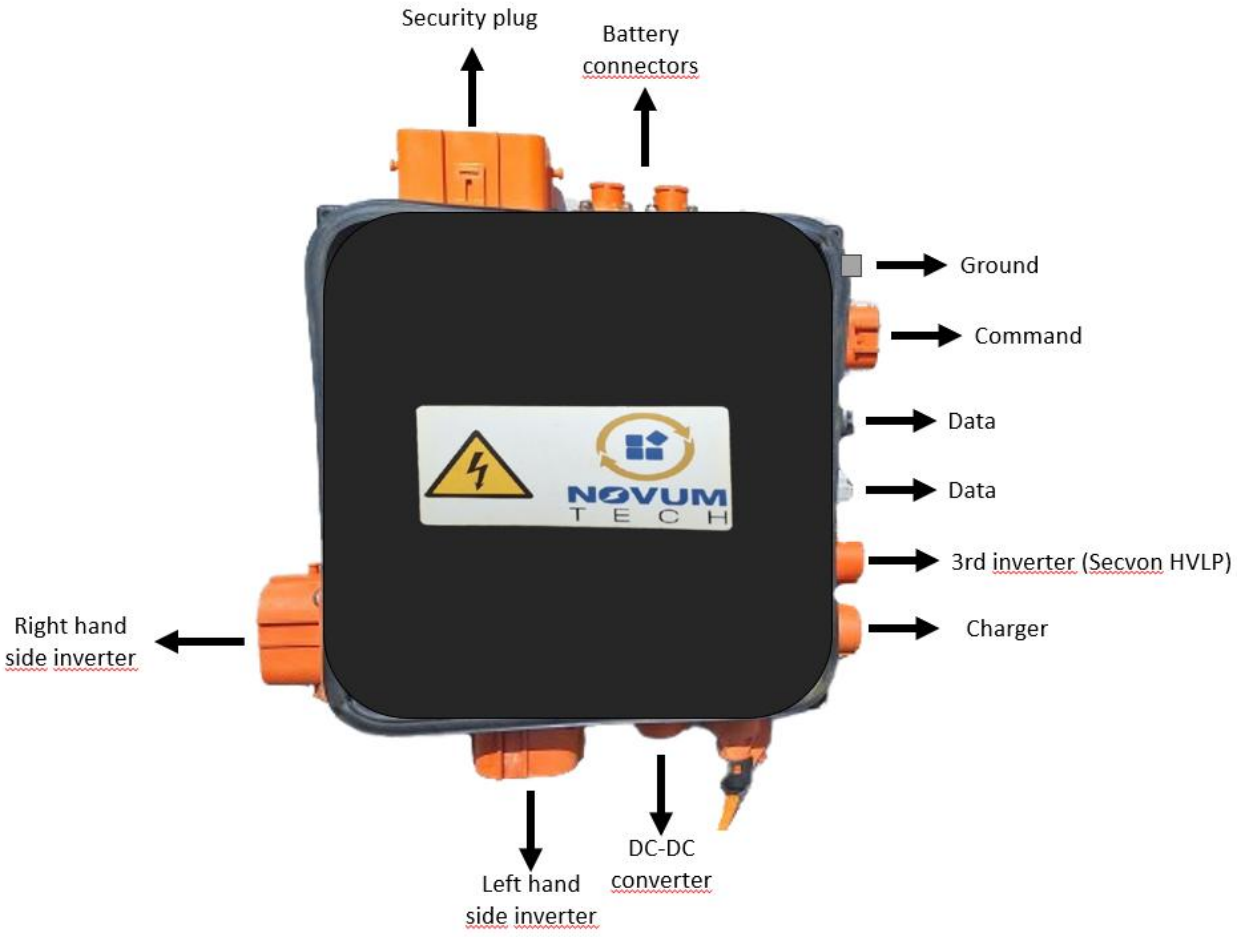


The HVLP inverter and the charger are positioned side by side and both use the same type of connector. The difference that allows you to ensure you are plugging the correct connector into the correct device is that the HVLP connector has a small cable that is not used. The charger's connector, on the other hand, does not have this loose cable.

HVLP inverter

Charger

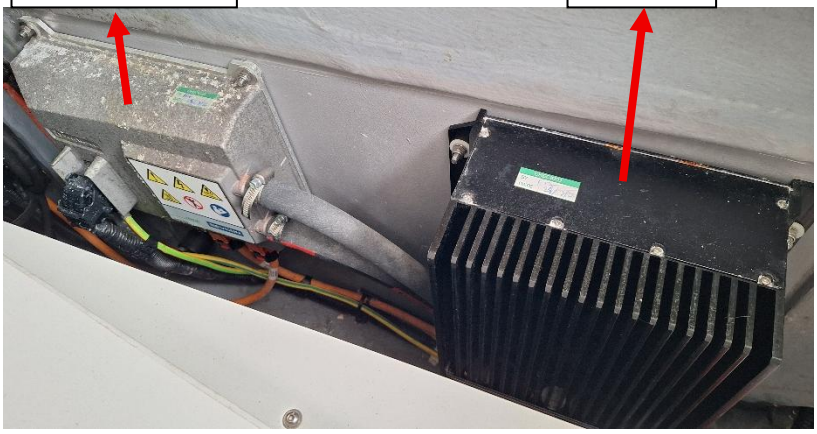

Loose cable on HVLP connector

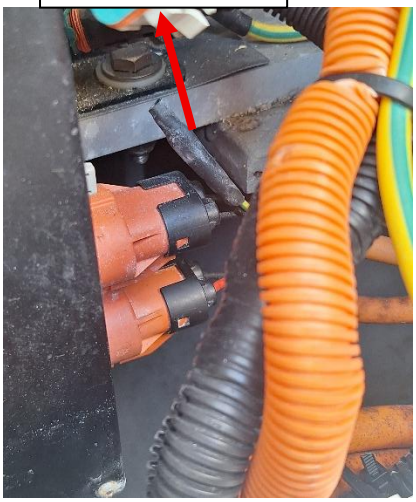

You can then reconnect the relevant connector to the DC-DC converter.



The last step is to plug back the security plug.