
TRANSMITTER: 2xAAA -> SW1 -> MT3608 boost -> +5V rail -> Nano 5V pin

Nano 3V3 -> RF_3V3 -> nRF24L01 VCC (C1 = bulk decoupling at the module)

TTP223 OUT -> D3 (TOUCH_SIG). SPI: D8=CE, D9=CSN, D13=SCK, D11=MOSI, D12=MISO

Note: MT3608 IN− and OUT− are common inside the module, so BAT− and GND join there.

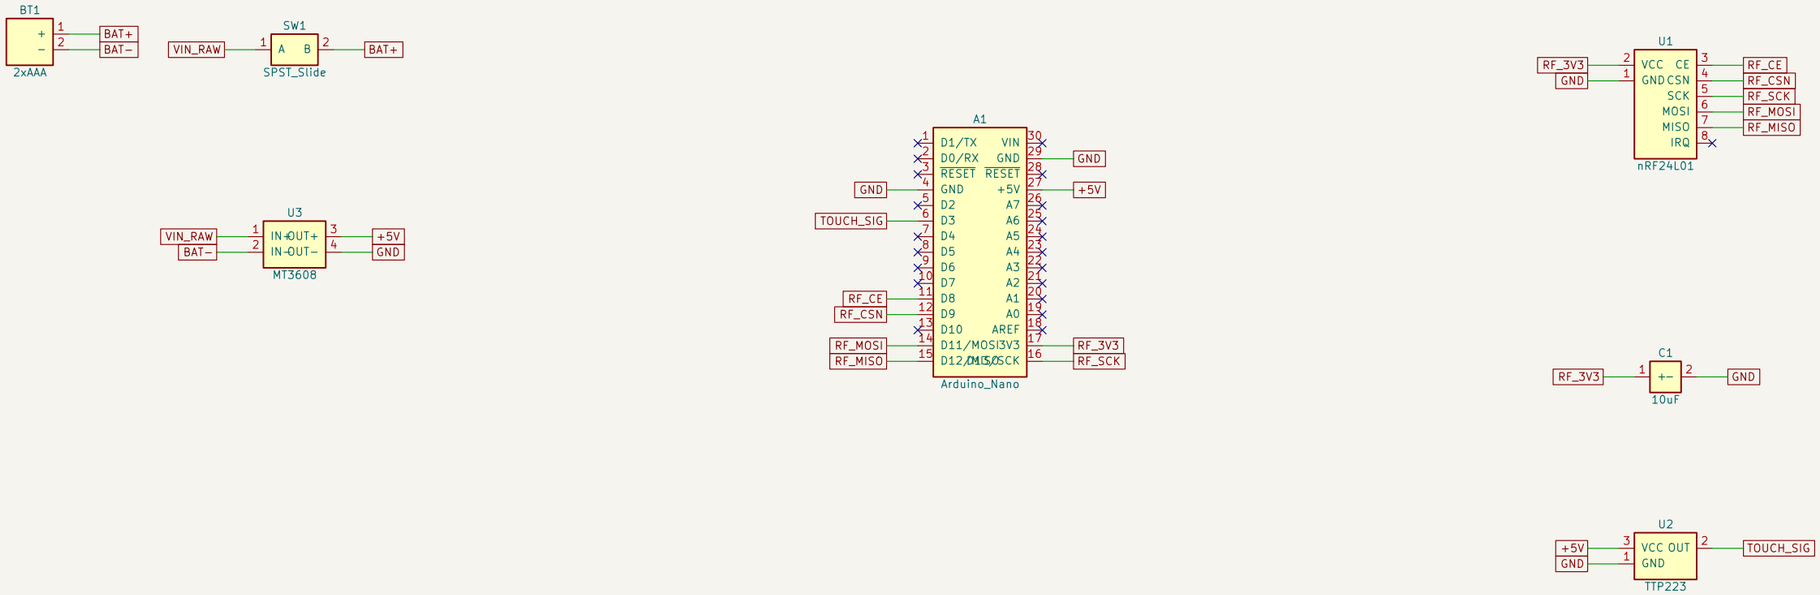

All parts are pre-built modules; every net is named with a global label **Wireless_Lamp_Switch**

Sheet: /
File: Transmitter.kicad_sch

Title: Wireless Lamp Switch – Transmitter

Size: A3	Date:	**Rev: 1.0**
KiCad E.D.A. 10.0.0		Id: 1/1