

MACS - MNW Acoustic Classification Suite

30/08/2026 - Version 0.1

Contents

1	Overview	3
1.1	Capabilities	3
1.2	What MACS does and why would I need it?	3
2	SONAR and Sound Analysis an Introduction	4
2.1	Background	4
2.2	Broadband and Narrowband	5
2.3	Normalization	6
2.4	LOFAR (Low Frequency Analysis and Recording)	6
2.5	DEMON (Detection of Envelope Modulation on Noise)	7
2.6	Cepstrum and Auto-correlation	7
3	Installing, Configuring and Application Interface	9
3.1	Installing and Configuring MACS	9
3.2	Overview	9
3.3	The Title Bar	9
3.4	Main Panel - Central Analysis Area	10
3.5	Live Monitor	12
3.6	Settings Panel	12
3.7	Right sidebar - Contact Recording and Management	13
3.8	Settings Persistence	13
3.9	The Cursor System	14
4	Contact Database and User Recordings	15
4.1	Overview	15
4.2	Contact Database	15
4.3	Contact Management	16
4.4	Creating a New Contact	17
4.5	Contact Matching	19
5	SONAR Classification 101 and MACS Workflow	21
5.1	What you will learn in this section	21
5.2	What are Harmonics?	22
5.3	What are Sidebands?	23
5.4	LOFARgrams - what to look for	24
5.5	DEMONgrams - what to look for	24
5.6	Cepstrum - confirming periodicity	25
5.7	Running ACF — validating repetition	25
5.8	Engine Types	26
5.9	Electrical Mains	26
5.10	Ship Propeller and Shaft Rates	27
5.11	Key Engine Measurements the Engine Firing Rate (EFR), Cylinder Firing Rate (CFR) and Gear Mesh Frequency (GMF)	28
5.12	Electrical motors and their characteristics	30
5.13	Summary	32
5.14	Recomended Workflow Using MACS	32
6	Illustrated Examples	34
6.1	A surface contact has been detected can you narrow down its class or type?	34
6.2	Try it yourself	41
6.3	Using the User Database	41

7	References	42
8	Appendix A - A Casual Guide To Sound, SONAR and FFT	43
8.1	Sound a short Introduction	43
8.2	SONAR	43
8.3	What the FFT?	44
9	Appendix B - Methodology	46
9.1	Normalisation	46
9.2	Analysis Modes	47
9.3	Noise Reference Subtraction	49
10	Appendix C - Contact Database Structure	51

1 Overview

Note for new users. If you are unfamiliar with sound analysis, SONAR, and the mathematics behind it I strongly recommend that you read the friendly guides in [Appendix A](#) and the relevant chapter in the [MNW guide](#). You do not need to be a maths wizard to use MACS, but a basic knowledge of the concepts will help you understand what is going on. If you enjoy the detail then [Appendix B](#) goes deeper into the concepts. In Mahzel's own words:

MACS is a tool provided as an advanced suite for enthusiasts of acoustic analysis. It also provides a custom user-build database where you can slowly build your measurements history, along with all your comments about an encounter. Only had a few seconds of contact? No worries just record it and replay the contact for further analysis for as long as you wish. It includes a database matcher, where you can see if a current contact's markings correspond to something in the database. You may have numerous matches, but in the end, you are in charge of the sonar.

Download MACS for Widows, Linux and MacOS from [here](#).

1.1 Capabilities

MACS is an acoustic classification tool designed for use with the naval simulation Modern Naval Warfare (MNW) developed by The Maslas Bros and published by Matrix / Slitherine. MACS does not replace the in game tools.

MACS features include:

- Accepting sound input directly from the PC's sound card or other system capability.
- Running alongside MNW without significantly impacting performance.
- Fine control of several input and output parameters.
- Detailed, fine grain multicolour representations of the analysed sound.
- Normalization and noise suppression to manage the impact of background noise.
- Allowing recording and replay of sounds for future analysis.
- A user-managed database of contacts and measurements (a pre-populated downloadable database is available at the MACS website).
- A built in matcher to compare current contacts with those in the database.

1.2 What MACS does and why would I need it?

MACS provides six complementary signal-processing views to help you identify and characterise surface or submarine contacts by their acoustic signature. The underlying processing is grounded in real passive sonar digital signal analysis:

- FFT based spectrograms (LOFARgrams).
- DEMON envelope detection (DEMONgrams).
- Real cepstrum analysis.
- Auto correlation.
- Power Spectral Density (PSD) analysis.
- ZoomFFT analysis.

Explanations of these and how to use them are described in the following sections. Each processing technique provides a different view of the same signal, when used together they can provide a clearer picture of what is happening around you. The more information you have, the better your chances of detecting and classifying a contact.

MACS supplements, it does not replace the in-game tools

2 SONAR and Sound Analysis an Introduction

2.1 Background

For submariners, the ability to detect the presence of surface ships and other submarines while remaining undetected is a matter of life and death. To achieve this, passive SONAR detection techniques have been developed to detect, classify, and determine target speed based on noise emissions. Often, detection is made harder when the signal from the ship is lost in background noise. This can occur when the marine environment is particularly noisy and/or when the ship is distant from the submarine. In order to maintain contact with a target vessel, detection must rely on some form of signal processing to enhance the acoustic signature of the ship and reduce the impact of the background noise in the sonar signal.

Remarkably, the developers of MNW have included sophisticated in-game representations of the principal components that make up the core of the detection and classification tools. These tools can only be representative of those actually used as most are classified secret by navies around the world; though, it is surprising how much is available in the public domain. Some key references are listed in the [references section](#). The developers have set an ambitious target of achieving as near-realistic sound modelling and propagation as is possible for the capabilities of a reasonably spec'd PC with a modern GPU. Using GPU ray-tracing capabilities, the mechanics of sound movement in water are accurately modelled. For those with long memories you will be familiar with rudimentary versions of these tools in submarine simulations such as EA's Sub Command and Black Bean's Dangerous Waters.

The process of capturing, analysing, and final classification of a target is shown in Figure 1. This workflow uses several processes which are explained below. A more detailed discussion is provided in [Appendix B](#). However, for a player of MNW, the information provided in this section provides a sufficient understanding of what MACS and the game's systems are telling you.

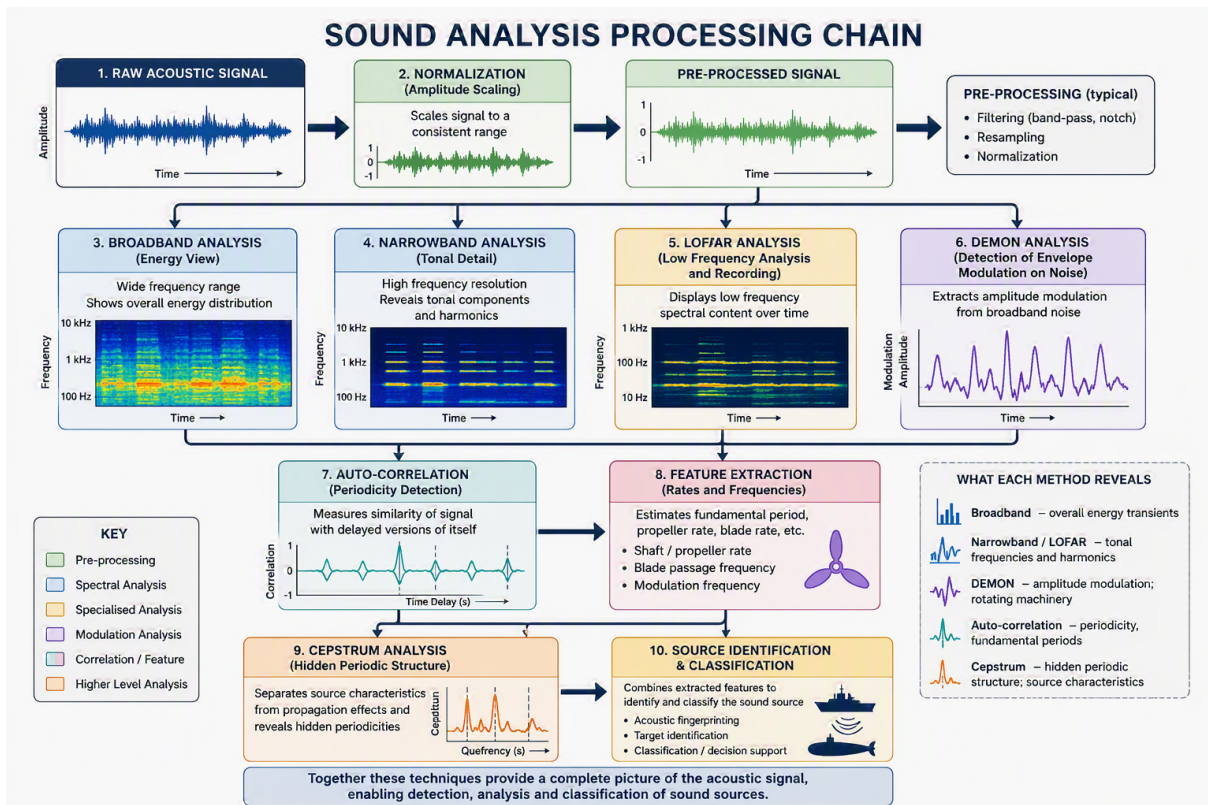


Figure 1: Sound analysis workflow

Sound analysis is the process of examining acoustic signals to extract useful information about their source, characteristics, and behaviour. Sound signals are often complex, containing multiple frequency components, background noise, and transient events. To understand these signals effectively, a range of signal processing techniques is used.

2.2 Broadband and Narrowband

Broadband and narrowband analysis are complementary ways of processing the acoustic energy received by a submarine's sensors. A submarine hunting a target will typically use both methods because each provides different information. In MNW, your principal receivers of sound energy are the bow array (LAB), the flank arrays (WAA), and the two towed arrays (TA), TB34 and TB29A. Broadband analysis examines sound energy across a wide range of frequencies. It focuses on overall acoustic energy rather than specific discrete tones. Broadband is where you will often first see a contact, although this is not always the case. Narrowband analysis, on the other hand, uses finer frequency resolution to reveal detailed spectral features such as harmonics and tonal components produced by machinery, propeller blade rates, or engine harmonics. It does this by applying a Fourier Transform (FT) transforming the sound from a time based domain to a frequency domain ([Appendix B](#)). These frequencies are displayed as discrete tonal lines which can often be an identifying fingerprint for the contact.

Broadband Strengths

- **Long-range detection:** Often provides a first indication of a contact because it collects energy over a wide frequency range.
- **Good against noisy targets:** Effective when a target generates substantial broadband noise from propulsion or hydrodynamic flow.
- **Rapid contact detection:** Useful for searching large areas and finding contacts quickly.
- **Works when tonal lines are weak or absent:** Can detect targets whose machinery tones are masked or difficult to resolve.

Broadband Weaknesses

- **Limited classification capability:** Indicates that a contact exists, but provides little information about what it is.
- **Vulnerable to environmental noise:** Shipping, sea state, and biologics can create broadband noise that causes false or ambiguous detections.
- **Less precise tracking:** Bearing estimates and contact characterization may be less accurate than narrowband methods.

Narrowband Strengths

- **Excellent classification and identification:** Tonal patterns can reveal target type and sometimes specific class.
- **Supports tracking:** Stable tones allow accurate bearing tracking over time.
- **Useful against quiet contacts:** Even very quiet submarines may produce detectable tonal signatures.
- **Provides target motion clues:** Changes in tonal frequencies can support Doppler analysis and target speed estimation.

Narrowband Weaknesses

- **Requires strong, resolvable tonal lines:** If the target is extremely quiet or its tonals are masked, analysis becomes difficult.
- **More susceptible to frequency instability:** Manoeuvring, environmental effects, and machinery changes can complicate interpretation.

- **Generally less effective as an initial search tool:** It often requires an already-established contact bearing.

Imagine a submarine is listening for another submarine transiting at moderate speed. The target's propeller, machinery, flow noise, and other sources create a broad spectrum of noise. Broadband processing may detect a rise in acoustic energy from a particular bearing, suggesting a contact, the operator might see a contact emerge from the background noise even before any specific identifying features are apparent. After broadband analysis detects a contact, operators switch attention to narrowband displays. They may observe a set of stable tones at particular frequencies. Those frequencies can be compared to intelligence databases, acoustic signatures, notebooks and experience.

In modern anti-submarine warfare, classifiers do not choose one over the other; they use them together. Narrowband data is used to classify the specific ship type via its engine noise, while broadband data (both passive flow noise and active echoes) is used to map the target's size, speed, and exact spatial position.

2.3 Normalization

Before advanced analysis is performed, signals are often subjected to normalisation. Normalisation is a statistical technique that scales the signal amplitude to a consistent range. A well-known and commonly used method is the Z-score however there are many other strategies available. The effect is to reduce the influence of recording-level variations, allowing meaningful comparisons between different measurements. This preprocessing step improves the robustness of subsequent analysis techniques and ensures that results reflect the signal characteristics rather than differences in recording conditions. The approach used by MACS to normalise data is explained in [Appendix B](#) & [Appendix C](#).

2.4 LOFAR (Low Frequency Analysis and Recording)

In underwater acoustics and sonar applications, LOFAR is a fundamental technique. It is a passive narrowband sonar signal-processing technique which displays the spectral content of low-frequency signals over time. These tonal signatures can act as acoustic fingerprints, helping to detect, classify, and sometimes identify ships and submarines from the sounds they radiate into the water. Narrowband is used because:

- **Extreme Long Range:** Low-frequency narrowband signals can travel very long distances through the ocean without losing energy ([YouTube](#)), allowing for early detection of distant threats.
- **High Signal-to-Noise Ratio:** By filtering out background ocean noise and focusing strictly on ultra-thin frequency bands, LOFAR can extract faint mechanical signals that are otherwise invisible to the naked ear or broadband sensors

Sound received by the SONAR arrays is transformed into a "frequency domain" which shows how much energy exists for every single frequency. This is typically done using a FFT (Fast Fourier Transform). FFT is a mathematical algorithm which allows the huge amount of information contained in the sound data to be analysed quickly. The result is displayed as a LOFARgram (a time-frequency spectrogram), where persistent frequency components appear as lines. This is useful because ships and submarines generate characteristic underwater noise from:

- Main engines and generators
- Gearboxes and pumps
- Propeller blade rotation and cavitation

These sources produce distinctive frequency components. By examining the pattern of tonal lines in a LOFAR display, operators can distinguish different vessel types and, specific classes of ships and, sometimes, individual ships.

In summary, LOFAR is a passive sonar technique that converts underwater sounds into a time-frequency display, enabling operators to detect ships and identify them from their unique acoustic signatures. LOFAR is often paired with DEMON analysis.

2.5 DEMON (Detection of Envelope Modulation on Noise)

DEMON processing focuses on amplitude modulations (AM) present within broadband noise. In simple terms, it means taking a steady, continuous wave and making it rhythmically louder and quieter over time. For example, the rotation of a ship's propeller produces periodic fluctuations in noise levels at characteristic frequencies, such as:

- Shaft rotation frequency
- Blade-passing frequency or Blade Rate(BR)

DEMON extracts the amplitude envelope of the received noise and analyses it in the frequency domain. The resulting spectrum reveals peaks corresponding to the vessel's mechanical and propeller characteristics, which can be used for identification and classification. This is useful because:

- Enhances weak periodic signatures hidden in broadband noise.
- Helps estimate propeller speed, number of blades, and other target features.
- Widely used in passive sonar target detection and classification systems.

LOFAR emphasizes the ship's frequency spectrum (machinery and tonal components).
DEMON is useful for extracting propeller-related modulation and blade-rate information.

2.6 Cepstrum and Auto-correlation

Cepstrum analysis is a powerful signal-processing technique used in acoustics. Developed to reveal hidden periodic structures in the frequency spectrum of a signal, it is particularly effective for separating source characteristics from propagation effects.

The basic idea behind cepstrum analysis is to detect echoes, repeating patterns, or modulation effects within a signal. In many real-world applications, a recorded signal is not simply a direct waveform but rather a combination of a source signal and the influence of the medium or system through which it passes. For example, in sonar, received energy may contain reflections from multiple surfaces, and in machinery monitoring, vibration signals are influenced by rotating components and gears. Cepstrum analysis helps separate these effects and identify underlying periodicities.

Auto-correlation is commonly used to detect periodic acoustic signatures produced by ships, submarines, and marine machinery. Many sources generate signals that repeat at regular intervals, such as rotating propellers, diesel engines, pumps, and gear systems. The periodic nature of these sounds produces corresponding peaks in the auto-correlation function. The spacing between peaks indicates the repetition period, from which the rotational speed or blade-passage frequency can be estimated.

In simple terms, auto-correlation measures how similar a signal is to a delayed version of itself. By comparing the signal with progressively shifted copies, it becomes possible to detect hidden periodicities and determine whether certain features repeat over time.

For example, consider a vessel whose propeller completes two revolutions per second. If the acoustic signal generated by the propeller repeats every 0.5 seconds, the auto-correlation function will exhibit peaks separated by approximately 0.5 seconds. The analyst can use these peaks to determine the underlying mechanical characteristics of the vessel and potentially aid in classification and tracking.

You will find more details about Cepstrum and auto-correlation in [Appendix B](#).

3 Installing, Configuring and Application Interface

3.1 Installing and Configuring MACS

*** To Be Added ***

3.2 Overview

The application window is divided into a title bar and two main regions: a central analysis area with two panels A and B, and a right sidebar with the database and recordings management tools.

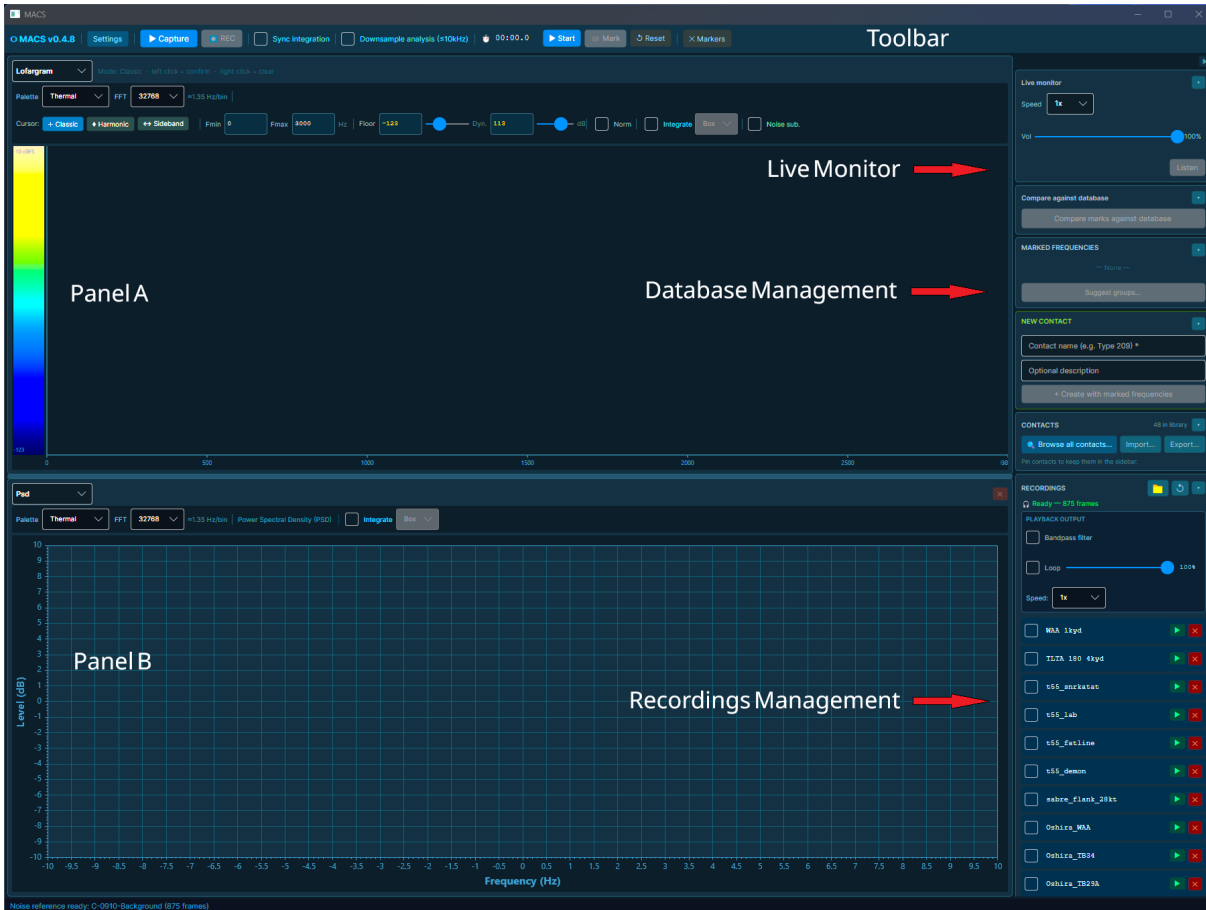


Figure 2: MACS Application Interface

3.3 The Title Bar




Figure 3: The Title Bar

The title bar (Figure 3) has options to control the audio source, to start audio capture, manipulate the behaviours of Panel A and B, limit sample analysis and to enable recording for off line analysis. The title bar contains the following global controls:

- **MACS Version:** Application version.
- **Settings:** View the settings panel.
- **Capture:** Starts live audio capture from the system (microphone / loopback).

- **REC:** Records the current capture to a WAV file in the recordings folder.
- **Sync Integration:** Synchronises settings between Panel A and B.
- **Downsample Analysis ($\leq 10\text{kHz}$):** Limits FFT / DEMON / Cepstrum / ACF to content $\leq 10\text{kHz}$.
- **Marks:** Toggles setting and deleting active frequency marker.

Hovering the mouse pointer over any of the controls will pop up an information box with more detail about it.

3.4 Main Panel - Central Analysis Area

The main panel (Figures 4 and 5 [Pages 11 and 12]) hosts two display panels A and B. Both panels display a user select-able visual representations of the sound analysis performed by the application. Each panel has its own toolbar strip immediately above it, containing

- Content dropdown
- Palette selector
- FFT size
- Integrate

In addition panel A has the following:

- Full cursor and display parameter row (Fmin / Fmax, Floor, Dynamic Range, Noise subtraction)
- Normalisation

Panel B can be collapsed using its hide button. This does not stop its digital signal processing (DSP) pipeline it only removes the display from view. Showing it again immediately restores the waterfall.

Each panel has a dropdown at the top-left selecting its content type:

- LOFARgram Frequency-time waterfall (acoustic spectrogram)
- DEMON Envelope modulation waterfall (shaft rate detection)
- Cepstrum Quefrency-domain (see Appendix B) view for periodic structure
- ACF Running autocorrelation function
- PSD Live Power Spectral Density display (FFT size, sample rate, resolution, etc.)

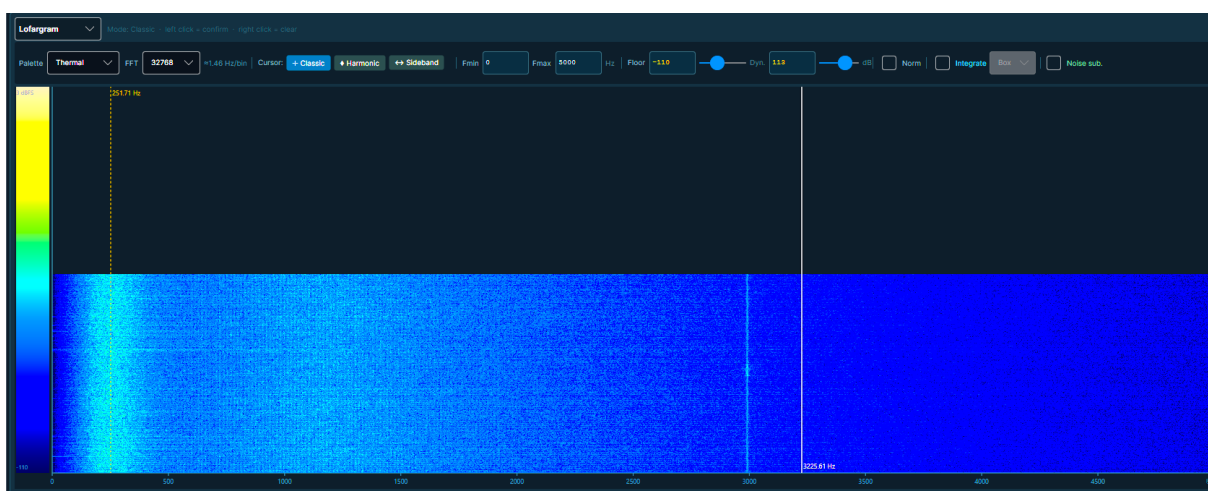


Figure 4: Sub-panel A showing a LOFARgram

Each display type has a toolbar with controls specific to its content type. These appear above the panel's display area.

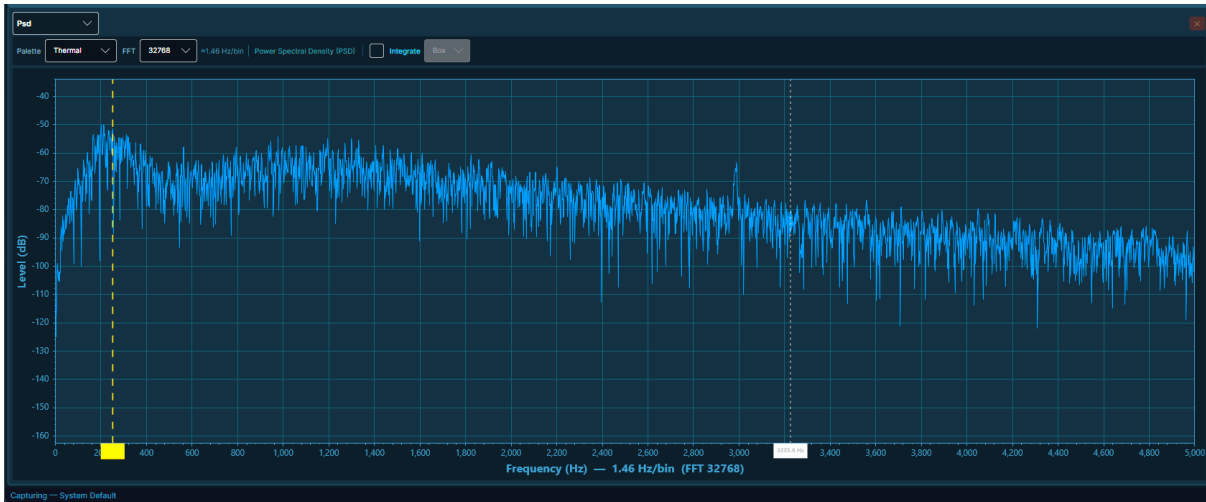


Figure 5: Sub-panel B showing the Psd display

3.4.1 LOFARgram / DEMON toolbar

LOFARgram:

- **Palette:** Colour palette for the waterfall display. The default is a perceptually uniform palette (Viridis) which is good for visualising low SNR signals.
- **FFT Size:** Number of FFT points (before zero-padding). Larger = better frequency resolution, slower time resolution. Powers of 2: 512 $\rightarrow$ 8192.
- **Cursor:** Shows the current cursor position in time and frequency. The cursor can be moved by clicking on the waterfall or by dragging the cursor marker.
- **Fmin / Fmax:** Display frequency limits (Hz). Crops the visible axis without affecting the pipeline.
- **Floor (dB):** The amplitude level that maps to the coldest colour. Signals below this are clipped to black.
- **Dyn (dB):** Dynamic range: the amplitude span from Floor to the hottest colour. Floor + Dyn = the level that maps to maximum brightness.
- **Floor slider:** Coarse adjustment for Floor.
- **Dyn slider:** Coarse adjustment for Dynamic Range.
- **Normalisation:** Adjusts the waterfall display to compensate for the frequency response of the capture device. See Appendix B for more information.
- **Integrate:** Integrates the waterfall over time to produce a power spectral density (PSD) plot. The PSD is shown in the right sidebar.
- **Noise Subtraction:** Subtracts a reference noise profile from the waterfall. See Appendix B for more information.

DEMON:

- **Palette:** As for LOFARgram
- **FFT Size:** As for LOFARgram
- **Cursor:** Classic and Harmonic cursor modes. Classic shows the cursor position in time and frequency. Harmonic mode shows the cursor position in time and shaft rate (Hz) and displays the harmonic series of the current cursor position.
- **Band:** The acoustic frequency band fed into the DEMON envelope detector. Narrowing this to a band with strong broadband noise (e.g. 500 - 5000 Hz) improves signal to noise ratio (SNR).
- **Fmax:** Display frequency limits (Hz). Crops the visible axis without affecting the pipeline.

- Floor (dB): The amplitude level that maps to the coldest colour. Signals below this are clipped to black.
- Dyn (dB): Dynamic range: the amplitude span from Floor to the hottest colour. Floor + Dyn = the level that maps to maximum brightness.
- Floor slider: Coarse adjustment for Floor.
- Dyn slider: Coarse adjustment for Dynamic Range.

3.4.2 Cepstrum / ACF toolbar

Same controls as above; Fmin / Fmax instead control the quefrency display range in ms.

3.5 Live Monitor

*** WIP ***

3.6 Settings Panel

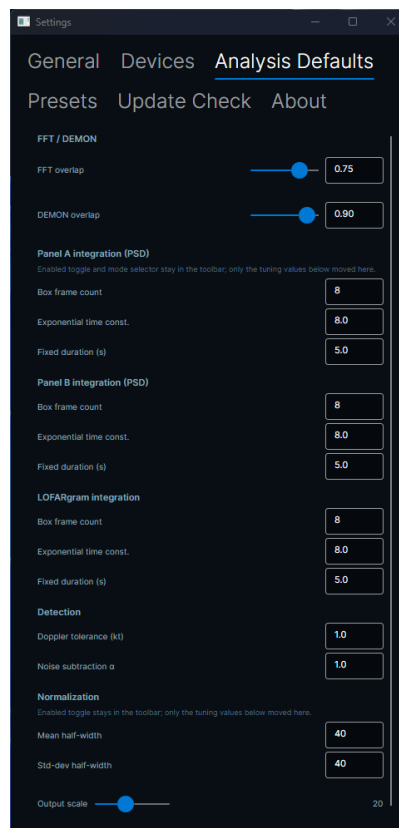


Figure 6: Analysis Defaults panel

Clicking the settings button in the title bar opens a panel with the following control subpages:

- **General** Allows setting the location of the user recordings folder, defaults to the user's Documents folder.
- **Devices** Sets the sound capture device, the live monitor output device and the recording playback device.
- **Analysis Defaults** Sets FFT / DEMON overlap, panels A/B overlap and integration features (see Figure 6).
- **Presets** Allows user to set up to 5 presets for the analysis parameters (FFT size, overlap, Fmin / Fmax, Floor, Dynamic range, DEMON parameters). Presets are saved to the settings file and restored on next launch.

- **Update Check** Checks for a new version of the application and prompts the user to download it if available.
- **About** View the application version and license information.

3.6.1 DEMON-specific additional controls

- **DEMON Fmin / Fmax** The acoustic frequency band fed into the DEMON envelope detector. Narrowing this to a band with strong broadband noise (e.g. 500 - 5000 Hz) improves signal to noise ratio (SNR).
- **Display Max:** Maximum frequency shown on the DEMON output axis (Hz). Typically 20 - 100 Hz. Sets the Nyquist (see Appendix B) target for the decimation stage.

3.7 Right sidebar - Contact Recording and Management

The right sidebar has two main functions. Capturing and managing contact's sound profiles and matching an unknown sound profile with previously captured ones. It is also used to set up a background sound file which can be used for noise subtraction (see Appendix B). Because the use of the contact database and the recording feature is an important part of MACS it has its own section (Section 4).

3.8 Settings Persistence

All parameters are saved automatically to:

`C:\Users\%user%\AppData\Roaming\MACS\settings.json`

This includes: FFT size, overlap, Floor, Dynamic range, Fmin / Fmax, normalisation parameters, DEMON parameters, noise reference path, filter settings, and recordings folder path.

Settings are restored on next launch. If you need to reset to defaults, delete `C:\Users\%user%\AppData\Roaming\MACS\settings.json` and restart the application.

3.9 The Cursor System

*** WIP ***

Select a cursor mode from the toolbar before clicking on the waterfall:

- **Single:** Places one frequency marker at the clicked frequency f .
- **Harmonic:** Places harmonic series line starting from the fundamental + N harmonics above it. Configurable N and line width.
- **Resonance:** Adds resonance lines on both sides of f using the specified spacing Δ and line count N. "Right only" shows only lines to the right of f (upper sideband).

4 Contact Database and User Recordings

4.1 Overview

The contact database stores known acoustic signatures allowing you to build a library of known contacts, and to compare current contacts with those in the database. The database is stored in a single file called **sonar.db** in the MACS application data folder. The database is created automatically when MACS is first run, and is empty until you add your own contacts. Further details about the fields and structure of the database are discussed in Appendix C. MACS also allows you to record contacts and store them in the database. The recordings are stored in a separate folder, which is set in the **Settings** panel.

This section provides a basic outline of the process and workflow for contact recording and matching. A more detailed process workflow is given in the Illustrated Examples section.

4.1.1 Installing the pre-populated database

If you wish you can install a pre-populated database of known contacts. At the time of writing this database contains all of the vessels included in the MNW Recognition Guide, excluding aircraft, and is intended to be a starting point for your own database. As such it does not contain the LOFARgram details. It is assumed that users would prefer to update the database with their own recordings. To install the database:

1. Download the [MNW Defaults](#) database file from the MACS website.
2. Copy the downloaded file to **C:\Users\%user%\AppData\Roaming\MACS**
3. Delete or rename the existing sonar.db file if it exists
4. Rename the downloaded file to sonar.db
5. Restart MACS

4.2 Contact Database

4.2.1 Terminology

- **Contact:** A hull with defined constants e.g. name, propulsion type, nationality etc.
- **Measurement:** An observation made with the tools, attached to a contact. A single contact can have multiple measurements.
- **Recording:** A sound file containing a contact's acoustic signature.

4.2.2 Database Interface

The database and recordings management panels are on the right side of the application window Figure 7 Page 17. The right side panels can be hidden by clicking the right pointing arrow and the sub-panels can be collapsed to save space. The database panel has the following sub-panels:

- **Compare against database:** Shows a list of all contacts in the database which match your marked frequencies.
- **Marked frequencies:**
- **New contact:** Allows you to add a new contact to the database.
- **Contacts:** Browse, import and export contacts.

The recordings panel shows a list of all recordings in the recordings folder, and allows you to add, rename and delete recordings.

To add a recording to the database first make sure that the in-game sound is being captured by MACS. Then click the **“REC”** button on the applications Top Tool Bar. You should capture

a recording of sufficient length to ensure that you have captured a full range of sounds. On playback the recording can be looped so that it appears continuous when you are performing an analysis. The panel allows an adjustment of playback speed which is very useful when you are trying to count regular sounds like propeller blades. It also allows you to apply a bandpass filter to the playback, which is useful for listening to specific frequency ranges.

- To rename a recording, double click the name and enter a new name.
- To delete a recording, click the red cross.

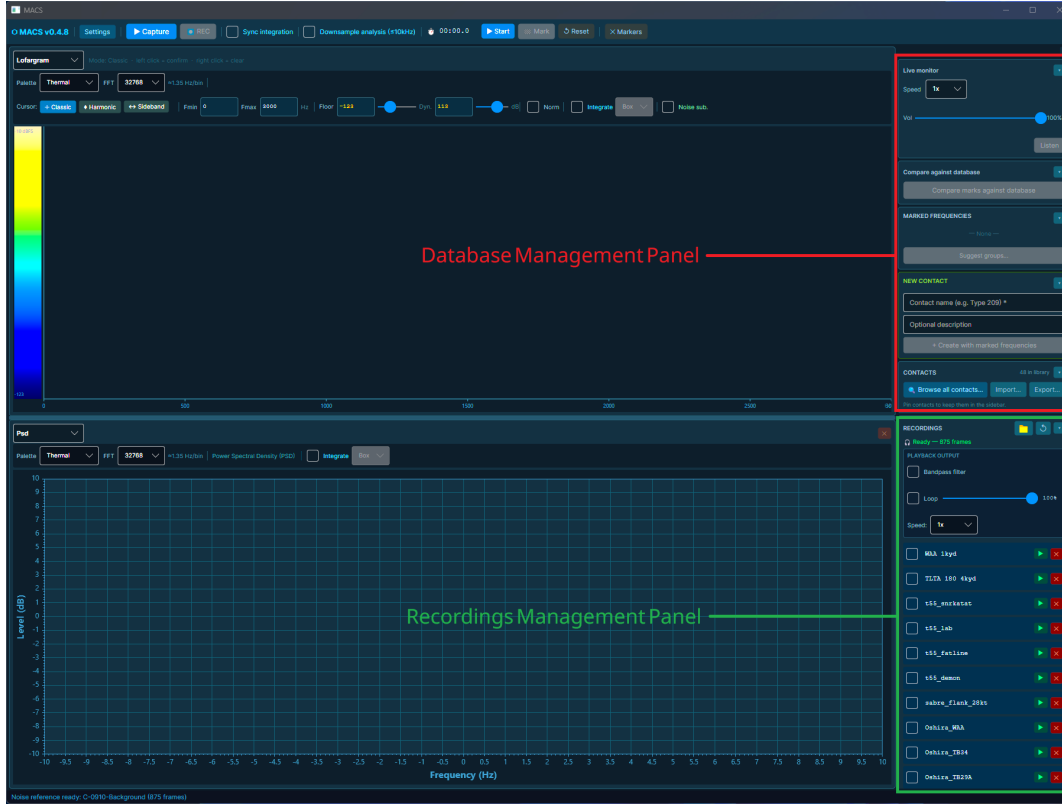


Figure 7: MACS Database and Recordings Panels

4.3 Contact Management

To browse the contacts in the database, click the **Browse all contacts** in the **Contacts** sub-panel Figure 8 Page 18. This opens the **Contacts Library** window. Here you can filter the list by entering text in the search box, by tag or by confidence level. The library window gives you access to the **Contact Information** panel Figure 9 Page 18 by clicking either the folder icon or the data icon next to the units name. Both open the same window but at different tabs. The Contact Information window allows you to:

- Enter general information about the contact name, class, nationality, classification confidence etc.
- Enter propulsion details, engine type etc.
- Ability to set ownship (sets overlay colour to red if checked).

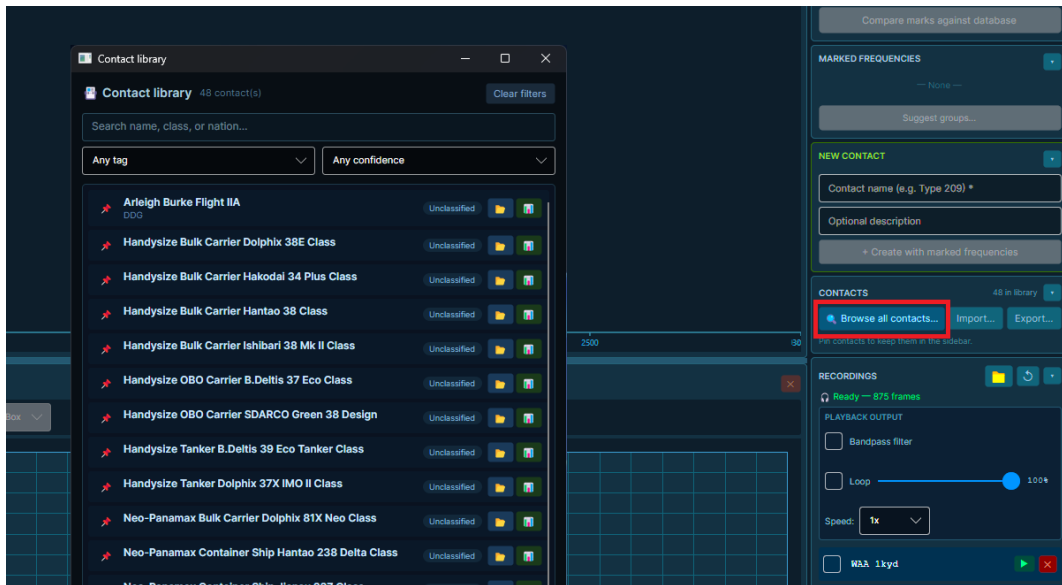


Figure 8: Contact Browsing

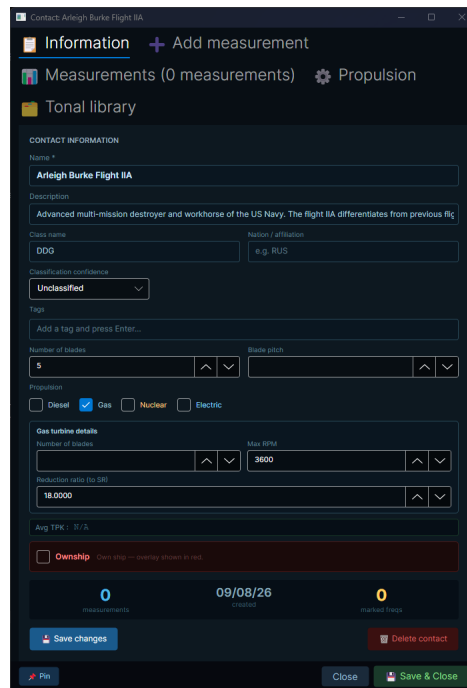


Figure 9: Measurements Panel

Note: Saving changes or new measurements requires the user to click the “**Save Changes**” button on the left of the panel below the “**Ownership**” select box **before** clicking “**Save and Close**”. Just clicking save and close closes the panel without saving the changes.

4.4 Creating a New Contact

*** WIP ***

To add a new contact at least one frequency must be marked on the LOFARgram (Figure 10 Page 19). Prominent lines are obvious choices as are the shaft, blade and crankshaft rates. If possible identify the electrical mains and generator set tonals (50 hz or 60hz). These do not

slide with speed changes in the same way that some other measures do.



Figure 10: Contacts marked on the LOFARgram

Before clicking the “+ **Create with marked frequencies**” button fill in the “**Contact name**” and “**Optional description**” fields. On creating the new contact the Measurements Panel (Figure 9 page 18) opens where you have the opportunity to add additional measures and refine existing ones. From here you can also capture images of panels A and B for future comparison.

Contact record fields: Information

- Name: Contact identifier (vessel name or designator).
- Description.
- Class name and nation / affiliation.
- Classification confidence, user perception.
- Tag, add a tag to aid future identification, user setting
- Blade count: Number of propeller blades.
- Blade pitch: Pitch of propeller blades.
- Propulsion type, each checkbox opens a sub-panel allowing further detail entry
- Ownship when selected identifies this contact as ownship

Contact record fields: Add measurement

- Advanced editor opens the Advanced Tonal Editor panel.
- Estimated speed (knots) user enters their estimations of target speed (optional)
- Estimated Distance (m) users distance estimation (optional)
- Shaft Rate (SR): Propeller shaft rotation rate in rev/s (Hz).
- Crankshaft Rate (CSR): Engine crankshaft rate in rev/s.
- Reduction factor - auto-computed CSR/SR . The gear reduction between engine and shaft.
- TPK: Turns Per Knot - auto-computed (see below). Indicates how many shaft revolutions per knot of speed.
- Frequency overlays: Named sets of frequency markers from the LOFARgram.

TPK (Turns Per Knot) is computed as:

$$TPK = \frac{SR \times 60}{Speed}$$

This gives shaft turns per knot of vessel speed, which is a vessel-class characteristic independent of operating condition. Average TPK is computed across all measurements for a contact and shown in the contact list for quick comparison. Refinements to this calculation which include such factors as slippage are discussed in Appendix C.

The “**Measurements (n measurements)**”, “**Propulsion**” and “**Tonal library**” give access to visual representations of the contacts measurements.

To complete the process scroll to the bottom of the measurements panel and click the “**+ Save this measurement**” button before saving and closing the panel.

To add a measurement to an existing contact, navigate to the measurements panel (page 18) and select the “**+ Add measurement**” tab. Enter the details and then click the “**+ Save this measurement**” button before saving and closing.

4.4.1 Advanced Tonal Editor panel and Grouping

*** WIP ***

4.4.2 Overlays

*** WIP May Not Be Needed ***

Overlays let you annotate the LOFARgram with frequency markers that are saved to the contact database.

Overlay controls

- **New overlay:** Creates a new named overlay (associated with a contact).
- **Colour picker:** Sets the display colour for the selected overlay.
- **Error band:** Adds $\pm$ frequency uncertainty bars around each marker.
- **Line width:** Controls marker line thickness in pixels.
- **Cursor mode colouring:** Colours each line by the cursor mode that created it (Single /Harmonic /Resonance each get a distinct colour), overriding the overlay colour.

Each frequency point stores its Hz value and the cursor mode used to capture it. This means the database records not just where the line is, but how it was identified: as a single tonal, a harmonic fundamental, or a resonance line.

4.5 Contact Matching

*** WIP ***

The central purpose of the database is to enable the user to classify and, potentially identify, an unknown contact. It stands to reason that in order to do this the user must have added contacts and measures to the database in order for the matching system to work.

The basic workflow is:

1. For your unknown contact mark significant tonals, for instance, but not exclusively: SR, BR, CSR and electrical mains.
2. Click the “**Compare marks against database**” in the compare against database sub-panel.

3. In the “**Comparison results**” panel enter any additional information you may have in the “**Target known details**” fields (Figure 11 Green Boxes).
4. If no matches reach the partial or pass criteria adjust the tolerance setting to allow for variation in accuracy in placing markers. Too broad a tolerance will cause more misidentifications which will have to be discounted by observation (Figure 11 Red Box)
5. In an ideal situation you will end up with a single match (Figure 12) although it is more likely that you will have more than one and several partials.

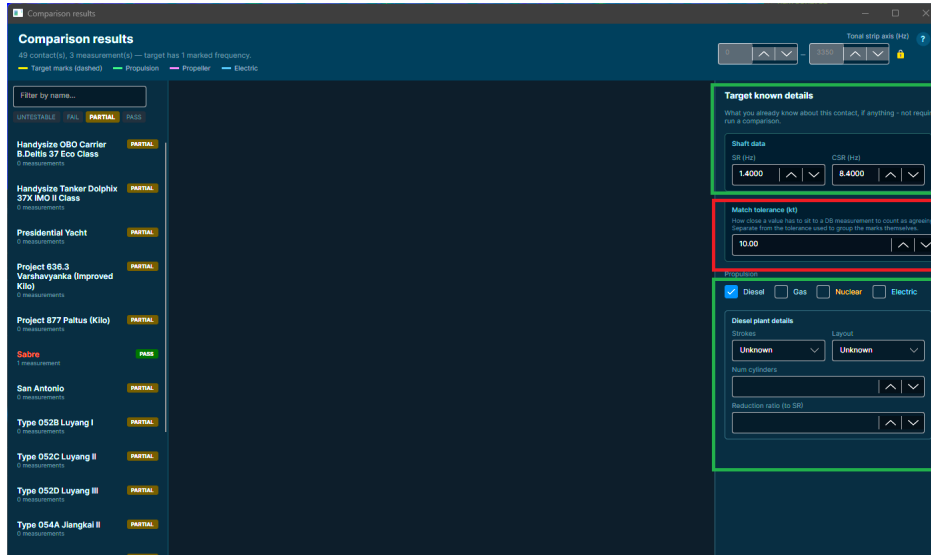


Figure 11: Partial Contacts

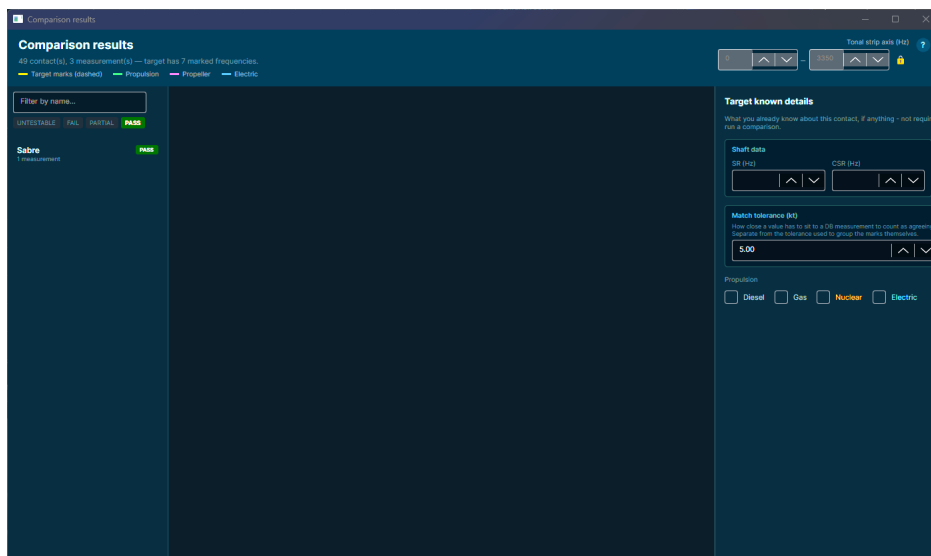


Figure 12: A Single Match

The contact database has a lot of hidden content and features, this section is a quick overview of the functionality offered. A detailed walk through of creating, managing and matching contacts is given in the Illustrated Examples section.

5 SONAR Classification 101 and MACS Workflow

5.1 What you will learn in this section

1. How to understand and use LOFAR and DEMON.
2. How calculate propeller shaft and blade rates (SR BR) to provide signature information and an estimate of the vessels speed.
3. Understand what the different diesel engine configurations are including calculating Individual Cylinder Firing Rate (ICFR), Crankshaft Rate (CSR), Engine Firing Rate (EFR) and determining the number of cylinders.
4. How to recognise harmonics, sidebands and reduction ratios and understand how a contact can be classified from these signatures.
5. How to recognise additional information and distinguish if these signatures are engine or shaft related, or are fixed features such as electrical mains.

Before attempting the examples in Section 8, it is important that you read and have a reasonable grasp of Section 6.

This section introduces some of the basic mathematics behind SONAR analysis all of which is simple arithmetic and can be done with a calculator. The deep mathematics behind Fourier Transforms and cepstrum analysis is more complicated but you do not need knowledge at that level to enjoy MNW or use MACS. For those interested in the deeper detail you will find it in Appendix B.

Although it is tempting to dive in to the powerful tools available in MACS you should, at first, take a step back as a useful amount of data can be collected by simply listening. After an initial assessment you will be working primarily with the MACS LOFAR and DEMON screens. If these are new names for you, read Section 2 **SONAR and Sound Analysis an Introduction**. You may also use the CEPSTRUM and Auto-Correlation (ACF) features explained below and in Appendix B.

A LOFARgram is a visual representation of the LOFAR analysis, it is generally not something an inexperienced user can interpret just by looking at it. Sonar analysts are not simply spotting lines, they are using their knowledge of how machinery generates frequencies, how they relate mathematically to one another and to specific machinery. When you are trying to understand what you are hearing think of yourself as a detective. Observe patterns, form hypotheses, test them mathematically and look for evidence that supports or disproves them.

As with any good hypothesis the best is usually the one that explains the greatest number of outcomes with the fewest assumptions (Occam).

The LOFARgram is your primary tool. The display is a waterfall of the sound spectrum, with brightness indicating signal strength. In MACS, time flows from bottom to top and frequency runs left to right on the horizontal (x) axis; often called the frequency domain.

You are looking for: **Tonals (narrowband lines)** These appear as bright **vertical lines**, a continuous stripe at a fixed frequency persisting as time scrolls past. Every significant machine on a vessel produces a characteristic set of tonals: main engine, generators, pumps, turbines. Although, they may not always be visible.

The DEMON display is your primary analysis tool for **propeller configuration and SR**. When a marine vessel travels through water, the rotating propeller blades create pockets of low pressure forming tiny vapour bubbles that rapidly collapse; a phenomenon known as cavitation. This collapse produces a continuous, broadband hissing noise. As the propeller rotates it causes

an amplitude modulation at lower frequencies corresponding directly to the physical movement of the mechanical propulsion system. Essentially, the high-frequency cavitation acts as a "carrier wave" that is amplitude modulated (AM) by the low-frequency mechanics of the ship.

The resulting output, often displayed as a DEMONgram, reveals distinct spectra that correspond to the vessel's unique physical traits. Sonar operators analyze these lines to identify important features of the target. By revealing these mechanical design characteristics, the specific class, or even the individual identity, of a target submarine or surface ship can be determined with a good degree of confidence.

The transition from "finding lines" to "recognising families, harmonics, and sidebands" is usually the point where a trainee starts thinking like an analyst rather than an operator.

The ultimate aim of a SONAR analysis is to create a "fingerprint" of the vessel under consideration. It is not necessarily to categorically identify an individual ship, although that can happen. Instead the information derived is stored in a database. This data can then be used to match future encounters and narrow down the type and classification of vessels. Over time more detail can be added refining the classification. The key diagnostic information usually sought includes:

- Engine types (diesel, turbine, electric drive)
- Ship propulsion fundamentals (BR, SR)
- Number of propeller shafts
- Propeller blade counts
- Engine characteristics (CSR, Number of cylinders, EFR and ICFR)
- Gear Mesh Frequency (GMF), Gearbox arrangements and reduction ratios
- Electrical mains frequencies

First though we need to understand a couple of important terms.

5.2 What are Harmonics?

Harmonics occur because real machinery does not produce perfectly smooth vibrations. A perfect rotating shaft would generate a pure tone at one frequency (sinusoidal) but real machinery isn't perfect it produces pulses, impacts, and uneven forces (Figure 6). Diesel engines don't apply torque smoothly, each combustion event is a pulse. A 15 Hz engine-related frequency might produce harmonics at 15, 30, 45, 60 and 75 Hz. Harmonics are always a fixed distance apart and always an integer multiplication of the fundamental, in this case 15 Hz multiplied by 2, 3, 4 etc. SONAR analysts love harmonics because whilst a single line on a LOFARgram is weak evidence, a harmonic family is powerful evidence. Sometimes the fundamental line may not be visible but can be inferred by back-counting the harmonics. MACS provides tools to do this automatically and to confirm the periodicity of suspected harmonics. The sources of the variation could be one or more of:

- Uneven forces
- Multiple cylinders
- Gear teeth impacts
- Bearing imperfections
- Structural resonances
- Blade loading variations

Why is this important: because in our diesel engine the harmonics point back to the fundamental value (15 Hz). Even if the fundamental is weak, the harmonics may reveal it.

Sinusoidal vs Non-Sinusoidal Sound: Why Harmonics Appear

A pure sine wave produces one frequency line. A distorted repeating waveform produces the fundamental plus harmonics.

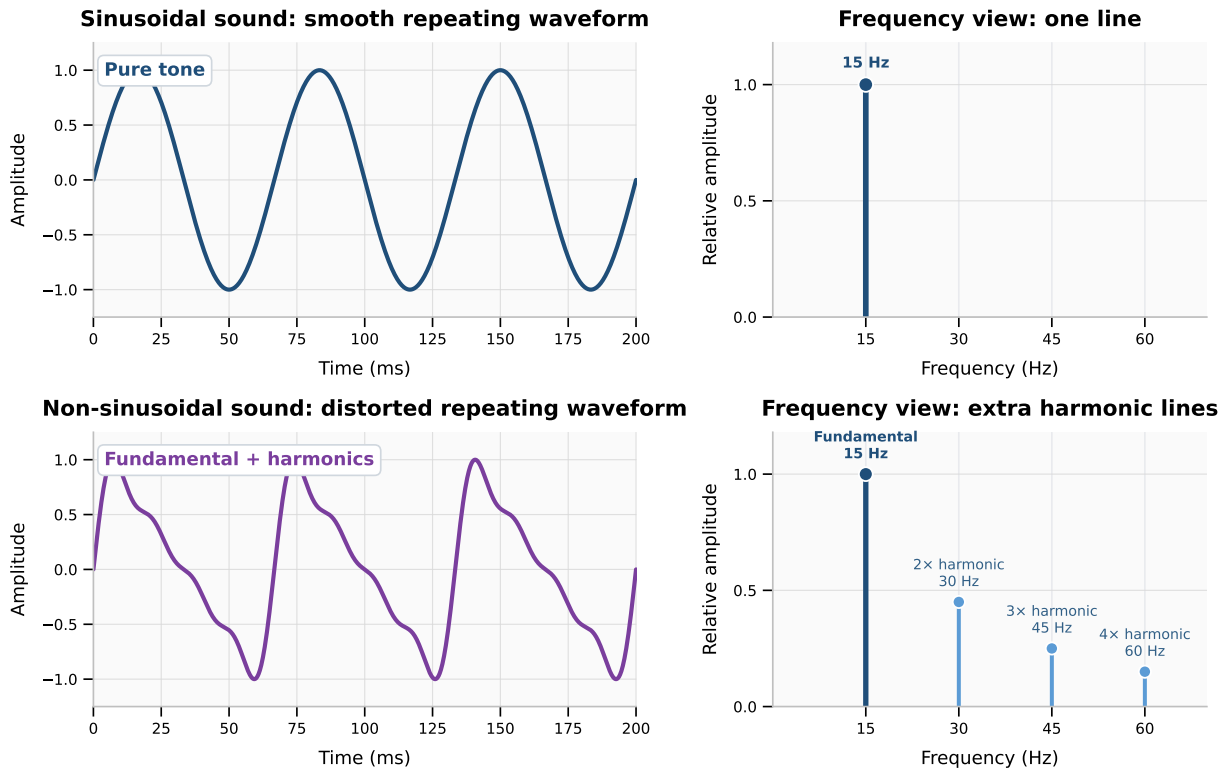


Figure 13: Harmonics caused by sinusoidal waveform vs non-sinusoidal waveform

5.3 What are Sidebands?

In radio, a carrier frequency is modified by amplitude (AM) or frequency (FM), the carrier doesn't disappear, instead, additional frequencies appear on either side of it. The same occurs with machinery. An AM sideband, caused by a damaged bearing clicking once per revolution, creates a periodic rise and fall in the amplitude of the high-frequency machinery noise. AM produces exactly one pair of symmetrical sidebands ($f_c + f_m$ and $f_c - f_m$). In FM modulation the frequency is shifted up and down. A rotating propeller shaft might vibrate causing the carrier frequency to speed up or slow down. FM produces an infinite series of sidebands (Figure 7) spaced at intervals of f_m ($f_c \pm f_m, f_c \pm 2f_m, f_c \pm 3f_m \dots$). Suppose a gearbox produces a strong tone at 150 Hz and a propeller shaft rotates at 2.5 Hz. If the shaft causes the gearbox load to increase and decrease once per revolution, the 150 Hz gear tone is being modulated at 2.5 Hz. Instead of 150 Hz you get 145, 147.5, 150, 152.5 and 155 Hz.

In reality, targets rarely exhibit pure AM or pure FM. A propeller blade passing close to a ship's hull undergoes dynamic pressure changes simultaneously altering the amplitude of the acoustic wave (AM) and slightly shifting the phase/frequency (FM). Sonar analysts use specialized tools like DEMON processing to isolate these combined sidebands and identify the specific machinery signatures of a vessel.

Sideband Recognition Rule: when you spot a strong tonal:

1. Find the centre frequency.
2. Look equally above and below it. Is it symmetrical?
3. Measure the spacing.
4. Check whether the same spacing exists elsewhere.
5. Look to see if the lines move together as the target vessel's speed changes
6. Hypothesise: "Could this spacing be a shaft rate, blade rate, or engine-related rate?"

Smooth Spectrum Example: 15 Hz Carrier with Three 2.5 Hz Sideband Pairs

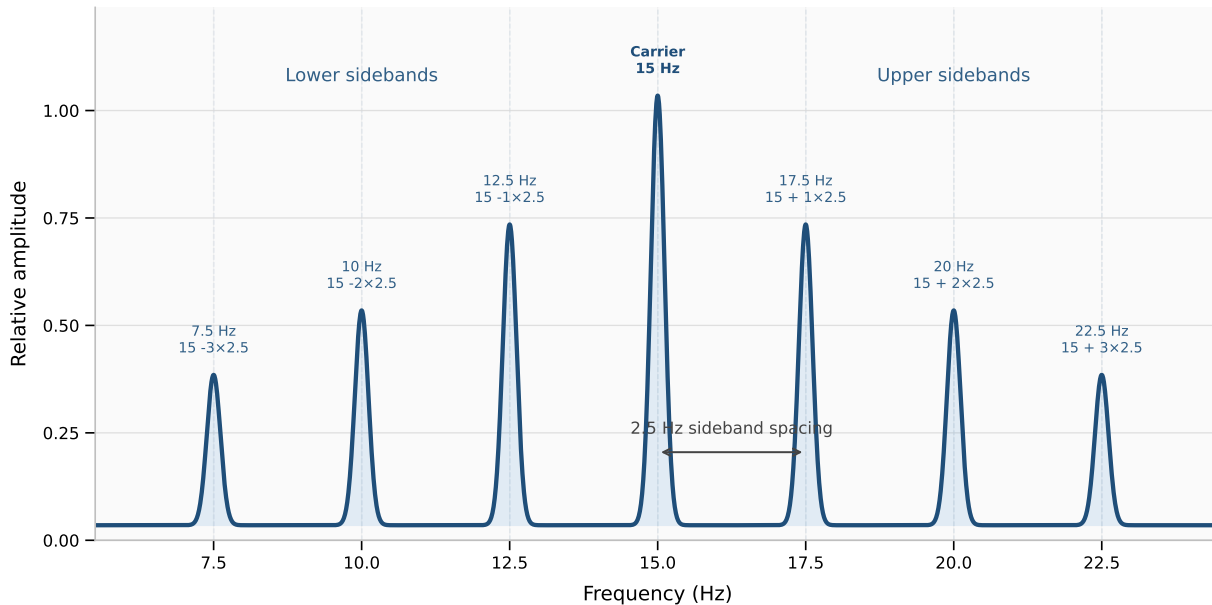


Figure 14: Sidebands caused by modulation

The sideband spacing is often the real clue frequently telling you more about the machinery than the large central line itself.

5.4 LOFARgrams - what to look for

- **Fundamental engine frequency** and its harmonics.
- **Blade rate** = $SR \times BC$. Often visible in the 5 - 100 Hz range for surface ships.
- **Generator harmonics** typically multiples of 50 or 60 Hz.
- **Broadband noise level** A vessel moving fast will show a raised broadband floor (cavitation); the entire display is brighter. A slow or quiet vessel may show almost no broadband increase, with only discrete tonals against a dark background.
- **Frequency drift** A tonal that slowly shifts upward or downward in frequency is Doppler-shifted, meaning the contact's radial velocity (range rate) is changing. It is accelerating, decelerating, or turning. A line that stays at a fixed frequency means the radial velocity is constant, but this says nothing about absolute range; the contact could be closing, opening, or crossing at a steady speed.

Practical tips:

- Zoom Fmin / Fmax around a suspected harmonic family to check spacing.
- Enable normalisation to make weak tonals visible against a noisy floor.
- Use noise reference subtraction if own-ship noise is masking the target.
- Use harmonic cursor mode to check whether a candidate fundamental has a regular harmonic family above it.

5.5 DEMONgrams - what to look for

- **Shaft rate (SR) for propeller-driven vessels:** The most prominent peak in the DEMON output is typically the shaft fundamental. A shaft rotating at 5 Hz will show a strong peak at 5 Hz in the DEMON waterfall.
- **Blade count (BC) for propeller driven vessels:** The number of blades on the propeller(s).

- **Blade rate (BR)** can be calculated with $SR \times BC$ e.g. if the shaft is at 5 Hz and the vessel has 5 blades, the blade rate is 25 Hz, look for a peak there.
- **Engine Firing Rate (EFR):** Diesel or diesel-electric engines produce strong modulation at the crankshaft rate (CSR) and its harmonics. See sub-section 6.10 for method.
- **Harmonic series:** Both shaft and engine signals produce harmonic combs at fundamental, 2x, 3x. Look for evenly spaced peaks using the harmonic cursor mode to confirm the family.

Practical tips:

- Narrow DEMON Fmin / Fmax to a band of strong broadband noise (e.g. 1 - 5 kHz) for best signal to noise ratio (SNR).
- Reduce Display Max if the peaks are all below 20 Hz zooming in the axis for easier reading.
- Increase FFT size for better frequency resolution at the cost of time resolution.
- Once you identify a candidate SR peak, use the database to record it and compute TPK.

5.6 Cepstrum - confirming periodicity

The cepstrum is most useful when you suspect a harmonic family but tonals are weak or overlapping.

Reading the cepstrum:

- A peak at quefrency τ ms means the spectrum has periodic structure with period $1/\tau$ Hz.
- Example: a peak at $\tau = 10$ ms $\rightarrow$ fundamental spacing of 100 Hz $\rightarrow$ look for harmonics at 100, 200, 300Hz in the LOFARgram.
- Example: a peak at $\tau = 200$ ms $\rightarrow$ fundamental at 5 Hz $\rightarrow$ likely a shaft rate.

Explanation

1. 1 millisecond (ms) = 0.001 seconds (sec)
2. 10 ms = 0.01 sec
3. $1/0.01 = 100$ Hz
4. 200 ms = 0.2 sec
5. $1/0.2 = 5$ Hz

Practical tips:

- Zoom the quefrency axis (Fmin / Fmax in ms) around expected ranges: 10 - 50 ms for high-frequency machinery, 200 - 1000 ms for slow shaft rates.
- The cepstrum is insensitive to the absolute level of the signal so normalisation usually makes it clearer.

Cepstrum vs. DEMON: DEMON directly shows low-frequency modulation of the acoustic envelope which is ideal for shaft rates. Cepstrum shows periodicity in the spectrum itself, ideal for detecting harmonic families in the tonal structure. They are complementary. Use DEMON for shaft rate, cepstrum to confirm and characterise the tonal comb.

5.7 Running ACF — validating repetition

The ACF is a cross-check on periodicity found in the cepstrum or DEMON.

Reading the ACF: The ACF peak at lag 0 is always the signal power ignore it. The next prominent peak at lag τ ms is the dominant period of the signal. ACF peaks are stronger for pure tones; the cepstrum compresses dynamics and is more sensitive to weak harmonics.

When to use ACF:

- To confirm a period found in the cepstrum.
- When the signal has one dominant tonal (ACF is more decisive in that case).
- As a sanity check on DEMON shaft rate readings.

5.8 Engine Types

The following tonal values for each engine type are indicative not exact they do not represent any particular vessel. They are provided as a guide as to where to look not give precise values.

An experienced sonar tech may identify the plant type from the sound they are hearing, but more often, propulsion type is characterised by an overall pattern of tonals, harmonics, sidebands, and how they change with speed. Ship and submarine engines fall into four main categories.

- Internal Combustion (diesel, oil, gas etc)
- Combustion steam turbine
- Nuclear reactor steam turbine
- Electrical

Diesel engines produce energy through discrete combustion events; we would expect to see in the LOFARgram

- Strong engine firing frequencies
- Rich harmonic families
- Numerous sidebands
- Multiple tonal groups, a “busy” spectrum

Steam turbine propulsion looks very different. Instead of the explosive pulses there is continuous smooth torque. There are far fewer low order harmonics, stronger rotational tonals with a cleaner spectrum. There will be less pronounced firing families. The major clue is no firing pulse and often an audible “turbine whine.”

Nuclear steam turbine are essentially similar to steam turbine but there may be additional gear and pump tonals associated with reactor cooling.

Electric propulsion is often the most distinctive. Electric motors produce very smooth torque eliminating many mechanical signatures associated with combustion engines. You would expect:

- Strong electrical frequencies
- Electrical harmonics
- Motor-related tonals
- Relatively weak firing families
- Potentially very clean low-frequency region

On a LOFARgram from a vessel with an electric propulsion motor, you should see both electrical mains frequencies and motor-related frequencies, often with harmonics and sidebands. Electrical motors are very different to combustion / turbine motors so have different associated measures. An explanation of how to determine key measures for electrical motors is given below.

5.9 Electrical Mains

In addition to motor related tonals any vessel that has an electrical supply will have tonals related to that. Depending on the country of origin the mains frequency will be either 50 Hz or 60 Hz with their fundamentals at their respective frequency. There may be harmonics at 100, 150, 200 Hz ... (50 Hz system) or 120, 180, 240 Hz ... (60 Hz system). These appear because generators, transformers, converters, and motors produce magnetic and mechanical forces at the

supply frequency and its harmonics. These frequencies are important for classification because they are fixed, they do not shift due to speed or course changes.

For naval ships and submarines, there is no perfect one-to-one mapping between a country's shore electrical grid frequency and its shipboard electrical frequency. However, 60 Hz is the dominant standard in modern Western naval fleets, particularly among NATO navies. NATO's naval electrical standard (ANEP-100) is based on 60 Hz shipboard power systems.

Countries whose major naval vessels and submarines generally use 60 Hz shipboard power include:

- United States
- Canada
- United Kingdom
- Australia
- New Zealand
- Japan
- South Korea
- Many NATO member navies (for interoperability reasons)

Countries whose naval vessels are more commonly associated with 50 Hz shipboard systems include:

- Russia
- China
- India (many indigenous and Russian-derived designs)
- Several continental European navies, especially on older vessels

A useful distinction is that while civilian ships can be either 50 Hz or 60 Hz, 60 Hz has become very common for naval vessels because it reduces the size and weight of motors, transformers, and generators, an important advantage in warships and submarines. Modern submarines often have extensive power-electronics conversion systems, so the onboard distribution frequency may differ from what individual equipment ultimately uses. However the above information is all useful information for classifying vessels.

5.10 Ship Propeller and Shaft Rates

Reminder: Numbers used do not reflect a real example.

Most vessels are driven through water by a propeller attached to a shaft turned by an engine. The shaft rate (SR) is the number of revolutions of the propeller shaft. It is usually expressed in revolutions per minute (RPM) or as Hertz, rotations per second (Hz). The shaft rate is an important tonal to identify because it can be used to calculate other measures such as blade rate, reduction ratio, and speed. Because the propeller is at the end of the drive train, the shaft rate is often the most stable and least affected by other machinery. It is usually the lowest frequency tonal on a LOFARgram because it is the slowest rotating component.

The relationship between the engine speed and propeller shaft speed is determined by the gear reduction or the number of engine revolutions per one propeller revolution; usually expressed as a ratio such as 4:1 or 5:1. The reduction ratio is often a key parameter in identifying the type of machinery and the vessel class.

A SR of 2.5 Hz means the propeller shaft is turning 2.5 times per second or $2.5 * 60 = 150$ times per minute (RPM). It may have harmonics at 5, 7.5, 10, 12.5 Hz etc. As an analyst you will look for evenly spaced lines often called a "comb" because they look like the teeth of a comb. The spacing between the lines is equal to the shaft rate.

Be aware that the description of the SR comb is for an ideal case. Often the comb is difficult to spot both in MNW and with MACS. This is when you would use the MACS' harmonic ruler to test different ideas.

Now we have to make some educated guesses to walk forward. We initially hypothesise that the vessel has a 4 bladed propeller. The blade rate (BR) is the number of times a propeller blade passes a fixed point in one second. It is calculated by multiplying the shaft rate by the number of blades. In this case, $2.5 \text{ Hz} * 4 \text{ blades} = 10 \text{ Hz}$. Now look for a tonal at 10 Hz and its harmonics at 20, 30, 40 Hz etc. If you see these lines, it supports your hypothesis of a blade count (BC) of 4. The BR will most often fall on a SR harmonic because of the mathematical relationship so you may see reinforced (brighter) lines in the harmonic structure. This is not always the case as modulation can shift lines.

Indeed we do have harmonics at those positions so our confidence in our hypothesis is boosted. If we had not seen the 10 Hz line, we would have to consider other possibilities such as a 3-bladed propeller (7.5 Hz) or a 5-bladed propeller (12.5 Hz). The $BR / SR = BC$ is 4, more evidence for our hypothesis. Counting the shaft fundamental and the lines between it and its harmonic line is another way of getting the BC although this is often difficult to do.

As with all hypotheses, confirmation is a trap, you must instead try to disprove your hypothesis. The logic behind this is that you can prove something many times, but you only need to disprove it once.

You can also look for sidebands around the shaft rate and blade rate. These sidebands are often caused by the interaction of the propeller with the water and the hull. They can provide additional information about the vessel's speed and propeller condition.

So, we have established with a high probability the following:

- Shaft Rate (SR) = $2.5 \text{ Hz} = 150 \text{ RPM}$
- Blade Count (BC) = 4
- Blade Rate (BR) = $10 \text{ Hz} = 600$

5.11 Key Engine Measurements the Engine Firing Rate (EFR), Cylinder Firing Rate (CFR) and Gear Mesh Frequency (GMF)

Reminder: Numbers used do not reflect a real example.

Once possible SR, BR and BC have been identified other frequencies can be explained with their help. You observe another strong line at 12.5 Hz. You can divide 12.5 by 2.5 and get 5. This may indicate something that occurs five times per shaft revolution. You also notice that the 12.5 has a family of harmonic lines at 25, 37.5, 50 Hz etc. At this stage, do not assume anything. Simply note the relationship.

Further exploration of the LOFARgram reveals a prominent line at 225 Hz. Close examination reveals that the line has 4 sidebands spaced at 2.5 Hz. This is a strong suggestion that the line is being modulated by the shaft rotation. You can divide 225 by 2.5 and get 90. This may indicate something that occurs 90 times per shaft revolution. You also notice that the 225 has a family of harmonic lines at 450, 675, 900 Hz etc. You hypothesise that the 90 is the number of teeth on a gear in the gearbox and that 225 Hz is the gear mesh frequency (GMF). Again exercise caution, at this stage we are simply making educated guesses to prove or disprove later.

You now revisit the 12.5 line. You hypothesise that this is the crank shaft fundamental (CSR). $12.5 * 60 = 750 \text{ RPM}$. This is a reasonable speed for a diesel engine. You can also look for sidebands around the 12.5 line. These sidebands are often caused by the interaction of the

engine with the gearbox and the propeller. They can provide additional information about the engine's condition and performance. If this is the case then the propeller shaft is turning 5 times slower than the engine ($750 / 150 = 5$) which gives us a 5:1 reduction rate. We have hypothesised that the propeller shaft gear has 90 teeth so this gives us an estimate of the pinion tooth count of $90 / 5 = 18$. Gearing detail is often vessel class specific and can be used to narrow down the possibilities of what the contact could be.

As a sanity check you can confirm your numbers by multiplying the pinion gear number (18) and the CSR (12.5) to get 225 Hz and the propeller shaft rate SR (2.5) and the shaft gear tooth count (90) to get 225 Hz.

Important Note: It is extremely unlikely that a vessel of any significant size would have a single stage reduction gear arrangement. This is a simple example to discuss the process not be a realistic example. More realistic examples can be found in the Illustrated Examples section.

So now we have added to our information with a good degree of confidence:

- Crank Shaft Rate (CSR) $12.5 \text{ Hz} = (12.5 * 60 = 750 \text{ RPM})$
- The Gear Mesh Frequency (GMF) $= 225 \text{ Hz}$
- The number of teeth on the engine crank shaft (pinion gear) $= 18$
- The number of teeth on the propeller shaft (bull gear) $= 90$
- The reduction ratio $= 5:1$

Can we deduce any more information from what we know?

We can look for the number of cylinders in the engine. We observe another distinct line at 31.25 Hz and it has a family of harmonics at 62.5, 93.75, 125 Hz etc. We suspect that this is the engine firing rate so we relate it to the CSR by $31.25 / 12.5$ giving us 2.5 Hz. So we conclude on this basis that something is happening every 2.5 crank shaft revolutions. We hypothesise that the 31.25 Hz line is the engine firing rate (EFR) and this is a 4 stroke engine. The EFR is the number of times the engine fires in one second. If our reasoning is correct what can we deduce about the number of cylinders in the engine? We can use the following method to calculate the number of cylinders:

Here's our reasoning:

Step 1: We convert the observed line to the engine firing events per minute:

$$31.25 \times 60 = 1875 \text{ firings per minute}$$

Step 2: We relate the firing frequency to engine speed ($N = 750 \text{ rpm}$)

Suppose 4 Stroke, so each cylinder will fire every 2 revolutions.

$$\text{Firing Rate} = \frac{N}{2} \times C$$

C is the number of cylinders

So

$$1875 = \frac{750}{2} \times C$$

Simplify and rearrange

$$C = \frac{1875}{375} = 5$$

A 5-cylinder 4 stroke engine would produce a firing frequency of exactly

$$\frac{750}{2} \times 5 = 1875 \text{ events per minute}$$

Or, because 60 seconds / minute

$$\frac{1875}{60} = 31.25$$

This seems fairly concrete but remember falsifying hypotheses is a powerful tool. Suppose we had assumed it was a 2 stroke engine. 2 stroke engines are very common in shipping. A 2 stroke engine cylinder fires for every rotation of the crank.

So

$$\begin{aligned} \text{Firing Rate} &= \frac{N}{1} \times C \\ 1875 &= 750 \times C \\ C &= 2.5 \end{aligned}$$

Since you can't have 2.5 cylinders we reject our alternative hypothesis.

This is a strong indication that the engine has 5 cylinders and is a 4-stroke engine. So the following information can be added to our vessel profile.

- Number of cylinders = 5
- Engine cycles 4 or 2 stroke = 4 stroke
- Engine Firing Rate (EFR) = 31.25 Hz
- Individual Cylinder Firing Rate (ICFR) = $31.25 / 5 = 6.25$ Hz

All of the collected and inferred information can then be entered into a database. MACS allows you to do this and so build your own classification tool. Most importantly it allows you to work iteratively, slowly adding information and refining data over time. This is an extremely powerful feature of MACS allowing you to build on the recognition guide found in MNW.

5.12 Electrical motors and their characteristics

On a LOFARgram from a vessel with an electric propulsion motor, you would typically expect to see both electrical mains frequencies and motor-related frequencies, often with harmonics and sidebands. The mains frequency depends on the vessel's electrical generation system but is typically 50 Hz or 60 Hz depending on nationality. There may be harmonics at integer multiples of the fundamental. These appear because generators, transformers, converters, and motors produce magnetic and mechanical forces at the supply frequency and its harmonics. Mains tonals are fixed and do not slide up and down the frequency range due to changes in speed.

Frequencies related to an electrical motor's rotational speed are calculated in the same way as for traditional engines. For instance calculating the rotation frequency if the motor is at 900 RPM

$$f_r = \frac{900}{60} = 15 \text{ Hz}$$

Electrical motors work by utilising the interaction of electrical and magnetic forces. A large copper wire wrapped stator rotates freely between magnets creating a series of north and south magnetic poles depending on its design. The number of poles determines how fast that field rotates for a given electrical frequency. For an induction motor:

$$N_s = \frac{120f}{P}$$

where:

- N_s = synchronous speed (RPM)
- f = electrical frequency (Hz)
- P = number of poles

The 120 comes from converting between electrical frequency (Hz) and mechanical speed (RPM) in an AC motor. The following shows how it is obtained.

1. Frequency f is in cycles per second.
2. One electrical cycle advances the rotating magnetic field by one pole pair.
3. A motor with P poles has $\frac{P}{2}$ pole pairs.
4. Therefore, mechanical revolutions per second are:

$$RPS = \frac{f}{P/2} = \frac{2f}{P}$$

Convert revolutions per second to revolutions per minute:

$$N_s = \frac{2f}{P} \times 60$$

$$N_s = \frac{120f}{P}$$

The 120 is simply: $120 = 2 \times 60$ where 2 comes from the pole-pair relationship and 60 converts seconds to minutes.

Example

For a 4-pole motor supplied from 60 Hz:

$$N_s = \frac{120 \times 60}{4} = 1800 \text{ RPM}$$

Mechanical rotational frequency is:

$$f_r = \frac{1800}{60} = 30 \text{ Hz}$$

So on a LOFARgram you might see:

- Electrical mains line at 60 Hz
- Motor rotational line around 30 Hz
- Harmonics at 60, 90, 120, 150 Hz, etc.
- Slot-passing and other modulation products around those frequencies, depending on motor construction.

5.13 Summary

LOFAR analysis is not looking at pre-prepared LOFARgrams and spotting lines. It is about looking at a live LOFARgram and asking yourself questions about what you are seeing. The process is iterative and requires you to constantly check your hypotheses against the evidence. Even challenging electrical motors can yield up characteristic information to the observant sonar operator. To summarise the basic steps are:

1. Observe lines.
2. Recognize relationships.
3. Propose a mechanical explanation.
4. Check the mathematics.
5. Reject or strengthen the hypothesis.

but the key is diligence, persistence and the ability to hypothesise without falling into the trap of confirmation bias. Objectivity is paramount. The skill is not in spotting a line at 2.5 Hz.

The skill is noticing that **2.5 Hz explains dozens of other lines**, sidebands, and harmonics simultaneously. When that happens, your confidence that you've found the correct values becomes very high.

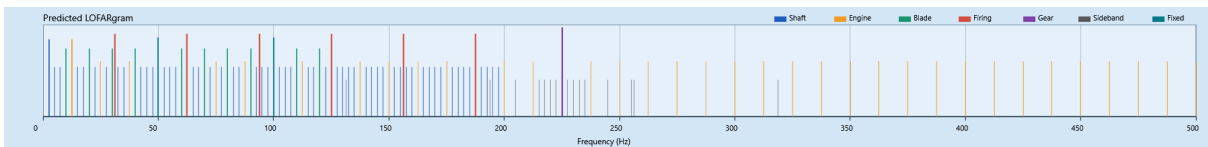


Figure 15: All our data as a LOFARgram

5.14 Recommended Workflow Using MACS

Below is a recommended sequence for classifying an unknown contact. It applies equally to live capture and recorded file playback. Simply start capture or press [play] on a recording before beginning.

5.14.1 Step 1 Clean up the signal

1. If own-ship or ambient noise is masking the target, designate a clean background recording as the noise reference and load it (Appendix B - 11.3).
2. Enable normalisation if tonals are weak against the noise floor. Adjust Scale until tonals are visible without the display saturating (Appendix B - 11.1).
3. If using a recorded file, apply the bandpass filter to isolate the frequency band of interest (Section 3.3).

5.14.2 Step 2 Identify tonals

4. On the LOFARgram (Panel A), note prominent vertical tonal lines.
5. Use the harmonic cursor to test candidate fundamentals, place it on a suspected fundamental. Check whether the harmonic lines fall on other visible tonals. Do the same with sidebands.
6. Zoom Fmin / Fmax to focus on dense tonal clusters.
7. Mark confirmed tonals by selecting cursor mode and left-clicking on each line; right-click to clear.

5.14.3 Step 3 DEMON analysis

8. Open DEMON in Panel B.
9. Set DEMON Fmin / Fmax to a band with strong broadband noise (e.g. 1-5 kHz).
10. Identify the shaft rate peak (and / or diesel firing rate). Use the harmonic cursor to confirm the series.
11. Note the shaft rate (SR) in rev/s.

5.14.4 Step 4 Cepstrum / ACF confirmation

12. Switch Panel B to Cepstrum. Look for a quefrequency peak confirming tonal spacing or shaft periodicity.
13. Cross-check with ACF if needed.

5.14.5 Step 5 Record in database

14. In the right sidebar, enter a contact name in the **New Contact** field and click + Create with marked frequencies.
15. Double-click the new contact to open the detail window.
16. Enter propulsion type, blade count, shaft rate, speed, and any other known parameters. The app will auto-compute reduction factor and TPK.
17. Add a note with the relevant recording filename for future reference (recording-to-contact linking is not yet available directly in the UI).
18. **Save & Close**

6 Illustrated Examples

6.1 A surface contact has been detected can you narrow down its class or type?

6.1.1 MNW In Game Tools

A surface contact has been identified on broadband. Trackers are assigned for the LAB, WAA and the TB34 “Fatline” towed array. Listening to the sound from the LAB you hear:

1. A distinct fast “swooshing” sound which you think maybe cavitation noise
2. A faster underlying “tchouc tchouc tchouc” sound which you think is propellor blade noise
3. You do not hear sounds characteristic of a diesel engine
4. You do hear a prominent high pitch whine which sounds like a turbine or a high speed gear mesh

Your initial conclusion is that this is a modern turbine powered ship cruising at a medium speed (15 - 25 kts) and that it is probably a warship. You base your provisional conclusions on the following tables from your personal notebook and the knowledge that most civilian ships are not turbine driven.

Civilian

Speed Category	Knots	kn/h	Typical Examples
Slow	Under 12 kn	Under 22 km/h	Large tankers, heavily loaded bulk carriers
Medium	12 - 20 kn	22 - 37 km/h	Most cargo ships, ferries, many merchant vessels
Fast	20 - 30 kn	37 - 56 km/h	Cruise ships, fast ferries, some naval vessels
Very fast	30+ kn	56+ km/h	Destroyers, patrol boats, high-speed ferries

Warship

Speed Category	Knots	kn/h	Typical Examples
Slow	Under 15 kn	Under 28 km/h	Economic cruising, patrol, or fuel-saving transit
Medium	15 - 25 kn	28 - 46 km/h	Normal operating speed for most missions
Fast	25 - 35 kn	46 - 65 km/h	High-speed transit, tactical maneuvers
Very fast	35+ kn	65+ km/h	Fast attack craft, some hydrofoils, exceptional warships

Using the sound output feature of the sonar suite you find it is possible to count the more prominent “swooshing” sound. You do this over 60 seconds several times then take an average. By doing this you establish that there are an average of 130 beats per minute which is about 2.1 Hz (130 / 60). Unfortunately you can’t do the same for the higher frequency blade rate as there is no facility to slow the sound down in game at this time.

Top Tip: Counting sounds like this can be made much easier by using a beat tap counter which will automatically give you the count / beats per minute. Some will even listen to the sound and give you a count. There are several available free for iPad / iPhone and Android

In MNW you switch to narrowband and attach the TB34. You start at a wide window of frequencies (0 - 3600 Hz) which produces the following display (Figure 9).

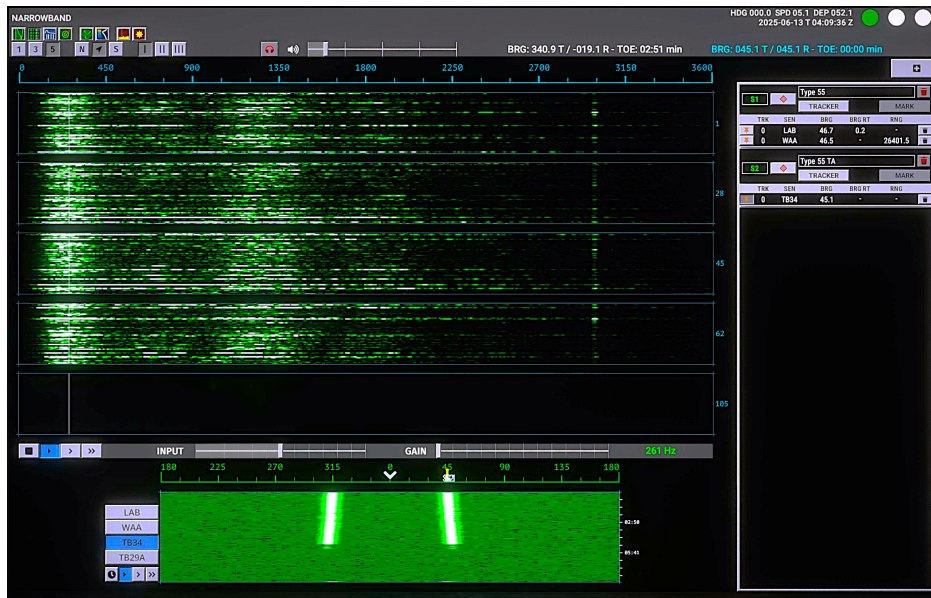


Figure 16: Narrowband 0 - 3600 Hz

You immediately recognise a fairly strong tonal at 3 kHz (3000 Hz) which you think is the high pitched whine which you attribute to the turbine or possibly the reduction gear. You also spot a strong diffuse band centred around 261 HZ (150 - 400 Hz) and another less prominent band between 1050 and 1350 Hz.

At this scale it is not possible to see any other tonals so you select a drilled in view (Figure 10). At this frequency range it is possible to see another faint tonal around 33 Hz. This is quite difficult to spot and requires high input and gain settings which washes out most of the screen so details within the broader noise bands are lost. At this stage you do not know what is causing the 33 Hz tonal so you carefully note it before moving on to a DEMON analysis in an effort to gain some insight into the ship's speed.

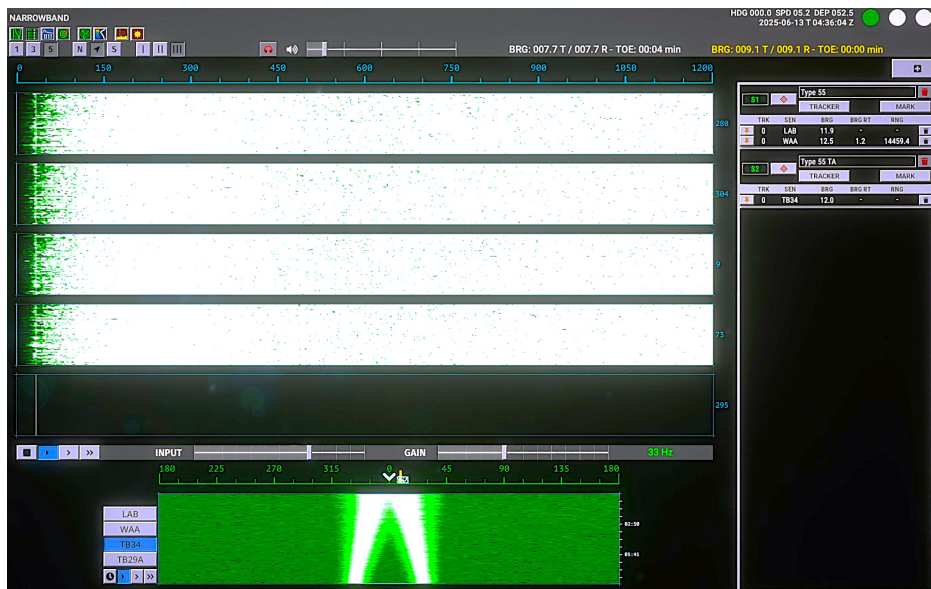


Figure 17: Narrowband 0 - 1200 Hz - a faint 33Hz tonal

DEMON can provide information about the shaft rate (SR) and the blade count (BC). Sometimes it is possible to identify the number of propeller shafts (Figure 11 Page 32). Our system

shows a strong tonal at 2.2 Hz (Note in the picture the cursor is offset) which is hypothesised to be the shaft fundamental.

It is difficult to get the exact frequency because the tonal is quite smeared as if there were two lines on top of each other slightly offset. If that were the case it would suggest this vessel has at least two shafts. The rotation frequency of 2.2 Hz gives a shaft rotation speed of 132 RPM (2.2×60).

The DEMON waterfall is not providing any clear indication of the number of propeller blades, however the smooth line plot above does show some slight indication of blades. Including the shaft it is just possible to suggest 5 humps and then a series of what could be harmonics further up. This could be indicative of a five bladed propeller which, if this is true would give a blade rate of 11 Hz (5×2.2) or 660 RPM (11×60). However, the data is speculative and definitely requires a more detailed analysis.

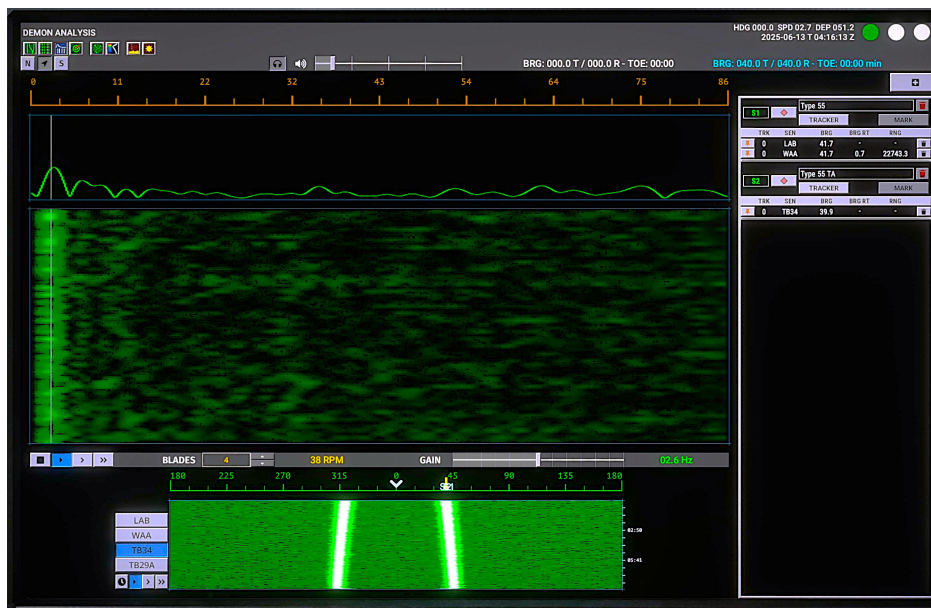


Figure 18: DEMON Display

6.1.2 MACS Tools

In order to improve your analysis and refine your hypothesis you decide to utilise the advanced tools available in MACS.

Your first step is to capture a recording of the sound of the contact. How to do this depends on your PC sound configuration but most often this will be a simple loopback arrangement (See section xxx). Capture a recording by clicking the record button on the top toolbar. The recording should be long enough to capture any periodic variation in the sound, 2 minutes should be plenty although longer recordings may be necessary if you are monitoring changes of speed or direction. As soon as you stop the recording it will appear in the recordings panel on the lower right of the application. It is highly recommended that you change the generated name to one that is more user friendly. Do this by double clicking the recording and renaming it. Once you have your recording you can analyse the sound in a more structured way without having to deal with real time issues.

As for the in game tools your first review should be using your ears and your experience. We can tell from the recording that:

1. No diesel firing.

2. Distinct slower “swooshing” sound.
3. Underlying faster “blade” sound.
4. High pitched whine at 3 kHz possibly turbine or gear mesh.

You first focus on the 3 kHz tonal which you believe is responsible for the high pitched whine which you suggest is either the turbine or the reduction gear mesh frequency. By setting the bandpass frequency to 0 - 2500Hz the sound is eliminated from the playback strengthening the hypothesis.

Next assess the distinctive audible regular “swooshing” sound and the faster chopping sound. Using a beat counter the louder sound is found to be 134 BPM. You propose that the sound is made by cavitation and can be used to estimate the shaft RPM. 134 RPM is 2.2 Hz. When we come to look at the LOFARgram we will look out for the shaft fundamental at that value.

Counting the Blade Rate is more difficult because it is too fast. Using MACS we have the option to slow the playback, a feature MNW does not have at this point. Slowing the playback speed to 0.25 it is possible to count each blade passing. For this exercise several counts over 30 seconds were conducted and then averaged.

Blade RPM playback at 0.25 speed over 30s averaged: $82 \times 2 \times 4$ ($\times 2$ because 30s $\rightarrow$ 1 minute and $\times 4$ because 0.25 speed) = 656 RPM or 11 Hz

Blades: $654 \div 134 = 4.9$ (5 Blades) It is always likely that the numbers will not be exact as the sound path from source to receiver is never as straight forward as theory would suggest. Propellers can be out of balance and modulate shaft and blade sounds. Gears and bearings wear unevenly. Ships can change speed and direction introducing doppler effects which can distort or enhance frequencies. Bear in mind these “confounders”, you should expect measures never to be exact. You will use your experience to judge whether 4.9 should be 5 when 4.69 is too many deviations to be reliable.

Top Tip: Take notes continuously they will become a powerful tool to help you be more effective and efficient at narrowing down target classification

It should be clear by now that the process is one of hypothesis forming, testing and falsification. Ultimately you are never going to be 100% confident in your analysis it is always going to be on the balance of probabilities. Becoming comfortable with working with uncertainty is key to being effective.

LOFAR

Our next step is to look at MACS’ equivalent of the MNW’s narrowband and DEMON plus some additional tools that have yet to appear in game.

One of the many features of MACS is the ability to tune input and output parameters. This is, at the time of writing, quite limited in game. To get the best results you will need to tweak these parameters so you must understand what they do. Details are discussed in Section X, Y, Z and Appendix XX. Unfortunately it is not possible to give hard and fast guidance as everyone’s screens will vary in capability, refresh rates or resolution. For Figure 12 on Page 33 the following settings were used.

1. Fmin = 0 Fmax = 5000
2. Floor = -90 Dyn = 55
3. Norm = Off
4. FFT Overlap = Off
5. FFT = 131072

Note: This level of detail is very slow to plot however this is realistic. It is possible to speed things up by reducing the FFT or increasing the overlap setting at the cost of reducing detail.

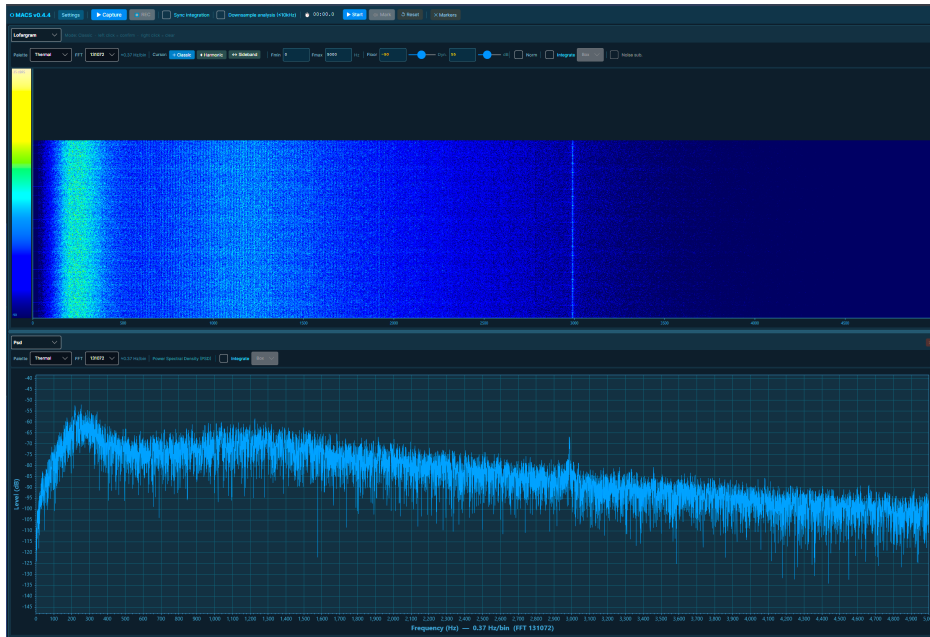


Figure 19: LOFARgram Fmin = 0 Hz - Fmax = 5000 Hz

The LOFARgram whilst much more detailed should be familiar. It shows and confirms our findings from the in game tools.

1. Initial MNW narrowband screen shows a broad spectrum of noise between 150 Hz and 400 Hz.
2. Another fainter band between 1050 Hz and 1350 Hz
3. A high pitched whine / whistle at 3 kHz
4. Narrow band does not have the distinctive lines associated with diesel firing

We repeat the plot but this time we reduce the Fmax parameter to 500 Hz because it would be useful to see if there are any fainter tonals that are crammed against the left hand side of the chart. Using the following settings we get Figure 13 Page 34.

1. Fmin = 0 Fmax = 500
2. Floor = -90 Dyn 46
3. Norm = Off
4. FFT Overlap = Off
5. FFT = 131072
6. LOFARgram integration = Exp Box frame count = 16 Exponential time constant = 8 Fixed duration = 5

This reveals a hidden tonal which also confirms our earlier findings the faint tonal seen in MNW is confirmed and narrowed down to 33.27 Hz

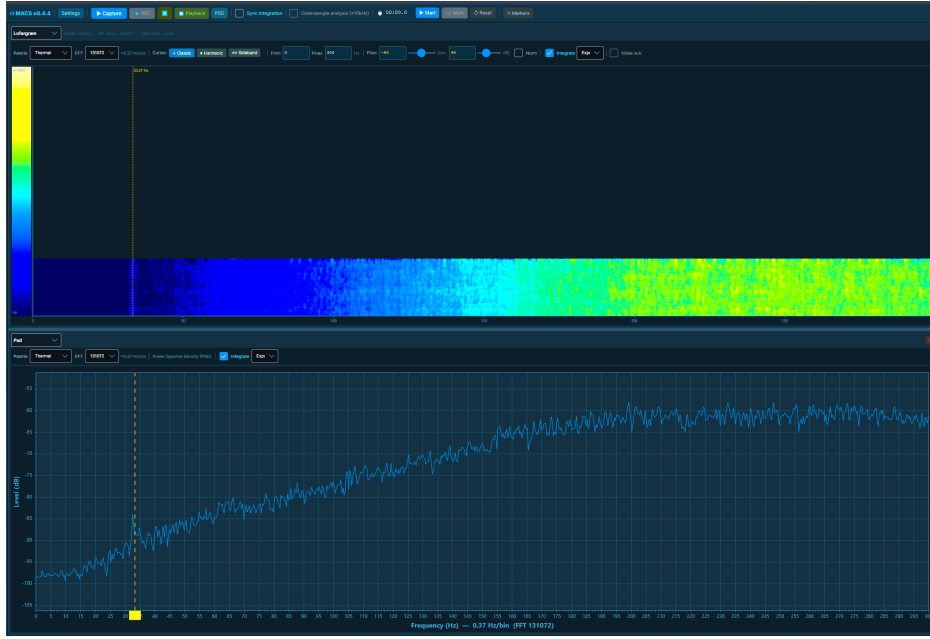


Figure 20: LOFARgram $F_{min} = 0 \text{ Hz}$ - $F_{max} = 500 \text{ Hz}$

The DEMON clearly shows a lone dual-sync tonal at 2.21 Hz Figure 14 Page 35, which translates to 132.6 RPM closely matching audio SRPM. The line has a dual structure with a helical appearance which could possibly indicate a dual shaft. There is some indication of sidebands around the 2.21 Hz tonal which may indicate some modulation either by propellers or some other source.

There are also indications of higher tonals which fall very closely on the harmonics of the blade rate at 11 Hz. The third harmonic would be about 33 Hz and would be reinforced by the shaft harmonic. This is pure speculation but is a possible explanation for the faint line at 33 Hz.

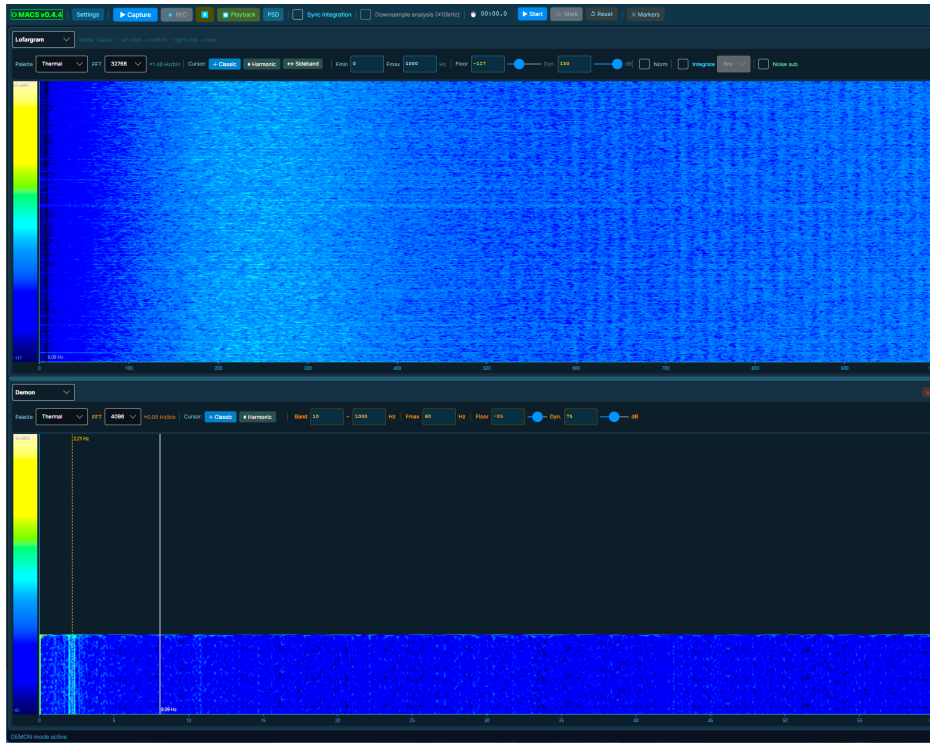


Figure 21: DEMON

Classification

We have enough information now to posit a classification for this vessel, which we will classify as potential warship, confirmed by spectral analysis.

1. 5 blades with a high pitch turbine
2. No diesel audio
3. Broad noise bands
4. Lack of sound usually associated with diesel engines

Four ships in the recognition database match the noise band and 33 Hz signature

1. Fuyu AOR: 22.3 kts at 134 RPM
2. Ticonderoga CG: 24.2 kts at 134 RPM
3. Renhai Type 055 DDG: 18.9 kts at 134 RPM
4. Arleigh Burke DDG: 20 kts at 134 RPM

Speed estimates are calculated from $SR \times (MaxSpeed \div MaxRPM)$ (found from the recognition manual)

All three exhibit a very faint tonals around 30 - 34 Hz and a moderate noise band in the correct position.

For the Arleigh Burke the reported noise band and 30 Hz tonal are supposed to look much stronger. This questions this attribution suggesting medium confidence The Fuyu would be close to max speed (22 kts) at this SR which makes this a less likely candidate. Likewise a Ticonderoga would also be 10 kts below its maximum which would tend to suggest the diffuse noise band would be broader and more prominent.

On the balance of probabilities the best fit based on the information we have is that our target is a Type 055 Renhai.

6.2 Try it yourself

To be added

6.3 Using the User Database

To be added

7 References

Page intentionally left blank

8 Appendix A - A Casual Guide To Sound, SONAR and FFT

8.1 Sound a short Introduction

Why are ears different from eyes?

When we learn about sound we are often taught that sound travels in waves. Later on we learn that light travels in waves too (and as particles, but that's another story). You may have been shown an oscilloscope with sound represented as a beautiful sine wave sometimes accompanied by a pure note. That's all well and good, but this is not how sound should be understood. The problem with viewing light and sound as comparable waves is that they are not comparable at all. Sound is physical touching. Imagine a line of billiard balls lined up on the table. If you bump the very first ball, that ball hits the next one, which hits the next one, down the line. The balls themselves do not travel across the table. Only the push or the energy travels. So the important takeaway here is that sound needs a medium, something to travel through (like air, water, or solid things). Light, on the other hand, is a form of electromagnetism (energy made of electrical and magnetic fields moving together).

Electromagnetic waves can travel without a medium which is why you can see the sun and the stars even though there is a vacuum between us and them (top tip: don't look at the sun without good protection or sound will likely be the only waves you will experience afterwards). Light is like energy rays travelling through space it doesn't need air, water, or anything else. So, what else is different between sound and light? The biggest difference is the speed at which they travel. Light is fast, so fast that nothing in the universe will ever be faster. Light travels at 186,282 miles per second or 299,792.458 kilometres per second. More usefully that's about 1.8×10^{12} furlongs per fortnight. Sound on the other hand travels much more slowly. In air at 20°C (68°F) sound travels at 762 miles per hour or 1,235 kilometres per hour. Interestingly from our perspective, is sound's behaviour in water where it travels much faster, 3,310 mph or 5,330 kph. Sound can also do weird things in water depending on temperature, salinity and pressure.

This is useful for submariners because they can exploit these phenomena to hide a submarine's sound from other submarines, surface ships and sonobuoys.

So to answer our starting problem about ears and eyes. Both have evolved to pick up waves. In the case of ears it's mechanical movement of the eardrum and ear bones that capture the push from sound which our brain then interprets as sound. Our eyes, on the other hand, evolved to detect electromagnetic waves which our brain converts into images. Two waves two supremely evolved organs.



8.2 SONAR

Why do I need SONAR, I'm not a bat?

We've all watched movies with submariners nervously listening to an approaching destroyer just waiting for that first sonar PING! It's so ingrained that it has literally become a movie meme, but what actually is SONAR?

SONAR stands for Sound Navigation And Ranging. You may think that the technology is

modern, but the first documented person to use it was Leonardo da Vinci in 1490; he dipped a tube underwater so he could listen to approaching ships.

SONAR comes in two types active and passive. Submarines need SONAR because when it's underwater the crew can not see what's around them. Sound becomes the submarines eyes just like a bat navigating its way in a pitch black cave.

Active SONAR uses systems to emit sound, the ping we all know. The sound travels and bounces off anything nearby. The system listens to these echoes and then by knowing the speed of sound in water produces a range to the target. By generating echoes from different angles SONAR can also locate the target. Submarines tend not to use active sonar for the simple reason that the noise also gives away their position and location. Not a very good idea in a combat situation. There are some circumstances when a submarine may use active sonar. In MNW these are the fathometer and the high frequency SONAR. In game these are undetectable by the enemy but in real life this may be different.



Passive sonar is where the fun starts. With this a submarine crew can listen to what's going on around them. By listening to other subs and ships the crew can determine speed, bearing and often the identity of the target, without giving away your own location. In MNW you have many of the tools that real submariners have. Using these tools you can make educated guesses as to what you are listening to, where it is and how fast it is.

Putting all of this together, means you can stealthily avoid an enemy or plan an attack.

MACS allows you to do a more refined version of the sound analysis which may help you in game. You can run MACS alongside MNW, and it will take the sound generated by the in game SONAR system and give you a detailed LOFAR and DEMON analysis which you can use to complement the in game experience. Running MACS with the game is explained in Appendix X.

8.3 What the FFT?

Oh no! It's Math Class

When you or the SONAR system hears (detects) a natural sound that sound is not just a single waveform. Think of a chord played on a piano, it sounds like one thing but is actually several notes played together. The Fast Fourier Transform (FFT) is a clever way to break a complicated signal into the frequencies that make it up. FFT takes the combined sound in the chord and tells you:

- Which notes (frequencies) are present
- How strong each note is

It's like having a machine that listens to a chord and says:

"I hear a C note, an E note, and a G note."

Underlying FFT is a mathematical process called the Fourier Transform which involves many laborious calculations. FFT is an algorithm that computes the same result much



more efficiently. It does this by identifying redundancy in the actual steps taken and eliminating them without reducing the accuracy of the result. This means that the process can be completed in a manageable amount of time.

In the SONAR notes it is explained that the system can identify and estimate the speed of the object of interest. It does this by using the distinctive frequencies of the sound produced by FFT to compare against a database of known ships or submarines. This database has been built up over years by the various navies of the world and some of it is included in MNW. DEMON another tool available can take the output from the FFT and clean it up so that speed of the target can be estimated, This is also modelled in MNW. The types of sounds that can be detected include:

- Water flow around the hull
- Engine (steam, turbine, diesel)
- Propeller noises
- Mechanical noises made by fans, generators etc.
- Human noises
- Many others

So sadly, just like taxes, maths actually underpins everything. The good thing is you don't need to be an expert to use MACS successfully in game, but if you do want to know more Appendix B has more detail.

9 Appendix B - Methodology

9.1 Normalisation

One of the principal challenges in SONAR processing is that the underwater acoustic environment is highly dynamic. Background noise levels vary due to sea state, vessel traffic, marine life, weather conditions, and the motion of the sonar platform itself. As a result, detection algorithms must distinguish meaningful targets from continually changing acoustic backgrounds. To reduce the impact of this MACS uses a statistical technique called normalization. MACS's normalisation is enabled with a per-panel toggle. The algorithm used is a sliding-window z-score of the FFT magnitude output before colour mapping.

9.1.1 What it does

In SONAR applications, the input signal is often transformed into a spectrogram or a set of frequency-band energy measurements. Sliding-window z-scores can then be computed for each frequency bin or beam direction. If a particular frequency band suddenly exhibits energy that is significantly higher than its recent average, the resulting z-score will be large. Such behaviour may indicate the presence of a target, such as a submarine, underwater vehicle, or marine mammal. A sliding-window z-score measures how unusual a current observation is relative to recent observations rather than relative to the entire dataset. This adaptive normalisation continuously updates as new data arrive, allowing the detection process to remain sensitive even when the overall acoustic environment changes.

For a measured acoustic feature in each frequency bin the normaliser computes:

$$z_t = \frac{x_t - \mu_t}{\sigma_t} \times \text{NormOutputScale}$$

Where:

- μ_t is the mean computed over a recent time window (width controlled by Mean Width).
- σ_t is the standard deviation computed over across a potentially different sliding window (width controlled by StdDev Width).
- NormOutputScale is a multiplier (range 1-50, default 20) that rescales z-scores into a range compatible with the Floor / Dynamic Range colour scale.

Both windows are computed efficiently using $O(n)$ prefix sums – no per-frame re-computation cost.

9.1.2 Effect

Consider a passive SONAR system monitoring vessel noise. The background acoustic level may gradually increase as ocean conditions change during the day. A conventional threshold based on absolute signal level might generate numerous false alarms or miss weak targets. In contrast, a sliding-window z-score compares the current observation with the local acoustic environment. A ship propeller tone that rises above the recent background will produce a large positive z-score, making it easier to detect even when absolute noise levels are elevated. This adaptive normalisation continuously updates as new data arrive, allowing the detection process to remain sensitive even when the overall acoustic environment changes.

1. **Suppresses slowly varying broadband noise:** bins that are consistently loud have a high mean, which gets subtracted. What remains is deviations from the local average.
2. **Enhances tonal lines:** a persistent narrowband tone will have a value consistently above its local mean, showing up as a bright persistent line even against a noisy background.

3. **The z-score can go negative** (a bin quieter than average). The Floor control clips these to the background colour.

9.1.3 Parameters

1. **Normalisation toggle:** Enables / disables. Takes effect on the next frame without clearing the waterfall.
2. **Mean Width:** Sliding window half-width (in frames) used to compute the local mean. Wider $\rightarrow$ slower adaptation to changing noise level.
3. **StdDev Width:** Sliding window half-width for standard deviation. Can differ from Mean Width. If $\sigma > 2 \times \mu$, the noise floor is highly non-stationary.
4. **Output Scale:** Multiplies all z-scores before colour mapping. Increase if the waterfall is too dim, decrease if it saturates. Start around 20 and adjust by eye.

9.1.4 When to use

Enable normalisation when the background noise level is high and tonal lines are hard to see. It is particularly effective when the ship is manoeuvring and the broadband level is changing – the local mean tracks the change and removes it. Disable it for clean recordings where tonals are already visible, or when you need absolute amplitude information for noise reference subtraction.

An additional advantage is the ability to support adaptive thresholding. Rather than applying a fixed detection threshold, a system can trigger alarms when the z-score exceeds a chosen value, such as 3 or 4 standard deviations above the recent mean. Because the threshold is expressed in statistical terms, detection performance remains more consistent across varying environmental conditions.

In summary. Sliding-window z-score normalisation converts raw SONAR measurements into a measure of statistical deviation from the recent acoustic background, enabling robust target detection in non-stationary underwater environments while reducing sensitivity to slowly varying noise and reverberation conditions.

9.2 Analysis Modes

9.2.1 LOFARgram (Normal)

What it is: A standard acoustic spectrogram displayed as a waterfall. Each new FFT frame is added as a horizontal line of pixels scrolling bottom to top; the horizontal axis is frequency; colour encodes amplitude in dB. Persistent vertical lines marching across the display indicate tonal components — discrete narrowband signals that stand out from the broadband noise background.

Signal path:

1. Audio samples arrive from the engine (live or file playback).
2. An optional bandpass filter is applied (see §9).
3. An optional noise reference is subtracted (see §8).
4. Samples are accumulated in an overlap buffer.
5. An FFT is computed with zero-padding to match the display pixel width.
6. Magnitudes are converted to dB.
7. Optional normalisation is applied (see §7).
8. The result is mapped through the Floor / Dynamic Range colour scale and painted as one column.

Key parameters: FFT Size, Overlap, Floor, Dynamic Range, Normalisation, Fmin / Fmax display limits.

9.2.2 DEMON

What it is: DEMON (Detection of Envelope Modulation ON Noise) extracts the low-frequency modulation imposed on broadband acoustic noise by a vessel's rotating machinery (primarily propeller shaft and blade-rate harmonics). The result is a second spectrogram whose frequency axis covers 0–Fmax Hz (typically 0–50Hz), revealing shaft rotation rates and blade rates that are far too low to appear in the LOFARgram.

Signal path:

1. Samples are bandpass-filtered to the DEMON band (Fmin–Fmax of the acoustic band selection).
2. The amplitude envelope is extracted using a 63-tap Type III linear-phase Hilbert FIR filter (Hann-windowed). This produces a clean, phase-correct envelope signal without the DC bias of simple rectification.
3. The envelope is decimated by a factor computed as $\max(Fs/(2xF_{max_demon}), 1)$, floored by Nyquist and ceilinged by FFT resolution requirements. This dynamically sets the decimated sample rate just high enough to represent the DEMON band without wasting computation.
4. An FFT is computed on the decimated envelope using the DEMON FFT size and overlap.
5. The result is displayed as a waterfall, with the same Floor / Dynamic Range colour scale.

Why this works: Rotating machinery amplitude-modulates the broadband acoustic noise it generates. For propeller-driven vessels, propeller blades periodically interrupt the cavitation noise; for diesel-engined vessels, piston firing events modulate the radiated noise at crankshaft rate and its harmonics. DEMON demodulates this carrier to make those low frequencies directly visible. It is effective for both propeller shaft / blade-rate detection (surface ships, submarines underway) and diesel engine firing rate detection (diesel-electric submarines at low speed).

Key parameters: DEMON Fmin / Fmax (sets the acoustic carrier band to demodulate), DEMON Display Max (Fmax of the DEMON output display axis), DEMON FFT Size, Overlap, Floor, Dynamic Range.

9.2.3 Cepstrum

What it is: The real cepstrum is computed as:

$$C(\tau) = \text{IFFT}\{\log |X(f)|\}$$

where $X(f)$ is the FFT of the input signal and the log is of the **linear magnitude** (not dB - log is applied once inside the cepstrum formula). The result is plotted with the horizontal axis in quefrency (milliseconds), which is the reciprocal-domain equivalent of frequency.

A peak at quefrency τ ms indicates a strongly periodic structure with period τ ms in the spectrum - i.e., a family of harmonics spaced $1/\tau$ Hz apart. This makes the cepstrum particularly good at detecting harmonic combs even when individual harmonics are weak.

Key parameters: FFT Size (same as LOFARgram), Overlap, Floor, Dynamic Range. The quefrency axis runs from 0 to FFT Size / (2 x Fs) ms.

Note on axis: The cursor label reads 'ms' (quefrency), not 'Hz'. A peak at 20 ms corresponds to a fundamental period of 20 ms $\rightarrow$ fundamental frequency of 50 Hz.

9.2.4 Running ACF

What it is: The running autocorrelation function, computed via the Wiener–Khinchin theorem:

$$R_{xx}(\tau) = \text{IFFT}\{|X(f)|^2\}$$

The power spectral density is computed from the FFT, and its IFFT gives the autocorrelation. The horizontal axis is lag (τ), in milliseconds. A peak at lag τ ms means the signal is significantly self-similar at that delay — another indicator of periodicity. Unlike the cepstrum, the ACF does not take a logarithm, so it is more sensitive to dominant tones and less effective at compressing the dynamic range of a harmonic comb. Used together, cepstrum and ACF give complementary views of the same periodicity structure.

Key parameters: Same FFT Size and Overlap as the main pipeline. Floor / Dynamic Range colour scale.

9.3 Noise Reference Subtraction

Noise reference subtraction removes a pre-recorded background spectrum from the current signal, reducing stationary ambient noise.

9.3.1 How it works

The formula applied per frequency bin is:

$$P_{clean(f)} = \max(P_{signal(f)} - \alpha \times P_{noise(f)}, \beta \times P_{noise(f)})$$

- $P_{signal(f)}$ is the current frame's power spectrum.
- $P_{noise(f)}$ is the reference background spectrum (average of a selected reference recording).
- α is the subtraction factor (typically 1.0 = full subtraction; increase to over-subtract and suppress more noise).
- β is a floor factor preventing the subtracted result from going below a fraction of the noise level (avoids musical noise artefacts).

9.3.2 Reference recording selection

1. In the Recordings panel, select a WAV file that contains **only ambient/background noise** — no contact of interest.
2. The file must be at least **15 seconds long** (enforced by validation). Short files produce unstable spectral averages.
3. Check the **“Use as noise reference”** checkbox next to that recording. Only one reference can be active at a time (exclusive selection — checking one unchecks any previous reference).
4. Click **Load background** to compute and store the reference spectrum.

9.3.3 Effect

Bins that are consistently present in the background (propulsion noise of your own vessel, ambient ocean noise, equipment self-noise) are attenuated. Signals from the contact — which were not present in the background recording — survive the subtraction and become more visible.

9.3.4 Caveats

- The background must be representative of the noise during the analysis period. If own-ship speed or sea state changes significantly, the reference becomes stale.

- Aggressive subtraction (high α) can create musical noise — random bright pixels where noise subtraction overshoots. Reduce α or adjust the floor factor if this occurs.
- Normalisation and noise reference subtraction can be used together, but experiment — they address different aspects of the noise problem (non-stationary broadband vs stationary background).

10 Appendix C - Contact Database Structure

Page intentionally left blank